


Service Manual

PDF MANUAL

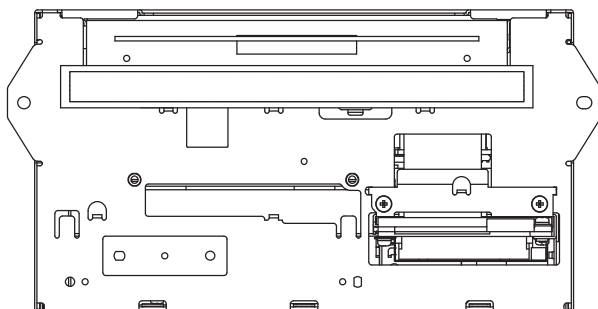

NISSAN Motor Genuine
 2DIN HDD Navigation

BOSE Specifications for North
 America

Model UQY7314
 (N# 25915 1AA9A)
 (MODEL No. NAU-3921KUS)

Model UQY7315
 (N# 25915 1AA9C)
 (MODEL No. NAU-3922KUS)

Model UQY7316
 (N# 25915 1AA1C)
 (MODEL No. NAU-3923KUS)

Model UQY7324
 (N# 25915 1AA9B)
 (MODEL No. NAU-3921KCA)

Model UQY7325
 (N# 25915 1AA9D)
 (MODEL No. NAU-3922KCA)

Model UQY7326
 (N# 25915 1AA1D)
 (MODEL No. NAU-3923KCA)

ORIGINAL SERVICE MANUAL

The original model of UQY7314/5/6,UQY7324/5/6 is UQY6102.
 This additional service manual is designed to be used together
 with the service manual of UQY6102.

Original model	Manual No.
UQY6102	298-6837-00

CONTENTS

1. SPECIFICATIONS.....	2
2. COMPONENT	2
3. NOTES	2
4. To engineers in charge of repair or inspection of our products.....	2
5. CONNECTORS	2
6. ASSEMBLY & PARTS LIST.....	2
7. BLOCK DIAGRAM	2
8. Difference parts list	2

1.SPECIFICATIONS

The following specifications of UQY7314/5/6,UQY7324/5/6 are different from the original model.

Other specifications are the same as UQY6102.

Please refer to page 2 of the original manual.

RADIO SECTION

SEPARATION: FM more than 30dB
(ANT IN 65dBuV,
1KHz/7KHz)

AUTO STOP SENS: FM 29 +6/-6dBuV

2.COMPONENT

UQY7314(NAU-3921KUS)

1. Main unit ----- 1

UQY7315(NAU-3922KUS)

1. Main unit ----- 1

UQY7316(NAU-3923KUS)

1. Main unit ----- 1

UQY7324(NAU-3921KCA)

1. Main unit ----- 1

UQY7325(NAU-3922KCA)

1. Main unit ----- 1

UQY7326(NAU-3923KCA)

1. Main unit ----- 1

3.NOTES

The notes are the same as UQY6102's manual.

Please refer to page 2 of the original manual.

4.To engineers in charge of repair or inspection of our products.

The attention points are the same as UQY6102's manual.

Please refer to page 3 of the original manual.

5.CONNECTORS

The folloing connectors are different from the original model.

Other connectors are the same as UQY6102.

Please refer to page 4 of the original manual.

① TH40HW (Vehicle signal terminals)

2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39

No.	Description
22	H/F_MODE1
23	H/F_MODE2

⑤ TH32HW (AUX/BUS Interface)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

No.	Description
20	AUDIO CONT
22	NDS CONT
25	HP_SHIELD
28	HP_SHIELD

6.ASSEMBLY & PARTS LIST

The parts written in No.8 are different from the original model.

Other parts are the same as UQY6102.

Please refer to page 5~13 of the original manual.

7.BLOCK DIAGARAM

The block diagram of UQY7314/5/6,UQY7324/5/6 NAVI section is the same as UQY6102.

Please refer to page 14 of the original manual.

About the block diagram of UQY7314/5/6,UQY7324/5/6 AUDIO section,Please refer to last page of this manual.

8.Difference parts list

* The following parts apply to all models except the #130.

PAGE	NO.	PART NO.	DESCRIPTION	QTY
6	#112	.8829030B	AUDIO PWB AS	1
	#114	.9900404A	NAU-US-V PWB	1
10	#127	MQZ0321	HDD2 sheet	1
11	#130	.8829012A	XM-PWB-Assy for UQY7324/5/6	1
	#131	-----	NU	-
	#135	MQZ0103	TUN sheet	1

*NU : No Unit