


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

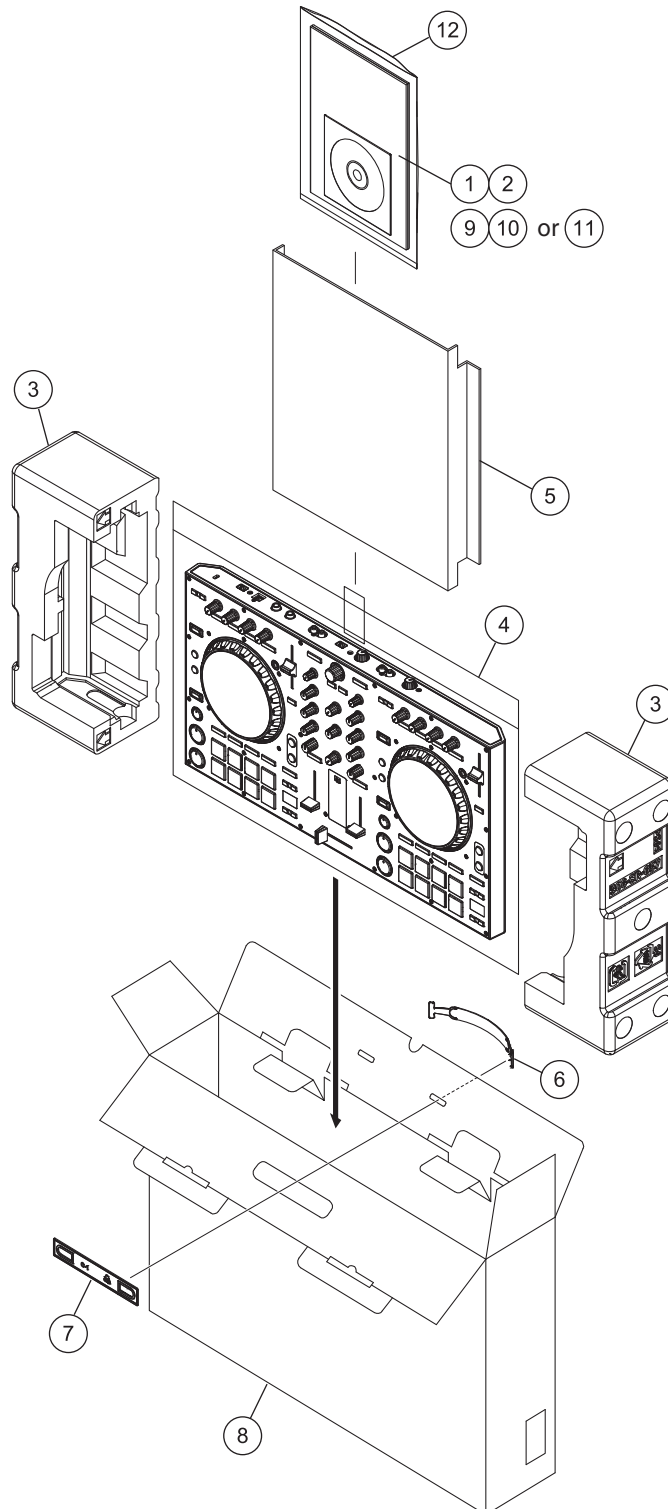

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	USB Cable (L = 1500 mm)	408-SUB-132
2	CD-ROM (Installation Disc)	••••• (To Be Determined)
3	Polyfoam	506-SR-657
4	Soft Bag	509-SR-328
5	Paster Board	507-SR-3440
6	Handle	100-SX-3017
7	Handle Base	100-SX-3018
8	Gift Box	See Contrast table (2)
9	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
10	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
11	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
12	PE Bag	505-DJM250-014

(2) CONTRAST TABLE


DDJ-SR/CKSUVYXE5 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SR /CKSUVYXE5	DDJ-SR /XECN5
	8	Gift Box	507-SRA-3449A	507-SRB-3449
	9	Read Before Use (Important)/Quick Start Guide (En, Fr, De, It, NI)	502-DDJSRA-3325A	Not used
	10	Read Before Use (Important)/Quick Start Guide (Es, Pt, Ru, Ko, Ja)	502-DDJSRA-3326A	Not used
	11	Read Before Use (Important)/Quick Start Guide (Zhcn)	Not used	502-DDJSRB-3327

9.2 EXTERIOR SECTION

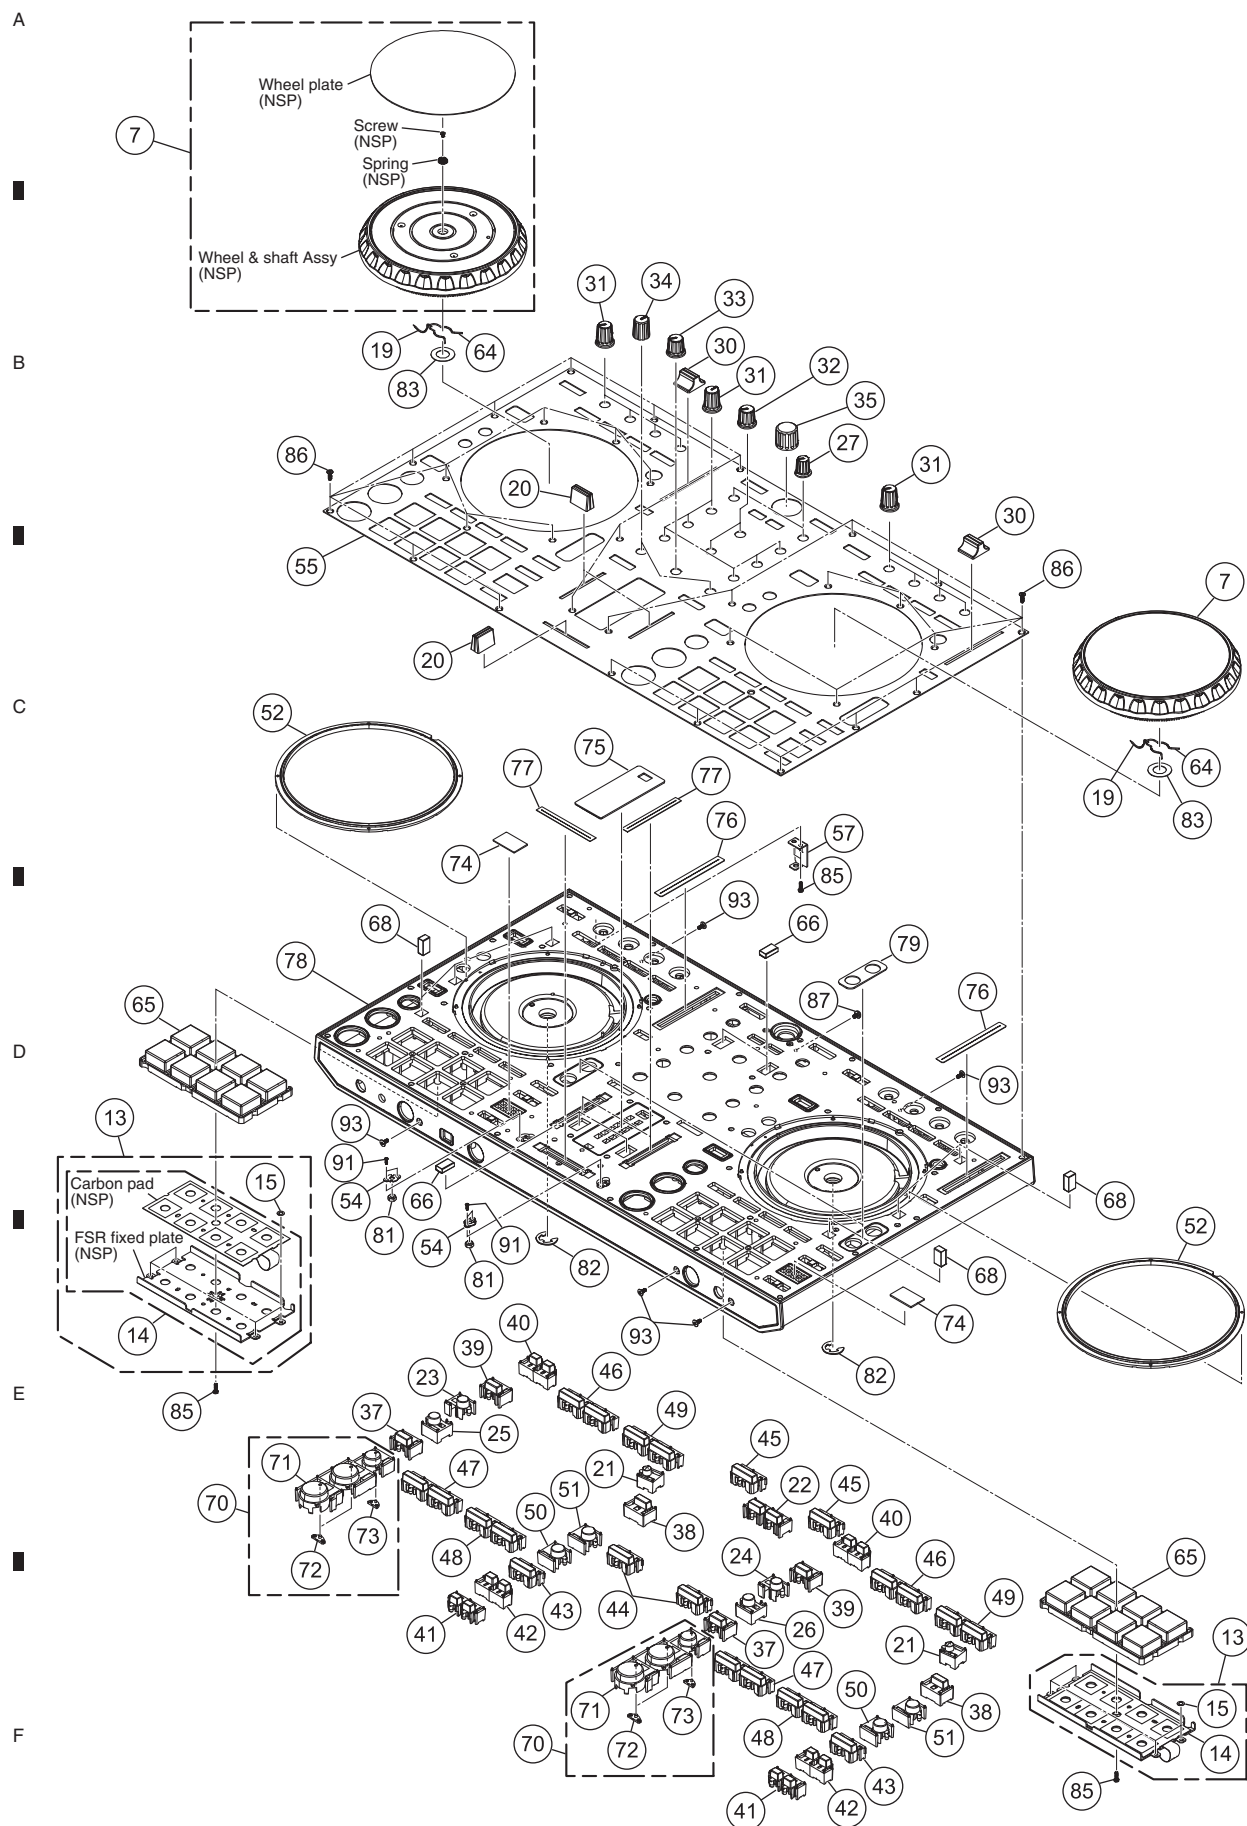

*: Accessories of VR (NSP)

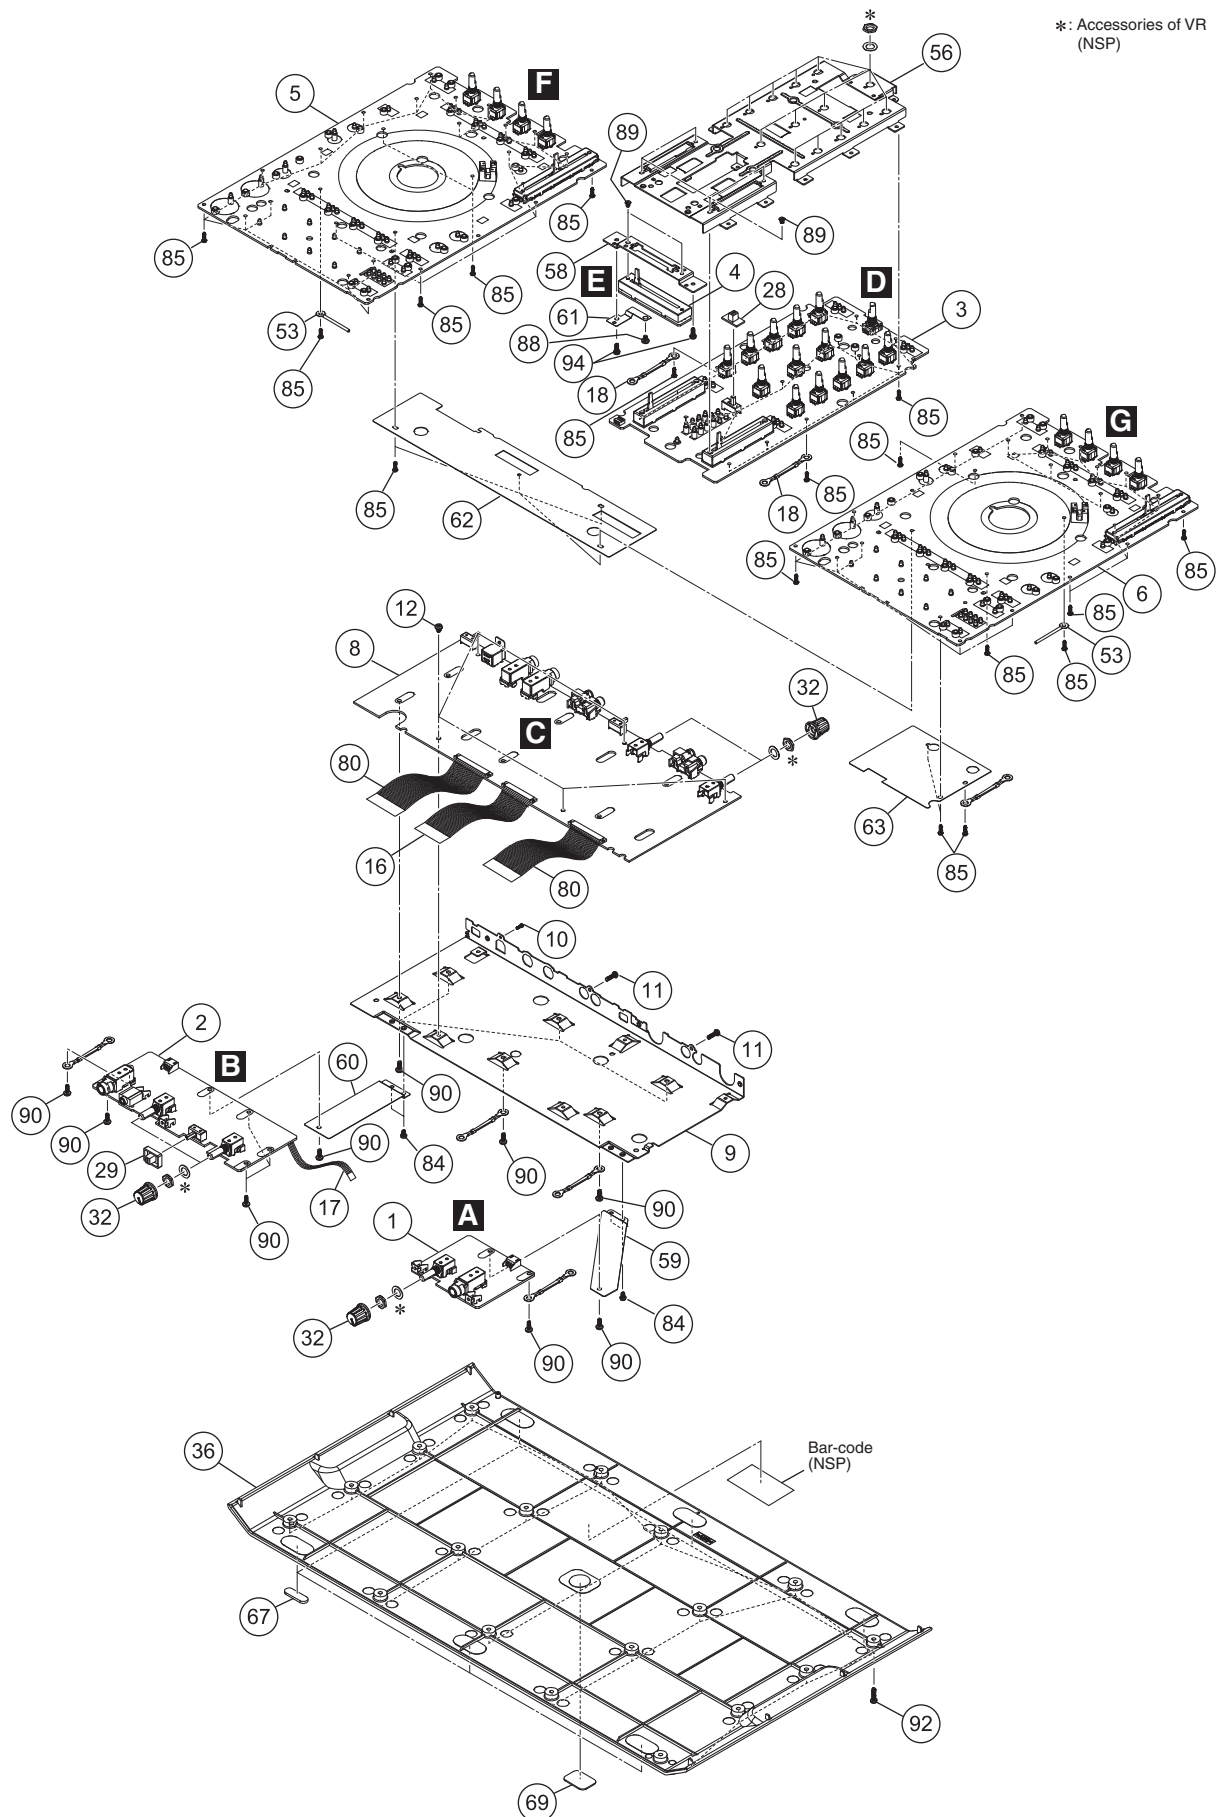

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 MIC PCB Assy	704-SR-A601	46	On/On Button	100-ON-3055
	2 HEADPHONE PCB Assy	704-SR-A600	47	Hot Cue/Roll Button	100-ROLL-3055
	3 MIXER PCB Assy	704-SR-A597	48	Slice/Sampler Button	100-SLICER-3055
	4 CROSS FADER PCB Assy	704-DJM250-A032	49	On/Tap Button	100-TAP-3055
	5 PANEL-L PCB Assy	704-SR-A599	50	On Button	100-ON-3056
	6 PANEL-R PCB Assy	704-SR-A598	51	Tap Hold Button	100-TAP-3056
	7 Wheel Assy	701-SR-5350	52	JW Ring	100-SR-3060
	8 I/O PCB Assy	704-SR-A596	53	Locking Cable Clip	300-HM510B-224
	9 Output Board	300-SR-2089	54	Fixed Cover	300-33-1918
	10 Screw	602-HP1010K-181	55	Front Panel	300-SR-2086
B	11 Screw	602-MK7-131	56	Mixer Fixed Plate	300-SR-2088
	12 Screw	602-QMX2BPM-322N	57	K Lock Plate	300-SR-2091
	13 1..Pad & FSR Plate Assy kit	GXX1374	58	CF Fixed Plate	300-SR-2102
	14 2..Pad & FSR Plate Assy	704-SR-A629	59	MIC Ground Plate	300-SR-2104
	15 2..Washer	606-SR-270	60	Phone Ground Plate	300-SR-2105
	16 30P 1.0 FFC Cable	406-SR-1259	61	CF Ground Plate	300-SR-2106
	17 5P 1.0 FFC Cable	406-SR-1260	62	FFC Isolation Slice	501-SR-2589
	18 1P Ground Wire (L=70 mm)	406-SR-1267	63	MIC Isolation Slice	501-SR-2590
	19 1P Lead Wire	406-S1-1231	64	Spring	603-C304-335
	20 Push Button	100-22-2824	65	Velocity Soft Knob	604-SR-618
C	21 Little Round Button	100-S1-2991	66	Sponge	612-4MIX-416
	22 2 Key Button	100-S1-2992S	67	Foot Mat	612-S1-445
	23 Deck 1 Button	100-S1-2990	68	Sponge (8*6*18 mm)	612-S1-451
	24 Deck 2 Button	100-S1A-2990	69	Square Pad	612-SR-478
	25 Deck 3 Button	100-S1B-2990	70	1..Play Button Assy	701-DDJSR-5397
	26 Deck 4 Button	100-S1C-2990	NSP 71	2..Play Sync Button	100-SR-3057
	27 Jog Tuning Knob	100-DDJLE-2944	NSP 72	2..Lens	100-SR-3058
	28 CF Button	100-S1-3003	NSP 73	2..Little Lens	100-SR-3063
	29 Button	100-S1-3004	74	Numeral Lens	501-SR-2574
	30 Speed Push Button	100-S1-3005	75	LM Lens	501-SR-2575
D	31 FX Rotate Knob	100-S1-3006	76	VR Cushion	612-HDJ7000-056A
	32 Gain Rotate Knob	100-S1-3008	77	VR Cushion	612-IM-296
	33 Gain Rotate Knob	100-SR-3008	78	Chassis Assy	701-DDJSR-5398
	34 Filter Rotate Knob	100-S1-3009	79	Quant Lens	501-SR-2573
	35 Browser Rotate Knob	100-S1-3010	80	34P 1.0 FFC Cable	406-SR-1258
	36 Base	See Contrast table (2)	81	Nut	601-A100-004
	37 Shift Button	100-SHIFT-3053	82	E Ring	606-C304-209
	38 Rectangular Button	100-SR-3053	83	Washer (20*11*0.25T)	606-C304-210
	39 Vinyl Button	100-VINYL-3053	84	Screw	602-B300-041
	40 1/2 Button	100-12-3054	85	Screw	602-SL24F-099
E	41 Rectangular Button	100-DJSR-3054	86	Screw	602-HP1010K-182
	42 +/- Button	100-SR-3054	87	Screw	602-QMX2BPM-322
	43 Auto Button	100-AUTO-3055	88	Screw	602-QMX2BPM-322N
	44 Cue Button	100-CUE-3055	89	Screw	602-SA12-414
	45 Load Button	100-LOAD-3055	90	Screw	602-DJ5500-452
			91	Screw	602-A700-494
			92	Screw	602-PTP3012-571
			93	Screw	602-ST306-728B
			94	Screw	602-SW3008-737B
F					

(2) CONTRAST TABLE

DDJ-SR/CKSUVYXE5 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SR /CKSUVYXE5	DDJ-SR /XECN5
	36	Base	100-SRA-3052	100-SRB-3052

A

B

C

D

E

F

1 2 3 4

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of identical designation.

● Although the cables that are directly mounted on each PCB Assy are listed individually as electrical parts of the corresponding PCB Assy in the parts list, those cables are included with each PCB Assy for service when it is supplied.

Mark	No.	Description	Part No.
LIST OF ASSEMBLIES			
		MIC PCB ASSY	704-SR-A601
		HEADPHONE PCB ASSY	704-SR-A600
		I/O PCB ASSY	704-SR-A596
		MIXER PCB ASSY	704-SR-A597
		CROSS FADER PCB ASSY	704-DJM250-A032
		PANEL-L PCB ASSY	704-SR-A599
		PANEL-R PCB ASSY	704-SR-A598

Mark	No.	Description	Part No.
A MIC PCB ASSY			
MISCELLANEOUS			
		FIXED PLATE	300-4500-2010A
		VR FIXED PLATE	300-6000-1874
		PH FIXED PLATE	300-S1-2061
	CN 6	4P SOCKET	404-DCM270E3-878A
	JK 900	MIC JACK	420-SMX211-137

RESISTORS			
	VR 900		418-SR-712

CAPACITORS			
	C 907,912,913,915		413-DCM280-773
	C 908		413-HT801K-193
	C 905,906,911,914		413-SPPW3-235
	C 902		413-SPPW3-236

B HEADPHONE PCB ASSY			
MISCELLANEOUS			
		FIXED PLATE	300-4500-2010A
	VR 950,951	VR FIXED PLATE	300-6000-1874
	JK 981	PH FIXED PLATE	300-S1-2061
	SW950	SLIDE SW	403-SR-435
	CN 7	4P SOCKET	404-DCM270E3-878A
	JK 980	HEADPHONE JACK	420-HDJ7100-063
	JK 981	3P PHONE JACK	420-HMJ1001-5034

RESISTORS			
	VR 950,951		418-SR-710

CAPACITORS			
	C 950,952-955,982,983		413-DCM280-773

C I/O PCB ASSY			
SEMICONDUCTORS			
	Q 23-28,31-38		416-3000-378
	Q 4,22,39		416-CTB200-166
	Q 21		416-HDJ9700-210

Mark	No.	Description	Part No.
	Q 5,40		416-UDJ200-347
	D 6,7,24,31,32		414-007USB-148
	D 11-14,23,25,26,29,30		414-CD1000-075A
	D 10		414-DDJLE-348
	D 36-38		414-DJ1100G-207
	D 33-35		414-RMP3-285
	D 19-22		414-UDJ200-284

MISCELLANEOUS			
	VR 1,2	VR FIXED PLATE	300-6000-1874
		PH FIXED PLATE	300-S1-2061
		GROUND PLATE	300-S1-2069
	SW1,2	SLIDE SW	403-COMBO-427
	W 7	4P CONNECTOR WIRE	404-SR-3797
	W 6	4P CONNECTOR WIRE	404-SR-3799
	L 20	INDUCTANCE	415-USOLOPA-342
	JK 1	USB JACK (USB-B (F))	420-007USB-150
	JK 2,5	2P RCA JACK	420-HDJ7000-045
	JK 3,4	3P PHONE JACK	420-HMJ1001-5034
	X 1	CRYSTAL (6 MHz)	427-S1-143
	X 2	CRYSTAL (24.576 MHz)	427-S1-145
	X 3	CRYSTAL (8 MHz)	427-SUB-149
		SPONGE	612-4MIX-416
	L 21,22	CHIP BEAD	415-1300-240A
	L 11	INDUCTOR	415-DDJLE-407
	L 13	TDK COMMON MODE FILTERS	415-FU800-305
	L 15	TDK CHIP BEAD	415-FU801-316
	L 10,19	POWER CHOKER	415-MC6000-356
	L 1,2,4-9,14,18	BEAD CORE	415-HV3500K-090

RESISTORS			
	VR 2		418-SR-710
	VR 1		418-SR-711
	R 10		412-900-987
	R 18,19,58-63,94-100,168-172		412-CDVD2001-554
	R 177-185,214-217,234-237		412-CDVD2001-554
	R 21		412-PDJ1-1291
	R 246,247		412-SR-1680
	R 252,253		412-3113-089
	R 254,255		412-BJ23001-468

CAPACITORS			
	C 3,156,165,166,189,195,196		413-MC6000-1192
	C 112		413-SR-1299
	C 5-8,12-17,25,42-52,65-74,77-82		413-DCM280-773
	C 93,94,120-124,134,135,144-148		413-DCM280-773
	C 154,155,187,188,208,209,224		413-DCM280-773
	C 225,230,259,261,262,266-283		413-DCM280-773
	C 53,265		413-MC6000-1180
	C 113		413-007USB-828
	C 2,33-35,63,64,96,167,168		413-CDVD2001-265
	C 210,213,214,236-239		413-CDVD2001-265
	C 9		413-DV300-5156

	5		6		7		8	
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
	C	4,98,99,159,160,192,193	413-HMA2200-5017		D	504-511,528,529,531-547,551-553,580-583	410-DJ5000-253T	
	C	179-182,206,207	413-HMA2200-5017		MISCELLANEOUS			A
	C	264	413-HPR1-821		CN500	10P FFC CONNECTOR	404-CDMIX2-1142	
	C	252,253	413-HT8015-169		CN2B	34P 1.0 FFC SOCKET	404-SR-3805	
						1P GROUND WIRE	406-SR-1266	
	C	18-20,284	413-QSPAND-632		L	500 INDUCTANCE	415-USOLOPA-342	
	C	1,118,119,125,126,129,130	413-SPPW3-235		D	528,548-550 LED HOLDER	504-RMX30-158	
	C	142,149,150,157,158,190	413-SPPW3-235					
	C	191,211,212,215,216	413-SPPW3-235		SW504,509 TACT SW		403-DDJLE-416	
	C	36,131,139,140,151	413-SPPW3-236		SW500-503,505-508,510-525 TACT SW		403-DDJLE-419	
D MIXER PCB ASSY					RESISTORS			
SEMICONDUCTORS					R	506	412-3113-078	
	Q	700-702	416-MC6000-374		VR500-503		418-SR-706	
	D	715-722	410-DJ5000-252T		P	500 SLIDE VR (20KB*2)	418-SR-705	B
	D	723-730	414-CD1000-075A		CAPACITORS			
	D	700-710	410-DJ5000-253T		C	500,533	413-CDVD2001-265	
	D	711-714	410-HDJ2000-162T		C	532	413-SPPW3-235	
					C	501-507,514,515,529-531,535,536	413-DCM280-773	
MISCELLANEOUS					G PANEL-R PCB ASSY			
	SW701-704,706,707 TACT SW		403-DDJLE-419		SEMICONDUCTORS			
	SW700 ENCODER		403-DDJLE-418		Q	506,507	416-CTB200-166	
	SW705 SLIDE SW		403-SR-434		Q	500-505	416-MC6000-374	
	W 700 3P 2.5 CONNECTOR WIRE		404-SR-3798		D	520-527	410-S1-421	C
	D 715-722 LED HOLDER		504-RMX30-158		D	530	410-S1-422	
RESISTORS					D	550	410-SR-437	
	VR 713,714		418-PDJ33-672					
	VR 700,710		418-SR-706		D	548,549	410-HDJ2000-162T	
	VR 701,702,704,705,707-709,711,712		418-SR-707		D	502,503	417-HDJ2000-411	
	VR 703,706		418-SR-708		D	554-579	414-CD1000-075A	
CAPACITORS					D	500,501	414-RMP3-285	
	C	738,741	413-SPPW3-235		D	512-519	410-CDI600-357T	
	C	700-703,708-711	413-DCM280-773					
	C	716-721,726,729,730	413-DCM280-773		D	504-511,528,529,531-547,551-553,580-583	410-DJ5000-253T	
	C	704-707,712-715,722-725	413-DCM280-889		MISCELLANEOUS			
	C	727,731,733,734,739,740	413-DCM280-889		CN500	10P FFC CONNECTOR	404-CDMIX2-1142	D
					CN2C	34P 1.0 FFC SOCKET	404-SR-3805	
	C	728,737	413-CDVD2001-265			2P GROUND WIRE	406-SR-1265	
	C	732	413-DV300-5155		L	500 INDUCTANCE	415-USOLOPA-342	
E CROSS FADER PCB ASSY					D	528,548,549,550 LED HOLDER	504-RMX30-158	
MISCELLANEOUS					SW504,509 TACT SW		403-DDJLE-416	
	CN C01 3P SOCKET		404-KMD3500-609A		SW500-503,505-508,510-525 TACT SW		403-DDJLE-419	
	PC SHEET (PC 1.5T)		501-EN2000-2469		RESISTORS			
RESISTORS					R	506	412-3113-078	
	VR 715		418-DJM250-674		VR500-503		418-SR-706	
					P	500 SLIDE VR (20KB*2)	418-SR-705	E
F PANEL-L PCB ASSY					CAPACITORS			
SEMICONDUCTORS					C	500,533	413-CDVD2001-265	
	Q	506,507	416-CTB200-166		C	532	413-SPPW3-235	
	Q	500-505	416-MC6000-374		C	501-507,514,515,529-531,535,536	413-DCM280-773	
	D	520-527	410-S1-421					
	D	530	410-S1-422					
	D	550	410-SR-437					
	D	548,549	410-HDJ2000-162T					
	D	502,503	417-HDJ2000-411					
	D	554-579	414-CD1000-075A					
	D	500,501	414-RMP3-285					F
	D	512-519	410-CDI600-357T					
				DDJ-SR				65
	5		6		7		8	