 


## 4

F



## (1) PACKING SECTION PARTS LIST

| <u>Mark No.</u> | <u>Description</u> | <u>Part No.</u>        | <u>Mark No.</u> | <u>Description</u>       | <u>Part No.</u>        |
|-----------------|--------------------|------------------------|-----------------|--------------------------|------------------------|
| 1               | Protector          | CHP4594                | 12-2            | Quick Start Guide        | See Contrast table (2) |
| 2               | Microphone Assy    | See Contrast table (2) | 12-3            | Installation Manual      | See Contrast table (2) |
| 3               | Holder             | See Contrast table (2) | * 12-4          | Caution Card             | See Contrast table (2) |
| 4               | Cushion            | See Contrast table (2) |                 |                          |                        |
| 5               | Case Assy          | See Contrast table (2) | * 12-5          | Caution Card             | See Contrast table (2) |
|                 |                    |                        | * 12-6          | Caution Card             | See Contrast table (2) |
| 6               | Cord Assy          | See Contrast table (2) | * 12-7          | Warranty Card            | See Contrast table (2) |
| 7               | Polyethylene Bag   | See Contrast table (2) | 13              | .....                    |                        |
| 8               | Unit Box           | See Contrast table (2) | 14              | Card Remote Control Unit | See Contrast table (2) |
| 9               | Contain Box        | See Contrast table (2) |                 |                          |                        |
| 10              | Handle             | QNC3021                | 15              | Screw                    | See Contrast table (2) |
|                 |                    |                        | 16              | Polyethylene Bag         | See Contrast table (2) |
| 11              | IM CD ROM          | See Contrast table (2) | 17              | Screw                    | See Contrast table (2) |
| 12-1            | Owner's Manual     | See Contrast table (2) | 18              | Screw                    | See Contrast table (2) |

## (2) CONTRAST TABLE


DEH-X5600BT/XNEW5, DEH-X6600BS/XNUC, DEH-X3600S/XNUC and DEH-X3600UI/XNEW5 are constructed the same except for the following:

| Mark | No.  | Description              | DEH-X5600BT<br>/XNEW5 | DEH-X6600BS<br>/XNUC | DEH-X3600S<br>/XNUC | DEH-X3600UI<br>/XNEW5 |
|------|------|--------------------------|-----------------------|----------------------|---------------------|-----------------------|
|      | 2    | Microphone Assy          | CPM1083               | CPM1083              | Not used            | Not used              |
|      | 3    | Holder                   | CZN7192               | CZN7192              | Not used            | Not used              |
|      | 4    | Cushion                  | CZN7193               | CZN7193              | Not used            | Not used              |
|      | 5    | Case Assy                | QXA3129               | Not used             | Not used            | QXA3129               |
|      | 6    | Cord Assy                | QDP3014               | CDP1480              | CDP1480             | QDP3012               |
|      | 7    | Polyethylene Bag         | QEG3001               | CEG1173              | CEG1173             | QEG3001               |
|      | 8    | Unit Box                 | QHG3487               | QHG3488              | QHG3489             | QHG3479               |
|      | 9    | Contain Box              | QHL3487               | QHL3488              | QHL3489             | QHL3479               |
|      | 11   | IM CD ROM                | QPJ3020               | Not used             | Not used            | Not used              |
|      | 12-1 | Owner's Manual           | Not used              | QRD3195              | QRD3195             | QRD3200               |
|      | 12-2 | Quick Start Guide        | QRD3193               | Not used             | Not used            | Not used              |
|      | 12-3 | Installation Manual      | QRD3194               | Not used             | Not used            | Not used              |
| *    | 12-4 | Caution Card             | QRP3014               | Not used             | Not used            | Not used              |
| *    | 12-5 | Caution Card             | CRP1438               | Not used             | Not used            | Not used              |
| *    | 12-6 | Caution Card             | CRP1441               | Not used             | Not used            | Not used              |
|      | 12-7 | Warranty Card            | CRY1376               | QRY3001              | QRY3001             | CRY1376               |
|      | 14   | Card Remote Control Unit | Not used              | QXE1044              | QXE1047             | Not used              |
|      | 15   | Screw                    | Not used              | BPZ20P060FTC         | BPZ20P060FTC        | Not used              |
|      | 16   | Polyethylene Bag         | Not used              | CEG1160              | CEG1160             | Not used              |
|      | 17   | Screw                    | Not used              | CRZ50P090FTC         | CRZ50P090FTC        | Not used              |
|      | 18   | Screw                    | Not used              | TRZ50P080FTC         | TRZ50P080FTC        | Not used              |

## Owner's Manual,Installation Manual

| Part No. | Language                                                           |
|----------|--------------------------------------------------------------------|
| QRD3193  | English, French, Italian, Spanish(Espanol), German, Dutch, Russian |
| QRD3194  | English, French, Italian, Spanish(Espanol), German, Dutch, Russian |
| QRD3195  | English, French, Spanish(Espanol)                                  |
| QRD3200  | English, French, Italian, Spanish(Espanol), German, Dutch, Russian |

## 9.2 EXTERIOR

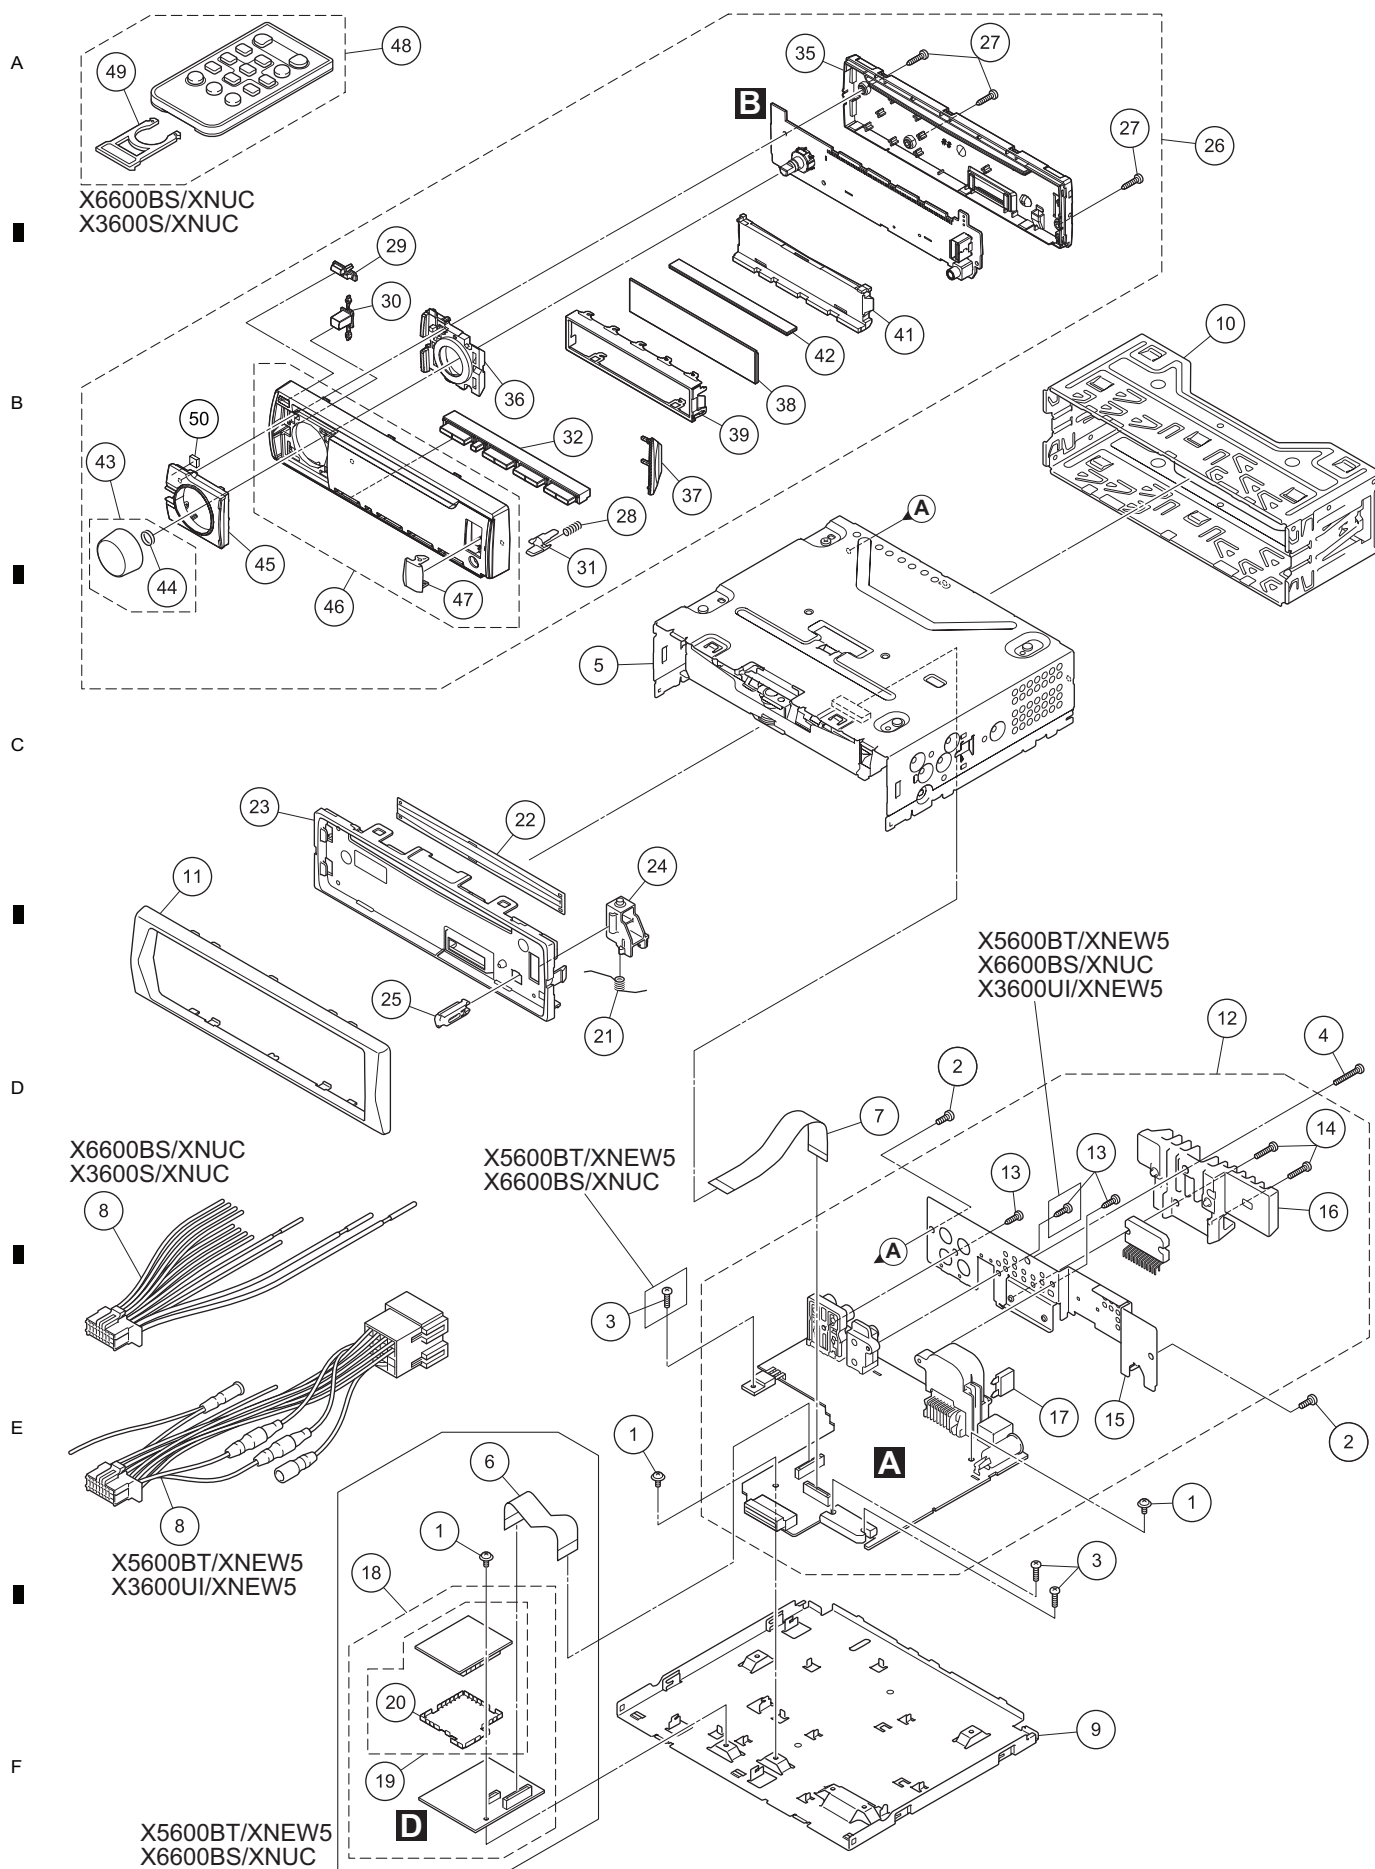


| Mark No. | Description                   | Part No.               | Mark No. | Description              | Part No.               |
|----------|-------------------------------|------------------------|----------|--------------------------|------------------------|
| 1        | Screw                         | ASZ26P050FTC           | 26       | Detachable Grille Assy   | See Contrast table (2) |
| 2        | Screw                         | BSZ26P060FTC           | 27       | Screw                    | BPZ20P100FTC           |
| 3        | Screw                         | BSZ26P080FTC           | 28       | Spring                   | CBH2210                |
| 4        | Screw                         | BSZ26P120FTC           | 29       | Button (EJECT)           | QAC3131                |
| 5        | CD Mechanism Module (S11.6VA) | CXK5805                | 30       | Button                   | See Contrast table (2) |
| 6        | FFC                           | See Contrast table (2) | 31       | Button (DETACH)          | QAC3137                |
| 7        | FFC                           | QDE3029                | 32       | Button (1-6)             | See Contrast table (2) |
| 8        | Cord Assy                     | See Contrast table (2) | 33       | .....                    |                        |
| 9        | Case                          | See Contrast table (2) | 34       | .....                    |                        |
| 10       | Holder                        | QNC3020                | 35       | Cover                    | QNS3615                |
| 11       | Panel                         | QNS3576                | 36       | Lighting Conductor       | QNV3074                |
| 12       | Tuner Amp Unit                | See Contrast table (2) | 37       | Lighting Conductor       | QNV3075                |
| 13       | Screw                         | BPZ26P080FTC           | 38       | Segment LCD (V1802)      | CAW2041                |
| 14       | Screw                         | BSZ26P120FTC           | 39       | Holder                   | QNC3068                |
| 15       | Holder                        | See Contrast table (2) | 40       | .....                    |                        |
| 16       | Heat Sink                     | QNR3010                | 41       | Lighting Conductor       | QNV3073                |
| 17       | Fuse (10 A)                   | YEK5001                | 42       | Rubber Connector         | QNV3079                |
| 18       | BT Unit                       | See Contrast table (2) | 43       | Knob Unit                | See Contrast table (2) |
| 19       | BT Module                     | See Contrast table (2) | 44       | Spring                   | YBL5010                |
| 20       | Shield Case                   | See Contrast table (2) | 45       | Button Unit              | See Contrast table (2) |
| 21       | Spring                        | QBH3001                | 46       | Grille Unit              | See Contrast table (2) |
| 22       | Cover                         | QNM3029                | 47       | Door                     | QAT3012                |
| 23       | Panel                         | QNS3126                | 48       | Card Remote Control Unit | See Contrast table (2) |
| 24       | Arm                           | QNV3025                | 49       | Cover                    | See Contrast table (2) |
| 25       | Button                        | QNV3026                | 50       | Cushion                  | QNM3097                |

## (2) CONTRAST TABLE

DEH-X5600BT/XNEW5, DEH-X6600BS/XNUC, DEH-X3600S/XNUC and DEH-X3600UI/XNEW5 are constructed the same except for the following:

| Mark | No. | Description              | DEH-X5600BT<br>/XNEW5 | DEH-X6600BS<br>/XNUC | DEH-X3600S<br>/XNUC | DEH-X3600UI<br>/XNEW5 |
|------|-----|--------------------------|-----------------------|----------------------|---------------------|-----------------------|
|      | 6   | FFC                      | QDE3028               | QDE3028              | Not used            | Not used              |
|      | 8   | Cord Assy                | QDP3014               | CDP1480              | CDP1480             | QDP3012               |
|      | 9   | Case                     | QNB3011               | QNB3011              | QNB3012             | QNB3012               |
|      | 12  | Tuner Amp Unit           | QWM3677               | QWM3678              | QWM3679             | QWM3627               |
|      | 15  | Holder                   | QNC3074               | QNC3075              | QNC3076             | QNC3087               |
|      | 18  | BT Unit                  | QWM3750               | QWM3750              | Not used            | Not used              |
|      | 19  | BT Module                | YWX5044               | YWX5044              | Not used            | Not used              |
|      | 20  | Shield Case              | YNC5123               | YNC5123              | Not used            | Not used              |
|      | 26  | Detachable Grille Assy   | QXA3919               | QXA3920              | QXA3921             | QXA3912               |
|      | 30  | Button                   | QAC3139 (PHONE)       | QAC3139 (PHONE)      | QAC3138 (MIX)       | QAC3138 (MIX)         |
|      | 32  | Button (1-6)             | QAC3136               | QAC3136              | QAC3140             | QAC3140               |
|      | 43  | Knob Unit                | QXA3670               | QXA3670              | QXA3670             | QXA3671               |
|      | 45  | Button Unit              | QXA3945               | QXA3945              | QXA3946             | QXA3946               |
|      | 46  | Grille Unit              | QXA3964               | QXA3965              | QXA3966             | QXA3957               |
|      | 48  | Card Remote Control Unit | Not used              | QXE1044              | QXE1047             | Not used              |
|      | 49  | Cover                    | Not used              | CNS7068              | CNS7068             | Not used              |

## 9.3 CD MECHANISM MODULE

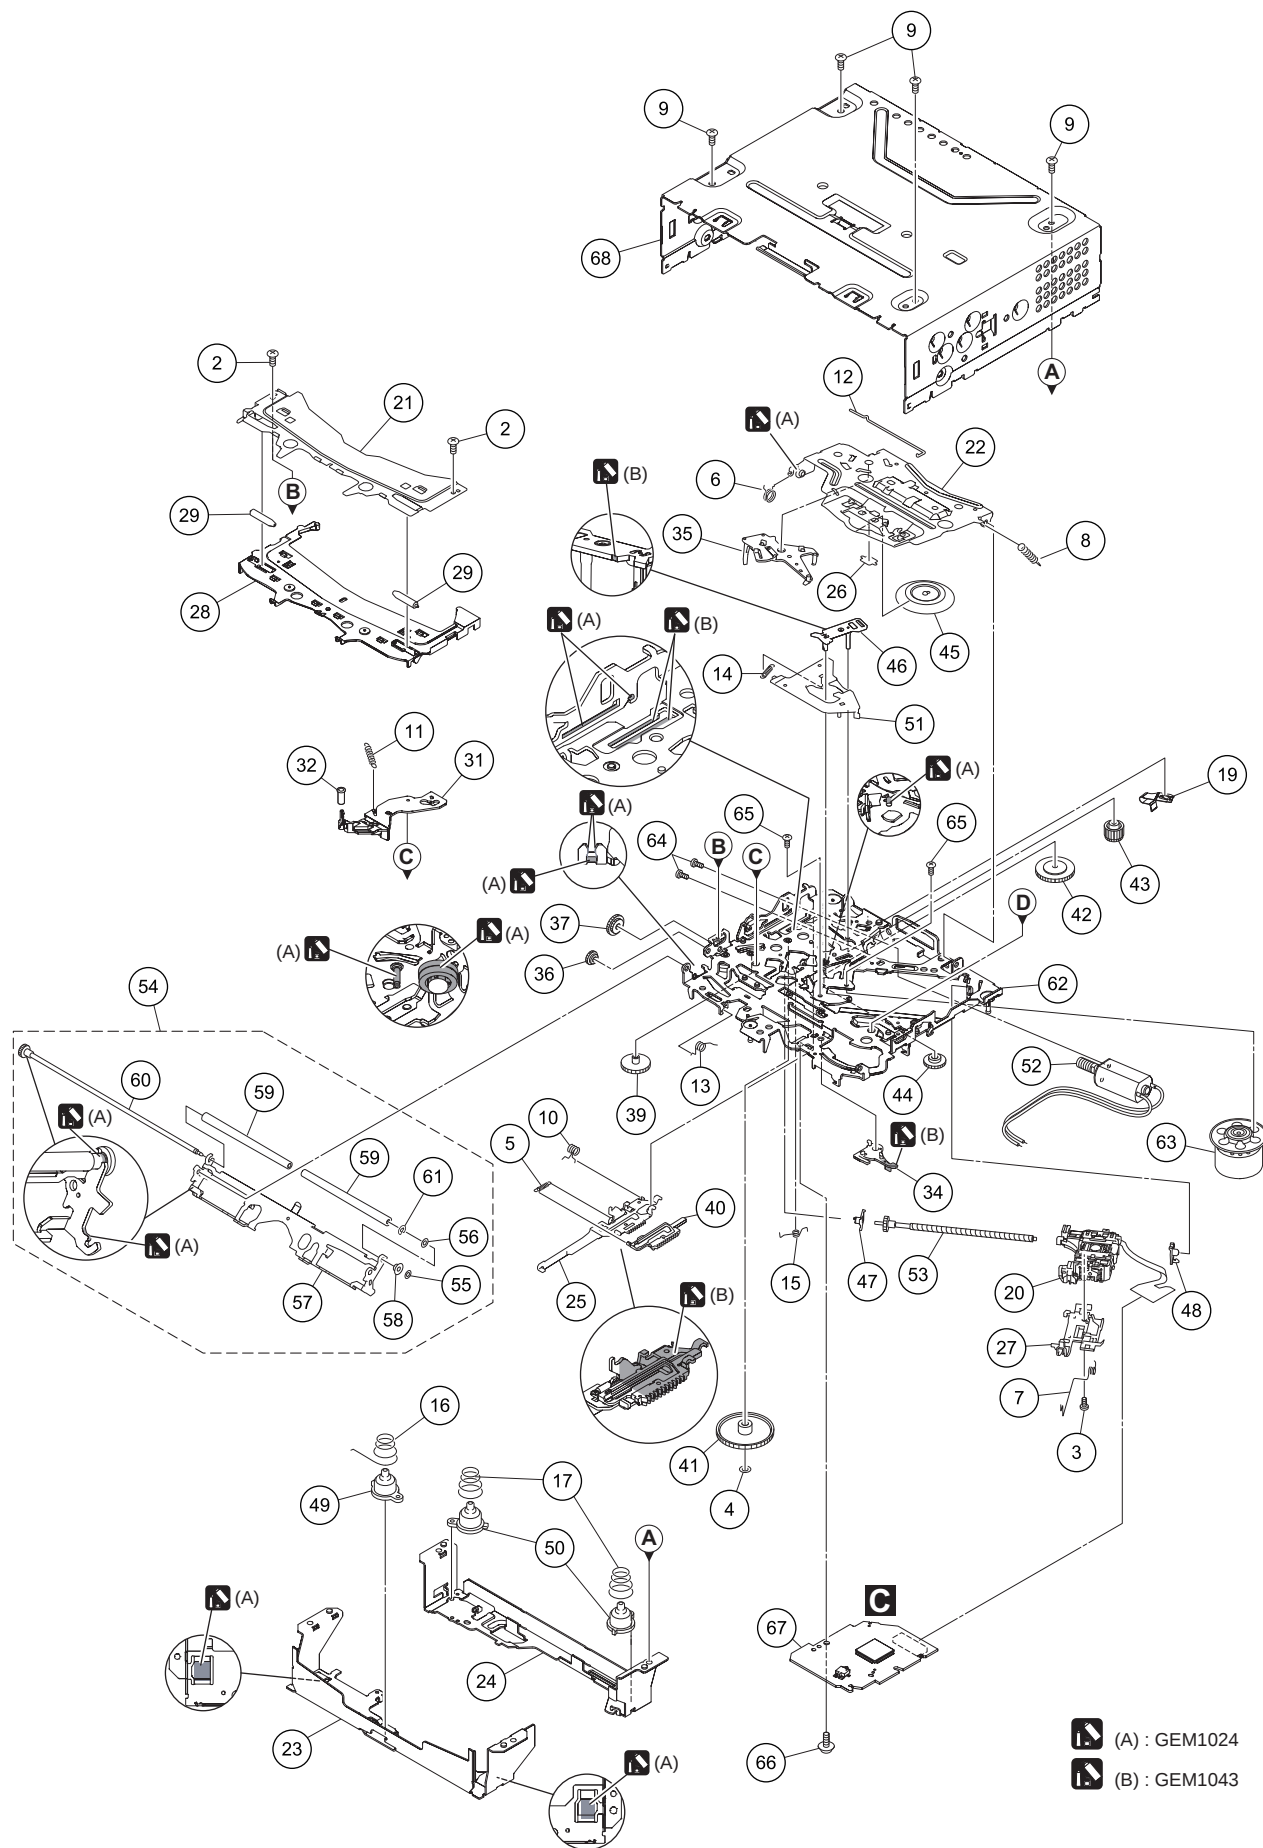

DEH-X5600BT/XNEW5

| Mark No. | Description           | Part No.     | Mark No. | Description              | Part No.     |   |
|----------|-----------------------|--------------|----------|--------------------------|--------------|---|
| 1        | .....                 |              | 50       | Damper                   | CNW1198      |   |
| 2        | Screw                 | BSZ20P040FTC | 51       | Arm                      | CNW1726      | A |
| 3        | Screw(M2 x 4)         | CBA1835      | 52       | Motor Unit(M2)(LOAD/CRG) | CXC4026      |   |
| 4        | Washer                | CBF1038      | 53       | Screw Unit               | CXC8894      |   |
| 5        | Spring                | CBH3010      | 54       | Arm Assy                 | CXE6232      |   |
| 6        | Spring                | CBH2855      | 55       | Washer                   | CBF1037      |   |
| 7        | Spring                | CBH2856      |          |                          |              |   |
| 8        | Spring                | CBH2860      | 56       | Washer                   | CBF1038      |   |
| 9        | Screw                 | BSZ26P060FTC | 57       | Arm                      | CND6242      |   |
| 10       | Spring                | CBH3011      | 58       | Collar                   | CNW2444      |   |
| 11       | Coil Spring           | CBH3095      | 59       | Roller                   | CNW2500      |   |
| 12       | Spring                | CBH3014      | 60       | Gear Unit                | CXE6225      | B |
| 13       | Spring                | CBH3015      | 61       | Washer                   | YE15FTC      |   |
| 14       | Spring                | CBH3016      | 62       | Chassis Unit             | CXE4528      |   |
| 15       | Spring                | CBH3017      | 63       | Motor Unit(M1)(SPDL)     | CXE2273      |   |
| 16       | Spring                | CBH3086      | 64       | Screw                    | JFZ20P025FTC |   |
| 17       | Spring                | CBH3019      | 65       | Screw                    | JGZ17P022FTC |   |
| 18       | .....                 |              | 66       | Screw                    | EBA1028      |   |
| 19       | Leaf Spring           | CBL1824      | 67       | CD Core Unit (S11.6VA)   | CWX4269      |   |
| 20       | PU Unit(P11)(Service) | CXX4754      | 68       | Chassis                  | CNA3181      | C |
| 21       | Bracket               | CND4553      |          |                          |              |   |
| 22       | Arm                   | CND6406      |          |                          |              |   |
| 23       | Bracket               | CND6127      |          |                          |              |   |
| 24       | Bracket               | CND5710      |          |                          |              |   |
| 25       | Lever                 | CND5398      |          |                          |              |   |
| 26       | Sheet                 | CNN3678      |          |                          |              |   |
| 27       | Rack                  | CNV8342      |          |                          |              |   |
| 28       | Guide                 | CNW2240      |          |                          |              |   |
| 29       | Roller                | CNW1172      |          |                          |              | D |
| 30       | .....                 |              |          |                          |              |   |
| 31       | Arm                   | CNW2241      |          |                          |              |   |
| 32       | Roller                | CNW1175      |          |                          |              |   |
| 33       | .....                 |              |          |                          |              |   |
| 34       | Arm                   | CNW1177      |          |                          |              |   |
| 35       | Arm                   | CNW1178      |          |                          |              |   |
| 36       | Gear                  | CNW1180      |          |                          |              |   |
| 37       | Gear                  | CNW1181      |          |                          |              |   |
| 38       | .....                 |              |          |                          |              | E |
| 39       | Gear                  | CNW1183      |          |                          |              |   |
| 40       | Rack                  | CNW1184      |          |                          |              |   |
| 41       | Gear                  | CNW1185      |          |                          |              |   |
| 42       | Gear                  | CNW1186      |          |                          |              |   |
| 43       | Gear                  | CNW1187      |          |                          |              |   |
| 44       | Gear                  | CNW2287      |          |                          |              |   |
| 45       | Clamper               | CNW1190      |          |                          |              |   |
| 46       | Arm                   | CNW1192      |          |                          |              |   |
| 47       | Holder                | CNW1193      |          |                          |              | F |
| 48       | Holder                | CNW1194      |          |                          |              |   |
| 49       | Damper                | CNW1197      |          |                          |              |   |

# 12. ELECTRICAL PARTS LIST

## NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by  $\mu$  instead of  $\mu$ . Please do not make a mistake.

| <u>Circuit Symbol and No.</u>            | <u>Part No.</u> | <u>Circuit Symbol and No.</u>          | <u>Part No.</u> |
|------------------------------------------|-----------------|----------------------------------------|-----------------|
| <b>A:DEH-X5600BT/XNEW5</b>               |                 | IC 551 (A,41,112) Regulator IC         | BD9876EFJ       |
| <b>B:DEH-X6600BS/XNUC</b>                |                 | IC 552 (A,106,24) IC                   | BD2232G-G       |
| <b>C:DEH-X3600S/XNUC</b>                 |                 | IC 601 (A,111,75) IC                   | R5S726B0D216FP  |
| <b>D:DEH-X3600UI/XNEW5</b>               |                 | IC 602 (A,130,68) IC(A,B,C)            | TC7SH126FU      |
| <b>Unit Number : QWM3677(A)</b>          |                 | IC 603 (A,137,66)L-MOS And Gate(A,B,C) | TC7SET08FUS1    |
| <b>Unit Number : QWM3678(B)</b>          |                 | IC 671 (A,133,75) IC                   | S-80827CNMC-B8M |
| <b>Unit Number : QWM3679(C)</b>          |                 | IC 681 (A,115,94) Flash ROM Unit(A)    | PEB094A8        |
| <b>Unit Number : QWM3627(D)</b>          |                 | (A,115,94) Flash ROM Unit(B)           | PEB095A8        |
| <b>Unit Name : Tuner Amp Unit</b>        |                 | (A,115,94) Flash ROM Unit(C)           | PEB110A8        |
| <b>Unit Number : (A,D)</b>               |                 | (A,115,94) Flash ROM Unit(D)           | PEB101A8        |
| <b>Unit Number : (B,C)</b>               |                 | IC 801 (A,104,18) L-MOS And Gate       | TC7SET08FUS1    |
| <b>Unit Name : Keyboard Unit</b>         |                 | IC 911 (A,145,28) Regulator IC         | BA49183-V12     |
| <b>Unit Number : CWX4269</b>             |                 | Q 251 (A,20,129) Chip Transistor       | RN1910          |
| <b>Unit Name : CD Core Unit(S11.6VA)</b> |                 | Q 252 (A,28,129) Chip Transistor(B)    | RN1910          |
| <b>Unit Number : QWM3750(A,B)</b>        |                 | Q 253 (A,12,129) Chip Transistor       | RN1910          |
| <b>Unit Name : BT Unit</b>               |                 | Q 301 (A,60,124) Chip Transistor       | RN4983          |
|                                          |                 | Q 531 (A,89,95) Transistor             | LSAR523UB       |
|                                          |                 | Q 751 (A,14,103) Transistor            | KTD2092         |
|                                          |                 | Q 752 (A,10,108) Chip Transistor       | RN4983          |
|                                          |                 | Q 871 (A,150,63) Transistor            | 2SA1577         |
|                                          |                 | Q 872 (A,149,54) Transistor            | LTC143EUB       |
|                                          |                 | Q 941 (A,128,108) Transistor           | LSCR523UB       |
|                                          |                 | Q 951 (A,122,111) Transistor(D)        | LSAR523UB       |
|                                          |                 | D 401 (A,163,103) Diode                | RN731VN         |
|                                          |                 | D 402 (A,162,100) Diode                | RN731VN         |
|                                          |                 | D 551 (A,24,118) Diode                 | CMS03           |
|                                          |                 | D 552 (A,44,106) Diode                 | RB056L-40       |
|                                          |                 | D 601 (A,136,78) Diode                 | RB751SM-40      |
|                                          |                 | D 602 (A,90,75) Diode                  | RB551VM-30      |
|                                          |                 | D 751 (A,16,108) Diode                 | DZ2J082M0       |
|                                          |                 | D 801 (A,105,13) Diode                 | DZ2S068C        |
|                                          |                 | D 802 (A,92,17) Diode                  | DZ2S068C        |
|                                          |                 | D 803 (A,125,15) Diode                 | DZ2S068C        |
|                                          |                 | D 804 (A,119,14) Diode                 | DZ2S068C        |
|                                          |                 | D 805 (A,120,14) Diode                 | DZ2S068C        |
|                                          |                 | D 806 (A,116,13) Diode                 | DZ2S068C        |
|                                          |                 | D 807 (A,113,13) Diode                 | DZ2S068C        |
|                                          |                 | D 808 (A,117,13) Diode                 | DZ2S068C        |
|                                          |                 | D 809 (A,112,13) Diode                 | DZ2S068C        |
|                                          |                 | D 901 (A,138,127) Diode                | 1SR154-400      |
| <b>MISCELLANEOUS</b>                     |                 |                                        |                 |
| IC 201 (A,98,107) LSI                    | PM9013A         |                                        |                 |
| IC 301 (A,78,142) IC                     | PA2032A         |                                        |                 |
| IC 401 (A,154,91) IC                     | TDA7706         |                                        |                 |
| IC 531 (A,93,87) IC                      | 337S3959        |                                        |                 |

1

2

3

4

**Circuit Symbol and No.****Part No.****Circuit Symbol and No.****Part No.**

|       |                        |               |
|-------|------------------------|---------------|
| D 902 | (A,134,127) Diode      | 1SR154-400    |
| D 911 | (A,159,66) Diode       | CRG03         |
| D 912 | (A,162,66) Diode       | CRG03         |
| D 941 | (A,129,113) Diode(A,D) | DZ2J075M0     |
|       | (A,129,113) Diode(B,C) | DZ2J068M0     |
| D 951 | (A,121,114) Diode(D)   | DAN202UM      |
| L 202 | (A,91,102) Inductor    | CTF1793       |
| L 401 | (A,159,104) Chip Coil  | LCTAWR27J2520 |

|       |                    |              |
|-------|--------------------|--------------|
| R 266 | (A,17,129) (B)     | RS1/16SS0R0J |
| R 267 | (A,15,129) (A,C,D) | RS1/16SS0R0J |
| R 301 | (A,68,127)         | RS1/16SS471J |
| R 302 | (A,82,125)         | RS1/16SS471J |
| R 303 | (A,73,127)         | RS1/16SS471J |
| R 304 | (A,78,126)         | RS1/16SS471J |
| R 305 | (A,59,122)         | RS1/16SS103J |

|       |                           |               |
|-------|---------------------------|---------------|
| L 402 | (A,163,107) Chip Coil     | LCTAWR15J2520 |
| L 403 | (A,155,102) Inductor      | CTF1786       |
| L 404 | (A,150,102) Inductor      | CTF1786       |
| L 405 | (A,155,108) Inductor(B,C) | LCYB68NJ1608  |
| L 406 | (A,152,105) Inductor      | CTF1389       |
| L 408 | (A,145,104) Inductor      | LCTC4R7K1608  |

|       |             |              |
|-------|-------------|--------------|
| R 306 | (A,61,121)  | RS1/16SS221J |
| R 307 | (A,61,122)  | RS1/16SS223J |
| R 309 | (A,84,121)  | RS1/16SS103J |
| R 311 | (A,85,122)  | RS1/16SS473J |
| R 401 | (A,166,105) | RS1/16SS221J |

|       |                          |               |
|-------|--------------------------|---------------|
| L 410 | (A,141,94) Chip Coil     | LCTAW470J2520 |
| L 413 | (A,148,82) Inductor      | CTF1786       |
| L 414 | (A,157,80) Inductor(A,D) | CTF1786       |
| L 419 | (A,165,95) Inductor      | CTF1786       |
| L 420 | (A,165,96) Inductor      | CTF1786       |

|       |             |              |
|-------|-------------|--------------|
| R 402 | (A,165,100) | RS1/16SS751J |
| R 403 | (A,143,104) | RS1/16SS391J |
| R 404 | (A,146,99)  | RS1/16SS105J |
| R 406 | (A,158,108) | RS1/16SS105J |
| R 407 | (A,143,96)  | RS1/16SS330J |

|       |                                               |         |
|-------|-----------------------------------------------|---------|
| L 551 | (A,52,108) Inductor                           | CTH1524 |
| L 801 | (A,115,17) Inductor                           | CTF1713 |
| L 901 | (A,112,141) Choke Coil 600 uH                 | CTH1432 |
| L 951 | (A,101,125) Chip Coil(D)                      | BTH1101 |
| X 401 | (A,165,88) Crystal Resonator 36.48 MHz        | CSS1848 |
| X 601 | (A,128,75) Crystal Resonator 12 MHz           | CSS1847 |
| X 602 | (A,119,90) Ceramic Oscillator 16.934 MHz(C,D) | CSS1603 |

|       |                  |              |
|-------|------------------|--------------|
| R 408 | (A,141,97)       | RS1/16SS471J |
| R 411 | (A,142,91)       | RS1/16SS681J |
| R 412 | (A,157,78)       | RS1/4SA8R2J  |
| R 413 | (A,162,78)       | RS1/4SA8R2J  |
| R 414 | (A,143,87)       | RS1/16SS0R0J |
| R 415 | (A,156,80) (B,C) | RS1/16SS0R0J |

|        |                                     |                    |
|--------|-------------------------------------|--------------------|
| X 603  | (A,125,92) Resonator 16.93 MHz(A,B) | CSS1794            |
| ⚠ P251 | (A,6,129) Fuse 3.0 A                | CEK1386            |
| P 402  | (A,159,111) Surge Absorber          | HSPC16701B02       |
| P 1001 | (A,153,72) Fuse 1.0 A(A,B,C)        | CEK1381            |
| VA801  | (A,108,13) SMD Varistor             | MLV0402ES012V0010N |

|       |           |              |
|-------|-----------|--------------|
| R 531 | (A,90,91) | RS1/16SS473J |
| R 532 | (A,89,84) | RS1/16SS222J |
| R 533 | (A,90,84) | RS1/16SS222J |
| R 534 | (A,94,90) | RS1/16SS272J |
| R 535 | (A,95,90) | RS1/16SS472J |

|       |                            |                    |
|-------|----------------------------|--------------------|
| VA802 | (A,101,13) SMD Varistor    | MLV0402ES012V0010N |
| CN701 | (A,114,32) Connector       | VKN1192            |
| CN801 | (A,109,4) Connector        | CKS6452            |
| CN971 | (A,93,49) Connector(A,B)   | VKN1192            |
| JA251 | (A,19,141) Pin Jack(A,C,D) | CKB1099            |
|       | (A,19,141) Pin Jack(B)     | XKB7001            |

|       |            |              |
|-------|------------|--------------|
| R 536 | (A,96,90)  | RS1/16SS472J |
| R 537 | (A,95,85)  | RS1/16SS101J |
| R 538 | (A,95,83)  | RS1/16SS101J |
| R 551 | (A,47,112) | RS1/16SS682J |
| R 552 | (A,53,113) | RS1/16SS0R0J |

|       |                              |         |
|-------|------------------------------|---------|
| JA401 | (A,162,129) Antenna Jack     | YKS5041 |
| JA891 | (A,42,138) Jack(C)           | CKS6437 |
| JA892 | (A,42,141) Jack(A,B)         | YKS5035 |
|       | (A,42,141) Jack(D)           | YKS5001 |
| JA901 | (A,113,141) Connector        | CKM1613 |
| JA961 | (A,142,144) Connector(A,B,C) | CKS3806 |

|       |                  |               |
|-------|------------------|---------------|
| R 553 | (A,49,113)       | RS1/16SS1803D |
| R 554 | (A,49,112)       | RS1/16SS4302D |
| R 555 | (A,64,103)       | RS1/10SR471J  |
| R 601 | (A,101,63) (A,B) | RS1/16SS473J  |
| R 602 | (A,109,61)       | RS1/16SS473J  |

|   |             |         |
|---|-------------|---------|
| ⚠ | Fuse (10 A) | YEK5001 |
|---|-------------|---------|

|       |                  |              |
|-------|------------------|--------------|
| R 603 | (A,112,47) (A,B) | RS1/16SS473J |
| R 604 | (A,117,61) (D)   | RS1/16SS473J |
| R 609 | (A,124,65)       | RS1/16SS473J |
| R 610 | (A,124,68)       | RS1/16SS473J |
| R 611 | (A,129,70)       | RS1/16SS473J |
| R 613 | (A,124,74)       | RS1/16SS152J |

**RESISTORS**

|       |            |              |
|-------|------------|--------------|
| R 251 | (A,22,128) | RS1/16SS821J |
| R 252 | (A,19,125) | RS1/16SS821J |
| R 253 | (A,22,130) | RS1/16SS223J |
| R 254 | (A,18,126) | RS1/16SS223J |

|       |            |              |
|-------|------------|--------------|
| R 614 | (A,132,78) | RS1/16SS473J |
| R 615 | (A,133,78) | RS1/16SS473J |
| R 616 | (A,125,64) | RS1/16SS473J |
| R 617 | (A,137,79) | RS1/16SS103J |
| R 618 | (A,127,82) | RS1/16SS473J |

|       |                |              |
|-------|----------------|--------------|
| R 255 | (A,31,128) (B) | RS1/16SS821J |
| R 256 | (A,25,127) (B) | RS1/16SS821J |
| R 257 | (A,30,131) (B) | RS1/16SS223J |
| R 258 | (A,25,129) (B) | RS1/16SS223J |
| R 260 | (A,14,126)     | RS1/16SS821J |

|       |                  |              |
|-------|------------------|--------------|
| R 622 | (A,122,86)       | RS1/16SS473J |
| R 623 | (A,129,93)       | RAB4CQ473J   |
| R 624 | (A,124,89) (A,B) | RS1/16SS222J |
| R 625 | (A,115,90)       | RS1/16SS221J |
| R 626 | (A,114,90)       | RS1/16SS221J |

|       |                    |              |
|-------|--------------------|--------------|
| R 261 | (A,10,128)         | RS1/16SS821J |
| R 262 | (A,15,127)         | RS1/16SS223J |
| R 263 | (A,10,129)         | RS1/16SS223J |
| R 264 | (A,16,130) (B)     | RS1/16SS0R0J |
| R 265 | (A,17,128) (A,C,D) | RS1/16SS0R0J |

|       |            |              |
|-------|------------|--------------|
| R 627 | (A,113,90) | RS1/16SS221J |
| R 628 | (A,112,90) | RS1/16SS221J |
| R 629 | (A,110,91) | RS1/16SS221J |
| R 630 | (A,109,91) | RS1/16SS221J |
| R 631 | (A,107,92) | RS1/16SS473J |

|       |            |              |
|-------|------------|--------------|
| R 632 | (A,108,87) | RS1/16SS473J |
|-------|------------|--------------|

1

2

3

4



1

2

3

4

**Circuit Symbol and No.****Part No.****Circuit Symbol and No.****Part No.**

C 216 (A,88,101) 10 uF  
 C 217 (A,92,100)  
 C 218 (A,112,109)  
 C 219 (A,109,103) 10 uF  
 C 220 (A,103,98) 10 uF

CCG1192  
 CKSSYB104K10  
 XCEVW470M16  
 CCG1192  
 CCG1192

C 424 (A,144,101)  
 C 425 (A,143,99) 10 uF  
 C 426 (A,143,97)  
 C 427 (A,148,97)

CKSSYB103K16  
 CCG1192  
 CKSSYB104K10  
 CKSSYB104K10

C 223 (A,87,101)  
 C 224 (A,112,103)  
 C 229 (A,108,111)  
 C 236 (A,107,104)

CKSSYB102K50  
 CKSSYB104K10  
 CKSSYB102K50  
 CKSRYB105K10

C 428 (A,141,96)  
 C 429 (A,140,96)  
 C 430 (A,143,90)  
 C 432 (A,142,92)  
 C 433 (A,140,91)

CCSSCH101J50  
 CKSSYB103K16  
 CKSSYB102K50  
 CCSSCH820J50  
 CKSSYB102K50

C 237 (A,91,114) (B,C,D)  
 C 238 (A,106,113) (B,C,D)  
 C 239 (A,105,116) (B,C,D)  
 C 240 (A,92,112) (B,C,D)  
 C 241 (A,85,101)

CKSRYB105K10  
 CKSRYB105K10  
 CKSRYB105K10  
 CKSRYB105K10  
 CKSSYB102K50

C 434 (A,145,89)  
 C 435 (A,143,86)  
 C 440 (A,146,86)  
 C 442 (A,150,83)  
 C 444 (A,156,82) 2.2 uF

CCSSCH100D50  
 CKSRYB474K10  
 CKSSYB102K50  
 CKSSYB104K10  
 CCG1218

C 251 (A,26,126) 4.7 uF  
 C 252 (A,22,126) 4.7 uF  
 C 253 (A,22,129)  
 C 254 (A,17,127)  
 C 255 (A,34,127) 4.7 uF(B)

CCG1201  
 CCG1201  
 CCSSCH101J50  
 CCSSCH101J50  
 CCG1201

C 445 (A,160,82)  
 C 448 (A,162,85)  
 C 449 (A,165,85)  
 C 450 (A,165,90)  
 C 451 (A,162,91)

CKSSYB104K10  
 CKSSYB104K10  
 CCSSCH9R0D50  
 CCSSCH9R0D50  
 CKSSYB104K10

C 256 (A,30,126) 4.7 uF(B)  
 C 257 (A,30,130) (B)  
 C 258 (A,25,130) (B)  
 C 260 (A,34,131)

CCG1201  
 CCSSCH101J50  
 CCSSCH101J50  
 CKSSYB103K16

C 452 (A,162,94)  
 C 453 (A,164,96)  
 C 455 (A,162,97)  
 C 456 (A,166,92)  
 C 457 (A,166,93)

CKSRYB105K10  
 CKSSYB104K10  
 CKSRYB224K16  
 CKSSYB472K25  
 CKSSYB472K25

C 261 (A,6,132)  
 C 262 (A,16,124) 4.7 uF  
 C 263 (A,12,124) 4.7 uF  
 C 264 (A,15,128)  
 C 265 (A,10,130)

CKSSYB104K10  
 CCG1201  
 CCG1201  
 CCSSCH101J50  
 CCSSCH101J50

C 459 (A,158,83)  
 C 461 (A,149,104)  
 C 462 (A,148,75)  
 C 531 (A,90,90)  
 C 532 (A,92,90)

CCSSCH101J50  
 CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10

C 301 (A,69,129)  
 C 303 (A,80,129)  
 C 305 (A,72,129)  
 C 307 (A,77,129)  
 C 313 (A,84,130)

CKSRYB224K16  
 CKSRYB224K16  
 CKSRYB224K16  
 CKSRYB224K16  
 CKSRYB105K16

C 551 (A,27,112)  
 C 552 (A,35,108)  
 C 553 (A,36,112)  
 C 555 (A,47,114)  
 C 556 (A,64,111)

XCEVW221M16  
 CKSRYB105K16  
 CKSSYB103K16  
 CKSSYB682K25  
 CEVQW221M6R3

C 314 (A,132,126)  
 C 317 (A,60,129)  
 C 321 (A,83,129)  
 C 323 (A,106,129)  
 C 324 (A,102,129)

CKSRYB104K16  
 XCEVW100M16  
 CCSSCH101J50  
 CCSRCH100D50  
 CCSRCH100D50

C 557 (A,60,112)  
 C 560 (A,108,21)  
 C 561 (A,103,24)  
 C 564 (A,58,113) 4.7 uF  
 C 565 (A,37,109) 4.7 uF

CKSRYB105K10  
 CKSRYB105K10  
 CKSRYB105K10  
 CCG1201  
 CCG1222

C 325 (A,95,134)  
 C 326 (A,94,139)  
 C 327 (A,63,123)  
 C 336 (A,95,125)  
 C 401 (A,158,100)

CCSRCH100D50  
 CCSRCH100D50  
 CKSRYB105K10  
 CKSRYB104K16  
 CKSSYB104K10

C 568 (A,64,101) 10 uF  
 C 572 (A,69,122)  
 C 601 (A,104,62)  
 C 602 (A,109,62)  
 C 603 (A,113,62)

CCG1192  
 CKSRYB104K16  
 CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10

C 402 (A,159,101)  
 C 403 (A,157,102)  
 C 405 (A,166,101)  
 C 406 (A,164,101)  
 C 408 (A,166,104)

CKSSYB103K16  
 CKSRYB105K10  
 CKSSYB103K16  
 CKSSYB103K16  
 CKSSYB103K16

C 604 (A,115,61)  
 C 605 (A,118,61)  
 C 606 (A,125,69)  
 C 607 (A,126,72)  
 C 608 (A,128,77)

CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10  
 CCSSCH120J50  
 CCSSCH120J50

C 409 (A,160,105)  
 C 410 (A,159,107)  
 C 411 (A,152,99)  
 C 412 (A,152,101)  
 C 413 (A,154,101)

CCSSCH6R0D50  
 CCSSCH330J50  
 CKSSYB103K16  
 CKSSYB104K10  
 CKSSYB104K10

C 609 (A,125,70)  
 C 610 (A,124,72)  
 C 611 (A,124,77)  
 C 612 (A,125,82)  
 C 613 (A,124,84)

CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10

C 414 (A,149,100)  
 C 415 (A,148,101) 10 uF  
 C 416 (A,151,100)  
 C 417 (A,152,103)  
 C 418 (A,146,101)

CKSSYB103K16  
 CCG1192  
 CKSSYB104K10  
 CCSSCH100D50  
 CKSSYB223K16

C 618 (A,126,89) (A,B)  
 C 619 (A,126,94) (A,B)  
 C 620 (A,116,88)  
 C 621 (A,112,87)  
 C 623 (A,109,89)

CCSSCH120J50  
 CCSSCH120J50  
 CKSSYB104K10  
 CKSSYB104K10  
 CKSSYB104K10

C 420 (A,155,106) (A,D)  
 C 421 (A,158,111) (B,C)

CKSSYB103K16  
 CCSSCJ3R0C50

C 624 (A,106,87)

CKSSYB104K10

1

2

3

4

| 5                               | 6               | 7                                           | 8               |
|---------------------------------|-----------------|---------------------------------------------|-----------------|
| <u>Circuit Symbol and No.</u>   | <u>Part No.</u> | <u>Circuit Symbol and No.</u>               | <u>Part No.</u> |
| C 625 (A,104,90)                | CKSSYB104K10    | <b>MISCELLANEOUS</b>                        |                 |
| C 626 (A,99,79)                 | CKSSYB104K10    | IC 1802 (B,84,22) IC                        | PDC202B         |
| C 627 (A,95,81)                 | CCSSCH220J50    | IC 1851 (B,47,21) IC                        | BH2228FV        |
| C 628 (A,94,81)                 | CCSSCH220J50    | IC 1941 (A,155,39) IR RC REC Module(B,C)    | PNJ4833M        |
| C 629 (A,98,72)                 | CKSSYB104K10    | Q 1851 (B,31,8) Chip Transistor             | HN1C01FU        |
| C 630 (A,98,70)                 | CKSSYB104K10    | Q 1852 (B,32,11) Chip Transistor            | HN1C01FU        |
| C 631 (A,96,75)                 | CCSSCH220J50    | Q 1853 (B,56,24) Chip Transistor            | HN1C01FU        |
| C 634 (A,108,61)                | CKSSYB104K10    |                                             |                 |
| C 635 (A,105,88)                | CKSSYB104K10    | Q 1857 (B,20,9) Transistor                  | LSCR523UB       |
| C 636 (A,99,76)                 | CKSSYB104K10    | Q 1858 (B,12,10) Transistor                 | LSCR523UB       |
| C 637 (A,134,70) (A,B,C)        | CKSSYB104K10    | Q 1859 (B,12,24) Transistor                 | LSCR523UB       |
| C 638 (A,137,68) (A,B,C)        | CKSSYB104K10    | Q 1866 (B,110,26) Transistor                | LSCR523UB       |
| C 639 (A,113,57) 4.7 uF(A,D)    | CCG1212         | Q 1867 (B,120,26) Transistor                | LSCR523UB       |
| C 672 (A,126,71) 1 uF           | DCH1246         |                                             |                 |
| C 681 (A,122,96)                | CKSSYB104K10    | Q 1868 (B,128,27) Transistor                | LSCR523UB       |
| C 683 (A,121,94)                | CCSSCJ3R0C50    | D 1882 (A,9,20) LED                         | SMLVN6RGB2UK(B) |
| C 684 (A,130,99)                | CKSSYB104K10    | D 1883 (A,41,20) LED                        | SMLVN6RGB2UK(B) |
| C 701 (A,111,41)                | CKSSYB103K16    | D 1884 (A,162,26) LED                       | SMLVN6RGB2UK(B) |
| C 704 (A,120,39)                | CCSSCH100D50    | D 1885 (A,148,23) LED                       | SMLVN6RGB2UK(B) |
| C 705 (A,118,39)                | CCSSCH100D50    | D 1886 (A,47,23) LED                        | SMLVN6RGB2UK(B) |
| C 706 (A,116,39)                | CCSSCH100D50    | L 1921 (B,136,11) Inductor                  | CTF1389         |
| C 752 (A,18,106)                | CKSSYB104K10    | L 1922 (B,131,6) Inductor                   | CTF1389         |
| C 753 (A,23,101) 4.7 uF         | CCG1201         | L 1923 (B,140,7) Inductor                   | CTF1389         |
| C 801 (A,124,6)                 | CCSRCH221J50    | X 1801 (B,69,22) Ceramic Resonator 5.00 MHz | CSS1547         |
| C 806 (A,125,8)                 | CKSRYB104K16    | S 1821 (A,51,5) Push Switch                 | CSG1155         |
| C 807 (A,122,14)                | CKSRYB105K10    | S 1822 (A,11,41) Push Switch                | CSG1155         |
| C 808 (A,108,19)                | CKSRYB104K16    | S 1823 (A,67,5) Push Switch                 | CSG1155         |
| C 809 (A,96,16)                 | CCSRCH221J50    | S 1824 (A,15,5) Push Switch                 | CSG1155         |
| C 810 (A,96,13)                 | CCSRCH221J50    | S 1826 (A,5,20) Push Switch                 | CSG1155         |
| C 811 (A,104,20)                | CKSSYB104K10    | S 1828 (A,35,33) Push Switch                | CSG1155         |
| C 812 (A,119,25)                | CKSSYB104K10    | S 1830 (A,25,19) Encoder(MULTI-CONTROL)     | CSD1168         |
| C 873 (A,124,25)                | CKSRYB104K16    | S 1832 (A,35,5) Push Switch                 | CSG1155         |
| C 891 (A,53,137)                | CKSRYB104K16    | S 1834 (A,76,5) Push Switch                 | CSG1155         |
| C 892 (A,36,132)                | CKSRYB104K16    | S 1835 (A,146,5) Push Switch                | CSG1155         |
| C 893 (A,39,130) (A,B,D)        | CKSRYB102K50    | S 1836 (A,123,5) Push Switch                | CSG1155         |
| C 894 (A,52,134) (A,B,D)        | CKSRYB102K50    | S 1837 (A,130,5) Push Switch                | CSG1155         |
| C 895 (A,49,132) (D)            | CKSRYB102K50    | S 1838 (A,99,5) Push Switch                 | CSG1155         |
| C 901 (A,130,124) 2 200 uF/16 V | CCH2040         | S 1839 (A,107,5) Push Switch                | CSG1155         |
| C 912 (A,152,40)                | CKSSYB102K50    | S 1840 (A,83,5) Push Switch                 | CSG1155         |
| C 913 (A,134,41)                | CKSSYB102K50    | S 1842 (A,15,33) Push Switch                | CSG1155         |
| C 914 (A,156,57)                | XCEAT102M16     | CN1911 (A,155,26) Connector                 | CKS6443         |
| C 915 (A,136,41)                | CKSRYB104K16    | CN1931 (B,109,10) Connector                 | CKS6451         |
| C 916 (A,146,43) 4.7 uF         | CCG1201         | JA1921 (A,156,11) Jack                      | YKN5006         |
| C 917 (A,145,46)                | CKSSYB102K50    | V 1802 (A,53,32) Segment LCD                | CAW2041         |
| C 919 (A,151,42) 4.7 uF         | CCG1201         |                                             |                 |
| C 921 (A,130,41) 4.7 uF         | CCG1201         | <b>RESISTORS</b>                            |                 |
| C 923 (A,159,41) 4.7 uF         | CCG1201         | R 1809 (B,76,10)                            | RS1/16SS473J    |
| C 926 (A,140,44) 4.7 uF         | CCG1201         | R 1810 (B,63,21)                            | RS1/16SS103J    |
| C 927 (A,139,42)                | CKSSYB102K50    | R 1824 (B,32,31)                            | RS1/16SS273J    |
| C 930 (A,136,123)               | CKSRYB104K16    | R 1851 (B,50,16)                            | RS1/10SR222J    |
| C 941 (A,132,113)               | CKSRYB104K16    | R 1852 (B,48,16)                            | RS1/10SR222J    |
| C 961 (A,149,131) (A,B,C)       | CKSRYB105K16    | R 1853 (B,52,9)                             | RS1/10SR222J    |
| C 973 (A,98,53) (A,B)           | CCSSCH470J50    | R 1854 (B,41,18)                            | RAB4CQ102J      |
|                                 |                 | R 1855 (B,42,22)                            | RAB4CQ102J      |
|                                 |                 | R 1856 (B,26,10)                            | RS1/16SS101J    |
|                                 |                 | R 1857 (B,28,8)                             | RS1/16SS101J    |
|                                 |                 | R 1858 (B,13,13)                            | RS1/16SS101J    |
|                                 |                 | R 1859 (B,101,23)                           | RS1/16SS101J    |
|                                 |                 | R 1860 (B,58,21)                            | RS1/16SS101J    |
|                                 |                 | R 1861 (B,58,24)                            | RS1/16SS101J    |
|                                 |                 | R 1862 (B,24,7)                             | RS1/16SS680J    |

**B**  
Unit Number : (A,D)  
Unit Number : (B,C)  
Unit Name : Keyboard Unit

1

**Circuit Symbol and No.**

R 1864 (B,17,8)  
R 1866 (B,11,20)  
R 1868 (B,115,25)  
R 1870 (B,125,27)  
R 1872 (B,131,26)

2

**Part No.**

RS1/16SS680J  
RS1/16SS680J  
RS1/16SS680J  
RS1/16SS680J  
RS1/16SS680J

3

**Circuit Symbol and No.**

R 291 (B,34,35)  
R 294 (B,28,49)  
R 303 (A,28,12)  
R 304 (A,29,11)  
R 305 (A,27,9)

4

**Part No.**

RS1/16SS560J  
RS1/16SS471J  
RS1/16SS123J  
RS1/16SS123J  
RS1/16SS102J

R 1931 (B,74,6)  
R 1932 (B,78,6)  
R 1941 (B,145,32) (A,D)  
R 1944 (B,144,27) (B,C)

RS1/10SR222J  
RS1/10SR222J  
RS1/16SS473J  
RS1/10SR101J

R 306 (A,27,12)  
R 307 (A,26,9)  
R 308 (A,26,12)  
R 309 (A,35,7)  
R 310 (B,31,9)

RS1/16SS472J  
RS1/16SS102J  
RS1/16SS472J  
RS1/16SS473J  
RS1/16SS472J

**CAPACITORS**

C 1801 (B,78,12)  
C 1802 (B,77,12)  
C 1803 (B,79,12)  
C 1804 (B,72,21)  
C 1805 (B,72,23)

CKSSYB104K10  
CKSSYB104K10  
CKSSYB104K10  
CKSRYB105K10  
CKSSYB104K10

R 311 (B,31,10)  
R 312 (B,31,11)  
R 313 (B,31,12)  
R 701 (A,22,38)  
R 702 (A,24,38)

RS1/16SS472J  
RS1/16SS472J  
RS1/16SS472J  
RS1/16SS101J  
RS1/16SS101J

C 1854 (B,52,23)  
C 1855 (B,52,24)  
C 1911 (B,164,34)  
C 1912 (B,140,16)  
C 1941 (B,144,29) 10 uF(B,C)

CKSSYB103K16  
CKSRYB105K10  
CKSRYB104K16  
CKSRYB104K16  
CCG1192

R 706 (A,33,42)

RS1/16SS221J

**CAPACITORS**

C 104 (B,15,52)  
C 110 (B,11,44)  
C 111 (B,12,44)  
C 203 (B,22,47)  
C 205 (A,17,41)

CKSQYB475K6R3  
CKSSYB104K10  
CKSSYB103K16  
CKSSYB104K10  
CKSRYB105K10

**C****Unit Number: CWX4269****Unit Name : CD Core Unit(S11.6VA)****MISCELLANEOUS**

IC 201 (B,24,38) IC PEQ094A  
IC 301 (A,37,12) IC BD8223EFV  
Q 101 (B,12,54) Transistor 2SA1577  
Q 102 (B,16,55) Chip Digital Transistor LTA123JUB  
X 201 (B,25,50) Ceramic Resonator 16.934 MHz CSS1603

C 209 (B,29,48)  
C 210 (B,33,44)  
C 211 (B,34,42)  
C 212 (B,23,29)  
C 213 (B,18,26)

CKSRYB104K16  
CKSSYB104K10  
CKSSYB104K10  
CKSSYB104K10  
CKSSYB332K50

S 901 (A,43,54) Spring Switch(HOME) CSN1080  
S 903 (B,22,13) Spring Switch(DSCSNS) CSN1081  
CN101 (A,17,58) Connector CKS4808  
CN701 (A,26,30) Connector CKS6146

C 214 (B,17,26)  
C 215 (B,19,29)  
C 216 (B,13,33)  
C 217 (B,10,35)  
C 218 (B,10,37)

CKSSYB473K16  
CKSSYB104K10  
CKSSYB152K50  
CCSSCH390J50  
CCSSCH5R0C50

**RESISTORS**

R 101 (B,7,59) RS1/10SR2R4J  
R 102 (B,8,59) RS1/10SR2R4J  
R 103 (B,10,59) RS1/10SR2R7J  
R 108 (B,14,58) RS1/16SS105J  
R 109 (B,15,50) RS1/16SS152J

C 219 (B,14,35)  
C 220 (A,18,39)  
C 221 (B,14,32)  
C 222 (B,14,37)  
C 223 (B,13,42)

CKSSYB104K10  
CKSSYB104K10  
CKSSYB104K10  
CKSSYB104K10  
CCSSCH680J50

R 214 (B,18,28) RS1/16SS103J  
R 215 (B,17,28) RS1/16SS393J  
R 216 (B,13,36) RS1/16SS102J  
R 217 (B,10,33) RS1/16SS562J  
R 218 (B,10,36) RS1/16SS472J

C 224 (B,14,45)  
C 225 (B,14,47)  
C 228 (B,10,34)  
C 229 (B,9,41)  
C 233 (B,33,46)

CCSSCH470J50  
CKSSYB103K16  
CCSSCH180J50  
CKSSYB104K10  
CKSSYB103K16

R 229 (B,13,35) RS1/16SS471J  
R 232 (A,31,55) RS1/16SS0R0J  
R 237 (B,34,45) RS1/16SS221J  
R 240 (B,35,40) RS1/16SS473J  
R 245 (A,34,46) RS1/16SS104J

C 236 (B,8,41)  
C 238 (A,26,45)  
C 299 (A,26,43)  
C 302 (B,29,12)  
C 303 (B,30,12)

CKSSYB104K10  
CKSRYB104K16  
CKSSYB104K10  
CKSSYB102K50  
CKSSYB102K50

R 254 (A,37,56) RS1/16SS104J  
R 260 (B,30,27) RS1/16SS103J  
R 264 (A,22,9) RS1/16SS102J  
R 281 (B,34,38) RS1/16SS560J  
R 282 (B,34,39) RS1/16SS560J

C 304 (B,28,12)  
C 305 (B,27,12)  
C 306 (A,32,7)  
C 307 (A,42,19)  
C 308 (A,32,16)

CKSSYB223K16  
CKSSYB104K10  
CKSSYB104K10  
CKSRYB105K10  
CKSRYB105K10

C 710 (A,34,43)

CKSSYB102K50

**D****Unit Number: QWM3750(A,B)****Unit Name : BT Unit**

1

2

3

4

**MISCELLANEOUS**

|       |                       |              |
|-------|-----------------------|--------------|
| IC 21 | (A,8,48) Regulator IC | S-1172B18-E6 |
| IC 22 | (A,21,46) IC          | S-1206B33-U3 |
| CN21  | (A,34,27) Connector   | CKS6346      |
| CN23  | (A,42,44) Connector   | CKS3857      |

A

**RESISTORS**

|      |           |              |
|------|-----------|--------------|
| R 28 | (A,42,31) | RS1/10SR222J |
| R 29 | (A,30,41) | RS1/10SR102J |
| R 30 | (A,30,37) | RS1/10SR102J |
| R 38 | (A,42,17) | RS1/10SR0R0J |
| R 39 | (A,41,23) | RS1/10SR221J |
| R 40 | (A,40,23) | RS1/10SR221J |
| R 41 | (A,38,23) | RS1/10SR221J |

B

**CAPACITORS**

|      |                 |              |
|------|-----------------|--------------|
| C 23 | (A,24,40)       | XCEVW221M4   |
| C 24 | (A,7,44)        | CKSRYB105K10 |
| C 26 | (A,27,48) 10 uF | CCG1192      |
| C 29 | (A,17,45)       | CKSRYB105K10 |
| C 33 | (A,9,54) 10 uF  | CCG1192      |
| C 34 | (A,42,30)       | CKSRYB105K10 |
| C 36 | (A,32,40)       | CKSRYB104K16 |
| C 38 | (A,15,46) 10 uF | CCG1192      |
| C 39 | (A,6,42) 10 uF  | CCG1192      |

C

D

E

F