


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

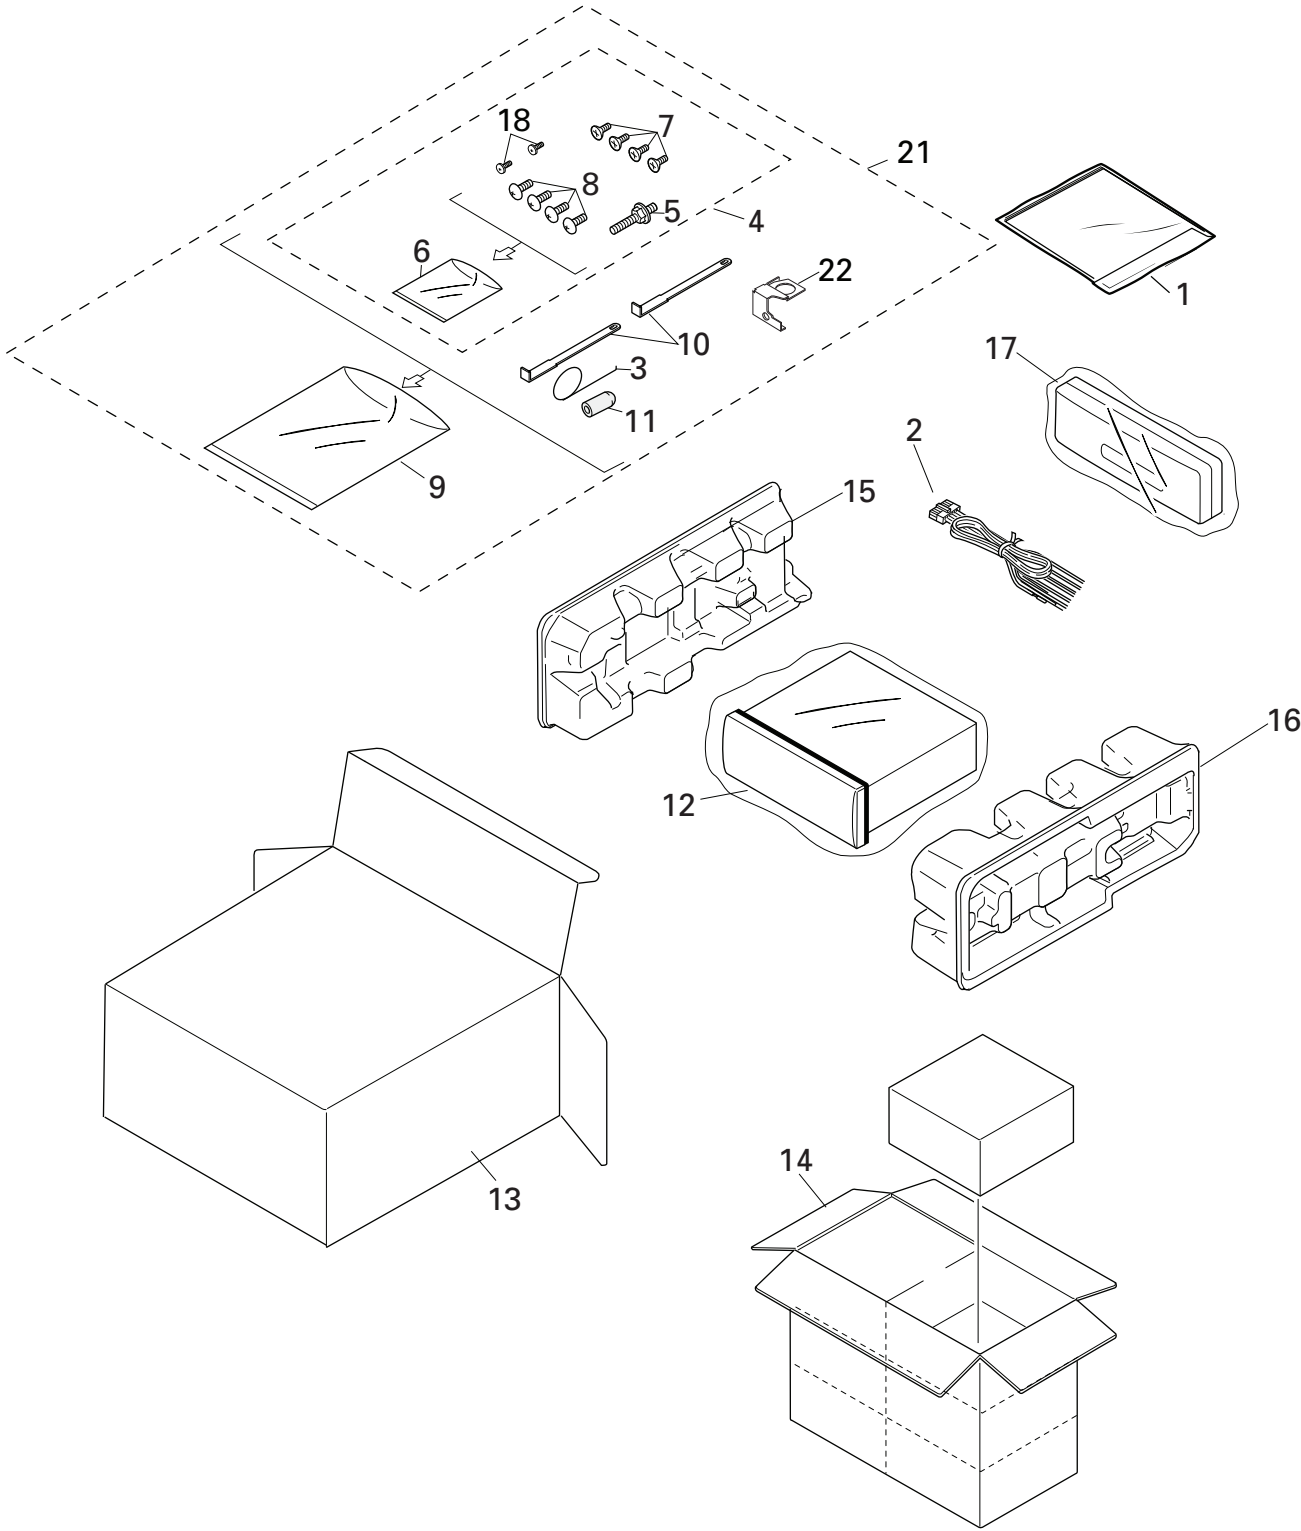

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1-1	Owner's Manual	See Contrast table(2)	12	Polyethylene Bag	CEG1173
1-2	Installation Manual	See Contrast table(2)	13	Carton	See Contrast table(2)
* 1-3	Card	See Contrast table(2)	14	Contain Box	See Contrast table(2)
* 1-4	Warranty Card	See Contrast table(2)	15	Protector	CHP2251
1-5	Polyethylene Bag	CEG1116	16	Protector	CHP2252
2	Cord Assy	CDE6468	17	Case Assy	See Contrast table(2)
3	Spring	CBH1650	18	Screw	BPZ20P060FZK
4	Screw Assy	CEA2796	19		
5	Screw	CBA1002	20		
* 6	Polyethylene Bag	CEG-127	21	Accessory Assy	CEA2773
7	Screw	CRZ50P090FMC	22	Earth Plate	CNC9450
8	Screw	TRZ50P080FMC			
* 9	Polyethylene Bag	CEG-158			
10	Handle	CNC5395			
11	Bush	CNV3930			

(2) CONTRAST TABLE


DEH-240F/XN/UC, DEH-2400F/XN/UC and DEH-24F/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-240F/XN/UC	DEH-2400F/XN/UC	DEH-24F/XN/UC
1-1	Owner's Manual	CRD3497	CRD3498	CRD3498
1-2	Installation Manual	CRD3501	CRD3502	CRD3502
* 1-3	Card	Not used	ARY1048	ARY1048
* 1-4	Warranty Card	CRY1070	Not used	Not used
13	Carton	CHG4645	CHG4643	CHG4644
14	Contain Box	CHL4645	CHL4643	CHL4644
17	Case Assy	CXB3520	Not used	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-240F/XN/UC	CRD3497	English, French, Spanish
	CRD3501	
DEH-2400F/XN/UC	CRD3498	English, French, Spanish
DEH-24F/XN/UC	CRD3502	

2.2 EXTERIOR

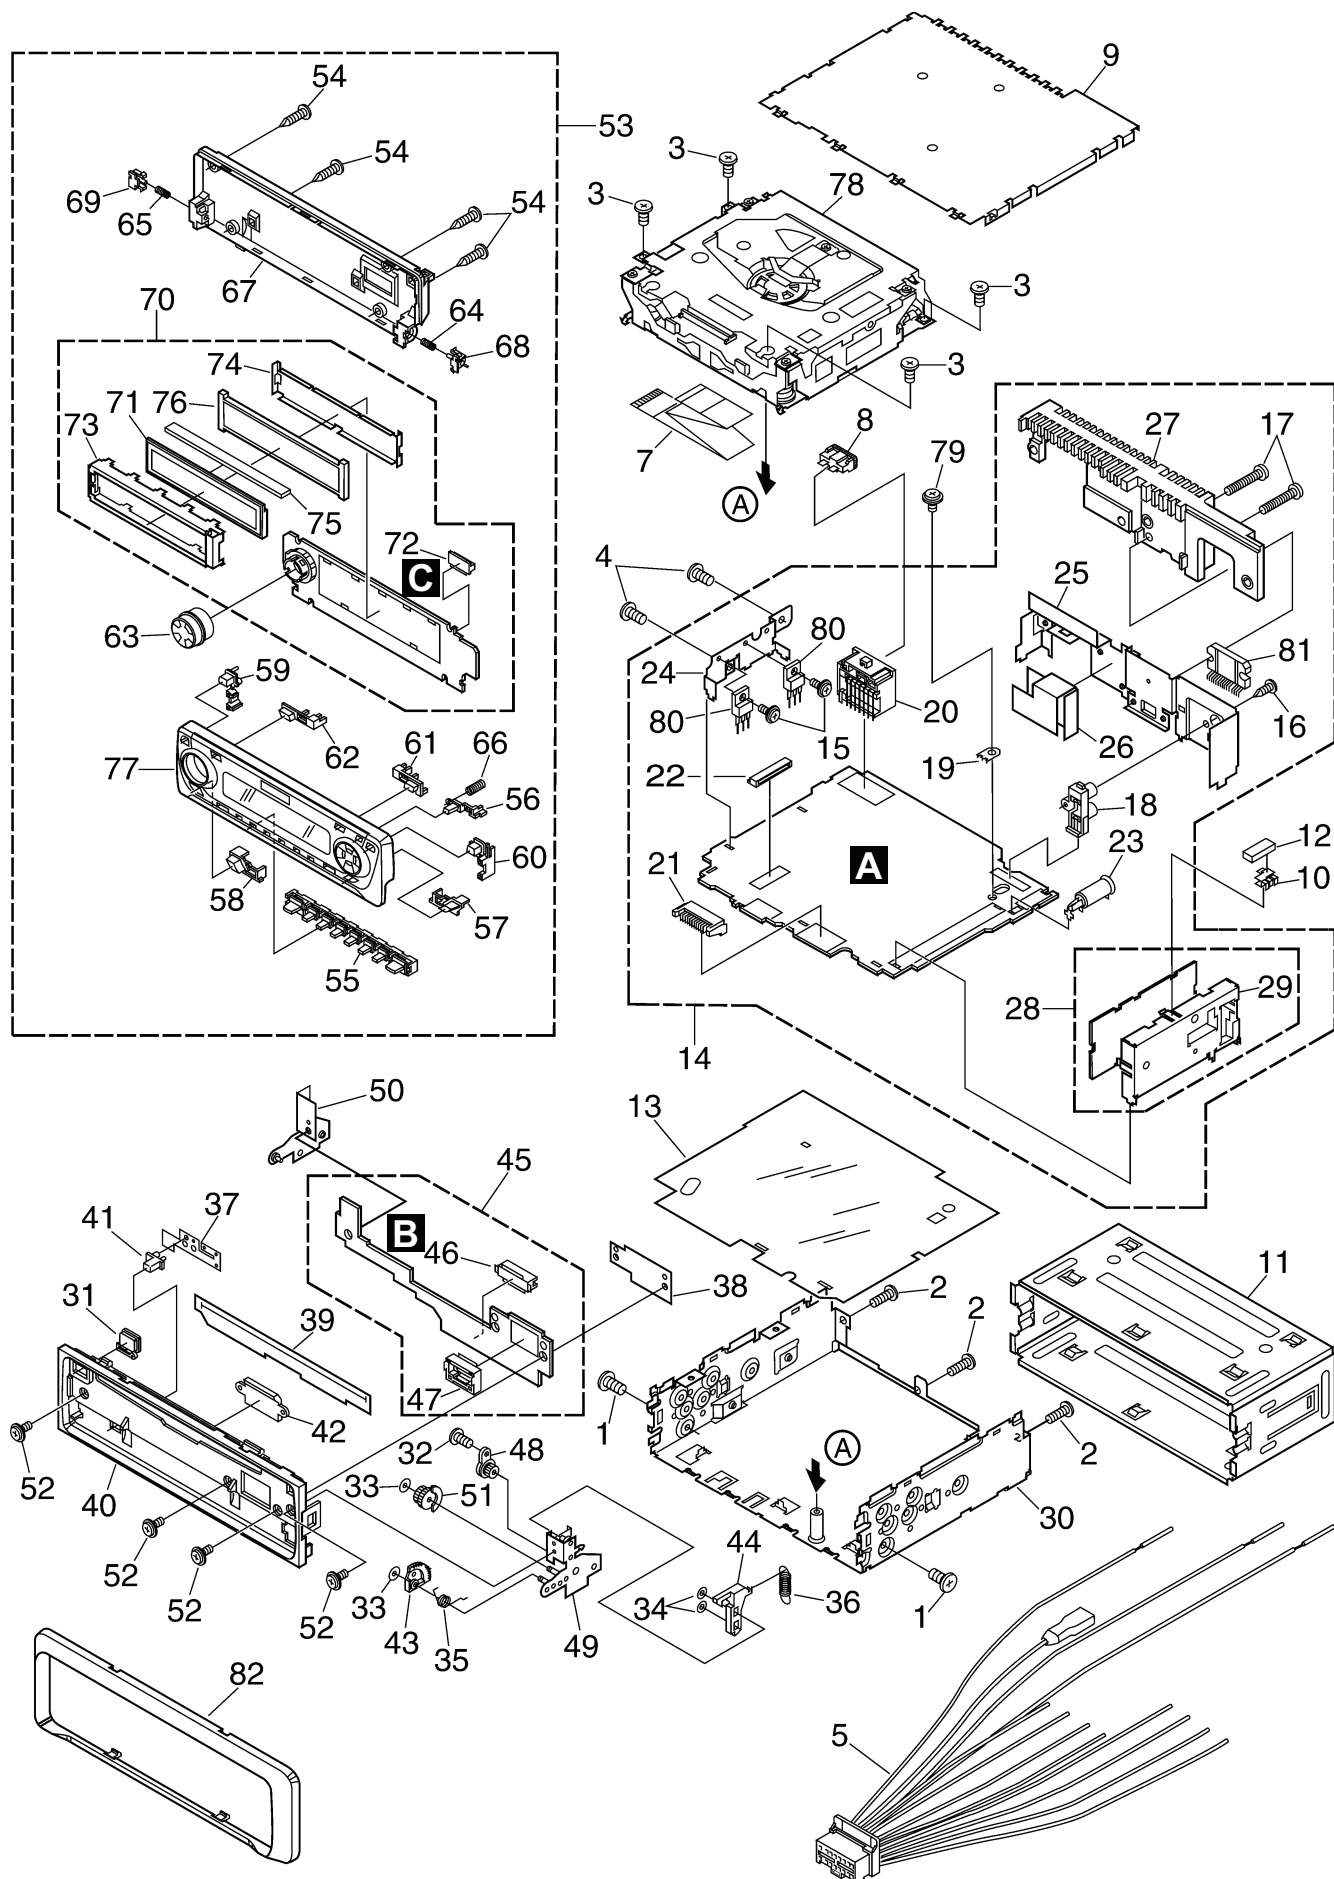

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK	41	Pin	CNV6486
2	Screw	BMZ30P100FMC	42	Lighting Conductor	CNV6487
3	Screw	BSZ26P060FMC	43	Gear	CNV6507
4	Screw	BSZ30P060FMC	44	Arm	CNV6508
5	Cord Assy	CDE6468	45	Panel Unit	CWM7375
6			46	Socket(CN1950)	CKS3550
7	Cable	CDE6610	47	Connector(CN1951)	CKS4206
8	Fuse(10A)	CEK1136	48	Damper Unit	CXB5070
9	Case	CNB2686	49	Holder Unit	CXB6356
10	Holder	CNC5704	50	Holder Unit	CXB6357
11	Holder	CNC8659	51	Clutch Unit	CXB6358
12	Cushion	CNM4870	52	Screw	IMS20P045FZK
13	Insulator	CNM6948	53	Detach Grille Assy	See Contrast table(2)
14	Tuner Amp Unit	CWM8319	54	Screw	BPZ20P100FZK
15	Screw	ASZ26P060FMC	55	Button(1-6)	CAC7225
16	Screw	BPZ26P080FMC	56	Button(OPEN)	CAC7227
17	Screw	BSZ26P160FMC	57	Button(LOUD)	CAC7229
18	Pin Jack(CN351)	CKB1028	58	Button(EQ)	CAC7231
19	Terminal(CN404)	CKF1059	59	Button(CLOCK)	CAC7233
20	Plug(CN901)	CKM1330	60	Button(AUDIO)	CAC7234
21	Plug(CN750)	CKS3537	61	Button(LOCAL)	CAC7235
22	Connector(CN501)	CKS3835	62	Button(BSM)	CAC7236
23	Antenna Jack(CN402)	CKX1056	63	Knob	CAC7527
24	Holder	CNC8615	64	Spring	CBH2430
25	Holder	CNC9619	65	Spring	CBH2431
26	Insulator	CNM6949	66	Spring	CBH2630
27	Heat Sink	CNR1614	67	Cover	CNS6740
28	FM/AM Tuner Unit	CWE1563	68	Holder	CNV6505
29	Holder	CNC8815	69	Holder	CNV6506
30	Chassis Unit	CXB6100	70	Keyboard Unit	See Contrast table(2)
31	Button(EJECT)	CAC6839	71	LCD	See Contrast table(2)
32	Screw(M2x2)	CBA1176	72	Connector(CN1901)	CKS4524
33	Washer	CBF1038	73	Holder	CNC9757
34	Washer	CBF1039	74	Sheet	CNM7647
35	Spring	CBH2428	75	Connector	CNV6440
36	Spring	CBH2429	76	Lighting Conductor	CNV7244
37	Spring	CBL1512	77	Sub Grille Assy	See Contrast table(2)
38	Holder	CNC9096	78	CD Mechanism Module(S9ANA)	CXK5501
39	Cover	CNM6854	79	Screw	ISS26P055FUC
40	Panel	CNS6278	80	Transistor(Q510,910)	2SD2396
			81	IC(IC361)	TDA7386
			82	Panel	CNS6332

(2) CONTRAST TABLE

DEH-240F/XN/UC, DEH-2400F/XN/UC and DEH-24F/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-240F/XN/UC	DEH-2400F/XN/UC	DEH-24F/XN/UC
53	Detach Grille Assy	CXB8786	CXB8784	CXB8785
70	Keyboard Unit	CWM8370	CWM8370	CWM8322
71	LCD	CAW1724	CAW1724	CAW1719
77	Sub Grille Assy	CXB8792	CXB8790	CXB8791

2.3 CD MECHANISM MODULE

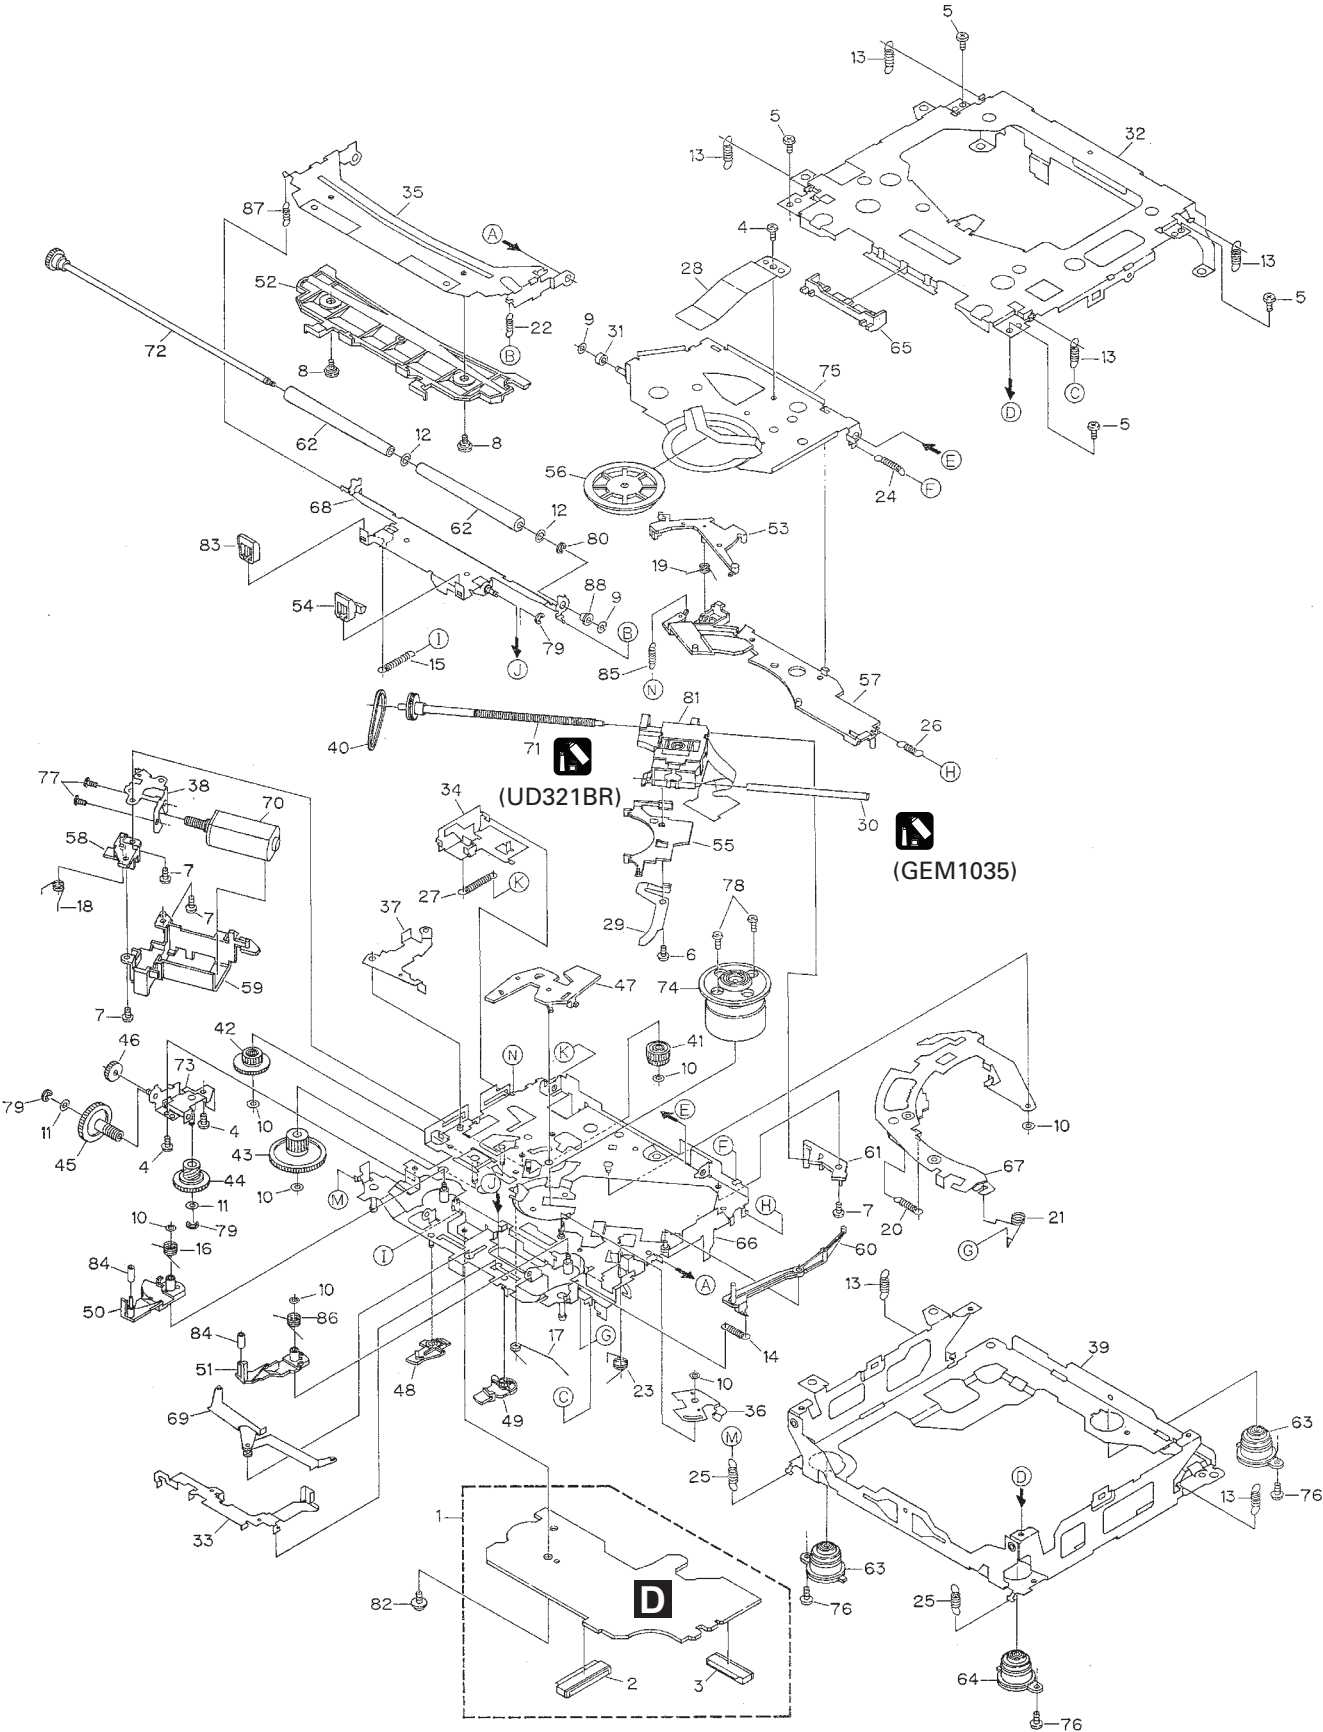

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Control Unit	CWX2481	46	Gear	CNV6320
2	Connector(CN701)	CKS1959	47	Arm	CNV6322
3	Connector(CN101)	CKS3486	48	Arm	CNV6323
4	Screw	BMZ20P025FMC	49	Arm	CNV6324
5	Screw	BSZ20P040FMC	50	Arm	CNV6888
6	Screw(M2x4)	CBA1362	51	Arm	CNV6889
7	Screw(M2x3)	CBA1527	52	Guide	CNV6327
8	Screw	CBA1545	53	Arm	CNV6924
9	Washer	CBF1037	54	Guide	CNV6921
10	Washer	CBF1038	55	Rack	CNV6923
11	Washer	CBF1039	56	Clamper	CNV6331
12	Washer	CBF1060	57	Arm	CNV6332
13	Spring	CBH2378	58	Guide	CNV6333
14	Spring	CBH2379	59	Cover	CNV6334
15	Spring	CBH2514	60	Arm	CNV6335
16	Spring	CBH2533	61	Guide	CNV6336
17	Spring	CBH2382	62	Roller	CNV6338
18	Spring	CBH2383	63	Damper	CNV6339
19	Spring	CBH2384	64	Damper	CNV6340
20	Spring	CBH2527	65	Guide	CNV6925
21	Spring	CBH2386	66	Chassis Unit	CXB7980
22	Spring	CBH2537	67	Arm Unit	CXB7983
23	Spring	CBH2390	68	Arm Unit	CXB7984
24	Spring	CBH2391	69	Arm Unit	CXB7985
25	Spring	CBH2523	70	Motor Unit(M2)	CXB5903
26	Spring	CBH2426	71	Screw Unit	CXB5904
27	Spring	CBH2444	72	Gear Unit	CXB8076
28	Spring	CBL1561	73	Bracket Unit	CXB7982
29	Spring	CBL1553	74	Motor Unit(M1)	CXB6007
30	Shaft	CLA3845	75	Arm Unit	CXB8504
31	Roller	CLA3910	76	Screw(M2x5)	EBA1028
32	Frame	CNC9654	77	Screw	JFZ20P020FMC
33	Lever	CNC9664	78	Screw	JGZ17P020FZK
34	Lever	CNC8949	79	Washer	YE15FUC
35	Arm	CNC9661	80	Washer	YE20FUC
36	Arm	CNC9016	81	Pickup Unit(Service)(P9)	CXX1480
37	Arm	CNC9017	82	Screw	IMS26P030FMC
38	Bracket	CNC9123	83	Guide	CNV6922
39	Frame	CNC9656	84	Roller	CNV6887
40	Belt	CNT1086	85	Spring	CBH2509
41	Gear	CNV6886	86	Spring	CBH2512
42	Gear	CNV6316	87	Spring	CBH2536
43	Gear	CNV6317	88	Collar	CNV6906
44	Gear	CNV6318			
45	Gear	CNV6319			

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
A Unit Number : CWM8319		L 617 Ferri-Inductor	LAU101K
Unit Name : Tuner Amp Unit		L 618 Ferri-Inductor	LAU2R2K
		L 750 Ferri-Inductor	LAU2R2K
		X 610 Crystal Resonator 4.194304MHz	CSS1023
		S 750 Switch(DSENS)	CSN1039
		FM/AM Tuner Unit	CWE1563
		AR 410 Surge Protector	DSP-201M-S00B
MISCELLANEOUS		RESISTORS	
IC 301 IC	PML003AM	R 310	RS1/16S101J
IC 361 IC	TDA7386	R 311	RS1/16S101J
IC 603 IC	S-80834ANY	R 314	RS1/16S101J
IC 610 IC	PE5262A	R 315	RS1/16S101J
IC 901 IC	TPD1018F	R 351	RD1/4PU821J
Q 351 Transistor	IMH3A	R 352	RS1/16S821J
Q 359 Transistor	DTA124EK	R 353	RS1/16S223J
Q 361 Transistor	DTC124EK	R 354	RS1/16S223J
Q 410 Transistor	2SC2412K	R 355	RS1/16S0R0J
Q 510 Transistor	2SD2396	R 361	RS1/16S103J
Q 511 Transistor	RN46A1	R 362	RS1/16S103J
Q 750 Transistor	2SA1037K	R 363	RS1/16S331J
Q 751 Transistor	2SA1036K	R 364	RD1/4PU153J
Q 752 Transistor	DTC114EK	R 410	RS1/16S222J
Q 753 Transistor	DTC114EK	R 411	RS1/16S222J
Q 909 Transistor	RN46A1	R 413	RS1/16S473J
Q 910 Transistor	2SD2396	R 414	RS1/16S473J
Q 911 Transistor	2SB1243	R 415	RS1/16S393J
Q 912 Transistor	DTC114EK	R 417	RS1/16S681J
Q 913 Transistor	2SD1859	R 418	RS1/16S681J
Q 920 Transistor	IMX1	R 419	RS1/16S681J
Q 921 Transistor	DTA124EK	R 420	RS1/16S103J
D 510 Diode	HZS9L(B1)	R 421	RS1/16S681J
D 750 Diode	1SS270	R 422	RD1/4PU473J
D 751 Diode	1SS270	R 423	RD1/4PU472J
D 752 Diode	1SS270	R 424	RD1/4PU473J
D 753 Diode	1SS270	R 429	RS1/16S681J
D 754 Diode	1SS270	R 430	RS1/16S681J
D 755 Diode	1SS270	R 431	RS1/16S473J
D 756 Diode	1SS270	R 432	RS1/16S473J
D 757 Diode Network	DA204U	R 437	RS1/16S0R0J
D 758 Diode	1SS270	R 438	RS1/16S0R0J
D 759 Diode	MA152WA	R 445	RS1/16S272J
D 767 Diode	1SS270	R 446	RS1/16S272J
D 768 Diode	1SS270	R 447	RS1/16S162J
D 910 Diode	HZS9L(B3)	R 448	RS1/16S162J
D 911 Diode	HZS6L(B2)	R 490	RS1/16S0R0J
D 912 Diode	S5688G	R 510	RD1/4PU221J
D 913 Diode	HZS7L(C2)	R 511	RD1/4PU221J
D 914 Diode	HZS7L(A1)	R 512	RD1/4PU472J
D 919 Diode	S5688G	R 513	RD1/4PU222J
D 920 Diode	S5688G	R 516	RS1/16S104J
D 921 Diode	DAN202U	R 517	RD1/4PU222J
D 923 Diode	S5688G	R 519	RD1/4PU102J
D 924 Diode	S5688G	R 520	RS1/16S0R0J
L 310 Inductor	LAU1R0K		
L 361 Choke Coil 600μH	CTH1221		
L 410 Ferri-Inductor	LAU4R7K		
L 411 Ferri-Inductor	LAU2R2K		
L 412 Ferri-Inductor	LAU2R2K		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 521	RS1/16S0R0J	R 923	RD1/4PU102J
R 522	RS1/16S0R0J	R 924	RS1/16S472J
R 523	RS1/16S0R0J	R 927	RS1/16S102J
R 525	RS1/16S0R0J	R 928	RS1/16S473J
R 527	RS1/16S0R0J	R 929	RS1/16S0R0J
R 531	RD1/4PU222J	R 930	RS1/16S0R0J
R 532	RD1/4PU222J	R 931	RS1/16S0R0J
R 536	RD1/4PU102J	R 937	RS1/16S152J
R 537	RS1/16S104J	R 939	RS1/16S0R0J
R 538	RS1/16S0R0J		
R 612	RS1/16S0R0J	CAPACITORS	
R 613	RD1/4PU102J	C 307	CEJQ470M10
R 614	RS1/16S821J	C 308	CEJQ100M16
R 615	RS1/16S473J	C 309	CKSRYB104K25
R 616	RS1/16S682J	C 310	CKSRYB105K6R3
		C 311	CKSRYB104K25
R 617	RS1/16S473J		
R 618	RS1/16S223J	C 312	CKSRYB104K25
R 622	RD1/4PU393J	C 313	CKSRYB105K6R3
R 623	RD1/4PU104J	C 314	CEJQ4R7M35
R 625	RS1/16S0R0J	C 315	CEJQ4R7M35
		C 316	CKSRYB153K25
R 712	RD1/4PU104J		
R 750	RD1/4PU104J	C 321	CKSRYB153K25
R 751	RS1/16S103J	C 324	CCSRCH100D50
R 752	RS1/16S153J	C 326	CCSRCH100D50
R 753	RS1/16S153J	C 327	CCSRCH100D50
		C 329	CCSRCH100D50
R 754	RS1/16S222J		
R 756	RS1/16S473J	C 351	CEJQ2R2M50
R 757	RS1/16S104J	C 352	CEJQ2R2M50
R 758	RS1/16S102J	C 361	CCH1368
R 760	RD1/4PU222J	C 362	CKSRYB104K25
		C 363	CKSQYB474K16
R 761	RD1/4PU472J		
R 762	RD1/4PU222J	C 364	CKSQYB474K16
R 763	RD1/4PU222J	C 365	CKSQYB474K16
R 765	RS1/16S1R0J	C 366	CKSQYB474K16
R 766	RD1/4PU102J	C 367	CKSQYB474K16
		C 368	CKSQYB474K16
R 767	RS1/16S103J		
R 768	RD1/4PU102J	C 369	CKSQYB474K16
R 769	RS1/16S102J	C 370	CKSQYB474K16
R 771	RS1/16S104J	C 371	CEJQ330M10
R 772	RD1/4PU222J	C 372	CEJQ2R2M50
		C 373	CKSQYB225K10
R 773	RD1/4PU222J		
R 774	RS1/16S0R0J	C 374	CKSQYB225K10
R 775	RS1/16S1R0J	C 375	CEJQ100M16
R 777	RS1/16S152J	C 410	CKSQYB103K25
R 778	RS1/16S152J	C 412	CKSRYB223K50
		C 413	CKSRYB102K50
R 779	RD1/4PU103J		
R 781	RS1/16S104J	C 414	CEJQ220M10
R 783	RD1/4PU391J	C 415	CKSRYB223K50
R 784	RD1/4PU222J	C 417	CKSRYB472K50
R 786	RS1/16S102J	C 418	CEJQ101M6R3
		C 419	CKSRYB473K50
R 787	RD1/4PU222J		
R 791	RS1/16S0R0J	C 424	CKSRYB183K25
R 910	RS1/16S1R0J	C 425	CKSRYB183K25
R 911	RD1/4PU220J	C 510	CKSRYB473K50
R 912	RD1/4PU132J	C 511	CKSRYB102K50
		C 512	CEJQ101M10
R 913	RD1/4PU122J		
R 914	RS1/16S103J	C 515	CKSRYB102K50
R 915	RS1/16S222J	C 516	CKSRYB102K50
R 916	RD1/4PU153J	C 614	CKSRYB473K50
R 917	RS1/16S104J	C 615	CEJQ2R2M50
		C 616	CKSRYB104K25
R 918	RS1/16S104J		
R 919	RS1/16S104J	C 617	CCSRCH101J50
R 920	RS1/16S473J	C 618	CEJQ4R7M35
R 921	RS1/16S103J	C 619	CKSRYB473K50
R 922	RS1/16S473J	C 620	CCSRCH150J50
		C 621	CCSRCH150J50

====Circuit Symbol and No.====Part Name	Part No.
C 750	CKSRYB103K50
C 751	CKSRYB104K25
C 910 330μF/16V	CCH1326
C 911	CKSRYB103K50
C 912	CEJQ101M16
C 913	CEJQ101M10
C 914	CKSRYB473K50
C 915	CKSRYB103K50
C 916 470μF/16V	CCH1331
C 918	CKSQYB473K50
C 919	CKSRYB103K50

C Unit Number : CWM8370(DEH-240F/XN/UC,
DEH-2400F/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1900	IC	PD6340A
D 1901	Diode	MA152WK
D 1902	Diode	MA152WA
D 1917	LED	NSSW440-9159
D 1918	LED	NSSW440-9159
D 1919	LED	SML-310PT
D 1920	LED	SML-310PT
X 1900	Ceramic Resonator 4.97MHz	CSS1573
S 1900	Switch	CSG1107
S 1901	Switch	CSG1107
S 1902	Switch	CSG1107
S 1903	Switch	CSG1107
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Push Switch	CSG1111
S 1908	Switch	CSG1107
S 1909	Switch	CSG1107
S 1910	Switch	CSG1107
S 1911	Switch	CSG1107
S 1912	Switch	CSG1107
S 1913	Switch	CSG1107
S 1914	Switch	CSG1107
S 1915	Switch	CSG1107
S 1916	Switch	CSG1107
S 1917	Push Switch	CSG1111
S 1922	Switch(VOLUME) LCD	CSD1077 CAW1724

RESISTORS

R 1900	RS1/16S473J
R 1901	RS1/16S222J
R 1902	RS1/16S222J
R 1903	RS1/16S470J
R 1904	RS1/16S470J
R 1910	RS1/16S151J
R 1911	RS1/16S181J
R 1912	RS1/16S151J
R 1913	RS1/16S181J
R 1914	RS1/16S181J
R 1915	RS1/16S181J
R 1917	RS1/16S121J
R 1919	RS1/16S121J
R 1920	RS1/16S121J
R 1927	RS1/16S472J
R 1935	RS1/16S104J
R 1936	RS1/16S151J
R 1939	RS1/16S151J
R 1941	RS1/16S121J
R 1942	RS1/16S151J

====Circuit Symbol and No.====Part Name	Part No.
R 1943	RS1/16S151J
R 1950	RS1/16S104J
R 1954	RS1/16S151J
R 1955	RS1/16S181J
R 1956	RS1/16S181J
R 1957	RS1/16S181J
R 1958	RS1/16S151J
R 1959	RS1/16S181J
R 1960	RS1/16S151J
R 1961	RS1/16S181J
R 1962	RS1/16S181J
R 1963	RS1/16S121J
R 1964	RS1/16S121J
R 1970	RS1/16S181J
R 1971	RS1/16S151J
R 1972	RS1/16S181J

CAPACITORS

C 1902	CKSRYB104K25
C 1923	CKSQYF104Z50
C 1930	CKSQYF104Z50

C Unit Number : CWM8322(DEH-24F/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1900	IC	PD6340A
D 1901	Diode	MA152WK
D 1902	Diode	MA152WA
D 1917	LED	NSSW440-9159
D 1918	LED	NSSW440-9159
D 1919	LED	SML-310DT
D 1920	LED	SML-310DT
X 1900	Ceramic Resonator 4.97MHz	CSS1573
S 1900	Push Switch	CSG1133
S 1901	Push Switch	CSG1117
S 1902	Push Switch	CSG1117
S 1903	Push Switch	CSG1117
S 1904	Push Switch	CSG1117
S 1905	Push Switch	CSG1117
S 1906	Push Switch	CSG1117
S 1907	Push Switch	CSG1111
S 1908	Push Switch	CSG1117
S 1909	Push Switch	CSG1117
S 1910	Push Switch	CSG1117
S 1911	Push Switch	CSG1117
S 1912	Push Switch	CSG1117
S 1913	Push Switch	CSG1117
S 1914	Push Switch	CSG1117
S 1915	Push Switch	CSG1117
S 1916	Push Switch	CSG1117
S 1917	Push Switch	CSG1111
S 1922	Switch(VOLUME) LCD	CSD1077 CAW1719

RESISTORS

R 1900	RS1/16S473J
R 1901	RS1/16S222J
R 1902	RS1/16S222J
R 1903	RS1/16S470J
R 1904	RS1/16S470J
R 1910	RS1/16S151J
R 1911	RS1/16S181J
R 1912	RS1/16S151J
R 1913	RS1/16S181J
R 1914	RS1/16S181J

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
R	1915		RS1/16S181J	R	203		RS1/16S823J
R	1917		RS1/16S121J	R	204		RS1/16S823J
R	1919		RS1/16S121J	R	206		RS1/16S823J
R	1920		RS1/16S121J	R	208		RS1/16S124J
R	1927		RS1/16S472J	R	209		RS1/16S183J
R	1935		RS1/16S104J	R	210		RS1/16S153J
R	1936		RS1/16S151J	R	211		RS1/16S103J
R	1939		RS1/16S151J	R	212		RS1/16S103J
R	1941		RS1/16S121J	R	213		RS1/16S124J
R	1942		RS1/16S151J	R	215		RS1/16S0R0J
R	1943		RS1/16S151J	R	216		RS1/16S471J
R	1950		RS1/16S104J	R	301		RS1/16S333J
R	1954		RS1/16S151J	R	302		RS1/16S332J
R	1955		RS1/16S181J	R	303		RS1/16S332J
R	1956		RS1/16S181J	R	304		RS1/16S514J
R	1957		RS1/16S181J	R	306		RS1/16S102J
R	1958		RS1/16S151J	R	307		RS1/16S102J
R	1959		RS1/16S181J	R	312		RS1/16S103J
R	1960		RS1/16S151J	R	313		RS1/16S473J
R	1961		RS1/16S181J	R	315		RS1/16S334J
R	1962		RS1/16S181J	R	321		RS1/16S331J
R	1963		RS1/16S121J	R	322		RS1/16S0R0J
R	1964		RS1/16S121J	R	323		RS1/16S332J
R	1970		RS1/16S181J	R	401		RS1/16S684J
R	1971		RS1/16S151J	R	402		RS1/16S103J
R	1972		RS1/16S181J	R	403		RS1/16S103J
CAPACITORS				R	404		RS1/16S183J
C	1902		CKSRYB104K25	R	405		RS1/16S123J
C	1923		CKSQYF104Z50	R	407		RS1/16S622J
C	1930		CKSQYF104Z50	R	408		RS1/16S622J
B Unit Number : CWM7375 Unit Name : Panel Unit				R	409		RS1/16S113J
D	1950	LED	CL220PGC	R	410		RS1/16S752J
S	1950	Push Switch(EJECT)	CSG1112	R	701		RS1/16S102J
R	1952		RS1/16S101J	R	702		RS1/16S221J
R	1953		RS1/16S101J	R	703		RS1/16S221J
				R	704		RS1/16S221J
				R	705		RS1/16S221J
				R	706		RS1/16S221J
				R	707		RS1/16S221J
				R	708		RS1/16S102J
				R	709		RS1/16S102J
				R	710		RS1/16S102J
MISCELLANEOUS				R	901		RS1/16S104J
IC	101	IC	TA2153FN	R	902		RS1/16S473J
IC	201	IC	TC9495F2	R	903		RS1/16S273J
IC	401	IC	BA5996FM	CAPACITORS			
IC	701	IC	BA05SFP	C	101		CEV470M6R3
Q	101	Transistor	2SD1664	C	102		CKSRYB102K50
Q	102	Transistor	UMD2N	C	103		CKSRYB104K16
L	201	Inductor	CTF1546	C	104		CKSRYB224K16
L	202	Inductor	CTF1546	C	105		CEV470M6R3
X	301	Ceramic Resonator 16.934MHz	CSS1525	C	106		CKSRYB104K16
S	901	Spring Switch(HOME)	CSN1051	C	107		CKSRYB105K6R3
S	902	Spring Switch(CLAMP)	CSN1052	C	201		CKSRYB104K16
S	903	Spring Switch(DSCSNS)	CSN1051	C	202		CCSRCH560J50
S	904	Spring Switch(12EJ)	CSN1052	C	204		CKSRYB224K16
S	905	Spring Switch(8EJ)	CSN1051	C	205		CKSRYB224K16
RESISTORS				C	206		CKSRYB273K25
R	101		RS1/16S222J	C	207		CKSRYB273K25
R	102		RS1/8S120J	C	208		CKSRYB104K16
R	103		RS1/8S100J	C	209		CKSRYB104K16
R	201		RS1/16S513J	C	210		CCSRCK2R

====Circuit Symbol and No.==Part Name		Part No.
C	304	CKSRYB103K50
C	305	CKSRYB104K16
C	306	CKSRYB104K16
C	307	CKSRYB333K16
C	308	CKSRYB104K16
C	309	CKSRYB473K16
C	310	CKSRYB473K16
C	311	CKSRYB104K16
C	312	CKSRYB104K16
C	315	CEV220M6R3
C	317	CKSRYB104K16
C	318	CKSRYB104K16
C	319	CKSRYB104K16
C	320	CCSRCH470J50
C	325	CKSRYB471K50
C	328	CKSRYB472K50
C	329	CKSRYB104K16
C	330	CKSRYB104K16
C	331	CKSRYB104K16
C	401	CKSRYB221K50
C	402	CKSRYB221K50
C	403	CKSRYB153K25
C	404	CKSRYB103K50
C	405	CEV101M10
C	702	CKSRYB104K16
C	703	CKSRYB104K16
C	801	10μF/10V CCH1349
C	802	CEV101M10
C	803	CKSRYB224K16

Miscellaneous Parts List

M	1	Pickup Unit(Service)(P9)	CXX1480
M	2	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903