



# EXPLODED VIEW

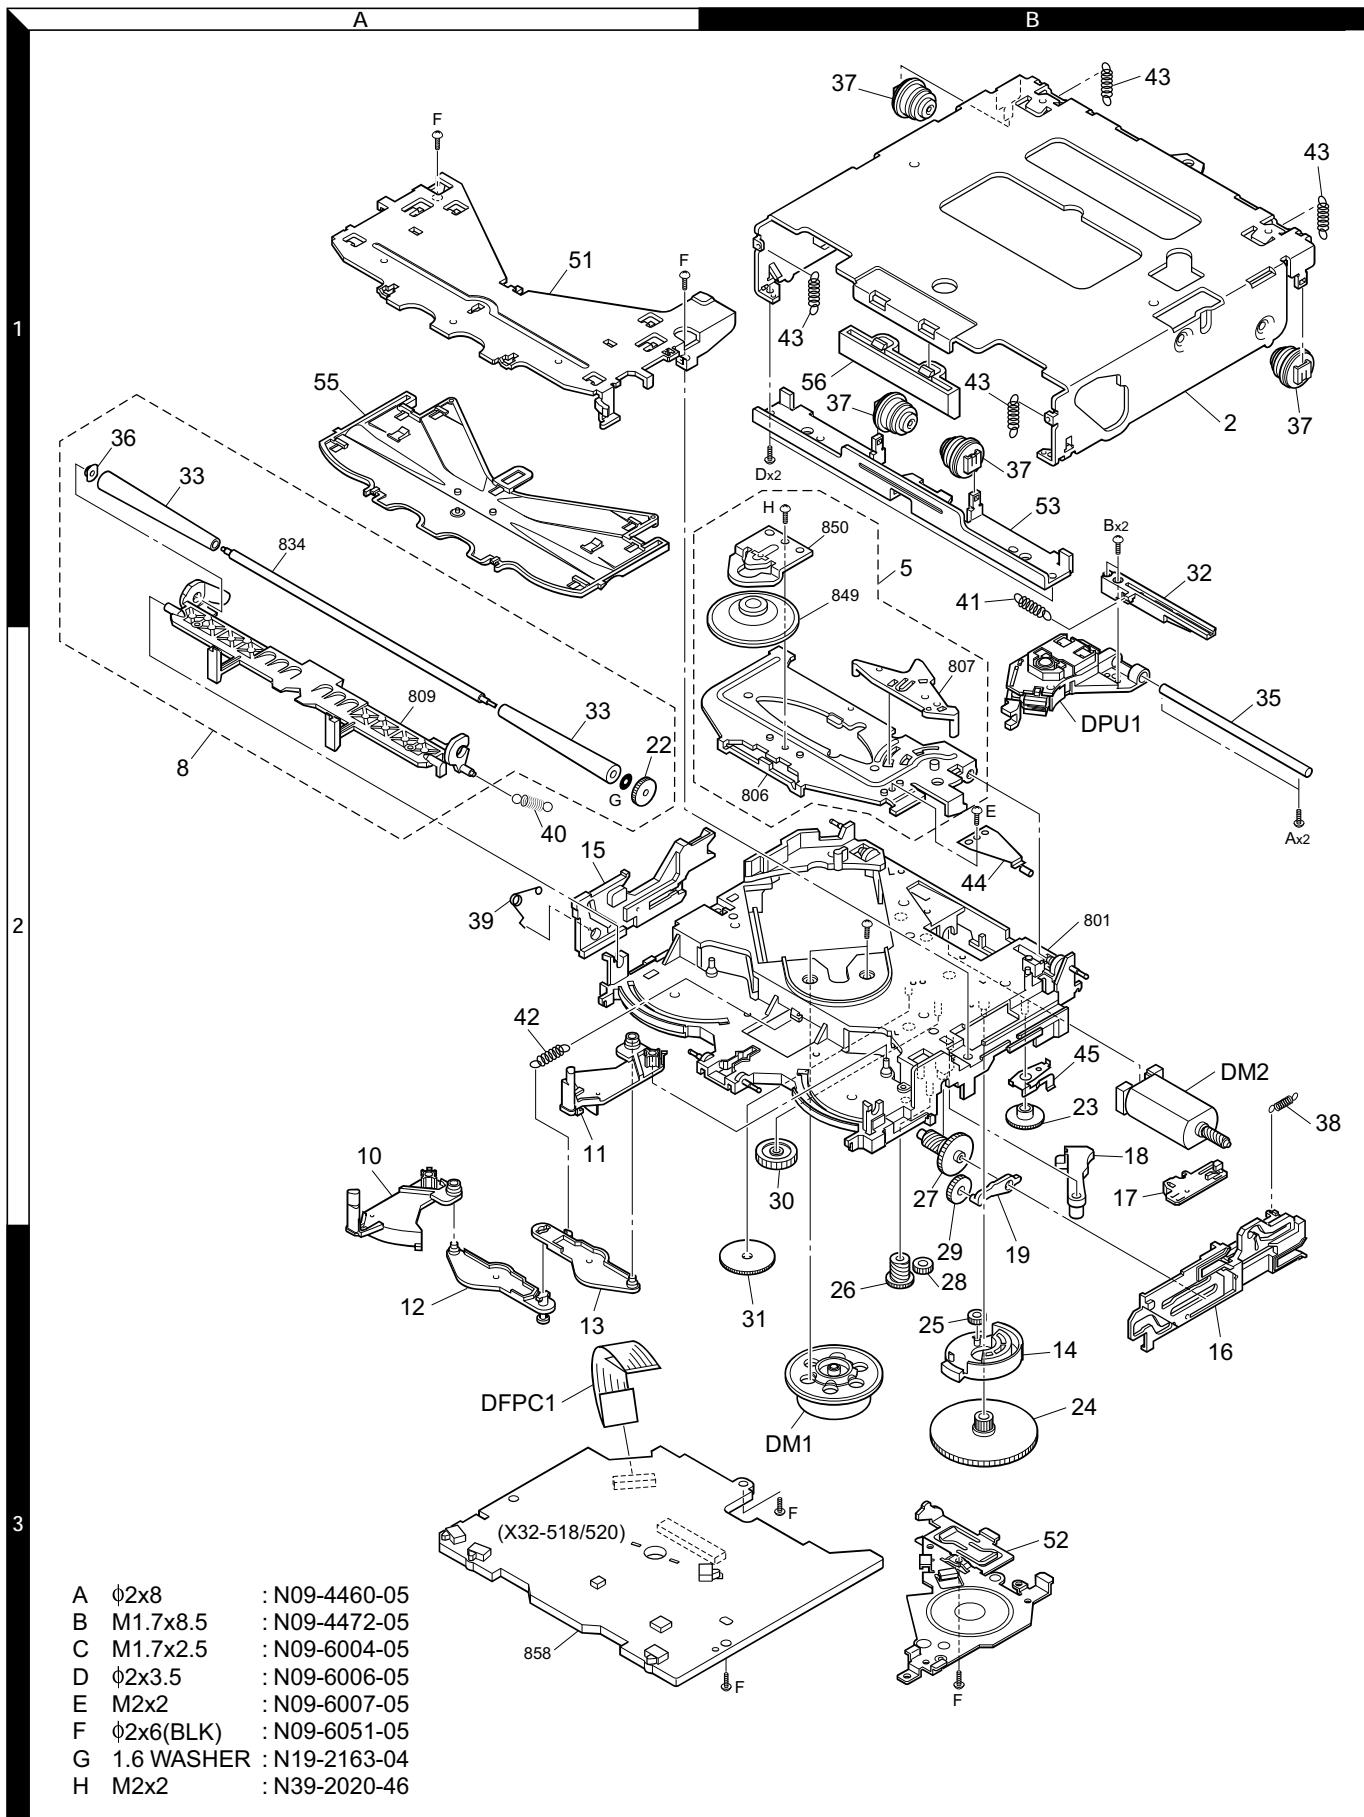

**Parts with the exploded numbers larger than 700 are not supplied.**

## EXPLODED VIEW

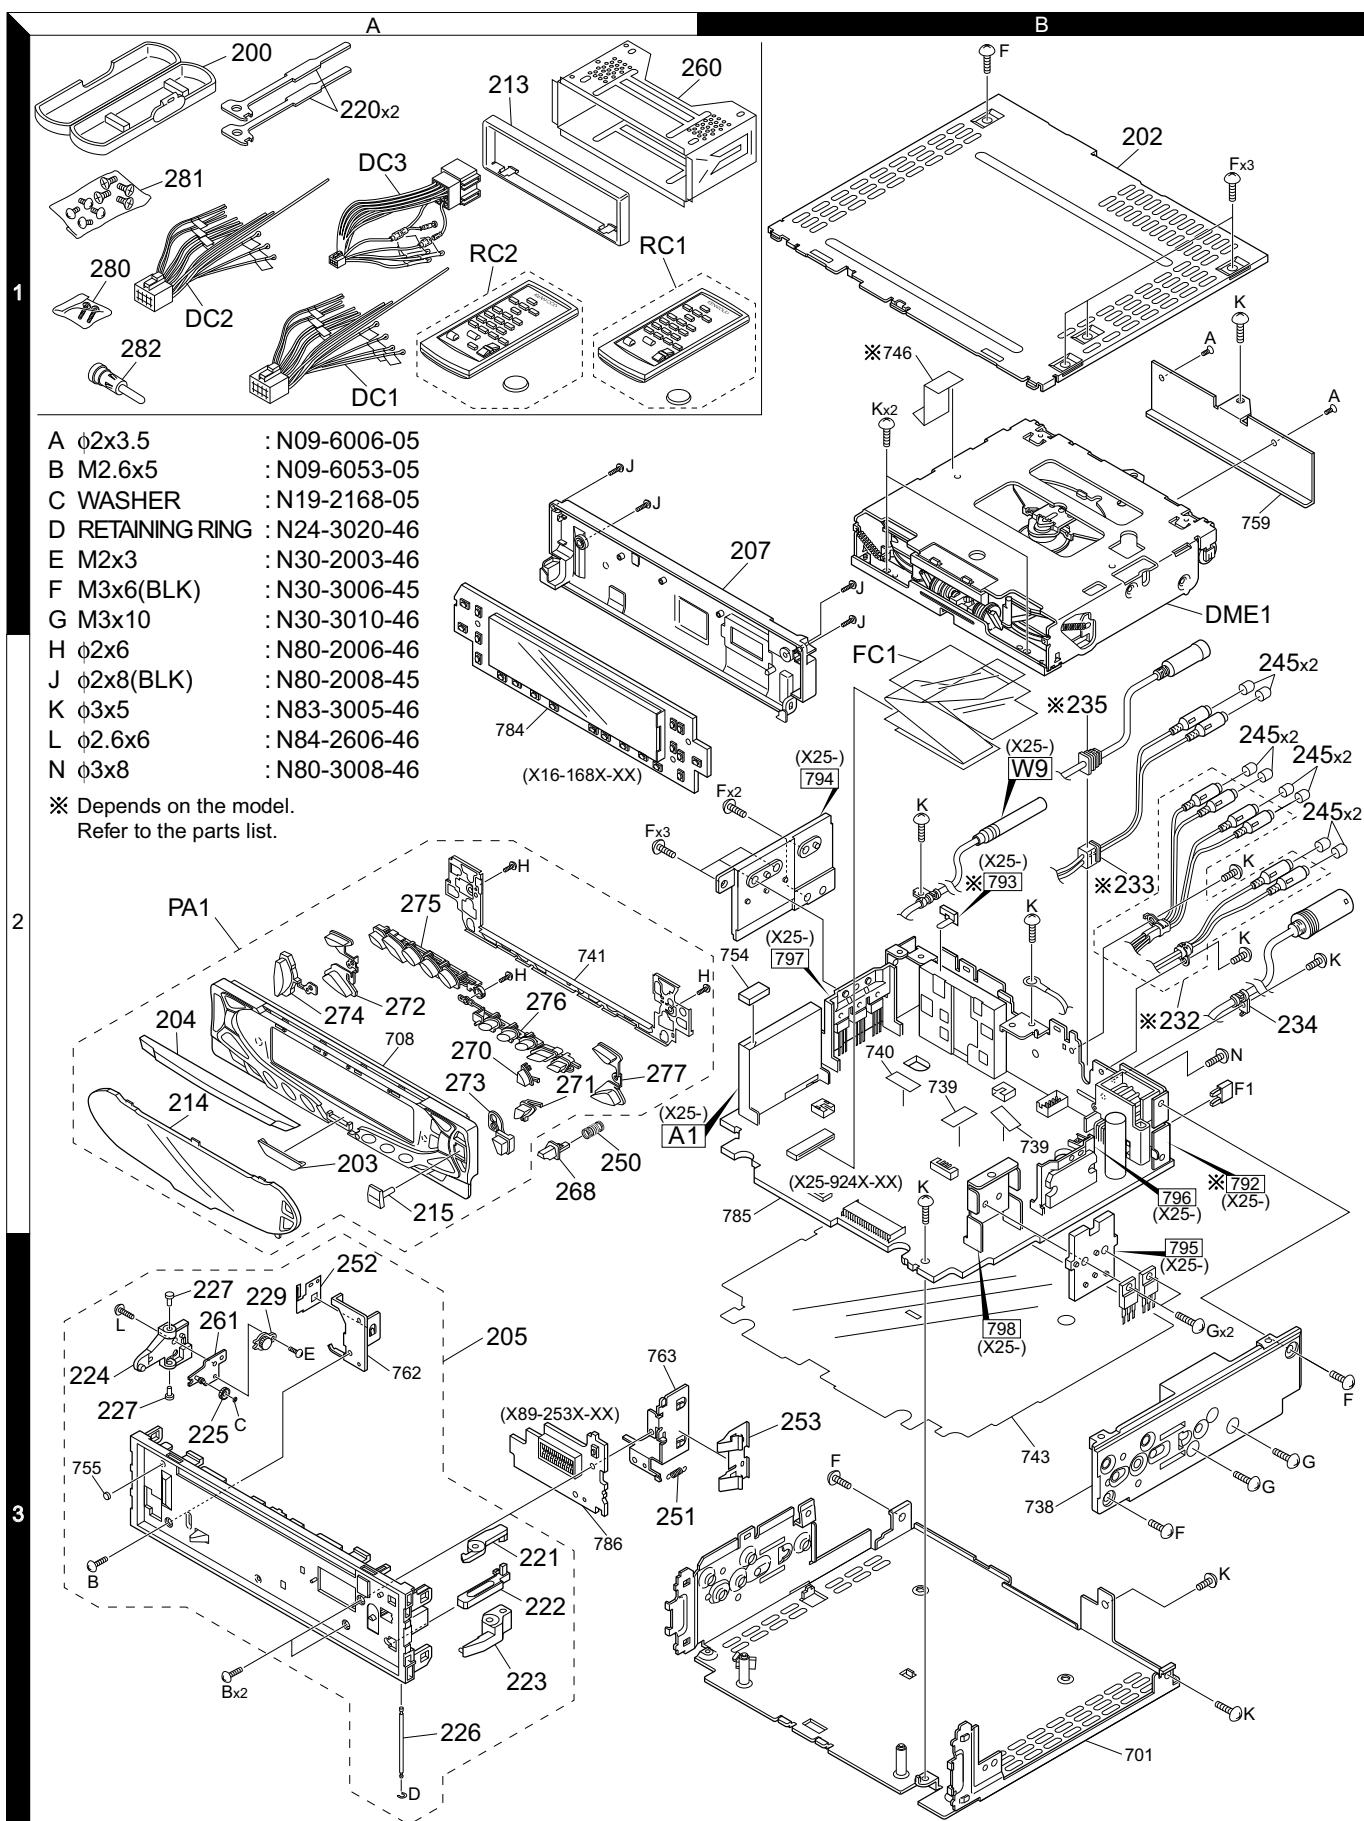

Parts with the exploded numbers larger than 700 are not supplied.

## **PARTS LIST**

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
<b>KDC-719/X559/Z737,Z638</b>						△ F1 2B * F52-0006-05 FUSE (MINI BLADE TYPE) (10A) △ F1 2B * F52-0011-05 FUSE (MINI BLADE TYPE) (10A)					
200	1A	*	A02-2712-13	PLASTIC CABINET ASSY		250	2A	*	G01-3135-04	COMPRESSION SPRING	
202	1B	*	A52-0811-12	TOP PLATE		251	3A	*	G01-3136-14	EXTENSION SPRING	
203	2A	*	A21-4175-04	DRESSING PANEL	K2E1M2	252	3A	*	G02-1428-04	FLAT SPRING	
204	2A	*	A21-4209-02	DRESSING PANEL	K4	253	3B	*	G02-1429-04	FLAT SPRING	
204	2A	*	A21-4210-02	DRESSING PANEL		-		*	H10-4802-12	POLYSTYRENE FOAMED FIXTURE	
205	3A	*	A22-2946-12	SUB PANEL ASSY		-		*	H25-0329-04	PROTECTION BAG (280X450X0.03)	K2K4M2
207	1B	*	A46-1756-11	REAR COVER		-		*	H25-0337-04	PROTECTION BAG (180X300X0.03)	
PA1	2A	*	A64-2646-11	PANEL ASSY	K2	-		*	H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
PA1	2A	*	A64-2647-11	PANEL ASSY	E1	-		*	H54-2320-03	ITEM CARTON CASE	K2
PA1	2A	*	A64-2648-11	PANEL ASSY	M2	-		*	H54-2321-03	ITEM CARTON CASE	E1
PA1	2A	*	A64-2650-11	PANEL ASSY	K4	-		*	H54-2322-03	ITEM CARTON CASE	M2
RC1	1A	*	A70-2025-05	REMOTE CONTROLLER ASSY (RC-410)	K2K4	-		*	H54-2324-03	ITEM CARTON CASE	K4
RC2	1A	*	A70-2026-05	REMOTE CONTROLLER ASSY (RC-420)	E1M2	260	1A	*	J21-9823-03	MOUNTING HARDWARE ASSY	
213	1A	*	B07-3050-02	ESCUTCHEON	K2E1M2	261	3A	*	J21-9831-04	MOUNTING HARDWARE ASSY	
213	1A	*	B07-3057-02	ESCUTCHEON	K4	268	2A	*	K24-3837-04	KNOB (OPEN)	
214	2A	*	B10-4209-01	FRONT GLASS	K2	270	2A	*	K24-3850-04	KNOB (SKIP UP)	K2E1M2
214	2A	*	B10-4210-01	FRONT GLASS	E1	270	2A	*	K24-3852-04	KNOB (SKIP UP)	K4
214	2A	*	B10-4211-01	FRONT GLASS	M2	271	2A	*	K24-3851-04	KNOB (SKIP DOWN)	K2E1M2
214	2A	*	B10-4213-01	FRONT GLASS	K4	271	2A	*	K24-3853-04	KNOB (SKIP DOWN)	K4
215	2A	*	B10-4217-04	FRONT GLASS		272	2A	*	K25-1417-13	KNOB (EQ,SRC)	
-	B46-0100-50		WARRANTY CARD			273	2A	*	K25-1418-03	KNOB (PAUSE)	
-	B46-0606-04		ID CARD	K2K4		274	2A	*	K25-1423-03	KNOB (VOL)	
-	B46-0612-14		ID CARD	E1M2		275	2A	*	K25-1428-03	KNOB (PRE1-3,ATT,Q)	K4
-	B46-0645-03		USER CARD	K2K4		275	2A	*	K25-1456-03	KNOB (PRE1-3)	K2E1M2
-	B46-0648-03		USER CARD	K4		276	2A	*	K25-1420-03	KNOB (PRE4-6,TI,DISP)	E1
-	B58-1365-04		CAUTION CARD			276	2A	*	K25-1429-03	KNOB (PRE4-6,AUTO,DISP)	K4
-	*	B64-2176-00	INST. MANUAL (ENGLISH)	K2K4		276	2A	*	K25-1457-03	KNOB (PRE4-6)	K2M2
-	*	B64-2177-00	INST. MANUAL (FRE,SPA)	K2K4		277	2A	*	K25-1458-13	KNOB (FM,AM)	K4
-	*	B64-2178-00	INST. MANUAL (ENG,T-CHI)	M2		277	2A	*	K25-1459-13	KNOB (FM,AM)	K2E1M2
-	*	B64-2180-00	INST. MANUAL (ENGLISH)	E1		280	1A		N99-1656-05	SCREW SET	
-	*	B64-2181-00	INST. MANUAL (FRE,GER)	E1		281	1A		N99-1723-05	SCREW SET	K2K4M2
-	*	B64-2182-00	INST. MANUAL (DUT,ITA)	E1		A	1B		N09-6006-05	TAPITITE SCREW (PAN ST 2X3.5T)	
-	*	B64-2183-00	INST. MANUAL (SPA,POR)	E1		B	3A	*	N09-6053-05	MACHINE SCREW (M2.6X5)	
220	1A	*	D10-4674-04	LEVER		C	3A	*	N19-2168-05	FLAT WASHER (1.4X3.0X0.25)	
221	3A	*	D10-4675-04	LEVER		D	3A		N24-3020-46	E TYPE RETAINING RING (2X5X1.7)	
222	3A	*	D10-4676-04	LEVER		E	3A		N30-2003-46	PAN HEAD MACHINE SCREW	
223	3A	*	D10-4677-04	LEVER		F	1B		N30-3006-45	PAN HEAD MACHINE SCREW	
224	3A	*	D10-4678-03	LEVER		G	3B		N30-3010-46	PAN HEAD MACHINE SCREW	
225	3A	*	D13-2242-04	GEAR		H	2A		N80-2006-46	PAN HEAD TAPITITE SCREW	
226	3A	*	D21-2406-04	SHAFT		J	1A		N80-2008-45	PAN HEAD TAPITITE SCREW	
227	3A	*	D21-2407-04	SHAFT		K	1B		N83-3005-46	PAN HEAD TAPITITE SCREW	
229	3A	*	D39-0237-05	DAMPER		L	3A		N84-2606-46	PAN HEAD TAPITITE SCREW	
232	2B	*	E30-6064-05	CORD WITH PINPLUG (6P)	K4	282	1A		T90-0523-05	ANTENNA ADAPTOR	E1
232	2B	*	E30-6065-05	CORD WITH PINPLUG (4P)	K2E1M2	282	1A		T90-0534-05	ANTENNA ADAPTOR	E1
233	2B	*	E30-6067-15	CORD WITH PINPLUG (AUX 2P)	K4M2	282	1A	*	T90-0552-05	ANTENNA ADAPTOR	E1
234	2B	*	E30-6068-05	CORD WITH DIN CONNECTOR (13P)		DME1	1B	*	X92-4450-01	MECHANISM ASSY (DXM-6111W)	
235	2B	*	E30-6069-05	CORD WITH DIN CONNECTOR (4P)	E1						
△ DC1	1A	*	E30-6062-05	DC CORD	K4M2						
△ DC2	1A	*	E30-6106-05	DC CORD	K2						
△ DC3	1A	*	E30-6063-05	DC CORD	E1						
FC1	2B	*	E39-0447-05	FLAT CABLE (24P)							
245	2B		F29-0049-05	INSULATING COVER							
<b>SWITCH UNIT (X16-168x-xx)</b>											
C1				CK73FB1A105K	CHIP C	1.0UF	K				
C2				CK73GB1H103K	CHIP C	0.010UF	K				
C3				CK73GB1C104K	CHIP C	0.10UF	K				

# PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

## SWITCH UNIT (X16-168x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C4			CK73FB1A225K	CHIP C 2.2UF K		S2,3			S70-0856-05	TACT SWITCH	E1M2
C5			CK73GB1H103K	CHIP C 0.010UF K		S2,3			S70-0873-05	TACT SWITCH	K2K4
C6			CK73FB1A225K	CHIP C 2.2UF K		S4			S70-0857-05	TACT SWITCH	
C7			CC73GCH1H101J	CHIP C 100PF J		S5-10			S70-0856-05	TACT SWITCH	E1M2
C8			CK73EB0J106K	CHIP C 10UF K		S5-10			S70-0873-05	TACT SWITCH	K2K4
C9			CK73FB1A225K	CHIP C 2.2UF K		S11			S70-0857-05	TACT SWITCH	
C10			CK73FB1A105K	CHIP C 1.0UF K		S12,13			S70-0856-05	TACT SWITCH	E1M2
C12			CK73FB1A105K	CHIP C 1.0UF K		S12,13			S70-0873-05	TACT SWITCH	K2K4
C13			CK73GB1C104K	CHIP C 0.10UF K		S14			S70-0857-05	TACT SWITCH	
C16-19			CK73GB1H103K	CHIP C 0.010UF K		S15-19			S70-0856-05	TACT SWITCH	E1M2
C20			CK73GB1H104K	CHIP C 0.10UF K		S15-19			S70-0873-05	TACT SWITCH	
C21			CK73GB1H103K	CHIP C 0.010UF K		S20			S70-0857-05	TACT SWITCH	K2K4
J1			E59-0829-05	RECTANGULAR PLUG (16P)		D1,2			DA204U	DIODE	
L1			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)		D3-5			MA8056-M	ZENER DIODE	
L2	*		L40-1005-68	SMALL FIXED INDUCTOR (10UH)		D9			MA8056-M	ZENER DIODE	
L4			L92-0332-05	CHIP FERRITE		D10,11			FTZ6.8E	ZENER DIODE	
L9			L92-0332-05	CHIP FERRITE		D12			MA8062-L	ZENER DIODE	
L13			L92-0332-05	CHIP FERRITE		D13,14			MA8056-M	ZENER DIODE	
X1			L78-0821-05	RESONATOR (20.0MHZ)		D15,16			DA204U	DIODE	
CP1			R90-1016-05	MULTI-COMP 470 X4		ED1			CN2034M	FLUORESCENT INDICATOR TUBE	
CP2			R90-0724-05	MULTI-COMP 1K X4		IC1			TAR5S33	ANALOGUE IC	
CP3			R90-0720-05	MULTI-COMP 100K X4		IC2			TC74HC4050AFT	MOS-IC	
CP4			R90-1022-05	MULTI-COMP 470 X2		IC3			RS-171	ANALOGUE IC	
CP5			R90-0724-05	MULTI-COMP 1K X4		IC4			BA3830F	ANALOGUE IC	
CP6,7			R90-1019-05	MULTI-COMP 100 X2		IC5		*	UPD703032GFA04	MI-COM IC	
CP8			R90-1014-05	MULTI-COMP 100 X4		Q1			DTA144EUA	DIGITAL TRANSISTOR	
CP9			R90-0737-05	MULTI-COMP 100K X2		Q1			UN5113	DIGITAL TRANSISTOR	
R1			RK73GB2A103J	CHIP R 10K J 1/10W		Q2			DTC114YUA	DIGITAL TRANSISTOR	
R7	*		RK73GB2A220J	CHIP R 22 J 1/10W		Q3			UN5214	DIGITAL TRANSISTOR	
R8			RK73GB2A563J	CHIP R 56K J 1/10W		Q4			DTA114EUA	DIGITAL TRANSISTOR	
R9			RK73GB2A222J	CHIP R 2.2K J 1/10W		Q4			UN5111	DIGITAL TRANSISTOR	
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q6			DTC114YK	DIGITAL TRANSISTOR	
R11			RK73GB2A101J	CHIP R 100 J 1/10W		Q6			UN2214	DIGITAL TRANSISTOR	
R12			RK73GB2A104J	CHIP R 100K J 1/10W		Q7			2SC4081	TRANSISTOR	
R13,14	*		RK73GB2A274J	CHIP R 270K J 1/10W		Q8			2SC4081	TRANSISTOR	E1M2
R15,16			RK73GB2A153J	CHIP R 15K J 1/10W		Q9			DTA114EUA	DIGITAL TRANSISTOR	
R17			RK73GB2A100J	CHIP R 10 J 1/10W		Q9			UN5111	DIGITAL TRANSISTOR	K2K4
R21			RK73GB2A104J	CHIP R 100K J 1/10W		Q9			DTA114EUA	DIGITAL TRANSISTOR	K2K4
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q9,10			UN5111	DIGITAL TRANSISTOR	E1M2
R27			RK73GB2A153J	CHIP R 15K J 1/10W		Q9,10			DTA114EUA	DIGITAL TRANSISTOR	E1M2
R32			RK73GB2A102J	CHIP R 1.0K J 1/10W		D101			B30-1566-05	LED (1608,RED)	
R33			RK73GB2A223J	CHIP R 22K J 1/10W		C1			C90-2822-05	ELECTRO	
R34-36			RK73GB2A104J	CHIP R 100K J 1/10W		C1			C90-5377-05	ELECTRO	
R39			RK73GB2A101J	CHIP R 100 J 1/10W		C2			CK73GB1H103K	CHIP C	
R42			RK73GB2A101J	CHIP R 100 J 1/10W		C3			CK73GB1C104K	CHIP C	
R43			RK73GB2A101J	CHIP R 100 J 1/10W		C4		*	C90-5442-05	ELECTRO	
R48			RK73GB2A392J	CHIP R 3.9K J 1/10W		C5,6			CE04NW1E4R7M	ELECTRO	
R49			RK73GB2A222J	CHIP R 2.2K J 1/10W		C7			CK73FB1C105K	CHIP C	
R50			RK73GB2A392J	CHIP R 3.9K J 1/10W		C8			CE04DW1A221M	ELECTRO	
R51			RK73GB2A222J	CHIP R 2.2K J 1/10W		C9			CK73FB1C224K	CHIP C	
W2			R92-1252-05	CHIP R 0 OHM J 1/16W		C10			CK73GB1H103K	CHIP C	
S1			S70-0863-05	TACT SWITCH							

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### ELECTRIC UNIT (X25-924x-xx)

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
C11			C90-2966-05	ELECTRO	100UF	16WV	
C12			CK73GB1H103K	CHIP C	0.010UF	K	
C13			C90-2966-05	ELECTRO	100UF	16WV	
C14			CK73FB1A225K	CHIP C	2.2UF	K	
C15			C90-2979-05	ELECTRO	100UF	50WV	
C16			CK73GB1C104K	CHIP C	0.10UF	K	
C17			CK73GB1H103K	CHIP C	0.010UF	K	
C19			CK73GB1H103K	CHIP C	0.010UF	K	
C20			CK73GB1H103K	CHIP C	0.010UF	K	E1
C21			CK73GB1E223K	CHIP C	0.022UF	K	
C22			C90-2558-05	ELECTRO	1.0UF	50WV	
C23			CE04NW1E4R7M	ELECTRO	4.7UF	25WV	K4
C24			C90-2966-05	ELECTRO	100UF	16WV	K4
C25-28			CK73EB1C225K	CHIP C	2.2UF	K	K4
C29			CE04NW1C220M	ELECTRO	22UF	16WV	K4
C30			CK73GB1E223K	CHIP C	0.022UF	K	K4
C31			CK73GB1H103K	CHIP C	0.010UF	K	K4
C32,33			CE04NW1E4R7M	ELECTRO	4.7UF	25WV	K4
C34			C90-2556-05	ELECTRO	3.3UF	50WV	
C35			CK73GB1C683K	CHIP C	0.068UF	K	
C36			C90-2562-05	ELECTRO	0.10UF	50WV	
C37			CK73GB1H102K	CHIP C	1000PF	K	
C38,39			CK73GB1H103K	CHIP C	0.010UF	K	
C40,41			CK73GB1H103K	CHIP C	0.010UF	K	K4M2
C42			CC73GCH1H270J	CHIP C	27PF	J	
C43			CC73GCH1H220J	CHIP C	22PF	J	
C44			CE04NW1A220M	ELECTRO	22UF	10WV	K4M2
C45			CE04NW1C100M	ELECTRO	10UF	16WV	K4M2
C46,47			C90-2658-05	NP-ELEC	1.0UF	50WV	K4M2
C48			CK73GB1H103K	CHIP C	0.010UF	K	
C49-53	*		C90-5444-05	ELECTRO	4.7UF	25WV	
C54			CK73GB1H103K	CHIP C	0.010UF	K	
C55			CK73FB1C105K	CHIP C	1.0UF	K	
C56,57			C90-2524-05	NP-ELEC	4.7UF	16WV	K4
C58			CE04NW1C100M	ELECTRO	10UF	16WV	
C59			CE04MW1C100M	ELECTRO	10UF	16WV	
C60			CE04NW1H2R2M	ELECTRO	2.2UF	50WV	K4
C63	*		CE04NW1E4R7MEL	ELECTRO	4.7UF	25WV	
C65,66			C90-2658-05	NP-ELEC	1.0UF	50WV	
C67,68			CE04NW1HR47M	ELECTRO	0.47UF	50WV	
C69			CE04NW0J470M	ELECTRO	47UF	6.3WV	
C70			CK73GB1A474K	CHIP C	0.47UF	K	
C71			CC73GCH1H151J	CHIP C	150PF	J	
C72			CK73GB1E333K	CHIP C	0.033UF	K	
C73			CK73GB1H103K	CHIP C	0.010UF	K	
C74,75			CK73GB1C104K	CHIP C	0.10UF	K	
C76-79			C90-2524-05	NP-ELEC	4.7UF	16WV	K4
C81,82	*		C90-5429-05	NP-ELEC	0.33UF	50WV	K4
C83,84			CK73FB1C334K	CHIP C	0.33UF	K	K4
C85,86			CE04NW1HR33M	ELECTRO	0.33UF	50WV	K4
C87,88			CK73FB1C334K	CHIP C	0.33UF	K	K4
C89-92			CK73GB1C104K	CHIP C	0.10UF	K	K4
C93,94			CE04NW1C100M	ELECTRO	10UF	16WV	K2E1M2
C93,94			CE04NW1C220M	ELECTRO	22UF	16WV	K4
C95,96			CE04NW1C100M	ELECTRO	10UF	16WV	K4

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
C97,98			CK73GB1H222K	CHIP C	2200PF	K	
C99,100			CE04NW1C100M	ELECTRO	10UF	16WV	K2E1M2
C99,100			CE04NW1C220M	ELECTRO	22UF	16WV	K4
C101,102			CE04NW1C100M	ELECTRO	10UF	16WV	K4
C103,104			CK73GB1H222K	CHIP C	2200PF	K	
C105,106			CE04NW1C220M	ELECTRO	22UF	16WV	K4
C107,108			CE04NW1C100M	ELECTRO	10UF	16WV	K4
C109,110			CK73GB1H222K	CHIP C	2200PF	K	K4
C111			CK73GB1H102K	CHIP C	1000PF	K	
C113			CE04NW1C470M	ELECTRO	47UF	16WV	
C114			C90-2551-05	ELECTRO	33UF	10WV	
C115,116			C90-2558-05	ELECTRO	1.0UF	50WV	
C117-120			C90-5297-05	NP-ELEC	0.22UF	50WV	
C129			C90-5308-05	ELECTRO	1.0UF	50WV	
C131			CK73GB1H103K	CHIP C	0.010UF	K	
C132			CC73GCH1H100D	CHIP C	10PF	D	
C133			CK73GB1H103K	CHIP C	0.010UF	K	
C134			CC73GCH1H100D	CHIP C	10PF	D	
C135			CK73GB1H103K	CHIP C	0.010UF	K	
C136			CC73GCH1H100D	CHIP C	10PF	D	
C137			CK73GB1H103K	CHIP C	0.010UF	K	
C139			CK73GB1H103K	CHIP C	0.010UF	K	
C141			CK73GB1H331K	CHIP C	330PF	K	E1
C142,143	*		C90-5437-05	ELECTRO	10UF	16WV	E1
C144			CK73GB1H103K	CHIP C	0.010UF	K	E1
C145,146			CC73GCH1H100D	CHIP C	10PF	D	E1
C201,202			CK73GB1H332K	CHIP C	3300PF	K	K4M2
C203			CK73GB1H104K	CHIP C	0.10UF	K	
C204			CK73GB1H103K	CHIP C	0.010UF	K	
C205			CK73GB1H104K	CHIP C	0.10UF	K	K4M2
C206			CK73GB1C104K	CHIP C	0.10UF	K	K4M2
C305			CK73FB0J475K	CHIP C	4.7UF	K	
C351			CK73GB1H102K	CHIP C	1000PF	K	
C352	*		C90-5443-05	ELECTRO	47UF	16WV	
C353			CK73GB1H103K	CHIP C	0.010UF	K	
C354			CK73FB1C105K	CHIP C	1.0UF	K	
C355			CK73GB1C104K	CHIP C	0.10UF	K	
C479			C90-2547-05	ELECTRO	100UF	6.3WV	
C480			C90-2554-05	ELECTRO	10UF	16WV	
C481			CK73GB1H103K	CHIP C	0.010UF	K	
C484			CK73GB1H103K	CHIP C	0.010UF	K	
C485			C90-2980-05	ELECTRO	220UF	16WV	
C802			CK73FB1H104K	CHIP C	0.10UF	K	K4
C803,804			CK73FB1H104K	CHIP C	0.10UF	K	
C851,852			CK73GB1H103K	CHIP C	0.010UF	K	
C853,854			CK73GB1H104K	CHIP C	0.10UF	K	
C855			CK73GB1H103K	CHIP C	0.010UF	K	E1
C856			CK73GB1H103K	CHIP C	0.010UF	K	
C857			CK73GB1H102K	CHIP C	1000PF	K	K2K4M2
C858-861			CK73GB1H104K	CHIP C	0.10UF	K	
C900			CK73GB1H103K	CHIP C	0.010UF	K	
CN1	*		E41-0174-05	PIN ASSY (10P)			
CN2			E40-3299-05	PIN ASSY (2P)			
CN3			E40-3266-05	PIN ASSY (8P)			

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### ELECTRIC UNIT (X25-924x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CN4			E40-3261-05	PIN ASSY (3P)		R19			RK73EB2E103J	CHIP R 10K J 1/4W	
CN6			E40-9490-15	PIN ASSY (20P)		R20			RK73GB2A104J	CHIP R 100K J 1/10W	
CN7			E40-3261-05	PIN ASSY (3P)	K4M2	R21			RK73FB2B102J	CHIP R 1.0K J 1/8W	K4
CN8	*		E41-0194-05	FLAT CABLE CONNECTOR (24P)		R23	*		RK73GB2A750J	CHIP R 75 J 1/10W	K4
CN9			E40-3263-05	PIN ASSY (5P)	E1	R24			RK73GB2A272J	CHIP R 2.7K J 1/10W	K4
J1			E58-0863-15	RECTANGULAR RECEPTACLE (16P)		R25			RK73GB2A470J	CHIP R 47 J 1/10W	K4
W9	2B	*	E30-6098-05	CORD WITH PLUG		R26	*		RK73GB2A752J	CHIP R 7.5K J 1/10W	K4
L1			L33-1170-05	CHOKE COIL ASSY (140UH)	K4	R27			RK73GB2A563J	CHIP R 56K J 1/10W	K4
L2			L33-1153-05	SMALL FIXED INDUCTOR (10UH)		R28			RK73GB2A913J	CHIP R 91K J 1/10W	K4
L3			L40-2201-78	SMALL FIXED INDUCTOR (22UH)		R29			RK73GB2A470J	CHIP R 47 J 1/10W	K4
L5			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)		R30			RK73GB2A103J	CHIP R 10K J 1/10W	K4
L7			L33-1039-05	LINE FILTER COIL (52mH)		R31,32			RK73GB2A913J	CHIP R 91K J 1/10W	K4
L9-13			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	E1	R33			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L14			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)		R35			RK73GB2A471J	CHIP R 470 J 1/10W	
L351			L92-0075-05	CHIP FERRITE		R36			RK73GB2A104J	CHIP R 100K J 1/10W	
L352			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)		R37			RK73FB2B472J	CHIP R 4.7K J 1/8W	
X1			L78-0821-05	RESONATOR (20.0MHz)		R38			R92-0365-05	CHIP R 1.0K J 1/2W	
X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHz)	E1	R39			RK73GB2A223J	CHIP R 22K J 1/10W	
X4			L77-2738-05	CRYSTAL RESONATOR (32.768kHz)		R40			R92-0365-05	CHIP R 1.0K J 1/2W	
F	2B		N30-3006-45	PAN HEAD MACHINE SCREW		R41			RK73GB2A123J	CHIP R 12K J 1/10W	
G	3B		N30-3010-46	PAN HEAD MACHINE SCREW		R42			RK73GB2A223J	CHIP R 22K J 1/10W	
K	2B		N83-3005-46	PAN HEAD TAPITTE SCREW		R43			RK73GB2A153J	CHIP R 15K J 1/10W	
N	2B		N80-3008-46	PAN HEAD TAPITTE SCREW		R44			RK73GB2A223J	CHIP R 22K J 1/10W	
CP2			R90-1016-05	MULTI-COMP 470 X4		R45			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
CP3,4			R90-1022-05	MULTI-COMP 470 X2		R46			RK73EB2E473J	CHIP R 47K J 1/4W	
CP5			R90-0725-05	MULTI-COMP 1K X2		R47			RK73GB2A183J	CHIP R 18K J 1/10W	
CP6			R90-1013-05	MULTI-COMP 2.2K X2		R48			RK73GB2A104J	CHIP R 100K J 1/10W	
CP7	*		R90-1048-05	MULTI-COMP 4.7K X2		R50			RK73GB2A104J	CHIP R 100K J 1/10W	K4M2
CP8	*		R90-1508-05	MULTI-COMP 100 X2		R52-54			RK73GB2A473J	CHIP R 47K J 1/10W	K4M2
CP9	*		R90-1048-05	MULTI-COMP 4.7K X2		R55,56			RK73EB2E100J	CHIP R 10 J 1/4W	K4M2
CP10	*		R90-1045-05	MULTI-COMP 470 X2		R57			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K4M2
CP11-13	*		R90-1051-05	MULTI-COMP 100K X2		R58			RK73GB2A104J	CHIP R 100K J 1/10W	
CP14	*		R90-1509-05	MULTI-COMP 100 X4	E1	R98			RK73GB2A472J	CHIP R 4.7K J 1/8W	
CP15	*		R90-1054-05	MULTI-COMP 2.2K X4	E1	R103			RK73FB2B472J	CHIP R 4.7K J 1/8W	
CP16	*		R90-1058-05	MULTI-COMP 100K X4		R111			RK73FB2B223J	CHIP R 22K J 1/8W	K2K4M2
CP17	*		R90-1046-05	MULTI-COMP 1K X2		R112			R92-0366-05	CHIP R 560 J 1W	K2K4M2
R1			RK73GB2A104J	CHIP R 100K J 1/10W		R115			RK73GB2A333J	CHIP R 33K J 1/10W	
R2			RK73FB2B152J	CHIP R 1.5K J 1/8W		R121			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1
R3			RK73GB2A223J	CHIP R 22K J 1/10W		R122-124			RK73EB2E471J	CHIP R 470 J 1/4W	E1
R4			RK73GB2A222J	CHIP R 2.2K J 1/10W		R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73EB2E221J	CHIP R 220 J 1/4W		R130,131			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R6			RK73GB2A153J	CHIP R 15K J 1/10W		R132-134			RK73EB2E101J	CHIP R 100 J 1/4W	
R7			RK73GH1J432D	CHIP R 4.3K D 1/16W		R135-137			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R8			RK73GH1J243D	CHIP R 24K D 1/16W		R140			RK73GB2A473J	CHIP R 47K J 1/10W	
R10			RK73GB2A562J	CHIP R 5.6K J 1/10W		R141			RK73GB2A153J	CHIP R 15K J 1/10W	
R11			RK73GB2A104J	CHIP R 100K J 1/10W		R142			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R12			RK73FB2B103J	CHIP R 10K J 1/8W		R143			RK73GB2A473J	CHIP R 47K J 1/10W	
R13			RK73EB2E102J	CHIP R 1.0K J 1/4W	K4E1M2	R144			RK73GB2A333J	CHIP R 33K J 1/10W	
R14			RK73FB2B561J	CHIP R 560 J 1/8W	K4E1M2	R145			RK73GB2A473J	CHIP R 47K J 1/10W	
R15			RK73EB2E103J	CHIP R 10K J 1/4W	E1	R146	*		RK73GB2A821J	CHIP R 820 J 1/10W	
R16			RK73GB2A104J	CHIP R 100K J 1/10W	K2K4M2	R147			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R16			RK73GB2A223J	CHIP R 22K J 1/10W	E1	R148			RK73FB2B912J	CHIP R 9.1K J 1/8W	
R17			RK73GB2A473J	CHIP R 47K J 1/10W	E1	R149			RK73FB2B243J	CHIP R 24K J 1/8W	
R17						R150			RK73GB2A472J	CHIP R 4.7K J 1/10W	
						R151			RK73GB2A103J	CHIP R 10K J 1/10W	

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

**ELECTRIC UNIT (X25-924x-xx)**

Ref. No.	A d d	N e w	Parts No.	Description				Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description				Desti- nation
R152			RK73GB2A472J	CHIP R	4.7K	J	1/10W		R390			RK73GB2A473J	CHIP R	47K	J	1/10W	
R153,154			RK73GB2A334J	CHIP R	330K	J	1/10W		R393			RK73GB2A104J	CHIP R	100K	J	1/10W	
R155,156			RK73EB2E100J	CHIP R	10	J	1/4W		R397			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R157			RK73EB2E4R7J	CHIP R	4.7	J	1/4W		R400			RK73GB2A101J	CHIP R	100	J	1/10W	
R161,162			RK73FB2B471J	CHIP R	470	J	1/8W		R401			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R163,164			RK73FB2B222J	CHIP R	2.2K	J	1/8W	K4	R402			RK73GB2A471J	CHIP R	470	J	1/10W	K4M2
R163,164			RK73FB2B223J	CHIP R	22K	J	1/8W	K2E1M2	R403			RK73GB2A104J	CHIP R	100K	J	1/10W	K2K4M2
R165,166			RK73FB2B103J	CHIP R	10K	J	1/8W	K4	R404			RK73GB2A104J	CHIP R	100K	J	1/10W	E1
R167,168			RK73FB2B223J	CHIP R	22K	J	1/8W	K4	R405			RK73GB2A104J	CHIP R	100K	J	1/10W	K2K4
R169,170	*		RK73FB2B820J	CHIP R	82	J	1/8W	K4	R406			RK73GB2A104J	CHIP R	100K	J	1/10W	E1M2
R171,172			RK73FB2B471J	CHIP R	470	J	1/8W		R407			RK73GB2A104J	CHIP R	100K	J	1/10W	K4E1M2
R173,174			RK73FB2B222J	CHIP R	2.2K	J	1/8W	K4	R408			RK73GB2A104J	CHIP R	100K	J	1/10W	K2
R173,174			RK73FB2B223J	CHIP R	22K	J	1/8W	K2E1M2	R409			RK73GB2A104J	CHIP R	100K	J	1/10W	
R175,176			RK73FB2B103J	CHIP R	10K	J	1/8W	K4	R412			RK73GB2A104J	CHIP R	100K	J	1/10W	
R177,178			RK73FB2B223J	CHIP R	22K	J	1/8W	K4	R414			RK73GB2A104J	CHIP R	100K	J	1/10W	
R179,180	*		RK73FB2B820J	CHIP R	82	J	1/8W		R417			RK73GB2A223J	CHIP R	22K	J	1/10W	
R181,182			RK73FB2B471J	CHIP R	470	J	1/8W	K4	R421			RK73GB2A473J	CHIP R	47K	J	1/10W	
R183,184			RK73FB2B222J	CHIP R	2.2K	J	1/8W	K4	R422			RK73GB2A223J	CHIP R	22K	J	1/10W	
R185,186			RK73FB2B103J	CHIP R	10K	J	1/8W	K4	R475,476			RK73FB2B223J	CHIP R	22K	J	1/8W	
R187,188			RK73FB2B223J	CHIP R	22K	J	1/8W	K4	R815			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R189,190	*		RK73FB2B820J	CHIP R	82	J	1/8W	K4	R902			RK73GB2A104J	CHIP R	100K	J	1/10W	
R200			RK73GB2A221J	CHIP R	220	J	1/10W		R903			RK73GB2A471J	CHIP R	470	J	1/10W	
R201			RK73GB2A102J	CHIP R	1.0K	J	1/10W		R905			RK73GB2A471J	CHIP R	470	J	1/10W	
R202			RK73GB2A103J	CHIP R	10K	J	1/10W		W1-6			R92-1252-05	CHIP R	0 OHM	J	1/16W	K2E1M2
R203			RK73GB2A432J	CHIP R	4.3K	J	1/10W		W7,8			R92-1252-05	CHIP R	0 OHM	J	1/16W	K2E1
R204			RK73GB2A100J	CHIP R	10	J	1/10W		W11,12			R92-1252-05	CHIP R	0 OHM	J	1/16W	K4
R205			RK73GB2A222J	CHIP R	2.2K	J	1/10W		W15-18			R92-1252-05	CHIP R	0 OHM	J	1/16W	K2E1M2
R206,207			RK73GB2A104J	CHIP R	100K	J	1/10W		W19			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R210			RK73FB2B102J	CHIP R	1.0K	J	1/8W		W111			R92-1252-05	CHIP R	0 OHM	J	1/16W	E1
R211			RK73GB2A223J	CHIP R	22K	J	1/10W		W112,113			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R212			RK73FB2B102J	CHIP R	1.0K	J	1/8W		W117			R92-1252-05	CHIP R	0 OHM	J	1/16W	E1
R213			RK73GB2A223J	CHIP R	22K	J	1/10W		W120			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R230			RK73GB2A472J	CHIP R	4.7K	J	1/10W		W121			R92-1252-05	CHIP R	0 OHM	J	1/16W	K2K4M2
R231			RK73GB2A223J	CHIP R	22K	J	1/10W										
R242			RK73GB2A472J	CHIP R	4.7K	J	1/10W	E1	S1			S74-0809-05	MICRO SWITCH				
R301			RK73GB2A104J	CHIP R	100K	J	1/10W		D1			RM10ZLF	DIODE				
R303	*		RK73GB2A241J	CHIP R	240	J	1/10W		D3	*		MA8082-L	ZENER DIODE				
R305			RK73GB2A394J	CHIP R	390K	J	1/10W		D5	*		MA8100-L	ZENER DIODE				
R306			RK73GB2A101J	CHIP R	100	J	1/10W		D6			MA4051(N)-M	ZENER DIODE				
R353			RK73GB2A102J	CHIP R	1.0K	J	1/10W		D7			MA8056-M	ZENER DIODE				K4E1M2
R355			RK73GB2A102J	CHIP R	1.0K	J	1/10W		D8			MA8047-M	ZENER DIODE				E1
R357			RK73GB2A222J	CHIP R	2.2K	J	1/10W		D9			MA4110(N)-M	ZENER DIODE				K4
R358			RK73GB2A102J	CHIP R	1.0K	J	1/10W		D10			MA4056(N)-M	ZENER DIODE				K4
R359			RK73GB2A104J	CHIP R	100K	J	1/10W		D13,14			S1J	DIODE				
R360			RK73GB2A471J	CHIP R	470	J	1/10W		D13,14			1SR154-400	DIODE				
R361,362			RK73GB2A222J	CHIP R	2.2K	J	1/10W		D15			1SS133	DIODE				
R364			RK73GB2A104J	CHIP R	100K	J	1/10W		D16			MA4068(N)-M	ZENER DIODE				
R366			RK73GB2A102J	CHIP R	1.0K	J	1/10W		D17			MA4062(N)-M	ZENER DIODE				
R367			RK73GB2A473J	CHIP R	47K	J	1/10W		D19,20			DAP202U	DIODE				
R370			RK73GB2A104J	CHIP R	100K	J	1/10W		D19,20			MA142WA	DIODE				
R375			RK73GB2A105J	CHIP R	1.0M	J	1/10W		D21			DA204U	DIODE				
R382			RK73GB2A104J	CHIP R	100K	J	1/10W	K2K4M2	D22-24			MA4062-L	ZENER DIODE				
R382			RK73GB2A225J	CHIP R	2.2M	J	1/10W	E1	D25,26			RD6.8M(B2)	ZENER DIODE				
R384			RK73GB2A222J	CHIP R	2.2K	J	1/10W	E1	D27,28			MA8068-M	ZENER DIODE				
R389			RK73GB2A102J	CHIP R	1.0K	J	1/10W		D29			MA8062-L	ZENER DIODE				

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## ELECTRIC UNIT (X25-924x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D30			DAP202U	DIODE		Q15			DTC144EUA	DIGITAL TRANSISTOR	
D30			MA142WA	DIODE		Q15			UN5213	DIGITAL TRANSISTOR	
D31			MA4062-L	ZENER DIODE		Q16			2SB1443	TRANSISTOR	K4
D32			DAN202U	DIODE		Q17			2SC4081	TRANSISTOR	K4
D32			MA142WK	DIODE		Q18			2SA1576A	TRANSISTOR	K4
D33-36			S1J	DIODE		Q19			2SC4081	TRANSISTOR	K4
D33-36			1SR154-400	DIODE		Q20			2SA1576A	TRANSISTOR	K4
D38-41			1SR154-400	DIODE		Q21,22			2SC4081	TRANSISTOR	K4
D39,40			S1J	DIODE	K4M2	Q23			2SA1576A	TRANSISTOR	K4
D42			DA204U	DIODE	K4M2	Q26			2SB1277(Q,R)	TRANSISTOR	
D43			IMSA-6801	SURGE ABSORBER	K4M2	Q27			2SA1576A	TRANSISTOR	
D44			MA8068-M	ZENER DIODE	K4M2	Q28			DTA124EUA	DIGITAL TRANSISTOR	
D45			MA8062-L	ZENER DIODE	K4M2	Q28			UN5112	DIGITAL TRANSISTOR	
D46			MA8068-M	ZENER DIODE	K4M2	Q29			DTC114YUA	DIGITAL TRANSISTOR	
D50			MA4056(N)-M	ZENER DIODE	K4M2	Q29			UN5214	DIGITAL TRANSISTOR	
D51-53			FTZ6.8E	ZENER DIODE	E1	Q30,31			2SC4081	TRANSISTOR	
D54			DA204U	DIODE	E1	Q32,33			DTA124EUA	DIGITAL TRANSISTOR	
D111,112			S1J	DIODE	E1	Q32,33			UN5112	DIGITAL TRANSISTOR	
D111,112			1SR154-400	DIODE	E1	Q34			2SC4081	TRANSISTOR	
D121-124			MA4062-L	ZENER DIODE	E1	Q35			DTA124EUA	DIGITAL TRANSISTOR	
D473		*	MA8056-M	ZENER DIODE		Q35			UN5212	DIGITAL TRANSISTOR	
D474		*	MA8100-L	ZENER DIODE		Q36-40			DTC143TUA	DIGITAL TRANSISTOR	
D475		*	SS14	DIODE		Q36-40			UN5216	DIGITAL TRANSISTOR	
IC1			UPD70303GFA18	MI-COM IC		Q41,42			DTC143TUA	DIGITAL TRANSISTOR	K4
IC2			TDA7407	ANALOGUE IC		Q41,42			UN5216	DIGITAL TRANSISTOR	K4
IC3			M5237ML	IC(VOLTAGE REGULATOR)		Q43			DTC124EUA	DIGITAL TRANSISTOR	
IC4			TDA7560	ANALOGUE IC		Q43			UN5212	DIGITAL TRANSISTOR	
IC5			TDA7401	ANALOGUE IC	K4	Q44			CPH3105	TRANSISTOR	
IC6			ICL7660SIBA	ANALOGUE IC	K4	Q45			DTC124EUA	DIGITAL TRANSISTOR	
IC7			TC74HC02AF	MOS-IC	K4	Q45			UN5212	DIGITAL TRANSISTOR	
IC8			NJM4565M-TE2	ANALOGUE IC	K4	Q46			CPH3105	TRANSISTOR	
IC10-12			NJM4565M-TE2	ANALOGUE IC	K4	Q52			DTC143TUA	DIGITAL TRANSISTOR	E1
IC14			TDA7479D	ANALOGUE IC	E1	Q52			UN5216	DIGITAL TRANSISTOR	E1
IC16			S-8083TANNP	MOS-IC		Q101			DTA114YUA	DIGITAL TRANSISTOR	
IC20			BA3121F	IC (ISO AMP)	K4M2	Q101			UN5114	DIGITAL TRANSISTOR	
IC21			BA3129F	IC (SWITCH)	K4M2	Q103			DTC124EUA	DIGITAL TRANSISTOR	K4M2
IC25			BR24C02F-W	MEMORY IC	K4M2	Q103			UN5212	DIGITAL TRANSISTOR	K4M2
Q1			2SD2375	TRANSISTOR		Q111			2SB1277(Q,R)	TRANSISTOR	K2K4M2
Q3			2SA1037K	TRANSISTOR		Q112			DTC114YUA	DIGITAL TRANSISTOR	K2K4M2
Q4			2SA2057	TRANSISTOR		Q112			UN5214	DIGITAL TRANSISTOR	K2K4M2
Q5			DTC144EUA	DIGITAL TRANSISTOR		Q201			2SC4081	TRANSISTOR	
Q5			UN5213	DIGITAL TRANSISTOR		Q305			DTA114YUA	DIGITAL TRANSISTOR	
Q6,7			DTA124EUA	DIGITAL TRANSISTOR		Q305			UN5114	DIGITAL TRANSISTOR	
Q6,7			UN5112	DIGITAL TRANSISTOR		Q306			DTA114YUA	DIGITAL TRANSISTOR	E1M2
Q8			DTC124EUA	DIGITAL TRANSISTOR		Q306			UN5114	DIGITAL TRANSISTOR	E1M2
Q8			UN5212	DIGITAL TRANSISTOR		Q473			2SC4081	TRANSISTOR	
Q9			2SB1427	TRANSISTOR		Q474			2SB1548(P)	TRANSISTOR	
Q10			2SA2057	TRANSISTOR		Q475			2SC4081	TRANSISTOR	
Q11			2SC4081	TRANSISTOR		Q476			2SB1548(P)	TRANSISTOR	
Q12			DTC124EUA	DIGITAL TRANSISTOR		TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
Q12			UN5212	DIGITAL TRANSISTOR		A1	2A	*	W02-3341-05	ELECTRIC CIRCUIT MODULE	
Q13			DTA124EUA	DIGITAL TRANSISTOR		FE1		*	X86-3530-11	TUNER UNIT	K2K4M2
Q13			UN5112	DIGITAL TRANSISTOR	K4E1M2	FE1		*	X86-3532-70	TUNER UNIT	E1
Q14			DTA123JK	DIGITAL TRANSISTOR	K4E1M2						
Q14			KRA105S	DIGITAL TRANSISTOR	K4E1M2						

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
<b>DAUGHTER UNIT (X89-253x-xx)</b>					
CN1 J1			E40-9488-05 E58-0865-05	SOCKET FOR PIN ASSY (20P) RECTANGULAR RECEPTACLE (16P)	
R1			RK73EB2E471J	CHIP R 470 J 1/4W	
R2			RK73EB2E241J	CHIP R 240 J 1/4W	
R3			RK73EB2E471J	CHIP R 470 J 1/4W	
R4-6			RK73EB2E241J	CHIP R 240 J 1/4W	
R7			RK73EB2E471J	CHIP R 470 J 1/4W	
R8			RK73EB2E511J	CHIP R 510 J 1/4W	
R9			RK73EB2E471J	CHIP R 470 J 1/4W	
R10			RK73EB2E221J	CHIP R 220 J 1/4W	
R11			RK73EB2E221J	CHIP R 220 J 1/4W	
S1 S1			S70-0856-05 S70-0873-05	TACT SWITCH TACT SWITCH	E1M2 K2K4

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation

# X92-4430-0X

# X92-4450-0X

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description			Desti na ti on
<b>CD PLAYER UNIT (X32-5180-0X, X32-5200-0X)</b>							
C1 ,2			CK73GB0J105K	CHIP C	1.0UF	K	
C3			CK73FB1A225K	CHIP C	2.2UF	K	
C4			C92-0566-05	CHIP-TAN	10UF	6.3WV	
C5			CC73GCH1H220J	CHIP C	22PF	J	
C6			CC73GCH1H030C	CHIP C	3.0PF	C	
C7			CK73GB1C104K	CHIP C	0.10UF	K	
C8			CK73GB0J105K	CHIP C	1.0UF	K	
C10			CK73GB1H472K	CHIP C	4700PF	K	
C11			CK73GB1H682K	CHIP C	6800PF	K	
C12			CK73GB1H332K	CHIP C	3300PF	K	
C13			CK73GB1C333K	CHIP C	0.033UF	K	
C14			CK73GB1H472K	CHIP C	4700PF	K	
C15			CK73GB1E473K	CHIP C	0.047UF	K	
C16			CC73GCH1H221J	CHIP C	220PF	J	
C17			CK73GB1H472K	CHIP C	4700PF	K	
C18			CC73GCH1H331J	CHIP C	330PF	J	
C19 ,20			CK73GB1C104K	CHIP C	0.10UF	K	
C21			CK73FB1A225K	CHIP C	2.2UF	K	
C23			CK73GB1H102K	CHIP C	1000PF	K	
C24			CK73GB1E223K	CHIP C	0.022UF	K	
C25			CK73GB1H153K	CHIP C	0.015UF	K	
C26			CK73GB0J105K	CHIP C	1.0UF	K	
C28			CK73GB0J105K	CHIP C	1.0UF	K	
C29			CK73GB1C104K	CHIP C	0.10UF	K	
C33			CK73GB1C104K	CHIP C	0.10UF	K	
C35			CK73GB1C104K	CHIP C	0.10UF	K	
C39			CK73GB1H152K	CHIP C	1500PF	K	
C40			CK73GB1H103K	CHIP C	0.010UF	K	
C41			CK73EB1C225K	CHIP C	2.2UF	K	
C42			CK73GB1H152K	CHIP C	1500PF	K	
C44			CK73GB1H103K	CHIP C	0.010UF	K	
C46			CK73GB1E473K	CHIP C	0.047UF	K	
C51			CK73GB1C104K	CHIP C	0.10UF	K	
C55			CK73GB1C104K	CHIP C	0.10UF	K	
C67 ,68			CK73GB1C104K	CHIP C	0.10UF	K	
C71 ,72			CK73GB1H471K	CHIP C	470PF	K	
C77 ,78			CC73GCH1H680J	CHIP C	68PF	J	
C79 ,80			CK73GB1H222K	CHIP C	2200PF	K	
C85			CK73GB1C104K	CHIP C	0.10UF	K	
C89			CK73GB1H222K	CHIP C	2200PF	K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR			
CN1			E41-0193-05	FLAT CABLE CONNECTOR			
CN2	*		E40-9527-05	FLAT CABLE CONNECTOR			
CN2	*		E41-0213-05	FLAT CABLE CONNECTOR			
X1	*		L78-0851-05	RESONATOR (16.93MHZ)			
CP1			R90-1019-05	MULTI-COMP	100	X2	
CP2			R90-1014-05	MULTI-COMP	100	X4	
R3			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R5			RK73GB2A361J	CHIP R	360	J 1/10W	
R6			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R9			RK73FB2B100J	CHIP R	10	J 1/8W	
R10 ,11			RK73GB2A562J	CHIP R	5.6K	J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description			Desti na ti on
R12			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R13			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R15			RK73GB2A824J	CHIP R	820K	J 1/10W	
R16			RK73GB2A223J	CHIP R	22K	J 1/10W	
R17			RK73GB2A393J	CHIP R	39K	J 1/10W	
R18			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R19			RK73GB2A473J	CHIP R	47K	J 1/10W	
R20		*	RK73GB2A104J	CHIP R	100K	J 1/10W	
R21		*	RK73GB2A244J	CHIP R	240K	J 1/10W	
R22		*	RK73GB2A623J	CHIP R	62K	J 1/10W	
R32			RK73GB2A683J	CHIP R	68K	J 1/10W	
R34			RK73GB2A363J	CHIP R	36K	J 1/10W	
R35			RK73GB2A104J	CHIP R	100K	J 1/10W	
R36			RK73GB2A151J	CHIP R	150	J 1/10W	
R37			RK73GB2A471J	CHIP R	470	J 1/10W	
R38			RK73GB2A224J	CHIP R	220K	J 1/10W	
R40			RK73GB2A133J	CHIP R	13K	J 1/10W	
R46			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R47			RK73GB2A103J	CHIP R	10K	J 1/10W	
R49			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R52			RK73GB2A104J	CHIP R	100K	J 1/10W	
R53			RK73GB2A103J	CHIP R	10K	J 1/10W	
R54			RK73GB2A104J	CHIP R	100K	J 1/10W	
R70			RK73GB2A103J	CHIP R	10K	J 1/10W	
R71			RK73GB2A183J	CHIP R	18K	J 1/10W	
R73			RK73GB2A683J	CHIP R	68K	J 1/10W	
R74			RK73GB2A123J	CHIP R	12K	J 1/10W	
R75			RK73GB2A333J	CHIP R	33K	J 1/10W	
R76			RK73GB2A103J	CHIP R	10K	J 1/10W	
R79 ,80			RK73GB2A103J	CHIP R	10K	J 1/10W	
R81			RK73GB2A333J	CHIP R	33K	J 1/10W	
R82			RK73GB2A223J	CHIP R	22K	J 1/10W	
R84			RK73GB2A103J	CHIP R	10K	J 1/10W	
R101,102			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R103,104			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R107,108			RK73FB2B331J	CHIP R	330	J 1/8W	
R110			RK73FB2B201J	CHIP R	200	J 1/8W	
R117,118			RK73FB2B203J	CHIP R	20K	J 1/8W	
R121,122			RK73FB2B203J	CHIP R	20K	J 1/8W	
R125,126			RK73FB2B203J	CHIP R	20K	J 1/8W	
R202			RK73GB2A104J	CHIP R	100K	J 1/10W	
R213			RK73GB2A104J	CHIP R	100K	J 1/10W	BB1B2
R213			RK73GB2A104J	CHIP R	100K	J 1/10W	B3
R214			RK73GB2A104J	CHIP R	100K	J 1/10W	AA1A2
R214			RK73GB2A104J	CHIP R	100K	J 1/10W	A3
R218			RK73GB2A473J	CHIP R	47K	J 1/10W	
R233			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R234			RK73GB2A103J	CHIP R	10K	J 1/10W	
S1 ,2			S68-0863-05	PUSH SWITCH			
S3			S68-0862-05	PUSH SWITCH			
S4			S68-0864-05	PUSH SWITCH			A2A3B2
S4			S68-0864-05	PUSH SWITCH			B3
D1			DAN202U	DIODE			
D2			MA8051-L	ZENER DIODE			

A : X92-4430-00 (DXM-6010W) A1 : X92-4430-01 (DXM-6011W)  
A2 : X92-4430-02 (DXM-6012W) A3 : X92-4430-03 (DXM-6013W)

B : X92-4450-00 (DXM-6110W) B1 : X92-4450-01 (DXM-6111W)  
B2 : X92-4450-02 (DXM-6112W) B3 : X92-4450-03 (DXM-6113W)

△ indicates safety critical components.

# PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

## CD PLAYER UNIT (X32-5180-0X, X32-5200-0X)

Ref. No.	A d d	N e w	Parts No.	Description	Pest inat ion	Ref. No.	A d d	N e w	Parts No.	Description	Pest inat ion
D3			DA204U	DIODE		53	1B		J21-9678-03	MOUNTING HARDWARE (DAMPER BKT)	
D4			DAN202U	DIODE		55	1A		J90-1001-11	GUIDE (1)	
IC1	*		AN22000AA	ANALOGUE IC		56	1B		J90-1023-03	GUIDE (2)	
IC2	*		MN662773KH2	MOS-IC	BB1B2	DFPC1	2B		J84-0128-15	FLEXIBLE P. W. B. (PICKUP FPC)	
IC2	*		MN662773KH2	MOS-IC	B3						
IC2			MN662774KJ2	MOS-IC		A	2B		N09-4460-05	TAPITTE SCREW (OVAL P TAPIT)	
IC2			MN662774KJ2	MOS-IC		B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
IC4			BA5824FP	ANALOGUE IC	AA1A2	C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
IC6			NJM4580M1	ANALOGUE IC	A3	D	1B		N09-6006-05	TAPITTE SCREW (PAN ST 2X3.5T)	
Q1			MCH6101	TRANSISTOR		E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
Q2			DTC124EUA	DIGITAL TRANSISTOR		F	1A		N09-6051-05	TAPITTE SCREW (BIND P 2X5)	
Q3			DTA143XUA	DIGITAL TRANSISTOR		G	2A		N19-2163-04	FLAT WASHER (1.6X0.25X6)	
Q4			2SA1362(Y)	TRANSISTOR		H	1B		N39-2020-46	PAN HEAD MACHIN SCREW (M2X2)	
Q5			DTC124EUA	DIGITAL TRANSISTOR							
<b>CD MECHANISM ASSY (X92-4430-0X, X92-4450-0X)</b>											
2	1B		A10-4827-12	CHASSIS (OUTER)		DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
5	1B		D10-4576-23	ARM ASSY (CLAMPER ASSY)		DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	
8	2A		D10-4579-03	LEVER ASSY (ROLLER ASSY)		DPU1	2B		T25-0105-15	OPTICAL PICKUP HEAD	
10	3A		D10-4581-13	ARM (DISC L)							
11	2A		D10-4582-13	ARM (DISC L)							
12	3A		D10-4583-03	ARM (JOINT L)							
13	3A		D10-4584-03	ARM (JOINT R)							
14	3B		D10-4585-03	ARM (CARRIER)							
15	2A		D10-4586-03	SLIDER (L)							
16	3B	*	D10-4587-12	SLIDER (R)							
17	3B		D10-4588-03	SLIDER (TRIG)							
18	3B		D10-4595-04	ARM (LOCK)							
19	3B		D10-4596-04	ARM (ROLLER)							
22	2A		D13-2151-04	GEAR (ROLLER)							
23	2B		D13-2152-04	GEAR (HELICAL 1)							
24	3B		D13-2153-04	GEAR (SUN)							
25	3B		D13-2154-04	GEAR (PLANET)							
26	3B		D13-2155-04	WORM (2)							
27	3B		D13-2156-04	GEAR (HELICAL 2)							
28	3B		D13-2157-04	GEAR (LOAD 1)							
29	3B		D13-2158-04	GEAR (LOAD 2)							
30	3B		D13-2168-04	GEAR (PICK 1)							
31	3B		D13-2171-04	GEAR (PICK 2)							
32	2B		D13-2172-03	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER (N100X3DIES)							
35	2B		D21-2382-04	SHAFT (PICK)							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3072-04	EXTENSION SPRING (trigger)							
39	2A		G01-3073-04	TORSION COIL SPRING (ROLLER L)							
40	2A		G01-3074-04	EXTENSION SPRING (ROLLER R)							
41	2B		G01-3075-04	EXTENSION SPRING (PICKUP)							
42	2A		G01-3076-04	EXTENSION SPRING (JOINT SP)							
43	1B		G01-3077-04	EXTENSION SPRING (FLOATING)							
44	2B		G02-1399-04	FLAT SPRING (CLAMP)							
45	2B		G02-1408-04	FLAT SPRING (WORM)							
51	1A		J21-9676-12	MOUNTING HARDWARE (GUIDE BKT)							
52	3B		J21-9677-02	MOUNTING HARDWARE (GEAR BKT)							

**A** : X92-4430-00 (DXM-6010W) **A1** : X92-4430-01 (DXM-6011W)

**A2** : X92-4430-02 (DXM-6012W) **A3** : X92-4430-03 (DXM-6013W)

**B** : X92-4450-00 (DXM-6110W) **B1** : X92-4450-01 (DXM-6111W)

**B2** : X92-4450-02 (DXM-6112W) **B3** : X92-4450-03 (DXM-6113W)