



EXPLODED VIEW (CD MECHANISM)

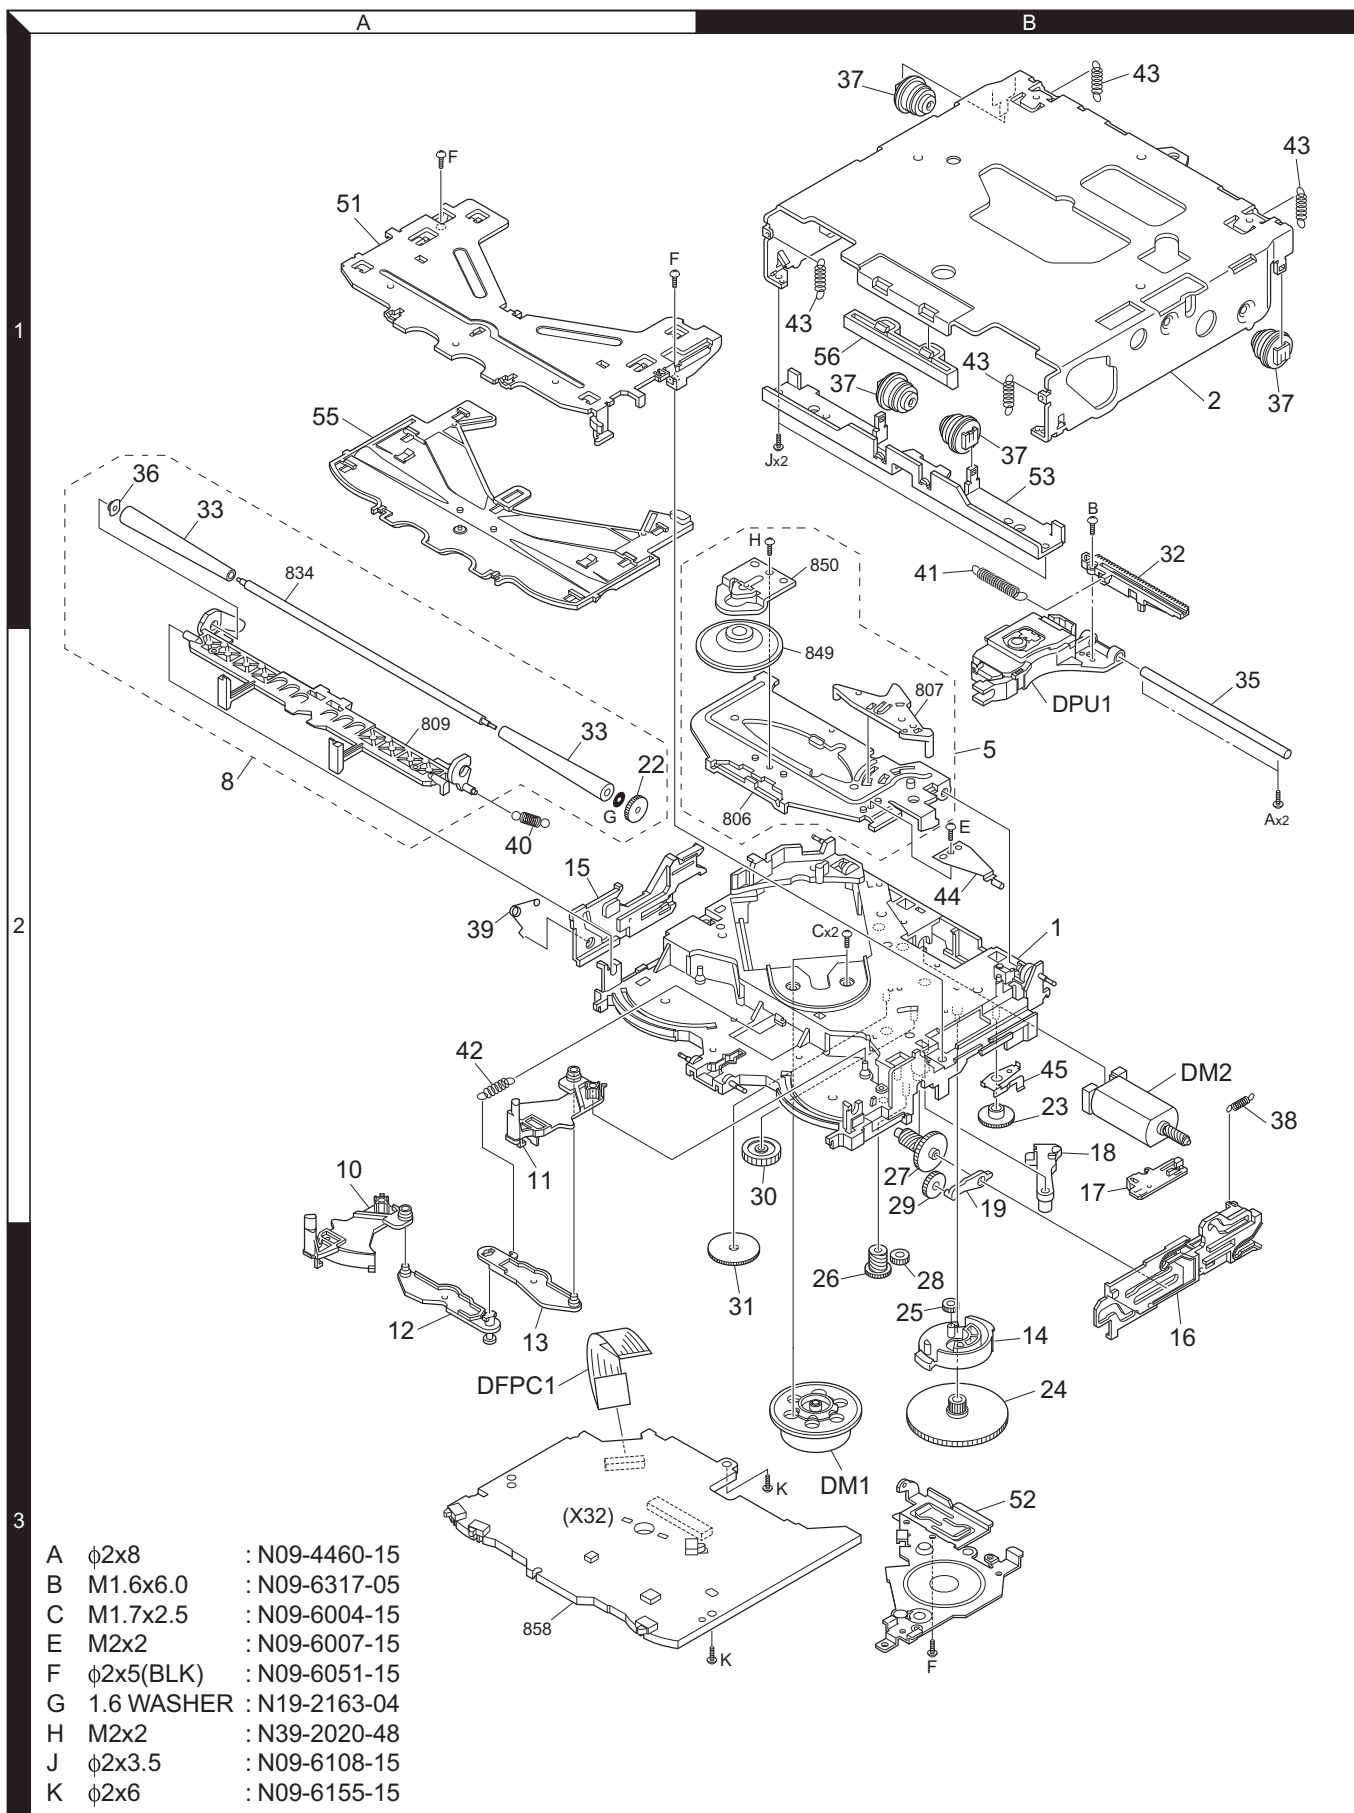

EXPLODED VIEW (UNIT)

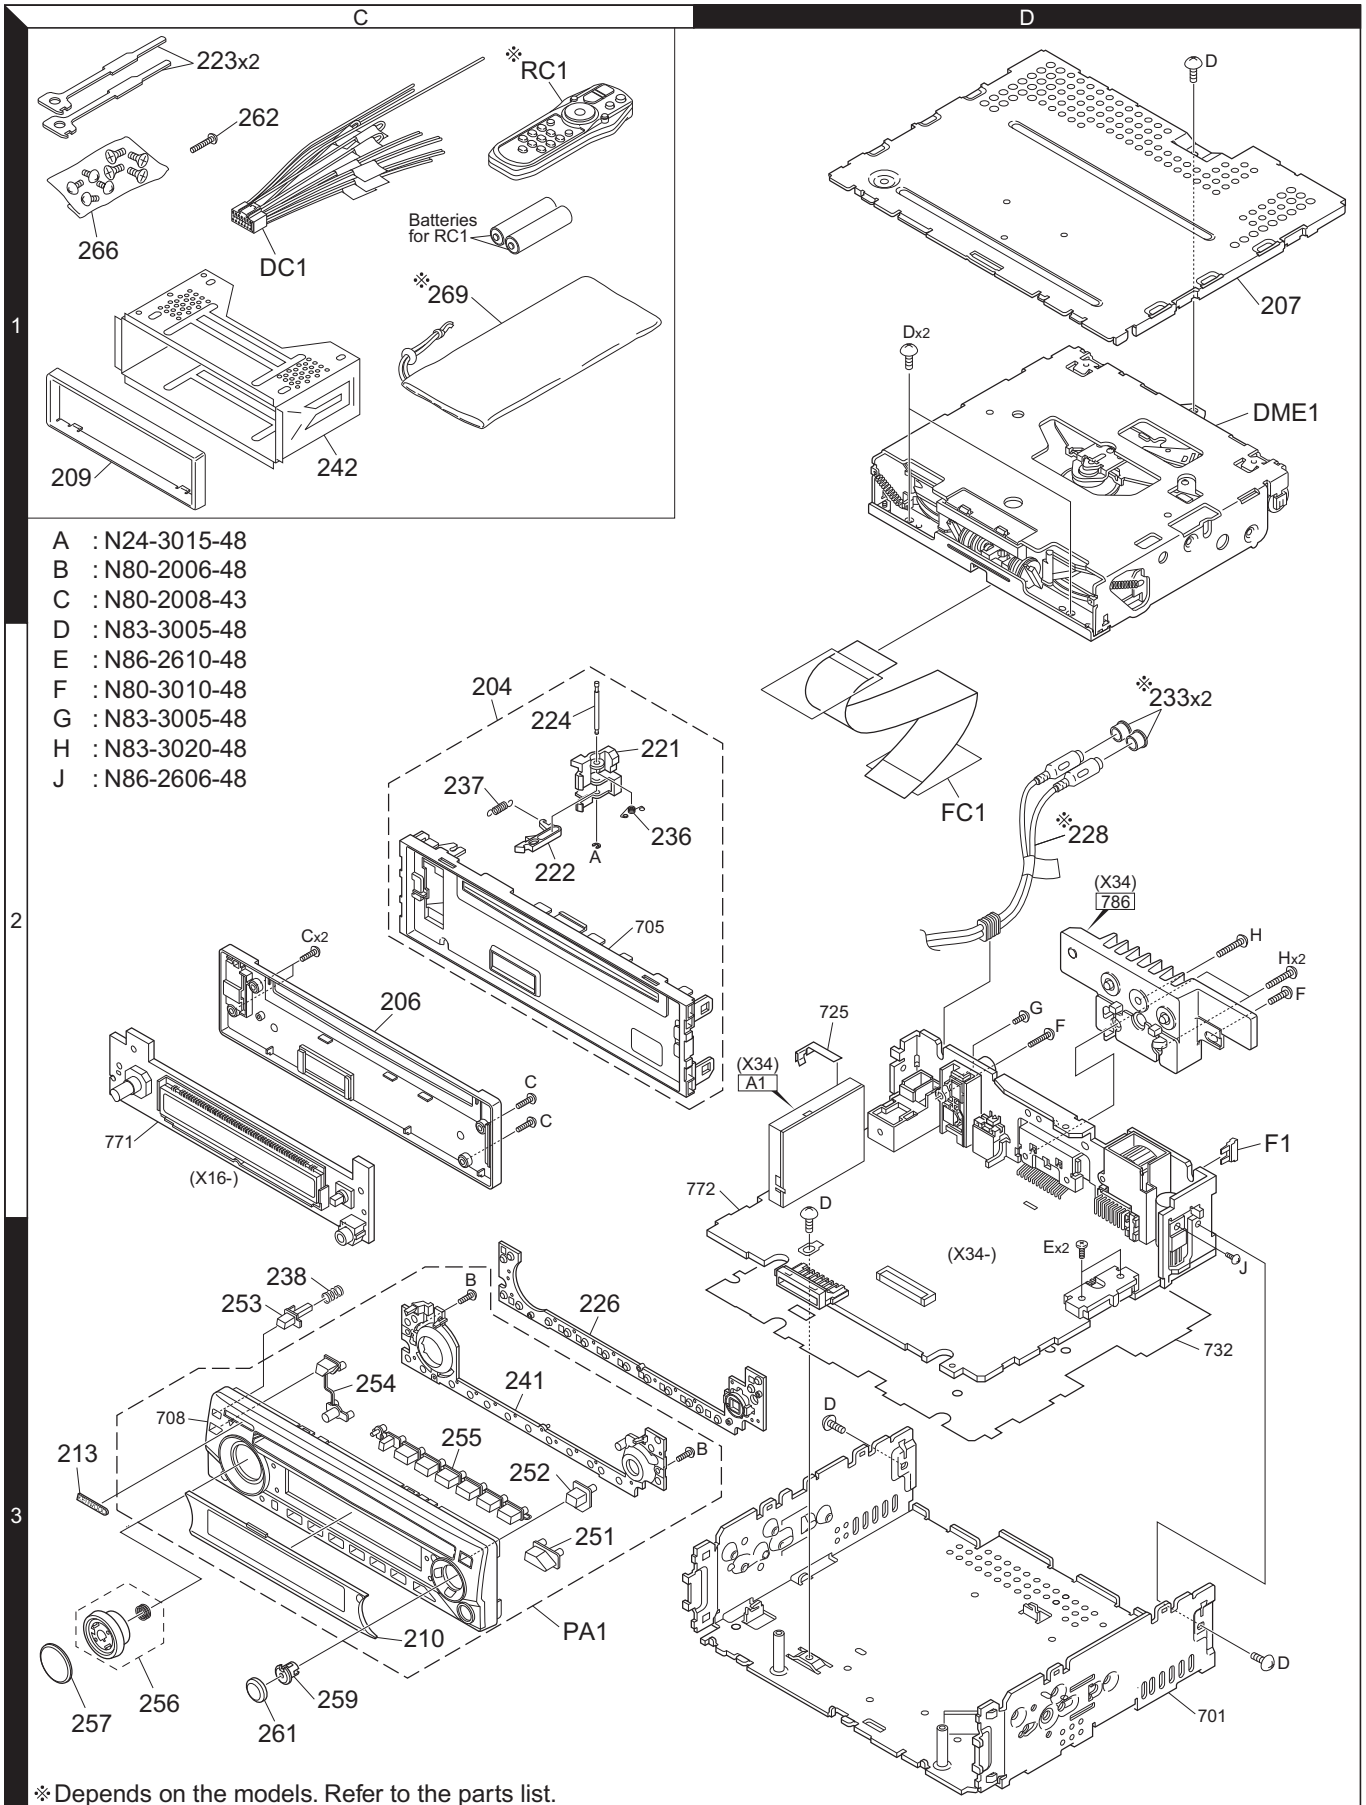

Parts with the exploded numbers larger than 700 are not supplied.

KDC-MP2035/MP205 KDC-MP235/MP235CR

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP2035/MP205/MP235/MP235CR					
204	2C	*	A22-3117-13	SUB PANEL ASSY	
206	2C	*	A46-1846-11	REAR COVER	
207	1D		A52-0804-12	TOP PLATE	
PA1	3C	*	A64-4037-12	PANEL ASSY	K
PA1	3C	*	A64-4043-12	PANEL ASSY	K1
PA1	3C	*	A64-4044-12	PANEL ASSY	K2
PA1	3C	*	A64-4045-02	PANEL ASSY	K3
RC1	1C	*	A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	KK1
-			B46-0681-04	ID CARD	
-		*	B64-3492-00	INST. MANUAL (ENG.FRE.SPA)	
209	1C		B07-3122-01	ESCUTCHEON	KK3
209	1C		B07-3126-01	ESCUTCHEON	K1K2
210	3C	*	B10-4907-11	FRONT GLASS	K
210	3C	*	B10-4913-11	FRONT GLASS	K1
210	3C	*	B10-4914-11	FRONT GLASS	K2
210	3C	*	B10-4915-01	FRONT GLASS	K3
213	3C		B43-1518-04	BADGE	
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C		D10-4589-04	LEVER	
224	2C		D21-2329-04	SHAFT	
226	3C	*	E29-2089-02	CONDUCTIVE RUBBER	
228	2D		E30-6499-05	CORD WITH PINPLUG	K
DC1	1C		E30-6415-15	DC CORD	
FC1	2D		E39-0736-05	FLAT CABLE (24-PIN)	
233	2D		F29-0626-04	INSULATING COVER	K
F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING (REL)	
-		*	H54-3907-03	ITEM CARTON CASE	K
-		*	H54-3908-03	ITEM CARTON CASE	K1
-		*	H54-3909-03	ITEM CARTON CASE	K2
-		*	H54-3910-03	ITEM CARTON CASE	K3
241	3C		J19-7158-01	HOLDER	
242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
251	3C	*	K24-4653-04	PUSH KNOB (SRC)	
252	3C	*	K24-4652-04	PUSH KNOB (EJECT)	
253	3C	*	K24-4654-04	PUSH KNOB (RELEASE)	
254	3C	*	K25-1860-03	PUSH KNOB (MENU/ATT)	
255	3C	*	K25-1859-02	PUSH KNOB (PRESET)	
256	3C	*	K28-0201-03	KNOB ASSY (VOL)	KK1K3
257	3C	*	K28-0190-03	KEY TOP (VOL)	K2
257	3C	*	K28-0191-03	KEY TOP (VOL)	
259	3C		K29-7141-03	KNOB BASE (FM/AM)	
261	3C	*	K28-0195-03	KEY TOP (FM/AM)	KK1K3
261	3C	*	K28-0196-03	KEY TOP (FM/AM)	K2
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	
266	1C		N99-1757-05	SCREW SET	
A	2C		N24-3015-48	E TYPE RETAINING RING	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N86-2610-48	BINDING HEAD TAPTITE SCREW	
269	1C	*	W01-1691-05	CARRYING CASE	KK1K3
DME1	1D	*	X92-5880-00	MECHANISM ASSY (DXM-6E00W)	
SWITCH UNIT (X16-386x-xx)					
D1			B30-1566-05	LED (1608,RED)	
D2		*	B30-1767-05	LED	KK1
D3,4			B30-1566-05	LED (1608,RED)	K2K3
D5		*	B30-1767-05	LED	KK1
D6-9			B30-1566-05	LED (1608,RED)	K2K3
D7,8		*	B30-1767-05	LED	KK1
D11-22			B30-1566-05	LED (1608,RED)	
C10			CK73GB0J225K	CHIP C 2.2UF K	
C11,12			CK73GB1H103K	CHIP C 0.010UF K	
C15			CC73GCH1H470J	CHIP C 47PF J	
C16			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73FB1A225K	CHIP C 2.2UF K	KK1K3
C24,25			CK73GB1H102K	CHIP C 1000PF K	
J1		*	E59-0852-05	RECTANGULAR PLUG	
J2		*	E11-0649-05	3.5D PHONE JACK	K2K3
J2		*	E11-0650-05	3.5D PHONE JACK	KK1
CP11,12			RK74GA1J222J	CHIP-COM 2.2K J 1/16W	
R11			RK73GB2A101J	CHIP R 100 J 1/10W	
R13-17			RK73GB2A221J	CHIP R 220 J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R19			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	KK1K3
R22			RK73GB2A101J	CHIP R 100 J 1/10W	KK1K3
R23			RK73GB2A104J	CHIP R 100K J 1/10W	K2
R31-34			RK73FB2B471J	CHIP R 470 J 1/8W	
R61			RK73EB2E471J	CHIP R 470 J 1/4W	K2K3
R61			RK73EB2E561J	CHIP R 560 J 1/4W	KK1
R62			RK73EB2E821J	CHIP R 820 J 1/4W	KK1
R62,63			RK73EB2E681J	CHIP R 680 J 1/4W	K2K3
R63			RK73EB2E681J	CHIP R 680 J 1/4W	KK1
R70			RK73GB2A221J	CHIP R 220 J 1/10W	
R72			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R74			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R75			RK73GB2A203J	CHIP R 20K J 1/10W	
R78			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R80-82			RK73PB2H470J	CHIP R 47 J 1/2W	
R96			RK73GB2A473J	CHIP R 47K J 1/10W	
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	K2K3
W2-4			R92-1252-05	CHIP R 0 OHM J 1/16W	KK1
S1			S70-0106-05	TACT SWITCH	
S2		*	T99-0474-05	ROTARY ENCODER	
D71-77			UDZS5.6B	ZENER DIODE	
D79			UDZS5.6B	ZENER DIODE	

K : KDC-MP2035 **K1** : KDC-MP235 **K2** : KDC-MP205 **K3** : KDC-MP235CR

(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-386x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
ED1			3-BT-224N	FLUORESCENT INDICATOR TUBE	
IC1			LC75756W	MOS-IC	
IC3			PNA4S22M02KW	ANALOGUE IC	KK1K3
CD PLAYER UNIT (X32-5970-00) IN CD MECHA					
C20			CC73GCH1H680J	CHIP C 68PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H222K	CHIP C 2200PF K	
C23			CC73GCH1H220J	CHIP C 47PF J	
C24			CK73EB1A475K	CHIP C 4.7UF K	
C25			CK73FB0J106K	CHIP C 10UF K	
C26			CK73GB1H153K	CHIP C 0.015UF K	
C27			CC73GCH1H470J	CHIP C 47PF J	
C29			CK73GB1H104K	CHIP C 0.10UF K	
C30-33			CK73GB1H103K	CHIP C 0.010UF K	
C34			CK73GB1H104K	CHIP C 0.10UF K	
C35			CK73GB1H153K	CHIP C 0.015UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C38			CC73GCH1H680J	CHIP C 68PF J	
C39,40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB1A105K	CHIP C 1.0UF K	
C44			CK73GB1H104K	CHIP C 0.10UF K	
C45,46			CK73GB1H222K	CHIP C 2200PF K	
C47,48			CK73GB1H333K	CHIP C 0.033UF K	
C49,50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H222K	CHIP C 2200PF K	
C52,53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CK73GB1A105K	CHIP C 1.0UF K	
C58			CK73EB1E105K	CHIP C 1.0UF K	
C60			CK73EB0J226K	CHIP C 22UF K	
C61-64			CK73GB1H104K	CHIP C 0.10UF K	
C66			CK73FB1C105K	CHIP C 1.0UF K	
C68,69			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73EB1A106K	CHIP C 10UF K	
C73			CK73GB1A105K	CHIP C 1.0UF K	
C74			CK73GB1C224K	CHIP C 0.22UF K	
C76			CK73GB1H103K	CHIP C 0.010UF K	
C77			CK73FB1A225K	CHIP C 2.2UF K	
C87,88			CK73GB1H222K	CHIP C 2200PF K	
C89-91			CK73GB1H104K	CHIP C 0.10UF K	
C94,95			CK73GB1A105K	CHIP C 1.0UF K	
C96			CK73GB1H103K	CHIP C 0.010UF K	
C97			CK73GB1H104K	CHIP C 0.10UF K	
C100,101			CK73GB1A105K	CHIP C 1.0UF K	
C102			CK73FB1A225K	CHIP C 2.2UF K	
C103			CK73GB1H153K	CHIP C 0.015UF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1		*	L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R20			RK73GB2A393J	CHIP R 39K J 1/10W	
R21			RK73GB2A163J	CHIP R 16K J 1/10W	
R22			RK73GB2A562J	CHIP R 5.6K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R23			RK73GB2A273J	CHIP R 27K J 1/10W	
R25			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R26			RK73GB2A683J	CHIP R 68K J 1/10W	
R27			RK73GB2A333J	CHIP R 33K J 1/10W	
R28			RK73GB2A563J	CHIP R 56K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A133J	CHIP R 13K J 1/10W	
R32			RK73GB2A181J	CHIP R 180 J 1/10W	
R33			RK73GB2A153J	CHIP R 15K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R36			RK73GB2A154J	CHIP R 150K J 1/10W	
R37			RK73GB2A334J	CHIP R 330K J 1/10W	
R38			RK73GB2A223J	CHIP R 22K J 1/10W	
R40			RK73GB2A273J	CHIP R 27K J 1/10W	
R41			RK73GB2A393J	CHIP R 39K J 1/10W	
R45			RK73GB2A221J	CHIP R 220 J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R48,49			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R50			RK73GB2A560J	CHIP R 56 J 1/10W	
R51			RK73EB2E220J	CHIP R 22 J 1/4W	
R52			RK73EB2E100J	CHIP R 10 J 1/4W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R59			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R60,61			RK73GB2A103J	CHIP R 10K J 1/10W	
R82,83			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R216,217			RK73GB2A103J	CHIP R 10K J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R219,220			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R221,222			RK73GB2A101J	CHIP R 100 J 1/10W	
R223			RK73GB2A103J	CHIP R 10K J 1/10W	
R226-230			RK73GB2A101J	CHIP R 100 J 1/10W	
R231			RK73GB2A473J	CHIP R 47K J 1/10W	
R232			RK73GB2A104J	CHIP R 100K J 1/10W	
R233			RK73GB2A331J	CHIP R 330 J 1/10W	
R239			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R240			RK73EB2E470J	CHIP R 47 J 1/4W	
R241			RK73GB2A104J	CHIP R 100K J 1/10W	
R243			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R244			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R245			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R246			RK73GB2A333J	CHIP R 33K J 1/10W	
R247			RK73GB2A183J	CHIP R 18K J 1/10W	
R248			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R251			RK73GB2A473J	CHIP R 47K J 1/10W	
R252			RK73GB2A000J	CHIP R 0.0 J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DA204U	DIODE	
D2			DAP202U	DIODE	
D3,4			DA204U	DIODE	
IC3			BA5824FP	ANALOGUE IC	
IC4		*	TC94A70FG-007	MOS-IC	

K : KDC-MP2035 K1 : KDC-MP235 K2 : KDC-MP205 K3 : KDC-MP235CR
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5970-00) IN CD MECHA

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
IC5		*	S-1132B15U5T1G	ANALOGUE IC		J1			E58-0991-05	RECTANGULAR RECEPTACLE	
IC6		*	S-1132B33U5T1G	ANALOGUE IC		J2		*	E04-0334-05	RF COAXIAL CABLE RECEPTACLE	
IC7			TAR5S33-F	ANALOGUE IC		J3		*	E58-1060-05	RECTANGULAR RECEPTACLE	
IC11		*	XC6206P152MR	ANALOGUE IC		J4		*	E56-0855-05	CYLINDRICAL RECEPTACLE	
Q1			2SB0970	TRANSISTOR		J5		*	E63-0941-05	PIN JACK	KK1
Q10-12			UM6K1N	DUAL FET		L1			L33-2319-05	CHOKE COIL ASSY	
Q13			DTC114YUA	DIGITAL TRANSISTOR		L401		*	L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
ELECTRIC UNIT (X34-463x-xx)						X1			L78-1218-05	RESONATOR (10.000MHZ)	
D302			B30-1567-05	LED (1608,RED)		X2			L77-2920-05	CRYSTAL RESONATOR (32.768KHZ)	
C1		*	CD04AZ1C332M2	ELECTRO 3300UF 16WV		F	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
C2			CD04AB1C220M	ELECTRO 22UF 16WV		G	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C3			CK73GB1H104K	CHIP C 0.10UF K		H	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
C5,6			CD04AT1E101M	ELECTRO 100UF 25WV		J	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
C7			CD04AB0J101M	ELECTRO 100UF 6.3WV		R1			RD14BB2C102J	RD 1.0K J 1/6W	
C9			CK73GB1H104K	CHIP C 0.10UF K		R2-5			RD14BB2C103J	RD 10K J 1/6W	
C11			CK73FB1A225K	CHIP C 2.2UF K		R11			RD14DB2H100J	SMALL-RD 10 J 1/2W	
C12			CK73GB1H104K	CHIP C 0.10UF K		R12-14			RK73PB2H100J	CHIP R 10 J 1/2W	
C14			CK73GB1H104K	CHIP C 0.10UF K		R15			RD14DB2H100J	SMALL-RD 10 J 1/2W	
C15			CD04AB1C220M	ELECTRO 22UF 16WV		R16			RK73FB2B681J	CHIP R 680 J 1/8W	
C101,102			CK73GB1H103K	CHIP C 0.010UF K		R17			RK73GB2A272J	CHIP R 2.7K J 1/10W	
C202			CC73GCH1H180J	CHIP C 18PF J	KK1	R101			RD14BB2C472J	RD 4.7K J 1/6W	
C203			CC73GCH1H220J	CHIP C 22PF J	KK1	R103			RD14BB2C103J	RD 10K J 1/6W	
C204			CK73GB1H104K	CHIP C 0.10UF K		R104			RK73GB2A473J	CHIP R 47K J 1/10W	
C205			CK73GB1H102K	CHIP C 1000PF K		R105			RK73GB2A104J	CHIP R 100K J 1/10W	
C301,302			CD04AB1HR47M	ELECTRO 0.47UF 50WV		R106			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
C306,307			CK73FB1E474K	CHIP C 0.47UF K		R107			RD14BB2C333J	RD 33K J 1/6W	
C308			CD04AB0J470M	ELECTRO 47UF 6.3WV		R108			RK73GB2A103J	CHIP R 10K J 1/10W	
C309			CK73GB1H103K	CHIP C 0.010UF K		R109			RD14BB2C223J	RD 22K J 1/6W	
C401			CD04AB1C470M	ELECTRO 47UF 16WV		R110			RK73FB2B683J	CHIP R 68K J 1/8W	
C403			CD04AB1H010M	ELECTRO 1.0UF 50WV		R111			RK73GB2A393J	CHIP R 39K J 1/10W	
C404			CK73GB1H103K	CHIP C 0.010UF K	KK1	R112			RD14BB2C203J	RD 20K J 1/6W	
C405			CK73GB1H104K	CHIP C 0.10UF K	KK1	R113			RK73GB2A104J	CHIP R 100K J 1/10W	
C502			CK73GB1H103K	CHIP C 0.010UF K		R114,115			RK73GB2A103J	CHIP R 10K J 1/10W	
C504			CK73GB1H103K	CHIP C 0.010UF K		R116,117			RD14BB2C103J	RD 10K J 1/6W	
C506			CK73GB1H103K	CHIP C 0.010UF K		R201			RK73GB2A473J	CHIP R 47K J 1/10W	KK1
C508			CK73GB1H103K	CHIP C 0.010UF K		R202			RK73GB2A104J	CHIP R 100K J 1/10W	KK1
C509,510			CK73GB1A474K	CHIP C 0.47UF K		R203,204			RK73GB2A103J	CHIP R 10K J 1/10W	
C601,602			CK73FB1E474K	CHIP C 0.47UF K	KK1	R205-207			RK73GB2A473J	CHIP R 47K J 1/10W	
C603		*	CD04AC0J470M	ELECTRO 47UF 6.3WV	KK1	R208			RD14BB2C473J	RD 47K J 1/6W	
C604			CK73GB1H103K	CHIP C 0.010UF K	KK1	R209,210			RD14BB2C471J	RD 470 J 1/6W	
C701,702			CD04AB1V100M	ELECTRO 10UF 35WV		R211,212			RK73GB2A473J	CHIP R 47K J 1/10W	
C703,704			CC73GCH1H681J	CHIP C 680PF J		R218			RK73GB2A223J	CHIP R 22K J 1/10W	
C705,706			CD04AB1V100M	ELECTRO 10UF 35WV	K	R219,220			RD14BB2C104J	RD 100K J 1/6W	KK1
C707,708			CC73GCH1H681J	CHIP C 680PF J	K	R223			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C801-804			C90-6735-05	NP-ELECT 0.22UF 50WV		R225			RK73GB2A473J	CHIP R 47K J 1/10W	K1K3
C805			CD04AB1V100M	ELECTRO 10UF 35WV		R226			RK73GB2A223J	CHIP R 22K J 1/10W	K1K3
C807			CD04AB1H010M	ELECTRO 1.0UF 50WV		R226			RK73GB2A473J	CHIP R 47K J 1/10W	KK2
C808			C90-6802-05	ELECTRO 1UF 50WV		R228			RK73GB2A473J	CHIP R 47K J 1/10W	
C809			CD04AB1H010M	ELECTRO 1.0UF 50WV		R229			RK73GB2A104J	CHIP R 100K J 1/10W	KK1
C901,902			CD04AB1C101M	ELECTRO 100UF 16WV		R301			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C990			CK73GB1H223K	CHIP C 0.022UF K		R302			RD14BB2C101J	RD 100 J 1/6W	
CN2			E41-2581-05	FLAT CABLE CONNECTOR		R303			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN4			E41-2446-05	PIN ASSY	K	R304			RD14BB2C102J	RD 1.0K J 1/6W	
						R305			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K : KDC-MP2035 K1 : KDC-MP235 K2 : KDC-MP205 K3 : KDC-MP235CR
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-463x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R306			RK73GB2A472J	CHIP R 4.7K J 1/10W		R802			RK73GB2A154J	CHIP R 150K J 1/10W	
R307			RK73GB2A222J	CHIP R 2.2K J 1/10W		R804			RK73GB2A331J	CHIP R 330 J 1/10W	
R310-313			RK73GB2A102J	CHIP R 1.0K J 1/10W		R805			RK73GB2A154J	CHIP R 150K J 1/10W	
R314			RK73GB2A104J	CHIP R 100K J 1/10W		R806			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R315			RK73GB2A472J	CHIP R 4.7K J 1/10W		R807			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R316,317			RK73GB2A222J	CHIP R 2.2K J 1/10W		R808			RK73GB2A100J	CHIP R 10 J 1/10W	
R318			RK73GB2A472J	CHIP R 4.7K J 1/10W		R892			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R319			RK73GB2A222J	CHIP R 2.2K J 1/10W		R901,902			RK73GB2A334J	CHIP R 330K J 1/10W	
R320			RK73GB2A472J	CHIP R 4.7K J 1/10W		R903			RK73GB2A153J	CHIP R 15K J 1/10W	
R323			RD14BB2C241J	RD 240 J 1/6W		R904			RK73GB2A223J	CHIP R 22K J 1/10W	
R330			RD14BB2C222J	RD 2.2K J 1/6W		R905,906			RK73GB2A104J	CHIP R 100K J 1/10W	
R331			RK73GB2A473J	CHIP R 47K J 1/10W		R907-914			RD14BB2C104J	RD 100K J 1/6W	
R332			RD14BB2C222J	RD 2.2K J 1/6W		R915			RK73GB2A104J	CHIP R 100K J 1/10W	
R333,334			RD14BB2C102J	RD 1.0K J 1/6W		R951			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R335			RK73GB2A473J	CHIP R 47K J 1/10W		R952			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R336-339			RD14BB2C222J	RD 2.2K J 1/6W		R955			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R340			RK73GB2A225J	CHIP R 2.2M J 1/10W		R958			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1K2K3
R341			RD14BB2C222J	RD 2.2K J 1/6W		R958,959			RK73GB2A000J	CHIP R 0.0 J 1/10W	K
R342			RK73GB2A473J	CHIP R 47K J 1/10W		R962,963			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R343			RD14BB2C102J	RD 1.0K J 1/6W		R964,965			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R344,345			RD14BB2C4R7J	RD 4.7 J 1/6W		R967			RK73GB2A471J	CHIP R 470 J 1/10W	
R346			RD14BB2C2R2J	RD 2.2 J 1/6W		R968-971			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R347			RK73GB2A102J	CHIP R 1.0K J 1/10W		R972			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R402,403			RD14BB2C471J	RD 470 J 1/6W		R973			RK73GB2A000J	CHIP R 0.0 J 1/10W	KK1
R404			RD14BB2C102J	RD 1.0K J 1/6W	KK1						KK1K3
R405			RK73GB2A473J	CHIP R 47K J 1/10W	KK1	D1			S2V60*A	DIODE	
R406			RK73GB2A223J	CHIP R 22K J 1/10W	KK1K2	D2			MTZJ8.2(B)	ZENER DIODE	
R407			RD14BB2C103J	RD 10K J 1/6W	KK1K2	D3			D1F60-5063	DIODE	
R408			RK73GB2A152J	CHIP R 1.5K J 1/10W	KK1K2	D4			1SS133	DIODE	
R409			RK73GB2A392J	CHIP R 3.9K J 1/10W	KK1K2	D7			MTZJ12(B)	ZENER DIODE	
R491,492			RK73GB2A100J	CHIP R 10 J 1/10W	K2K3	D101,102			D1F60-5063	DIODE	
R493			RD14BB2C100J	RD 10 J 1/6W	K2K3	D105			MTZJ4.7(B)	ZENER DIODE	
R501			RK73GB2A471J	CHIP R 470 J 1/10W		D106-108			MTZJ6.8(B)	ZENER DIODE	
R502			RK73GB2A472J	CHIP R 4.7K J 1/10W		D109			1SS133	DIODE	
R503			RK73GB2A471J	CHIP R 470 J 1/10W		D110			MC2848	DIODE	
R504			RK73GB2A472J	CHIP R 4.7K J 1/10W		D301			DA204U	DIODE	
R598			RK73GB2A223J	CHIP R 22K J 1/10W		D304,305			UDZS6.8B	ZENER DIODE	
R599			RK73GB2A102J	CHIP R 1.0K J 1/10W		D306			MTZJ6.8(B)	ZENER DIODE	
R601,602			RD14BB2C100J	RD 10 J 1/6W	KK1	D401			1SS133	DIODE	
R603			RD14BB2C4R7J	RD 4.7 J 1/6W	KK1	D404			1SS133	DIODE	KK1K2
R604			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1	D601-606			MTZJ6.8(B)	ZENER DIODE	KK1
R605			RD14BB2C101J	RD 100 J 1/6W	KK1	D801			MC2848	DIODE	
R606,607			RD14BB2C102J	RD 1.0K J 1/6W	KK1	D803			1SS133	DIODE	
R608,609			RD14BB2C101J	RD 100 J 1/6W	KK1	D901			MTZJ4.7(B)	ZENER DIODE	
R610			RD14BB2C472J	RD 4.7K J 1/6W	KK1	IC1	*		30622MEPB25FP	MICROCONTROLLER IC	K2K3
R611			RD14BB2C101J	RD 100 J 1/6W	KK1	IC1	*		30622MGPB23FP	MICROCONTROLLER IC	KK1
R612			RD14BB2C472J	RD 4.7K J 1/6W	KK1	IC2	*		E-TDA7419	ANALOGUE IC	KK1K2
R701,702			RK73GB2A331J	CHIP R 330 J 1/10W		IC3	*		E-TDA7418	ANALOGUE IC	K3
R703,704			RD14BB2C223J	RD 22K J 1/6W		IC4	*		BD4913-V4	ANALOGUE IC	
R705,706			RD14BB2C181J	RD 180 J 1/6W		IC6	*		KKZ10Z	ANALOGUE IC	
R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	K	IC8			S-80836CNNB-J	MOS-IC	KK1
R709,710			RD14BB2C223J	RD 22K J 1/6W	K	IC9			HEF4053BT	MOS-IC	
R711,712			RD14BB2C181J	RD 180 J 1/6W	K	Q1			UMC2N	TRANSISTOR	
R791,792			RK73GB2A000J	CHIP R 0.0 J 1/10W	K3	Q2			2SB1565	TRANSISTOR	
R793			RK73EB2E000J	CHIP R 0.0 J 1/4W	KK1K2	Q3			2SC4081	TRANSISTOR	

K : KDC-MP2035 K1 : KDC-MP235 K2 : KDC-MP205 K3 : KDC-MP235CR
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-463x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q7			UMC2N	TRANSISTOR	
Q8			2SB1565	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q101-103			2SC4081	TRANSISTOR	
Q104,105			RT1N441M	TRANSISTOR	
Q301			RT1P144M	TRANSISTOR	
Q302			RT1N144M	TRANSISTOR	
Q401			RT1N441M	TRANSISTOR	KK1
Q402			2SC4081	TRANSISTOR	KK1K2
Q701-704			RT1N430M	TRANSISTOR	K
Q701,702			RT1N430M	TRANSISTOR	K1K2K3
Q705			RT1P241M	TRANSISTOR	
Q901			2SC4081	TRANSISTOR	
Q902,903			2SA1576A	TRANSISTOR	
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
A1	2D	*	X86-4030-11	FRONT-END UNIT	
MECHANISM ASSY (X92-5880-00) DXM-6E00W					
1	2B		A10-5328-11	CHASSIS	
2	1B		A10-5329-01	CHASSIS	
5	2B		D10-4910-13	ARM ASSY	
8	2A		D10-4911-03	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-12	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
45	2B		G02-1547-04	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B		J22-0519-03	MOUNTING HARDWARE	
55	1A		J90-1138-31	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (PT2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY (LF)	