



Ez700SR/Ez900HDS

EXPLODED VIEW (CD MECHANISM)

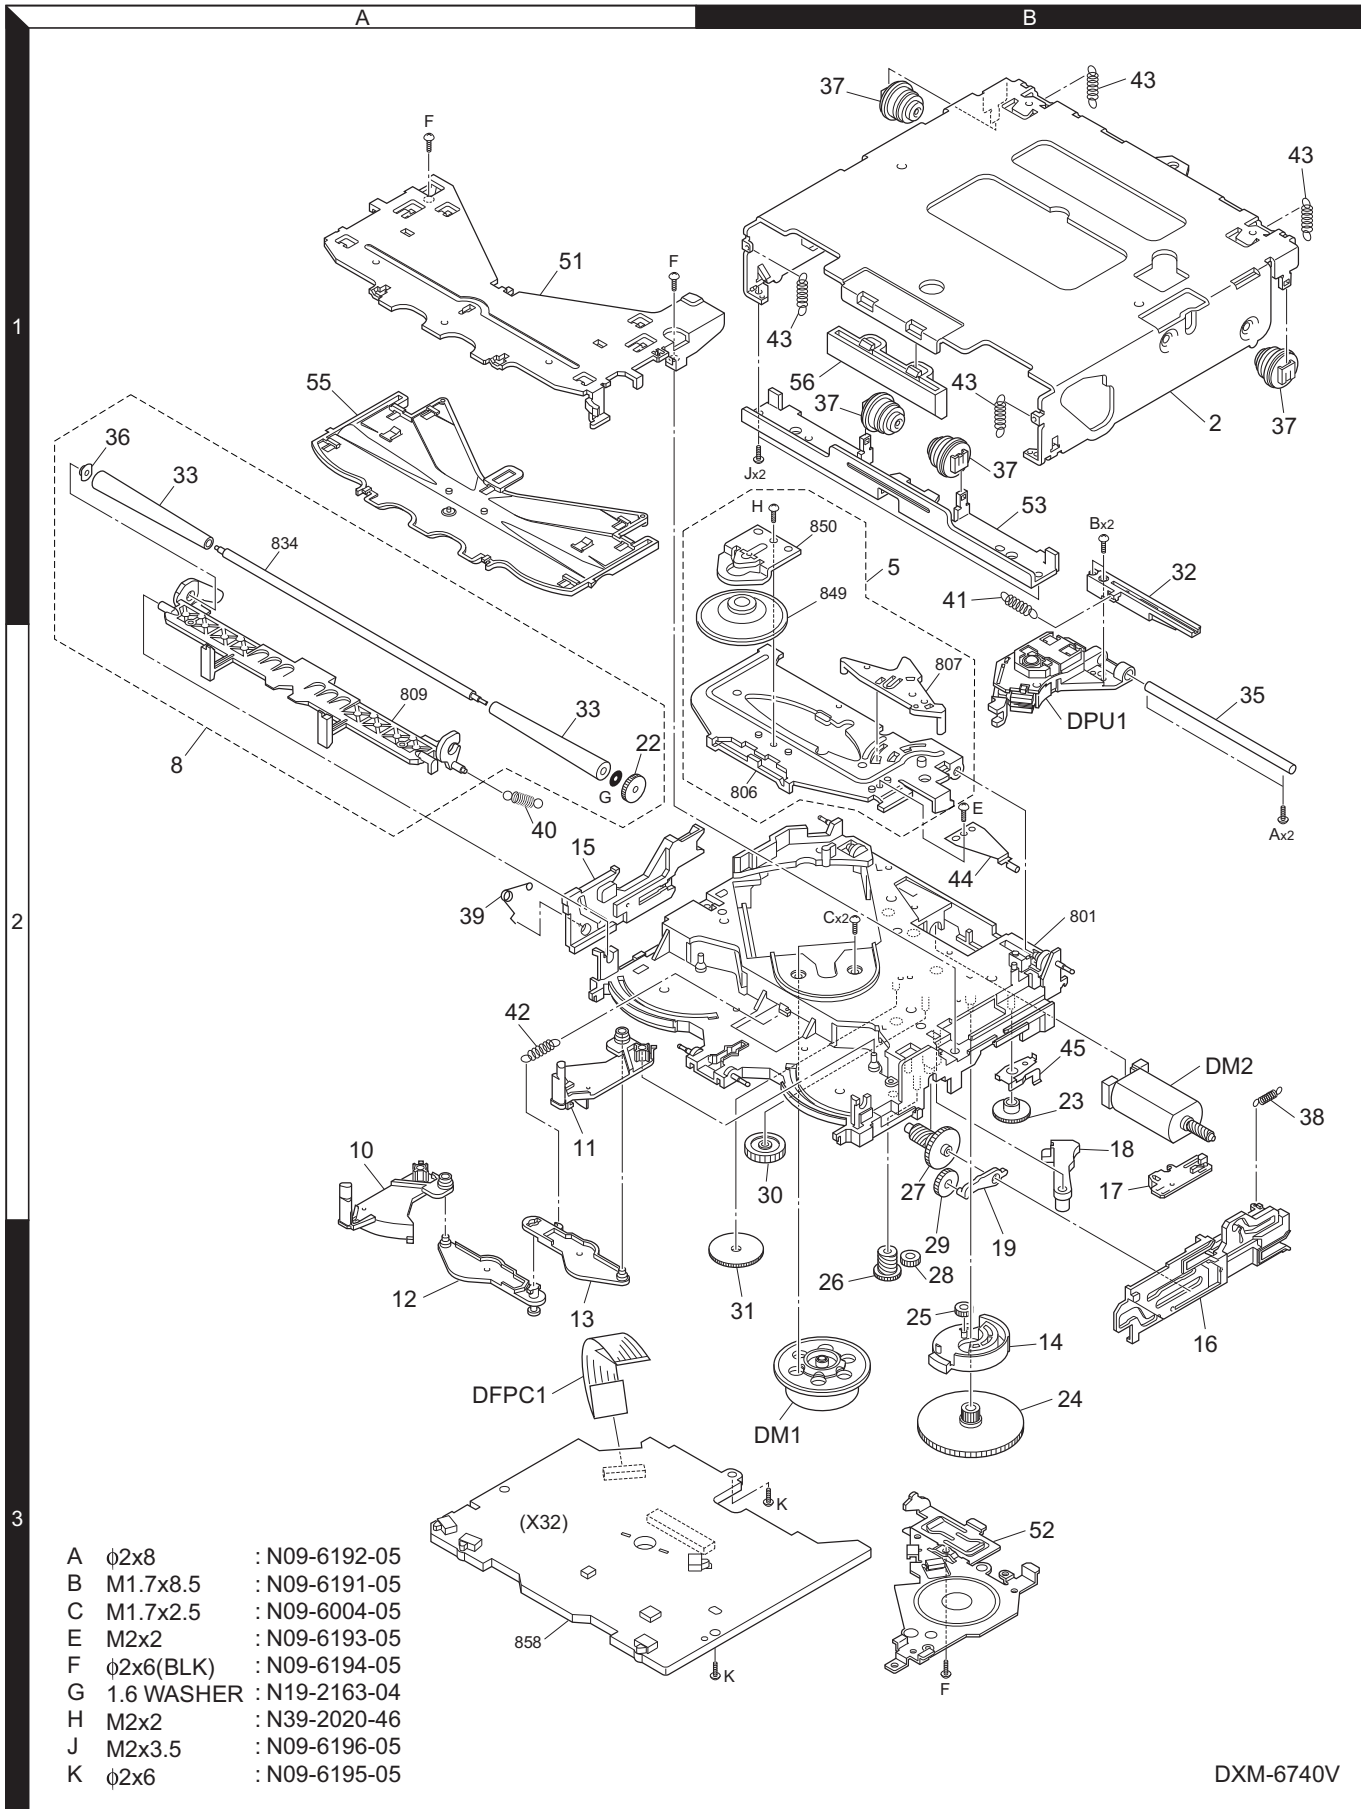

Ez700SR/Ez900HDS

EXPLODED VIEW (UNIT)

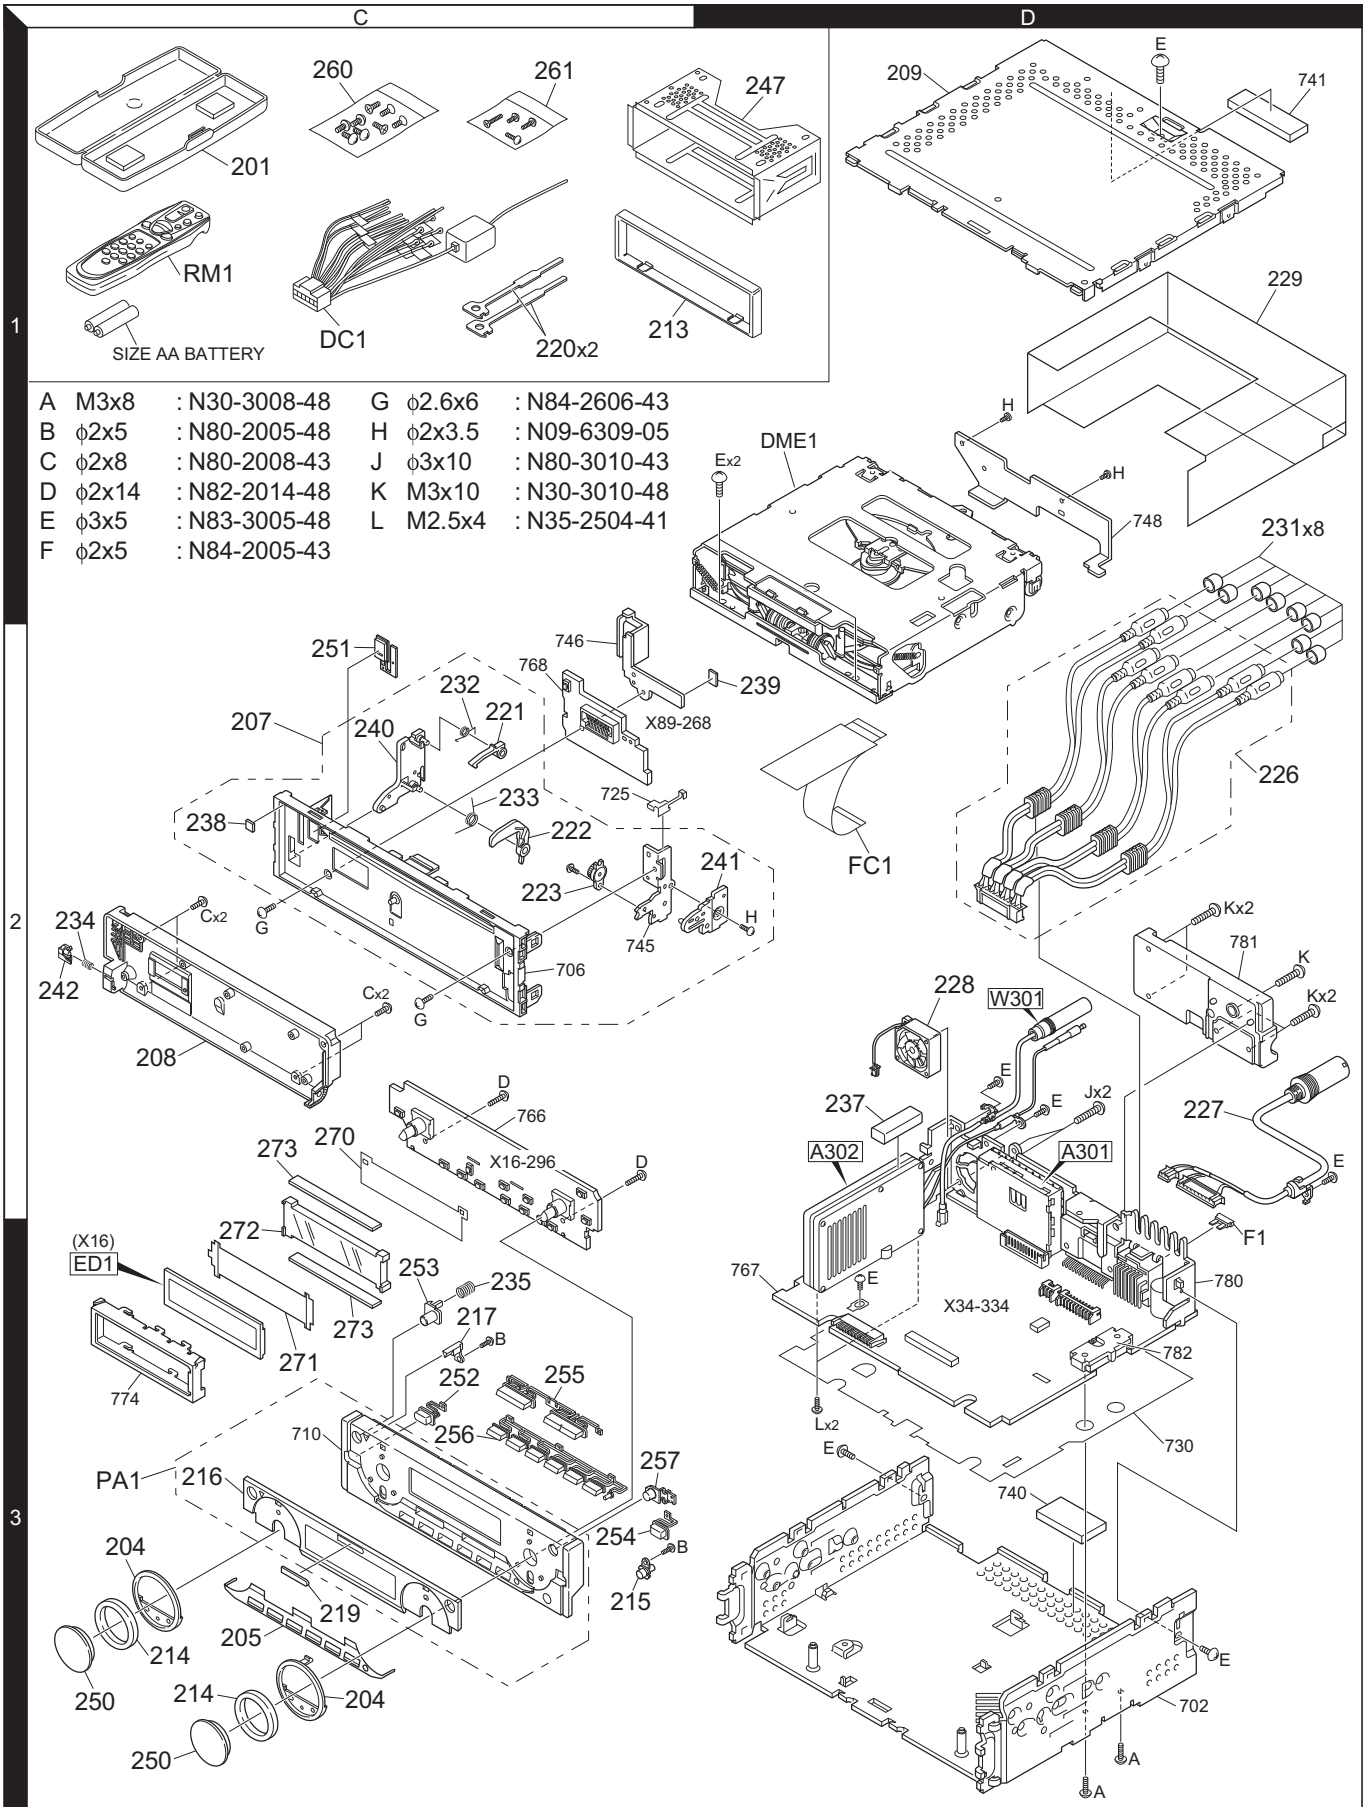

Parts with the exploded numbers larger than 700 are not supplied.

Ez700SR/Ez900HDS

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Ez700SR/Ez900HDS					
201	1C		A02-2735-03	PLASTIC CABINET ASSY	
204	3C		A21-4377-03	DRESSING PANEL (RING)	
205	3C		A21-4378-13	DRESSING PANEL (ALUMINUM)	
207	2C		A22-3061-02	SUB PANEL ASSY	
208	2C		A46-1797-01	REAR COVER	
209	1D	*	A52-0858-02	TOP PLATE	K K1
PA1	3C	*	A64-3386-22	PANEL ASSY	
PA1	3C	*	A64-3417-22	PANEL ASSY	
RM1	1C		A70-2059-05	REMOTE CONTROLLER ASSY (RC-505)	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-		*	B64-3019-00	INSTRUCTI.MANUAL (ENG.FRE.SPA.)	
213	1C		B07-3117-02	ESCUTCHEON	
214	3C		B09-0537-03	CAP	
215	3C		B10-4585-04	FRONT GLASS (REMOTE)	K K1
216	3C	*	B10-4581-02	FRONT GLASS	
216	3C	*	B10-4592-02	FRONT GLASS	
217	3C		B19-2283-04	LIGHTING BOARD	
219	3C		B43-1518-04	BADGE	
220	1C		D10-4589-04	LEVER	
221	2C		D10-4730-03	LEVER (LOCK)	
222	2C		D10-4731-03	LEVER (PUSH)	
223	2C		D39-0255-05	DAMPER	
226	2D	*	E30-6363-05	CORD WITH PINPLUG (RCA, AUX)	
227	2D	*	E30-6370-05	CORD WITH PLUG (13P)	
DC1	1C	*	E30-6364-05	DC CORD	
FC1	2D	*	E39-0734-05	FLAT CABLE (24PIN)	
228	2D	*	F09-1914-05	FAN	
229	1D	*	F09-1978-02	SHEET	
231	1D		F29-0049-05	INSULATING COVER	
F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) (10A)	
232	2C		G01-3171-04	TORSION COIL SPRING (LOCK)	
233	2C		G01-3172-04	TORSION COIL SPRING (PUSH)	
234	2C		G01-3173-04	COMPRESSION SPRING (REAR COVER)	
235	3C		G01-3203-04	COMPRESSION SPRING	
237	2D	*	G11-3644-04	CUSHION	
238	2C		G13-1267-04	CUSHION	
239	2D		G13-1273-04	CUSHION	
-		*	H10-4927-02	POLYSTYRENE FOAMED FIXTURE	K K1
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H25-1213-04	PROTECTION BAG	
-		*	H54-3183-03	ITEM CARTON CASE	
-		*	H54-3232-03	ITEM CARTON CASE	
240	2C		J19-5203-03	HOLDER (LEFT)	
241	2C		J19-5204-03	HOLDER (RIGHT)	
242	2C		J19-5205-03	HOLDER (REAR COVER)	
247	1D		J22-0011-03	MOUNTING HARDWARE ASSY	
250	3C		K23-1091-03	KNOB (VOL)	
251	2C		K24-4000-03	PUSH KNOB (EJECT)	
252	3C		K24-4196-03	PUSH KNOB (AUTO)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	
253	3C	*	K24-4197-14	PUSH KNOB (REL)		
254	3C		K24-4198-03	PUSH KNOB (PLAY)		
255	3C		K25-1671-02	PUSH KNOB (SRC/AM, FM)		
256	3C		K25-1672-02	PUSH KNOB (PRESET)		
257	3C	*	K29-7111-14	KNOB ASSY (DISP ASSY)		
260	1C		N99-1757-05	SCREW SET		
261	1C	*	N99-1764-05	SCREW SET		
A	3D		N30-3008-48	PAN HEAD MACHINE SCREW		
B	3C		N80-2005-48	PAN HEAD TAPTITE SCREW (2X5)		
C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW (2X8)		
D	2C		N82-2014-48	BIND HEAD TAPTITE SCREW (2X14)		
E	1D		N83-3005-48	PAN HEAD TAPTITE SCREW (3X5, B)		
F	2C		N84-2005-43	PAN HEAD TAPTITE SCREW (2X5)		
G	2C		N84-2606-43	PAN HEAD TAPTITE SCREW (2.6X6)		
H	1D	*	N09-6309-05	TAPTITE SCREW		
J	2D		N80-3010-43	PAN HEAD TAPTITE SCREW (3X10)		
DME1	1D	*	X92-5120-00	CD MECHANISM ASSY (DXM-6740V)		
SWITCH UNIT (X16-2960-10)						
270	2C		B11-1463-04	REFLECTION SHEET		
271	3C		B11-1464-04	OPTICAL DIFFUSER		
272	2C		B19-2276-03	LIGHTING BOARD		
D1			B30-1566-05	LED (1608,RED)		
D2,3			B30-1698-05	LED		
ED1			B38-1159-05	LCD		
C1			CK73GB1H102K	CHIP C 1000PF		K
C2-4			CK73GB1C104K	CHIP C 0.10UF		K
C6			CK73GB1H103K	CHIP C 0.010UF		K
C7			CK73FB1A225K	CHIP C 2.2UF		K
C10,11			CK73GB1H103K	CHIP C 0.010UF		K
273	2C		E29-2015-04	CONDUCTIVE RUBBER		
J1			E59-0843-05	RECTANGULAR PLUG		
CP1			R90-0714-05	MULTI-COMP		10K X4
CP2			R90-1016-05	MULTI-COMP		470 X4
CP3,4			R90-0724-05	MULTI-COMP		1K X4
R1			RK73GB2A303J	CHIP R 30K	J 1/10W	
R2-5			RK73GB2A222J	CHIP R 2.2K	J 1/10W	
R6			RK73GB2A473J	CHIP R 47K	J 1/10W	
R7			RK73GB2A472J	CHIP R 4.7K	J 1/10W	
R8			RK73GB2A4R7J	CHIP R 4.7	J 1/10W	
R9			RK73GB2A471J	CHIP R 470	J 1/10W	
R10			RK73GB2A101J	CHIP R 100	J 1/10W	
R11			RK73GB2A102J	CHIP R 1.0K	J 1/10W	
R12			RK73GB2A222J	CHIP R 2.2K	J 1/10W	
R14			RK73GB2A222J	CHIP R 2.2K	J 1/10W	
R16			RK73GB2A102J	CHIP R 1.0K	J 1/10W	
R21			RK73FB2B561J	CHIP R 560	J 1/8W	
R22-25			RK73FB2B331J	CHIP R 330	J 1/8W	
R31			RK73FB2B271J	CHIP R 270	J 1/8W	
R32,33			RK73GB2A472J	CHIP R 4.7K	J 1/10W	
S2-13			S70-0856-05	TACT SWITCH		
S14			S70-0901-05	TACT SWITCH		
S15			S68-0888-05	PUSH SWITCH		

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-2960-10)

Ref. No.	Added	New	Parts No.	Description	Destination
S1			T99-0454-05	ROTARY ENCODER	
D21		*	MAZS0820L	ZENER DIODE	
D22-29			UDZS6.2B	ZENER DIODE	
IC1			LC75808W-E	MOS-IC	
IC2			RS-171	ANALOGUE IC	
Q2			DTA114EE	DIGITAL TRANSISTOR	
Q3-5			2SC4617	TRANSISTOR	
CD PLAYER UNIT (X32-5540-02)					
C1,2			CK73GB1H222K	CHIP C 2200PF K	
C3,4			CK73GB0J105K	CHIP C 1.0UF K	
C5			CK73GB1C104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7-9			CK73GB0J105K	CHIP C 1.0UF K	
C10-15			CK73GB1C104K	CHIP C 0.10UF K	
C16			CK73FB0J475K	CHIP C 4.7UF K	
C17			CK73FB0J106M	CHIP C 10UF M	
C18			CK73GB1C104K	CHIP C 0.10UF K	
C19			CK73FB0J475K	CHIP C 4.7UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C22,23			CK73GB0J105K	CHIP C 1.0UF K	
C24-27			CK73GB1C104K	CHIP C 0.10UF K	
C28			CK73FB0J106M	CHIP C 10UF M	
C29			CK73GB1C104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32,33			CK73GB1C104K	CHIP C 0.10UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1C104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73GB1A334K	CHIP C 0.33UF K	
C42-45			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1C104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1C104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	
C52			CK73FB1A225K	CHIP C 2.2UF K	
C53			CK73GB0J105K	CHIP C 1.0UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CK73GB1H331K	CHIP C 330PF K	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59,60			CK73GB1H152K	CHIP C 1500PF K	
C61,62			CK73GB1H102K	CHIP C 1000PF K	
C63			CK73GB1H152K	CHIP C 1500PF K	
C64			CK73GB1C104K	CHIP C 0.10UF K	
C66			CC73GCH1H120J	CHIP C 12PF J	
C67			CC73GCH1H180J	CHIP C 18PF J	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73FB1A225K	CHIP C 2.2UF K	

Ref. No.	Added	New	Parts No.	Description	Destination
C70			CK73FB1A105K	CHIP C 1.0UF K	
C71			CK73FB0J106M	CHIP C 10UF M	
C72			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2083-05	FLAT CABLE CONNECTOR	
CN2			E41-2068-05	FLAT CABLE CONNECTOR	
CN2			E41-2085-15	FLAT CABLE CONNECTOR	
L1,2			L92-0386-05	CHIP FERRITE	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
X2			L78-0896-05	RESONATOR (16.00MHZ)	
CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP6			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP8			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP9			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP13,14			RK74GB1J104J	CHIP-COM 100K J 1/16W	
CP15			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP16			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73GB2A100J	CHIP R 10 J 1/10W	
R2			R92-3494-05	CHIP R 5.6 F 1/2W	
R3,4			RK73FB2B331J	CHIP R 330 J 1/8W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RN73GH1J223D	CHIP R 22K D 1/16W	
R7			RK73GB2A104J	CHIP R 100K J 1/10W	
R8			RN73GH1J393D	CHIP R 39K D 1/16W	
R9			RK73GB2A104J	CHIP R 100K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11,12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14-17			RK73GB2A104J	CHIP R 100K J 1/10W	
R18			RK73GB2A101J	CHIP R 100 J 1/10W	
R21-23			RK73GB2A103J	CHIP R 10K J 1/10W	
R24,25			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R27			RK73GB2A104J	CHIP R 100K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31-33			RK73GB2A104J	CHIP R 100K J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A221J	CHIP R 220 J 1/10W	
R39			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R40			RK73GB2A394J	CHIP R 390K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R47			RK73GB2A104J	CHIP R 100K J 1/10W	

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.

Ez700SR/Ez900HDS

PARTS LIST

CD PLAYER UNIT (X32-5540-02)

Ref. No.	Add	New	Parts No.	Description	Destination
R48,49 R50 R51 R52 R53			RK73GB2A331J RK73GB2A101J RK73GB2A392J RK73GB2A163J RK73GB2A123J	CHIP R 330 J 1/10W CHIP R 100 J 1/10W CHIP R 3.9K J 1/10W CHIP R 16K J 1/10W CHIP R 12K J 1/10W	
R54 R55 R56 R57,58 R59			RK73GB2A333J RK73GB2A103J RK73GB2A123J RK73GB2A133J RK73GB2A472J	CHIP R 33K J 1/10W CHIP R 10K J 1/10W CHIP R 12K J 1/10W CHIP R 13K J 1/10W CHIP R 4.7K J 1/10W	
R60 R61 R62 R63 R64			RK73GB2A123J RK73GB2A183J RK73GB2A432J RK73GB2A133J RK73GB2A151J	CHIP R 12K J 1/10W CHIP R 18K J 1/10W CHIP R 4.3K J 1/10W CHIP R 13K J 1/10W CHIP R 150 J 1/10W	
R65 R66 R67 R68,69 R70			RK73GB2A104J RK73GB2A472J RK73GB2A222J RK73GB2A104J RK73GB2A102J	CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	
R103			RK73GB2A750J	CHIP R 75 J 1/10W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D2 D3 IC1 IC2 IC3		*	DA204U DAN202U 91CW12AFG-5NJ2 UPD63712GC TC94A20F-010	DIODE DIODE MICROCONTROLLER IC MOS-IC MOS-IC	
IC4 IC5 IC5 IC6 IC6			BA5824FP NJM2880U133 NJM2880U33 S-1112B33MCG XC6219B332MR	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC7 IC7 IC8 IC9 Q1			S-1112B25MCG XC6219B252MR TC7SH08FU TAR5S33-F 2SK3018	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC FET	
Q3 Q4 Q5 Q6 Q7			UMD9N 2SK3018 UMD9N UMD12N DTC124EUA	TRANSISTOR FET TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q8 Q9,10			2SB0970 DTC114YUA	TRANSISTOR DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3340-1x)					
D502			B30-1567-05	LED (1608, RED)	K
C1 C2 C3 C5 C6			CK73FB1C474K CD04AS1A470M CK73FB1C474K CK73GB1H103K CK73GB1A105K	CHIP C 0.47UF K ELECTRO 47UF 10WV CHIP C 0.47UF K CHIP C 0.010UF K CHIP C 1.0UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C7-12 C13 C14,15 C16 C17			CK73EB1A106K CK73GB1A105K CK73FB1C474K CK73GB1C104K CK73FB1C474K	CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.47UF K CHIP C 0.10UF K CHIP C 0.47UF K	
C18 C19 C20 C21 C22			CD04AS1A470M CK73FB1C474K CK73GB1C104K CD04BA1C100M CK73GB1A105K	ELECTRO 47UF 10WV CHIP C 0.47UF K CHIP C 0.10UF K ELECTRO 10UF 16WV CHIP C 1.0UF K	
C23-26 C27,28 C29 C30 C31			C90-5684-05 CK73GB1A105K CK73GB1H103K CD04AZ1E222M CK73GB1C104K	ELECTRO 0.22UF 50WV CHIP C 1.0UF K CHIP C 0.010UF K ELECTRO 2200UF 25WV CHIP C 0.10UF K	
C34-36 C101 C102 C103 C104			CK73GB1H103K CK73GB1H103K CK73GB1C104K CC73GCH1H220J CC73GCH1H270J	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 22PF J CHIP C 27PF J	
C105 C106 C107 C108-113 C114			CK73GB1A105K CK73GB1H103K CK73GB1C104K CK73GB1H103K CK73GB1C104K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C115 C201 C202 C203 C204		*	CK73GB1H103K CD04AJ1C101M CD04BJ1E470M CK73EB1A106K C90-5647-05	CHIP C 0.010UF K ELECTRO 100UF 16WV ELECTRO 47UF 25WV CHIP C 10UF K ELECTRO 0.047F 5.5WV	
C205 C206,207 C208 C209 C210,211		*	CK73GB1A224K CC73GCH1H221J CK73GB1A224K CD04AJ1C101M CK73GB1H103K	CHIP C 0.22UF K CHIP C 220PF J CHIP C 0.22UF K ELECTRO 100UF 16WV CHIP C 0.010UF K	
C212,213 C214 C215,216 C217 C218,219		*	CK73GB1C104K CD04BA1C100M CD04AY1E100M CK73GB1H103K CK73GB1C104K	CHIP C 0.10UF K ELECTRO 10UF 16WV ELECTRO 10UF 25WV CHIP C 0.010UF K CHIP C 0.10UF K	
C220 C221 C222 C223 C224		*	CK73GB1A105K CK73GB1C104K CD04BA0J470M CK73GB1C104K CK73GB1H103K	CHIP C 1.0UF K CHIP C 0.10UF K ELECTRO 47UF 6.3WV CHIP C 0.10UF K CHIP C 0.010UF K	
C225,226 C227 C228 C229 C230			CK73GB1C104K CK73GB1H103K CK73GB1C104K CK73GB1H103K CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C231 C232 C233 C234 C235-237		*	CK73GB1A224K CK73GB1H103K CK73GB1A105K CD04BF1A221M CD04BK0J331M	CHIP C 0.22UF K CHIP C 0.010UF K CHIP C 1.0UF K ELECTRO 220UF 10WV ELECTRO 330UF 6.3WV	

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3340-1x)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C238			CK73GB1H103K	CHIP C 0.010UF K		C342,343			CK73GB1H222K	CHIP C 2200PF K	
C239			CK73GB1C104K	CHIP C 0.10UF K		C344			CC73GCH1H180J	CHIP C 18PF J	K
C240		*	CD04BA0J470M	ELECTRO 47UF 6.3WV		C345-367			CK73GB1C104K	CHIP C 0.10UF K	K
C241			CK73EB1A106K	CHIP C 10UF K		C368			CC73GCH1H180J	CHIP C 18PF J	K
C242		*	CD04BK0J331M	ELECTRO 330UF 6.3WV		C369			CK73GB1H103K	CHIP C 0.010UF K	K
C243			CK73GB1C104K	CHIP C 0.10UF K		C370			CK73GB1A105K	CHIP C 1.0UF K	
C244			CK73EB1A106K	CHIP C 10UF K		C372			CK73GB1A105K	CHIP C 1.0UF K	
C245			CK73GB1H103K	CHIP C 0.010UF K	K	C373			CC73GCH1H101J	CHIP C 100PF J	
C246		*	CD04BH1C330M	ELECTRO 33UF 16WV		C374			CK73GB1H103K	CHIP C 0.010UF K	
C247,248		*	CD04AJ1C101M	ELECTRO 100UF 16WV		C375-382			CC73GCH1H101J	CHIP C 100PF J	
C250,251		*	CD04BA0J470M	ELECTRO 47UF 6.3WV	K	C383-385			CK73GB1C104K	CHIP C 0.10UF K	K
C251		*	CD04BA0J470M	ELECTRO 47UF 6.3WV	K1	C386			CK73GB1A105K	CHIP C 1.0UF K	
C252			CK73GB1H103K	CHIP C 0.010UF K		C387			CK73GB1H103K	CHIP C 0.010UF K	
C254		*	CD04BA0J470M	ELECTRO 47UF 6.3WV		C388-390			CK73GB1H102K	CHIP C 1000PF K	
C255			CD04BF1E101M	ELECTRO 100UF 25WV		C401,402			CK73GB1H103K	CHIP C 0.010UF K	
C256			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		C403,404			CK73GB1A474K	CHIP C 0.47UF K	
C257,258			CK73GB1C104K	CHIP C 0.10UF K		C405			CK73GB1H103K	CHIP C 0.010UF K	
C259		*	CD04BA0J470M	ELECTRO 47UF 6.3WV	K1	C406-410			CK73GB1C104K	CHIP C 0.10UF K	
C259,260		*	CD04BA0J470M	ELECTRO 47UF 6.3WV	K	C413			CK73GB1H103K	CHIP C 0.010UF K	
C261		*	CD04AJ1C101M	ELECTRO 100UF 16WV		C414,415			CK73GB1A105K	CHIP C 1.0UF K	
C263,264			CK73GB1H103K	CHIP C 0.010UF K		C416-419			CK73GB1C104K	CHIP C 0.10UF K	
C265			CC73GCH1H101J	CHIP C 100PF J		C420			CD04AS1A470M	ELECTRO 47UF 10WV	
C266			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		C421,422			CK73GB1A105K	CHIP C 1.0UF K	
C267-269			CK73GB1H103K	CHIP C 0.010UF K		C423			CC73GCH1H470J	CHIP C 47PF J	
C270		*	CD04BF1A221M	ELECTRO 220UF 10WV		C424,425			CK73FB1C474K	CHIP C 0.47UF K	
C271			CK73EB1A106K	CHIP C 10UF K		C426,427			CK73GB1A105K	CHIP C 1.0UF K	
C272			CK73GB1A105K	CHIP C 1.0UF K		C428			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C278			CK73GB1C104K	CHIP C 0.10UF K		C431,432			CK73GB1H103K	CHIP C 0.010UF K	K
C279			CK73GB1H104K	CHIP C 0.10UF K		C433,434			CK73GB1A105K	CHIP C 1.0UF K	
C280-282			CK73GB1C104K	CHIP C 0.10UF K		C501			CK73GB1H103K	CHIP C 0.010UF K	
C301			CC73GCH1H101J	CHIP C 100PF J		C502			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C302			CK73GB1C104K	CHIP C 0.10UF K		C503,504			CK73GB1H103K	CHIP C 0.010UF K	
C303,304			CC73GCH1H150J	CHIP C 15PF J		C505,506			CK73GB1C104K	CHIP C 0.10UF K	
C306-310			CK73GB1C104K	CHIP C 0.10UF K		C507			CK73GB1H103K	CHIP C 0.010UF K	
C311,312			CC73GCH1H101J	CHIP C 100PF J		C508,509			CK73GB1C104K	CHIP C 0.10UF K	
C313			CK73GB1H102K	CHIP C 1000PF K		C510			CC73GCH1H221J	CHIP C 220PF J	K
C314			CC73GCH1H470J	CHIP C 47PF J		CN1			E41-0927-05	PIN ASSY	
C315			CK73GB1A105K	CHIP C 1.0UF K		CN2	*		E41-0937-05	PIN ASSY	
C316			CK73GB1H103K	CHIP C 0.010UF K		CN3	*		E41-2231-05	PIN ASSY	
C317			CD04AS1A470M	ELECTRO 47UF 10WV		CN4			E41-2083-05	FLAT CABLE CONNECTOR	
C318-320			CK73GB1H103K	CHIP C 0.010UF K		CN6	*		E41-0949-05	PIN ASSY	
C321			CD04AS1A470M	ELECTRO 47UF 10WV		CN7			E41-0942-05	PIN ASSY	
C322-324			CK73GB1H103K	CHIP C 0.010UF K		J1	*		E58-1003-05	RECTANGULAR RECEPTACLE	
C325			CK73GB1A105K	CHIP C 1.0UF K		W301	*		E30-6386-05	CORD WITH PLUG (ANT)	
C326			CK73GB1C104K	CHIP C 0.10UF K		L201-204	*		L33-1986-05	CHOKE COIL	
C327			CK73GB1H103K	CHIP C 0.010UF K		L301	*		L41-1095-33	SMALL FIXED INDUCTOR	
C328			CK73GB1C104K	CHIP C 0.10UF K		L303-306			L92-0376-05	CHIP FERRITE	
C329,330			CK73GB1A105K	CHIP C 1.0UF K		L307-309			L41-2285-33	SMALL FIXED INDUCTOR	
C331			CK73GB1H103K	CHIP C 0.010UF K		L310,311			L41-4795-33	SMALL FIXED INDUCTOR	
C332			CK73GB1A105K	CHIP C 1.0UF K		L401			L41-4795-33	SMALL FIXED INDUCTOR	
C333,334			CK73GB1H103K	CHIP C 0.010UF K		X101			L77-2880-05	CRYSTAL RESONATOR	
C335,336			CK73GB1A105K	CHIP C 1.0UF K		X102			L78-0821-05	RESONATOR	
C337,338			CK73GB1H103K	CHIP C 0.010UF K		X301	*		L77-2885-05	CRYSTAL RESONATOR (41.6M)	
C339		*	CD04BK0J331M	ELECTRO 330UF 6.3WV		X302	*		L77-2888-05	CRYSTAL RESONATOR (28.224M)	K
C340,341			CK73GB1H103K	CHIP C 0.010UF K							

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.

Ez700SR/Ez900HDS

PARTS LIST

ELECTRIC UNIT (X34-3340-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
X501			L78-0868-05	RESONATOR (5.00MHZ)	
K	2D	*	N30-3010-48	PAN HEAD MACHINE SCREW	
L	3D	*	N35-2504-41	BINDING HEAD MACHINE SCREW	
R1-8			RK73EB2E181J	CHIP R 180 J 1/4W	
R9-14			RK73GB2A223J	CHIP R 22K J 1/10W	
R15-20			RK73FB2B391J	CHIP R 390 J 1/8W	
R21			RK73GB2A473J	CHIP R 47K J 1/10W	
R22			RK73EB2E101J	CHIP R 100 J 1/4W	
R23			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R24			RK73EB2E101J	CHIP R 100 J 1/4W	
R25			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R26			RK73EB2E101J	CHIP R 100 J 1/4W	
R27-29			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R30			RK73EB2E100J	CHIP R 10 J 1/4W	
R31			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R32			RK73EB2E100J	CHIP R 10 J 1/4W	
R33			RK73GB2A154J	CHIP R 150K J 1/10W	
R34			RK73GB2A104J	CHIP R 100K J 1/10W	
R39			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R40			RK73GB2A100J	CHIP R 10 J 1/10W	
R41			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R42			RK73GB2A104J	CHIP R 100K J 1/10W	
R43,44			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R45			RK73GB2A473J	CHIP R 47K J 1/10W	
R46,47			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R48			RK73GB2A331J	CHIP R 330 J 1/10W	
R49			RK73GB2A104J	CHIP R 100K J 1/10W	
R50			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W	
R52			RK73GB2A103J	CHIP R 10K J 1/10W	
R53			RK73GB2A6R8J	CHIP R 6.8 J 1/10W	
R57			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R58,59			RK73GH2A103D	CHIP R 10K D 1/10W	
R60			RK73GH2A272D	CHIP R 2.7K D 1/10W	
R101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R102			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R103			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R104			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R105			RK73GB2A101J	CHIP R 100 J 1/10W	
R106			RK73GB2A474J	CHIP R 470K J 1/10W	
R107			RK73GB2A104J	CHIP R 100K J 1/10W	
R108			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R109			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R110,111			RK73GB2A471J	CHIP R 470 J 1/10W	
R112			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R113,114			RK73GB2A101J	CHIP R 100 J 1/10W	
R115			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R116,117			RK73GB2A474J	CHIP R 470K J 1/10W	
R118			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R119			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R120,121			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R122-124			RK73GB2A104J	CHIP R 100K J 1/10W	
R125			RK73GB2A103J	CHIP R 10K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R126			RK73GB2A183J	CHIP R 18K J 1/10W	
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R128,129			RK73GB2A103J	CHIP R 10K J 1/10W	
R131			RK73GB2A101J	CHIP R 100 J 1/10W	
R132			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R133			RK73GB2A104J	CHIP R 100K J 1/10W	
R134			RK73GB2A154J	CHIP R 150K J 1/10W	
R135			RK73GB2A103J	CHIP R 10K J 1/10W	
R136-140			RK73GB2A104J	CHIP R 100K J 1/10W	
R142,143			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R144			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R145			RK73GB2A104J	CHIP R 100K J 1/10W	
R146,147			RK73GB2A471J	CHIP R 470 J 1/10W	
R148			RK73GB2A104J	CHIP R 100K J 1/10W	
R149			RK73GB2A473J	CHIP R 47K J 1/10W	
R150-152			RK73GB2A471J	CHIP R 470 J 1/10W	
R153			RK73GB2A104J	CHIP R 100K J 1/10W	
R154-156			RK73GB2A101J	CHIP R 100 J 1/10W	
R157-159			RK73GB2A104J	CHIP R 100K J 1/10W	
R165			RK73GB2A101J	CHIP R 100 J 1/10W	
R167			RK73GB2A101J	CHIP R 100 J 1/10W	
R168			RK73GB2A104J	CHIP R 100K J 1/10W	
R170			RK73GB2A104J	CHIP R 100K J 1/10W	
R173,174			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R175			RK73GB2A101J	CHIP R 100 J 1/10W	
R201			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R202			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R203			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R205			RK73GB2A100J	CHIP R 10 J 1/10W	
R206		*	RK73PB2H220J	CHIP R 22 J 1/2W	
R207			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R208			RK73EB2E1R0J	CHIP R 1.0 J 1/4W	
R209			RK73GB2A473J	CHIP R 47K J 1/10W	
R210			RK73GB2A101J	CHIP R 100 J 1/10W	
R211			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R212			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R213			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R214-217			RK73GB2A103J	CHIP R 10K J 1/10W	
R218			RK73GH2A103D	CHIP R 10K D 1/10W	
R219			RK73GH2A202D	CHIP R 2.0K D 1/10W	
R220			RK73GB2A101J	CHIP R 100 J 1/10W	
R221			RK73GB2A104J	CHIP R 100K J 1/10W	
R222			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R223			RK73GH2A202D	CHIP R 2.0K D 1/10W	
R224			RK73GH2A103D	CHIP R 10K D 1/10W	
R225			RK73GB2A470J	CHIP R 47 J 1/10W	
R226,227			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R228			RK73GH2A752D	CHIP R 7.5K D 1/10W	
R229			RK73GB2A153J	CHIP R 15K J 1/10W	
R230			RK73GB2A473J	CHIP R 47K J 1/10W	
R231			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R232			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R233,234			RK73GB2A471J	CHIP R 470 J 1/10W	
R235			RK73GB2A470J	CHIP R 47 J 1/10W	

K : Ez900HDS K1 : Ez700SR

(K : North America)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3340-1x)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R236			RK73GH2A103D	CHIP R 10K D 1/10W		R320			RK73GB2A103J	CHIP R 10K J 1/10W	
R237-239			RK73GB2A473J	CHIP R 47K J 1/10W		R321			RK73GB2A102J	CHIP R 1.0K J 1/10W	K
R240		*	RK73EB2E682J	CHIP R 6.8K J 1/4W		R322,323			RK73GB2A103J	CHIP R 10K J 1/10W	K
R241			RK73GB2A222J	CHIP R 2.2K J 1/10W		R324,325			RK73GB2A104J	CHIP R 100K J 1/10W	
R242			RK73GB2A101J	CHIP R 100 J 1/10W		R326,327			RK73GB2A101J	CHIP R 100 J 1/10W	
R243			RK73GB2A222J	CHIP R 2.2K J 1/10W		R329			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R244			RK73GB2A473J	CHIP R 47K J 1/10W	K	R330,331			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R245			RK73GB2A182J	CHIP R 1.8K J 1/10W		R332			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R246			RK73GB2A473J	CHIP R 47K J 1/10W	K	R333-335			RK73GB2A101J	CHIP R 100 J 1/10W	K
R247			RK73GB2A223J	CHIP R 22K J 1/10W		R336			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R248			RK73GB2A101J	CHIP R 100 J 1/10W	K	R337,338			RK73GB2A101J	CHIP R 100 J 1/10W	K
R250			RK73GB2A102J	CHIP R 1.0K J 1/10W	K	R340,341			RK73GB2A103J	CHIP R 10K J 1/10W	K
R251			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R342			RK73GB2A102J	CHIP R 1.0K J 1/10W	K
R253			RK73GH2A103D	CHIP R 10K D 1/10W		R345-350			RK73GB2A104J	CHIP R 100K J 1/10W	
R254			RK73GH2A202D	CHIP R 2.0K D 1/10W		R351			RK73GB2A100J	CHIP R 10 J 1/10W	K
R255			RK73GB2A182J	CHIP R 1.8K J 1/10W		R352			RK73GB2A103J	CHIP R 10K J 1/10W	
R256			RK73GB2A124J	CHIP R 120K J 1/10W		R353			RK73GB2A221J	CHIP R 220 J 1/10W	
R257			RK73FB2B102J	CHIP R 1.0K J 1/8W		R402-404			RK73GB2A101J	CHIP R 100 J 1/10W	
R258			RK73GB2A473J	CHIP R 47K J 1/10W		R405			RK73GB2A104J	CHIP R 100K J 1/10W	
R259		*	RK73EB2E682J	CHIP R 6.8K J 1/4W		R406,407			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R260			RK73EB2E103J	CHIP R 10K J 1/4W		R408			RK73GB2A103J	CHIP R 10K J 1/10W	
R261			RK73FB2B333J	CHIP R 33K J 1/8W		R414-418			RK73GB2A333J	CHIP R 33K J 1/10W	
R262			RK73FB2B472J	CHIP R 4.7K J 1/8W		R419,420			RK73GB2A103J	CHIP R 10K J 1/10W	
R263			RK73GB2A561J	CHIP R 560 J 1/10W		R421			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R264			RK73GB2A333J	CHIP R 33K J 1/10W		R422			RK73GB2A333J	CHIP R 33K J 1/10W	
R265			RK73GB2A104J	CHIP R 100K J 1/10W		R425			RK73GB2A103J	CHIP R 10K J 1/10W	
R266			RK73GB2A153J	CHIP R 15K J 1/10W		R426-428			RK73GB2A101J	CHIP R 100 J 1/10W	K
R267			RK73GB2A104J	CHIP R 100K J 1/10W		R426,427			RK73GB2A101J	CHIP R 100 J 1/10W	K1
R268,269			RK73GB2A223J	CHIP R 22K J 1/10W		R429			RK73GH2A183D	CHIP R 18K D 1/10W	K
R270			RK73GB2A104J	CHIP R 100K J 1/10W		R501			RK73GB2A103J	CHIP R 10K J 1/10W	
R271			RK73GB2A223J	CHIP R 22K J 1/10W		R502			RK73GB2A183J	CHIP R 18K J 1/10W	
R272			RK73EB2E103J	CHIP R 10K J 1/4W		R504-506			RK73GB2A104J	CHIP R 100K J 1/10W	
R273			RK73GH2A472D	CHIP R 4.7K D 1/10W		R510			RK73GB2A473J	CHIP R 47K J 1/10W	
R274			RK73GH2A103D	CHIP R 10K D 1/10W		R511			RK73GB2A104J	CHIP R 100K J 1/10W	
R275			RK73GH2A472D	CHIP R 4.7K D 1/10W		R512			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R276			RK73GH2A103D	CHIP R 10K D 1/10W		R513			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R277			RK73GB2A100J	CHIP R 10 J 1/10W		R519-522			RK73GB2A473J	CHIP R 47K J 1/10W	
R278,279		*	RK73SB3A1R0J	CHIP R 1.0 J 1W		R526,527			RK73GB2A101J	CHIP R 100 J 1/10W	
R280,281			RK73GB2A100J	CHIP R 10 J 1/10W		R528			RK73GB2A104J	CHIP R 100K J 1/10W	
R282		*	RK73SB3A1R0J	CHIP R 1.0 J 1W		R529			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R285			RK73GB2A222J	CHIP R 2.2K J 1/10W		R530			RK73GB2A103J	CHIP R 10K J 1/10W	
R286-288			RK73GB2A473J	CHIP R 47K J 1/10W		R534			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R289			RK73GB2A102J	CHIP R 1.0K J 1/10W		R535			RK73GB2A101J	CHIP R 100 J 1/10W	K
R290,291			RK73GH2A152D	CHIP R 1.5K D 1/10W		R536			RK73GB2A104J	CHIP R 100K J 1/10W	
R292			RK73GB2A472J	CHIP R 4.7K J 1/10W		R537,538			RK73GB2A101J	CHIP R 100 J 1/10W	
R293			RK73GB2A473J	CHIP R 47K J 1/10W		R539			RK73GB2A104J	CHIP R 100K J 1/10W	
R301-309			RK73GB2A101J	CHIP R 100 J 1/10W		R540,541			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R310,311			RK73GB2A103J	CHIP R 10K J 1/10W		R542			RK73GB2A104J	CHIP R 100K J 1/10W	
R312			RK73GB2A333J	CHIP R 33K J 1/10W		R543			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R313			RK73GB2A472J	CHIP R 4.7K J 1/10W		R545,546			RK73GB2A104J	CHIP R 100K J 1/10W	
R314,315			RK73GB2A103J	CHIP R 10K J 1/10W	K	R547			RK73GB2A101J	CHIP R 100 J 1/10W	K
R316			RK73GB2A101J	CHIP R 100 J 1/10W		R548			RK73GB2A104J	CHIP R 100K J 1/10W	
R317			RK73GB2A104J	CHIP R 100K J 1/10W		R549			RK73GB2A101J	CHIP R 100 J 1/10W	K
R318			RK73GB2A101J	CHIP R 100 J 1/10W		R550			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R319			RK73GB2A104J	CHIP R 100K J 1/10W		R551			RK73GB2A471J	CHIP R 470 J 1/10W	K

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.

Ez700SR/Ez900HDS

PARTS LIST

ELECTRIC UNIT (X34-3340-1x)

Ref. No.	Add	New	Parts No.	Description	Destination
R552 R553,554 R555 R557 R562-565			RK73GB2A104J RK73GB2A103J RK73GB2A104J RK73GB2A103J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
R569 R570 W101 W501			RK73GB2A332J RK73GB2A101J R92-1252-05 R92-1252-05	CHIP R 3.3K J 1/10W CHIP R 100 J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	K1 K1
S1		*	S74-0822-05	MICRO SWITCH	
D1-11 D12,13 D14-16 D17,18 D19			DA204U UDZS6.8B DAP202U UDZS6.2B UDZS6.8B	DIODE ZENER DIODE DIODE ZENER DIODE ZENER DIODE	
D20 D21 D22 D31 D32			UDZS6.2B UDZS6.8B UDZS6.2B S2V60*A UDZS6.8B	ZENER DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE	
D33-36 D37 D203 D204 D205-207			UDZS6.2B UDZS6.8B 1SR154-400 DAN202U 1SR154-400	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	
D208,209 D210 D211-213 D214 D215		*	SBE803-E EC21QS06AG EC10QS04AG UDZS6.8B UDZS5.6B	DIODE DIODE DIODE ZENER DIODE ZENER DIODE	
D216,217 D218 D220 D301 D401,402			UDZS6.8B UDZS5.6B DAN202U IMSA-6801-E UDZS6.8B	ZENER DIODE ZENER DIODE DIODE SURGE ABSORBER ZENER DIODE	
D404 D501 IC1 IC101 IC102			DAN202U DAN202U TB2903HQ 703030GC053A HD74HC02FP-E	DIODE DIODE ANALOGUE IC MICROCONTROLLER IC MOS-IC	
IC103 IC105 IC202 IC203,204 IC205		*	S-80835CNNB-G BR24L01AF-W TA78L05F-F MB3882 BA4911-V4	MOS-IC ROM IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC206 IC207 IC208 IC301 IC302		*	UPC2933ATAZ BA00ASF TA48M033F-F SAF7730H SAF3550HV	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	K
IC303 IC304 IC402 IC403		*	MT48LC4M32P7IT M25P80-VMW6T E-TDA7414 AK4112BVFP	DRAM IC ROM IC ANALOGUE IC MOS-IC	K K K

Ref. No.	Add	New	Parts No.	Description	Destination
IC501 IC501 IC502 IC502 IC503		*	70F3263GC3T5A 703262GC301A BR24L01AF-W BR24L04F-W HD74HCT245T-E	MICROCONTROLLER IC MICROCONTROLLER IC ROM IC ROM IC MOS-IC	K K1 K K1
Q1 Q2-7 Q8 Q9,10 Q12			DTA114YUA DTC143TUA 2SA1576A DTA124EUA DTC144EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q13 Q200 Q201 Q202 Q203			2SA1577 DTC144EUA 2SC4081 2SA1577 CPH3105-E	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q204-206 Q207-210 Q211 Q212 Q213		*	DTC144EUA HAT2028R-E DTC144EUA CPH3105-E DTC144EUA	DIGITAL TRANSISTOR DUAL FET DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q214 Q215-217 Q218,219 Q220 Q222			CPH3105-E DTC144EUA CPH3105-E DTC144EUA CPH3105-E	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K
Q225 Q226 Q227 Q228-230 Q231			CPH3105-E DTA123JK DTC144EUA 2SC4081 UMD2N	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	K
Q232 Q234-240 Q234,235 Q238-240 Q302-307			CPH3105-E DTC144EUA DTC144EUA DTC144EUA 2SK3018	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR FET	K K1 K1 K
Q501 Q501,502 Q503-506 Q507 TH1			DTC144EUA DTC144EUA 2SK3018 UMD2N PRF21BE471QB2	DIGITAL TRANSISTOR DIGITAL TRANSISTOR FET TRANSISTOR POSITIVE RESISTOR	K1 K
A301 A302		*	W02-3492-05 W02-5017-05	FM/AM FRONT-END ELECTRIC CIRCUIT MODULE (SIRIUS)	
DAUGHTER UNIT (X89-2680-10)					
D1			B30-1566-05	LED (1608, RED)	
C1			CK73GB1H103K	CHIP C 0.010UF K	
CN1 J1		*	E41-2232-05 E58-1008-05	SOCKET FOR PIN ASSY RECTANGULAR RECEPTACLE	
R1 R3-5 R6,7 R8 R9,10			RK73EB2E102J RK73EB2E471J RK73EB2E102J RK73EB2E241J RK73EB2E471J	CHIP R 1.0K J 1/4W CHIP R 470 J 1/4W CHIP R 1.0K J 1/4W CHIP R 240 J 1/4W CHIP R 470 J 1/4W	

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.

PARTS LIST

DAUGHTER UNIT (X89-2680-10)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
R11-13			RK73EB2E102J	CHIP R 1.0K J 1/4W		H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	
S1			S70-0871-05	TACT SWITCH		J	1B		N09-6196-05	TAPTITE SCREW (S2X3.5PRECISI)	
						K	3B		N09-6195-05	SEMS (TAPTITE SCREW) (P2X5SEMS-	
CD MECHANISM ASSY (X92-5120-00)						DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
2	1B		A10-4884-02	CHASSIS		DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	
5	1B		D10-4610-03	ARM ASSY		DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	
8	2A		D10-4608-03	LEVER ASSY							
10	3A		D10-4602-03	ARM							
11	2A		D10-4603-03	ARM							
12	3A		D10-4604-03	ARM							
13	3A		D10-4605-03	ARM							
14	3B		D10-4613-03	ARM							
15	2A		D10-4615-03	SLIDER							
16	3B		D10-4617-22	SLIDER							
17	3B		D10-4618-03	SLIDER							
18	3B		D10-4614-04	ARM							
19	3B		D10-4606-04	ARM							
22	2A		D13-2174-04	GEAR							
23	2B		D13-2180-04	GEAR							
24	3B		D13-2181-04	GEAR							
25	3B		D13-2182-04	GEAR							
26	3B		D13-2175-04	WORM							
27	3B		D13-2176-04	GEAR							
28	3B		D13-2177-04	GEAR							
29	3B		D13-2178-04	GEAR							
30	3B		D13-2183-04	GEAR							
31	3B		D13-2184-04	GEAR							
32	2B		D13-2173-03	RACK (GEAR)							
33	2A		D14-0763-04	ROLLER							
35	2B		D21-2389-04	SHAFT							
36	1A		D23-0955-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3095-04	EXTENSION SPRING							
39	2A		G01-3093-04	TORSION COIL SPRING							
40	2A		G01-3094-04	EXTENSION SPRING							
41	1B		G01-3091-04	EXTENSION SPRING							
42	2A		G01-3092-04	EXTENSION SPRING							
43	1B		G01-3090-04	EXTENSION SPRING							
44	2B		G02-1413-04	FLAT SPRING							
45	2B		G02-1414-04	FLAT SPRING							
51	1A		J21-9753-02	MOUNTING HARDWARE							
52	3B		J21-9755-02	MOUNTING HARDWARE							
53	1B		J21-9752-03	MOUNTING HARDWARE							
55	1A		J90-1014-01	GUIDE							
56	1B		J90-1024-03	GUIDE							
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD							
A	2B		N09-6192-05	TAPPING SCREW (P2X8COUNTERSU)							
B	1B		N09-6191-05	STEPPED SCREW (M1.7TOTAL8BON)							
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)							
E	2B		N09-6193-05	MACHINE SCREW (M2X2PAN-HEAD#)							
F	1A		N09-6194-05	TAPPING SCREW (P2X5BINDING-H)							
G	2A		N19-2163-04	FLAT WASHER							

K : Ez900HDS K1 : Ez700SR
(K : North America)

△ Indicates safety critical components.