 


Electrical PartsList

CDE-172BT Service Parts List

Block	No.	Photo	Q'ty /SET	Parts Name (SONY)	Part No. (SONY)
SET	1		1	MAIN PC BOARD ASSY	A-2198-376-A
SET	2		1	CHASSIS TOP	4-725-949-01
SET	3		1	COVER BOTTOM	4-698-531-01
SET	4		1	PANEL, SUB ASSY	X-259-533-81
SET	5		1	PANEL ASSY, FRONT	A-2198-400-A
SET	6		1	KEY PC BOARD ASSY	A-2198-412-A
SET	7		1	KNOB (SV) ASSY	X-2596-620-1
SET	8		1	PANEL (SV) ASSY, FRONT	X-2596-624-1
SET	9		1	PANEL, BACK	4-725-518-01
SET	10	 (Screw for Front panel)	2	SCREW(+B P-TITE M2)	4-290-177-01
SET	11		1	MECHADECK, CD	1-493-353-11
SET	12	 (FFC for SET Assy : 150mm)	1	FLEXIBLE FLAT CABLE (24 CORE)	1-912-417-11
SET	13	 (FFC for Service check : 300mm)	1	FLEXIBLE FLAT CABLE (24 CORE)	1-912-417-21
ACC	1		1	COLLAR	4-461-753-01
ACC	2		1	FRAME ASSY, FITTING	X-258-396-22
ACC	3		2	KEY(FRAME)	4-276-003-03
ACC	4		1	SCREW ASSY(4)	X-251-442-51
ACC	5		1	OPERATING, INSTRUCTION	4-732-929-12
ACC	6		1	MICROPHONE UNIT	1-542-986-22
PACK	1		1	INDIVIDUAL CARTON	4-727-993-01
PACK	2		2	CUSHION PULP	4-593-818-01
PACK	3		1/5	MASTER CARTON, 5 SETS	4-728-344-01