


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

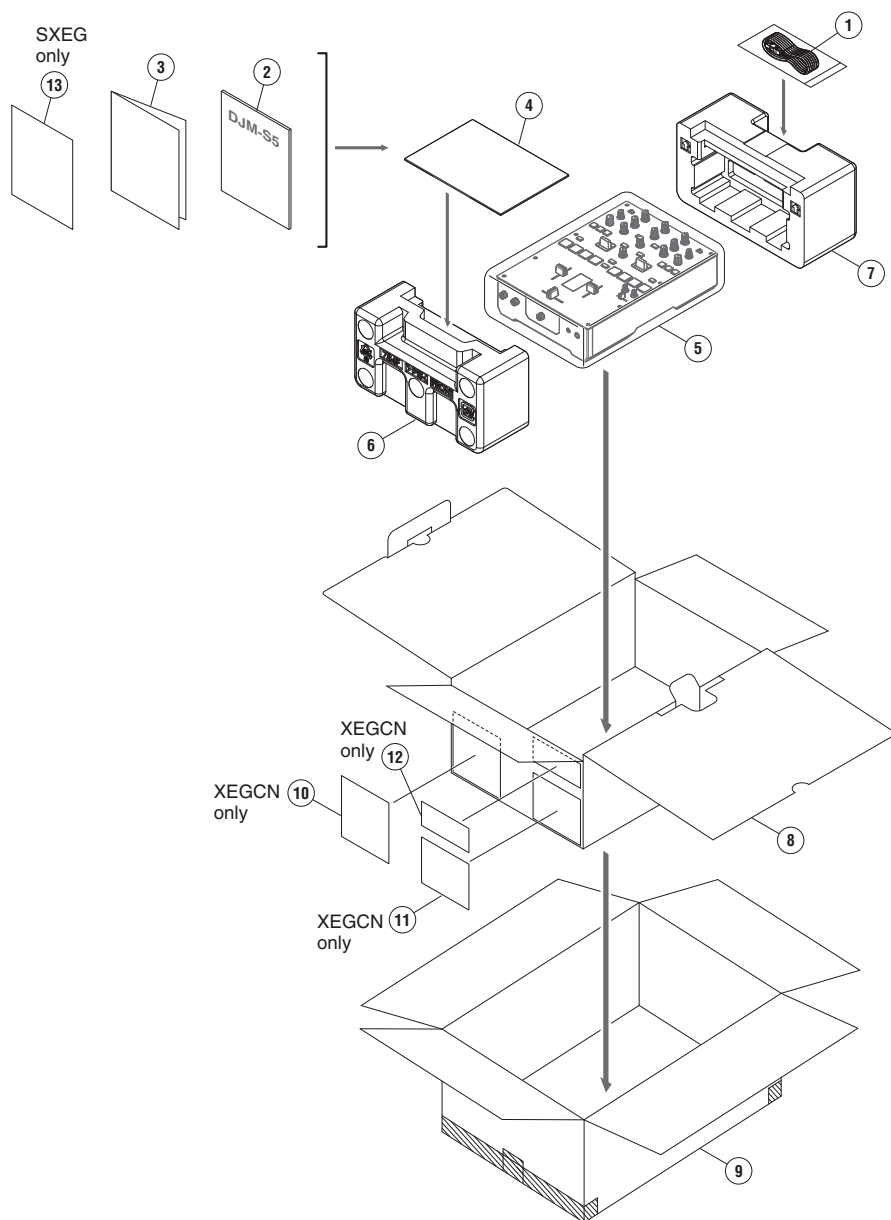


	1		2		3		4	
	(1) PACKING SECTION PARTS LIST							
	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
A	1	USB Cable	408-061-153		6	Pad F	506-061-784F	
	2	Quick Start Guide	See Contrast table (2)		7	Pad B	506-061-784B	
	3	Precautions for Use	See Contrast table (2)		8	Gift Box	507-061-3891	
	4	PE Bag	505-DJM250-014		9	Carton	See Contrast table (2)	
	5	HDPE Bag	505-058-277		10	Barcode Label	See Contrast table (2)	
					11	Produce Label	See Contrast table (2)	
					12	Caution Label	See Contrast table (2)	
				NSP	13	Warranty Card	See Contrast table (2)	

(2) CONTRAST TABLE

DJM-S5/SXEG and DJM-S5/XEGCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S5/SXEG	DJM-S5/XEGCN
	2	Quick Start Guide	502-DJMS5A-3946	502-DJMS5B-3948
	3	Precautions for Use	502-DJMS5A-3947A	502-DJMS5B-3949
	9	Carton	507-061-3892	507-061B-3892
	10	Barcode Label	Not used	501-DJMS5B-3047
	11	Produce Label	Not used	501-DJMS5B-3048
	12	Caution Label	Not used	501-DJMS7D-3019
NSP	13	Warranty Card	502-SXMK3B-3549C	Not used

9.2 EXTERIOR SECTION

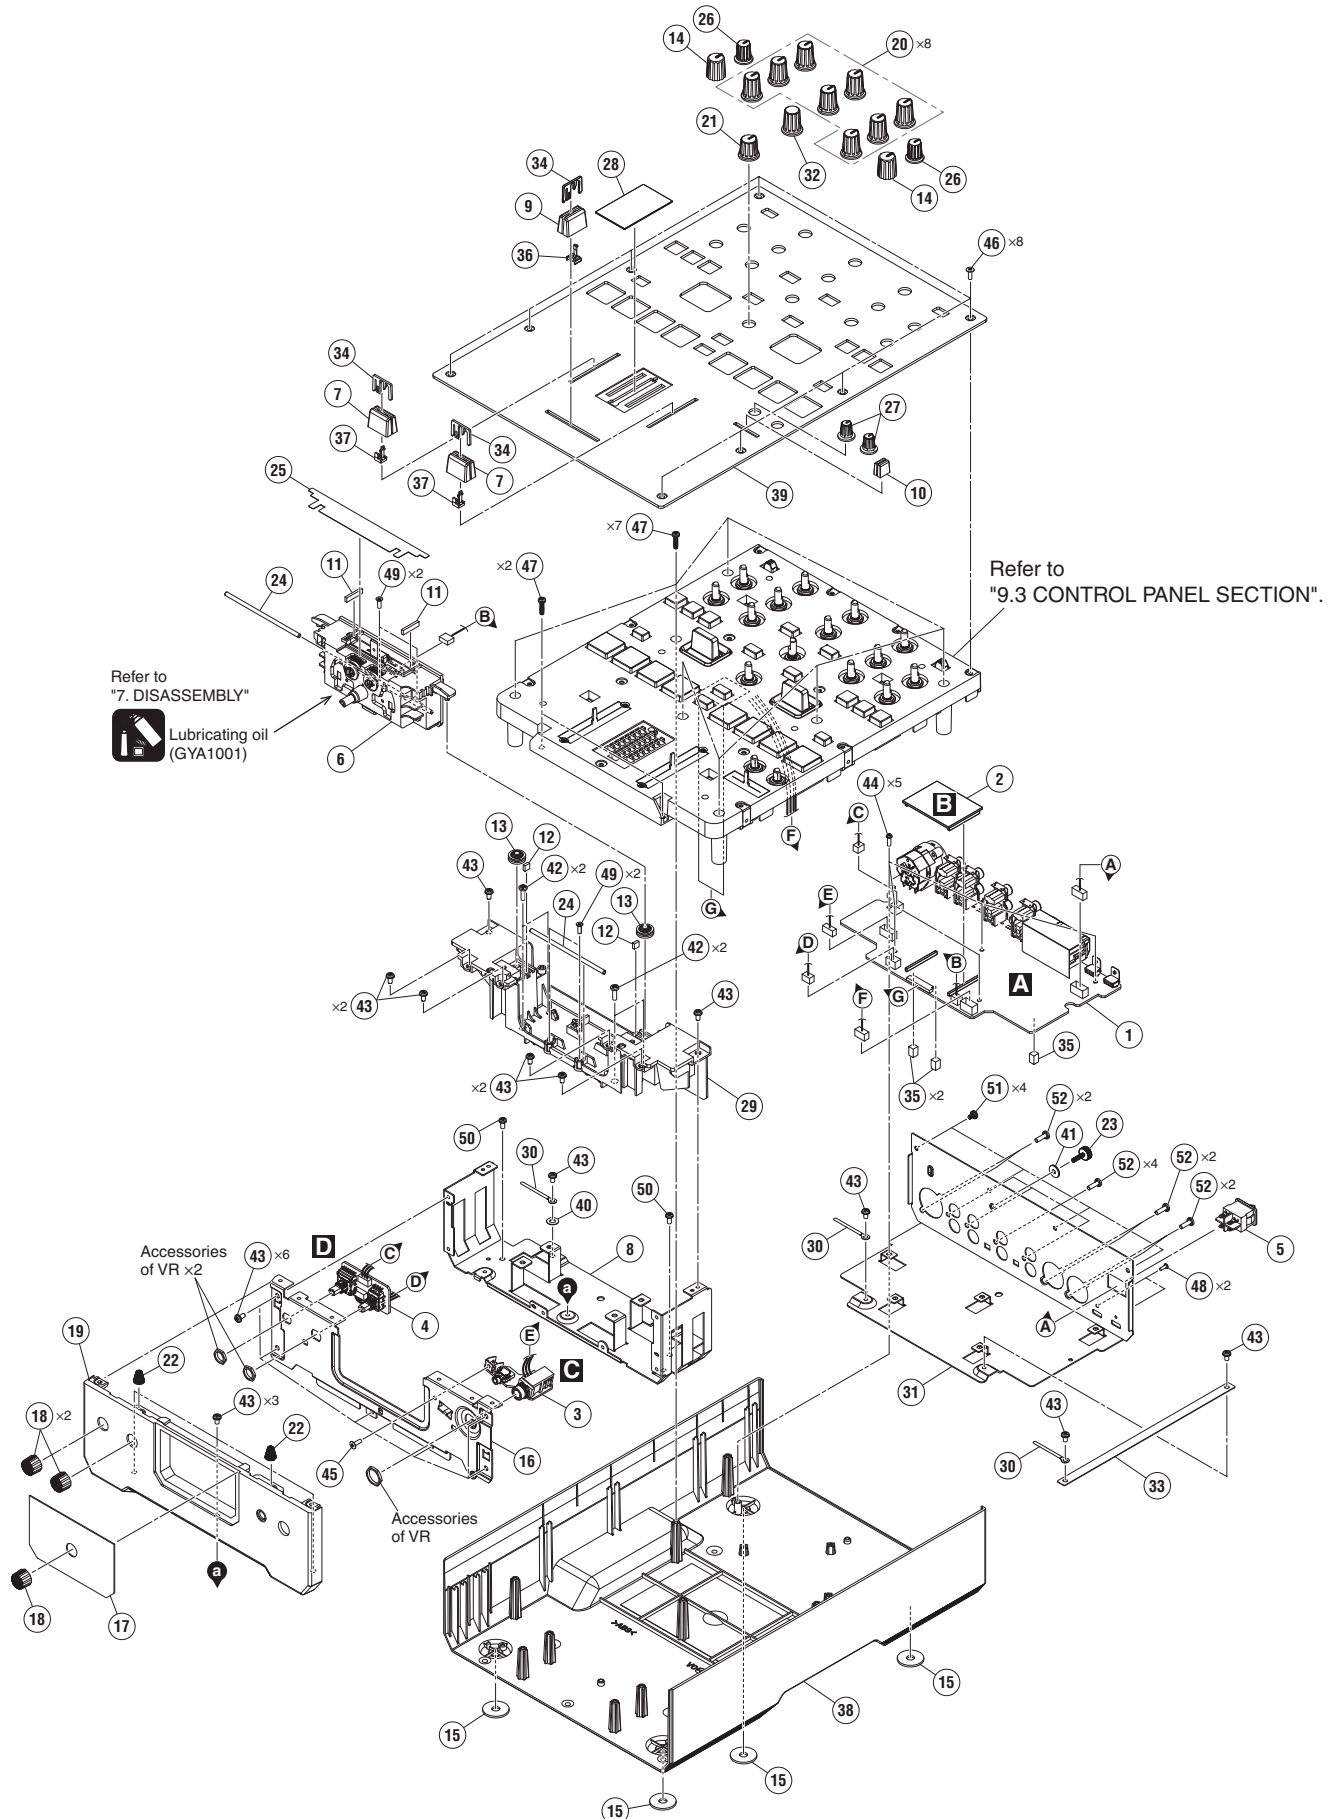


EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	USB PCB Assy	704-061-C534		46	Screw (3*10)	602-PTS310-851B
	2	MPU ADAPTOR PCB Assy	704-061-C535		47	Screw (C-1018,PTP,3-L12)	602-PTP3012-571Z
	3	PHONES PCB Assy	704-061-C537		48	Screw (M2*6)	602-ISO206-839B
	4	FRONT PCB Assy	704-061-C538		49	Screw (PTF,2.6*8)	602-PTF2608-837N
	⚠ 5	POWER SW Assy	704-061-C541		50	Screw (PTP,3*6,ZB)	602-HDJ9700-423
	6	MAGVEL FADER PRO Assy	418-058-800		51	Screw (SAE1018,BTB,3-5)	602-BTB305-727B
	7	Channel Fader Knob	100-061-3525S		52	Screw (TTB3*10)	602-XM610-522
	8	VR Bracket	300-061-2514				
	9	Crossfader Knob	100-061-3534S				
	10	CUE Fader	100-058-3524				
B	11	Cushion	604-058-728				
	12	Cushion	604-058-729				
	13	Damper/S1	604-058-727				
	14	FILTER Rotate Knob	100-S1-3009				
	15	Foot	612-058-605				
	16	Front Bracket	300-061-2515				
	17	Front Clear Panel	501-061-3030				
	18	Front Knob	100-058-3527				
	19	Front Panel	100-061-3561				
	20	FX Rotate Knob	100-S1-3006				
C	21	GAIN Rotate Knob	100-S1-3008				
	22	Ground Spring	603-058-443				
	23	Ground Terminal	200-S1-665				
	24	Guide Bar	200-058-1023				
	25	Insulation Spacer	501-061-3060				
	26	Jog Tuning Knob	100-DDJLE-2944				
	27	Knob	100-058-3523				
	28	Level Indicator	501-061-3029				
	29	Level Indicator Base	100-061-3566				
	30	Locking Cable Clip	300-HM510B-224B				
	31	Rear Panel	300-061-2512				
	32	Rotate Knob	100-S1-3007				
	33	Signal GND	300-061-2517				
	34	Slider Knob 2	100-058-3535				
	35	Sponge	612-IQ2UM-378				
E	36	Stopper	100-058-3536				
	37	Stopper/SLD	100-058-3537				
	38	Sub Plastic Base	100-061-3562				
	39	Top Panel	300-061-2511				
	40	Washer	606-HV3360-091				
	41	Washer (10*3.2*1T)	606-S1-007				
	42	Screw	602-PTB3010-674Z				
	43	Screw	602-QMX2BPM-322				
	44	Screw	602-SL24F-099				
	45	Screw	602-ISO308-735B				
F							

5 6 7 8

9.3 CONTROL PANEL SECTION

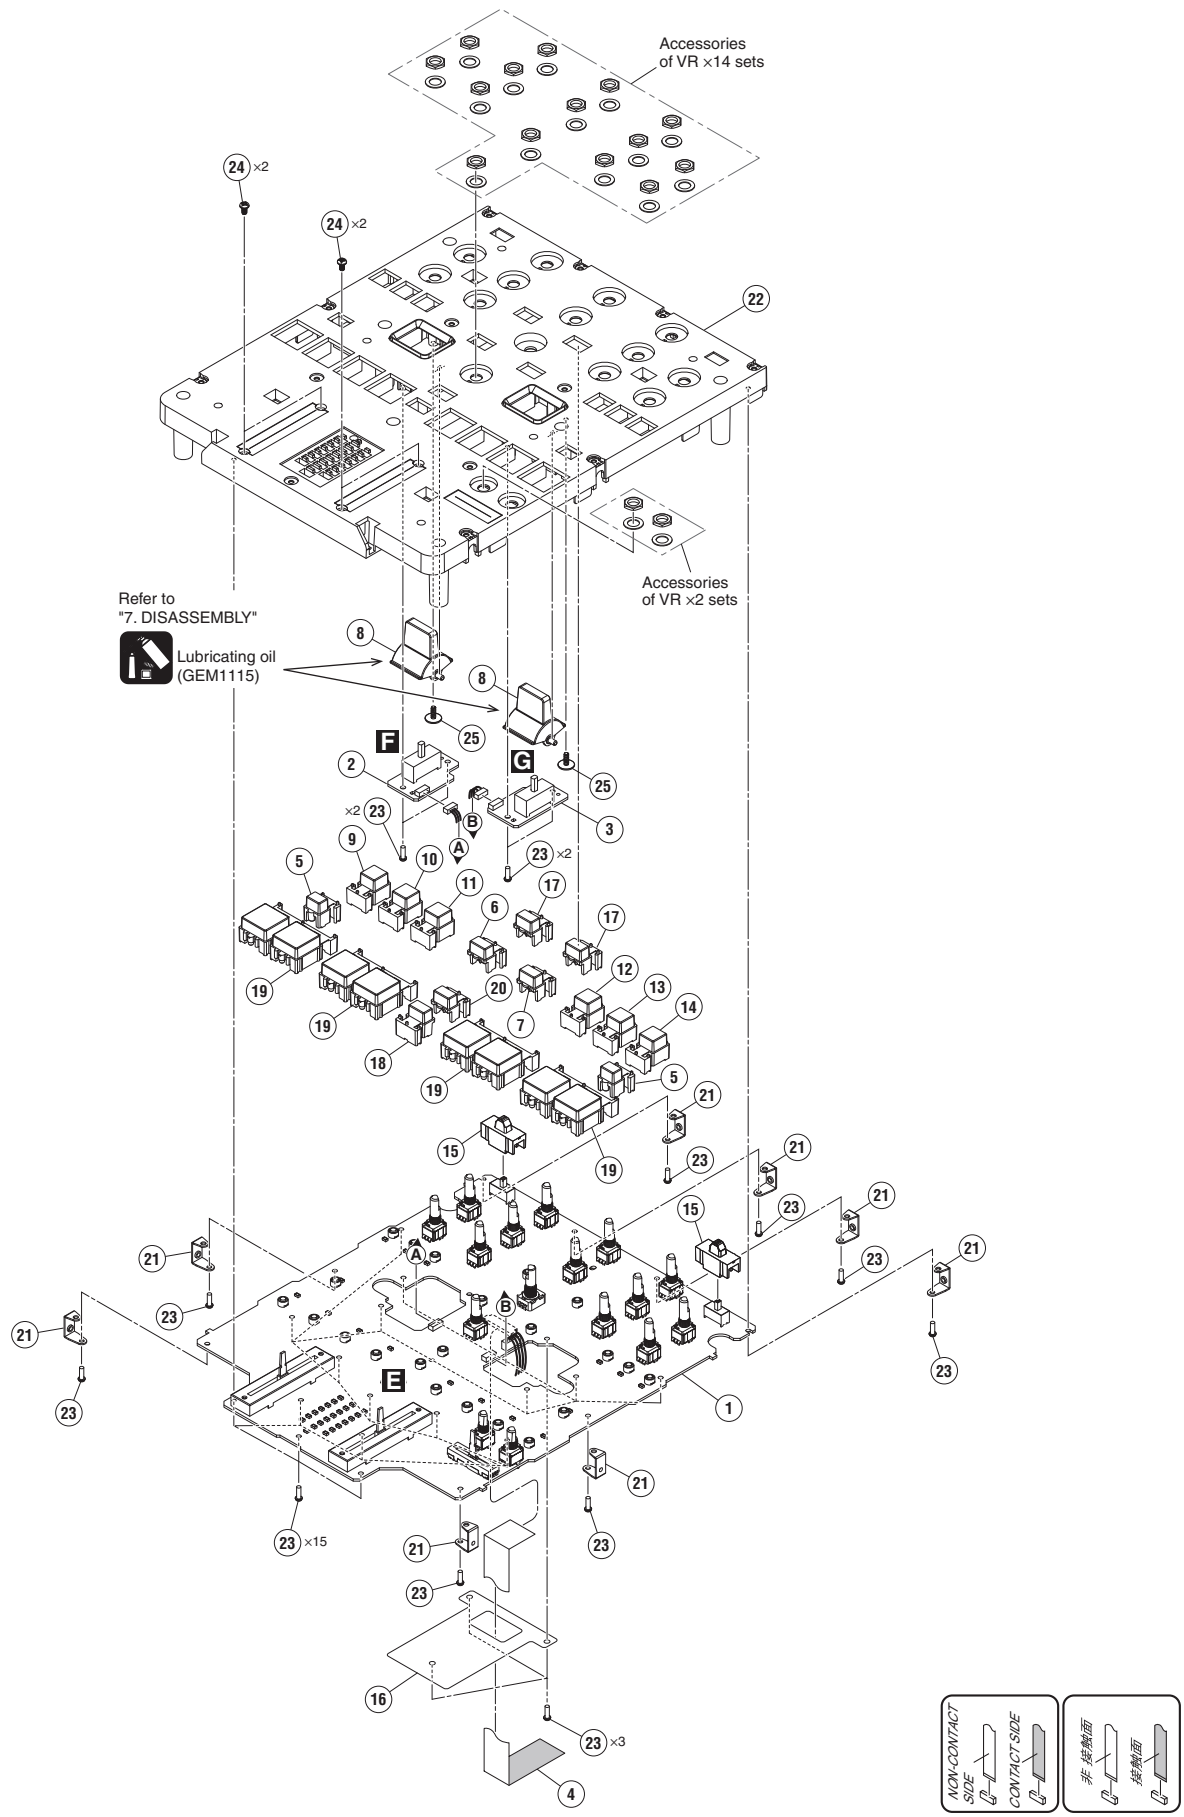

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.
A	1 MIX PCB Assy	704-061-C533
	2 LEVER-L PCB Assy	704-061-C539
	3 LEVER-R PCB Assy	704-061-C540
	4 20P 1.0 FFC Cable (L = 250 mm)	406-DJM250-1190
	5 BACK Button	100-061-3512
	6 BEAT Button	100-058-3519
	7 BEAT Button	100-058A-3519
	8 FX Lever	100-061-3567
	9 FX Select Button	100-FXL1-3564
	10 FX Select Button	100-FXL2-3564
B	11 FX Select Button	100-FXL3-3564
	12 FX Select Button	100-FXR1-3564
	13 FX Select Button	100-FXR2-3564
	14 FX Select Button	100-FXR3-3564
	15 Input Selector	100-SX3-3410
	16 Isolated Slice	501-061-3032
	17 LOAD Button	100-LOAD-3519
	18 MODE Button	100-MODE-3519
	19 Pad Select Button	100-061-3565S
	20 SHIFT Button	100-SHIFT-3519
C	21 Side Bracket	300-061-2516
	22 Chassis Assy (Service part)	701-DJMS5-6139
	23 Screw	602-SL24F-099
	24 Screw (3*5 P=0.5)	602-B300-041
	25 Screw (SAE1018,WPTP 3-8,CAP=9.5)	602-MD26-082

D

E

F

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω — 56 $\times 10^1$ — 561 RD1/APU $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 7 \\ 3 \end{bmatrix} J$

47 k Ω — 47 $\times 10^3$ — 473 RD1/APU $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ 3 \end{bmatrix} J$

0.5 Ω — R50 RN2H $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

1 Ω — 1R0 RSIP $\begin{bmatrix} 1 \\ R \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω — 562 $\times 10^1$ — 5621 RN1/4PC $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 1 \end{bmatrix} F$

Mark	No.	Description	Part No.
------	-----	-------------	----------

LIST OF ASSEMBLIES

		USB PCB ASSY	704-061-C534
		MPU ADAPTOR PCB ASSY	704-061-C535
		PHONES PCB ASSY	704-061-C537
		FRONT PCB ASSY	704-061-C538
		MIX PCB ASSY	704-061-C533

		LEVER-L PCB ASSY	704-061-C539
		LEVER-R PCB ASSY	704-061-C540

Mark	No.	Description	Part No.
------	-----	-------------	----------

		CN7 TO W501 3P SOCKET	404-HP1010K-259A
		CN8 TO PHONES 6P SOCKET	404-3113-052A
$\triangle$		F1,F2 CHIP FUSE (1.25 A/63 V)	422-DMX1-125
NSP		JK1,JK2 16P USB TYPE-C	420-061-511
		JK3,JK4,JK5,JK9 2P RCA JACK	420-MH2-218V

		JK6 XLR JACK	420-VP989-320
		JK7,JK8 B/O JACK	420-T2D-183
		L1,L3,L4,L5,L7,L8,L9,L10,L11 CHIP BEAD	415-COMBO-418
		L12 COMMON MODE FILTER	415-FU800-305

NSP		L2 CHIP INDUCTANCE	415-AUD6-531
-----	--	--------------------	--------------

NSP		L6 CHIP INDUCTANCE	415-058-550
		SW1,SW2 SLIDE SW	403-QMX1-060V
		VA9,VA10,VA11,VA12,VA13,VA14 VARISTOR	412-SX3-2062
		VA15,VA16,VA17,VA18,VA19,VA20 VARISTOR	412-SX3-2062
		W1 TO CROSSFADER 3P 2.0 CONNECTOR WIRE	404-061-4364

		GND	300-HP-2527
--	--	-----	-------------

RESISTORS

		R1,R2,R3,R4,R6	412-007USB-673
NSP		R10	412-CDVD2001-547
NSP		R11	412-WG2-1560
		R115,R116	412-900-994
		R12,R60,R61,R137,R138,R144,R145	412-CDVD2001-552

		R241,R246,R260	412-CDVD2001-552
		R121,R122	412-007USB-699
		R126,R71,R72,R90,R91,R109,R110	412-007USB-677
		R190,R191,R202,R203,R220,R221	412-007USB-677
		R244,R245,R249,R250	412-007USB-677

NSP		R127	412-900-981
NSP		R128	412-007USB-727
		R13,R64,R183,R184,R185,R186,R195	412-007USB-704
		R196,R197,R198,R218,R219,R222	412-007USB-704
		R223,R255,R256,R258	412-007USB-704

		R14,R239,R240,R242,R243	412-DCM280-726
NSP		R15,R16	412-DV330-344
NSP		R157,R162,R163,R168,R169,R172	412-PRIMO-2013
		R173,R180	412-PRIMO-2013
		R158,R161,R164,R167,R176,R177	412-900-1006

		R178,R179,R206,R209,R212,R215	412-900-1006
NSP		R159,R160,R165,R166,R170,R171	412-900-982
		R174,R175,R207,R208,R213,R214	412-900-982
NSP		R17	412-500C-1557
NSP		R181,R182,R187,R188,R193,R194	412-058-2155

		R199,R200	412-058-2155
		R189,R192,R201,R204	412-007USB-782
		R19	412-900-1016

Mark	No.	Description	Part No.
------	-----	-------------	----------

A USB PCB ASSY

SEMICONDUCTORS

NSP		IC1,IC2,IC3,IC4,IC7,IC8,IC9,IC10	417-PRIMO-1328
		IC11	417-DDJLE-1079
		IC12	417-50CU-1251
NSP		IC13	417-061-1433
		IC14	417-200USB-931

NSP $\triangle$		IC15	417-1059-1381
$\triangle$		IC16	417-7K-1299
$\triangle$		IC17	417-PLX500-1274
		IC18	417-HDJ2000-503
		IC19	417-IQ2UM-940

NSP		IC20	417-061-1431
		IC21,IC22	417-DJM250-1054
		Q1	416-HDJ9700-210
		Q2,Q3,Q7,Q11,Q26,Q27,Q28	416-CDN88-044
		Q31,Q33	416-CTB200-166

NSP		Q32,Q34	416-6K2-401
		Q4,Q8,Q12	416-CTB200-178
		Q5,Q6,Q9,Q10,Q13,Q14,Q15,Q16	416-3000-378
		Q17,Q18,Q19,Q20,Q21,Q22,Q24,Q25	416-3000-378
		D1,D2	414-DJ1100G-207B

		D12,D13	414-50CU-405A
		D3,D4,D5,D6,D8,D9	414-007USB-148V
		D7,D10,D11	414-CD1000-075A

MISCELLANEOUS

		CN1 TO SWITCH 4P SOCKET	404-QSPAND-1183A
		CN2,CN3 25P 1.27 CONNECTOR	404-061-4349
		CN4 TO W502 4P SOCKET	404-KM300-123A
		CN5 TO W500 4P SOCKET	404-HV3500K-629A
		CN6 TO DSP CN609 20P 1.0 FFC SOCKET	404-DJM250-3613

5			6			7			8		
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
		R20,R23,R25,R35,R36,R37,R38,R39 R40,R44,R45,R47,R49,R50,R51,R54	412-CDVD2001-521 412-CDVD2001-521	NSP	C318,C319,C5,C11,C36,C59,C61,C62 C63,C64,C65,C66,C67,C138,C159		413-COMBO-1276 413-COMBO-1276				
		R55,R56,R57,R59,R253,R263,R53 R205,R210,R211,R216	412-CDVD2001-521 412-900-992	NSP	C168,C231,C232,C248,C250,C251 C255,C268,C270,C275,C276,C277		413-COMBO-1276 413-COMBO-1276				A
		R21,R22,R24,R26,R27,R33,R34,R46 R48,R52,R58	412-CDVD2001-554 412-CDVD2001-554	NSP	C278,C279,C280,C281,C289,C290 C291,C305,C306,C307,C308,C309		413-COMBO-1276 413-COMBO-1276				
		R217,R224	412-DM0604-1565	NSP	C310,C312,C313,C314,C315,C329		413-COMBO-1276				
		R225,R226	412-LP3-1966	NSP	C320,C94,C95,C110,C111,C122,C123		413-50CU-1393				
		R228,R231,R234,R237	412-007USB-671	NSP	C171,C177,C182,C187,C198,C202		413-50CU-1393				
NSP		R248,R251	412-HPA5000-1017	NSP	C212,C216,C234,C236,C238,C241		413-50CU-1393				
NSP		R266,R272	412-IRCU-2043	NSP	C243,C245,C247,C252,C253,C254		413-50CU-1393				
NSP		R267,R273	412-MC7K-1804	NSP	C256,C257,C258,C259,C260,C261		413-50CU-1393				
NSP		R268,R270,R274,R276	412-COMBO-1599	NSP	C263,C265,C267,C283,C284,C288		413-50CU-1393				B
NSP		R269,R275	412-AUD6-2099	NSP	C292,C293,C300,C316		413-50CU-1393				
NSP		R271,R277	412-50CU-1932	NSP	C321,C322,C6,C12,C117,C120,C269		413-50CU-1394				
NSP		R278,R279	412-MC7K-1807	NSP	C282,C285,C286,C287,C294,C295		413-50CU-1394				
		R28,R29,R227,R229,R230,R232,R233	412-CDVD2001-534	NSP	C296,C297,C298,C299,C301,C302		413-50CU-1394				
		R235,R236,R238	412-CDVD2001-534	NSP	C303,C304		413-50CU-1394				
		R30,R31,R32,R41,R43,R65,R67,R68	412-CDVD2001-532	NSP	C323,C324,C22,C25,C32,C57,C69		413-MC7K-1425				
		R86,R87,R105,R106,R124,R247,R257	412-CDVD2001-532	NSP	C71,C73,C77,C79,C97,C98,C113		413-MC7K-1425				
NSP		R5,R18	412-MC6000-1444	NSP	C114,C125,C126,C151,C153,C155		413-MC7K-1425				
		R62,R66,R85,R104	412-CDVD2001-537	NSP	C157,C162,C166,C167,C227		413-MC7K-1425				
		R63,R129,R139,R140,R141,R142,R143 R146,R147,R148,R149,R150,R151	412-CDVD2001-530 412-CDVD2001-530	NSP	C326,C328		413-50IU-1488				
		R152,R153,R154,R155,R156	412-CDVD2001-530	NSP	C37		413-M1010-1352				C
		R69,R70,R88,R89,R107,R108,R111	412-CDVD2001-540	NSP	C38,C39,C40,C43,C44,C3,C9		413-IRC-1512				
		R112,R123,R125	412-CDVD2001-540		C41,C42		413-007USB-787				
		R73,R74,R82,R83,R92,R93,R101 R102,R118,R119	412-900-1014 412-900-1014	NSP	C58,C127,C128		413-50CU-1445				
NSP		R75,R76,R94,R95	412-I1-1252	NSP	C8,C223,C224		413-50CU-1405				
		R77,R80,R96,R99	412-CDVD2001-523		C82		413-007USB-828				
NSP		R78,R79,R97,R98	412-900-986	NSP	C83,C84,C99,C100,C115,C116		413-50DU-1398				
		R8	412-007USB-688	NSP	C191,C192,C195,C196,C209,C210		413-50DU-1398				
		R81,R84,R100,R103,R117,R120	412-ID-1296		C85,C86,C101,C102,C132,C170		413-HMA2200-5017				
NSP		R9	412-007USB-730		C174,C180,C184,C189,C190,C193		413-HMA2200-5017				
					C194,C200,C204,C207,C208,C214		413-HMA2200-5017				
					C218,C225,C240,C242		413-HMA2200-5017				D
					C87,C89,C103,C105		413-SX2-961A				
					C88,C90,C104,C106		413-PRE26-1145A				
					C93,C96,C109,C112,C121,C124		413-DV300-5155				
					C135,C137,C221,C222		413-DV300-5155				
CAPACITORS				B MPU ADAPTOR PCB ASSY							
		C129	413-SPPW3-236	SEMICONDUCTORS							
NSP		C130,C133	413-MC7K-1418	NSP	IC1		704-061-C536				
NSP		C139	413-AUD6-1531	NSP	IC2		417-061-1432				E
		C160	413-HT801K-192	MISCELLANEOUS							
NSP		C164	413-061-1586		L1,L2 CHIP BEAD		415-SX3-523				
					L3 CHIP INDUCTANCE		415-AUD6-532				
NSP		C169,C175,C176,C178,C179,C185	413-061-1585	NSP	X1 OSCILLATOR (24 MHz)		427-50CU-164				
NSP		C186,C188,C197,C199,C201,C203 C172,C173,C181,C183,C1,C4,C7	413-DM0604-1487 413-DM0604-1487		X2 CRYSTAL (32.768 kHz)		427-MC7K-162				
		C10,C14,C15,C17,C19,C20,C21 C24,C26,C28,C31,C35,C45,C46	413-DM0604-1487 413-DM0604-1487	RESISTORS							
		C49,C50,C52,C53,C55,C56,C60 C68,C70,C72,C74,C75,C76,C78	413-DM0604-1487 413-DM0604-1487	NSP	R1,R2,R3,R4		412-COMBO-1600				
		C91,C92,C107,C108,C118,C119	413-DM0604-1487	NSP	R24		412-50CU-1932				
		C134,C136,C152,C154,C156,C158 C161,C163,C165,C226,C233,C235	413-DM0604-1487 413-DM0604-1487	NSP	R25		412-MC7K-1807				
		C237,C239,C244,C262,C264,C266 C271,C272,C273,C274	413-DM0604-1487 413-DM0604-1487	NSP	R40		412-COMBO-1604				
		C18,C29,C30,C47,C48,C51,C54,C80	413-CDVD2001-265	NSP	R5,R6,R7,R11,R12,R13,R14,R15,R16,R17		412-COMBO-1608				F
NSP		C2	413-MC7K-1424		R18,R20,R21,R22,R23,R28,R29,R30,R31		412-COMBO-1608				
NSP		C211,C213,C215,C217	413-50CU-1450	NSP	R32,R33,R35,R36,R37,R38,R39		412-COMBO-1608				
		C229,C230	413-HT8015-169								
NSP		C23,C33,C34	413-COMBO-1278								
		C246,C27	413-D03-1455								

Mark	No.	Description	Part No.
------	-----	-------------	----------

CAPACITORS

NSP	C1,C6,C27,C31,C37,C50,C51	413-MC7K-1425
NSP	C52,C54,C55,C58	413-MC7K-1425
NSP	C2,C7	413-COMBO-1278
NSP	C20,C25,C60	413-50CU-1393
NSP	C23,C33,C61,C62,C63	413-50CU-1441

NSP	C24,C32	413-MC7K-1351
	C26,C3,C4,C5,C8,C10,C11,C12,C13	413-DM0604-1487
	C14,C15,C16,C17,C18,C19,C22,C30	413-DM0604-1487
	C38,C39,C40,C41,C42,C43,C45,C47	413-DM0604-1487
	C49,C53,C57,C59	413-DM0604-1487

NSP	C9,C21,C28,C29,C48	413-IRCU-1514
-----	--------------------	---------------

C PHONES PCB ASSY

MISCELLANEOUS

JK500	PHONES JACK	420-061-512
JK501	3P HEADPHONE JACK	420-CDMIX1-086V
W503	6P 2.0 CONNECTOR WIRE	404-061-4358
	JACK GROUND PLATE	300-300-1171A
	FIXED PLATE	300-4500-2010A

CAPACITORS

NSP	C550,C551	413-IRCU-1508
NSP	C553	413-COMBO-1276
	C554	413-DM0604-1487

D FRONT PCB ASSY

MISCELLANEOUS

W501	3P 2.0 CONNECTOR WIRE	404-061-4356
W502	4P 2.0 CONNECTOR WIRE	404-061-4355

RESISTORS

VR518	418-CDU100-182V
VR519	418-058-790V

CAPACITORS

C546,C547,C548,C549,C581	413-DM0604-1487
--------------------------	-----------------

E MIX PCB ASSY

SEMICONDUCTORS

IC500,IC501	417-QSPAND-432
NSP IC502,IC503,IC504,IC505,IC506,IC507	417-SPL-1137
NSP IC508	417-SPL-1137
IC509,IC510	417-M1010-1230
Q500	416-CDN88-044

NSP D504,D500,D501,D502,D503,D505	410-PRIMO-475
NSP D506,D507	410-PRIMO-475
D508,D523,D524,D532,D568	410-QUATTRO-466
D512,D513,D520,D521,D522,D525	410-QUATTRO-467
D526,D527,D533	410-QUATTRO-467

D514,D515,D516,D517,D518,D519	410-QUATTRO-468
D528,D529,D530	410-QUATTRO-468
D531,D509,D510,D511,D534,D535	410-ELITE-474
D536	410-ELITE-474
D537,D538,D539,D540,D541,D542	414-CD1000-075A

Mark	No.	Description	Part No.
------	-----	-------------	----------

D543,D544,D545,D546,D547,D548	414-CD1000-075A
D549,D550,D551,D552,D553,D554	414-CD1000-075A
D555,D556,D557,D558,D559,D560	414-CD1000-075A
D561,D562,D563,D564,D565,D566	414-CD1000-075A
D567	414-CD1000-075A

MISCELLANEOUS

CN500 20P 1.0 FFC SOCKET	404-DJM250-3613
L500,L501,L502,L503,L504,L505	415-COMBO-418
L506	415-COMBO-418
SW500,SW501,SW502,SW503,SW504	TACT SW 403-DDJLE-419
SW505,SW506,SW507,SW508,SW509	TACT SW 403-DDJLE-419

SW510,SW511,SW512,SW513,SW514	TACT SW 403-DDJLE-419
SW515,SW516,SW517,SW518,SW519	TACT SW 403-DDJLE-419
SW520,SW521	TACT SW 403-DDJLE-419
SW522,SW523	SLIDE SW 403-058-504
SW526	ENCODER 403-DDJLE-418

W500 4P 2.5 CONNECTOR WIRE	404-061-4354
W504,W505 3P 2.0 CONNECTOR WIRE	404-061-4359

RESISTORS

R500,R503,R506,R509,R512,R515	412-007USB-677
R518,R521	412-007USB-677
NSP R524,R612,R502,R505,R508,R511	412-007USB-692
NSP R514,R517,R520,R523	412-007USB-692
R525,R526,R527,R547,R550,R551	412-CDVD2001-540

R552,R501,R504,R510,R507,R513	412-CDVD2001-540
R516,R519,R522	412-CDVD2001-540
NSP R528,R529,R536,R537,R538,R541	412-007USB-780
NSP R542,R543,R549	412-007USB-780
R530,R531,R532,R533,R534,R535	412-G9900-1196

R544,R545,R546	412-G9900-1196
NSP R539,R540,R548	412-007USB-691
R553,R554,R555,R556,R559,R560	412-CDVD2001-530
R561,R564,R565,R566,R569,R570	412-CDVD2001-530
R571,R574,R575,R576,R579,R580	412-CDVD2001-530

R581,R584,R585,R586	412-CDVD2001-530
R558,R563,R568,R573,R578,R583	412-CDVD2001-545
R588,R589,R594,R595,R596,R601	412-CDVD2001-545
R577,R582,R587,R590,R591,R592	412-CDVD2001-532
R593,R597,R598,R599,R600,R602	412-CDVD2001-532

R603,R604,R605,R606,R607,R608	412-CDVD2001-532
R609,R557,R562,R567,R572	412-CDVD2001-532
VR500,VR501,VR502,VR504,VR507	418-S1-693
VR508,VR509,VR510,VR512	418-S1-693
VR503,VR511	418-058-797

VR505,VR506	418-S1-694
VR513	418-058-796
VR514	418-058-795
VR515	418-058-794
VR516,VR517	418-058-793

CAPACITORS

C500,C501,C502,C503,C504,C505	413-DM0604-1487
C506,C507,C508,C518,C519,C535	413-DM0604-1487
C536,C539,C542,C544,C555,C556	413-DM0604-1487
C509,C510,C511,C512,C513,C514	413-DM0604-1487
C515,C516,C517	413-DM0604-1487

NSP C520,C522,C524,C526,C528,C530	413-50CU-1394
NSP C532,C537,C538	413-50CU-1394
NSP C521,C523,C525,C527,C529,C531	413-COMBO-1278
NSP C533	413-COMBO-1278
NSP C534	413-50DU-1460

Mark	No.	Description	Part No.
NSP	C540,C541,C545		413-MC7K-1425
NSP	C543,C558,C559,C560,C561,C562		413-COMBO-1276
NSP	C563,C564,C565,C566,C567,C568		413-COMBO-1276
NSP	C569,C570,C571,C572,C573,C574		413-COMBO-1276
NSP	C575,C576,C577,C578,C579		413-COMBO-1276
NSP	C580		413-50CU-1393

A

F

LEVER-L PCB ASSY

MISCELLANEOUS

SW524 TOGGLE SW

CN501 3P SOCKET

403-061-516

404-HMD5000-784A

B

G

LEVER-R PCB ASSY

MISCELLANEOUS

SW525 TOGGLE SW

CN502 3P SOCKET

403-061-516

404-HMD5000-784A

C

D

E

F