



EXPLODED VIEW (CD MECHANISM)

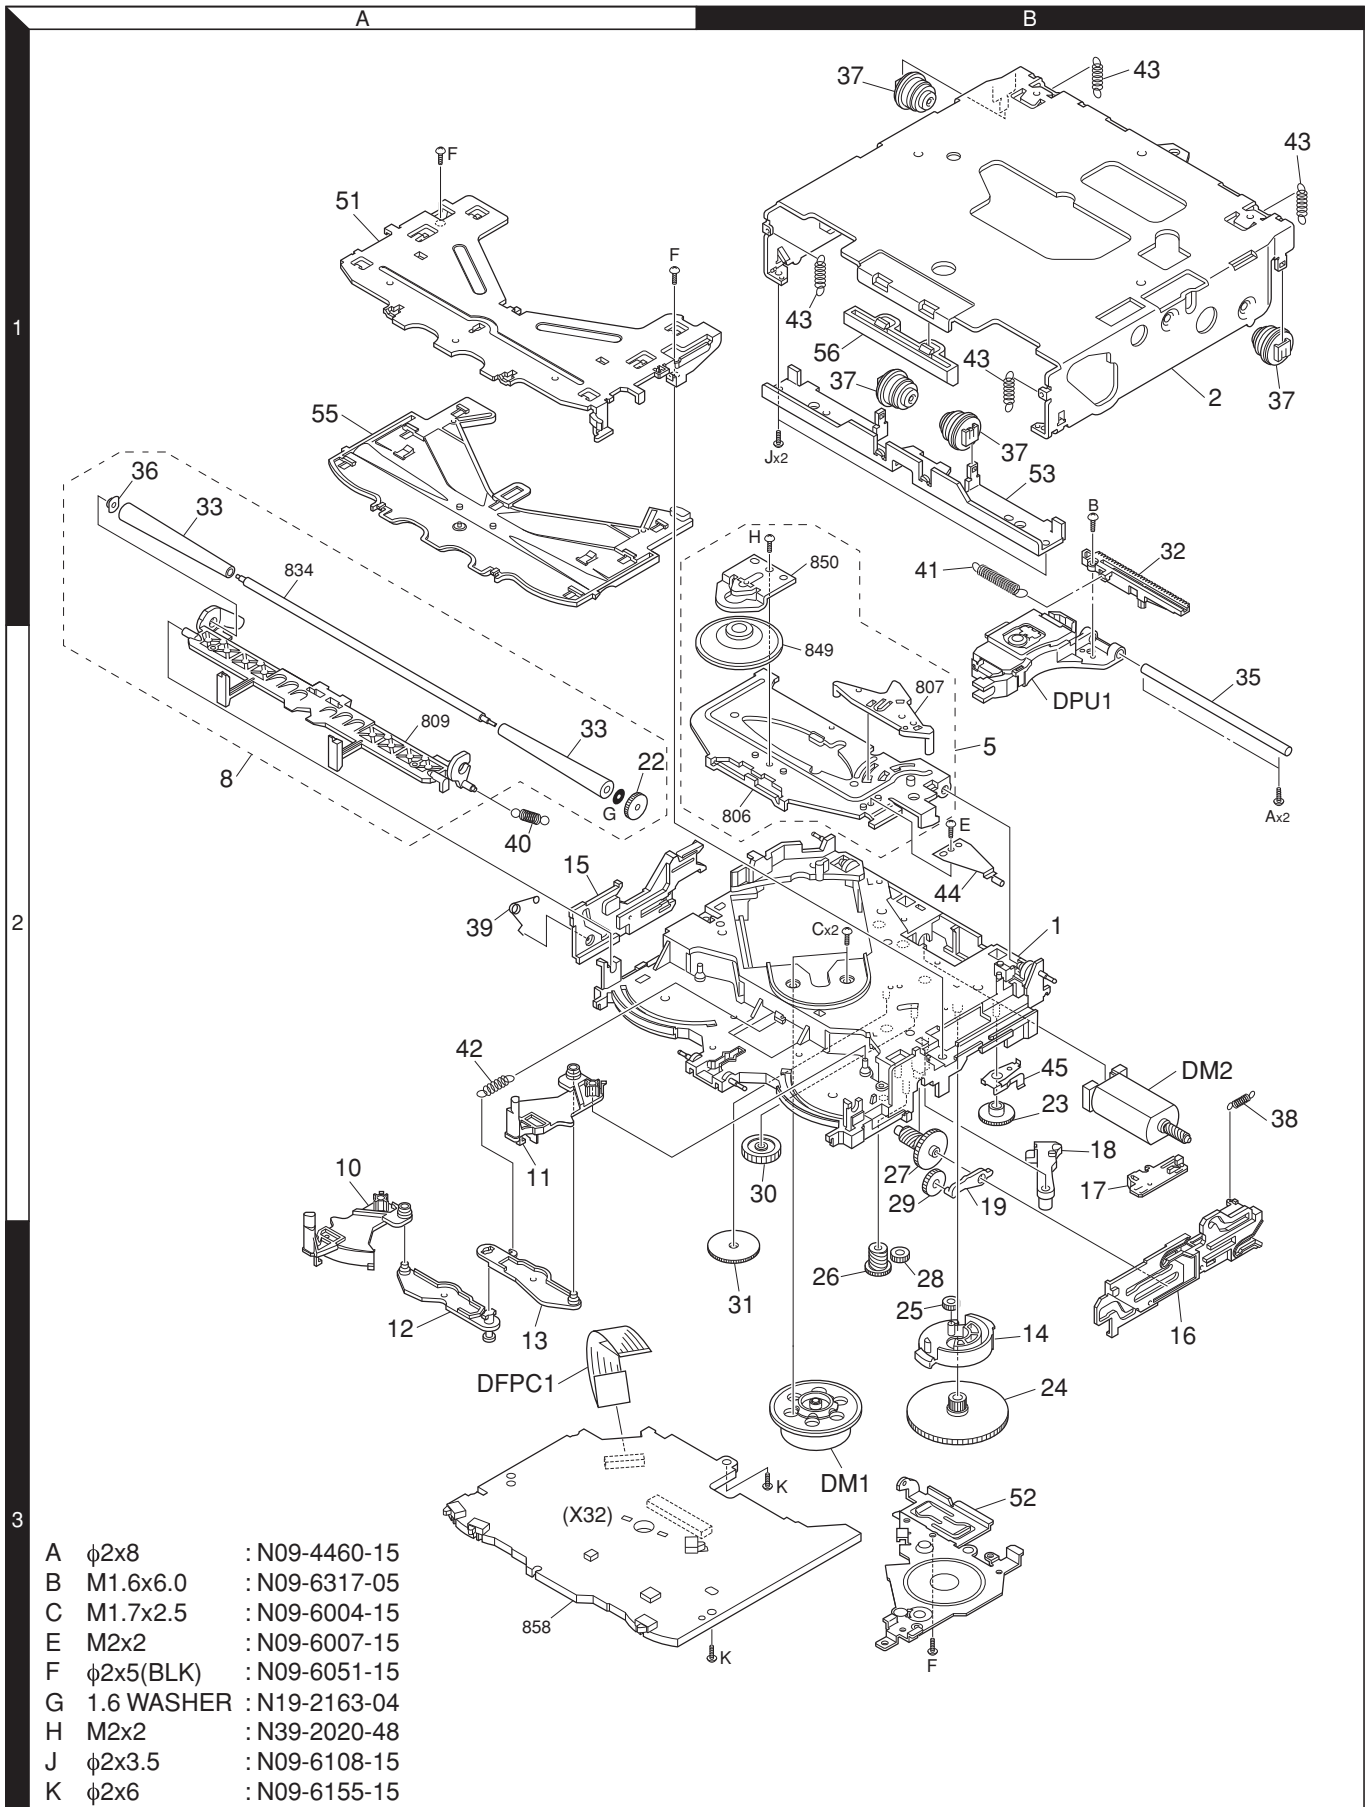


Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

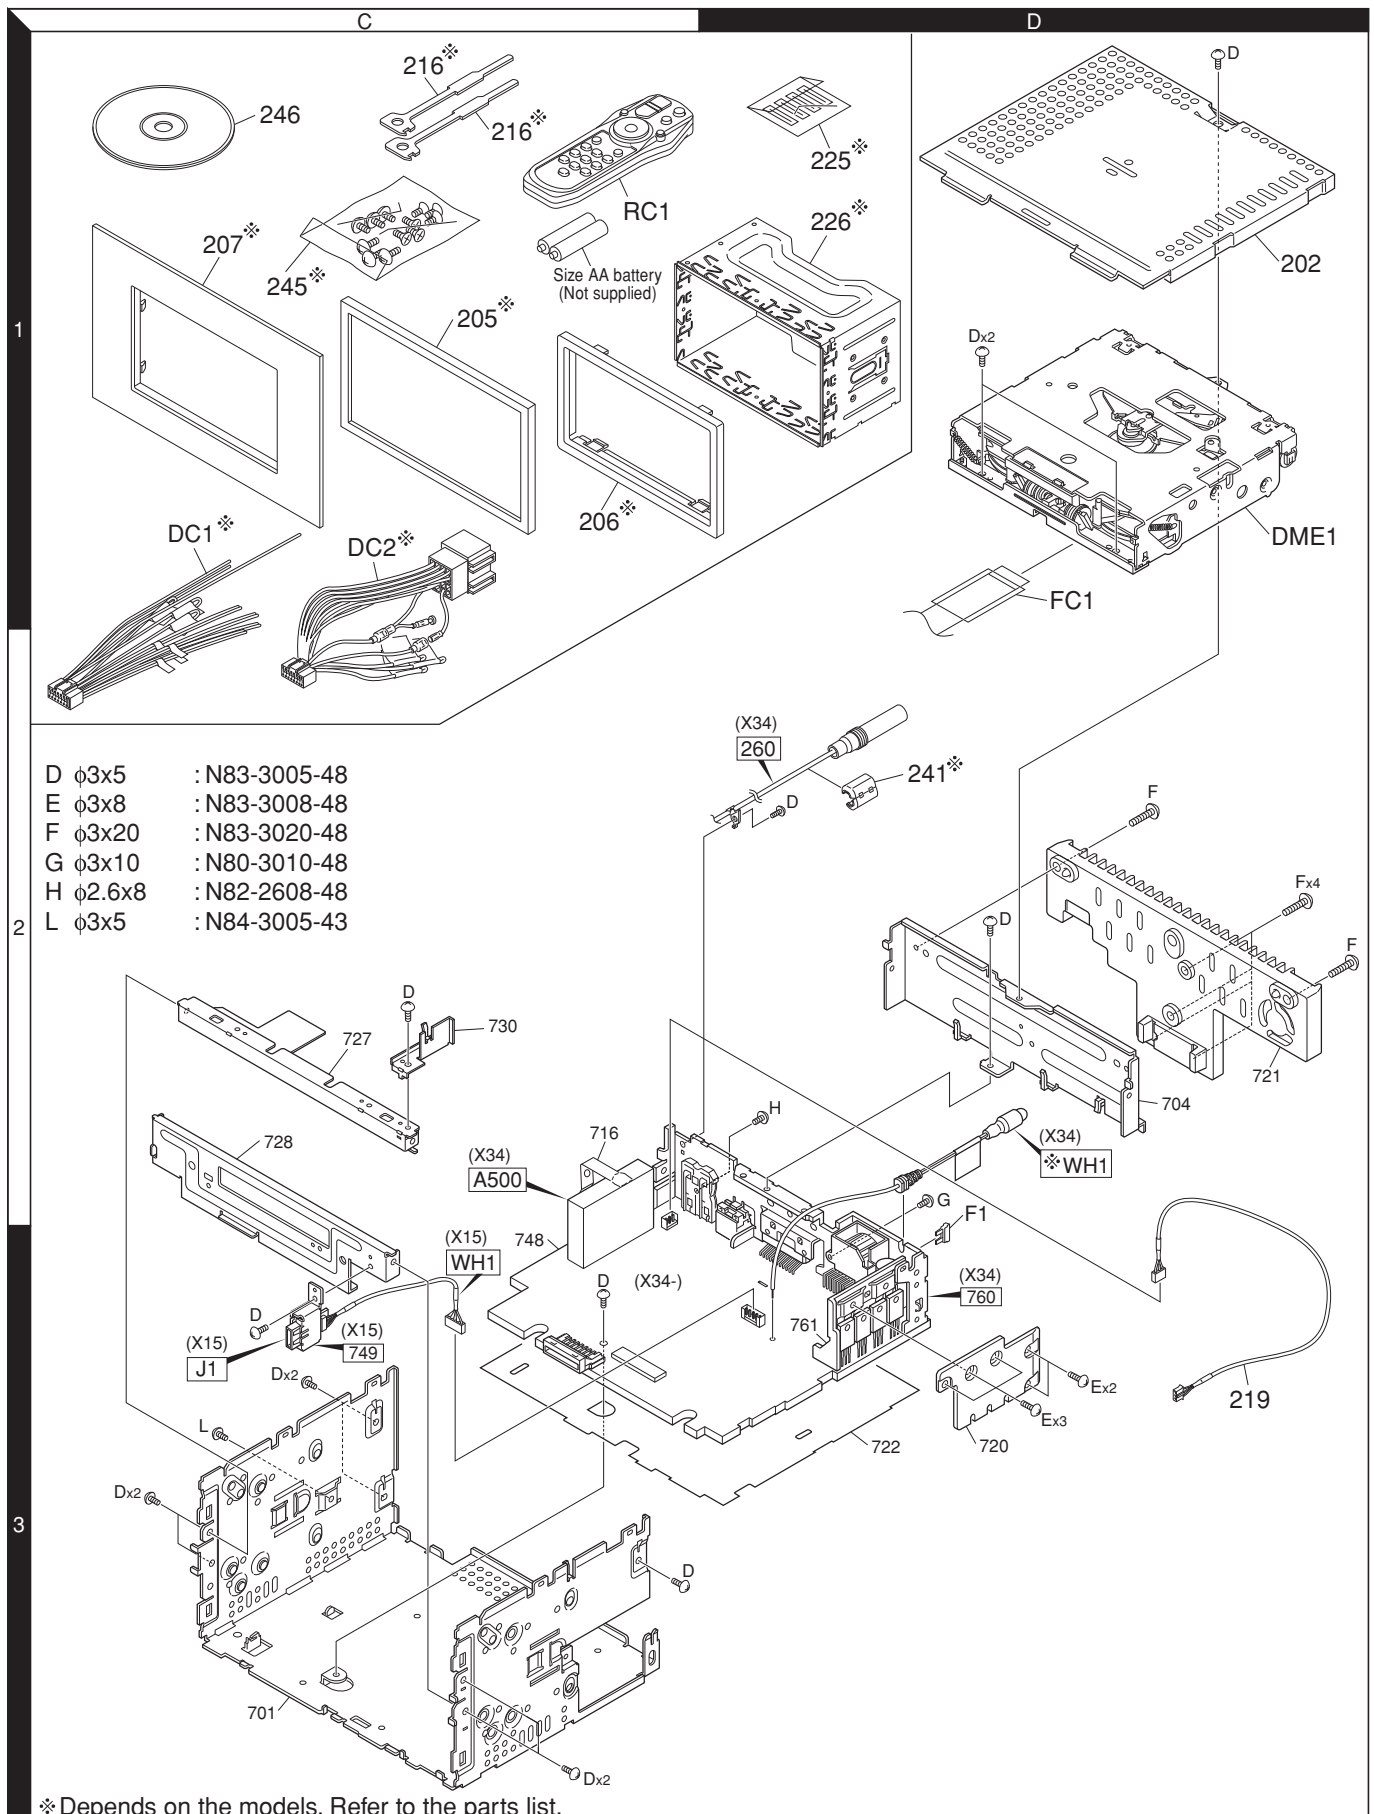

EXPLODED VIEW (PANEL)

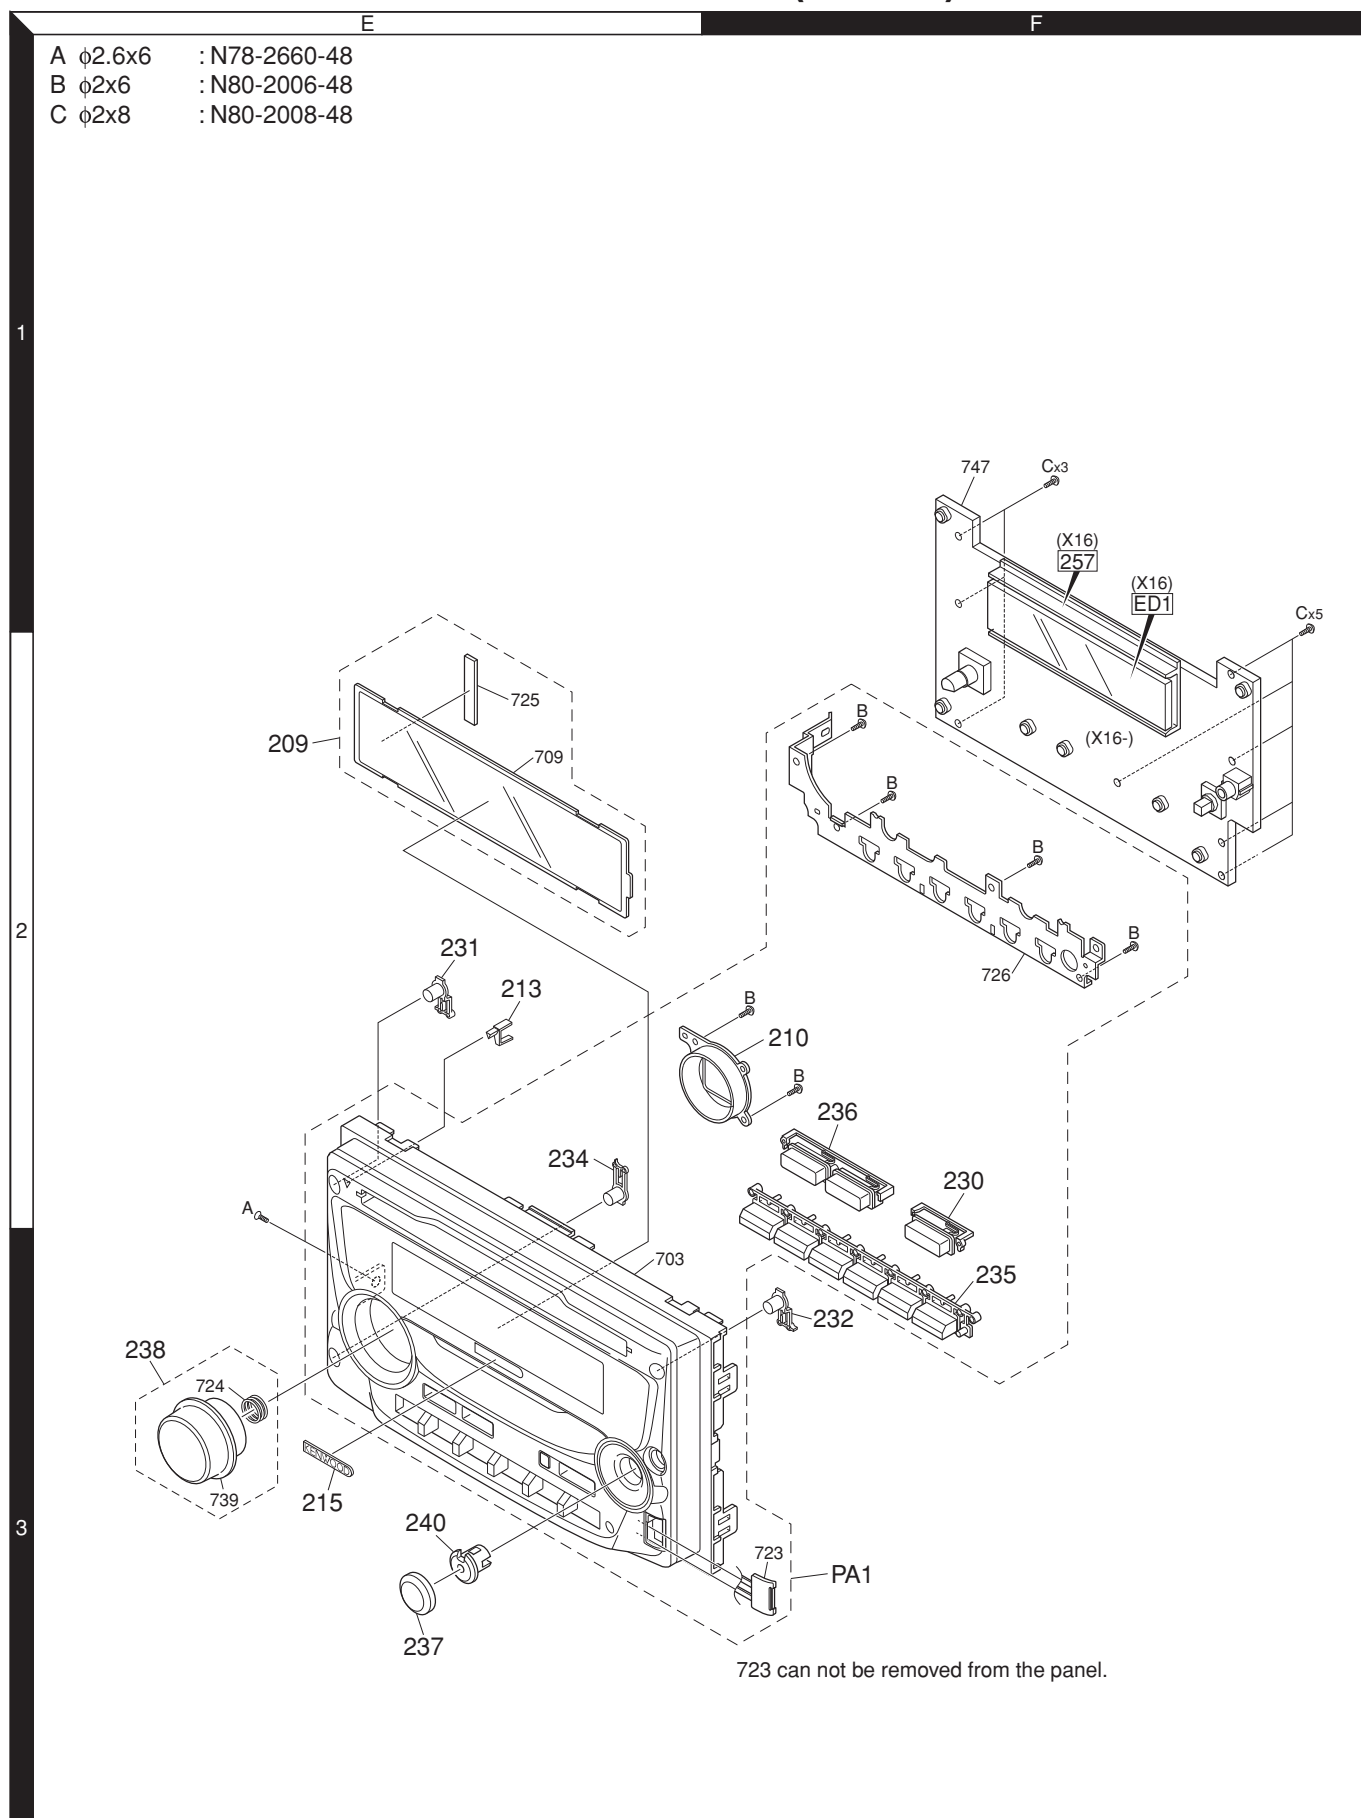

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Ad	New	Parts No.	Description	Destination
DPX502/DPX502U/DPX502UY/DPX-MP5100U					
202	1D		A52-0872-12	TOP PLATE	
PA1	3F	*	A64-4096-02	PANEL ASSY	K1
PA1	3F	*	A64-4097-02	PANEL ASSY	M1
PA1	3F	*	A64-4098-02	PANEL ASSY	E1E2
RC1	1C		A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	
-		*	B59-1893-00	SUB-INST. MANUAL (ENGLISH)	
-		*	B59-1894-00	SUB-INST. MANUAL (FRE.SPA.)	K1E1
-		*	B59-1895-00	SUB-INST. MANUAL (GER.DUT.ITA.)	E1
-		*	B59-1896-00	SUB-INST. MANUAL (RUSSIAN)	E2
-		*	B59-1897-00	SUB-INST. MANUAL (S-CHINESE)	M1
-		*	B64-3826-00	INST. MANUAL (ENG.FRE.)	K1
-		*	B64-3827-00	INST. MANUAL (ARABIC)	M1
-		*	B64-3828-00	INST. MANUAL (ENG.S-CHI.)	M1
-		*	B64-3829-00	INST. MANUAL (ENGLISH)	E1E2
-		*	B64-3830-00	INST. MANUAL (FRE.GER.)	E1
-		*	B64-3831-00	INST. MANUAL (DUT.ITA.)	E1
-		*	B64-3832-00	INST. MANUAL (SPA.POR.)	E1
-		*	B64-3833-00	INST. MANUAL (RUSSIAN)	E2
205	1C		B07-3046-04	ESCUTCHEON ASSY	M1
206	1C		B07-3165-02	ESCUTCHEON	K1E1E2
207	1C		B07-3172-12	ESCUTCHEON	K1
209	2E		B10-4809-03	FRONT GLASS ASSY	
210	2F		B19-2368-03	LIGHTING BOARD (VOL)	
213	2E		B19-2373-03	LIGHTING BOARD (TRIANGLE)	
215	3E		B43-1535-04	BADGE	
216	1C		D10-4589-04	LEVER	K1E1E2
219	3D		E39-0884-05	WIRING HARNESS (FRONT AUX)	
△ DC1	1C		E30-6428-05	DC CORD	K1M1
△ DC2	1C		E30-6671-05	DC CORD	E1E2
FC1	1D		E39-0811-05	FLAT CABLE (CD)	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
-		*	H54-3899-03	ITEM CARTON CASE	K1
-		*	H54-3900-03	ITEM CARTON CASE	M1
-		*	H54-3901-03	ITEM CARTON CASE	E1
-		*	H54-4101-03	ITEM CARTON CASE	E2
225	1D		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K1
226	1D		J22-0429-13	MOUNTING HARDWARE ASSY	K1E1E2
230	2F		K24-4638-03	PUSH KNOB (SRC)	
231	2E		K24-4448-03	PUSH KNOB (DISP)	
232	3F		K24-4450-03	PUSH KNOB (EJECT)	
234	2E		K24-4454-03	PUSH KNOB (ATT)	
235	3F		K25-1787-02	PUSH KNOB (PRESET)	
236	2F		K25-1801-03	PUSH KNOB (AUTO/Q)	K1M1
236	2F		K25-1820-03	PUSH KNOB (TI/Q)	E1E2
237	3E		K28-0195-03	KEY TOP (FM/AM)	
238	3E		K28-0175-03	KNOB ASSY (VOL)	
240	3E		K29-7141-03	KNOB BASE (FM/AM)	
241	2D		L92-0638-05	FERRITE CORE	E1E2
245	1C		N99-1779-05	SCREW SET	K1M1
A	2E		N78-2660-48	PAN HEAD TAPTITE SCREW	

Ref. No.	Ad	New	Parts No.	Description	Destination
B	2F		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	1F		N80-2008-48	PAN HEAD TAPTITE SCREW	
D	3C		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
F	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
L	3C		N84-3005-43	PAN HEAD TAPTITE SCREW	
246	1C		W01-1704-05	COMPACT DISC	
DME1	1D		X92-5870-00	MECHANISM ASSY (DXM-6C20W)	
SYNTHESIZER UNIT (X15-1050-10)					
J1	3C		E59-0849-05	RECTANGULAR PLUG (USB)	
WH1	3C	*	E39-0927-05	WIRING HARNESS	
SWITCH UNIT (X16-614x-xx)					
D2			B30-1566-05	LED (1608,RED)	M1E2
D2-10			B30-1566-05	LED (1608,RED)	K1E1
D3-10			B30-1575-05	LED (1608,YG)	M1E2
D12-17			B30-1566-05	LED (1608,RED)	K1E1
D12-17			B30-1575-05	LED (1608,YG)	M1E2
D20-22			B30-1766-05	LED	
D26,27			B30-1766-05	LED	
C1-4			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	M1
C14,15			CK73GB1H103K	CHIP C 0.010UF K	K1E1E2
C15			CK73GB1H473K	CHIP C 0.047UF K	M1
CN1			E41-2672-05	PIN ASSY	
J1			E59-0851-05	RECTANGULAR PLUG	
J2			E11-0650-05	3.5D PHONE JACK	
257	1F		J19-7119-12	HOLDER	
CP1,2			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP5,6			RK74GB1J473J	CHIP-COM 47K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R18			RK73GB2A104J	CHIP R 100K J 1/10W	
R19,20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R24			RK73PB2H220J	CHIP R 22 J 1/2W	
R25,26			RK73PB2H330J	CHIP R 33 J 1/2W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A104J	CHIP R 100K J 1/10W	
R39-43			RK73FB2B511J	CHIP R 510 J 1/8W	M1E2
R39-43			RK73FB2B621J	CHIP R 620 J 1/8W	K1E1
R45			RK73EB2E561J	CHIP R 560 J 1/4W	
R47			RK73EB2E911J	CHIP R 910 J 1/4W	
R49			RK73EB2E561J	CHIP R 560 J 1/4W	
R50,51			RK73GB2A103J	CHIP R 10K J 1/10W	
S2			S70-0106-05	TACT SWITCH	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-614x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
S3,4 S5,6 S7 S8-10 S11			S70-0051-15 S70-0901-05 S70-0051-15 S70-0901-05 S70-0051-15	TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH	
S12 S13-15			S70-0901-05 S70-0051-15	TACT SWITCH TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
ED1 ED1 IC1 Q1-3 Q12	1F 1F		3-BT-249INK 3-BT-251INK PNA4S22M02KW 2SA1774 RT1N441U	FLUORESCENT INDICATOR TUBE FLUORESCENT INDICATOR TUBE ANALOGUE IC TRANSISTOR TRANSISTOR	K1E1E2 M1
CD PLAYER UNIT (X32-5980-02) IN CD MECHA					
C1 C3 C21,22 C24 C26			CK73GB1A105K CK73GB0J475K C93-1451-05 C93-1451-05 C93-1451-05	CHIP C 1.0UF K CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C31 C33 C34 C35 C36,37			CK73GB1C224K CK73GB1H472K CK73GB1H682K CK73GB1H102K CK73GB1H682K	CHIP C 0.22UF K CHIP C 4700PF K CHIP C 6800PF K CHIP C 1000PF K CHIP C 6800PF K	
C38 C39 C51 C52 C53			CK73GB1H471K CK73FB1A225K CK73FB0J106K CK73GB1A105K CK73GB1H223K	CHIP C 470PF K CHIP C 2.2UF K CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.022UF K	
C54 C55 C56 C57 C58			CK73GB1H332K CK73GB1A334K CK73FB0J475K C93-1451-05 CC73GCH1H681J	CHIP C 3300PF K CHIP C 0.33UF K CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 680PF J	
C59 C60 C61 C62 C63			C93-1451-05 CK73GB1H223K CC73GCH1H102J CK73GB1C823K CC73GCH1H102J	CHIP C 0.10UF K CHIP C 0.022UF K CHIP C 1000PF J CHIP C 0.082UF K CHIP C 1000PF J	
C64 C72 C74,75 C77,78 C81,82			CK73GB1A334K C93-1451-05 C93-1451-05 C93-1451-05 CC73GCH1H150J	CHIP C 0.33UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 15PF J	
C84 C85			CK73GB1A105K CK73GB1H102K	CHIP C 1.0UF K CHIP C 1000PF K	
CN1 CN2			E41-2612-05 E41-2083-15	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
X2			L77-2867-05	CRYSTAL RESONATOR (16.9344MHZ)	
CP1 CP2 CP4			RK74GA1J222J RK74GA1J103J RK74GA1J101J	CHIP-COM 2.2K J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 100 J 1/16W	

Ref. No.	Ad	New	Parts No.	Description	Destination
CP11 R15 R16 R23 R24			RK74GA1J103J RK73GB2A103J RK73GB2A102J RK73GB2A750J RK73GB2A101J	CHIP-COM 10K J 1/16W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 75 J 1/10W CHIP R 100 J 1/10W	
R27 R31 R32,33 R34 R37			RK73GB2A101J RK73GB2A472J RK73GB2A332J RK73GB2A562J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 3.3K J 1/10W CHIP R 5.6K J 1/10W CHIP R 10K J 1/10W	
R39 R41 R51 R52 R53			RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A562J RK73GB2A102J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 5.6K J 1/10W CHIP R 1.0K J 1/10W	
R54,55 R56 R57 R58 R59			RK73GB2A562J RK73GB2A473J RK73GB2A273J RK73GB2A222J RK73GB2A273J	CHIP R 5.6K J 1/10W CHIP R 47K J 1/10W CHIP R 27K J 1/10W CHIP R 2.2K J 1/10W CHIP R 27K J 1/10W	
R60,61 R62 R63 R64 R65,66			RK73GB2A153J RK73GB2A133J RK73GB2A183J RK73GB2A392J RK73GB2A153J	CHIP R 15K J 1/10W CHIP R 13K J 1/10W CHIP R 18K J 1/10W CHIP R 3.9K J 1/10W CHIP R 15K J 1/10W	
R73 R74 R75 R76 R77			RK73GB2A910J RK73GB2A472J RK73FB2B4R7J RK73GB2A104J RK73GB2A823J	CHIP R 91 J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7 J 1/8W CHIP R 100K J 1/10W CHIP R 82K J 1/10W	
R78 R79 R82-85 R86 R87			RK73GB2A821J RK73GB2A272J RK73GB2A103J RK73GB2A102J RK73GB2A105J	CHIP R 820 J 1/10W CHIP R 2.7K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0M J 1/10W	
R88,89 R91,92 R100 R102 R103			RK73GB2A103J RK73GB2A103J RK73GB2A225J RK73GB2A000JX RK73GB2A2R2J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2M J 1/10W CHIP R 0.0 J 1/10W CHIP R 2.2 J 1/10W	
R105 R108 R110-112 R131			RK73GB2A2R2J RK73EB2E4R7J RK73GB2A2R2J RK73GB2A103J	CHIP R 2.2 J 1/10W CHIP R 4.7 J 1/4W CHIP R 2.2 J 1/10W CHIP R 10K J 1/10W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D1 D2 D3 IC1 IC2			DAN202U MA2S784-F DAN202U MN6627781KC XC6219B332PR	DIODE DIODE DIODE MOS-IC ANALOGUE IC	
IC6 Q3 Q6			BA5824FP UM6K1N 2SB1295-E	ANALOGUE IC DUAL FET TRANSISTOR	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5980-02) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description	Destination
Q7 Q8,9			2SB0970 DTC114YUA	TRANSISTOR DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-560x-xx)					
C1			C90-6746-05	ELECTRO 3300UF 16WV	
C2			CK73FB1C105K	CHIP C 1.0UF K	
C3			CD04AY1A221M	ELECTRO 220UF 10WV	
C4			CD04BA0J101M	ELECTRO 100UF 6.3WV	
C5			C90-5692-05	ELECTRO 220UF 16WV	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7			CD04AS1V100M	ELECTRO 10UF 35WV	
C8			CD04AY1A101M	ELECTRO 100UF 10WV	
C9			CK73GB1A474K	CHIP C 0.47UF K	
C10			CD04AS1C220M	ELECTRO 22UF 16WV	
C11			CD04AS1V100M	ELECTRO 10UF 35WV	
C12			CK73FB1E474K	CHIP C 0.47UF K	
C14			CK73GB1H104K	CHIP C 0.10UF K	
C15,16			CD04BK1A221M	ELECTRO 220UF 10WV	
C17			CD04BK1E101M	ELECTRO 100UF 25WV	
C18,19			CK73GB1H104K	CHIP C 0.10UF K	
C20			CK73GB1H222K	CHIP C 2200PF K	
C21			CK73FB1C105K	CHIP C 1.0UF K	
C22			CK73GB1H472K	CHIP C 4700PF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C52			CK73GB1A105K	CHIP C 1.0UF K	
C53			CK73GB1H103K	CHIP C 0.010UF K	
C54			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
C55			CK73FB1C105K	CHIP C 1.0UF K	
C56,57			CK73GB1H103K	CHIP C 0.010UF K	
C58			CK73GB1H223K	CHIP C 0.022UF K	
C100			CK73GB1H104K	CHIP C 0.10UF K	
C101,102			CC73GCH1H220J	CHIP C 22PF J	
C103-105			CK73GB1H103K	CHIP C 0.010UF K	
C106			CK73GB1H102K	CHIP C 1000PF K	
C107,108			CK73GB1H103K	CHIP C 0.010UF K	
C110			CK73GB1H103K	CHIP C 0.010UF K	
C113			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C114,115			CK73GB1H103K	CHIP C 0.010UF K	
C204			CK73GB1H104K	CHIP C 0.10UF K	M1
C204-206			CK73GB1H104K	CHIP C 0.10UF K	K1E1E2
C206			CK73GB1H104K	CHIP C 0.10UF K	M1
C207			CD04BK1A221M	ELECTRO 220UF 10WV	
C300,301			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
C302			CK73FB1C105K	CHIP C 1.0UF K	
C303,304			CC73GCH1H101J	CHIP C 100PF J	
C305,306			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C307,308			CK73FB1E474K	CHIP C 0.47UF K	
C310-312			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C313,314			CK73FB1C105K	CHIP C 1.0UF K	
C315			CK73GB1H103K	CHIP C 0.010UF K	
C316			CD04AS1V100M	ELECTRO 10UF 35WV	
C317			CD04AS1C470M	ELECTRO 47UF 16WV	
C400			CK73FB1C105K	CHIP C 1.0UF K	
C402			CD04BA1E330M	ELECTRO 33UF 25WV	
C403-406			C90-5620-05	ELECTRO 0.47UF 50WV	
Ref. No.	Add	New	Parts No.	Description	Destination
C414			CK73FB1C105K	CHIP C 1.0UF K	
C420,421			CC73GCH1H050C	CHIP C 5.0PF C	
C422			CC73GCH1H100D	CHIP C 10PF D	
C423,424			C90-6711-05	ELECTRO 1UF 50WV	
C500			CK73GB1H103K	CHIP C 0.010UF K	K1E1E2
C501			CK73FB1A225K	CHIP C 2.2UF K	K1E1E2
C502			CC73GCH1H331J	CHIP C 330PF J	K1E1E2
C503			CD04AS1V100M	ELECTRO 10UF 35WV	K1E1E2
C504-507			CK73GB1H103K	CHIP C 0.010UF K	
C509,510			CC73GCH1H270J	CHIP C 27PF J	K1E1E2
C512			CC73GCH1H561J	CHIP C 560PF J	K1E1E2
C600			CD04AS1V100M	ELECTRO 10UF 35WV	
C601,602			CK73GB1H102K	CHIP C 1000PF K	
C603			CD04AS1V100M	ELECTRO 10UF 35WV	
C605,606			CK73GB1H102K	CHIP C 1000PF K	
C608			CD04AS1V100M	ELECTRO 10UF 35WV	
C611			CD04AS1V100M	ELECTRO 10UF 35WV	
C612			CK73FB1E474K	CHIP C 0.47UF K	
C613			CD04AT0J470M	ELECTRO 47UF 6.3WV	
C614			CK73FB1E474K	CHIP C 0.47UF K	
C615			CK73GB1H103K	CHIP C 0.010UF K	
C617			CK73FB1E474K	CHIP C 0.47UF K	
C618			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C619			CK73FB1E474K	CHIP C 0.47UF K	
C620			CK73GB1H103K	CHIP C 0.010UF K	
C700			CD04AS1V100M	ELECTRO 10UF 35WV	
C702			CK73GB1H104K	CHIP C 0.10UF K	
C703			CC73GCH1H220J	CHIP C 22PF J	
C705			CC73GCH1H220J	CHIP C 22PF J	
C709			CK73GB1H104K	CHIP C 0.10UF K	K1
C711			CD04AS1V100M	ELECTRO 10UF 35WV	
C713			CK73GB1H104K	CHIP C 0.10UF K	
C714			CD04AS1V100M	ELECTRO 10UF 35WV	
C715			CC73GCH1H151J	CHIP C 150PF J	
C719			CK73GB1H104K	CHIP C 0.10UF K	
C720			CC73GCH1H681J	CHIP C 680PF J	
C722			CD04AS1V100M	ELECTRO 10UF 35WV	
C723			CK73GB1A105K	CHIP C 1.0UF K	
C725			CK73GB1H104K	CHIP C 0.10UF K	
C726			CK73GB1A105K	CHIP C 1.0UF K	
C728			CC73GCH1H681J	CHIP C 680PF J	
C731			CC73GCH1H151J	CHIP C 150PF J	
C732			CK73GB1H473K	CHIP C 0.047UF K	
C736			CK73GB1A105K	CHIP C 1.0UF K	
C737			CD04AS1V100M	ELECTRO 10UF 35WV	
C738			CK73GB1A105K	CHIP C 1.0UF K	
C739,740			CC73GCH1H120J	CHIP C 12PF J	
C741			CK73FB0J106K	CHIP C 10UF K	
C742-744			CK73GB1H103K	CHIP C 0.010UF K	
C745			CC73GCH1H331J	CHIP C 330PF J	
C746,747			CK73GB1H103K	CHIP C 0.010UF K	
C749			CK73FB0J106K	CHIP C 10UF K	
C750-762			CK73GB1H103K	CHIP C 0.010UF K	
C763			CK73GB1H104K	CHIP C 0.10UF K	
C764-768			CK73GB1H103K	CHIP C 0.010UF K	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-560x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
C769 C773 C801 C804,805 C805			CK73GB1H104K CK73GB1H103K CK73GB1H102K CK73GB1H102K CK73GB1H102K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 1000PF K CHIP C 1000PF K	K1E1E2 K1E1E2 M1
C806-808 C809 C810 C901-906 C903-905			CC73GCH1H471J CK73GB1H102K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C 470PF J CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	E1E2 E1E2 K1M1 E1E2
C911-918 C919,920 C921-926 C930 C941			CK73GB1H472K CK73GB1H104K CC73GCH1H221J CK73GB1H104K CC73GCH1H680J	CHIP C 4700PF K CHIP C 0.10UF K CHIP C 220PF J CHIP C 0.10UF K CHIP C 68PF J	E1E2 E1E2 E1E2 E1E2 K1
C942 C943 C944 C950			CK73GB1A105K CK73GB1H103K CK73GB1A105K CK73GB1H103K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.010UF K	E1E2 E1E2 E1E2 M1
260 CN5 CN202 CN601 J1	2D		E30-6674-05 E41-2352-05 E41-1685-05 E40-6526-05 E58-0991-05	CORD WITH PLUG (ANT) FLAT CABLE CONNECTOR PIN ASSY PIN ASSY RECTANGULAR RECEPTACLE	
J200 J600 J601 WH1	2D		E58-0993-05 E63-0896-05 E56-0855-05 E30-6706-05	RECTANGULAR RECEPTACLE PIN JACK CYLINDRICAL RECEPTACLE WIRING HARNESS (REMOTE)	M1E1E2
L1 L2 L100 L200 L500			L33-2365-05 L33-2362-05 L41-4795-33 L92-0616-05 L41-4795-33	CHOKE COIL ASSY CHOKE COIL SMALL FIXED INDUCTOR (4.7UH) CHIP FERRITE SMALL FIXED INDUCTOR (4.7UH)	K1E1E2
L700 X100 X101 X500 X700			L92-0615-05 L78-0872-05 L77-2880-05 L77-2002-05 L77-2880-05	CHIP FERRITE RESONATOR (12MHZ) CRYSTAL RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR	K1E1E2
X701			L77-2908-05	CRYSTAL RESONATOR (12.000MHZ)	
D G H	2D 2D 2D		N83-3005-48 N80-3010-48 N82-2608-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
CP100,101 CP103 CP104 CP105 CP107,108			RK74GB1J101J RK74GA1J222J RK74GA1J101J RK74GA1J222J RK74GA1J101J	CHIP-COM 100 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 100 J 1/16W	
CP700 CP701 CP703,704 CP705 CP706-708 CP709-711			RK74HB1J330J RK74GA1J101J RK74HB1J330J RK74HB1J101J RK74HB1J330J	CHIP-COM 33 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 33 J 1/16W	

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
CP712-719 CP720 R1,2 R3 R4			RK74HB1J100J RK74HB1J223J RK73EB2E103J RK73FB2B221J RK73GH2A243D	CHIP-COM 10 J 1/16W CHIP-COM 22K J 1/16W CHIP R 10K J 1/4W CHIP R 220 J 1/8W CHIP R 24K D 1/10W	
R5 R6 R8 R9 R10			RK73GH2A432D RK73FB2B123J RK73FB2B152J RK73GB2A104J RK73FB2B681J	CHIP R 4.3K D 1/10W CHIP R 12K J 1/8W CHIP R 1.5K J 1/8W CHIP R 100K J 1/10W CHIP R 680 J 1/8W	
R11 R12 R13 R14 R15			RK73GB2A104J RK73FB2B222J RK73GB2A473J RK73GH2A623D RK73GH2A153D	CHIP R 100K J 1/10W CHIP R 2.2K J 1/8W CHIP R 47K J 1/10W CHIP R 62K D 1/10W CHIP R 15K D 1/10W	
R16 R17 R18 R19 R20			RK73GB2A102J RK73GB2A683J RK73GB2A104J RK73GB2A223J RK73FB2B822J	CHIP R 1.0K J 1/10W CHIP R 68K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 8.2K J 1/8W	
R21 R22 R25 R50,51 R52			RK73GB2A473J RK73GB2A103J RK73GB2A223J RK73GB2A103J RK73GB2A223J	CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W	K1M1
R54 R56 R57 R59 R60			RK73PB2H221J RK73PB2H221J R92-5024-05 RK73GB2A183J RK73GB2A223J	CHIP R 220 J 1/2W CHIP R 220 J 1/2W CHIP R 1K J 3/4W CHIP R 18K J 1/10W CHIP R 22K J 1/10W	K1M1 K1M1
R61 R62 R63,64 R65 R66			RK73GB2A104J RK73GB2A473J RK73GB2A104J RK73FB2B203J R92-5024-05	CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 20K J 1/8W CHIP R 1K J 3/4W	
R67 R68 R69 R70 R71			RK73EB2E472J RK73EB2E473J R92-5088-05 RK73FB2B472J RK73FB2B683J	CHIP R 4.7K J 1/4W CHIP R 47K J 1/4W CHIP R 3.3K J 3/4W CHIP R 4.7K J 1/8W CHIP R 68K J 1/8W	
R72 R100 R101-103 R105 R107			RK73GB2A393J RK73GB2A225J RK73GB2A104J RK73GB2A103J RK73GB2A102J	CHIP R 39K J 1/10W CHIP R 2.2M J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W	
R110 R111 R112 R115 R116			RK73GB2A222J RK73GB2A473J RK73GB2A101J RK73GB2A102J RK73GB2A223J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W	K1E1E2
R117 R118 R121 R122 R123,124			RK73GB2A102J RK73GB2A103J RK73GB2A104J RK73GB2A101J RK73GB2A104J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-560x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R125			RK73GB2A473J	CHIP R 47K J 1/10W	M1 K1E1E2	R508			RK73FB2B102J	CHIP R 1.0K J 1/8W	K1E1E2
R126			RK73GB2A222J	CHIP R 2.2K J 1/10W		R509-511			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R126,127			RK73GB2A222J	CHIP R 2.2K J 1/10W		R512			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R128			RK73GB2A101J	CHIP R 100 J 1/10W		R600			RK73FB2B181J	CHIP R 180 J 1/8W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W		R601			RK73GB2A331J	CHIP R 330 J 1/10W	
R132			RK73GB2A471J	CHIP R 470 J 1/10W		R602,603			RK73GB2A223J	CHIP R 22K J 1/10W	
R133,134			RK73GB2A104J	CHIP R 100K J 1/10W		R604			RK73FB2B181J	CHIP R 180 J 1/8W	
R135			RK73GB2A471J	CHIP R 470 J 1/10W		R605			RK73GB2A331J	CHIP R 330 J 1/10W	
R136			RK73GB2A472J	CHIP R 4.7K J 1/10W		R613			RK73GB2A331J	CHIP R 330 J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W		R614,615			RK73GB2A223J	CHIP R 22K J 1/10W	
R138			RK73GB2A104J	CHIP R 100K J 1/10W		R617			RK73GB2A331J	CHIP R 330 J 1/10W	
R139			RK73GB2A102J	CHIP R 1.0K J 1/10W		R618			RK73EB2E100J	CHIP R 10 J 1/4W	
R140			RK73GB2A101J	CHIP R 100 J 1/10W		R619			RK73GB2A123J	CHIP R 12K J 1/10W	
R141			RK73GB2A472J	CHIP R 4.7K J 1/10W		R620			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R142			RK73GB2A101J	CHIP R 100 J 1/10W		R621			RK73GB2A123J	CHIP R 12K J 1/10W	
R146			RK73GB2A102J	CHIP R 1.0K J 1/10W		R622			RK73EB2E100J	CHIP R 10 J 1/4W	
R147			RK73GB2A222J	CHIP R 2.2K J 1/10W		R623			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R148			RK73GB2A472J	CHIP R 4.7K J 1/10W		R624			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R149			RK73GB2A222J	CHIP R 2.2K J 1/10W		R625			RK73EB2E101J	CHIP R 100 J 1/4W	
R151,152			RK73GB2A104J	CHIP R 100K J 1/10W		R626			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R153			RK73GB2A101J	CHIP R 100 J 1/10W		R627-631			RK73EB2E101J	CHIP R 100 J 1/4W	
R154,155			RK73GB2A392J	CHIP R 3.9K J 1/10W		R632			RK73EB2E100J	CHIP R 10 J 1/4W	
R157			RK73GB2A223J	CHIP R 22K J 1/10W		R633			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R158			RK73GB2A104J	CHIP R 100K J 1/10W		R634			RK73EB2E100J	CHIP R 10 J 1/4W	
R159			RK73GB2A223J	CHIP R 22K J 1/10W		R635			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R159			RK73GB2A473J	CHIP R 47K J 1/10W	K1E2 E1 E2 M1	R636,637			RK73FB2B181J	CHIP R 180 J 1/8W	
R159,160			RK73GB2A223J	CHIP R 22K J 1/10W		R702			RK73GB2A473J	CHIP R 47K J 1/10W	
R160			RK73GB2A223J	CHIP R 22K J 1/10W		R703			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R160			RK73GB2A473J	CHIP R 47K J 1/10W		R704			RK73GB2A101J	CHIP R 100 J 1/10W	
R162-164			RK73GB2A473J	CHIP R 47K J 1/10W		R705			RK73GB2A473J	CHIP R 47K J 1/10W	
R165			RK73GB2A104J	CHIP R 100K J 1/10W		R706			RK73GB2A123J	CHIP R 12K J 1/10W	
R207,208			RK73EB2E101J	CHIP R 100 J 1/4W		R707			RK73GB2A473J	CHIP R 47K J 1/10W	
R209			RK73EB2E102J	CHIP R 1.0K J 1/4W		R709,710			RK73GB2A473J	CHIP R 47K J 1/10W	
R210-214			RK73EB2E101J	CHIP R 100 J 1/4W		R711			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R215			RK73EB2E102J	CHIP R 1.0K J 1/4W		R712			RK73GB2A103J	CHIP R 10K J 1/10W	
R216,217			RK73GB2A153J	CHIP R 15K J 1/10W	M1E1E2	R713			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R218,219			RK73GB2A101J	CHIP R 100 J 1/10W		R714			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R220			RK73EB2E102J	CHIP R 1.0K J 1/4W		R717			RK73GB2A221J	CHIP R 220 J 1/10W	
R224			RK73PB2H2R0J	CHIP R 2.0 J 1/2W		R718,719			RK73GB2A473J	CHIP R 47K J 1/10W	
R300,301			RK73GB2A103J	CHIP R 10K J 1/10W		R720			RK73GH2A104D	CHIP R 100K D 1/10W	
R302,303			RK73GB2A101J	CHIP R 100 J 1/10W		R721			RK73GB2A473J	CHIP R 47K J 1/10W	
R304			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R722			RK73GB2A101J	CHIP R 100 J 1/10W	
R400			RK73GB2A333J	CHIP R 33K J 1/10W		R723,724			RK73GB2A473J	CHIP R 47K J 1/10W	
R401			RK73GB2A104J	CHIP R 100K J 1/10W		R725			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R402			RK73GB2A102J	CHIP R 1.0K J 1/10W		R729			RK73GB2A103J	CHIP R 10K J 1/10W	
R403			RK73GB2A432J	CHIP R 4.3K J 1/10W		R731			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R404			RK73GB2A100J	CHIP R 10 J 1/10W		R732			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R405			RK73GB2A221J	CHIP R 220 J 1/10W		R734			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R406			RK73GB2A223J	CHIP R 22K J 1/10W		R735,736			RK73GB2A223J	CHIP R 22K J 1/10W	
R410,411			RK73GB2A331J	CHIP R 330 J 1/10W		R738,739			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R412			RK73GB2A161J	CHIP R 160 J 1/10W	K1E1E2	R740			RK73GB2A101J	CHIP R 100 J 1/10W	
R502			RK73GB2A102J	CHIP R 1.0K J 1/10W		R741,742			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R503			RK73GB2A223J	CHIP R 22K J 1/10W		R743			RK73GB2A223J	CHIP R 22K J 1/10W	
R504,505			RK73GB2A471J	CHIP R 470 J 1/10W		R744			RK73GB2A561J	CHIP R 560 J 1/10W	
R506,507			RK73GB2A472J	CHIP R 4.7K J 1/10W		R745			RK73GB2A100J	CHIP R 10 J 1/10W	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-560x-xx)

Ref. No.	Added	New	Parts No.	Description	Destination
R746			RK73GB2A101J	CHIP R 100 J 1/10W	
R747			RK73GB2A223J	CHIP R 22K J 1/10W	
R748			RK73GB2A100J	CHIP R 10 J 1/10W	
R749			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R750			RK73GB2A100J	CHIP R 10 J 1/10W	
R753			RK73GB2A153J	CHIP R 15K J 1/10W	
R754			RK73GB2A101J	CHIP R 100 J 1/10W	
R755,756			RK73GB2A470J	CHIP R 47 J 1/10W	
R758			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R759-762			RK73GB2A223J	CHIP R 22K J 1/10W	
R764,765			RK73GB2A223J	CHIP R 22K J 1/10W	
R766			RK73GB2A100J	CHIP R 10 J 1/10W	
R767			RK73GB2A223J	CHIP R 22K J 1/10W	
R768			RK73GB2A100J	CHIP R 10 J 1/10W	
R769			RK73GB2A104J	CHIP R 100K J 1/10W	
R770			RK73GB2A223J	CHIP R 22K J 1/10W	
R771,772			RK73GB2A680J	CHIP R 68 J 1/10W	
R773			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R774			RK73GB2A680J	CHIP R 68 J 1/10W	
R775			RK73GB2A153J	CHIP R 15K J 1/10W	
R776			RK73GB2A330J	CHIP R 33 J 1/10W	
R777			RK73GB2A153J	CHIP R 15K J 1/10W	
R778			RK73GB2A330J	CHIP R 33 J 1/10W	
R779			RK73GB2A101J	CHIP R 100 J 1/10W	
R781			RK73GB2A104J	CHIP R 100K J 1/10W	
R782-784			RK73GB2A101J	CHIP R 100 J 1/10W	
R786			RK73GB2A101J	CHIP R 100 J 1/10W	
R787			RK73GB2A104J	CHIP R 100K J 1/10W	
R788			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R789			RK73GB2A104J	CHIP R 100K J 1/10W	
R790			RK73GB2A680J	CHIP R 68 J 1/10W	
R791,792			RK73GB2A104J	CHIP R 100K J 1/10W	
R793			RK73GB2A220J	CHIP R 22 J 1/10W	
R794			RK73GB2A101J	CHIP R 100 J 1/10W	
R795			RK73GB2A470J	CHIP R 47 J 1/10W	
R796			RK73GB2A101J	CHIP R 100 J 1/10W	
R797			RK73GB2A103J	CHIP R 10K J 1/10W	
R798-800			RK73GB2A470J	CHIP R 47 J 1/10W	
R801-804			RK73GB2A101J	CHIP R 100 J 1/10W	
R805,806			RK73GB2A100J	CHIP R 10 J 1/10W	
R807-815			RK73GB2A223J	CHIP R 22K J 1/10W	
R816-819			RK73GB2A100J	CHIP R 10 J 1/10W	
R820,821			RK73GB2A101J	CHIP R 100 J 1/10W	
R824			RK73GB2A103J	CHIP R 10K J 1/10W	
R911			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R913-916			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1M1
R913-916			RK73GB2A470J	CHIP R 47 J 1/10W	E1E2
R930			RK73GB2A101J	CHIP R 100 J 1/10W	
R952			RK73GB2A100J	CHIP R 10 J 1/10W	K1E1E2
R960			RK73GB2A220J	CHIP R 22 J 1/10W	
R961,962			RK73GB2A470J	CHIP R 47 J 1/10W	
R963,964			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2
R965			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R966			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1E1E2
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2

Ref. No.	Added	New	Parts No.	Description	Destination
W300			R92-2053-05	CHIP R 0 OHM J 1/8W	
W401			R92-1252-05	CHIP R 0 OHM J 1/16W	
W404			R92-1252-05	CHIP R 0 OHM J 1/16W	
W501			R92-1252-05	CHIP R 0 OHM J 1/16W	K1E1E2
W900			R92-1252-05	CHIP R 0 OHM J 1/16W	
D1			S2V60-5009F46	DIODE	
D2			RB160L-40	DIODE	
D3			UDZS5.6B	ZENER DIODE	
D5			UDZS8.2B	ZENER DIODE	
D6			UDZS20B	ZENER DIODE	
D7			UDZS12B	ZENER DIODE	
D9			RB081L-20	DIODE	
D50,51			D1F60-5063	DIODE	
D52			UDZS6.2B	ZENER DIODE	
D53			UDZS6.8B	ZENER DIODE	
D55			UDZS6.8B	ZENER DIODE	
D57			MC2846	DIODE	
D58			02DZ4.7F-Y	ZENER DIODE	
D59-61			D1F60-5063	DIODE	
D213			02DZ6.2F-Y	ZENER DIODE	M1E1E2
D219,220			IMSA-6802-E	SURGE ABSORBER	
D304-306			MC2846	DIODE	
D408			MC2846	DIODE	
D602			MC2846	DIODE	
D607			MC2846	DIODE	
D608-610			02DZ6.8F-Y	ZENER DIODE	
D611-616			02DZ6.2F-Y	ZENER DIODE	
D619-621			02DZ6.8F-Y	ZENER DIODE	
D700			MC2846	DIODE	
IC1			BD9781HFP	ANALOGUE IC	
IC2			M5237ML-CF0J	ANALOGUE IC	
IC100			S-80836CNNB-J	MOS-IC	
IC101			BR24L04FV-W	ROM IC	
IC102		*	30624MWPB60GP	MICROCONTROLLER IC	
IC103			74HC2G02DP	MOS-IC	
IC200			MIC2026-1YM	MOS-IC	
IC300			E-TDA7415CB	ANALOGUE IC	
IC400			E-TDA7850A	ANALOGUE IC	
IC500			LC72725KV	ANALOGUE IC	
IC700			PCM1754DB	MOS-IC	K1E1E2
IC702			341S2094	MICROPROCESSOR IC	
IC703			AK4117	MOS-IC	
IC704			NJM2100V-ZB	ANALOGUE IC	
IC705			TAR5S50-F	ANALOGUE IC	
IC708			SI-3033KMS	ANALOGUE IC	
IC709,710			TC7WT126FU-F	MOS-IC	
IC711			TCC760	MOS-IC	
IC712			TC74LVX08F-F	MOS-IC	
IC714			IC42S164007TIG	DRAM IC	
IC715			A29L80AUV4X9F	ROM IC	
IC716			R1114N181B-TR	ANALOGUE IC (1.8V LF)	
Q1			2SB1565	TRANSISTOR	
Q2			RT1P241M	TRANSISTOR	
Q3			2SB1565	TRANSISTOR	
Q4			2SC4081	TRANSISTOR	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-560x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q5			2SB1565	TRANSISTOR	
Q6			RT1P241M	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			2SB1565	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q10			2SB1565	TRANSISTOR	
Q11			RT1P241M	TRANSISTOR	
Q12			2SC4081	TRANSISTOR	
Q13			2SA1576A	TRANSISTOR	
Q14			RT1N241M	TRANSISTOR	
Q15			2SA1603A	TRANSISTOR	
Q16-18			RT1N241M	TRANSISTOR	
Q50			RT1N144M	TRANSISTOR	
Q51			2SC4081	TRANSISTOR	
Q52			RT1P141M	TRANSISTOR	
Q53			RT1N144M	TRANSISTOR	K1M1
Q54			2SA1576A	TRANSISTOR	
Q56			2SB1188 (Q,R)	TRANSISTOR	K1M1
Q57			2SC4081	TRANSISTOR	
Q58			2SB1188 (Q,R)	TRANSISTOR	
Q59			2SC4081	TRANSISTOR	
Q60			RT1N441M	TRANSISTOR	
Q500			2SB1689	TRANSISTOR	
Q501			RT1N241M	TRANSISTOR	
Q600			DTC143TUA	DIGITAL TRANSISTOR	
Q601			RT1P241M	TRANSISTOR	
Q602			DTC143TUA	DIGITAL TRANSISTOR	
Q605			DTC143TUA	DIGITAL TRANSISTOR	
Q606			RT1P241M	TRANSISTOR	
Q607			DTC143TUA	DIGITAL TRANSISTOR	
Q704			RT1P144M	TRANSISTOR	
Q706			RT1N144M	TRANSISTOR	
A500	2C		X86-4040-11	FRONT-END UNIT	K1M1
A500	2C		X86-4042-70	FRONT-END UNIT	E1E2
MECHANISM ASSY (X92-5870-00) DXM-6C20W					
1	2B		A10-5328-11	CHASSIS	
2	1B		A10-5329-11	CHASSIS	
5	2B		D10-4910-13	ARM ASSY	
8	2A		D10-4911-23	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-12	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	

Ref. No.	Add	New	Parts No.	Description	Destination
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1547-04	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B		J22-0519-03	MOUNTING HARDWARE	
55	1A		J90-1138-41	GUIDE	
56	1B		J90-1023-03	GUIDE	
DPC1	3A		J86-0039-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (PT2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

K1 : DPX502 M1 : DPX-MP5100U E1 : DPX502U E2 : DPX502UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.