




EXPLODED VIEW (UNIT)

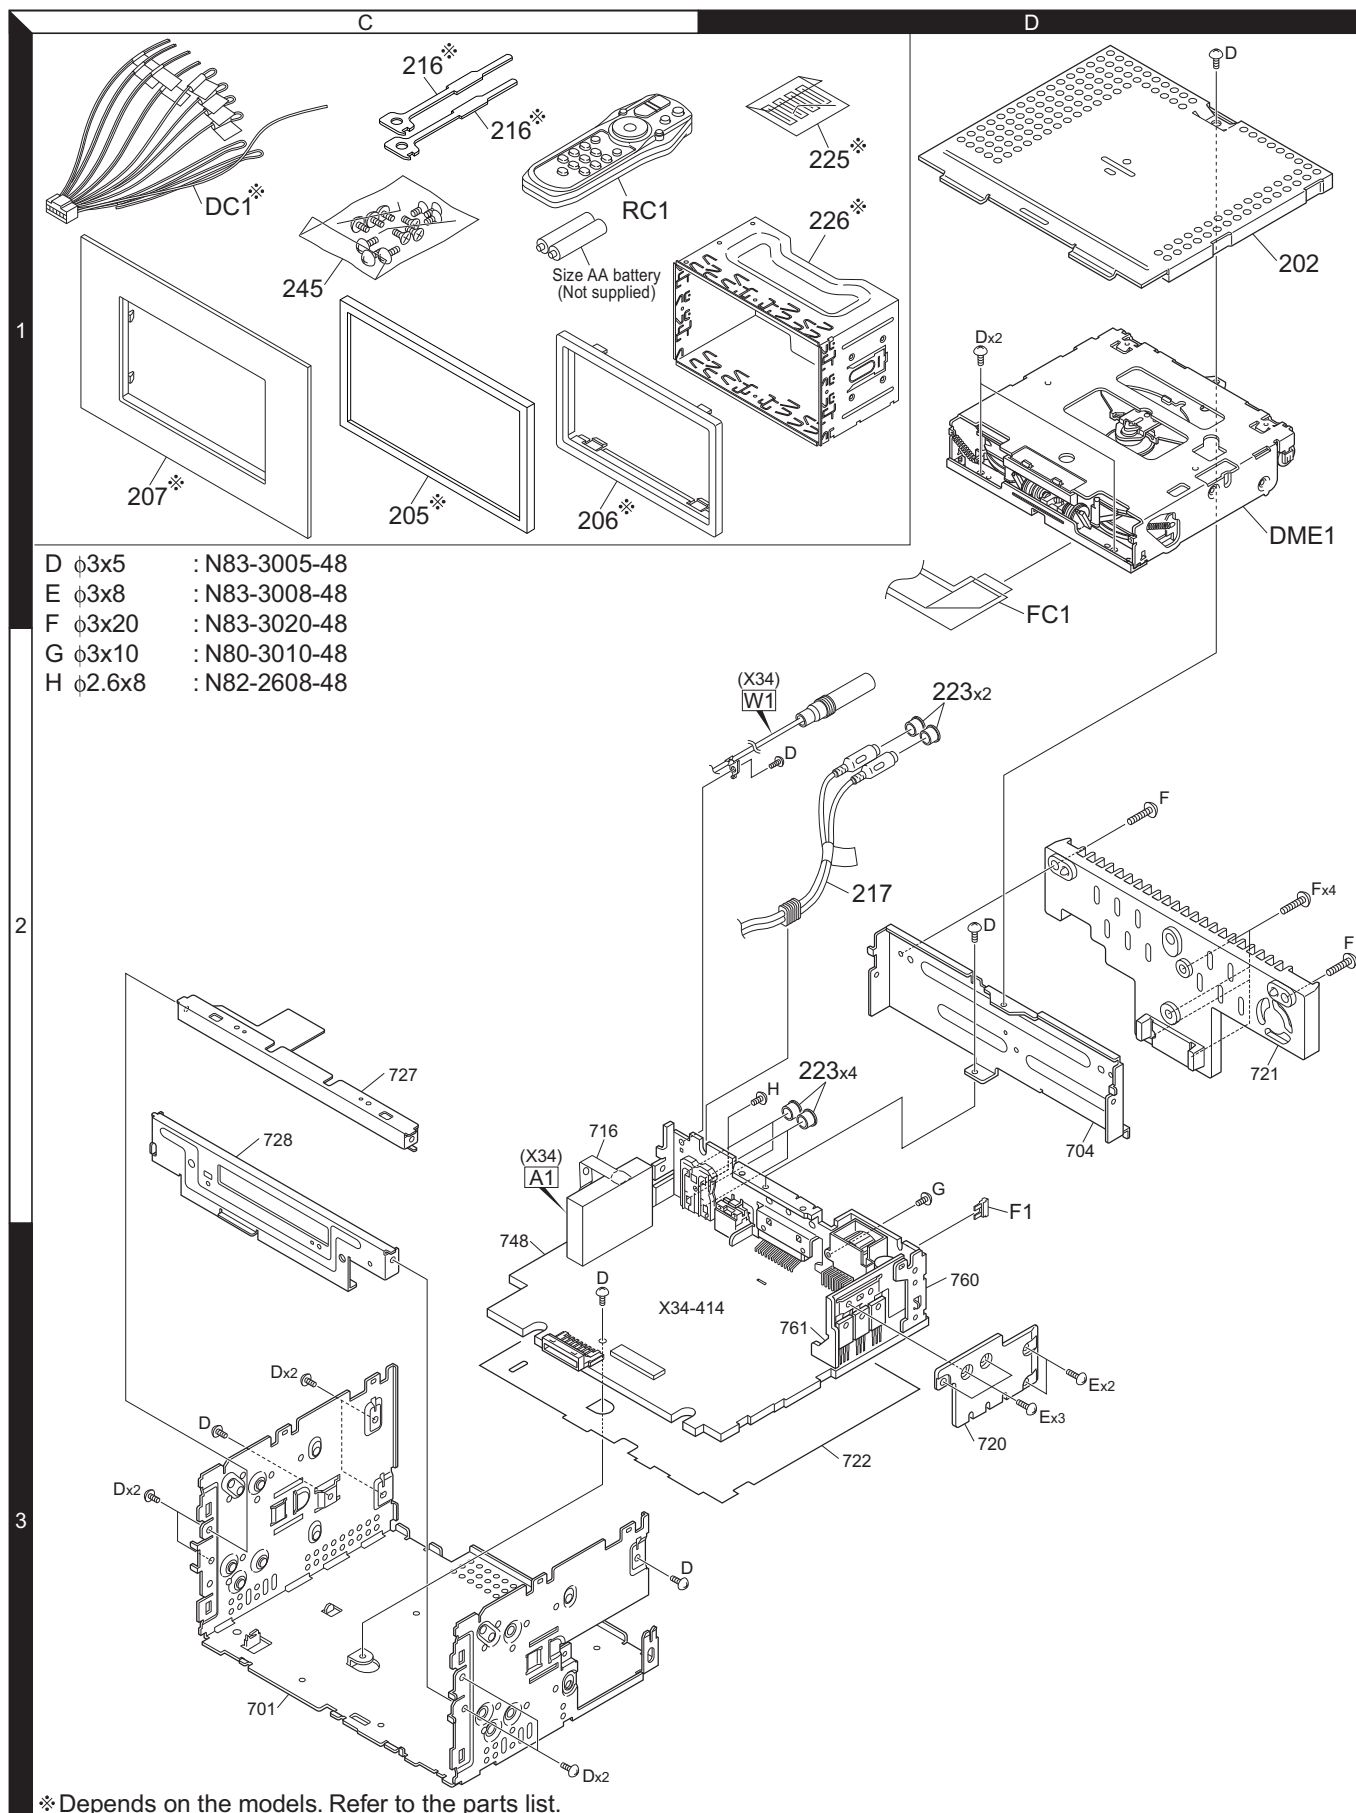



DPX301

DPX-MP2090/MP2090S

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DPX301, DPX-MP2090/MP2090S					
202	1D	*	A52-0872-02	TOP PLATE	
PA1	3E	*	A64-3785-12	PANEL ASSY	K1
PA1	3E	*	A64-3811-12	PANEL ASSY	M5
PA1	3E	*	A64-3812-12	PANEL ASSY	M6
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY	
-			B46-0682-00	WARRANTY CARD	
-		*	B64-3283-00	INSTRUCTION MAN (ENG.T-CHI.KOR)	M5M6
-		*	B64-3285-00	INSTRUCTION MANUAL (ENGLISH)	K1
-		*	B64-3286-00	INSTRUCTION MANUAL (FRE.SPA.)	K1
205	1C		B07-3046-04	ESCUTCHEON ASSY	M5M6
206	1C	*	B07-3165-02	ESCUTCHEON	K1
207	1C	*	B07-3172-12	ESCUTCHEON	K1
208	3F	*	B10-4811-03	FRONT GLASS	
210	2E	*	B19-2368-03	LIGHTING BOARD	
213	2E	*	B19-2373-03	LIGHTING BOARD	
215	3E	*	B43-1535-04	BADGE	
216	1C		D10-4589-04	LEVER	K1
217	2D		E30-6291-15	CORD WITH PINPLUG	
△ DC1	1C		E30-6408-05	DC CORD	M5M6
△ DC1	1C		E30-6428-05	DC CORD	K1
△ FC1	1D	*	E39-0811-05	FLAT CABLE	
223	2D		F29-0626-04	INSULATING COVER	
△ F1	3D		F52-0006-05	FUSE (MINI BLADE TYPE)	
-		*	H10-4970-02	POLYSTYRENE FOAMED FIXTURE	M5M6
-		*	H10-4971-02	POLYSTYRENE FOAMED FIXTURE	K1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1164-04	PROTECTION BAG (0.5X350X480)	
-			H25-1170-04	PROTECTION BAG	M5M6
-		*	H54-3649-03	ITEM CARTON CASE	K1
-		*	H54-3650-03	ITEM CARTON CASE	M5
-		*	H54-3651-03	ITEM CARTON CASE	M6
225	1D	*	H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K1
226	1D	*	J22-0429-03	MOUNTING HARDWARE ASSY	K1
230	2F	*	K24-4445-03	PUSH KNOB (SRC)	
231	2E	*	K24-4448-03	PUSH KNOB (DISP)	K1M5
231	2E	*	K24-4449-03	PUSH KNOB (DISP)	M6
232	3F	*	K24-4450-03	PUSH KNOB (CD EJECT)	K1M5
232	3F	*	K24-4451-03	PUSH KNOB (CD EJECT)	M6
234	2E	*	K24-4454-03	PUSH KNOB (ATT)	K1M5
234	2E	*	K24-4473-03	PUSH KNOB (ATT)	M6
235	3F	*	K25-1787-02	PUSH KNOB (PRESET)	
236	2F	*	K25-1801-03	PUSH KNOB (AUTO)	K1M5
236	2F	*	K25-1802-03	PUSH KNOB (AUTO)	M6
237	3E		K28-0106-03	KEY TOP (CONTROL)	
238	3E	*	K29-7195-03	KNOB ASSY (VOL)	
240	3E	*	K29-7197-03	KNOB BASE (CONTROL)	
241	3E	*	K29-7198-03	KEY TOP (VOL)	
245	1C	*	N99-1779-05	SCREW SET	
A	3E		N78-2660-48	PAN HEAD TAPTITE SCREW	
B	2F		N80-2006-48	PAN HEAD TAPTITE SCREW	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C	1F		N80-2008-48	PAN HEAD TAPTITE SCREW	
D	3C		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
F	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
DME1	1F		X92-5470-00	CD MECHANISM ASSY (DXM-6680W)	
SWITCH UNIT (X16-3530-xx)					
D2			B30-1567-05	LED (1608,RED)	M5M6
D2-10			B30-1567-05	LED (1608,RED)	K1
D3-10			B30-1690-05	LED (1608,YG)	M5M6
D12-17			B30-1567-05	LED (1608,RED)	K1
D12-17			B30-1690-05	LED (1608,YG)	M5M6
D20-22			B30-1567-05	LED (1608,RED)	K1
D20-22			B30-1690-05	LED (1608,YG)	M5M6
D26,27			B30-1567-05	LED (1608,RED)	K1
D26,27			B30-1690-05	LED (1608,YG)	M5M6
C1-4			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
257	1F	*	J19-7119-12	HOLDER	
CP1,2			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP5,6		*	RK74GB1J473J	CHIP-COM 47K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R18			RK73GB2A104J	CHIP R 100K J 1/10W	
R19,20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R24			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R28			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A103J	CHIP R 10K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A104J	CHIP R 100K J 1/10W	
R33			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R38			RK73GB2A301J	CHIP R 300 J 1/10W	
R39,40			RK73FB2B511J	CHIP R 510 J 1/8W	M5M6
R39,40			RK73FB2B621J	CHIP R 620 J 1/8W	K1
R41			RK73EB2E681J	CHIP R 680 J 1/4W	M5M6
R41			RK73EB2E821J	CHIP R 820 J 1/4W	K1
R42,43			RK73FB2B511J	CHIP R 510 J 1/8W	M5M6
R42,43			RK73FB2B621J	CHIP R 620 J 1/8W	K1
R45			RK73EB2E681J	CHIP R 680 J 1/4W	M5M6
R45			RK73EB2E821J	CHIP R 820 J 1/4W	K1
R47			RK73EB2E102J	CHIP R 1.0K J 1/4W	M5M6
R47			RK73EB2E112J	CHIP R 1.1K J 1/4W	K1
R49			RK73EB2E681J	CHIP R 680 J 1/4W	M5M6
R49			RK73EB2E821J	CHIP R 820 J 1/4W	K1
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	

K1 : DPX301 (North America)

M5 : DPX-MP2090 **M6** : DPX-MP2090S (Other Areas)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-3530-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
S2			S70-0106-05	TACT SWITCH	
S3,4			S70-0051-15	TACT SWITCH	
S5,6			S70-0901-05	TACT SWITCH	
S7			S70-0051-15	TACT SWITCH	
S8-10			S70-0901-05	TACT SWITCH	
S11			S70-0051-15	TACT SWITCH	
S12			S70-0901-05	TACT SWITCH	
S13-15			S70-0051-15	TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
ED1	1F	*	3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC1			PNA4S22M02KW	ANALOGUE IC	
Q1-3			2SA1774	TRANSISTOR	
Q6			DTA114EUA	DIGITAL TRANSISTOR	
Q7			2SC4617	TRANSISTOR	
Q9			2SC4617	TRANSISTOR	
Q12			DTC144EE	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5860-00)					
C1,2			CK73GB1A105K	CHIP C 1.0UF K	
C3,4			CC73GCH1H681J	CHIP C 680PF J	
C5,6			CC73GCH1H680J	CHIP C 68PF J	
C7,8			CK73GB1H222K	CHIP C 2200PF K	
C9			CK73GB1H104K	CHIP C 0.10UF K	
C10			CK73FB0J106K	CHIP C 10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73GB1A105K	CHIP C 1.0UF K	
C20			CC73GCH1H391J	CHIP C 390PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H152K	CHIP C 1500PF K	
C23			CC73GCH1H391J	CHIP C 390PF J	
C24			CK73EB1A475K	CHIP C 4.7UF K	
C25			CK73FB0J106K	CHIP C 10UF K	
C30			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1A105K	CHIP C 1.0UF K	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C34			CK73FB0J475K	CHIP C 4.7UF K	
C35			CK73GB1H104K	CHIP C 0.10UF K	
C38-40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C42			CK73GB1A105K	CHIP C 1.0UF K	
C43			C92-1792-05	ELECTRO 22UF 6.3WV	
C46			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H102K	CHIP C 1000PF K	
C52			CK73GB0J225K	CHIP C 2.2UF K	
C53,54			CK73GB0J475K	CHIP C 4.7UF K	
C55			CK73FB0J106K	CHIP C 10UF K	
C56,57			CK73GB1H104K	CHIP C 0.10UF K	
C58			CK73FB0J475K	CHIP C 4.7UF K	
C60			CK73GB0J225K	CHIP C 2.2UF K	
C61			CK73GB1H104K	CHIP C 0.10UF K	
C62			CK73FB0J475K	CHIP C 4.7UF K	
C63			CK73GB0J225K	CHIP C 2.2UF K	
C64			CK73GB1H152K	CHIP C 1500PF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C65,66			CK73GB1H102K	CHIP C 1000PF K	
C67			CK73GB1H152K	CHIP C 1500PF K	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73GB1H332K	CHIP C 3300PF K	
C70			CK73GB1H682K	CHIP C 6800PF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73GB1H103K	CHIP C 0.010UF K	
C73			CC73GCH1H120J	CHIP C 12PF J	
C74			CC73GCH1H060D	CHIP C 6.0PF D	
C75			CK73GB1H104K	CHIP C 0.10UF K	
C76			CC73GCH1H030C	CHIP C 3.0PF C	
C77			CC73GCH1H020C	CHIP C 2.0PF C	
C78			CK73GB0J225K	CHIP C 2.2UF K	
C79,80			CK73GB1H104K	CHIP C 0.10UF K	
C81,82			CC73GCH1H470J	CHIP C 47PF J	
C83			CK73GB1H103K	CHIP C 0.010UF K	
C85			CK73FB0J106K	CHIP C 10UF K	
C96			CK73GB0J475K	CHIP C 4.7UF K	
C100			CK73GB1C224K	CHIP C 0.22UF K	
C101			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-2083-15	FLAT CABLE CONNECTOR	
CN2			E41-2297-05	FLAT CABLE CONNECTOR	
X1			L78-0862-05	RESONATOR (16.00MHZ)	
X2			L78-0851-05	RESONATOR (16.93MHZ)	
CP1			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP2			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP4,5			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP6,7			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP8-11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP13			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP14			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP27			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP28			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1,2			RK73GH2A103D	CHIP R 10K D 1/10W	
R3,4			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R5,6			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R7,8			RK73GB2A333J	CHIP R 33K J 1/10W	
R9,10			RK73GH2A103D	CHIP R 10K D 1/10W	
R11,12			RK73GB2A331J	CHIP R 330 J 1/10W	
R14-16			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R20			RK73GB2A123J	CHIP R 12K J 1/10W	
R21			RK73GB2A133J	CHIP R 13K J 1/10W	
R22,23			RK73GB2A123J	CHIP R 12K J 1/10W	
R24			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R25			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R26			RK73GB2A183J	CHIP R 18K J 1/10W	
R27			RK73GB2A163J	CHIP R 16K J 1/10W	
R28			RK73GB2A133J	CHIP R 13K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A133J	CHIP R 13K J 1/10W	
R40-44			RK73GB2A103J	CHIP R 10K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	

K1 : DPX301 (North America)

M5 : DPX-MP2090 **M6** : DPX-MP2090S (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5860-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R50-52 R55 R56 R57 R70			RK73GB2A103J RK73GB2A103J RK73GB2A101J RK73GB2A472J RK73GB2A102J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W	
R71 R72 R74 R75 R78			RK73GB2A101J RK73GB2A333J RK73GB2A333J RK73GB2A750J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 33K J 1/10W CHIP R 33K J 1/10W CHIP R 75 J 1/10W CHIP R 10K J 1/10W	
R79 R80,81 R88 R89 R90			RK73GB2A333J RK73GB2A682J RK73GB2A472J RK73GB2A104J RK73GB2A4R7J	CHIP R 33K J 1/10W CHIP R 6.8K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7 J 1/10W	
R91 R92 R93 R100 R101			RK73GB2A910J RK73GB2A225J RK73GB2A103J RK73GB2A470J RK73GB2A102J	CHIP R 91 J 1/10W CHIP R 2.2M J 1/10W CHIP R 10K J 1/10W CHIP R 47 J 1/10W CHIP R 1.0K J 1/10W	
R102 R103,104 R112,113 R150 R151			RK73GB2A272J RK73GB2A223J RK73GB2A100J RK73GB2A103J RK73GB2A2R2J	CHIP R 2.7K J 1/10W CHIP R 22K J 1/10W CHIP R 10 J 1/10W CHIP R 10K J 1/10W CHIP R 2.2 J 1/10W	
R152 W1 W20,21			RK73EB2E3R3J R92-1252-05 R92-1252-05	CHIP R 3.3 J 1/4W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D1 IC1 IC2 IC3 IC4			DAP202U TAR5S33-F NJM4580V-ZB BA5824FP 703030BYGCJ21A	DIODE ANALOGUE IC ANALOGUE IC ANALOGUE IC MICROCONTROLLER IC	
IC5 IC6 IC7 IC9 IC11			XC6219B332MR BA33BC0WFP UPD63763CGJ BR24L02FV-W TC7SET32FU-F	ANALOGUE IC ANALOGUE IC MOS-IC ROM IC MOS-IC	
Q1 Q4 Q5 Q6 Q7			2SA1576A 2SB0970 DTA143XUA DTC143XUA DTA143XUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q8			DTC143XUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-4140-xx)					
C1 C3 C4 C5 C6			C90-6746-05 C90-5692-05 CK73GB1H103K CD04AS1V100M CD04AS0J101M	ELECTRO 3300UF 16WV ELECTRO 220UF 16WV CHIP C 0.010UF K ELECTRO 10UF 35WV ELECTRO 100UF 6.3WV	
C7			CK73FB1C105K	CHIP C 1.0UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C8 C9 C11 C12 C18			CD04AT1A221M CD04AS1C101M CD04AS1HR47M CD04BF1V470M CD04BF1E101M	ELECTRO 220UF 10WV ELECTRO 100UF 16WV ELECTRO 0.47UF 50WV ELECTRO 47UF 35WV ELECTRO 100UF 25WV	
C19 C20 C45 C101 C102		*	CK73GB1A105K CD04BK1C101M CK73GB1H104K CD04AS1H3R3M CK73GB1A105K	CHIP C 1.0UF K ELECTRO 100UF 16WV CHIP C 0.10UF K ELECTRO 3.3UF 50WV CHIP C 1.0UF K	
C103 C104 C105 C106 C109,110			CK73GB1H104K CK73GB1H103K CK73GB1H223K CK73GB1A105K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 1.0UF K CHIP C 0.010UF K	
C201 C202 C203,204 C205 C206,207			CD04AS0J470M CK73GB1H103K CC73GCH1H220J CK73GB1H104K CK73GB1H103K	ELECTRO 47UF 6.3WV CHIP C 0.010UF K CHIP C 22PF J CHIP C 0.10UF K CHIP C 0.010UF K	
C208 C209 C301 C302,303 C305			CK73GB1H102K CK73GB1H103K CK73GB1H104K CK73GB1H103K CK73GB1H103K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K	
C306 C307 C308 C309 C310			CD04AS1V100M CK73GB1H103K CD04AS1V100M CK73GB1H103K CD04BF1V470M	ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 47UF 35WV	
C311 C312 C313 C401 C402,403		*	CK73GB1H103K CD04BK1C101M CD04AS1V100M CD04AS1C470M CD04AS1H010M	CHIP C 0.010UF K ELECTRO 100UF 16WV ELECTRO 10UF 35WV ELECTRO 47UF 16WV ELECTRO 1UF 50WV	
C404 C405 C406,407 C410 C411			CK73GB1A105K CD04AS1H4R7M CK73FB1A335K CK73GB1H103K CD04AS1H010M	CHIP C 1.0UF K ELECTRO 4.7UF 50WV CHIP C 3.3UF K CHIP C 0.010UF K ELECTRO 1UF 50WV	
C413,414 C415,416 C417-420 C423,424 C426,427			CK73FB1E474K CD04AS1H2R2M CD04AS1V100M CC73GCH1H101J CK73FB1E474K	CHIP C 0.47UF K ELECTRO 2.2UF 50WV ELECTRO 10UF 35WV CHIP C 100PF J CHIP C 0.47UF K	
C428 C429 C431 C501 C503-506			CD04AS0J470M CK73GB1H103K CD04AS1V100M CK73FB1C105K C90-5620-05	ELECTRO 47UF 6.3WV CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 1.0UF K ELECTRO 0.47UF 50WV	
C507 C510,511 C512 C513 C529,530			CK73FB1C105K CK73FB1E474K CD04AS0J470M CK73GB1H103K C90-6711-05	CHIP C 1.0UF K CHIP C 0.47UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K ELECTRO 1UF 50WV	

K1 : DPX301 (North America)

M5 : DPX-MP2090 M6 : DPX-MP2090S (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4140-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C802 C999			CK73GB1H102K CD04AS1C330M	CHIP C 1000PF K ELECTRO 33UF 16WV		R111 R112 R113 R114 R115			RK73FB2B561J RK73GB2A223J RK73GB2A473J RK73GB2A104J RK73FB2B683J	CHIP R 560 J 1/8W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 68K J 1/8W	M5M6
CN1 CN4 CN5		*	E41-2581-05 E41-2446-05 E41-0944-05	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY	K1	R116 R117 R118 R122,123 R124			RK73GB2A393J RK73FB2B203J RK73GB2A104J RK73GB2A103J RK73GB2A104J	CHIP R 39K J 1/10W CHIP R 20K J 1/8W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
△ J1 J2			E58-0991-05 E56-0855-05	RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE		R125 R126 R127 R128,129 R130			RK73GB2A223J RD14DB2H332J-T RK73EB2E333J RK73GB2A103J RK73GB2A102J	CHIP R 22K J 1/10W SMALL-RD 3.3K J 1/2W CHIP R 33K J 1/4W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W	
J3 J4 W1	2D		E63-0896-05 E58-0993-05 E30-6218-15	PIN JACK RECTANGULAR RECEPTACLE CORD WITH PLUG		R131 R132,133 R201 R202 R203		*	RK73GB2A473J RK73PB2H221J RK73GB2A222J RK73GB2A225J RK73GB2A104J	CHIP R 47K J 1/10W CHIP R 220 J 1/2W CHIP R 2.2K J 1/10W CHIP R 2.2M J 1/10W CHIP R 100K J 1/10W	
L1 L2 L3 L201 L202			L33-1988-05 L33-1925-05 L33-2262-05 L41-4795-33 L92-0075-05	CHOKE COIL ASSY CHOKE COIL CHOKE COIL SMALL FIXED INDUCTOR (4.7U) CHIP FERRITE		R204 R207,208 R210 R212 R213			RK73GB2A102J RK73GB2A103J RK73GB2A473J RK73GB2A473J RK73GB2A102J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W	
L301 L302-304 X1 X2			L33-2260-05 L41-4795-33 L77-2880-05 L78-0872-05	CHOKE COIL SMALL FIXED INDUCTOR (4.7U) CRYSTAL RESONATOR RESONATOR (12MHZ)		R215 R224 R227,228 R229,230 R233			RK73GB2A104J RK73GB2A473J RK73GB2A472J RK73GB2A473J RK73GB2A101J	CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W	
D G H	2D 3D 2D		N83-3005-48 N80-3010-48 N82-2608-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW		R234,235 R236,237 R239 R240 R241			RK73GB2A392J RK73GB2A473J RK73GB2A222J RK73GB2A101J RK73GB2A222J	CHIP R 3.9K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W CHIP R 2.2K J 1/10W	K1
CP201,202 CP203 CP206 CP207 CP209			RK74GB1J101J RK74GB1J471J RK74GB1J222J RK74GB1J102J RK74GB1J101J	CHIP-COM 100 J 1/16W CHIP-COM 470 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 100 J 1/16W	K1	R241,242 R243 R244,245 R245 R247			RK73GB2A222J RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A473J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	M5M6 M5M6 K1 M5M6
R1 R2 R3 R4 R5			RK73FB2B153J RK73GB2A101J RK73GB2A223J RK73GB2A472J RK73FB2B221J	CHIP R 15K J 1/8W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 4.7K J 1/10W CHIP R 220 J 1/8W		R249,250 R254 R257,258 R259,260 R261			RK73GB2A473J RK73GB2A473J RK73GB2A222J RK73GB2A104J RK73GB2A333J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 33K J 1/10W	
R7 R8 R9 R11 R12			RK73GH2A243D RK73GH2A432D RK73FB2B152J RK73GH2A273D RK73GH2A332D	CHIP R 24K D 1/10W CHIP R 4.3K D 1/10W CHIP R 1.5K J 1/8W CHIP R 27K D 1/10W CHIP R 3.3K D 1/10W		R262,263 R302,303 R304 R305-309 R310			RK73GB2A473J RK73EB2E101J RK73EB2E102J RK73EB2E101J RK73EB2E102J	CHIP R 47K J 1/10W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W	
R13 R15 R17,18 R20 R21			RK73GB2A272J RK73GB2A473J RK73GB2A223J RK73GB2A473J RK73GB2A103J	CHIP R 2.7K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W		R311 R312 R313 R316 R317			RK73GB2A222J RK73GB2A473J RK73GB2A472J RK73GB2A104J RK73GB2A471J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 470 J 1/10W	
R31 R39 R45 R101 R102,103		*	RK73PB2H180J RK73PB2H180J RK73GB2A473J RK73EB2E102J RK73EB2E103J	CHIP R 18 J 1/2W CHIP R 18 J 1/2W CHIP R 47K J 1/10W CHIP R 1.0K J 1/4W CHIP R 10K J 1/4W	M5M6						
R104 R106 R107 R108 R109		*	RK73EB2E472J RK73GB2A223J RK73FB2B472J R92-5024-05 RK73GB2A223J	CHIP R 4.7K J 1/4W CHIP R 22K J 1/10W CHIP R 4.7K J 1/8W CHIP R 1K J 1/2W CHIP R 22K J 1/10W							
R110			R92-5024-05	CHIP R 1K J 1/2W							

K1 : DPX301 (North America)
M5 : DPX-MP2090 M6 : DPX-MP2090S (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4140-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R318 R319 R320 R321 R322			RK73GB2A104J RK73GB2A471J RK73FB2B102J RK73GB2A223J RK73GB2A471J	CHIP R 100K J 1/10W CHIP R 470 J 1/10W CHIP R 1.0K J 1/8W CHIP R 22K J 1/10W CHIP R 470 J 1/10W	
R323 R324 R325 R326 R327			RK73GB2A472J RK73GB2A471J RK73GB2A472J RK73GB2A222J RK73GB2A681J	CHIP R 4.7K J 1/10W CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 680 J 1/10W	
R401 R402,403 R404,405 R406,407 R408,409			RK73GB2A103J RK73GB2A331J RK73GB2A223J RK73GB2A331J RK73GB2A223J	CHIP R 10K J 1/10W CHIP R 330 J 1/10W CHIP R 22K J 1/10W CHIP R 330 J 1/10W CHIP R 22K J 1/10W	
R414,415 R420,421 R422 R423,424 R425			RK73FB2B181J RK73FB2B181J RK73EB2E4R7J RK73EB2E100J RK73GB2A102J	CHIP R 180 J 1/8W CHIP R 180 J 1/8W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 1.0K J 1/10W	
R431 R432 R433,434 R501 R505			RK73GB2A100J RK73EB2E2R2J RK73GB2A101J RK73GB2A102J RK73GB2A432J	CHIP R 10 J 1/10W CHIP R 2.2 J 1/4W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.3K J 1/10W	
R506 R507 R508 R509 R510			RK73GB2A223J RK73GB2A221J RK73EB2E472J RK73EB2E101J RK73EB2E472J	CHIP R 22K J 1/10W CHIP R 220 J 1/10W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W CHIP R 4.7K J 1/4W	
R511-515 R516,517 R518 R519 R520			RK73EB2E101J RK73EB2E100J RK73EB2E4R7J RK73GB2A102J RK73EB2E102J	CHIP R 100 J 1/4W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W	K1
R521-523 R524 R801 R802 W3			RK73EB2E471J RK73GB2A100J RK73GB2A8R2J RK73GB2A5R6J R92-1252-05	CHIP R 470 J 1/4W CHIP R 10 J 1/10W CHIP R 8.2 J 1/10W CHIP R 5.6 J 1/10W CHIP R 0 OHM J 1/16W	K1
W15 W931,932 W997,998			R92-2053-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
D1 D2 D3 D4 D10			S2V60*A RB160L-40 02DZ5.6F-Y 02DZ8.2F-Y SFPB-54VNF	DIODE DIODE ZENER DIODE ZENER DIODE DIODE	
D101 D102-105 D106 D107 D108,109 D111			1SR139-400T64 1SR154-400 02DZ5.6F-Y 02DZ4.7F-Y 02DZ6.8F-Y 02DZ6.2F-Y	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	M5M6

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D301 D303 D401-403 D404 D405		*	IMSA-6801-E 02DZ9.1F-Z BAW56W STZ6.8N 02DZ6.8F-Y	SURGE ABSORBER ZENER DIODE DIODE ZENER DIODE ZENER DIODE	
D406 D408,409 D502 D503,504 D505,506		*	STZ6.8N DA204K BAW56W 1SR154-400 AM01ZNF	ZENER DIODE DIODE DIODE DIODE DIODE	
D507-510 D511 D512-515 D518-520 IC1		*	1SR154-400 STZ6.2N 02DZ6.2F-Y 02DZ6.2F-Y 30624MGPA76GP	DIODE ZENER DIODE ZENER DIODE ZENER DIODE MICROCONTROLLER IC	
IC2 IC3 IC4 IC5 IC6		*	E-TDA7415C M5237ML-CF0J E-TDA7560A BA00CCWT-V5 SN74HC02APWR	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC7 IC12 Q1 Q2 Q3,4			S-80836CNNB-J SI-8050JF3NF 2SB1565 KTC4075P(Y,GR) KTA2014P(Y,GR)	MOS-IC ANALOGUE IC TRANSISTOR TRANSISTOR TRANSISTOR	
Q5 Q6 Q7 Q8 Q9-11			2SB1565 DTA124EUA 2SB1565 KTC4075P(Y,GR) DTC124EUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q12 Q13 Q101 Q102 Q103			DTC144EUA KTA2014P(Y,GR) 2SB1188(Q,R) DTC114YUA 2SB1188(Q,R)	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q104 Q105 Q106 Q107 Q108			KTA2014P(Y,GR) DTA114EUA DTC114YUA DTA123JK DTC144EUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M5M6
Q109 Q111,112 Q113 Q114 Q115,116			2SC4081 2SC4081 KTA2014P(Y,GR) DTA144EE DTA124EUA	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q298 Q299 Q300 Q301 Q302			DTA124EUA DTC124EUA 2SB1689 DTC124EUA 2SB1565	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q303 Q305 Q306 Q400-403			KTC4075P(Y,GR) 2SA1577 DTC144EUA DTC143TUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

K1 : DPX301 (North America)

M5 : DPX-MP2090 M6 : DPX-MP2090S (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4140-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
A1	3E		X86-3840-11	FRONT-END UNIT	
CD MECHANISM ASSY (X92-5470-00) (DXM-6680W)					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	3B		D10-4588-13	SLIDER	
18	3B		D10-4595-04	ARM	
19	3B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	3B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	3B		D13-2158-04	GEAR	
30	3B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2381-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
46	2A		G13-1258-04	CUSHION	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-15	TAPTITE SCREW (P 2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (M1.6X6)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (P 2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	

Ref. No.	Add	New	Parts No.	Description	Destination
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (P 2X6)	
DM1	3B		T42-1066-14	DC MOTOR ASSY (SP)	
DM2	2B		T42-1067-14	DC MOTOR ASSY (LO)	
DPU1	2B		X93-2130-00	OPTICAL PICKUP ASSY	

K1 : DPX301 (North America)
M5 : DPX-MP2090 **M6** : DPX-MP2090S (Other Areas)

△ Indicates safety critical components.