


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
- (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

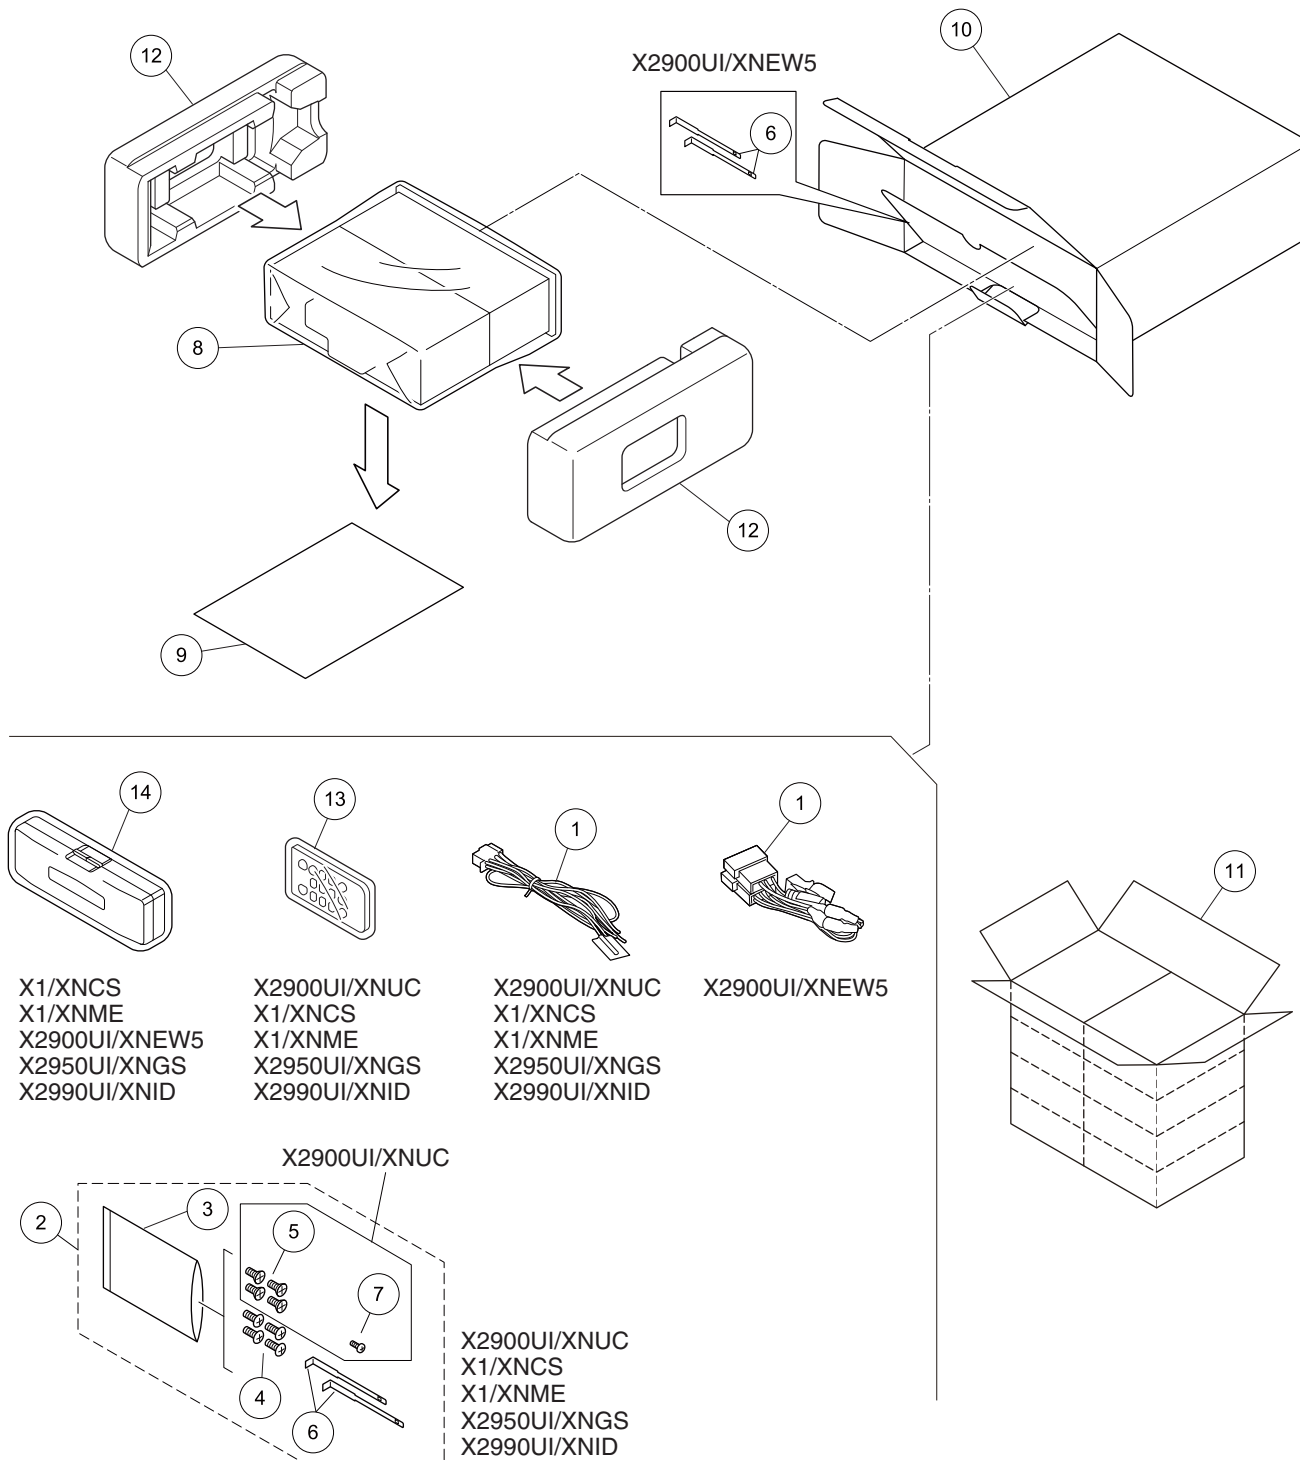

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table (2)	* 9-2	Warranty Card	See Contrast table (2)
2	Accessory Assy	See Contrast table (2)			
* 3	Polyethylene Bag	See Contrast table (2)	* 9-3	Service Network	See Contrast table (2)
4	Screw	See Contrast table (2)	10	Unit Box	See Contrast table (2)
5	Screw	See Contrast table (2)	11	Contain Box	See Contrast table (2)
			12	Protector	CHP4594
6	Handle	QNC3021	13	Card Remote Control Unit	See Contrast table (2)
7	Screw	See Contrast table (2)			
8	Polyethylene Bag	See Contrast table (2)	14	Case Assy	See Contrast table (2)
9-1	Owner's Manual	See Contrast table (2)			

(2) CONTRAST TABLE


DEH-X2900UI/XNUC, DEH-X1/XNCS, DEH-X1/XNME, DEH-X2900UI/XNEW5, DEH-X2950UI/XNGS and DEH-X2990UI/XNID are constructed the same except for the following:

Mark	No.	Description	DEH-X2900UI/ XNUC	DEH-X1/ XNCS	DEH-X1/ XNME	DEH-X2900UI/ XNEW5	DEH-X2950UI/ XNGS	DEH-X2990UI/ XNID
*	1	Cord Assy	QDP1484	QDP1484	QDP1484	QDP3073	QDP1484	QDP1484
	2	Accessory Assy	QEA3337	QEA3338	QEA3338	Not used	QEA3338	QEA3338
	3	Polyethylene Bag	CEG1160	CEG1160	CEG1160	Not used	CEG1160	CEG1160
	4	Screw	CBA2384	CBA2384	CBA2384	Not used	CBA2384	CBA2384
	5	Screw	CBA2383	Not used	Not used	Not used	Not used	Not used
*	7	Screw	BPZ20P060FTC	Not used	Not used	Not used	Not used	Not used
	8	Polyethylene Bag	CEG1173	QEG3001	QEG3001	QEG3001	QEG3001	QEG3001
	9-1	Owner's Manual	QRD3375	QRD3376	QRD3376	QRD3374	QRD3377	QRB3592
	9-2	Warranty Card	QRY3001	Not used	QRY3005	CRY1376	Not used	CRY1304
	9-3	Service Network	Not used	Not used	QRY3006	Not used	Not used	Not used
*	10	Unit Box	QHG3997	QHG3999	QHG4006	QHG3996	QHG3998	QHG4000
	11	Contain Box	QHL3997	QHL3999	QHL4006	QHL3996	QHL3998	QHL4000
	13	Card Remote Control Unit	CXE9606	CXE9606	CXE9606	Not used	CXE9606	CXE9606
	14	Case Assy	Not used	QXA3129	QXA3129	QXA3129	QXA3129	QXA3129

Owner's Manual,Installation Manual

Part No.	Language
QRB3592	English
QRD3374	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3375	English, French, Spanish(Espanol)
QRD3376	English, Spanish(Espanol), Portuguese(B)
QRD3377	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian

9.2 EXTERIOR

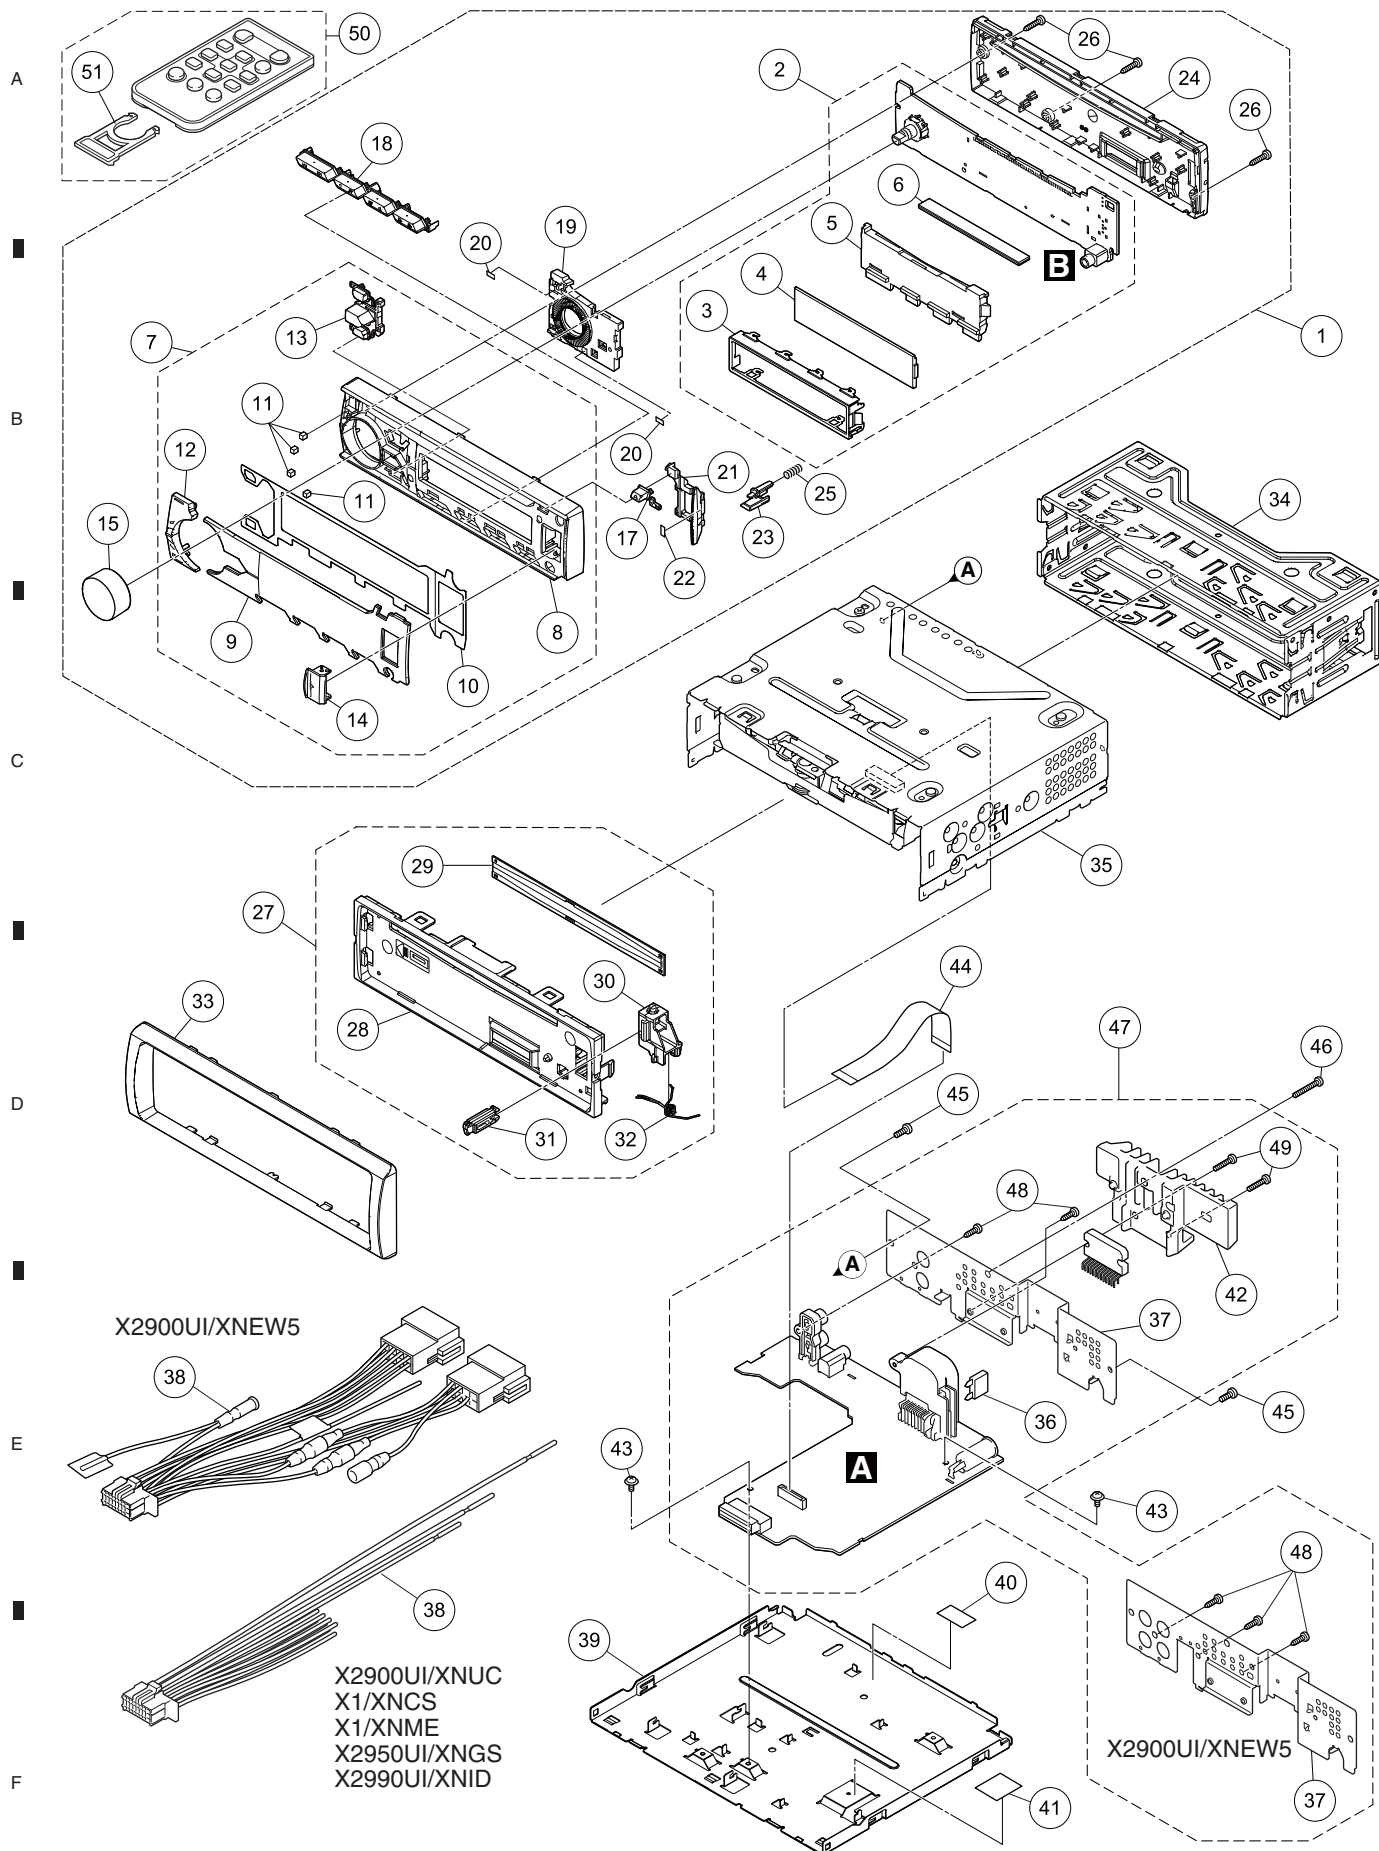

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Detach Grille Assy	See Contrast table (2)	27	Panel Assy	QXA3261
2	Keyboard Unit	QWM4370	28	Panel	QNS3126
3	Holder	QNC3131	29	Cover	QNM3029
4	Segment LCD(V1801)	CAW2056	30	Arm	QNV3025
5	Lighting Conductor	QNV3133			
6	Rubber Connector	QNV3129	31	Button	QNV3026
7	Grille Unit	See Contrast table (2)	32	Spring	QBH3001
8	Grille	QNS4080	33	Panel	QNS3576
9	Plate	QNS4081	34	Holder	QNC3020
10	DS Tape	QNM3160	35	CD Mechanism Module(11.6VA_T07)CXK5808	
				CD Mechanism Module(S11.6_T07)CXK5807	
11	Cushion	QNM3142	⚠ 36	Fuse(10 A)	YEK5001
12	Button(SRC)	See Contrast table (2)	37	Holder	See Contrast table (2)
13	Button(MIX)	QAC3256	38	Cord Assy	See Contrast table (2)
14	Door	QAT3025	39	Case	QNB3043
15	Knob Unit	See Contrast table (2)			
16	*****		40	Sheet	See Contrast table (2)
17	Button(EJECT)	QAC3253	41	Sheet	QNM3175
18	Button(TRACK, 1-6)	QAC3252	42	Heat Sink	See Contrast table (2)
19	Lighting Conductor	QNV3132	43	Screw	ASZ26P050FTC
20	Sheet	QNM3161	44	FFC	QDE3029
			45	Screw	BSZ26P060FTC
21	Lighting Conductor	QNV3134	46	Screw	BSZ26P120FTC
22	Sheet	QNM3124	47	Tuner Amp Unit	See Contrast table (2)
23	Button(DETACH)	QAC3254	48	Screw	BPZ26P080FTC
24	Cover	QNS4082	49	Screw	BSZ26P120FTC
25	Spring	CBH2210	50	Card Remote Control Unit	See Contrast table (2)
26	Screw	BPZ20P100FTC	51	Cover	See Contrast table (2)


Notes: For No.35. please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.

(2) CONTRAST TABLE

DEH-X2900UI/XNUC, DEH-X1/XNCS, DEH-X1/XNME, DEH-X2900UI/XNEW5, DEH-X2950UI/XNGS and DEH-X2990UI/XNID are constructed the same except for the following:

Mark	No.	Description	DEH-X2900UI/ XNUC	DEH-X1/ XNCS	DEH-X1/ XNME	DEH-X2900UI/ XNEW5	DEH-X2950UI/ XNGS	DEH-X2990UI/ XNID
	1	Detach Grille Assy	QXA4837	QXA4839	QXA4839	QXA4836	QXA4838	QXA4840
	7	Grille Unit	QXA4856	QXA4859	QXA4859	QXA4856	QXA4858	QXA4860
	12	Button(SRC)	QAC3250	QAC3257	QAC3257	QAC3250	QAC3257	QAC3257
	15	Knob Unit	QXA3670	QXA4843	QXA4843	QXA4843	QXA4843	QXA4843
	37	Holder	QNC3050	QNC3049	QNC3049	QNC3053	QNC3049	QNC3049
	38	Cord Assy	CDP1484	CDP1484	CDP1484	QDP3073	CDP1484	CDP1484
	40	Sheet	Not used	QNM3130	QNM3130	Not used	QNM3130	QNM3130
	42	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002	QNR3002
	47	Tuner Amp Unit	QWM4328	QWM4330	QWM4398	QWM4327	QWM4329	QWM4331
	50	Card Remote Control Unit	CXE9606	CXE9606	CXE9606	Not used	CXE9606	CXE9606
	51	Cover	CNU3681	CNU3681	CNU3681	Not used	CNU3681	CNU3681

9.3 CD MECHANISM MODULE

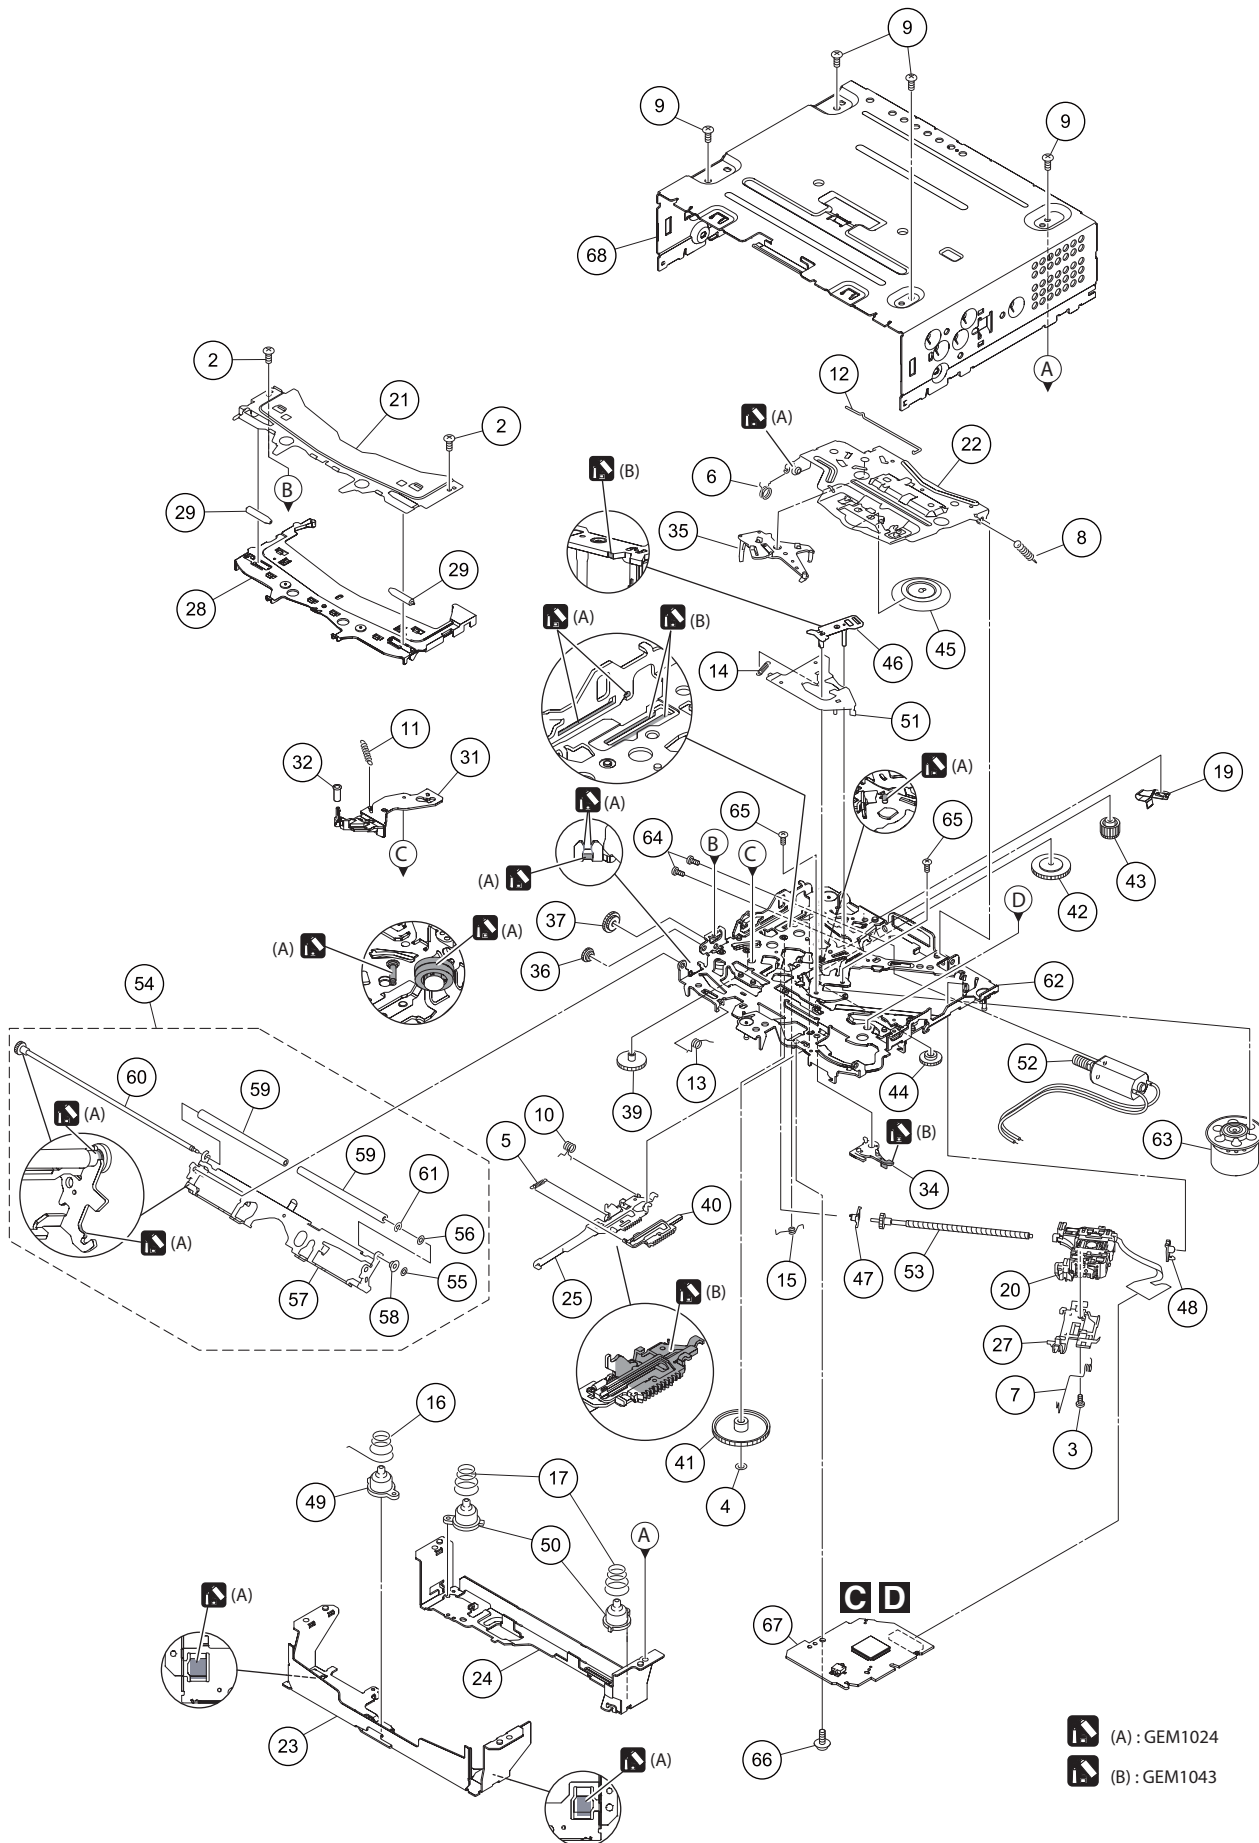

5

6

7

8

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1			36	Gear	CNW1180
2	Screw	BSZ20P040FTC	37	Gear	CNW1181
3	Screw(M2 x 4)	CBA1835	38		
4	Washer	CBF1038	39	Gear	CNW1183
5	Spring	CBH3010	40	Rack	CNW1184
6	Spring	CBH2855	41	Gear	CNW1185
7	Spring	CBH2856	42	Gear	CNW1186
8			43	Gear	CNW1187
9	Screw	BSZ26P060FTC	44	Gear	CNW2287
10	Spring	CBH3011	45	Clamper	CNW1190
11	Coil Spring	CBH3095	46	Arm	CNW1192
12	Spring	CBH3014	47	Holder	CNW1193
13	Spring	CBH3145	48	Holder	CNW1194
14	Spring	CBH3016	49	Damper	CNW1197
15	Spring	CBH3017	50	Damper	CNW1198
16	Spring	CBH3086	51	Arm	CNW1726
17	Spring	CBH3019	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
18			53	Screw Unit	CXC8894
19	Leaf Spring	CBL1824	54	Arm Assy	CXE8953
20	Pickup Unit(P11)(Service) for CXK5808 CXX4754 Pickup Unit(P10.6)(Service) for CXK5807 CXX3556		55	Washer	CBF1037
21	Bracket	CND4553	56	Washer	CBF1038
22	Arm	CND7608	57	Arm	CND6242
23	Bracket	CND6127	58	Collar	CNW2444
24	Bracket	CND5710	59	Roller	CNW2500
25	Lever	CND6834	60	Gear Unit	CXE8952
26			61	Washer	YE15FTC
27	Rack	CNV8342	62	Chassis Unit	CXE4528
28	Guide	CNW3489	63	Motor Unit(M1)(SPDL)	CXE2273
29	Roller	CNW1172	64	Screw	JFZ20P025FTC
30			65	Screw	JGZ17P022FTC
31	Arm	CNW2241	66	Screw	EBA1028
32	Roller	CNW1175	67	CD Core Unit (S11.6VA)(for CXK5808) CWX4269 CD Core Unit (S11.6STD)(for CXK5807) CWX4023	
33			68	Chassis	CNA3373
34	Arm	CNW1177			
35	Arm	CNW1178			

Notes: For No.20 and 67. please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The expression of the unit in this manual is shown by μ instead of μ . Please do not make a mistake.

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
A:DEH-X2900UI/XNUC		MISCELLANEOUS	
B:DEH-X1/XNCS		IC 151	Power supply IC
C:DEH-X1/XNME		IC 321	Interface IC
D:DEH-X2900UI/XNEW5		* IC351	Blank Flash IC
E:DEH-X2950UI/XNGS		IC 361	IC
F:DEH-X2990UI/XNID		IC 371	FLASHROM UNIT(A)
Unit Number : QWM4328(A)			
Unit Number : QWM4330(B)		IC 371	FLASHROM UNIT(B,C)
Unit Number : QWM4398(C)		IC 371	FLASHROM UNIT(D,E,F)
Unit Number : QWM4327(D)		IC 501	IC
Unit Number : QWM4329(E)		IC 551	E-VOL System LSI
Unit Number : QWM4331(F)		IC 601	Tuner IC
Unit Name : Tuner Amp Unit			
Unit Number : QWM4370		IC 801	L-MOS And Gate
Unit Name : Keyboard Unit		IC 851	Power Amp IC
Unit Number : CWX4269		Q 111	Bipolar Transistor
Unit Name : CD Core Unit(S11.6VA)		Q 121	Resistor Built-in Transistor
Unit Number : CWX4023		Q 131	Bipolar Transistor(D)
Unit Name : CD Core Unit(S11.6STD)			
Notes:		Q 151	Power MOS FET
For CD Core Unit, please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.		Q 501	Bipolar Transistor
		Q 751	Transistor(Except A)
		Q 752	Transistor
		Q 781	Transistor(B,C,E,F)
		Q 782	Transistor(B,C,E,F)
		Q 783	Transistor(B,C,E,F)
		Q 784	Transistor(B,C,E,F)
		Q 901	Transistor
		D 101	Diode
		D 102	Diode
		D 111	Diode(Except D)
		D 111	Diode(D)
		D 122	Rectifier Diode
		D 131	Diode(D)
		D 152	Diode
		D 153	Schottky Diode
		D 154	Diode
		D 155	Schottky Diode
		D 156	Diode
		D 157	Schottky Diode
		D 302	Diode
		D 303	Diode
		D 351	Schottky Diode
		D 352	Schottky Diode
		D 701	Diode
		D 702	Diode
		BD49101AEFS	
		STCC2540IQ	
		R5S726A0D216FP	
		S-80827CNMC-B8M	
		QWW4004	
		QWW4055	
		QWW4003	
		337S3959	
		PM9013A	
		TEF6686HN-V102	
		TC7SET08FUS1	
		PAL013B	
		LSCR523UB	
		LTC014EEB	
		LSAR523UB	
		RRR040P03	
		LSAR523UB	
		EMH53	
		EMH53	
		EMD53	
		EMD53	
		EMD53	
		EMD53	
		EMD52	
		D1F60-5053	
		D1F60-5053	
		DZ2J068M0	
		DZ2J075M0	
		DA2J101	
		DAN202UM	
		RR264MM-400TF	
		RB162M-40	
		RR264MM-400TF	
		DB2J41100	
		RB056L-40	
		CMS30I30A	
		DZ2S068C	
		DZ2S068C	
		RB751SM-40	
		RB751SM-40	
		DZ2S068C	
		DZ2S068C	

A

Unit Number : QWM4328(A)
Unit Number : QWM4330(B)
Unit Number : QWM4398(C)
Unit Number : QWM4327(D)
Unit Number : QWM4329(E)
Unit Number : QWM4331(F)
Unit Name : Tuner Amp Unit

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	D 802 Diode	DZ2S068C		
	D 803 Diode	DZ2S068C	R 133 (D)	RS1/16SS153J
	D 804 Diode	DZ2S068C	R 151	RS1/16SS8202D
A	D 805 Diode	DZ2S068C	R 156	RS1/16SS102J
	D 806 Diode	DZ2S068C	R 158	RS1/16SS2403D
	D 807 Diode	DZ2S068C	R 159	RS1/16SS7502D
	D 812 Diode(D)	DZ2S068C	R 160	RS1/16SS103J
	D 813 Diode(D)	DZ2S068C	R 161	RS1/16SS4703D
			R 162	RS1/16SS4303D
	D 815 Diode	DZ2S068C	R 163	RS1/16SS3903D
	D 816 Diode	DZ2S068C	R 164	RS1/16SS6202D
	D 817 Diode	DZ2S068C		
	D 911 Diode	RR264MM-400TF	R 165 30 mohm	CCN1401
	D 912 Diode	RR264MM-400TF	R 167	RS1/16SS102J
			R 168	RS1/16SS102J
B	L 101 Choke Coil	CTH1620	R 169	RS1/16SS102J
	L 131 Chip Coil(D)	BTH1101	R 172	RS1/16SS393J
	L 151 SMD SPL Inductor	CTH1521		
	L 152 SMD SPL Inductor	CTH1584	R 173	RS1/16SS4703D
	L 193 Inductor(A,B,C,D)	CTF1786	R 174	RS1/16SS1503D
			R 175	RS1/16SS393J
	L 301 Common Mode Choke Coil	ATH7015	R 176	RS1/16SS103J
	L 552 Inductor	CTF1736	R 177	RS1/16SS472J
	L 602 Inductor(A,B,C,D)	CTF1389		
	L 603 Chip Coil(E,F)	LCTAWR27J2520	R 178	RS1/16SS1003D
	L 604 Chip Coil(E,F)	LCTAW3R3J2520	R 179	RS1/16SS7503D
			R 180	RS1/16SS1603D
	L 605 Inductor(A,B,C,D)	LCYC150K1608	R 182	RS1/16SS820J
C	L 606 Inductor	CTF1786	R 184	RS1/16SS512J
	L 609 Inductor(E,F)	CTF1786		
	L 610 Inductor	LCMAR27J1608	R 185	RS1/16SS102J
	L 611 SMD SPL Inductor(E,F)	LCYAR82J2016	R 187	RS1/16SS1203D
			R 188	RS1/16SS1802D
	L 613 Inductor	CTF1786	R 189	RS1/16SS6802D
	L 701 Inductor	CTF1389	R 190	RS1/16SS3903D
	L 801 Common Mode Choke Coil	ATH7015		
	T 601 Variable Coil	CTC1215	R 192	RS1/16SS102J
	X 351 Crystal Resonator 12.000000 MHz	CSS1876	R 193 (E,F)	RS1/16SS0R0J
			R 194 (E,F)	RS1/16SS0R0J
	X 352 Ceramic Resonator 16.934 MHz	CSS1603	R 301	RS1/16SS473J
	X 601 Crystal Resonator	CSS1867	R 302	RS1/10SR0R0J
D	P 601 Surge Absorber	IMSA-6803-01Y900		
	⚠ P753 Fuse 3.0 A	CEK1404	R 323	RS1/16SS3002F
	VA801 SMD Varistor	MLV0402ES012V0010N	R 325	RS1/16SS103J
			R 326	RS1/16SS103J
	VA802 SMD Varistor	MLV0402ES012V0010N	R 327	RS1/16SS1001F
	CN701 Connector	VKN1192	R 328	RS1/16SS103J
	CN801 Connector	CKS6452		
	JA101 Plug	CKM1624	R 337	RS1/16SS0R0J
	JA601 Antenna Jack	CKX1104	R 353	RS1/16SS473J
			R 355	RS1/16SS103J
	JA751 Jack(A)	CKB1115	R 357	RS1/16SS473J
	JA751 Jack(Except A)	CKB1109	R 359	RS1/16SS0R0J
	JA781 Jack(D)	YKS5001		
E	JA782 Jack(Except D)	CKS6437	R 360	RS1/16SS0R0J
			R 362 (D)	RS1/16SS473J
			R 364	RS1/16SS104J
			R 368	RS1/16SS102J
			R 369	RS1/16SS473J
	R 111	RS1/16SS223J		
	R 112	RS1/16SS473J	R 370	RS1/16SS473J
	R 113 (Except D)	RS1/16SS682J	R 371	RS1/16SS473J
	R 113 (D)	RS1/16SS333J	R 373	RS1/16SS152J
	R 114 (Except D)	RS1/4SA102J	R 374	RS1/16SS153J
			R 375	RS1/16SS153J
	R 114 (D)	RS1/4SA122J		
F	R 121	RS1/16SS103J	R 376	RS1/16SS473J
	R 123	RS1/4SA102J	R 377	RS1/16SS103J
	R 131 (D)	RS1/16SS102J	R 378 (A,C,D,F)	RS1/16SS473J
	R 132 (D)	RS1/16SS223J	R 378 (E)	RS1/16SS103J
			R 379 (B,E)	RS1/16SS473J

RESISTORS

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 379 (F)	RS1/16SS103J	R 637	RS1/16SS472J
R 380	RS1/16SS103J	R 638	RS1/16SS472J
R 384	RS1/16SS473J	R 651	RS1/16SS0R0J
R 385	RAB4CQ473J	R 652	RS1/16SS0R0J
R 386	RS1/16SS473J	R 653 (A)	RS1/10SR0R0J
R 387	RS1/16SS473J	R 656 (E,F)	RS1/16SS0R0J
R 388	RS1/16SS473J	R 701	RS1/16SS473J
R 389	RS1/16SS473J	R 702	RS1/16SS104J
R 390	RS1/16SS473J	R 704	RS1/16SS104J
R 391	RS1/16SS221J	R 706	RS1/16SS221J
R 392	RS1/16SS221J	R 707	RS1/16SS221J
R 393	RS1/16SS221J	R 708	RS1/16SS101J
R 394	RS1/16SS221J	R 709	RS1/16SS221J
R 395	RS1/16SS221J	R 710	RS1/16SS101J
R 396	RS1/16SS221J	R 711	RS1/16SS102J
R 397	RS1/16SS473J	R 715	RS1/16SS331J
R 398	RS1/16SS473J	R 716	RS1/16SS331J
R 399	RS1/16SS101J	R 717	RS1/16SS331J
R 400	RS1/16SS473J	R 718	RS1/16SS221J
R 401	RS1/16SS102J	R 719	RS1/16SS104J
R 402	RS1/16SS473J	R 721	RS1/16SS472J
R 403	RS1/16SS473J	R 722	RS1/16SS472J
R 404	RS1/16SS473J	R 723	RS1/16SS472J
R 409	RS1/16SS472J	R 724	RS1/16SS0R0J
R 411	RS1/16SS472J	R 751 (Except A)	RS1/16SS821J
R 412	RS1/16SS104J	R 752 (Except A)	RS1/16SS821J
R 413	RS1/16SS101J	R 753 (Except A)	RS1/16SS223J
R 414	RS1/16SS101J	R 754 (Except A)	RS1/16SS223J
R 415	RS1/16SS101J	R 755	RS1/16SS821J
R 416	RS1/16SS102J	R 756	RS1/16SS821J
R 417	RS1/16SS101J	R 757	RS1/16SS223J
R 418	RS1/16SS102J	R 758	RS1/16SS223J
R 419	RS1/16SS102J	R 764	RS1/16SS0R0J
R 420	RS1/16SS101J	R 765 (Except A)	RS1/16SS0R0J
R 421	RS1/16SS473J	R 789	RS1/16SS0R0J
R 424	RS1/16SS222J	R 790 (D)	RS1/16SS223J
R 425	RS1/16SS103J	R 791 (D)	RS1/16SS223J
R 426 (B,C)	RS1/16SS0R0J	R 792 (D)	RS1/16SS101J
R 428	RS1/16SS0R0J	R 793 (D)	RS1/16SS101J
R 432	RS1/16SS103J	R 794 (D)	RS1/16SS101J
R 433	RS1/16SS102J	R 795 (B,C,E,F)	RS1/16SS681J
R 434	RS1/16SS102J	R 798 (B,C,E,F)	RS1/16SS681J
R 501	RS1/16SS473J	R 799 (B,C,E,F)	RS1/16SS822J
R 502	RS1/16SS222J	R 800 (B,C,E,F)	RS1/16SS822J
R 503	RS1/16SS222J	R 801	RS1/10SR222J
R 504	RS1/16SS272J	R 803	RS1/16SS223J
R 505	RS1/16SS472J	R 804	RS1/16SS223J
R 506	RS1/16SS472J	R 805	RS1/10SR101J
R 507	RS1/16SS101J	R 806	RS1/10SR101J
R 508	RS1/16SS101J	R 807	RS1/10SR101J
R 603 (A,B,C,D)	RS1/16SS391J	R 808	RS1/10SR222J
R 603 (E,F)	RS1/16SS101J	R 809	RS1/10SR220J
R 604	RS1/16SS105J	R 810	RS1/10SR220J
R 605	RS1/16SS105J	R 813	RS1/10SR222J
R 606	RS1/16SS101J	R 814	RS1/10SR222J
R 607	RS1/16SS101J	R 815	RS1/16SS822J
R 608	RS1/16SS103J	R 816	RS1/10SR222J
R 610	RS1/16SS103J	R 817	RS1/10SR222J
R 617	RS1/16SS0R0J	R 821 (B,C)	RS1/16SS0R0J
R 620 (A,B,C,D)	RS1/16SS0R0J	R 841	RS1/16SS472J

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	R 859	RS1/16SS103J	C 361	CKSSYB104K10
	R 901	RS1/16SS103J	C 362 (A,B,C,D)	CKSSYB104K10
A	R 902	RS1/16SS221J	C 362 (E,F)	CCSSCH101J50
	R 903	RS1/16SS223J	C 363 (A,B,C,D)	CKSSYB104K10
			C 363 (E,F)	CKSSYB102K50
			C 364 (E,F)	CCSSCH120J50
			C 365 (A,B,C,D)	CCSSCH120J50
			C 366	CCSSCH120J50
			C 368	CKSSYB102K50
			C 369	CKSSYB104K10
			C 377	CKSRYB105K10
			C 379	CCSSCJ3R0C50
			C 381 (Except D)	CKSSYB104K10
			C 383	CKSSYB104K10
			C 384	CCSSCH220J50
			C 385	CKSSYB104K10
			C 386	CKSSYB104K10
			C 387	CKSSYB104K10
			C 388 (A,B,C,D)	CCSRCH330J50
			C 389	CKSSYB104K10
			C 390	CCSSCH100D50
			C 391	CCSSCH220J50
			C 392	CCSSCH220J50
			C 393	CCSSCH220J50
			C 394	CKSSYB104K10
			C 395	CKSSYB103K16
			C 398 1 uF	DCH1246
			C 399	CKSSYB104K10
			C 400	CCSSCH100D50
			C 501	CKSSYB104K10
			C 502	CKSSYB104K10
			C 551	CKSRYB105K10
			C 553	CKSRYB105K10
			C 554 1 uF	DCH1246
			C 555	CKSRYB105K10
			C 556 (D)	CKSRYB105K10
			C 557 (D)	CKSRYB105K10
			C 559 (D)	CKSRYB105K10
			C 560	CKSRYB105K10
			C 561	CKSRYB105K10
			C 562	CKSRYB105K10
			C 563 10 uF	CCG1192
			C 564	CEVW470M16
			C 565	CKSSYB104K10
			C 568	CKSSYB104K10
			C 569	CKSSYB104K10
			C 570 10 uF	CCG1192
			C 573 1 uF/10 V	DCH1266
			C 574 1 uF/10 V(E,F)	DCH1266
			C 575 10 uF	CCG1192
			C 576	CKSSYB104K10
			C 577 10 uF	CCG1192
			C 583 10 uF	CCG1192
			C 584	CKSSYB104K10
			C 585	CKSSYB104K10
			C 586	CKSSYB104K10
			C 587	CKSSYB102K50
			C 588 (D)	CKSRYB105K10
			C 589 1 uF/10 V	DCH1266
			C 590	CKSRYB105K10

CAPACITORS

	C 101 2 200 uF/16 V	CCH1405
	C 111	CKSRYB103K50
	C 121	CKSRYB103K50
	C 123	CKSRYB104K16
	C 151	CEVW221M16
	C 152 1 uF	CCG1393
	C 153 10 uF	CCG1236
B	C 154 1 uF/10 V	DCH1266
	C 156	CEAT102M16
	C 157 10 uF	CCG1236
	C 158 1 uF	DCH1246
	C 160 10 uF	CCG1236
	C 162	CCSSCH391J50
	C 163	CEVQW221M6R3
	C 164	CCSSCH471J50
	C 165	CCSSCH102J50
	C 166 10 uF	CCG1192
	C 167 10 uF	CCG1192
C	C 169 10 uF	CCG1192
	C 171 10 uF	CCG1236
	C 172 10 uF	CCG1236
	C 174	CKSRYB105K10
	C 177 10 uF(A,B,C,D)	CCG1192
	C 177 10 uF(E,F)	CCG1222
	C 178	CCSSCH391J50
	C 179	CKSSYB102K50
	C 180 10 uF	CCG1192
	C 181	CEVQW221M6R3
	C 183 4.7 uF	CCG1212
D	C 184 (B,C)	CKSRYB105K10
	C 185	CEVW221M10
	C 186	CCSSCH331J50
	C 187	CKSRYB104K50
	C 188 (A)	CKSRYB105K10
	C 188 (B,C,D)	CKSRYB102K50
	C 192 22 uF	CCG1254
	C 194 (Except A)	CKSRYB103K50
	C 195 1 uF	CCG1382
	C 196 1 uF	DCH1246
E	C 197	CKSRYB105K16
	C 198	CEAT102M16
	C 199	CKSSYB122K50
	C 253	CKSSYB104K10
	C 255 2.2 uF	CCG1205
	C 321	CKSSYB104K10
	C 322 10 uF	CCG1192
	C 323 10 uF	DCH1201
	C 351	CKSSYB104K10
	C 352	CKSSYB104K10
	C 353	CKSSYB104K10
F	C 354	CKSSYB104K10
	C 357	CKSSYB104K10
	C 359 1 uF/10 V	DCH1266

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 591 (A,B,C)	CCSRCH391J50	Unit Number : QWM4370	
C 602 (E,F)	CCSSCK2R0C50	Unit Name : Keyboard Unit	
C 603 (E,F)	CCSSCK1R0C50	MISCELLANEOUS	
C 604 (E,F)	CCSSCK1R0C50	IC 1801 IC	PDC205A
C 605 (E,F)	CCSSCH120J50	IC 1951 IC	PNJ4833M
C 607	CKSSYB102K50	Q 1841 Bipolar Transistor	LSCR523UB
C 610	CKSSYB152K50	Q 1842 Bipolar Transistor	LSCR523UB
C 611	CCSSCH331J50	Q 1843 Bipolar Transistor	LSCR523UB
C 612	CCSSCH220J50	Q 1847 Bipolar Transistor	LSCR523UB
C 613	CCSSCH100D50	Q 1848 Bipolar Transistor	LSCR523UB
C 615	CKSSYB104K10	Q 1849 Bipolar Transistor	LSCR523UB
C 617	CKSSYB102K50	D 1841 LED	NSSM124-6717
C 618	CKSSYB224K6R3	D 1842 LED	NSSM124-6717
C 620 (A,B,C,D)	CKSSYB104K10	D 1843 LED	NSSM124-6717
C 620 1 uF/10 V(E,F)	DCH1266	D 1844 LED	NSSM124-6717
C 621	CCSSCH390J50	D 1845 LED	NSSM124-6717
C 624 2.2 uF	CCG1205	X 1801 Ceramic Resonator 5.00 MHz	CSS1547
C 626 10 uF	CCG1192	S 1821 Push Switch	CSG1155
C 627 (E,F)	CCSSCH330J50	S 1822 Push Switch	CSG1155
C 630 1 uF/10 V	DCH1266	S 1823 Push Switch	CSG1155
C 631 (A,D,E,F)	CCSSCH391J50	S 1825 Push Switch	CSG1155
C 631 (B,C)	CKSSYB102K50	S 1826 Push Switch	CSG1155
C 632	CKSRYB104K16	S 1827 Push Switch	CSG1155
C 633	CKSRYB104K16	S 1828 Push Switch	CSG1155
C 635 (Except A)	CCSSCH101J50	S 1829 Push Switch	CSG1155
C 636 (A)	CKSSYB102K50	S 1830 Push Switch	CSG1155
C 637 (A,B,C,D)	CKSSYB104K10	S 1831 Push Switch	CSG1155
C 639	CCSSCH471J50	S 1832 Push Switch	CSG1155
C 701	CKSSYB103K16	S 1833 Push Switch	CSG1155
C 702	CKSSYB103K16	S 1834 Push Switch	CSG1155
C 709	CKSSYB104K10	S 1835 Push Switch	CSG1155
C 751 10 uF(Except A)	CCG1192	S 1836 Encoder(MULTI-CONTROL)	CSD1193
C 752 10 uF(Except A)	CCG1192	CN1941 Connector	CKS6451
C 755 10 uF	DCH1201	JA1901 Connector	CKS6443
C 756 10 uF	CCG1192	JA1921 Jack	CKN1090
C 760	CKSSYB104K10	V 1801 LCD	CAW2056
C 785 (D)	CKSRYB102K50	RESISTORS	
C 786 (D)	CKSRYB104K16	R 1801	RS1/10SR103J
C 787	CKSRYB104K16	R 1821	RS1/10SR273J
C 788	CKSRYB104K16	R 1841	RS1/10SR332J
C 801	CCSRCH102J50	R 1842	RS1/10SR152J
C 803	CKSRYB105K10	R 1843	RS1/10SR332J
C 806	CKSRYB104K16	R 1844	RS1/10SR152J
C 807	CKSRYB105K10	R 1845	RS1/10SR332J
C 809	CCSRCH221J50	R 1846	RS1/10SR152J
C 810	CCSRCH221J50	R 1847	RS1/10SR680J
C 811	CKSSYB104K10	R 1849	RS1/10SR680J
C 851	CKSRYB474K10	R 1851	RS1/10SR680J
C 853	CKSRYB474K10	R 1865	RS1/10SR332J
C 855	CKSRYB474K10	R 1866	RS1/10SR152J
C 857	CKSRYB474K10	R 1867	RS1/10SR332J
C 863 2.2 uF	CCG1205	R 1868	RS1/10SR152J
C 864	CKSRYB104K50	R 1869	RS1/10SR332J
C 866	CKSRYB105K16	R 1870	RS1/10SR152J
C 868 10 uF/16 V	DCH1263	R 1871	RS1/10SR680J
C 901	CKSRYB105K10	R 1873	RS1/10SR680J
C 913	CKSRYB104K50	R 1875	RS1/10SR680J

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

R 1884
R 1887
R 1888
R 1921
R 1922

RS1/10SR121J
RS1/10SR121J
RS1/10SR221J
RS1/10SR0R0J
RS1/10SR0R0J

R 1923
R 1941
R 1942
R 1953

RS1/10SR0R0J
RS1/10SR222J
RS1/10SR222J
RS1/10SR101J

CAPACITORS

C 1801 4.7 uF
C 1802
C 1803
C 1804
C 1805

CCG1212
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16

C 1856
C 1901
C 1902
C 1904
C 1905

CKSRYB105K16
CKSRYB104K16
CKSRYB102K50
CKSRYB105K10
CKSRYB105K10

C 1923
C 1951 10 uF

CCSRCH221J50
CCG1192

C**Unit Number : CWX4269****Unit Name : CD Core Unit(S11.6VA)****MISCELLANEOUS**

IC 201	IC	PEQ094A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603

S 901 Lever Switch(HOME)
S 903 Spring Switch(DSCSNS)
CN101 Connector
CN701 Connector

CSN1090
CSN1081
CKS4808
CKS6146

RESISTORS

R 101
R 102
R 103
R 108
R 109

RS1/10SR2R4J
RS1/10SR2R4J
RS1/10SR2R7J
RS1/16SS105J
RS1/16SS152J

R 214
R 215
R 216
R 217
R 218

RS1/16SS103J
RS1/16SS393J
RS1/16SS102J
RS1/16SS562J
RS1/16SS472J

R 229
R 232
R 237
R 240
R 245

RS1/16SS471J
RS1/16SS0R0J
RS1/16SS221J
RS1/16SS473J
RS1/16SS104J

R 254
R 260
R 264

RS1/16SS104J
RS1/16SS103J
RS1/16SS102J

R 281
R 282

RS1/16SS560J
RS1/16SS560J

R 291
R 294
R 303
R 304
R 305

RS1/16SS560J
RS1/16SS471J
RS1/16SS123J
RS1/16SS123J
RS1/16SS102J

R 306
R 307
R 308
R 309
R 310

RS1/16SS472J
RS1/16SS102J
RS1/16SS472J
RS1/16SS473J
RS1/16SS472J

R 311
R 312
R 313
R 701
R 702

RS1/16SS472J
RS1/16SS472J
RS1/16SS472J
RS1/16SS101J
RS1/16SS101J

R 706

RS1/16SS221J

CAPACITORS

C 104
C 110
C 111
C 203
C 205

CKSQYB475K6R3
CKSSYB104K10
CKSSYB103K16
CKSSYB104K10
CKSRYB105K10

C 209
C 210
C 211
C 212
C 213

CKSRYB104K16
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB332K50

C 214
C 215
C 216
C 217
C 218

CKSSYB473K16
CKSSYB104K10
CKSSYB152K50
CCSSCH390J50
CCSSCH5R0C50

C 219
C 220
C 221
C 222
C 223

CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CCSSCH680J50

C 224
C 225
C 228
C 229
C 233

CCSSCH470J50
CKSSYB103K16
CCSSCH180J50
CKSSYB104K10
CKSSYB103K16

C 236
C 238
C 299
C 302
C 303

CKSSYB104K10
CKSRYB104K16
CKSSYB104K10
CKSSYB102K50
CKSSYB102K50

C 304
C 305
C 306
C 307
C 308

CKSSYB223K16
CKSSYB104K10
CKSSYB104K10
CKSRYB105K10
CKSRYB105K10

C 710

CKSSYB102K50

D

5
Circuit Symbol and No. **Part No.**
Unit Number : CWX4023
Unit Name : CD Core Unit(S11.6STD)

MISCELLANEOUS

IC 201	IC	PE5791A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603

S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS222J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS122J
R 217	RS1/16SS562J
R 218	RS1/16SS472J
R 229	RS1/16SS471J
R 232	RS1/16SS0R0J
R 237	RS1/16SS221J
R 240	RS1/16SS473J
R 245	RS1/16SS104J
R 254	RS1/16SS104J
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J
R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J
R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J

CAPACITORS

C 104	CKSQYB475K6R3
C 203	CKSSYB104K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10

7 Circuit Symbol and No.	8 Part No.	
C 212	CKSSYB104K10	
C 213	CKSSYB332K50	
C 214	CKSSYB473K16	
C 215	CKSSYB104K10	A
C 216	CKSSYB182K50	
C 217	CCSSCH560J50	
C 218	CCSSCH4R0C50	
C 219	CKSSYB104K10	
C 220	CKSSYB104K10	
C 221	CKSSYB104K10	
C 222	CKSSYB104K10	
C 223	CCSSCH680J50	
C 224	CCSSCH470J50	
C 225	CKSSYB103K16	
C 228	CCSSCH270J50	B
C 229	CKSSYB104K10	
C 233	CKSSYB103K16	
C 236	CKSSYB104K10	
C 238	CKSRYB104K16	
C 299	CKSSYB104K10	
C 302	CKSSYB102K50	
C 303	CKSSYB102K50	
C 304	CKSSYB223K16	
C 305	CKSSYB104K10	
C 306	CKSSYB104K10	
C 307	CKSRYB105K10	C
C 308	CKSRYB105K10	
C 710	CKSSYB102K50	