



EXPLODED VIEW (CD MECHANISM)

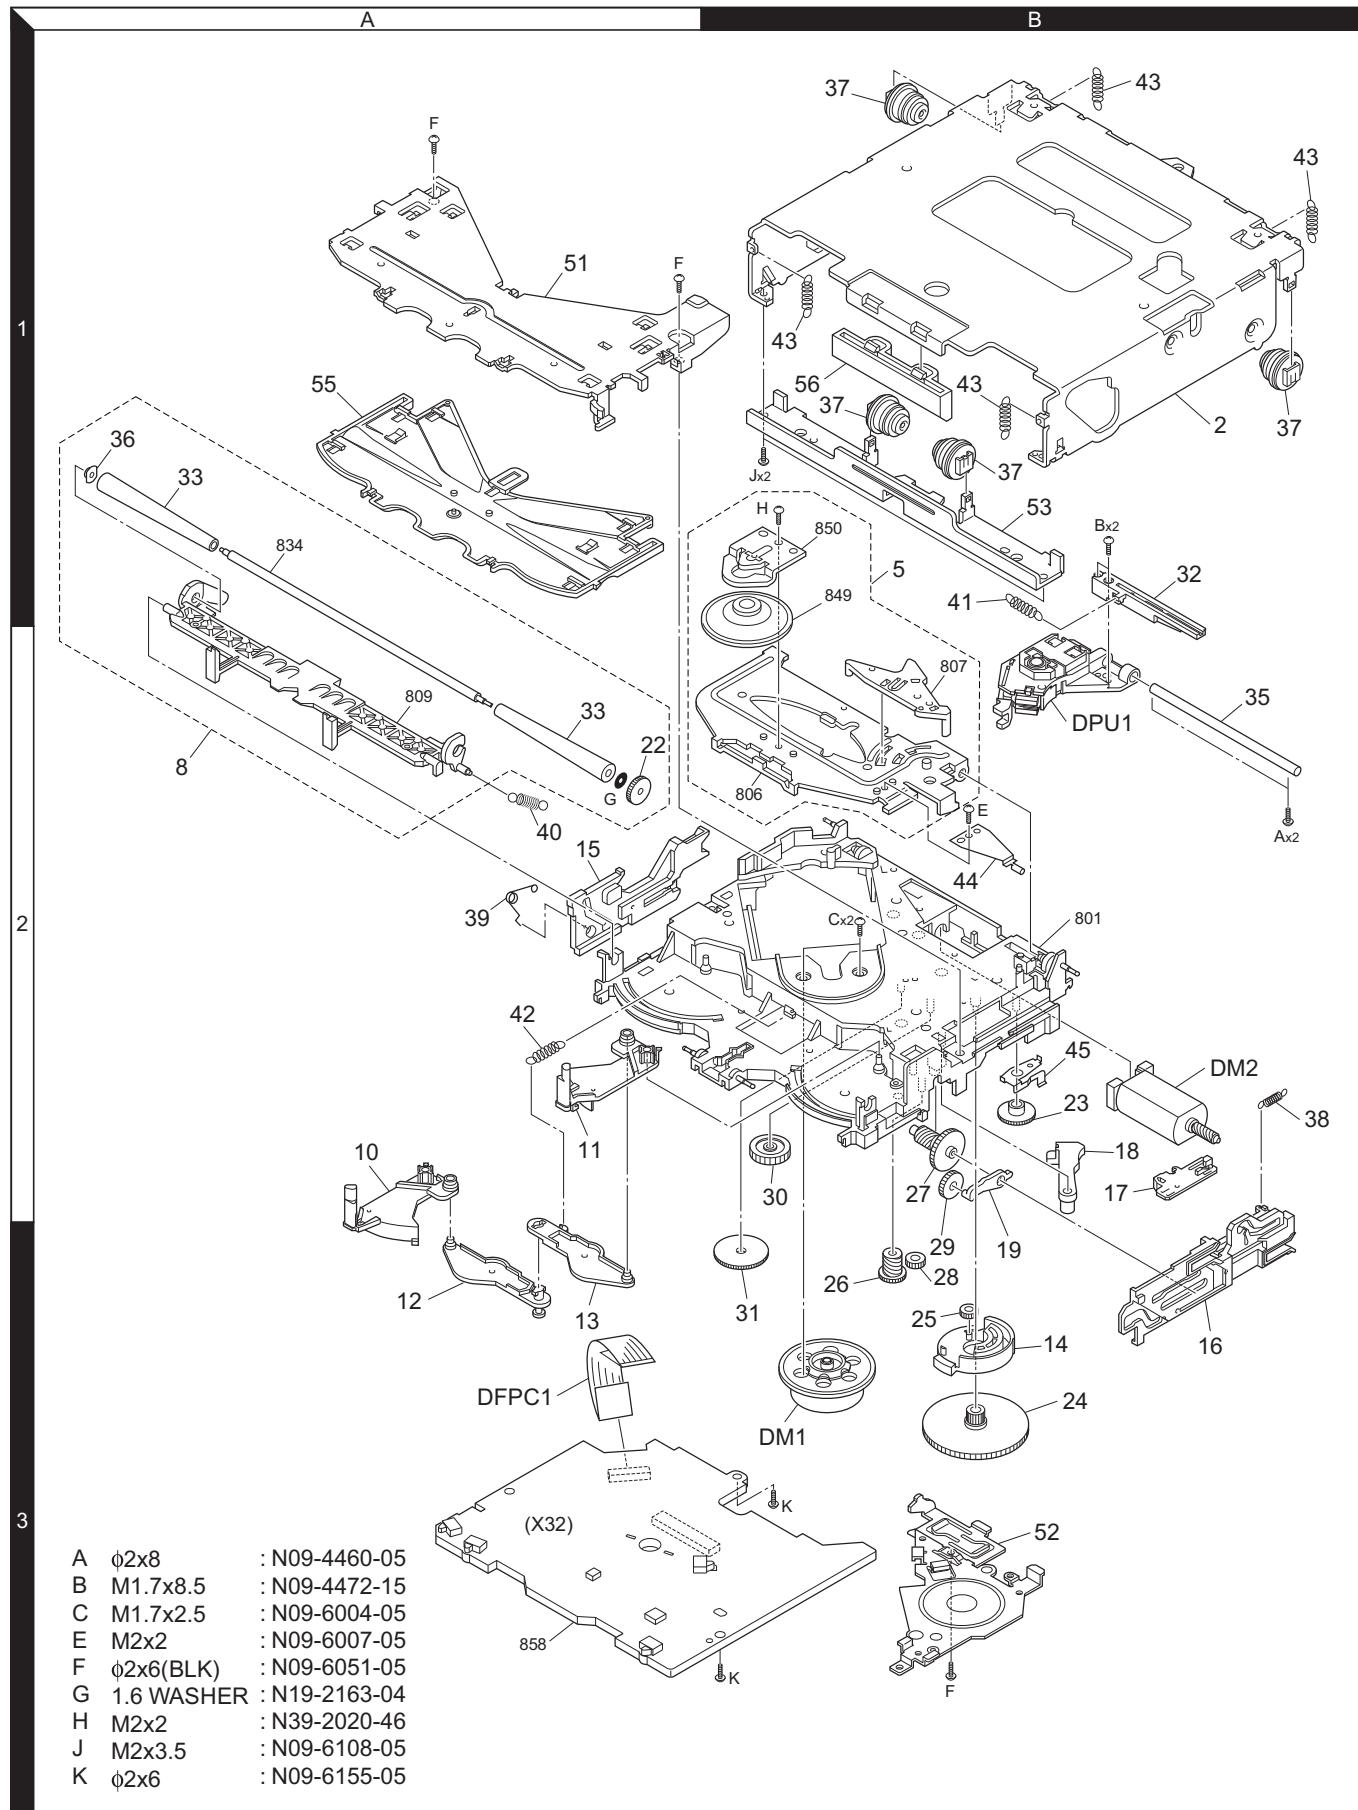

EXPLODED VIEW (UNIT)

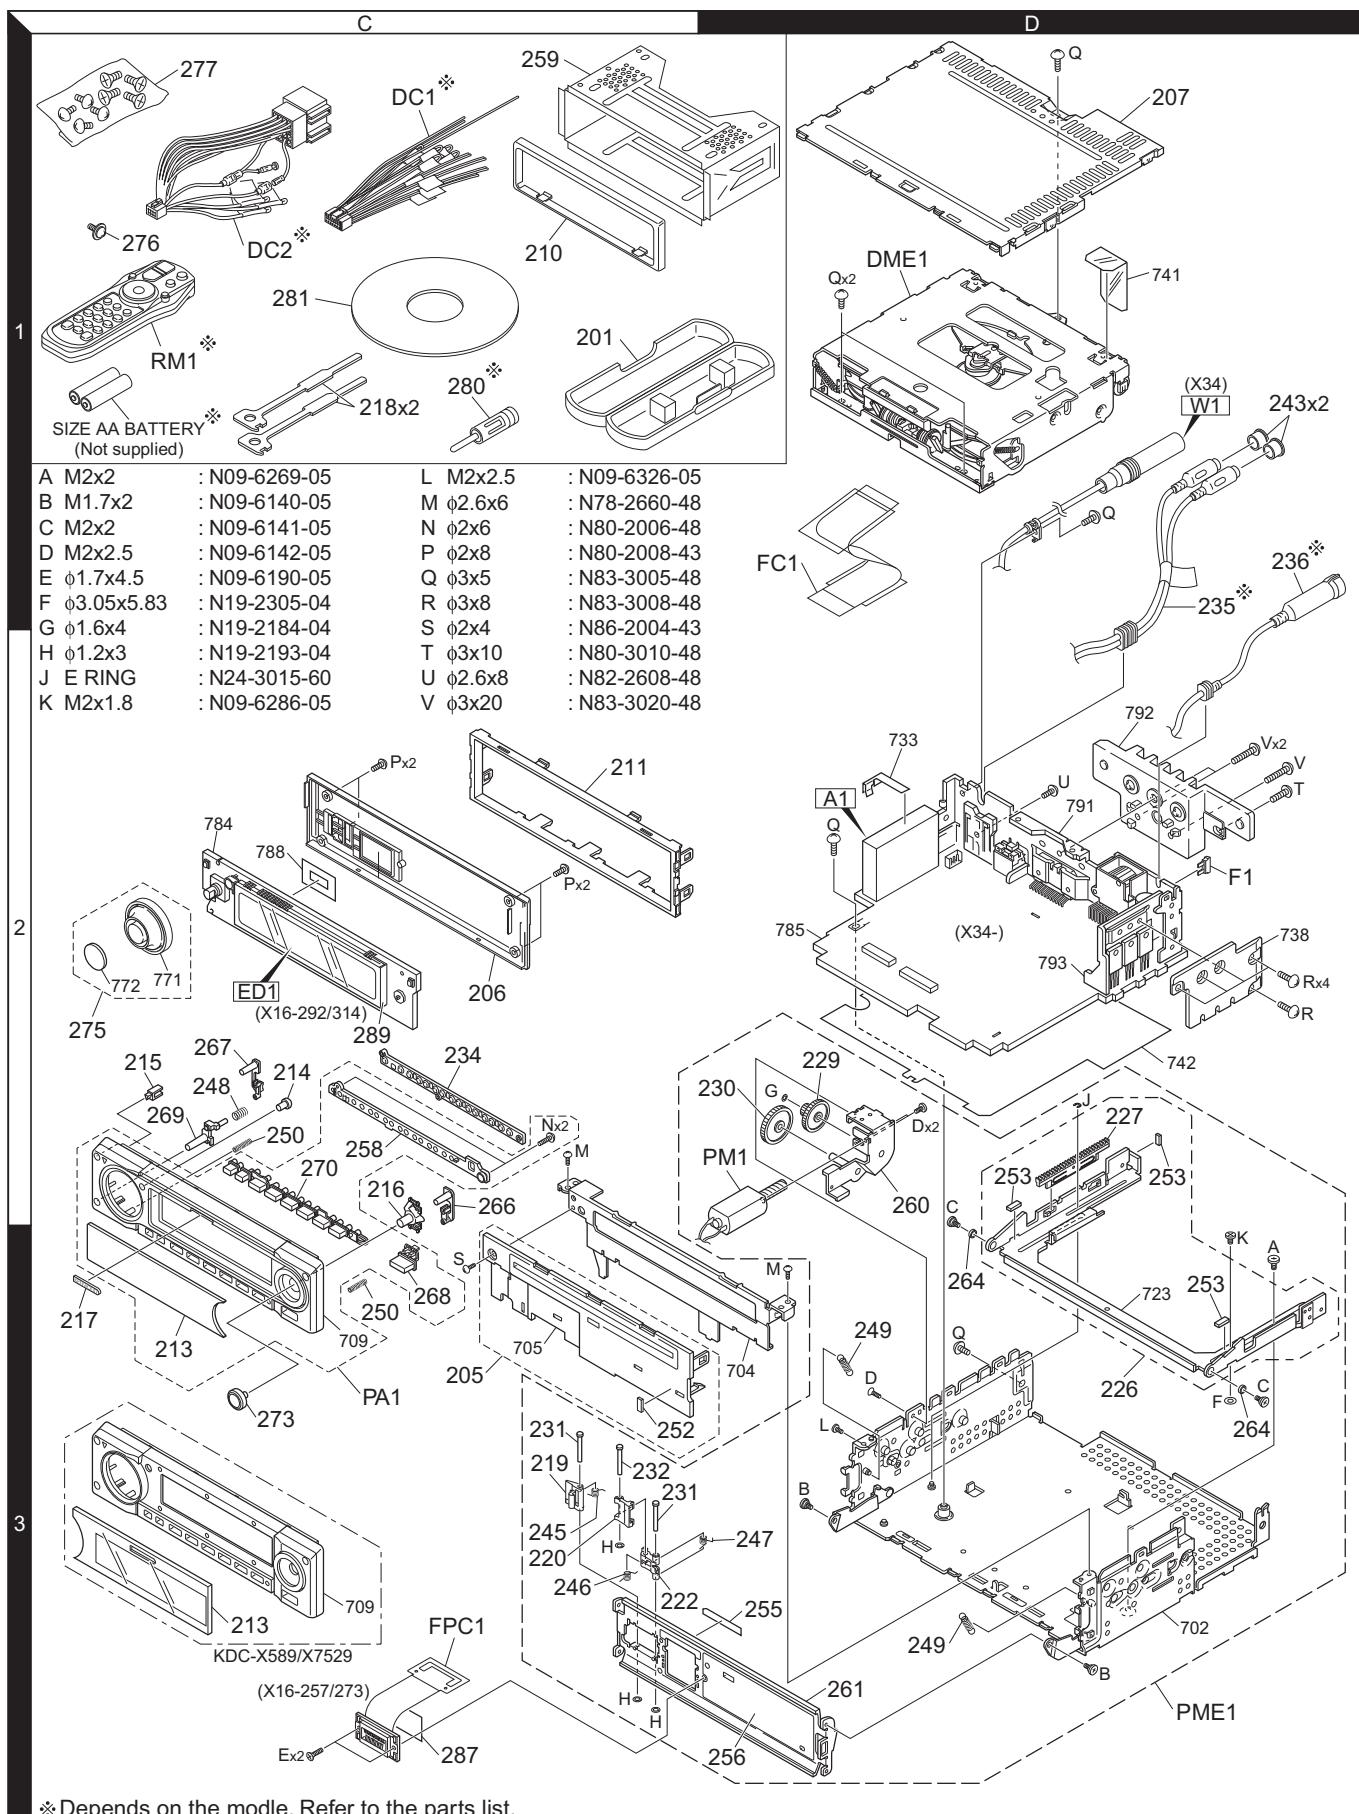

* Depends on the model. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-W6531/W6531Y/X589/X7529						△					
201	1C	*	A02-2732-03	PLASTIC CABINET ASSY		245	3C		G01-3210-04	TORSION COIL SPRING	
205	3C	*	A22-3023-12	SUB PANEL ASSY		246	3C		G01-3211-04	TORSION COIL SPRING	
206	2C	*	A46-1817-01	REAR COVER		247	3D		G01-3212-04	TORSION COIL SPRING	
207	1D		A52-0845-12	TOP PLATE		248	2C		G01-3213-04	COMPRESSION SPRING	
PA1	3C	*	A64-3498-12	PANEL ASSY	K	249	3D		G01-3215-04	EXTENSION SPRING	
PA1	3C	*	A64-3503-12	PANEL ASSY	M1	250	2C	*	G01-3261-04	COMPRESSION SPRING	
PA1	3C	*	A64-3511-12	PANEL ASSY	E1E	252	3C		G11-3594-04	CUSHION	
PME1	3D	*	A10-5205-22	CHASSIS ASSY	KM1E1	253	2D	*	G11-3646-04	CUSHION	
PME1	3D	*	A10-5224-22	CHASSIS ASSY	E	255	3D		G16-1482-14	SHEET	
RM1	1C	*	A70-2067-05	REMOTE CONTROLLER ASSY (RC-527)	KM1	256	3D		G16-1483-04	SHEET	
-			B46-0100-50	WARRANTY CARD	KM1E	-		*	H10-4925-02	POLYSTYRENE FOAMED FIXTURE	KM1E1
-			B46-0606-04	ID CARD	K	-		*	H10-4933-02	POLYSTYRENE FOAMED FIXTURE	E
-			B46-0612-14	ID CARD	E1M1E	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	KM1E1
-			B46-0648-13	USER CARD	K	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			B58-1426-04	CAUTION CARD	K	-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E
-		*	B59-1832-00	SUB-INSTRUCTION MANUAL	KM1E1	-		*	H54-3340-03	ITEM CARTON CASE	M1
-		*	B59-1833-00	SUB-INSTRUCTION MANUAL	E	-		*	H54-3348-03	ITEM CARTON CASE	K
-		*	B64-2975-00	INSTRUCTION MANUAL (ENGLISH)	K	-		*	H54-3352-03	ITEM CARTON CASE	E1
-		*	B64-2976-00	INSTRUCTION MANUAL (FRE.SPA.)	K	-		*	H54-3396-03	ITEM CARTON CASE	E
-		*	B64-2977-00	INSTRUCTION MANUAL (ENG.RUS.)	E1	258	2C	*	J19-7053-02	HOLDER	
-		*	B64-2985-00	INSTRUCTION MANUAL (ENG.T-CHI)	M1	259	1C		J21-9716-03	Mounting hardware assy	
-		*	B64-2995-00	INSTRUCTION MANUAL (ENGLISH)	E	260	2D		J22-0114-03	Mounting hardware assy M BR C	
-		*	B64-2996-00	INSTRUCTION MANUAL (FRE.GER.)	E	261	3D	*	J22-0263-02	Mounting hardware	
-		*	B64-2997-00	INSTRUCTION MANUAL (DUT.ITA.)	E	264	3D		J31-1062-04	COLLAR	
-		*	B64-2998-00	INSTRUCTION MANUAL (SPA.POR.)	E	266	2C	*	K24-4286-03	PUSH KNOB (EJECT)	KM1
210	1C	*	B07-3125-01	ESCUTCHEON		266	2C	*	K24-4287-03	PUSH KNOB (EJECT)	E1E
211	2C		B07-3095-02	ESCUTCHEON		267	2C	*	K24-4289-03	PUSH KNOB (ATT)	KM1
213	3C	*	B10-4645-11	FRONT GLASS	K	267	2C	*	K24-4290-03	PUSH KNOB (ATT)	E1E
213	3C	*	B10-4650-11	FRONT GLASS	M1	268	3C	*	K24-4292-03	PUSH KNOB (SRC)	KM1
213	3C	*	B10-4658-11	FRONT GLASS	E1E	268	3C	*	K24-4293-03	PUSH KNOB (SRC)	E1E
214	2C	*	B10-4662-04	FRONT GLASS	E1E	269	2C	*	K24-4295-03	PUSH KNOB (RELEASE)	KM1
214	2C	*	B10-4714-04	FRONT GLASS	KM1	269	2C	*	K24-4296-03	PUSH KNOB (RELEASE)	E1E
215	2C	*	B19-2309-03	LIGHTING BOARD		270	2C	*	K25-1711-02	PUSH KNOB (PRESET)	KM1
216	2C	*	B19-2310-03	LIGHTING BOARD		270	2C	*	K25-1712-02	PUSH KNOB (PRESET)	E1E
217	3C		B43-1518-04	BADGE		273	3C	*	K29-7144-03	KEY TOP (CONTROL)	
218	1C		D10-4589-04	LEVER		275	2C	*	K29-7150-04	KNOB ASSY (VOL)	
219	3C		D10-4805-03	LEVER		276	1C		N09-6212-05	TAPPING SCREW (2X5)	K
220	3C		D10-4806-03	LEVER		276	1C	*	N09-6280-05	TAPPING SCREW (2X5)	E1M1E
222	3C		D10-4807-13	LEVER		277	1C	*	N99-1723-05	SCREW SET	K
226	3D	*	D10-4875-13	SLIDER ASSY		277	1C	*	N99-1758-05	SCREW SET	M1
227	2D		D13-2318-13	RACK (GEAR)		A	3D	*	N09-6269-05	STEPPED SCREW (M2X2)	
229	2D		D13-2320-04	GEAR		B	3D		N09-6140-05	STEPPED SCREW (M1.7X2)	
230	2D		D13-2321-04	GEAR		C	3D		N09-6141-05	STEPPED SCREW (M2X2)	
231	3D		D21-2442-04	SHAFT		D	3D		N09-6142-05	MACHINE SCREW (M2X2.5)	
232	3C		D21-2443-04	SHAFT		E	3C		N09-6190-05	TAPPING SCREW (1.7X4.5)	
234	2C	*	E29-2026-03	CONDUCTIVE RUBBER		F	3D	*	N19-2305-04	FLAT WASHER (3.05X5.83X0.5)	
235	2D	*	E30-6290-15	CORD WITH PINPLUG	KM1	G	2D		N19-2184-04	FLAT WASHER (1.6X4.0X0.25)	
236	1D	*	E30-6420-05	CORD WITH DIN CONNECTOR	E1E	H	3C		N19-2193-04	FLAT WASHER (1.2X3.0X0.25)	
△ DC1	1C	*	E30-6408-05	DC CORD	KM1	J	2D		N24-3015-60	E TYPE RETAINING RING	
△ DC2	1C	*	E30-6412-05	DC CORD	E1E	K	2D	*	N09-6286-05	STEPPED SCREW (M2X1.8)	
FC1	1D		E39-0736-05	FLAT CABLE	24PIN 1MM	L	3D	*	N09-6326-05	MACHINE SCREW (M2X2.5)	
243	1D		F29-0626-04	INSULATING COVER	KM1	M	2C	*	N78-2660-48	PAN HEAD TAPPIE SCREW	

PARTS LIST

KDC-W6531/W6531Y/X589/X7529

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
N	2C		N80-2006-48	PAN HEAD TAPTTIE SCREW	
P	2C		N80-2008-43	PAN HEAD TAPTTIE SCREW	
Q	1D		N83-3005-48	PAN HEAD TAPTTIE SCREW	
R	2D		N83-3008-48	PAN HEAD TAPTTIE SCREW	
S	3C	*	N86-2004-43	BINDING HEAD TAPTTIE SCREW	
280	1C		T90-0523-05	ANTENNA ADAPTOR	E1E
PM1	2D		T42-1086-14	MOTOR ASSY	
281	1C	*	W01-1643-15	COMPACT DISC	KM1
281	1C	*	W01-1647-05	COMPACT DISC	E1E
DME1	1D	*	X92-5100-00	CD MECHANISM ASSY	KM1E1
DME1	1D	*	X92-5100-01	CD MECHANISM ASSY	E

SUB-CIRCUIT UNIT (X16-2570-10/2732-70)

J1		E58-0982-05	RECTANGULAR RECEPTACLE	
287	3C	F20-2284-14	INSULATING SHEET	
FPC1	3C	J86-0003-05	FPC (LEAD FREE)	

SWITCH UNIT (X16-2920-1x/3142-70)

D1		B30-1692-05	LED	HR/YG	
D2-11		B30-1605-05	LED	2COLOR PG/RED	
D12-18		B30-1729-05	LED	1608, BLUE	
C1,2		CK73GB1H103K	CHIP C	0.010UF K	
C3		CC73GCH1H470J	CHIP C	47PF J	
C4		CK73FB1A225K	CHIP C	2.2UF K	
C7-13		CK73GB1H103K	CHIP C	0.010UF K	
J1		E59-0839-05	RECTANGULAR PLUG		
289	2C	*	J19-7055-03	HOLDER	
CP1		RK74HB1J102J	CHIP-COM	1.0K J 1/16W	
CP2		RK74GA1J102J	CHIP-COM	1.0K J 1/16W	
CP3		RK74HB1J102J	CHIP-COM	1.0K J 1/16W	
R1		RK73EB2E101J	CHIP R	100 J 1/4W	
R2-6		RK73EB2E471J	CHIP R	470 J 1/4W	
R7		RK73GB2A103J	CHIP R	10K J 1/10W	
R8		RK73GB2A4R7J	CHIP R	4.7 J 1/10W	
R9		RK73GB2A474J	CHIP R	470K J 1/10W	
R10		RK73GB2A203J	CHIP R	20K J 1/10W	
R11		RK73GB2A104J	CHIP R	100K J 1/10W	
R12		RK73GB2A101J	CHIP R	100 J 1/10W	
R13		RK73GB2A223J	CHIP R	22K J 1/10W	
R14		RK73GB2A471J	CHIP R	470 J 1/10W	
R15		RK73EB2E621J	CHIP R	620 J 1/4W	
R16-18		RK73FB2B431J	CHIP R	430 J 1/8W	
R19-21		RK73GB2A331J	CHIP R	330 J 1/10W	
R22		RK73FB2B751J	CHIP R	750 J 1/8W	
R23,24		RK73GB2A332J	CHIP R	3.3K J 1/10W	
R25,26	*	RK73SB3A200J	CHIP R	20 J 1W	
R28		RK73GB2A223J	CHIP R	22K J 1/10W	KM1
R29		RK73GB2A472J	CHIP R	4.7K J 1/10W	
R30		RK73GB2A332J	CHIP R	3.3K J 1/10W	KM1
R31		RK73GB2A301J	CHIP R	300 J 1/10W	KM1
R32,33		RK73GB2A471J	CHIP R	470 J 1/10W	
W1,2		R92-2053-05	CHIP R	0 OHM J 1/8W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
S6			S70-0901-05	TACT SWITCH	
S11			S70-0901-05	TACT SWITCH	
S20		*	S70-0901-05	TACT SWITCH	
S21		*	S70-0926-15	TACT SWITCH	
S2		*	T99-0456-15	ROTARY ENCODER	
D21-23			STZ6.8N	ZENER DIODE	
D24			STZ6.2N	ZENER DIODE	
ED1		*	3-BT-226N	FLUORESCENT INDICATOR TUBE	
IC1			LC75756W	MOS-IC	
IC2			PNA4S22M	ANALOGUE IC	
Q1			KRA307-P	TRANSISTOR	
Q2			2SA1577	TRANSISTOR	
Q3			KRC404-P	TRANSISTOR	
Q4,5			KTC4075EP(Y,GR)	TRANSISTOR	Y, GR
Q6			2SA1576A	TRANSISTOR	Q, R, S
Q7			KRC404-P	TRANSISTOR	
Q8			KTC4075EP(Y,GR)	TRANSISTOR	Y, GR

CD PLAYER UNIT (X32-5730-00)

C3		CK73GB0J105K	CHIP C	1.0UF	K
C5		CK73GB1C104K	CHIP C	0.10UF	K
C7		CK73GB0J225K	CHIP C	2.2UF	K
C8		CK73GB0J105K	CHIP C	1.0UF	K
C12-14		CK73GB1C104K	CHIP C	0.10UF	K
C17,18		CK73GB1C104K	CHIP C	0.10UF	K
C21		CK73GB1H102K	CHIP C	1000PF	K
C25,26		CK73GB1C104K	CHIP C	0.10UF	K
C27		CK73GB0J105K	CHIP C	1.0UF	K
C28		CK73FB0J106M	CHIP C	10UF	M
C29		CK73GB1C104K	CHIP C	0.10UF	K
C30		CK73GB1H152K	CHIP C	1500PF	K
C31		CC73GCH1H470J	CHIP C	47PF	J
C32		CK73GB1C104K	CHIP C	0.10UF	K
C33		CK73GB0J225K	CHIP C	2.2UF	K
C34		CC73GCH1H560J	CHIP C	56PF	J
C35,36		CK73GB1C104K	CHIP C	0.10UF	K
C37		CK73GB1H102K	CHIP C	1000PF	K
C38		CK73GB1H682K	CHIP C	6800PF	K
C39		CK73GB1C104K	CHIP C	0.10UF	K
C40		CK73GB0J105K	CHIP C	1.0UF	K
C41		CK73GB0J475K	CHIP C	4.7UF	K
C44		CK73GB0J105K	CHIP C	1.0UF	K
C46		CK73GB1H682K	CHIP C	6800PF	K
C47		CK73GB1C104K	CHIP C	0.10UF	K
C48		CC73GCH1H040C	CHIP C	4.0PF	C
C49		CK73GB1H332K	CHIP C	3300PF	K
C50		CK73GB1C104K	CHIP C	0.10UF	K
C51		CC73GCH1H330J	CHIP C	33PF	J
C52		CK73FB1A225K	CHIP C	2.2UF	K
C53		CK73GB0J225K	CHIP C	2.2UF	K
C54,55		CK73GB1H103K	CHIP C	0.010UF	K
C56,57		CC73GCH1H391J	CHIP C	390PF	J
C58		CK73GB1H472K	CHIP C	4700PF	K
C59,60		CK73GB1H152K	CHIP C	1500PF	K

PARTS LIST**CD PLAYER UNIT (X32-5730-00)**

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R144			RK73GB2A222J	CHIP R 2.2K J 1/10W		C14			CD04AS1C470M	ELECTRO 47UF 16WV	KM1
R145			RK73GB2A102J	CHIP R 1.0K J 1/10W		C15			CD04AS1C220M	ELECTRO 22UF 16WV	KM1
R146			RK73GB2A332J	CHIP R 3.3K J 1/10W		C16			CD04AS1C470M	ELECTRO 47UF 16WV	KM1
R147,148			RK73GB2A103J	CHIP R 10K J 1/10W		C17	*		CD04BK1E101M	ELECTRO 100UF 25WV	
R150			RK73GB2A103J	CHIP R 10K J 1/10W		C19	*		CK73GB1A224K	CHIP C 0.22UF K	
R151			RK73GB2A102J	CHIP R 1.0K J 1/10W		C20	*		CD04BK1A221M	ELECTRO 220UF 10WV	
R152			RK73GB2A221J	CHIP R 220 J 1/10W		C101			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
R153-155			RK73GB2A330J	CHIP R 33 J 1/10W		C102			CK73GB0J105K	CHIP C 1.0UF K	
S1,2			S68-0863-05	PUSH SWITCH		C103			CK73GB1H104K	CHIP C 0.10UF K	
S3			S68-0862-05	PUSH SWITCH		C104			CK73GB1H103K	CHIP C 0.010UF K	
D2			DA204U	DIODE		C105			CK73GB1E223K	CHIP C 0.022UF K	
D3			DAN202U	DIODE		C106			CK73FB1C105K	CHIP C 1.0UF K	
D4,5			MAZS0510L	ZENER DIODE		C107			CK73GB1H102K	CHIP C 1000PF K	
D6			DAN202U	DIODE		C108-111			CK73GB1H103K	CHIP C 0.010UF K	
IC1	*		91CU27UG5UR8	MICROCONTROLLER IC		C201			CD04AS0J470M	ELECTRO 47UF 6.3WV	
IC2			UPD63712GC	MOS-IC		C202			CK73GB1H103K	CHIP C 0.010UF K	
IC4			BA5824FP	ANALOGUE IC		C203,204			CC73GCH1H220J	CHIP C 22PF J	
IC5			NJM2886DL2-33	ANALOGUE IC		C205			CK73GB1H104K	CHIP C 0.10UF K	
IC13			NJM4580V-ZB	ANALOGUE IC		C206,207			CK73GB1H103K	CHIP C 0.010UF K	
IC14			TAR5S50-F	ANALOGUE IC		C208			CK73GB1H102K	CHIP C 1000PF K	
IC15	*		CS7410-IQZ	MOS-IC		C209-211			CK73GB1H103K	CHIP C 0.010UF K	
IC16	*		MSM56V16160F10	DRAM IC		C302-305			CK73GB1H103K	CHIP C 0.010UF K	
IC17	*		W400DB55N6E78	ROM IC		C307			CK73GB1H103K	CHIP C 0.010UF K	
IC18			PCM1793DB	MOS-IC		C309			CK73GB1H103K	CHIP C 0.010UF K	
IC19			S-1112B33MCG	ANALOGUE IC		C310	*		CD04BK1E101M	ELECTRO 100UF 25WV	
IC20	*		XC6219B182PR	ANALOGUE IC		C311			CC73GCH1H331J	CHIP C 330PF J	E1E
IC21	*		XC6219B332PR	ANALOGUE IC		C312			CK73GB1H103K	CHIP C 0.010UF K	E1E
Q1			2SK3018	FET		C313			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	E1E
Q3			UMD9N	TRANSISTOR		C314			CD04AS1C100M	ELECTRO 10UF 16WV	E1E
Q4			2SK3018	FET		C315,316			CC73GCH1H120J	CHIP C 12PF J	E1E
Q5			UMD9N	TRANSISTOR		C317-319			CK73GB1C104K	CHIP C 0.10UF K	
Q6			UMD12N	TRANSISTOR		C320			CK73GB1H103K	CHIP C 0.010UF K	
Q7			DTC124EUA	DIGITAL TRANSISTOR		C324			CC73GCH1H101J	CHIP C 100PF J	
Q8	*		2SB0970 (R)	TRANSISTOR		C326			CC73GCH1H101J	CHIP C 100PF J	
Q9,10			DTC114YUA	DIGITAL TRANSISTOR		C401			CD04AS1C470M	ELECTRO 47UF 16WV	
Q11			2SK210 (GR)	FET		C402,403			CK73FB1A335K	CHIP C 3.3UF K	
Q12			DTA143XUA	DIGITAL TRANSISTOR		C404			CK73GB1A105K	CHIP C 1.0UF K	
Q13			DTC143XUA	DIGITAL TRANSISTOR		C405			CD04AT1H4R7M	ELECTRO 4.7UF 50WV	
Q14			DTC114YUA	DIGITAL TRANSISTOR		C406,407			CD04AS1H010M	ELECTRO 1UF 50WV	
Q15	*		2SB0970 (R)	TRANSISTOR		C408,409			CK73FB1C105K	CHIP C 1.0UF K	KM1

ELECTRIC UNIT (X34-342x-xx/3762-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D302			B30-1566-05	LED (1608, RED)		C410			CK73GB1H103K	CHIP C 0.010UF K	
C1	*		C90-6727-05	ELECTRO 3300UF 16WV	KM1	C412			CD04AS1C100M	ELECTRO 10UF 16WV	KM1
C1			C90-6746-05	ELECTRO 3300UF 16WV	E1E	C413,414			CK73FB1C474K	CHIP C 0.47UF K	
C3			C90-5692-05	ELECTRO 220UF 16WV		C415,416			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C4			CK73GB1H103K	CHIP C 0.010UF K		C417-420			CD04AS1C220M	ELECTRO 22UF 16WV	E1E
C5			CD04AS1C100M	ELECTRO 10UF 16WV		C417-422			CD04AS1C220M	ELECTRO 22UF 16WV	KM1
C6			CD04AS0J101M	ELECTRO 100UF 6.3WV		C431			CD04AS1C100M	ELECTRO 10UF 16WV	
C7			CK73FB1C105K	CHIP C 1.0UF K		C435,436			CK73GB1H152K	CHIP C 1500PF K	
C8			CD04AT1A221M	ELECTRO 220UF 10WV		C437,438			CC73GCH1H101J	CHIP C 100PF J	
C9,10			CD04AS1A101M	ELECTRO 100UF 10WV		C501			CK73FB1C105K	CHIP C 1.0UF K	
C11			CD04AS1HR47M	ELECTRO 0.47UF 50WV		C502			CD04AS1C101M	ELECTRO 100UF 16WV	
C12	*		CD04BK1E101M	ELECTRO 100UF 25WV		C503-506			C90-5700-05	NP-ELEC 4.7UF 16WV	
						C507			CK73FB1C105K	CHIP C 1.0UF K	
						C510,511			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
						C512			CD04AS0J470M	ELECTRO 47UF 6.3WV	

E : KDC-W6531 E1 : KDC-W6531Y K : KDC-X589 M1 : KDC-X7529

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-342x-xx/3762-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R234,235			RK73GB2A392J	CHIP R 3.9K J 1/10W		R414-419			RK73FB2B181J	CHIP R 180 J 1/8W	KM1
R236,237			RK73GB2A473J	CHIP R 47K J 1/10W		R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	E1E
R239			RK73GB2A222J	CHIP R 2.2K J 1/10W		R420,421			RK73FB2B181J	CHIP R 180 J 1/8W	E1E
R240			RK73GB2A101J	CHIP R 100 J 1/10W		R426			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1
R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W		R427			RK73GB2A472J	CHIP R 4.7K J 1/10W	KM1
R243			RK73GB2A473J	CHIP R 47K J 1/10W	E1M1E	R428			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1
R244			RK73GB2A473J	CHIP R 47K J 1/10W	K	R429			RK73GB2A473J	CHIP R 47K J 1/10W	KM1
R245			RK73GB2A473J	CHIP R 47K J 1/10W	E1E	R431			RK73GB2A100J	CHIP R 10 J 1/10W	
R246			RK73GB2A473J	CHIP R 47K J 1/10W	K	R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R246,247			RK73GB2A473J	CHIP R 47K J 1/10W	M1	R433,434			RK73GB2A101J	CHIP R 100 J 1/10W	
R248-250			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E	R435	*		RK73GB2A9R1J	CHIP R 9.1 J 1/10W	
R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	M1	R440,441			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1
R253			RK73GB2A222J	CHIP R 2.2K J 1/10W		R501			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W		R503			RK73GB2A203J	CHIP R 20K J 1/10W	
R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W		R505,506			RK73GB2A223J	CHIP R 22K J 1/10W	
R259,260			RK73GB2A104J	CHIP R 100K J 1/10W		R507			RK73GB2A221J	CHIP R 220 J 1/10W	
R261			RK73GB2A333J	CHIP R 33K J 1/10W		R508			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R262-265			RK73GB2A102J	CHIP R 1.0K J 1/10W		R509			RK73EB2E101J	CHIP R 100 J 1/4W	
R266,267			RK73GB2A103J	CHIP R 10K J 1/10W		R510			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R268-271			RK73GB2A471J	CHIP R 470 J 1/10W		R511-515			RK73EB2E101J	CHIP R 100 J 1/4W	
R273-275			RK73GB2A101J	CHIP R 100 J 1/10W		R516,517			RK73EB2E100J	CHIP R 10 J 1/4W	
R279,280			RK73GB2A473J	CHIP R 47K J 1/10W		R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R281,282			RK73GB2A103J	CHIP R 10K J 1/10W		R519			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R283			RK73GB2A223J	CHIP R 22K J 1/10W		R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	KE1E
R284			RK73GB2A471J	CHIP R 470 J 1/10W		R521-523			RK73EB2E471J	CHIP R 470 J 1/4W	KE1E
R301			RK73EB2E102J	CHIP R 1.0K J 1/4W		R908			RK73GB2A473J	CHIP R 47K J 1/10W	
R302,303			RK73EB2E100J	CHIP R 10 J 1/4W		R920			RK73GB2A391J	CHIP R 390 J 1/10W	
R304			RK73EB2E102J	CHIP R 1.0K J 1/4W		R921			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R305-308			RK73EB2E471J	CHIP R 470 J 1/4W		R922			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R309			RK73EB2E472J	CHIP R 4.7K J 1/4W		R924			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R310			RK73EB2E102J	CHIP R 1.0K J 1/4W		R925			RK73GB2A101J	CHIP R 100 J 1/10W	
R313			RK73GB2A472J	CHIP R 4.7K J 1/10W		R926			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R314			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R927			RK73GB2A113J	CHIP R 11K J 1/10W	
R316			RK73GB2A104J	CHIP R 100K J 1/10W		R928			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R317			RK73GB2A471J	CHIP R 470 J 1/10W		R929			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R318			RK73GB2A104J	CHIP R 100K J 1/10W		R932			RK73GB2A100J	CHIP R 10 J 1/10W	
R319			RK73GB2A471J	CHIP R 470 J 1/10W		R933			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R320			RK73FB2B102J	CHIP R 1.0K J 1/8W		R934			RK73GB2A104J	CHIP R 100K J 1/10W	
R321			RK73GB2A223J	CHIP R 22K J 1/10W		R935			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R322			RK73GB2A471J	CHIP R 470 J 1/10W		R936			RK73GB2A103J	CHIP R 10K J 1/10W	
R323			RK73GB2A472J	CHIP R 4.7K J 1/10W		R937			RK73GB2A101J	CHIP R 100 J 1/10W	
R324			RK73GB2A471J	CHIP R 470 J 1/10W		R938			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R325			RK73GB2A472J	CHIP R 4.7K J 1/10W		R941-944			RK73GB2A471J	CHIP R 470 J 1/10W	
R326			RK73GB2A222J	CHIP R 2.2K J 1/10W		R945-949			RK73GB2A103J	CHIP R 10K J 1/10W	
R329-331			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E	R950			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R332			RK73GB2A241J	CHIP R 240 J 1/10W		R951			RK73GB2A100J	CHIP R 10 J 1/10W	
R334,335	*		RK73GB2A102J	CHIP R 1.0K J 1/10W		R952			RK73GB2A431J	CHIP R 430 J 1/10W	
R341	*		RK73GB2A9R1J	CHIP R 9.1 J 1/10W		R953			RK73GB2A510J	CHIP R 51 J 1/10W	
R401			RK73GB2A103J	CHIP R 10K J 1/10W		W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E
R402,403			RK73GB2A361J	CHIP R 360 J 1/10W		W103			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1
R404,405			RK73GB2A223J	CHIP R 22K J 1/10W		W104			R92-2053-05	CHIP R 0 OHM J 1/8W	
R406,407			RK73GB2A361J	CHIP R 360 J 1/10W		W110			R92-1252-05	CHIP R 0 OHM J 1/16W	
R408,409			RK73GB2A223J	CHIP R 22K J 1/10W		W111			R92-2053-05	CHIP R 0 OHM J 1/8W	
R410,411			RK73GB2A361J	CHIP R 360 J 1/10W	KM1	W112,113			R92-1252-05	CHIP R 0 OHM J 1/16W	
R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	KM1	W114,115			R92-2053-05	CHIP R 0 OHM J 1/8W	

E : KDC-W6531 E1 : KDC-W6531Y K : KDC-X589 M1 : KDC-X7529

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-342x-xx/3762-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W121			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1	D411,412			MC2846	DIODE	KM1
W123			R92-2053-05	CHIP R 0 OHM J 1/8W		D412			DAP202U	DIODE	E1E
W124			R92-1252-05	CHIP R 0 OHM J 1/16W		D412			KDS120-P	DIODE	E1E
W125,126			R92-2053-05	CHIP R 0 OHM J 1/8W		D412			MC2846	DIODE	E1E
W127			R92-1252-05	CHIP R 0 OHM J 1/16W		D413,414			UDZS5.6B	ZENER DIODE	KM1
S1,2			S68-0886-05	PUSH SWITCH		D501,502			DAP202U	DIODE	
D1			S2V60*A	DIODE		D501,502			KDS120-P	DIODE	
D2			RB160L-40	DIODE		D501,502			MC2846	DIODE	
D3			UDZS5.6B	ZENER DIODE		D503,504			D1F60-5063	DIODE	
D3			02DZ5.6F-Y	ZENER DIODE		D503,504			1SR154-400	DIODE	
D4			HZU9.1 (B1)-E	ZENER DIODE		D505,506			AM01ZNF	DIODE	
D4	*		02DZ9.1F-X	ZENER DIODE		D505,506			10EDA20	DIODE	
D5			UDZS8.2B	ZENER DIODE		D507-510			D1F60-5063	DIODE	
D5			02DZ8.2F-Y	ZENER DIODE		D507-510			1SR154-400	DIODE	
D8			02DZ12F-X	ZENER DIODE	KM1	D511,512			STZ6.8N	ZENER DIODE	
D9			AM01ZNF	DIODE	KM1	D513-515			STZ6.2N	ZENER DIODE	M1
D9			10EDA20	DIODE	KM1	D513-517			STZ6.2N	ZENER DIODE	KE1E
D10			SFPB-54VNF	DIODE		D901			STZ6.8N	ZENER DIODE	
D101			AM01ZNF	DIODE		D903			UDZS6.8B	ZENER DIODE	
D101			10EDA20	DIODE		D903			02DZ6.8F-Y	ZENER DIODE	
D102			D1F60-5063	DIODE		D904			DA227	DIODE	
D102			1SR154-400	DIODE		D905			UDZS16B	ZENER DIODE	
D103			AM01ZNF	DIODE		D905			02DZ16F-Y	ZENER DIODE	
D103			10EDA20	DIODE		IC1	*		30624MWPA35GP	MICROCONTROLLER IC	
D104,105			D1F60-5063	DIODE		IC2			E-TDA7415	ANALOGUE IC	
D104,105			1SR154-400	DIODE		IC3			M5237ML-CF0J	ANALOGUE IC	
D106			UDZS5.6B	ZENER DIODE		IC4			E-TDA7560A	ANALOGUE IC	
D106			02DZ5.6F-Y	ZENER DIODE		IC5			BA00CCWT-V5	ANALOGUE IC	
D107			UDZS4.7B	ZENER DIODE		IC6			HD74HC02T-E	MOS-IC	
D107			02DZ4.7F-Y	ZENER DIODE		IC6			SN74HC02APWR	MOS-IC	
D108,109			UDZS6.8B	ZENER DIODE		IC7			S-80836CNB-J	MOS-IC	
D108,109			02DZ6.8F-Y	ZENER DIODE		IC8			LB1930M-E	ANALOGUE IC	
D110			DAN202U	DIODE		IC9			E-TDA7479AD	ANALOGUE IC	E1E
D110			KDS121-P	DIODE		IC10			BR24L04FV-W	ROM IC	
D110			MC2848	DIODE		IC11			TA75S558F-F	ANALOGUE IC	KM1
D111			UDZS6.2B	ZENER DIODE		IC12			SI-8050JF3NF	ANALOGUE IC	
D111			02DZ6.2F-Y	ZENER DIODE		IC902			NJM4565V-ZB	ANALOGUE IC	
D201			DAP202U	DIODE		Q1			2SB1565	TRANSISTOR	
D201			KDS120-P	DIODE		Q2			2SC4081	TRANSISTOR	
D201			MC2846	DIODE		Q2			2SC4155A (Q,R,S)	TRANSISTOR	
D301			IMSA-6801-E	SURGE ABSORBER		Q3			2SA1576A	TRANSISTOR	
D304-309			STZ6.2N	ZENER DIODE		Q3			2SA1603A	TRANSISTOR	
D310			DA204K	DIODE		Q4			UMC2N	TRANSISTOR	
D311			UDZS16B	ZENER DIODE		Q5			2SB1565	TRANSISTOR	
D311			02DZ16F-Y	ZENER DIODE		Q6			UMC2N	TRANSISTOR	
D401-403			DAP202U	DIODE		Q7			2SB1565	TRANSISTOR	
D401-403			KDS120-P	DIODE		Q8			2SC4081	TRANSISTOR	
D401-403			MC2846	DIODE		Q9			2SC4155A (Q,R,S)	TRANSISTOR	
D407			UDZS5.6B	ZENER DIODE	KM1	Q10			2SB1443	TRANSISTOR	
D407			02DZ5.6F-Y	ZENER DIODE	KM1	Q10			2SC4081	TRANSISTOR	
D408-410			DA204K	DIODE	KM1	Q11			2SC4155A (Q,R,S)	TRANSISTOR	
D408,409			DA204K	DIODE	E1E	Q11			DTC124EUA	DIGITAL TRANSISTOR	
D411,412			DAP202U	DIODE	KM1	Q11			KRC403-P	DIGITAL TRANSISTOR	
D411,412			KDS120-P	DIODE	KM1	Q12			RT1N241M	TRANSISTOR	
									2SC4081	TRANSISTOR	

PARTS LIST

ELECTRIC UNIT (X34-342x-xx/3762-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q12			2SC4155A (Q,R,S)	TRANSISTOR		Q905			2SC2873-F	TRANSISTOR	
Q13			2SA1576A	TRANSISTOR		Q906			DTA124EUA	DIGITAL TRANSISTOR	
Q13			2SA1603A	TRANSISTOR		Q906			KRA303-P	DIGITAL TRANSISTOR	
Q14,15			2SC4081	TRANSISTOR	KM1	Q906			RT1P241M	TRANSISTOR	
Q14,15			2SC4155A (Q,R,S)	TRANSISTOR	KM1	Q907			2SA1576A	TRANSISTOR	
Q16			2SB1443	TRANSISTOR	KM1	Q907			2SA1603A	TRANSISTOR	
Q17			DTC124EUA	DIGITAL TRANSISTOR		TH1			PRF21BE471QB2	POSITIVE RESISTOR	
Q17			KRC403-P	DIGITAL TRANSISTOR		A1	2D	*	X86-3840-11	FRONT-END UNIT	KM1
Q17			RT1N241M	TRANSISTOR		A1	2D	*	X86-3842-70	FRONT-END UNIT	E1
Q18			2SA1577	TRANSISTOR		A1	2D	*	X86-3842-71	FRONT-END UNIT	E
Q101			2SB1188 (Q,R)	TRANSISTOR	KM1	CD MECHANISM ASSY (X92-5100-0x)					
Q102			DTC114YUA	DIGITAL TRANSISTOR	KM1	2	1B		A10-4827-32	CHASSIS	
Q102			KRC407-P	DIGITAL TRANSISTOR	KM1	5	1B		D10-4576-83	ARM ASSY	
Q102			RT1N144M	TRANSISTOR	KM1	8	2A		D10-4579-23	LEVER ASSY	
Q103			2SB1188 (Q,R)	TRANSISTOR		10	3A		D10-4581-13	ARM	
Q104			2SA1576A	TRANSISTOR		11	2A		D10-4582-13	ARM	
Q104			2SA1603A	TRANSISTOR		12	3A		D10-4583-03	ARM	
Q105			DTA114EUA	DIGITAL TRANSISTOR		13	3A		D10-4584-03	ARM	
Q105			KRA302-P	DIGITAL TRANSISTOR		14	3B		D10-4585-03	ARM	
Q105			RT1P141M	TRANSISTOR		15	2A		D10-4586-13	SLIDER	
Q106			DTC114YUA	DIGITAL TRANSISTOR		16	3B		D10-4587-52	SLIDER	
Q106			KRC407-P	DIGITAL TRANSISTOR		17	3B		D10-4588-13	SLIDER	
Q106			RT1N144M	TRANSISTOR		18	3B		D10-4595-04	ARM	
Q107			DTA123JK	DIGITAL TRANSISTOR		19	3B		D10-4596-24	ARM	
Q108			DTC144EUA	DIGITAL TRANSISTOR		22	2A		D13-2151-04	GEAR	
Q108			KRC404-P	DIGITAL TRANSISTOR		23	2B		D13-2152-04	GEAR	
Q109			RT1N441M	TRANSISTOR		24	3B		D13-2153-04	GEAR	
Q109			2SC4081	TRANSISTOR		25	3B		D13-2154-04	GEAR	
Q110			2SC4155A (Q,R,S)	TRANSISTOR		26	3B		D13-2155-04	WORM	
Q110			2SA1576A	TRANSISTOR		27	3B		D13-2156-14	GEAR	
Q110			2SA1603A	TRANSISTOR		28	3B		D13-2157-04	GEAR	
Q111,112			2SC4155A (Q,R,S)	TRANSISTOR		29	3B		D13-2158-04	GEAR	
Q111,112	*		2SC4155A (Q,R,S)	TRANSISTOR		30	3B		D13-2168-04	GEAR	
Q113	*		KTA2014EP (Y,GR)	TRANSISTOR		31	3B		D13-2171-04	GEAR	
Q113	*		2SA1774	TRANSISTOR		32	2B		D13-2172-13	RACK (GEAR)	
Q114	*		2SA1989 (Q,R,S)	TRANSISTOR		33	2A		D14-0759-04	ROLLER	
Q114	*		DTA144EUA	DIGITAL TRANSISTOR		35	2B		D21-2382-04	SHAFT	
Q114	*		KRA304-P	DIGITAL TRANSISTOR		36	1A		D23-0954-04	RETAINER	
Q114	*		RT1P441M	TRANSISTOR		37	1B		D39-0246-05	DAMPER	
Q115,116			DTA124EUA	DIGITAL TRANSISTOR		38	2B		G01-3072-04	EXTENSION SPRING	
Q115,116			KRA303-P	DIGITAL TRANSISTOR		39	2A		G01-3073-04	TORSION COIL SPRING	
Q300			RT1P241M	TRANSISTOR		40	2A		G01-3074-04	EXTENSION SPRING	
Q301			2SB1689	TRANSISTOR		41	1B		G01-3075-14	EXTENSION SPRING	
Q301			DTC124EUA	DIGITAL TRANSISTOR		42	2A		G01-3076-04	EXTENSION SPRING	
Q301			KRC403-P	DIGITAL TRANSISTOR		43	1B		G01-3077-14	EXTENSION SPRING	
Q304			RT1N241M	TRANSISTOR		44	2B		G02-1399-04	FLAT SPRING	
Q304			DTC114YUA	DIGITAL TRANSISTOR		45	2B		G02-1408-04	FLAT SPRING	
Q304			KRC407-P	DIGITAL TRANSISTOR		51	1A		J21-9676-32	MOUNTING HARDWARE	
Q400-403			RT1N144M	TRANSISTOR	E1E	52	3B		J21-9677-22	MOUNTING HARDWARE	
Q400-403			DTC143TUA	DIGITAL TRANSISTOR		53	1B		J21-9678-13	MOUNTING HARDWARE	
Q400-403			DTC143TUA	DIGITAL TRANSISTOR	KM1	55	1A		J90-1001-11	GUIDE	
Q400-403			KRC410-P	DIGITAL TRANSISTOR	KM1	56	1B		J90-1023-03	GUIDE	
Q400-403			RT1N430M	TRANSISTOR	KM1						
Q400-405			DTC143TUA	DIGITAL TRANSISTOR							
Q400-405			KRC410-P	DIGITAL TRANSISTOR							
Q400-405			RT1N430M	TRANSISTOR							

E : KDC-W6531 E1 : KDC-W6531Y K : KDC-X589 M1 : KDC-X7529

△ Indicates safety critical components.

PARTS LIST

CD MECHANISM ASSY (X92-5100-0x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD							
A	2B		N09-4460-05	TAPTTIE SCREW (OVAL P TAPTTIT)							
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)							
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)							
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-05	TAPTTIE SCREW (BIND P 2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW							
J	1B		N09-6108-05	MACHINE SCREW (M2X3.5TYPE3)							
K	3B		N09-6155-05	SEMS (TAPTTIE SCREW)(PT2X6)							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)							
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY							