 
 


EXPLODED VIEW (CD MECHANISM)

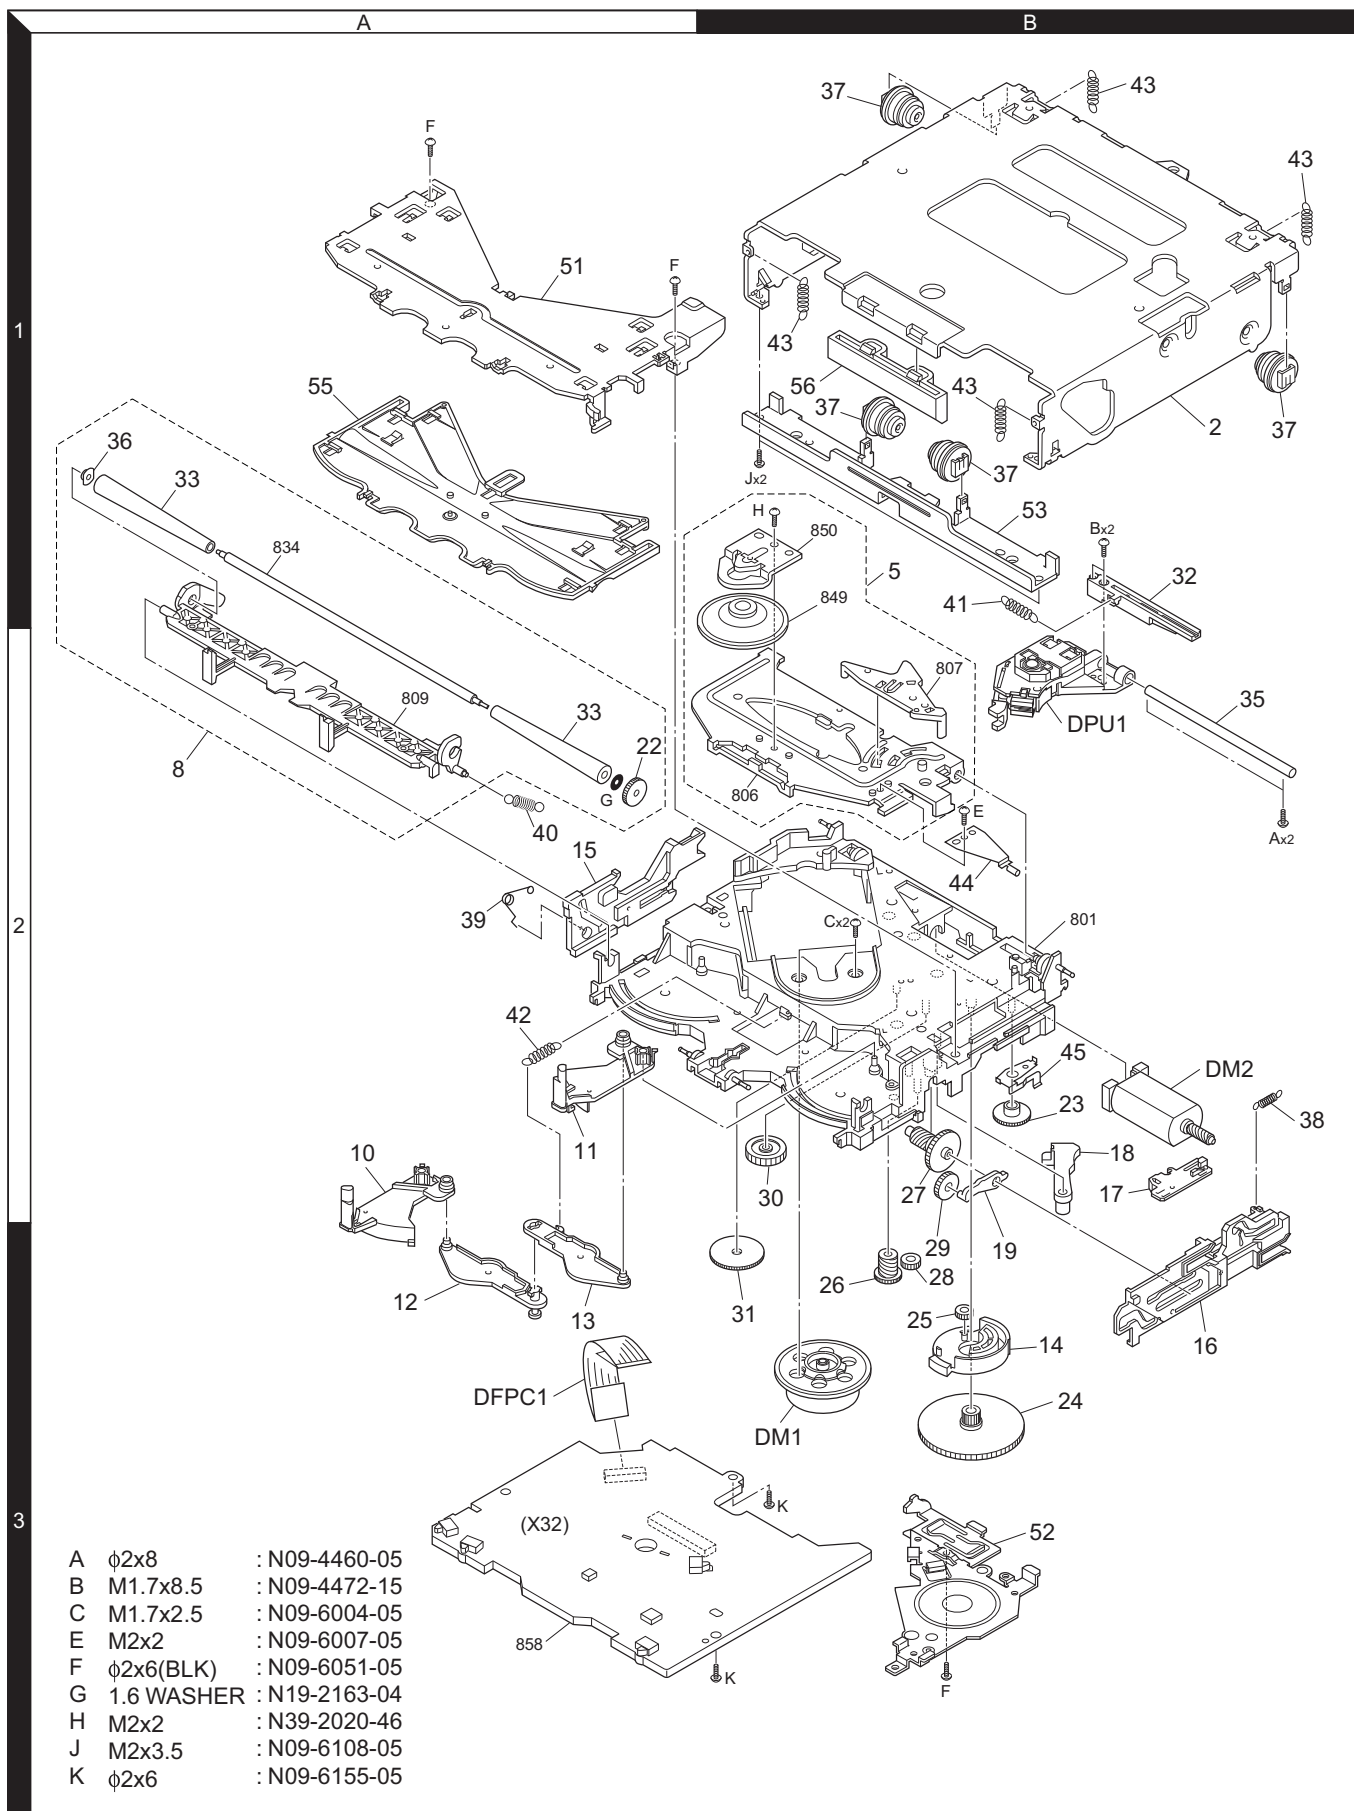

EXPLODED VIEW (UNIT)

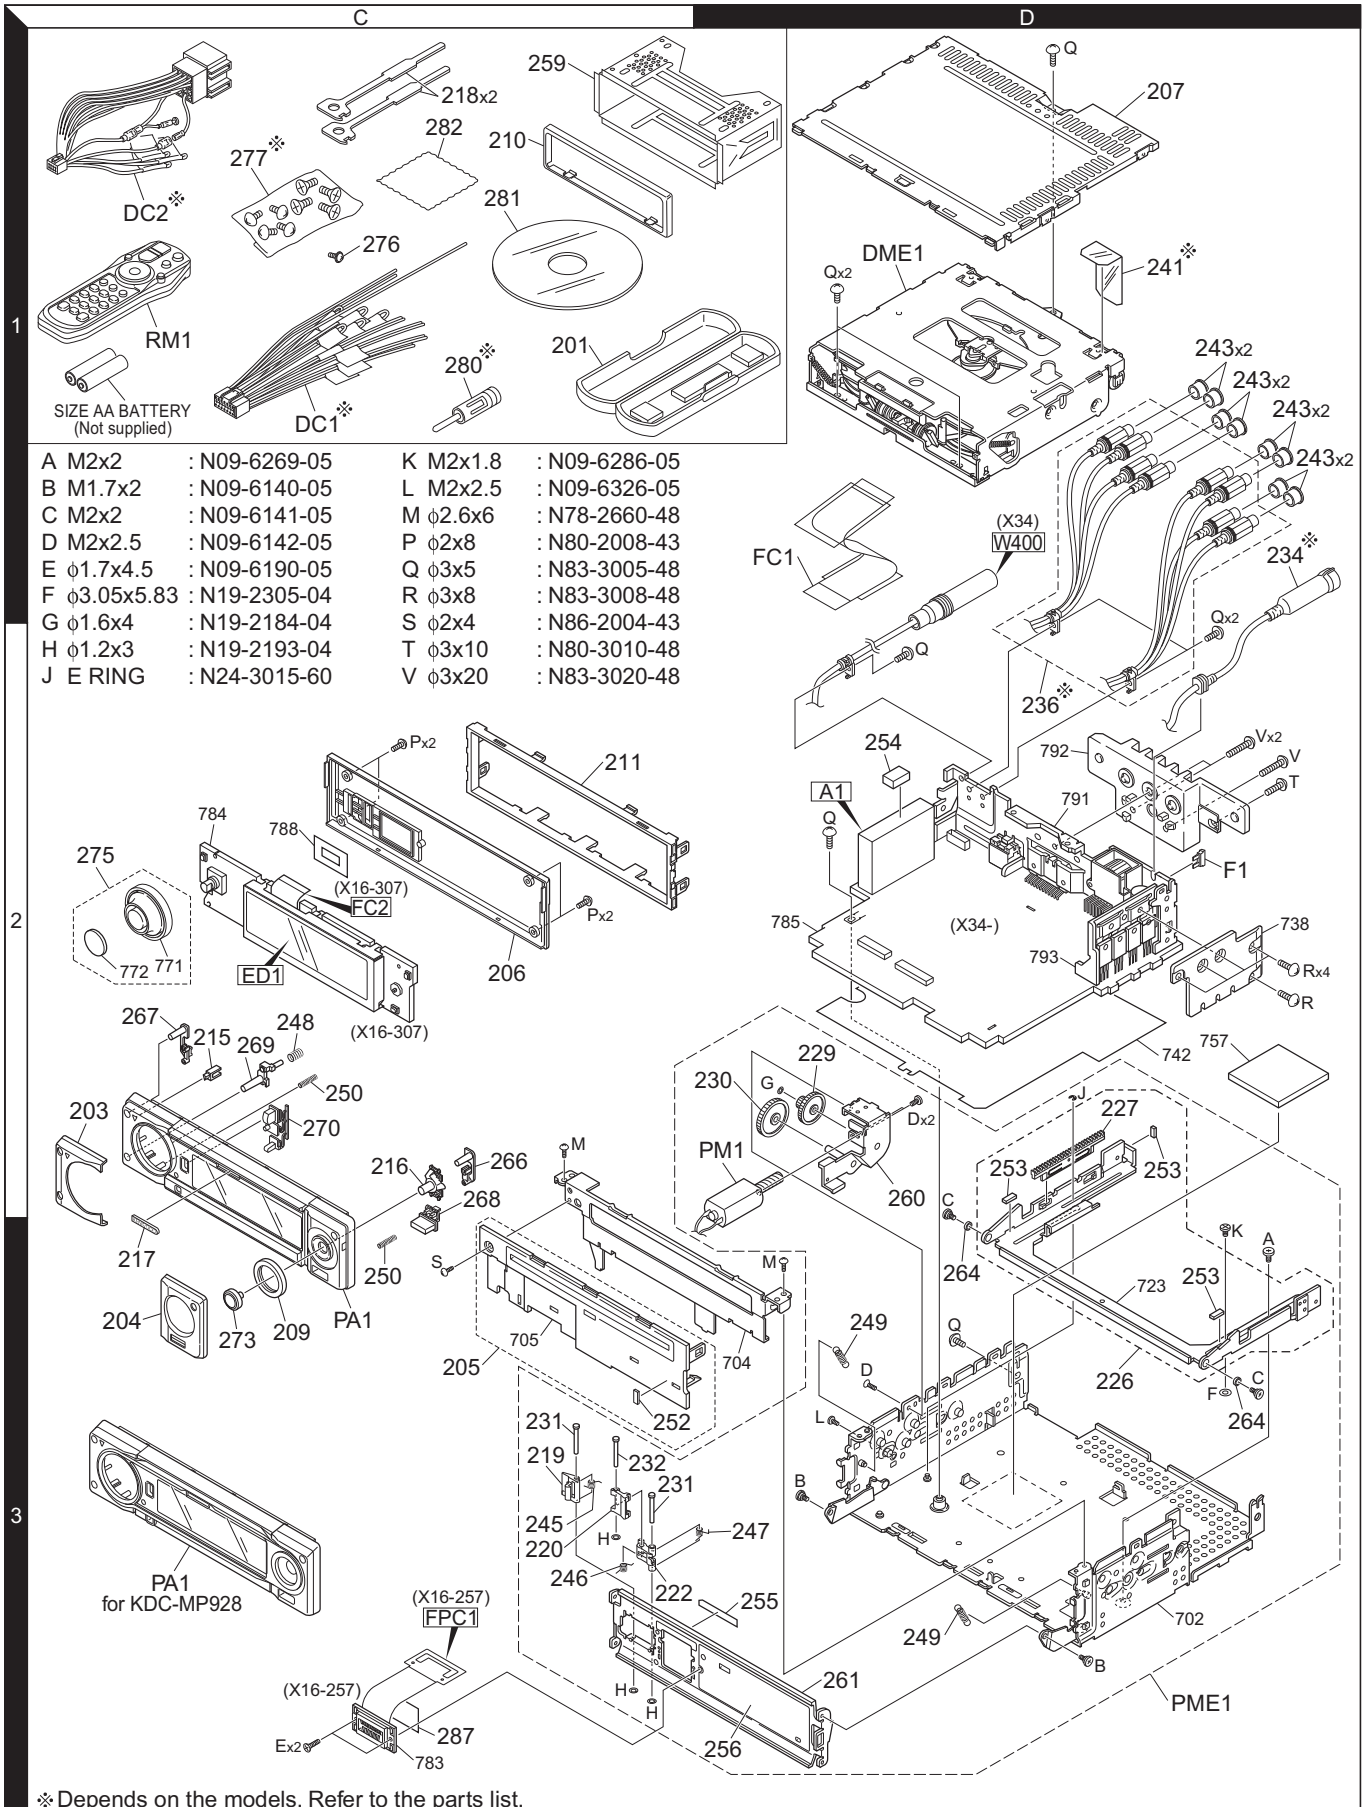

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP928/PSW9531/PSW9531Y, XXV-01D					
201	1C	*	A02-2749-03	PLASTIC CABINET ASSY	
203	2C		A21-4439-12	DRESSING PANEL (L)	E1E2
203	2C	*	A21-4565-12	DRESSING PANEL (L-BLK)	K1E3M1
204	3C		A21-4441-12	DRESSING PANEL (R)	E1E2
204	3C	*	A21-4566-12	DRESSING PANEL (R-BLK)	K1
204	3C	*	A21-4567-12	DRESSING PANEL (R-BLK)	E3
204	3C	*	A21-4568-12	DRESSING PANEL (R-BLK)	M1
205	3C	*	A22-3023-22	SUB PANEL ASSY	
206	2C		A46-1817-01	REAR COVER	
207	1D		A52-0845-12	TOP PLATE	
PA1	3C	*	A64-3623-13	PANEL ASSY	K
PA1	3C	*	A64-3624-12	PANEL ASSY	K1
PA1	3C	*	A64-3625-12	PANEL ASSY	E1E2
PA1	3C	*	A64-3626-12	PANEL ASSY	M1
PA1	3C	*	A64-3700-12	PANEL ASSY	E3
PME1	3D		A10-5205-22	CHASSIS ASSY	
RM1	1C		A70-2067-05	REMOTE CONTROLLER ASSY (RC-527)	
-			B46-0100-50	WARRANTY CARD	KK1E2
-			B46-0100-50	WARRANTY CARD	E3M1
-			B46-0606-04	ID CARD	KK1
-			B46-0612-14	ID CARD	E1E2E3
-			B46-0612-14	ID CARD	M1
-		*	B46-0676-04	USER CARD	K1
-		*	B46-0677-04	USER CARD	M1
-		*	B46-0678-04	USER CARD	E3
-		*	B58-1431-04	CAUTION CARD	KK1
-			B59-1832-00	SUB-INSTRUCTION MANUAL	
-		*	B64-3058-00	INSTRUCTION MANUAL (ENGLISH)	K1
-		*	B64-3059-00	INSTRUCTION MANUAL (FRE.SPA.)	K1
-		*	B64-3060-00	INSTRUCTION MANUAL (RUSSIAN)	E1
-		*	B64-3061-00	INSTRUCTION MANUAL (ENG.T-CHI)	M1
-		*	B64-3091-00	INSTRUCTION MANUAL (ENGLISH)	E1E2
-		*	B64-3092-00	INSTRUCTION MANUAL (FRE.GER.)	E2
-		*	B64-3093-00	INSTRUCTION MANUAL (DUT.ITA.)	E2
-		*	B64-3094-00	INSTRUCTION MANUAL (SPA.POR.)	E2
-		*	B64-3149-00	INSTRUCTION MANUAL (ENGLISH)	K
-		*	B64-3150-00	INSTRUCTION MANUAL (FRE.SPA.)	K
-		*	B64-3151-00	INSTRUCTION MANUAL (ENGLISH)	E3
-		*	B64-3152-00	INSTRUCTION MANUAL (FRE.GER.)	E3
-		*	B64-3153-00	INSTRUCTION MANUAL (DUT.ITA.)	E3
209	3C		B07-3127-03	ESCUTCHEON (R LING)	KE1E2
209	3C	*	B07-3163-03	ESCUTCHEON (R LING)	K1E3M1
210	1C		B07-3125-01	ESCUTCHEON	
211	2C		B07-3095-02	ESCUTCHEON	
215	2C		B19-2309-03	LIGHTING BOARD	
216	2C		B19-2310-13	LIGHTING BOARD	
217	3C		B43-1518-04	BADGE	
218	1C		D10-4589-04	LEVER	
219	3C		D10-4805-03	LEVER	
220	3C		D10-4806-03	LEVER	
222	3C		D10-4807-13	LEVER	
226	3D		D10-4875-13	SLIDER ASSY	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
227	2D		D13-2318-13	RACK (GEAR)	
229	2D		D13-2320-04	GEAR	
230	2D		D13-2321-04	GEAR	
231	3C		D21-2442-04	SHAFT	
232	3C		D21-2443-04	SHAFT	
234	1D		E30-6292-15	CORD WITH DIN CONNECTOR	E1E2E3
236	2D		E30-6435-05	CORD WITH PINPLUG	KE1E2
236	2D	*	E30-6473-05	CORD WITH PINPLUG	K1E3M1
DC1	1C		E30-6408-05	DC CORD	K1M1
DC1	1C		E30-6414-05	DC CORD	K
DC2	1C		E30-6412-05	DC CORD	E1E2E3
FC1	1D		E39-0736-05	FLAT CABLE (24PIN 1MM)	
241	1D	*	F20-2278-04	INSULATING SHEET (MECH)	E1E2E3
243	1D		F29-0626-04	INSULATING COVER	
F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) 10A	
245	3C		G01-3210-04	TORSION COIL SPRING	
246	3C		G01-3211-04	TORSION COIL SPRING	
247	3D		G01-3212-04	TORSION COIL SPRING	
248	2C		G01-3213-04	COMPRESSION SPRING	
249	3D		G01-3215-04	EXTENSION SPRING (P)	
250	2C		G01-3261-04	COMPRESSION SPRING (STATIC)	
252	3C		G11-3594-04	CUSHION	
253	2D		G11-3646-04	CUSHION	
254	2D	*	G11-3656-04	CUSHION	
255	3D		G16-1482-14	SHEET	
256	3D		G16-1483-04	SHEET	
-			H10-4925-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	KK1E1
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	M1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E2E3
-		*	H54-3450-03	ITEM CARTON CASE	K1
-		*	H54-3451-03	ITEM CARTON CASE	K
-		*	H54-3452-03	ITEM CARTON CASE	E1
-		*	H54-3453-03	ITEM CARTON CASE	M1
-		*	H54-3503-03	ITEM CARTON CASE	E2
-		*	H54-3504-03	ITEM CARTON CASE	E3
259	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
260	3D		J22-0114-03	MOUNTING HARDWARE ASSY (M BR C)	
261	3D		J22-0263-02	MOUNTING HARDWARE	
264	3D		J31-1062-04	COLLAR	
266	2C		K24-4286-03	PUSH KNOB (EJECT)	E1E2
266	2C	*	K24-4287-13	PUSH KNOB (EJECT)	KK1E3
266	2C	*	K24-4287-13	PUSH KNOB (EJECT)	M1
267	2C		K24-4289-03	PUSH KNOB (ATT)	E1E2
267	2C	*	K24-4290-13	PUSH KNOB (ATT)	KK1E3
267	2C	*	K24-4290-13	PUSH KNOB (ATT)	M1
268	3C		K24-4292-03	PUSH KNOB (SRC)	E1E2
268	3C	*	K24-4293-13	PUSH KNOB (SRC)	KK1E3
268	3C	*	K24-4293-13	PUSH KNOB (SRC)	M1
269	2C		K24-4295-03	PUSH KNOB (RELEASE)	E1E2
269	2C		K24-4296-03	PUSH KNOB (RELEASE)	KK1E3

E1 : KDC-PSW9531Y **E2** : KDC-PSW9531 **E3** : XXV-01D (Europe type)

K : KDC-MP928 **K1** : XXV-01D (North America type) **M1** : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

KDC-MP928/PSW9531/PSW9531Y, XXV-01D

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
269	2C		K24-4296-03	PUSH KNOB (RELEASE)	M1	C30			CK73GB1H103K	CHIP C 0.010UF K	
270	2C	*	K25-1721-13	PUSH KNOB (MENU)		C31			CC73GCH1H221J	CHIP C 220PF J	
273	3C		K29-7144-03	KEY TOP (CONTROL)	KE1E2	C32			CK73FB1A225K	CHIP C 2.2UF K	
273	3C	*	K29-7180-03	KEY TOP (CONTROL)	K1E3M1	C33			CK73GB1H103K	CHIP C 0.010UF K	
275	2C		K29-7150-04	KNOB ASSY (VOL)	KE1E2	C35			CK73GB1H103K	CHIP C 0.010UF K	
275	2C	*	K29-7181-04	KNOB ASSY (VOL)	K1E3M1	C36			CK73GB1H104K	CHIP C 0.10UF K	
276	1C		N09-6280-05	TAPPING SCREW (T2X5)		C37,38			CK73GB1H103K	CHIP C 0.010UF K	
277	1C		N99-1758-05	SCREW SET	KK1M1	C39			CK73FB0J106K	CHIP C 10UF K	
A	3D		N09-6269-05	STEPPED SCREW (M2X2)		C41			CK73GB1H103K	CHIP C 0.010UF K	
B	3D		N09-6140-05	STEPPED SCREW (M1.7X2)		C43			CC73GCH1H101J	CHIP C 100PF J	
C	3D		N09-6141-05	STEPPED SCREW (M2X2)		C44			CK73GB1H103K	CHIP C 0.010UF K	
D	3D		N09-6142-05	MACHINE SCREW (M2X2.5)		C45			CK73FB0J106K	CHIP C 10UF K	
E	3C		N09-6190-05	TAPPING SCREW (T1.7X4.5)		C46			CK73EB1C106K	CHIP C 10UF K	
F	3D		N19-2305-04	FLAT WASHER (3.05X5.83)		C47,48			CK73FB0J106K	CHIP C 10UF K	
G	2D		N19-2184-04	FLAT WASHER (1.6X4.0)		C49			CK73FB1C105K	CHIP C 1.0UF K	
H	3C		N19-2193-04	FLAT WASHER (1.2X3)		C50			CK73GB1H102K	CHIP C 1000PF K	
J	2D		N24-3015-60	E TYPE RETAINING RING		C51			CK73GB1A474K	CHIP C 0.47UF K	
K	2D		N09-6286-05	STEPPED SCREW (M2X1.8)		CN1	2C	*	E41-2195-05	FLAT CABLE CONNECTOR	
L	3D		N09-6326-05	MACHINE SCREW (M2X2.5)		FC2		*	E39-0737-05	FLAT CABLE	
M	2C		N78-2660-48	PAN HEAD TAPTITE SCREW (2.6X6)		J1		*	E59-0846-05	RECTANGULAR PLUG	
P	2C		N80-2008-43	PAN HEAD TAPTITE SCREW (2X8)		F1		*	F53-0367-05	FUSE	
Q	1D		N83-3005-48	PAN HEAD TAPTITE SCREW		X1		*	L78-1211-05	RESONATOR (8.000MHZ)	
R	2D		N83-3008-48	PAN HEAD TAPTITE SCREW		CP1,2			RK74HB1J223J	CHIP-COM 22K J 1/16W	
S	3C		N86-2004-43	BINDING HEAD TAPTITE SCREW		CP3			RK74GA1J223J	CHIP-COM 22K J 1/16W	
280	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2E3	CP4			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
PM1	2D		T42-1086-14	MOTOR ASSY		CP5			RK74GA1J332J	CHIP-COM 3.3K J 1/16W	
281	1C		W01-1643-15	COMPACT DISC	KK1M1	CP6			RK74GA1J473J	CHIP-COM 47K J 1/16W	
281	1C		W01-1647-05	COMPACT DISC (E TYPE)	E1E2E3	CP7			RK74HB1J473J	CHIP-COM 47K J 1/16W	
282	1C		W01-1649-05	CLEANING CLOTH	K1E3M1	CP8			RK74GA1J101J	CHIP-COM 100 J 1/16W	
DME1	1D		X92-5100-00	CD MECHANISM ASSY (DXM-6800W)		CP10-14			RK74HB1J101J	CHIP-COM 100 J 1/16W	
SUB-CIRCUIT UNIT (X16-2570-10)						CP15			RK74HB1J223J	CHIP-COM 22K J 1/16W	
J1			E58-0982-05	RECTANGULAR RECEPTACLE		CP16			RK74HB1J101J	CHIP-COM 100 J 1/16W	
287	3C		F20-2284-14	INSULATING SHEET		CP17			RK74HB1J223J	CHIP-COM 22K J 1/16W	
FPC1	3C		J86-0003-05	FPC (LEAD FREE)		CP18			RK74HB1J101J	CHIP-COM 100 J 1/16W	
SWITCH UNIT (X16-3070-10)						CP19			RK74HB1J223J	CHIP-COM 22K J 1/16W	
D1-3			B30-1729-05	LED (1608, BLUE)		CP20,21			RK74HB1J101J	CHIP-COM 100 J 1/16W	
D5-8			B30-1729-05	LED (1608, BLUE)		CP22			RK74HB1J223J	CHIP-COM 22K J 1/16W	
D9			B30-2233-05	LED (HR 1608)		CP23			RK74HB1J101J	CHIP-COM 100 J 1/16W	
D10-13			B30-1605-05	LED (2COLOR PG/RED)		CP24			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
C1-3			CK73GB1H103K	CHIP C 0.010UF K		CP25			RK74HB1J332J	CHIP-COM 3.3K J 1/16W	
C5-8			CK73GB1H103K	CHIP C 0.010UF K		CP26			RK74HB1J223J	CHIP-COM 22K J 1/16W	
C9,10			CK73FB0J106K	CHIP C 10UF K		CP29			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C11,12			CK73GB1H332K	CHIP C 3300PF K		CP30			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
C13			CK73EB1A475K	CHIP C 4.7UF K		CP31			RK74HB1J223J	CHIP-COM 22K J 1/16W	
C14			CK73GB1H103K	CHIP C 0.010UF K		CP33			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C15			CK73FB1A225K	CHIP C 2.2UF K		CP34			RK74HB1J473J	CHIP-COM 47K J 1/16W	
C16-22			CK73GB1H103K	CHIP C 0.010UF K		CP35,36			RK74GA1J101J	CHIP-COM 100 J 1/16W	
C24,25			CK73GB1H473K	CHIP C 0.047UF K		CP37-39			RK74GA1J223J	CHIP-COM 22K J 1/16W	
C26,27			CK73GB1H103K	CHIP C 0.010UF K		R1-3			RK73FB2B391J	CHIP R 390 J 1/8W	
C28,29			CK73GB1A105K	CHIP C 1.0UF K		R5			RK73FB2B621J	CHIP R 620 J 1/8W	
						R6			RK73FB2B681J	CHIP R 680 J 1/8W	
						R8			RK73FB2B821J	CHIP R 820 J 1/8W	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-3070-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R10 R11 R13 R14 R15,16			RK73GB2A512J RK73GB2A223J RK73GB2A222J RK73GB2A103J RK73GB2A274J	CHIP R 5.1K J 1/10W CHIP R 22K J 1/10W CHIP R 2.2K J 1/10W CHIP R 10K J 1/10W CHIP R 270K J 1/10W	
R17 R18 R19 R20 R23,24			RK73GB2A472J RK73GB2A473J RK73GB2A100J RK73GB2A472J RK73GB2A472J	CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 10 J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7K J 1/10W	
R26-28 R29 R30 R33 R36			RK73GB2A103J RK73GH2A330D RK73GB2A223J RK73GB2A102J RK73GB2A101J	CHIP R 10K J 1/10W CHIP R 33 D 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W	
R37 R38,39 R40 R42 R45			RK73GB2A473J RK73GB2A102J RK73GB2A223J RK73GB2A822J RK73EB2E102J	CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 8.2K J 1/10W CHIP R 1.0K J 1/4W	
R46-48 R49,50 R61 R62 R63			RK73EB2E101J RK73EB2E102J RK73GB2A683J RK73GB2A563J RK73GB2A203J	CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 68K J 1/10W CHIP R 56K J 1/10W CHIP R 20K J 1/10W	
R64 R66 R67 R72-74 R78		*	RK73GB2A333J RK73GB2A683J RK73PB2H1R8J RK73GB2A101J RK73GB2A102J	CHIP R 33K J 1/10W CHIP R 68K J 1/10W CHIP R 1.8 J 1/2W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R79-81 R83 R84 R86 R87		*	RK73GB2A223J RK73GB2A101J RK73GB2A223J RK73PB2H1R8J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 1.8 J 1/2W CHIP R 22K J 1/10W	
R88 R89 R93,94 R95,96 R100			RK73GB2A122J RK73GB2A102J RK73GB2A101J RK73GB2A680J RK73GB2A223J	CHIP R 1.2K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 68 J 1/10W CHIP R 22K J 1/10W	
W1,2			R92-2053-05	CHIP R 0 OHM J 1/8W	
S2,3 S16-18 S19 S20			S70-0901-05 S70-0901-05 S70-0926-25 S70-0901-05	TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH	
S1			T99-0456-15	ROTARY ENCODER	
D21 D24-28 D29 IC1 IC2		*	DA204U DA204U 1SS400 PL127J60TDI6T4 BA3830F	DIODE DIODE DIODE ROM IC ANALOGUE IC	
IC4 IC5		*	703134GJ012-A BD5237FVE	MICROCONTROLLER IC ANALOGUE IC	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC6 IC7 IC8 IC9 IC10		*	RS-171 TC74LVX08FT TC7WT126FU-F TC7PA04FU-F SI-3025KMNF	ANALOGUE IC MOS-IC MOS-IC MOS-IC ANALOGUE IC	
IC11 IC12 IC13 Q1-5 Q6		*	SI-3033LUSNF CY7C1021C12ZXI TC7SH08FU-F 2SC4617 RTQ025P02	ANALOGUE IC SRAM IC MOS-IC TRANSISTOR FET	
Q7 Q8,9 Q10 Q16 Q17			2SA1774 DTC143ZE 2SB1689 DTC143ZE RTQ025P02	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR FET	
ED1		*	W02-5098-05	ELECTRIC CIRCUIT MODULE (OEL)	
CD PLAYER UNIT (X32-5730-00)					
C3 C5 C7 C8 C12-14			CK73GB0J105K CK73GB1C104K CK73GB0J225K CK73GB0J105K CK73GB1C104K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C17,18 C21 C25,26 C28 C29			CK73GB1C104K CK73GB1H102K CK73GB1C104K CK73FB0J106M CK73GB1C104K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K	
C30 C31 C32 C33 C34			CK73GB1H152K CC73GCH1H470J CK73GB1C104K CK73GB0J225K CC73GCH1H560J	CHIP C 1500PF K CHIP C 47PF J CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 56PF J	
C35,36 C37 C38 C39 C40			CK73GB1C104K CK73GB1H102K CK73GB1H682K CK73GB1C104K CK73GB0J105K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 6800PF K CHIP C 0.10UF K CHIP C 1.0UF K	
C41 C44 C46 C47 C48			CK73GB0J475K CK73GB0J105K CK73GB1H682K CK73GB1C104K CC73GCH1H040C	CHIP C 4.7UF K CHIP C 1.0UF K CHIP C 6800PF K CHIP C 0.10UF K CHIP C 4.0PF C	
C49 C50 C51 C52 C53			CK73GB1H332K CK73GB1C104K CC73GCH1H330J CK73FB1A225K CK73GB0J225K	CHIP C 3300PF K CHIP C 0.10UF K CHIP C 33PF J CHIP C 2.2UF K CHIP C 2.2UF K	
C54,55 C56,57 C58 C59,60 C61,62			CK73GB1H103K CC73GCH1H391J CK73GB1H472K CK73GB1H152K CK73GB1H102K	CHIP C 0.010UF K CHIP C 390PF J CHIP C 4700PF K CHIP C 1500PF K CHIP C 1000PF K	
C63 C64,65			CK73GB1H152K CK73GB1C104K	CHIP C 1500PF K CHIP C 0.10UF K	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5730-00)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C66,67			CC73GCH1H100D	CHIP C 10PF D		R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C68			CK73FB0J106M	CHIP C 10UF M		R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C72			CK73GB0J225K	CHIP C 2.2UF K		R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C73			CK73GB1C104K	CHIP C 0.10UF K		R35			RK73GB2A104J	CHIP R 100K J 1/10W	
C74			CK73GB0J475K	CHIP C 4.7UF K		R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
C75			CC73GCH1H221J	CHIP C 220PF J		R37			RK73GB2A103J	CHIP R 10K J 1/10W	
C76,77			CK73GB1C104K	CHIP C 0.10UF K		R40			RK73GB2A274J	CHIP R 270K J 1/10W	
C78-80			CC73GCH1H221J	CHIP C 220PF J		R41			RK73GB2A103J	CHIP R 10K J 1/10W	
C81-84			CK73GB1H102K	CHIP C 1000PF K		R42			RK73GB2A101J	CHIP R 100 J 1/10W	
C85			CK73GB1C104K	CHIP C 0.10UF K		R43			RK73GB2A393J	CHIP R 39K J 1/10W	
C86			CK73GB1A105K	CHIP C 1.0UF K		R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
C87			CK73GB0J475K	CHIP C 4.7UF K		R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C88			CK73GB1H103K	CHIP C 0.010UF K		R50			RK73GB2A101J	CHIP R 100 J 1/10W	
C89			CK73GB0J105K	CHIP C 1.0UF K		R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
C90,91			CK73GB1H102K	CHIP C 1000PF K		R52			RK73GB2A163J	CHIP R 16K J 1/10W	
C92			CK73GB0J475K	CHIP C 4.7UF K		R53			RK73GB2A123J	CHIP R 12K J 1/10W	
C93-98			CK73GB1C104K	CHIP C 0.10UF K		R54			RK73GB2A333J	CHIP R 33K J 1/10W	
C99			CC73GCH1H060D	CHIP C 6.0PF D		R55			RK73GB2A103J	CHIP R 10K J 1/10W	
C100			CC73GCH1H020C	CHIP C 2.0PF C		R56			RK73GB2A123J	CHIP R 12K J 1/10W	
C102			CK73GB0J225K	CHIP C 2.2UF K		R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
C103			CK73GB1H103K	CHIP C 0.010UF K		R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CN1		*	E41-2083-15	FLAT CABLE CONNECTOR		R60			RK73GB2A123J	CHIP R 12K J 1/10W	
CN2			E41-2297-05	FLAT CABLE CONNECTOR		R61			RK73GB2A183J	CHIP R 18K J 1/10W	
X1			L77-2863-05	CRYSTAL RESONATOR (16.899M)		R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
X2			L78-1209-05	RESONATOR (26.88MHZ)		R63			RK73GB2A133J	CHIP R 13K J 1/10W	
CP1			RK74GA1J223J	CHIP-COM 22K J 1/16W		R64			RK73GB2A151J	CHIP R 150 J 1/10W	
CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W		R65			RK73GB2A152J	CHIP R 1.5K J 1/10W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W		R67,68			RK73GB2A152J	CHIP R 1.5K J 1/10W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W		R69			RK73GB2A682J	CHIP R 6.8K J 1/10W	
CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W		R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W		R71-73			RK73GB2A101J	CHIP R 100 J 1/10W	
CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W		R108-110			RK73GH2A392D	CHIP R 3.9K D 1/10W	
CP14			RK74GA1J104J	CHIP-COM 100K J 1/16W		R111,112			RK73GH2A562D	CHIP R 5.6K D 1/10W	
CP16			RK74GB1J104J	CHIP-COM 100K J 1/16W		R113			RK73GH2A392D	CHIP R 3.9K D 1/10W	
CP17			RK74GA1J102J	CHIP-COM 1.0K J 1/16W		R114			RK73GH2A562D	CHIP R 5.6K D 1/10W	
CP18,19			RK74GA1J104J	CHIP-COM 100K J 1/16W		R115			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R1			RK73GB2A225J	CHIP R 2.2M J 1/10W		R116			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R3			RK73GB2A223J	CHIP R 22K J 1/10W		R117			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R4			RK73GB2A102J	CHIP R 1.0K J 1/10W		R118,119			RK73GH2A100D	CHIP R 10 D 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W		R120,121			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R6			RK73GH2A223D	CHIP R 22K D 1/10W		R122			RK73GH2A202D	CHIP R 2.0K D 1/10W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W		R123			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R9			RK73GB2A223J	CHIP R 22K J 1/10W		R124			RK73GB2A680J	CHIP R 68 J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W		R128,129			RK73GB2A101J	CHIP R 100 J 1/10W	
R11,12			RK73GB2A223J	CHIP R 22K J 1/10W		R130			RK73GB2A221J	CHIP R 220 J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W		R132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14,15			RK73GB2A223J	CHIP R 22K J 1/10W		R133			RK73GB2A561J	CHIP R 560 J 1/10W	
R17			RK73GB2A221J	CHIP R 220 J 1/10W		R134			RK73GH2A202D	CHIP R 2.0K D 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W		R135			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W		R137			RK73GB2A680J	CHIP R 68 J 1/10W	
R20			RK73GB2A102J	CHIP R 1.0K J 1/10W		R138			RK73GB2A471J	CHIP R 470 J 1/10W	
R21,22			RK73GB2A103J	CHIP R 10K J 1/10W		R139-141			RK73GH2A111D	CHIP R 110 D 1/10W	
R23,24			RK73GB2A223J	CHIP R 22K J 1/10W		R142			RK73GB2A6R8J	CHIP R 6.8 J 1/10W	
						R144			RK73GB2A222J	CHIP R 2.2K J 1/10W	
						R145			RK73GB2A102J	CHIP R 1.0K J 1/10W	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5730-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R146 R147,148 R150 R151 R152			RK73GB2A332J RK73GB2A103J RK73GB2A103J RK73GB2A102J RK73GB2A221J	CHIP R 3.3K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 220 J 1/10W	
R153-155			RK73GB2A330J	CHIP R 33 J 1/10W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D2 D3 D4,5 D6 IC1			DA204U DAN202U MAZS0510L DAN202U 91CU27UG5UR8	DIODE DIODE ZENER DIODE DIODE MICROCONTROLLER IC	
IC2 IC4 IC5 IC13 IC14			UPD63712GC BA5824FP NJM2886DL2-33 NJM4580V-ZB TAR5S50-F	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC15 IC16 IC17 IC18 IC19		*	CS7410-IQZ HY57V1616TP7I W400DB55N6E3U9 PCM1793DB S-1112B33MCG	MOS-IC DRAM IC ROM IC MOS-IC ANALOGUE IC	
IC20 IC21 Q1 Q3 Q4		*	XC6219B182PR XC6219B332PR 2SK3018 UMD9N 2SK3018	ANALOGUE IC ANALOGUE IC FET TRANSISTOR FET	
Q5 Q6 Q7 Q8 Q9,10			UMD9N UMD12N DTC124EUA 2SB0970(R) DTC114YUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q11 Q12 Q13 Q14 Q15			2SK210(GR) DTA143XUA DTC143XUA DTC114YUA 2SB0970(R)	FET DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
ELECTRIC UNIT (X34-356x-xx)					
D451			B30-1566-05	LED (1608, RED)	
C1 C1 C1 C1 C10		*	C90-6743-05 C90-6744-05 C90-6755-05 C90-6756-05 CK73FB1C105K	ELECTRO 3900UF 16WV ELECTRO 3900UF 16WV ELECTRO 3900UF 16WV ELECTRO 3900UF 16WV CHIP C 1.0UF K	K E1E2 K1M1 E3
C11 C20 C21 C22 C23			CD04AY1A221M CD04BA0J101M C90-5692-05 CK73GB1H103K CE32CL1C100M	ELECTRO 220UF 10WV ELECTRO 100UF 6.3WV ELECTRO 220UF 16WV CHIP C 0.010UF K CHIP EL 10UF 16WV	
C30 C31 C32			CK73GB1A474K CD04AY1A101M CK73GB1A474K	CHIP C 0.47UF K ELECTRO 100UF 10WV CHIP C 0.47UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C33 C40 C41 C42,43 C44			CE32BJ1C101M CK73GB1H103K CD04BA0J470M CK73GB1H104K CD04BA1C100M	CHIP EL 100UF 16WV CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.10UF K ELECTRO 10UF 16WV	
C100 C102 C103 C104-106 C107			CK73GB1H104K CC73GCH1H220J CC73GCH1H180J CK73GB1H103K CK73GB1H102K	CHIP C 0.10UF K CHIP C 22PF J CHIP C 18PF J CHIP C 0.010UF K CHIP C 1000PF K	
C109-113 C114 C200,201 C202 C203			CK73GB1H103K CD04AS0J470M CK73GB1H103K CK73GB1H102K CK73GB1H223K	CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.022UF K	
C204 C205 C298 C300 C301			CK73GB1H103K CK73FB1C105K CK73GB1H104K CD04AS1C470M CD04AT1H010M	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.10UF K ELECTRO 47UF 16WV ELECTRO 1UF 50WV	
C302 C303,304 C305 C306 C307			CD04AS1H4R7M CD04AS1H3R3M CK73FB1C105K CK73GB1H103K CE32CL1C100M	ELECTRO 4.7UF 50WV ELECTRO 3.3UF 50WV CHIP C 1.0UF K CHIP C 0.010UF K CHIP EL 10UF 16WV	
C308,309 C310,311 C312 C313 C314			CD04AS1H2R2M CK73FB1E474K CK73GB1H152K CK73GB1H103K CD04AS1C220M	ELECTRO 2.2UF 50WV CHIP C 0.47UF K CHIP C 1500PF K CHIP C 0.010UF K ELECTRO 22UF 16WV	
C315 C316 C317 C318,319 C320			CK73GB1H152K CK73GB1H103K CD04AS1C220M CK73GB1H104K CE32CL1C100M	CHIP C 1500PF K CHIP C 0.010UF K ELECTRO 22UF 16WV CHIP C 0.10UF K CHIP EL 10UF 16WV	
C321-323 C324,325 C326 C327-334 C335-340			CK73GB1H104K CC73GCH1H060D CK73GB1H103K CD04AS1V100M CK73GB1H102K	CHIP C 0.10UF K CHIP C 6.0PF D CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 1000PF K	
C341-346 C347-350 C351-354 C355-360 C364,365			CC73GCH1H821J CC73GCH1H221J CC73GCH1H181J CD04AT1C100M CD04AS1H010M	CHIP C 820PF J CHIP C 220PF J CHIP C 180PF J ELECTRO 10UF 16WV ELECTRO 1UF 50WV	
C366 C367 C368 C369 C370			CK73GB1H104K CE32CL1C100M CK73GB1H682K CK73FB1C105K CK73GB1H104K	CHIP C 0.10UF K CHIP EL 10UF 16WV CHIP C 6800PF K CHIP C 1.0UF K CHIP C 0.10UF K	
C371 C374 C376 C377 C378			CK73GB1A105K CK73GB1H104K CK73GB1H104K CK73GB1A105K CK73GB1H473K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.047UF K	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-356x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C379			CK73GB1H104K	CHIP C 0.10UF K		C756			CD04BA1C101M	ELECTRO 100UF 16WV	
C380			CK73GB1A105K	CHIP C 1.0UF K		C757			C90-6742-05	NP-ELECT 4.7UF 16WV	
C381			CK73GB1H473K	CHIP C 0.047UF K		C758			CK73GB1H103K	CHIP C 0.010UF K	
C382,383			CK73GB1A105K	CHIP C 1.0UF K		C759			CK73FB1C105K	CHIP C 1.0UF K	
C384			CK73FB1C105K	CHIP C 1.0UF K		C800-802			CD04AS1V100M	ELECTRO 10UF 35WV	
C385,386			CK73GB1H152K	CHIP C 1500PF K		C803			CK73GB1H104K	CHIP C 0.10UF K	
C387-392			CC73GCH1H101J	CHIP C 100PF J		C804			CK73GB1H103K	CHIP C 0.010UF K	
C393-395			CE32CL1C100M	CHIP EL 10UF 16WV		C805			CD04AS1C470M	ELECTRO 47UF 16WV	
C396,397			CC73GCH1H101J	CHIP C 100PF J		C806,807			CK73GB1H102K	CHIP C 1000PF K	
C398,399			CK73GB1H104K	CHIP C 0.10UF K		C808			CD04BA1C101M	ELECTRO 100UF 16WV	
C402			CK73GB1H103K	CHIP C 0.010UF K	KK1E1	C809			CC73GCH1H101J	CHIP C 100PF J	
C402			CK73GB1H103K	CHIP C 0.010UF K	E2E3	C812			CC73GCH1H471J	CHIP C 470PF J	
C403			CK73FB1A225K	CHIP C 2.2UF K	KK1E1	C813			CC73GCH1H101J	CHIP C 100PF J	
C403			CK73FB1A225K	CHIP C 2.2UF K	E2E3	C901			CK73EB1E105K	CHIP C 1.0UF K	
C404			CC73GCH1H331J	CHIP C 330PF J	KK1E1	C902			CD04BK1E101M	ELECTRO 100UF 25WV	
C404			CC73GCH1H331J	CHIP C 330PF J	E2E3	C903			CD04BF1E101M	ELECTRO 100UF 25WV	
C405			CD04AT1C100M	ELECTRO 10UF 16WV	KK1E1	C904			CK73GB1H102K	CHIP C 1000PF K	
C405			CD04AT1C100M	ELECTRO 10UF 16WV	E2E3	C905			CK73GB1H104K	CHIP C 0.10UF K	
C409,410			CK73GB1H103K	CHIP C 0.010UF K		C906,907			CK73EB1E105K	CHIP C 1.0UF K	
C414,415			CC73GCH1H100D	CHIP C 10PF D	KK1E1	C908			CD04BK1E101M	ELECTRO 100UF 25WV	
C414,415			CC73GCH1H100D	CHIP C 10PF D	E2E3	C909			CK73EB1E105K	CHIP C 1.0UF K	
C450-452			CK73GB1H104K	CHIP C 0.10UF K	E1E2E3	C910			CK73GB0J225K	CHIP C 2.2UF K	
C450-455			CK73GB1H104K	CHIP C 0.10UF K	KK1M1	C911			CK73GB1H332K	CHIP C 3300PF K	
C458			CK73GB1A105K	CHIP C 1.0UF K	KK1M1	C912			CK73GB1H103K	CHIP C 0.010UF K	
C500-504			CK73EB1A475K	CHIP C 4.7UF K		C913			CK73EB1E105K	CHIP C 1.0UF K	
C505			CK73GB1H103K	CHIP C 0.010UF K		C914			CD04BF1C221M	ELECTRO 220UF 16WV	
C506			CE32CL1C100M	CHIP EL 10UF 16WV		C916			CC73GCH1H221J	CHIP C 220PF J	
C550,551			CK73GB1H103K	CHIP C 0.010UF K		C917			CK73GB1H222K	CHIP C 2200PF K	
C600,601			CK73EB1E225K	CHIP C 2.2UF K		C918			CK73GB0J225K	CHIP C 2.2UF K	
C602			CK73GB1H103K	CHIP C 0.010UF K		C919			CK73EB1E105K	CHIP C 1.0UF K	
C603			CK73GB1H223K	CHIP C 0.022UF K		C920,921	*		CD04BF1C151M	ELECTRO 150UF 16WV	
C604			CD04AS1C220M	ELECTRO 22UF 16WV		C923			CK73GB1A105K	CHIP C 1.0UF K	
C605-608			CK73EB1E225K	CHIP C 2.2UF K		C955,956			CK73GB1H104K	CHIP C 0.10UF K	
C609			CD04BF1E101M	ELECTRO 100UF 25WV		C957-959			CK73GB1A105K	CHIP C 1.0UF K	
C610			CD04AS1C220M	ELECTRO 22UF 16WV		C960-962			CK73GB1H103K	CHIP C 0.010UF K	
C611			CE32CL1C100M	CHIP EL 10UF 16WV		C965			CK73GB1H103K	CHIP C 0.010UF K	
C612,613			CD04AT1C100M	ELECTRO 10UF 16WV		C969			CK73GB1H103K	CHIP C 0.010UF K	
C614,615			CE32CL1C100M	CHIP EL 10UF 16WV		C971			CK73GB1H103K	CHIP C 0.010UF K	
C616,617			CD04AT1C100M	ELECTRO 10UF 16WV		C973			CK73GB1A105K	CHIP C 1.0UF K	
C618,619			CE32CL1C100M	CHIP EL 10UF 16WV		C974,975			CK73GB1H102K	CHIP C 1000PF K	
C620,621			CD04AS1V100M	ELECTRO 10UF 35WV		C976			CK73GB1H104K	CHIP C 0.10UF K	
C622			CE32CL1C100M	CHIP EL 10UF 16WV		C982			CK73GB1H103K	CHIP C 0.010UF K	
C623-628			CK73GB1H102K	CHIP C 1000PF K		C983			CK73GB1A105K	CHIP C 1.0UF K	
C629			CK73FB1E474K	CHIP C 0.47UF K		C988,989			CK73GB1H103K	CHIP C 0.010UF K	
C630			CD04AT0J470M	ELECTRO 47UF 6.3WV		C990			CK73GB1H102K	CHIP C 1000PF K	
C631			CK73FB1E474K	CHIP C 0.47UF K		C996			CK73GB1A474K	CHIP C 0.47UF K	
C632			CK73GB1H103K	CHIP C 0.010UF K		CN5			E41-0944-05	PIN ASSY	K1E1E2
C633,634			CE32CL1C100M	CHIP EL 10UF 16WV		CN5			E41-0944-05	PIN ASSY	E3
C635-638			CK73GB1A105K	CHIP C 1.0UF K		CN450			E41-2259-05	PIN ASSY	
C701			CK73FB1E474K	CHIP C 0.47UF K		CN500			E41-2344-05	FLAT CABLE CONNECTOR	
C702			CD04AS0J470M	ELECTRO 47UF 6.3WV		CN550			E41-2352-05	FLAT CABLE CONNECTOR	
C703			CK73FB1E474K	CHIP C 0.47UF K		CN600	*		E41-2555-05	PIN ASSY	
C704			CK73GB1H103K	CHIP C 0.010UF K		J1			E58-0991-05	RECTANGULAR RECEPTACLE	
C750			CK73FB1C105K	CHIP C 1.0UF K	△	J2			E56-0855-05	CYLINDRICAL RECEPTACLE	
C752-755			C90-5700-05	NP-ELEC 4.7UF 16WV							

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-356x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W400			E30-6438-05	CORD WITH PLUG	
L1			L33-1988-05	CHOKE COIL ASSY	
L101			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L400			L33-2260-05	CHOKE COIL	
L403			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L405			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	KK1E1
L405			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	E2E3
L600			L41-2205-33	SMALL FIXED INDUCTOR (22U)	
L901			L33-2229-05	SMALL FIXED INDUCTOR	
L902			L33-2230-05	SMALL FIXED INDUCTOR	
L903		*	L33-2258-05	SMALL FIXED INDUCTOR	
L999		*	L33-2285-05	SMALL FIXED INDUCTOR	
X100			L78-0872-05	RESONATOR (12MHZ)	
X101			L77-2880-05	CRYSTAL RESONATOR	
X300			L77-2857-05	CRYSTAL RESONATOR (11.2896MHZ)	
X401			L77-2002-05	CRYSTAL RESONATOR	KK1E1
X401			L77-2002-05	CRYSTAL RESONATOR	E2E3
Q	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
T	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
V	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
CP100			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP101-103			RK74GA1J101J	CHIP-COM 100 J 1/16W	KK1M1
CP101,102			RK74GA1J101J	CHIP-COM 100 J 1/16W	E1E2E3
CP104			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP105			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP106			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP107			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP108			RK74GA1J222J	CHIP-COM 2.2K J 1/16W	
CP109			RK74GB1J101J	CHIP-COM 100 J 1/16W	KK1E1
CP109			RK74GB1J101J	CHIP-COM 100 J 1/16W	E2E3
CP110,111			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP300			RK74GB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73EB2E102J	CHIP R 1.0K J 1/4W	K1E1E2
R1			RK73EB2E102J	CHIP R 1.0K J 1/4W	E3M1
R2,3			RK73EB2E103J	CHIP R 10K J 1/4W	
R10			RK73GH2A243D	CHIP R 24K D 1/10W	
R11			RK73FB2B221J	CHIP R 220 J 1/8W	
R12			RK73GB2A153J	CHIP R 15K J 1/10W	
R13			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R20			RK73FB2B203J	CHIP R 20K J 1/8W	
R21			RK73GB2A223J	CHIP R 22K J 1/10W	
R22			RK73GB2A101J	CHIP R 100 J 1/10W	
R23			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R30			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R31			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R40			RK73FB2B223J	CHIP R 22K J 1/8W	
R41			RK73FB2B182J	CHIP R 1.8K J 1/8W	
R42			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R43			RK73GB2A104J	CHIP R 100K J 1/10W	
R46		*	RK73SB3A1R8J	CHIP R 1.8 J 1W	
R91,92			RK73GB2A104J	CHIP R 100K J 1/10W	
R93			RK73FB2B431J	CHIP R 430 J 1/8W	
R100-104			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R105			RK73GB2A101J	CHIP R 100 J 1/10W	
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R107			RK73GB2A473J	CHIP R 47K J 1/10W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W	
R110			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R111			RK73GB2A104J	CHIP R 100K J 1/10W	
R112			RK73GB2A473J	CHIP R 47K J 1/10W	
R113			RK73GB2A103J	CHIP R 10K J 1/10W	
R114			RK73GB2A473J	CHIP R 47K J 1/10W	
R115			RK73GB2A101J	CHIP R 100 J 1/10W	
R117			RK73GB2A101J	CHIP R 100 J 1/10W	
R118			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R119			RK73GB2A223J	CHIP R 22K J 1/10W	
R121			RK73GB2A473J	CHIP R 47K J 1/10W	
R122,123			RK73GB2A101J	CHIP R 100 J 1/10W	
R125			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R126			RK73GB2A101J	CHIP R 100 J 1/10W	
R127			RK73GB2A103J	CHIP R 10K J 1/10W	
R128			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R132,133			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R134			RK73GB2A101J	CHIP R 100 J 1/10W	
R136-138			RK73GB2A104J	CHIP R 100K J 1/10W	
R139			RK73GB2A473J	CHIP R 47K J 1/10W	
R140			RK73GB2A104J	CHIP R 100K J 1/10W	
R141,142			RK73GB2A473J	CHIP R 47K J 1/10W	
R144,145			RK73GB2A101J	CHIP R 100 J 1/10W	
R146			RK73GB2A333J	CHIP R 33K J 1/10W	
R147			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R148			RK73GB2A473J	CHIP R 47K J 1/10W	
R149,150			RK73GB2A223J	CHIP R 22K J 1/10W	
R154			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2
R154-156			RK73GB2A223J	CHIP R 22K J 1/10W	K1
R154,155			RK73GB2A223J	CHIP R 22K J 1/10W	K
R155			RK73GB2A223J	CHIP R 22K J 1/10W	E3
R155,156			RK73GB2A223J	CHIP R 22K J 1/10W	M1
R158			RK73GB2A223J	CHIP R 22K J 1/10W	E3M1
R159,160			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2
R160			RK73GB2A223J	CHIP R 22K J 1/10W	KE3
R163			RK73GB2A104J	CHIP R 100K J 1/10W	
R164			RK73GB2A223J	CHIP R 22K J 1/10W	
R165,166			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R168			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R170-173			RK73GB2A223J	CHIP R 22K J 1/10W	
R176			RK73GB2A104J	CHIP R 100K J 1/10W	
R177			RK73GB2A223J	CHIP R 22K J 1/10W	
R178			RK73GB2A473J	CHIP R 47K J 1/10W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W	
R183			RK73GB2A473J	CHIP R 47K J 1/10W	
R185			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R187			RK73GB2A473J	CHIP R 47K J 1/10W	
R200			RK73EB2E473J	CHIP R 47K J 1/4W	
R201			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-356x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R202			RK73GB2A183J	CHIP R 18K J 1/10W		R457			RK73GH2A241D	CHIP R 240 D 1/10W	KK1M1
R203			RK73GB2A104J	CHIP R 100K J 1/10W		R458			RK73GH2A111D	CHIP R 110 D 1/10W	KK1M1
R204			RK73GB2A393J	CHIP R 39K J 1/10W		R500			RK73GB2A473J	CHIP R 47K J 1/10W	
R205			RK73GH2A103D	CHIP R 10K D 1/10W		R501			RK73EB2E101J	CHIP R 100 J 1/4W	
R206			RK73GB2A474J	CHIP R 470K J 1/10W		R502			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R207			RK73GB2A103J	CHIP R 10K J 1/10W		R503			RK73GB2A333J	CHIP R 33K J 1/10W	
R208			RK73EB2E101J	CHIP R 100 J 1/4W		R504,505			RK73GB2A473J	CHIP R 47K J 1/10W	
R209			RK73FB2B683J	CHIP R 68K J 1/8W		R506			RK73GB2A821J	CHIP R 820 J 1/10W	
R210			RK73GH2A243D	CHIP R 24K D 1/10W		R507			RK73GB2A104J	CHIP R 100K J 1/10W	
R211			RK73GH2A103D	CHIP R 10K D 1/10W		R508			RK73GB2A101J	CHIP R 100 J 1/10W	
R212			RK73GB2A223J	CHIP R 22K J 1/10W		R509			RK73EB2E103J	CHIP R 10K J 1/4W	
R213			RK73GB2A473J	CHIP R 47K J 1/10W		R510,511			RK73EB2E101J	CHIP R 100 J 1/4W	
R214			RK73GB2A104J	CHIP R 100K J 1/10W		R512,513			RK73GB2A334J	CHIP R 330K J 1/10W	
R215			RK73FB2B561J	CHIP R 560 J 1/8W	K1E1E2	R514			RK73EB2E101J	CHIP R 100 J 1/4W	
R215			RK73FB2B561J	CHIP R 560 J 1/8W	E3M1	R515			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R216			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1	R516			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R217			RK73SB3A471J	CHIP R 470 J 1W	KK1M1	R517			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R218,219			RK73FB2B472J	CHIP R 4.7K J 1/8W		R518,519			RK73GB2A103J	CHIP R 10K J 1/10W	
R300			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R520			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R301			RK73GB2A103J	CHIP R 10K J 1/10W		R550			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R302,303			RK73GB2A471J	CHIP R 470 J 1/10W		R551			RK73GB2A471J	CHIP R 470 J 1/10W	
R304-307			RK73GB2A241J	CHIP R 240 J 1/10W		R552,553			RK73GB2A104J	CHIP R 100K J 1/10W	
R308-311			RK73GB2A103J	CHIP R 10K J 1/10W		R554			RK73GB2A471J	CHIP R 470 J 1/10W	
R312,313			RK73GB2A471J	CHIP R 470 J 1/10W		R600,601			RK73GB2A913J	CHIP R 91K J 1/10W	
R314-317			RK73GB2A241J	CHIP R 240 J 1/10W		R602			RK73GB2A103J	CHIP R 10K J 1/10W	
R318-321			RK73GB2A103J	CHIP R 10K J 1/10W		R603			RK73GB2A470J	CHIP R 47 J 1/10W	
R323-330			RK73GB2A221J	CHIP R 220 J 1/10W		R604			RK73GB2A274J	CHIP R 270K J 1/10W	
R331			RK73GB2A473J	CHIP R 47K J 1/10W		R605			RK73GB2A563J	CHIP R 56K J 1/10W	
R335,336			RK73GB2A101J	CHIP R 100 J 1/10W		R606			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R342-357			RK73GB2A272J	CHIP R 2.7K J 1/10W		R607			RK73GB2A470J	CHIP R 47 J 1/10W	
R358-361			RK73GB2A332J	CHIP R 3.3K J 1/10W		R608			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R362-364			RK73GB2A682J	CHIP R 6.8K J 1/10W		R609			RK73GB2A750J	CHIP R 75 J 1/10W	
R366			RK73GB2A682J	CHIP R 6.8K J 1/10W		R610			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R367-374			RK73GB2A332J	CHIP R 3.3K J 1/10W		R611			RK73GB2A361J	CHIP R 360 J 1/10W	
R375-377			RK73GB2A473J	CHIP R 47K J 1/10W		R612			RK73GB2A820J	CHIP R 82 J 1/10W	
R378			RK73GB2A101J	CHIP R 100 J 1/10W		R613			RK73GB2A123J	CHIP R 12K J 1/10W	
R379			RK73GB2A562J	CHIP R 5.6K J 1/10W		R614			RK73GB2A103J	CHIP R 10K J 1/10W	
R381			RK73GB2A473J	CHIP R 47K J 1/10W		R615			RK73GB2A223J	CHIP R 22K J 1/10W	
R382,383			RK73GB2A102J	CHIP R 1.0K J 1/10W		R616			RK73GB2A103J	CHIP R 10K J 1/10W	
R384-389			RK73GB2A101J	CHIP R 100 J 1/10W		R617			RK73GB2A223J	CHIP R 22K J 1/10W	
R390			RK73FB2B100J	CHIP R 10 J 1/8W		R618			RK73GB2A820J	CHIP R 82 J 1/10W	
R391,392			RK73GB2A473J	CHIP R 47K J 1/10W		R619			RK73GB2A123J	CHIP R 12K J 1/10W	
R393			RK73GB2A101J	CHIP R 100 J 1/10W		R620,621			RK73GB2A361J	CHIP R 360 J 1/10W	
R394-396			RK73FB2B100J	CHIP R 10 J 1/8W		R622			RK73GB2A820J	CHIP R 82 J 1/10W	
R397			RK73GB2A103J	CHIP R 10K J 1/10W		R623			RK73GB2A123J	CHIP R 12K J 1/10W	
R398			RK73GB2A473J	CHIP R 47K J 1/10W		R624			RK73GB2A103J	CHIP R 10K J 1/10W	
R404			RK73GB2A223J	CHIP R 22K J 1/10W		R625			RK73GB2A223J	CHIP R 22K J 1/10W	
R405,406			RK73GB2A471J	CHIP R 470 J 1/10W		R626			RK73GB2A103J	CHIP R 10K J 1/10W	
R407,408			RK73GB2A472J	CHIP R 4.7K J 1/10W		R627			RK73GB2A223J	CHIP R 22K J 1/10W	
R409			RK73FB2B102J	CHIP R 1.0K J 1/8W		R628			RK73GB2A820J	CHIP R 82 J 1/10W	
R410-412			RK73GB2A222J	CHIP R 2.2K J 1/10W	KK1E1	R629			RK73GB2A123J	CHIP R 12K J 1/10W	
R410-412			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2E3	R630,631			RK73GB2A361J	CHIP R 360 J 1/10W	
R450,451			RK73GB2A102J	CHIP R 1.0K J 1/10W		R632			RK73GB2A820J	CHIP R 82 J 1/10W	
R452			RK73GB2A241J	CHIP R 240 J 1/10W		R633			RK73GB2A123J	CHIP R 12K J 1/10W	
R453,454			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1	R634			RK73GB2A103J	CHIP R 10K J 1/10W	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-356x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R635 R636 R637 R638 R639			RK73GB2A223J RK73GB2A103J RK73GB2A223J RK73GB2A820J RK73GB2A123J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 82 J 1/10W CHIP R 12K J 1/10W	
R640 R641 R642 R643 R644			RK73GB2A361J RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73GB2A102J	CHIP R 360 J 1/10W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 1.0K J 1/10W	
R655-660 R700 R701 R702 R703-707			RK73GB2A104J RK73EB2E472J RK73EB2E101J RK73EB2E472J RK73EB2E101J	CHIP R 100K J 1/10W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W	
R708 R709 R710 R711 R712			RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73GB2A102J RK73EB2E102J	CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W	KK1E1
R712 R713-715 R713-715 R750 R752			RK73EB2E102J RK73EB2E471J RK73EB2E471J RK73GB2A104J RK73GB2A102J	CHIP R 1.0K J 1/4W CHIP R 470 J 1/4W CHIP R 470 J 1/4W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	E2E3 KK1E1 E2E3
R755-758 R759-762 R763 R764 R765			RK73GB2A471J RK73GB2A103J RK73GB2A100J RK73GB2A103J RK73GB2A432J	CHIP R 470 J 1/10W CHIP R 10K J 1/10W CHIP R 10 J 1/10W CHIP R 10K J 1/10W CHIP R 4.3K J 1/10W	
R766 R767 R768 R770 R771			RK73GB2A431J RK73GB2A390J RK73GB2A223J RK73GB2A133J RK73GB2A223J	CHIP R 430 J 1/10W CHIP R 39 J 1/10W CHIP R 22K J 1/10W CHIP R 13K J 1/10W CHIP R 22K J 1/10W	
R772 R800 R801 R803 R804			RK73GB2A221J RK73GB2A391J RK73GB2A242J RK73GH2A512D RK73GH2A472D	CHIP R 220 J 1/10W CHIP R 390 J 1/10W CHIP R 2.4K J 1/10W CHIP R 5.1K D 1/10W CHIP R 4.7K D 1/10W	
R805,806 R807 R808 R809 R810			RK73GB2A102J RK73GB2A103J RK73GB2A113J RK73GB2A101J RK73FB2B152J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 11K J 1/10W CHIP R 100 J 1/10W CHIP R 1.5K J 1/8W	
R811 R812 R813 R814,815 R817			RK73GB2A104J RK73FB2B4R7J RK73GB2A332J RK73GB2A101J RK73GB2A100J	CHIP R 100K J 1/10W CHIP R 4.7 J 1/8W CHIP R 3.3K J 1/10W CHIP R 100 J 1/10W CHIP R 10 J 1/10W	
R818 R819-822 R823 R901 R902			RK73GB2A8R2J RK73GB2A9R1J RK73FB2B1R0J RK73FB2B102J RK73GH2A303D	CHIP R 8.2 J 1/10W CHIP R 9.1 J 1/10W CHIP R 1.0 J 1/8W CHIP R 1.0K J 1/8W CHIP R 30K D 1/10W	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R903 R904 R905 R906 R907			RK73GH2A103D RK73GB2A154J RK73GH2A563D RK73FB2B102J RK73GB2A474J	CHIP R 10K D 1/10W CHIP R 150K J 1/10W CHIP R 56K D 1/10W CHIP R 1.0K J 1/8W CHIP R 470K J 1/10W	
R908 R909 R910 R911 R913			RK73GB2A473J RK73GB2A330J RK73GH2A243D RK73GH2A103D RK73GH2A163D	CHIP R 47K J 1/10W CHIP R 33 J 1/10W CHIP R 24K D 1/10W CHIP R 10K D 1/10W CHIP R 16K D 1/10W	
R914,915 R916 R917 R918 R919			RK73GH2A103D RK73GB2A474J RK73GB2A473J RK73GB2A330J RK73GH2A473D	CHIP R 10K D 1/10W CHIP R 470K J 1/10W CHIP R 47K J 1/10W CHIP R 33 J 1/10W CHIP R 47K D 1/10W	
R920 R922 R923 R924 R926			RK73GH2A103D RK73GB2A104J RK73GH2A243D RK73GH2A303D RK73FB2B102J	CHIP R 10K D 1/10W CHIP R 100K J 1/10W CHIP R 24K D 1/10W CHIP R 30K D 1/10W CHIP R 1.0K J 1/8W	
R990 R993 R996 R998,999 W201		*	RK73GB2A101J RK73FB2B103J RK73GB2A222J R92-5093-05 R92-1252-05	CHIP R 100 J 1/10W CHIP R 10K J 1/8W CHIP R 2.2K J 1/10W METAL GLAZE RESISTOR CHIP R 0 OHM J 1/16W	E1E2E3
W401 W751 W983-989 W993			R92-2053-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
S1,2			S68-0886-05	PUSH SWITCH	
D1 D20 D21 D30 D31			S2V60*A RB160L-40 UDZS5.6B HZU9.1(B1)-E UDZS8.2B	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D40 D41 D101 D102-104 D200,201			UDZS5.6B 02DZ11F-Y DA227 DAP222 DAP202U	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	
D202 D203 D204 D205 D206			UDZS6.2B UDZS6.8B DAP202U UDZS6.8B 02DZ4.7F-Y	ZENER DIODE ZENER DIODE DIODE ZENER DIODE ZENER DIODE	
D207 D207 D208,209 D212,213 D300			02DZ5.6F-Y 02DZ5.6F-Y 1SR154-400 1SR154-400 DA204U	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	K1E1E2 E3M1
D302,303 D401 D500 D501			UDZS5.6B IMSA-6801-E DA204K STZ6.2N	ZENER DIODE SURGE ABSORBER DIODE ZENER DIODE	

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-356x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D502			DA204K	DIODE		Q31			2SB1184	TRANSISTOR	
D503			STZ6.2N	ZENER DIODE		Q32,33			2SC4081	TRANSISTOR	
D504			DA204U	DIODE		Q40			2SB1565	TRANSISTOR	
D505			DAP202U	DIODE		Q41			2SB1443	TRANSISTOR	
D506			STZ6.2N	ZENER DIODE		Q42			UMD12N	TRANSISTOR	
D600			UDZS5.6B	ZENER DIODE		Q43			UMC2N	TRANSISTOR	
D601			UDZS11B	ZENER DIODE		Q44			2SC4081	TRANSISTOR	
D608,609			STZ6.8N	ZENER DIODE		Q45			2SD2351(W)	TRANSISTOR	
D700-702			STZ6.2N	ZENER DIODE		Q51			UMC2N	TRANSISTOR	
D703,704			STZ6.8N	ZENER DIODE		Q91			2SD2351(W)	TRANSISTOR	
D750-753			1SR154-400	DIODE		Q100			2SA1576A	TRANSISTOR	
D754,755			DAP222	DIODE		Q101			DTC144EUA	DIGITAL TRANSISTOR	
D756-759			1SR154-400	DIODE		Q200,201			DTA124EUA	DIGITAL TRANSISTOR	
D800			UDZS6.8B	ZENER DIODE		Q202			2SC4081	TRANSISTOR	
D801			DA227	DIODE		Q203			2SA1576A	TRANSISTOR	
D802			UDZS16B	ZENER DIODE		Q204,205			2SC4081	TRANSISTOR	
D901			UDZS18B	ZENER DIODE		Q206			DTA123JK	DIGITAL TRANSISTOR	K1E1E2
D902			SFPB-54VNF	DIODE		Q206			DTA123JK	DIGITAL TRANSISTOR	E3M1
D903			HZU16(B1)-E	ZENER DIODE		Q207			DTC144EUA	DIGITAL TRANSISTOR	
D904			SFPB-54VNF	DIODE		Q208			2SB1188(Q,R)	TRANSISTOR	KK1M1
D905			RB060L-40	DIODE		Q209			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
D998,999			RB451F	DIODE		Q300			DTA114EUA	DIGITAL TRANSISTOR	
IC1			XC6204B332MR	ANALOGUE IC		Q402			2SB1689	TRANSISTOR	
IC3,4			NJM2864F05-ZB	ANALOGUE IC		Q403			DTC124EUA	DIGITAL TRANSISTOR	
IC5			XC6204B332MR	ANALOGUE IC		Q450			DTC114YUA	DIGITAL TRANSISTOR	
IC10			M5237ML-CF0J	ANALOGUE IC		Q500			2SC4617	TRANSISTOR	
IC100			S-80836CNNB-J	MOS-IC		Q600			2SC4617	TRANSISTOR	
IC102		*	30625MWPA46GP	MICROCONTROLLER IC		Q601			2SA1774	TRANSISTOR	
IC103			TC7W02FU-F	MOS-IC		Q602			2SC4617	TRANSISTOR	
IC104			BR24L04FV-W	ROM IC		Q603			2SA1576A	TRANSISTOR	
IC200			TPD1018F-F	ANALOGUE IC		Q604			2SC4081	TRANSISTOR	
IC300			E-TDA7415	ANALOGUE IC		Q605			2SA1576A	TRANSISTOR	
IC301,302			RC4580IDR	ANALOGUE IC		Q606			2SC4081	TRANSISTOR	
IC303			AK7730A	MOS-IC		Q607			2SB1443	TRANSISTOR	
IC304			TC74HC4050AFT	MOS-IC		Q608-613			DTC143TUA	DIGITAL TRANSISTOR	
IC305			AK4359VF	MOS-IC		Q800			DTA124EUA	DIGITAL TRANSISTOR	
IC306-308			RC4580IDR	ANALOGUE IC	KK1E1	Q801			2SA1774	TRANSISTOR	
IC400			E-TDA7479AD	ANALOGUE IC	E2E3	Q802			2SC2873-F	TRANSISTOR	
IC400			E-TDA7479AD	ANALOGUE IC		Q901			2SB1443	TRANSISTOR	
IC450			LB1930M-E	ANALOGUE IC		Q902			2SC4081	TRANSISTOR	
IC451			MMA6261QR2	ANALOGUE IC	KK1M1	Q903			2SB1449(R)-E	TRANSISTOR	
IC500			RC4580IDR	ANALOGUE IC		Q904			2SD2351(W)	TRANSISTOR	
IC600			ICL7660SIBAZ	ANALOGUE IC		Q905,906			2SJ484-E	FET	
IC601-603			NJM4565V-ZB	ANALOGUE IC		Q907			UMG2N	TRANSISTOR	
IC750			E-TDA7560A	ANALOGUE IC		TH750			PRF21BE471QB2	POSITIVE RESISTOR	
IC800			RC4580IDR	ANALOGUE IC		A1			X86-3840-11	FRONT-END UNIT	KK1M1
IC901			BD9778HFP	ANALOGUE IC		A1			X86-3842-70	FRONT-END UNIT	E1E2E3
IC902		*	BD9851EFV	ANALOGUE IC		CD MECHANISM ASSY (X92-5100-00)					
Q10			2SB1565	TRANSISTOR		2	1B		A10-4827-32	CHASSIS	
Q11,12			UMC2N	TRANSISTOR		5	1B		D10-4576-83	ARM ASSY	
Q20			2SB1565	TRANSISTOR		8	2A		D10-4579-23	LEVER ASSY	
Q21			2SD2351(W)	TRANSISTOR		10	3A		D10-4581-13	ARM	
Q22			2SA1577	TRANSISTOR		11	2A		D10-4582-13	ARM	
Q23			DTC124EUA	DIGITAL TRANSISTOR		12	3A		D10-4583-03	ARM	
Q30			2SB1565	TRANSISTOR							

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.

PARTS LIST

CD MECHANISM ASSY (X92-5100-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
13	3A		D10-4584-03	ARM							
14	3B		D10-4585-03	ARM							
15	2A		D10-4586-13	SLIDER							
16	3B		D10-4587-52	SLIDER							
17	3B		D10-4588-13	SLIDER							
18	3B		D10-4595-04	ARM							
19	3B		D10-4596-24	ARM							
22	2A		D13-2151-04	GEAR							
23	2B		D13-2152-04	GEAR							
24	3B		D13-2153-04	GEAR							
25	3B		D13-2154-04	GEAR							
26	3B		D13-2155-04	WORM							
27	3B		D13-2156-14	GEAR							
28	3B		D13-2157-04	GEAR							
29	3B		D13-2158-04	GEAR							
30	3B		D13-2168-04	GEAR							
31	3B		D13-2171-04	GEAR							
32	2B		D13-2172-13	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER							
35	2B		D21-2382-04	SHAFT							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3072-04	EXTENSION SPRING							
39	2A		G01-3073-04	TORSION COIL SPRING							
40	2A		G01-3074-04	EXTENSION SPRING							
41	1B		G01-3075-24	EXTENSION SPRING							
42	2A		G01-3076-04	EXTENSION SPRING							
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
51	1A		J21-9676-32	MOUNTING HARDWARE							
52	3B		J21-9677-22	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD							
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)							
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)							
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)							
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-05	TAPTITE SCREW (BIND P2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW							
J	1B		N09-6108-05	MACHINE SCREW (M2X3.5TYPE3)							
K	3B		N09-6155-05	SEMS (TAPTITE SCREW) (PT2X6)							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)							
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY							

E1 : KDC-PSW9531Y E2 : KDC-PSW9531 E3 : XXV-01D (Europe type)
K : KDC-MP928 K1 : XXV-01D (North America type) M1 : XXV-01D (Other Areas type)

△ Indicates safety critical components.