

# EXPLODED VIEWS AND PARTS LIST

## PACKING SECTION (Page 30)

### PACKING SECTION PARTS LIST


\*:Non spare part

Mark	No.	Description	DEH-S4100BT/XNUC	DEH-S4200BT/XNUC
*	1	Unit Box	QHG4350	QHG4556
	2	Contain Box	QHL4350	QHL4556
	5-2	Quick Start Guide	QRD3581	QRD3759
	5-4	Web IM	See Contents of Web IM	See Contents of Web IM

Mark	No.	Description	DEH-S4120BT/XNUC	DEH-S4220BT/XNUC
*	1	Unit Box	QHG4351	QHG4557
	2	Contain Box	QHL4351	QHL4557
	5-2	Quick Start Guide	QRD3581	QRD3759
	5-4	Web IM	See Contents of Web IM	See Contents of Web IM

Mark	No.	Description	DEH-S4150BT/XNGS	DEH-S4250BT/XNGS
*	1	Unit Box	QHG4352	QHG4558
	2	Contain Box	QHL4352	QHL4558
	5-1	Owner's Manual	QRD3587	Not used
	5-2	Quick Start Guide	Not used	QRD3796
	5-4	Web IM	Not used	See Contents of Web IM
	14	Microphone Assy	CPM1109	CPM1113
	15	Holder	CZN7192	Not used
	16	Cushion	CZN7193	Not used

Mark	No.	Description	DEH-S4150BT/XNCS	DEH-S4250BT/XNCS
*	1	Unit Box	QHG4353	QHG4559
	2	Contain Box	QHL4353	QHL4559
	5-2	Quick Start Guide	QRD3588	QRD3760
	5-4	Web IM	See Contents of Web IM	See Contents of Web IM
	14	Microphone Assy	CPM1109	CPM1113
	15	Holder	CZN7192	Not used
	16	Cushion	CZN7193	Not used

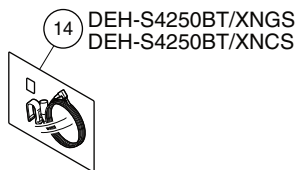

### Quick Start Guide

Part No.	Language
QRD3759	English, French, Spanish(Espanol)
QRD3796	English, Traditional Chinese, Arabic, Persian
QRD3760	English, Spanish(Espanol), Portuguese(B)

**CONTENTS OF WEB IM**

Part No.	Language
*OPM_DEHS5200BTUC_3L_A (for XNUC)	English, French, Spanish(Espanol)
*OPM_DEHS5250BTGS_4L_A (for XNGS)	English, Traditional Chinese, Arabic, Persian
*OPM_DEHX5000BTCS_3L_A (for XNCS)	English, Spanish(Espanol), Portuguese(B)

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

**EXTERIOR SECTION (Page 33)****EXTERIOR SECTION PARTS LIST**

Mark	No.	Description	DEH-S4100BT/XNUC	DEH-S4200BT/XNUC
	1	Detach Grille Assy	QXA5783	QXA6029
	9	Grille Unit	QXA5433	QXA6199
*	10	Grille	QNS4294	QNS4424
*	12	Plate	QNS4295	QNS4426
	13	Button(EJECT)	* QAC3311	QAC3325
*	15	Button(PHONE)	QAC3313	QAC3326
	19	Button(DETACH)	QAC3320	QAC3327
	20	Button(LIST/NAVI,BASS)	QAC3314	QAC3345
	24	Knob Unit	QXA5430	QXA5439
	36	Tuner Amp Unit	QWM4924	QWM5294

Mark	No.	Description	DEH-S4120BT/XNUC	DEH-S4220BT/XNUC
	1	Detach Grille Assy	QXA5784	QXA6030
	9	Grille Unit	QXA5434	QXA6200
*	10	Grille	QNS4294	QNS4424
*	12	Plate	QNS4295	QNS4426
	13	Button(EJECT)	* QAC3311	QAC3325
*	15	Button (PHONE)	QAC3313	QAC3326
	19	Button(DETACH)	QAC3320	QAC3327
	20	Button(LIST/NAVI,BASS)	QAC3314	QAC3345
	24	Knob Unit	QXA5430	QXA5439
	36	Tuner Amp Unit	QWM4925	QWM5295

Mark	No.	Description	DEH-S4150BT/XNGS	DEH-S4250BT/XNGS
	1	Detach Grille Assy	QXA5785	QXA6031
	9	Grille Unit	QXA5435	QXA6201
*	10	Grille	QNS4294	QNS4424
*	12	Plate	QNS4295	QNS4426
	13	Button(EJECT)	* QAC3311	QAC3325
*	15	Button(PHONE)	QAC3313	QAC3326
	19	Button(DETACH)	QAC3320	QAC3327
	20	Button(LIST/NAVI,BASS)	QAC3314	QAC3345
	24	Knob Unit	QXA5430	QXA5439
	36	Tuner Amp Unit	QWM4927	QWM5296

Mark	No.	Description	DEH-S4150BT/XNCS	DEH-S4250BT/XNCS	
A	1	Detach Grille Assy	QXA5786	QXA6032	
	9	Grille Unit	QXA5435	QXA6201	
	*	10	Grille	QNS44294	QNS4424
	*	12	Plate	QNS4295	QNS4426
		13	Button(EJECT)	* QAC3311	QAC3325
		15	Button(PHONE)	QAC3313	QAC3326
		19	Button(DETACH)	QAC3320	QAC3327
		20	Button(LIST/NAVI,BASS)	QAC3314	QAC3345
		24	Knob Unit	QXA5430	QXA5439
	B	36	Tuner Amp Unit	QWM4926	QWM5297

## CD MECHANISM MODULE (Page 36)

### CD MECHANISM MODULE PARTS LIST

Mark	No.	Description	DEH-S4100BT/XNUC DEH-S4120BT/XNUC DEH-S4150BT/XNGS DEH-S4150BT/XNCS	DEH-S4200BT/XNUC DEH-S4220BT/XNUC DEH-S4250BT/XNGS DEH-S4250BT/XNCS
	20	Pickup Unit(P10.6)(Service) for CXK5807	CXX3556	CXY3639

## ELECTRICAL PARTS LIST (Page 63)

### Tuner Amp Unit

Circuit Symbol and No.	Part Name	DEH-S4100BT/XNUC	DEH-S4200BT/XNUC
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	Flash ROM Unit	QVQ1052	QVQ1105
IC1302	Logic IC	TC7SH32FUS2	Not used
D1204	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1205	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1302	Schottky Diode	RR1VWM4STF	Not used
L520	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R113		XRS1/16SS682J	XRS1/16SS822J
R229		XRS1/16SS3902D	RS1/16SS393J
R242		XRS1/16SS4701D	RS1/16SS4701F
R519		XRS1/16SS271J	XRS1/16SS151J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R690		XRS1/16SS472J	Not used
R702		XRS1/16SS472J	XRS1/16SS152J
R857		Not used	RS1/16SS0R0J
R1305		Not used	RS1/16SS0R0J
R1312		XRS1/16SS103J	XRS1/16SS272J
R1316		Not used	XRS1/10SR0R0J
R1416		XRS1/10SR0R0J	Not used
R1432		Not used	RS1/16SS0R0J
C246		CKSRYX104K50	Not used
C267		CKSSYB104K16	Not used
C723		CKSSYB102K50	CCSSCH120J50

Circuit Symbol and No.	Part Name	DEH-S4100BT/XNUC	DEH-S4200BT/XNUC
C794		CCSSCH101J50	CCSSCH121J50
C855		Not used	CCSSCH7R0D50
C857		CKSSYX104K50	CCSSCH120J50
C1201		CCG1345	CKSRYB104K25
C1202		CKSSYX104K50	Not used
C1255		CKSSYB331K50	CCSSCH471J50
C1276		CKSSYB104K16	Not used
C1277		CKSSYB104K16	Not used
C1280		CKSSYB102K50	CCSSCH121J50
C1281		CKSSYB102K50	CCSSCH121J50
C1305		CKSSYB104K10	Not used
C1425		Not used	CKSRYB104K25

Circuit Symbol and No.	Part Name	DEH-S4120BT/XNUC	DEH-S4220BT/XNUC
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	Flash ROM Unit	QVQ1052	QVQ1105
IC1302	Logic IC	TC7SH32FUS2	Not used
D1204	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1205	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1302	Schottky Diode	RR1VWM4STF	Not used
L520	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R113		XRS1/16SS682J	XRS1/16SS822J
R229		XRS1/16SS3902D	RS1/16SS393J
R242		XRS1/16SS4701D	RS1/16SS4701F
R519		XRS1/16SS271J	XRS1/16SS151J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R690		XRS1/16SS472J	Not used
R702		XRS1/16SS472J	XRS1/16SS152J
R857		Not used	RS1/16SS0R0J
R1305		Not used	RS1/16SS0R0J
R1312		XRS1/16SS103J	XRS1/16SS272J
R1316		Not used	XRS1/10SR0R0J
R1416		XRS1/10SR0R0J	Not used
R1432		Not used	RS1/16SS0R0J
C246		CKSRYX104K50	Not used
C267		CKSSYB104K16	Not used
C723		CKSSYB102K50	CCSSCH120J50
C794		CCSSCH101J50	CCSSCH121J50
C855		Not used	CCSSCH7R0D50
C857		CKSSYX104K50	CCSSCH120J50
C1201		CCG1345	CKSRYB104K25
C1202		CKSSYX104K50	Not used
C1255		CKSSYB331K50	CCSSCH471J50

Circuit Symbol and No.	Part Name	DEH-S4120BT/XNUC	DEH-S4220BT/XNUC
C1276		CKSSYB104K16	Not used
C1277		CKSSYB104K16	Not used
C1280		CKSSYB102K50	CCSSCH121J50
C1281		CKSSYB102K50	CCSSCH121J50
C1305		CKSSYB104K10	Not used
C1425		Not used	CKSRYB104K25

Circuit Symbol and No.	Part Name	DEH-S4150BT/XNGS	DEH-S4250BT/XNGS
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	Flash ROM Unit	QVQ1056	QVQ1104
D1204	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1205	Zener Diode	UDZV18(B)	UDZV6R2(B)
L520	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R113		XRS1/16SS682J	XRS1/16SS822J
R229		XRS1/16SS3902D	RS1/16SS393J
R242		XRS1/16SS4701D	RS1/16SS4701F
R519		XRS1/16SS271J	XRS1/16SS151J
R538		XRS1/16SS473J	XRS1/16SS223J
R539		XRS1/16SS103J	XRS1/16SS473J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R690		XRS1/16SS472J	Not used
R702		XRS1/16SS472J	XRS1/16SS152J
R857		Not used	RS1/16SS0R0J
R1312		XRS1/16SS103J	XRS1/16SS272J
R1416		XRS1/10SR0R0J	Not used
R1432		Not used	RS1/16SS0R0J
C246		CKSRYX104K50	Not used
C267		CKSSYB104K16	Not used
C723		CKSSYB102K50	CCSSCH120J50
C794		CCSSCH101J50	CCSSCH121J50
C855		Not used	CCSSCH7R0D50
C857		CKSSYX104K50	CCSSCH120J50
C1201		CCG1345	CKSRYB104K25
C1202		CKSSYX104K50	Not used
C1255		CKSSYB331K50	CCSSCH471J50
C1276		CKSSYB104K16	Not used
C1277		CKSSYB104K16	Not used
C1280		CKSSYB102K50	CCSSCH121J50
C1281		CKSSYB102K50	CCSSCH121J50
C1425		Not used	CKSRYB104K25

Circuit Symbol and No.	Part Name	DEH-S4150BT/XNCS	DEH-S4250BT/XNCS
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	Flash ROM Unit	QVQ1056	QVQ1104
IC1302	Logic IC	TC7SH32FUS2	Not used

Circuit Symbol and No.	Part Name	DEH-S4150BT/XNCS	DEH-S4250BT/XNCS
D1204	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1205	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1302	Schottky Diode	RR1VWM4STF	Not used
L520	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R113		XRS1/16SS682J	XRS1/16SS822J
R229		XRS1/16SS3902D	RS1/16SS393J
R242		XRS1/16SS4701D	RS1/16SS4701F
R519		XRS1/16SS271J	XRS1/16SS151J
R536		Not used	XRS1/16SS472J
R537		XRS1/16SS473J	Not used
R538		XRS1/16SS473J	XRS1/16SS103J
R539		XRS1/16SS103J	XRS1/16SS473J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R690		XRS1/16SS472J	Not used
R702		XRS1/16SS472J	XRS1/16SS152J
R1305		Not used	RS1/16SS0R0J
R1312		XRS1/16SS103J	XRS1/16SS272J
R1316		Not used	XRS1/10SR0R0J
R1416		XRS1/10SR0R0J	Not used
R1432		Not used	RS1/16SS0R0J
C246		CKSRYX104K50	Not used
C267		CKSSYB104K16	Not used
C723		CKSSYB102K50	CCSSCH120J50
C794		CCSSCH101J50	CCSSCH121J50
C855		Not used	CCSSCH7R0D50
C857		CKSSYX104K50	CCSSCH120J50
C1201		CCG1345	CKSRYB104K25
C1202		CKSSYX104K50	Not used
C1255		CKSSYB331K50	CCSSCH471J50
C1276		CKSSYB104K16	Not used
C1277		CKSSYB104K16	Not used
C1280		CKSSYB102K50	CCSSCH121J50
C1281		CKSSYB102K50	CCSSCH121J50
C1305		CKSSYB104K10	Not used
C1425		Not used	CKSRYB104K25

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.