



2. ACCESSORIES AND BACKUP CURRENT

2.1 ACCESSORIES


MAIN UNIT -related

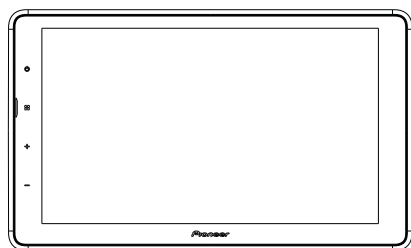


MAIN UNIT

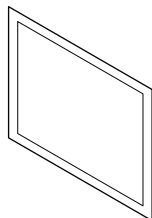


Panel (ID)
CNS9475

 

 QUICK START GUIDE
QSG_DMHT450EXUC_A (UC)
1270750052600 (EW)
1270750052500 (CS)
QSG_DMHAF555BTGS_A (XNGS)
1270750052400 (XEGS)
QSG_DMHAF555BTID_A (ID)



 INSTALLATION MANUAL
INSTM_DMHT450EXUC_A (UC)
1270750050200 (EW)




WARANTY CARD
(UC, EW, ID)

MICROPHONE -related




MICROPHONE ASSY
1238400031300


COAD -related

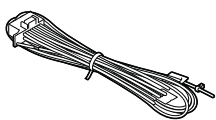


PWS CONN-CORD
CDP1665 (UC, XNGS, ID)
1238400031200 (CS, XEGS)

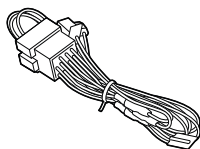

PWS CONN-CORD
(EW)
1238400031400

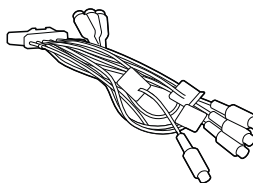

AV CABLE
1238400031100

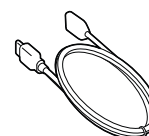

USB EXTENDED CABLE
1238400031010

SCREW (DIAMETER x LENGTH)



BINDING HEAD SCREW
(5 mm x 8 mm) x 6
CBA2384 (UC, XNGS, ID)
121102030069 (CS, XEGS)



FLAT SURFACE SCREW
(5 mm x 8 mm) x 6
CBA2383 (UC)
121102020070 (EW)

2.2 BACKUP CURRENT


For all items except the backup current, refer to the Owner's Manual.

Backup current..... 3 mA or less

9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

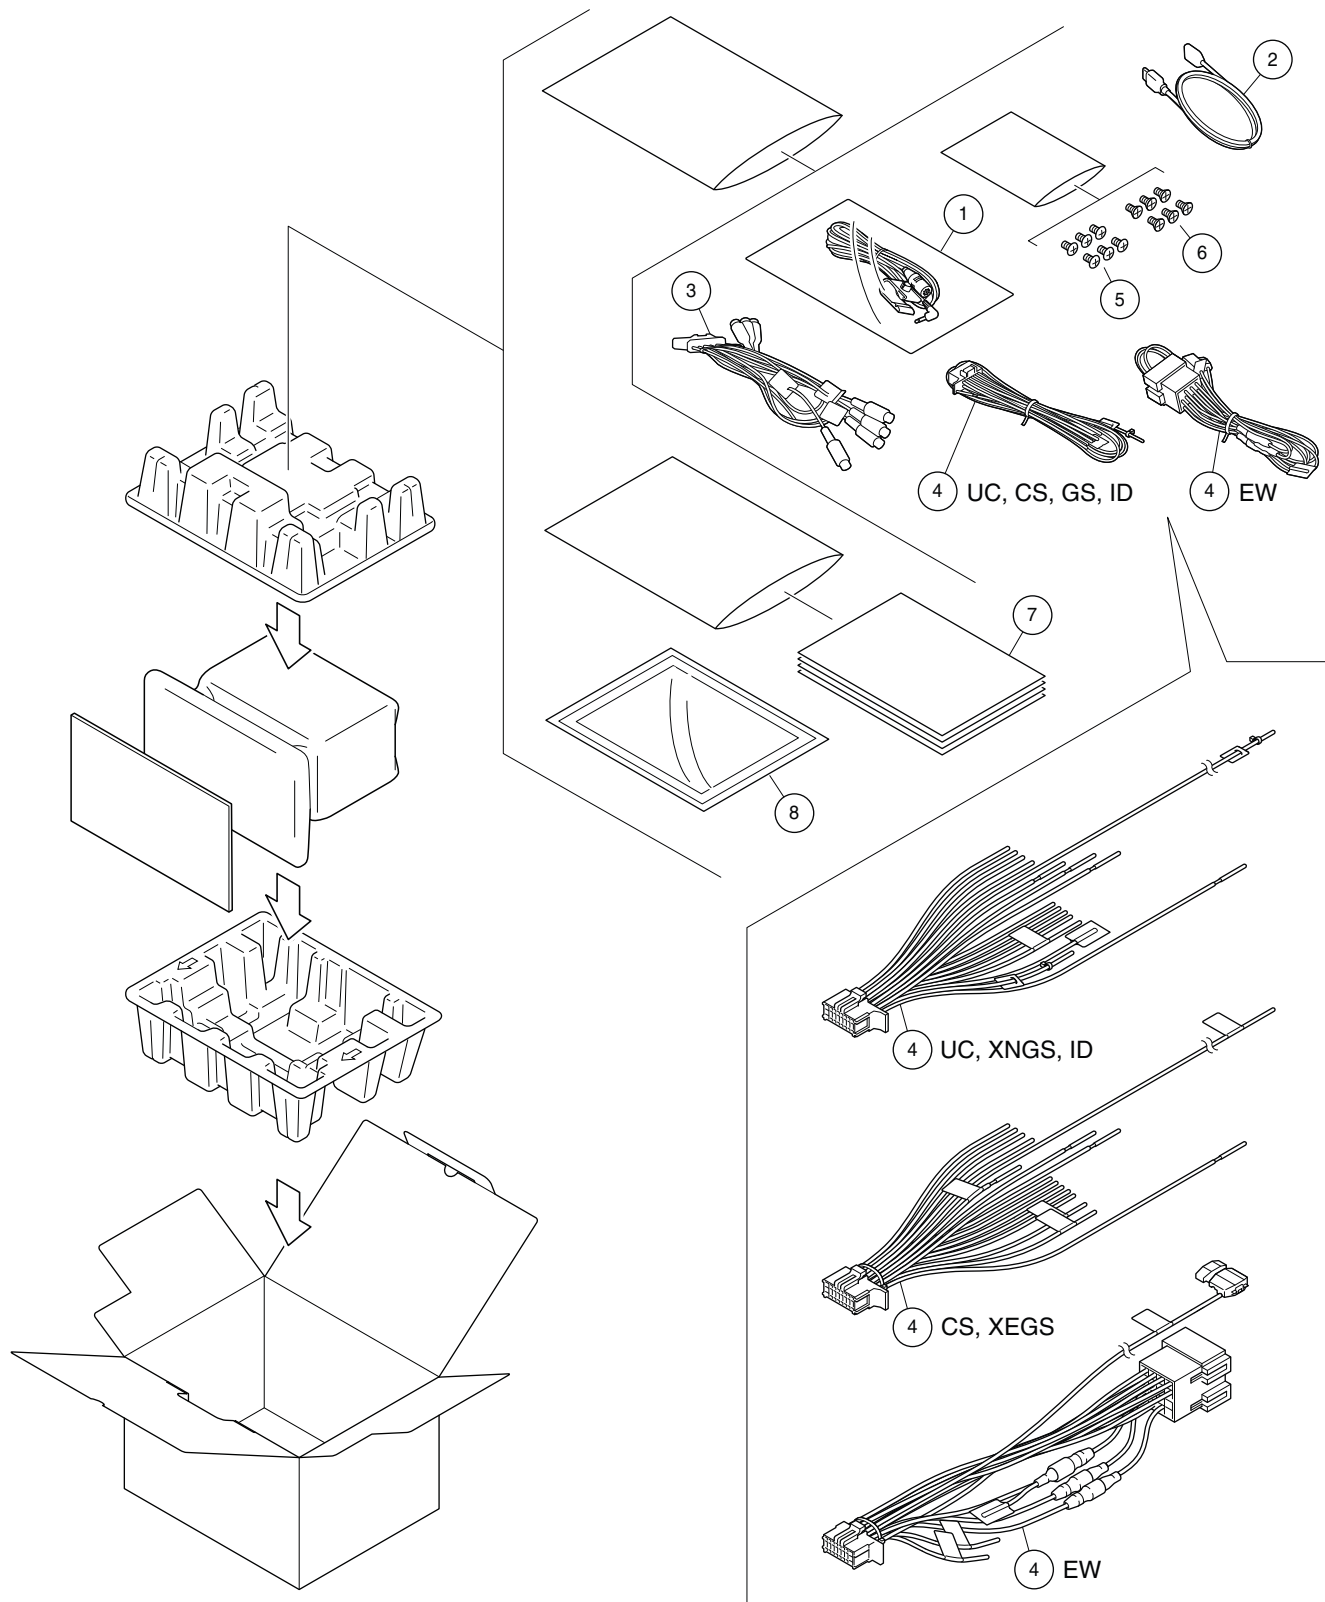

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Microphone ASSY	1238400031300
2	USB Extended Cable	1238400031010
3	AV Cable	1238400031100
4	PWS CONN-CORD	See Contrast table (2)
5	Binding Head Screw (M5 x 9)	See Contrast table (2)
6	Flat Surface Screw (M5 x 9)	See Contrast table (2)
7-1	Quick Start Guide	See Contrast table (2)
7-2	Installation Manual	See Contrast table (2)
7-3	Warranty Card	See Contrast table (2)
8	Panel	See Contrast table (2)

(2) CONTRAST TABLE

DMH-T450EX/XNUC, DMH-AF555BT/XEEW, DMH-AF555BT/XECS, DMH-AF555BT/XNGS, DMH-AF555BT/XEGS and DMH-AF555BT/XNID are constructed the same except for the following:


Mark	No.	Description	DMH-T450EX/XNUC	DMH-AF555BT/XEEW	DMH-AF555BT/XECS	DMH-AF555BT/XNGS
	4	PWS CONN-CORD	CDP1665	1238400031400	1238400031200	CDP1665
	5	Binding Head Screw (M5 x 9)	CBA2384	Not used	121102030069	CBA2384
	6	Flat Surface Screw (M5 x 9)	CBA2383	121102020070	Not used	Not used
	7-1	Quick Start Guide	QSG_DMHT450EXUC_A	1270750052600	1270750052500	QSG_DMHAF555BTGS_A
	7-2	Installation Manual	INSTM_DMHT450EXUC_A	1270750050200	Not used	Not used
	7-3	Warranty Card	Used	Used	Not used	Not used
	8	Panel	Not used	Not used	Not used	Not used

Mark	No.	Description	DMH-T450EX/XNUC	DMH-AF555BT/XEGS	DMH-AF555BT/XNID
	4	PWS CONN-CORD	CDP1665	1238400031200	CDP1665
	5	Binding Head Screw (M5 x 9)	CBA2384	121102030069	CBA2384
	6	Flat Surface Screw (M5 x 9)	CBA2383	Not used	Not used
	7-1	Quick Start Guide	QSG_DMHT450EXUC_A	1270750052400	QSG_DMHAF555BTID_A
	7-2	Installation Manual	INSTM_DMHT450EXUC_A	Not used	Not used
	7-3	Warranty Card	Used	Not used	Used
	8	Panel	Not used	Not used	CNS9475

Quick Start Guide, Installation Manual

Part No.	Language
QSG_DMHT450EXUC_A	English, French, Spanish (Espanol)
1270750052600	English, French, Turkish
1270750052500	English, Spanish (Espanol), Portuguese (B)
QSG_DMHAF555BTGS_A	English, Traditional Chinese, Thai, Indonesian, Arabic, Persian
1270750052400	English, Traditional Chinese, Thai, Indonesian, Arabic, Persian
QSG_DMHAF555BTID_A	English
INSTM_DMHT450EXUC_A	English, French, Spanish (Espanol)
1270750050200	English, French, Turkish

9.2 EXTERIOR

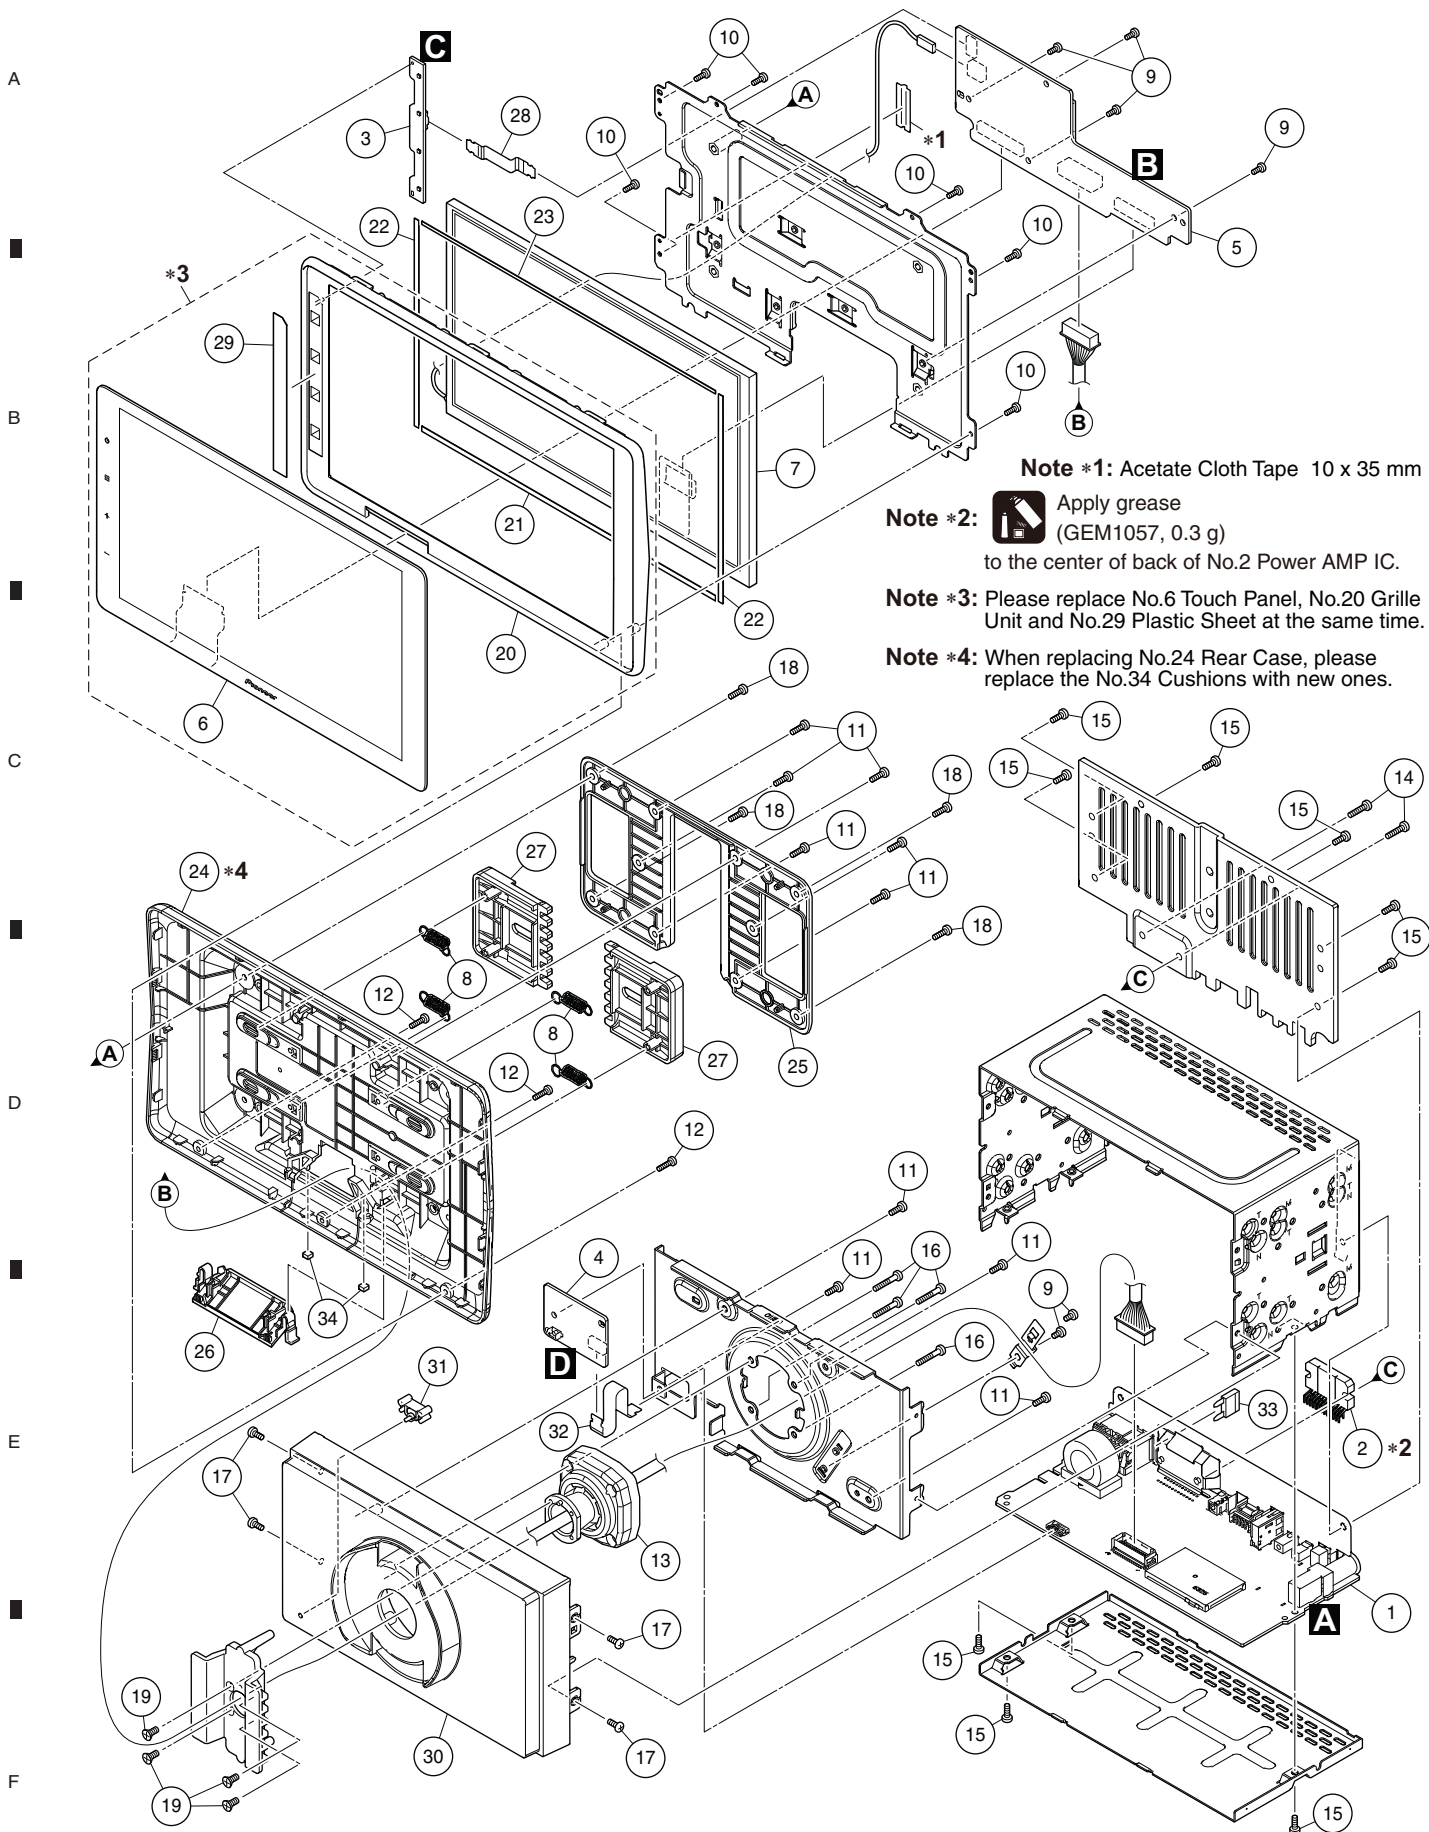

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Mother Unit	See Contrast table (2)	17	Screw	121040000222	A
	Service Main Board ASSY	See Contrast table (2)	18	Screw	1211000005700	
2	Power AMP IC	TCB501HQ	19	Screw	1211000005900	
3	LED Unit	See Contrast table (2)	20	Grille Unit	12121000556001M	
	Service LED Unit	See Contrast table (2)	21	Cushion	121405000465	B
4	BT Unit	See Contrast table (2)	22	Cushion	121405000455	
	Service BT Unit	See Contrast table (2)	23	Cushion	121405000456	
5	Display Unit	See Contrast table (2)	24	Rear Case	12121000557001M	
	Service Display Unit	See Contrast table (2)	25	Cover	12127000223000M	C
6	Touch Panel	See Contrast table (2)	26	Cable Cover	12129000178000M	
7	TFT LCD	See Contrast table (2)	27	Holder	See Contrast table (2)	
8	Spring	1210350001200	28	FFC	123820000864	
9	Screw	121100070093	29	Plastic Sheet	1214600012000	D
10	Screw	121045000007	30	Panel	12124000218000M	
11	Screw	121106070005	31	Reset Button	12123000645000M	
12	Screw	121045000013	32	FFC	123820000862	
13	Cable	821HMS114APL00	33	Fuse	124800000106	E
14	Screw	121100000221	34	Cushion	1214050020100	
15	Screw	121100000222				
16	Screw	121106070007				

(2) CONTRAST TABLE

DMH-T450EX/XNUC, DMH-AF555BT/XEEW, DMH-AF555BT/XECS, DMH-AF555BT/XNGS, DMH-AF555BT/XEGS and DMH-AF555BT/XNID are constructed the same except for the following:

Mark No.	Description	DMH-T450EX/XNUC	DMH-AF555BT/XEEW	DMH-AF555BT/XECS	DMH-AF555BT/XNGS	
1	Mother Unit	FGE1013	Not used	Not used	FGE1014	D
	Service Main Board ASSY	Not used	843HMS114CMB00	843HMS114BMB00	Not used	
3	LED Unit	FGE3100	Not used	Not used	FGE3100	
	Service LED Unit	Not used	842HMS114CLED00	842HMS114BLED00	Not used	
4	BT Unit	FGE6000	Not used	Not used	FGE6000	E
	Service BT Unit	Not used	842HMS114CBT00	842HMS114BBT00	Not used	
5	Display Unit	FGE5000	Not used	Not used	FGE5000	
	Service Display Unit	Not used	842HMS114CTFT00	842HMS114BTFT00	Not used	
6	Touch Panel	1234100024600M	1234100024600	1234100024600	1234100024600M	F
7	TFT LCD	1234200009110M	1234200009110	1234200009110	1234200009110M	
27	Holder	12120000021000M	12120000021000	12120000021000	12120000021000M	
Mark No.	Description	DMH-T450EX/XNUC	DMH-AF555BT/XEGS	DMH-AF555BT/XNID		
1	Mother Unit	FGE1013	Not used	FGE1015	E	
	Service Main Board ASSY	Not used	843HMS114AMB00	Not used		
3	LED Unit	FGE3100	Not used	FGE3100		
	Service LED Unit	Not used	842HMS114ALED00	Not used		
4	BT Unit	FGE6000	Not used	FGE6000	F	
	Service BT Unit	Not used	842HMS114ABT00	Not used		
5	Display Unit	FGE5000	Not used	FGE5000		
	Service Display Unit	Not used	842HMS114ATFT00	Not used		
6	Touch Panel	1234100024600M	1234100024600	1234100024600M	F	
7	TFT LCD	1234200009110M	1234200009110	1234200009110M		
27	Holder	12120000021000M	12120000021000	12120000021000M		