


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

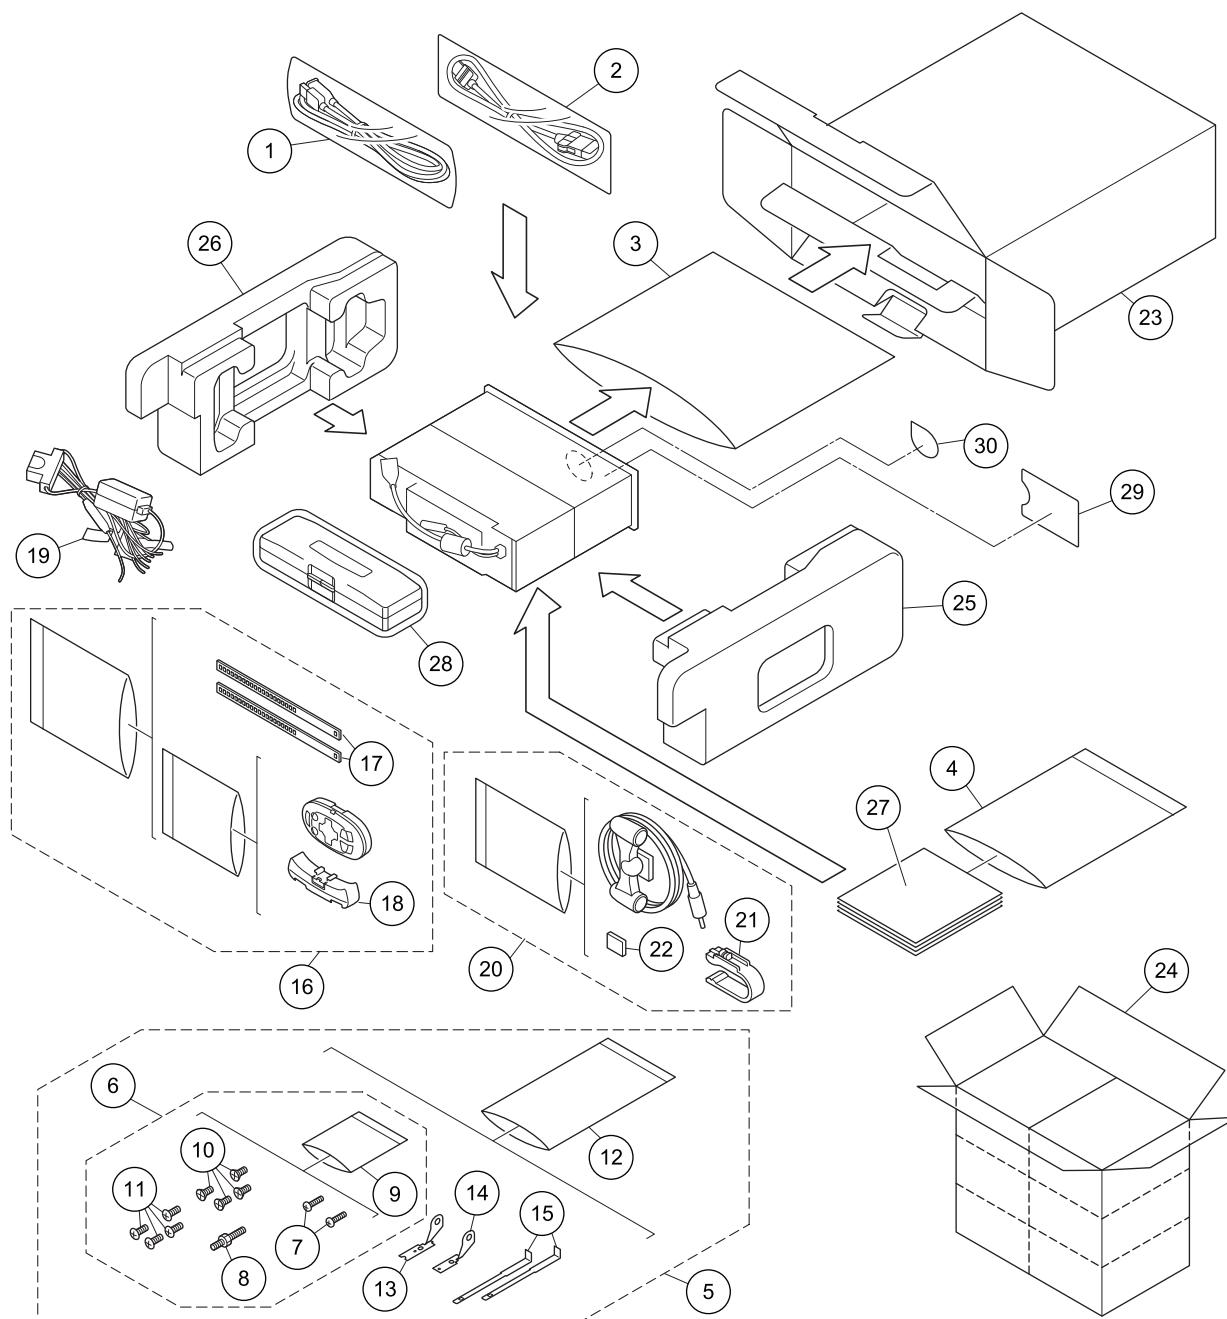

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDP1219	18	Holder	CZN7041
2	Cord Assy	See Contrast table (2)	19	MBL CMPX C-CORD	0F020037
3	Cover	CEG1419	20	Microphone Assy	0F020056
4	Polyethylene Bag	CEG1426			
5	Accessory Assy	0A020123	21	Holder	CZN7192
			22	Cushion	CZN7193
6	Screw Assy	CEA5317	23	Unit Box	See Contrast table (2)
7	Screw	BPZ20P060FTB	24	Contain Box	See Contrast table (2)
8	Screw	CBA1650	25	Protector	0G020168
* 9	Polyethylene Bag	CEG-127			
10	Screw	CRZ50P090FTC	26	Protector	0G020169
			27-1	Installation Manual	See Contrast table (2)
11	Screw	TRZ50P080FTC	27-2	Owner's Manual	See Contrast table (2)
12	Polyethylene Bag	CEG1160	27-3	Caution Card	CRP1387
13	Holder (L)	CND1249	* 27-4	Warranty Card	See Contrast table (2)
14	Holder (R)	CND1250			
15	Handle	CND3707	* 27-5	Caution Card	0G020239
			28	Case Assy	0G020236
16	Steering RC Assy	0F020034	29	Packing Sheet	0G020247
17	Belt	CZN5499	30	Packing Sheet	See Contrast table (2)

(2) CONTRAST TABLE
 DEH-P710BT/XN/UC and DEH-P7100BT/XN/UC are constructed the same except for the following:


Mark	No.	Description	DEH-P710BT/XN/UC	DEH-P7100BT/XN/UC
	2	Cord Assy	CDP1220	Not used
	23	Unit Box	0G020157	0G020158
	24	Contain Box	0G020163	0G020164
	27-1	Installation Manual	0G020184	0G020021
	27-2	Owner's Manual	0G020187	0G020186
*	27-4	Warranty Card	CRY1280	CRY1276
	30	Packing Sheet	0G020248	Not used

Owner's Manual,Installation Manual

Part No.	Language
0G020184	English, French, Spanish(Espanol)
0G020187	English, French, Spanish(Espanol)
0G020021	English, French, Spanish(Espanol)
0G020186	English, French, Spanish(Espanol)

1 2 3 4

9.2 EXTERIOR(1)

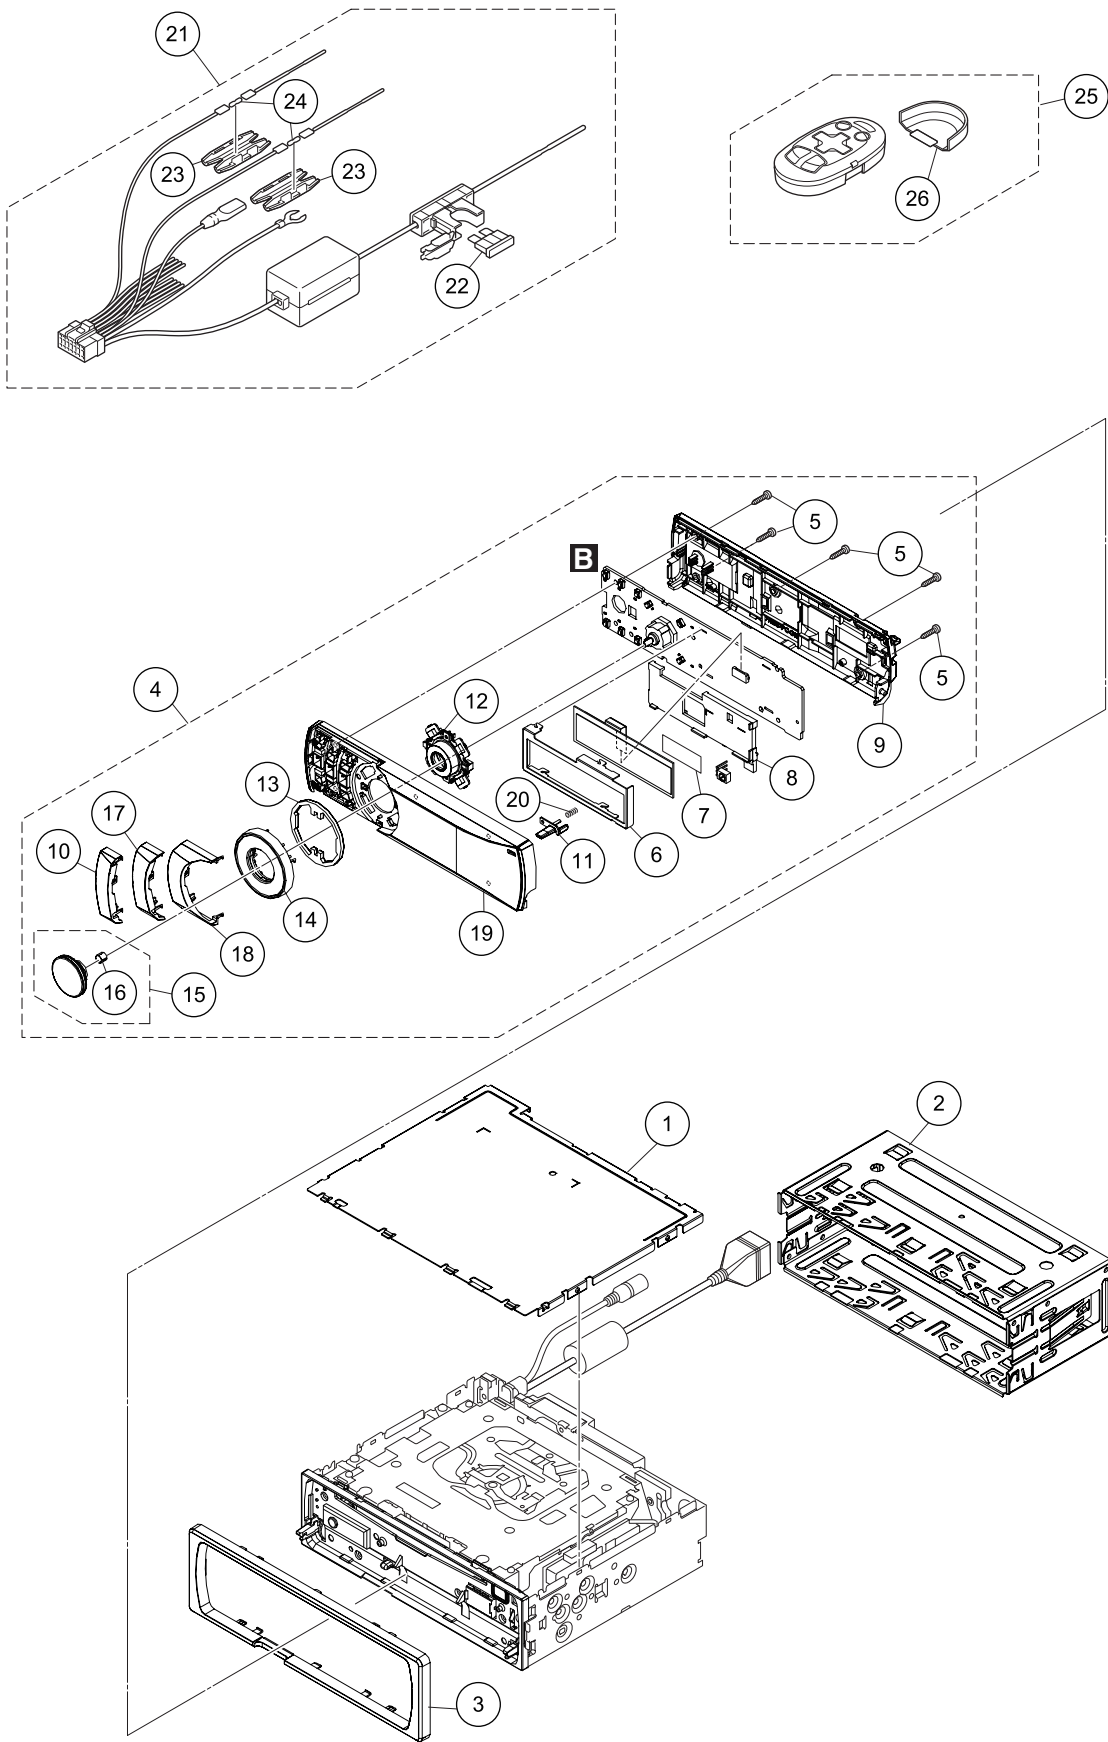

EXTERIOR(1) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Case	CNB3377	
2	Holder	CND3598	A
3	Panel	0G020006	
4	Detach Grille Assy(P710BT)	0A020126	
	Detach Grille Assy(P7100BT)	0A020121	
5	Screw	BPZ20P100FTB	
6	Holder	CND5194	
7	Double Sided Tape	CNN1878	
8	Holder	CNW1699	
9	Cover	0G020020	
10	Button(SRC, BAND)	0G020039	B
11	Button(OPEN)	0G020042	
12	Button(Lighting Conductor)	0G020053	
13	Cushion	0G020054	
14	Button Unit(LIST, DISP, PHONE, MUTE)	0G020061	
15	Knob Unit(P710BT)	0G020073	
	Knob Unit(P7100BT)	0G020084	
16	Spring	XBL7005	
17	Button(RDM, CLK)	0G020076	
18	Button(VOICE, S.Rtrv)	0G020077	C
19	Grille Unit(P710BT)	0G020079	
	Grille Unit(P7100BT)	0G020080	
20	Coil Spring	0G020111	
21	MBL CMPX C-CORD	0F020037	
⚠ 22	Fuse(10 A)	CEK1136	
23	Cap	CNS1472	
24	Resistor	RS1/2PMF102J	
25	Steering RC Assy	0F020034	
26	Battery Cover	CZN5497	D

9.3 EXTERIOR(2)

A


B

C

D

E


F

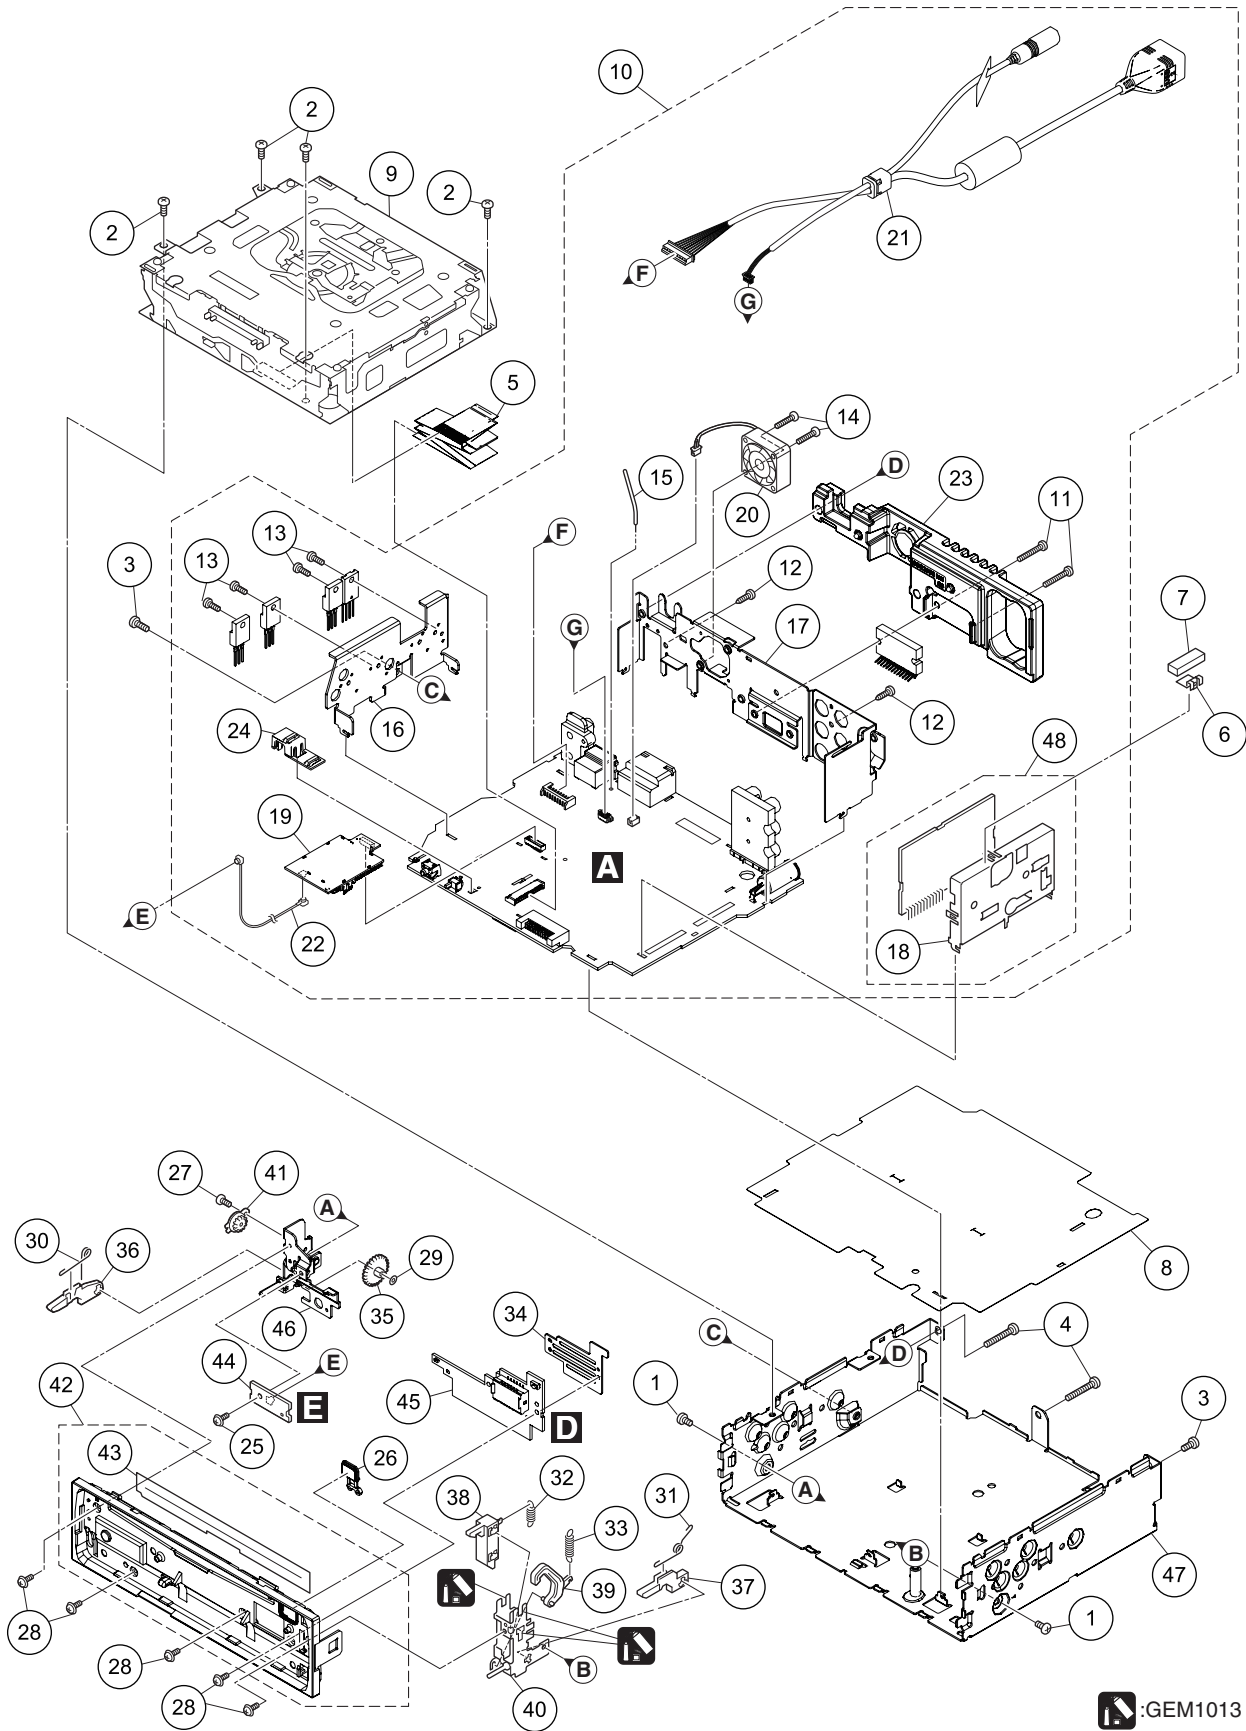

GEM1013

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	BMZ30P040FTB	48	FM/AM Tuner Unit(U401)	CWE2097
2	Screw	BSZ26P060FTC			
3	Screw	BSZ30P060FTC			
4	Screw	BSZ30P200FTC			
5	Cable	CDE8564			
6	Earth Plate	CNC8915			
7	Cushion	CNM8890			
8	Insulator	CNN1563			
9	CD Mechanism Module(S10.5)(P710BT)	CXK5776			
	CD Mechanism Module(S10.5)(P7100BT)	CXK5779			
10	Tuner Amp Unit(P710BT)	0A020124			
	Tuner Amp Unit(P7100BT)	0A020119			
11	Screw	BMZ26P200FTC			
12	Screw	BPZ26P070FTC			
13	Screw	BSZ26P060FTC			
14	Screw(M2.6 x 14)	CBA1632			
15	Clamper	CEF1048			
16	Holder	CND3826			
17	Holder	CND4311			
18	Holder	CND4324			
19	Bluetooth Module	CWX3717			
20	Fan Motor	CXM1288			
21	USB P-CBL	0F020012			
22	Coaxial Jumper	0F020015			
23	Heat Sink	0G020011			
24	Holder	0G020135			
25	Screw	ASZ26P050FTC			
26	Button(EJECT)	CAC7752			
27	Screw(M2 x 4)	CBA1649			
28	Screw(M2 x 4.5)	CBA1925			
29	Washer	CBF1038			
30	Spring	CBH2650			
31	Spring	CBH2651			
32	Spring	CBH2652			
33	Spring	CBH2653			
34	Holder	CND1254			
35	Gear	CNV5997			
36	Arm	CNV7400			
37	Arm	CNV7401			
38	Arm	CNV7402			
39	Arm	CNV7403			
40	Holder Unit	CXB9502			
41	Damper Unit	CXB9503			
42	Sub Panel Unit	0A020099			
43	Cover	CNM6854			
44	Antenna Unit	0A020108			
45	Panel Unit	0A020129			
46	Holder Unit	0G020067			
47	Chassis Unit	0G020003			

9.4 CD MECHANISM MODULE

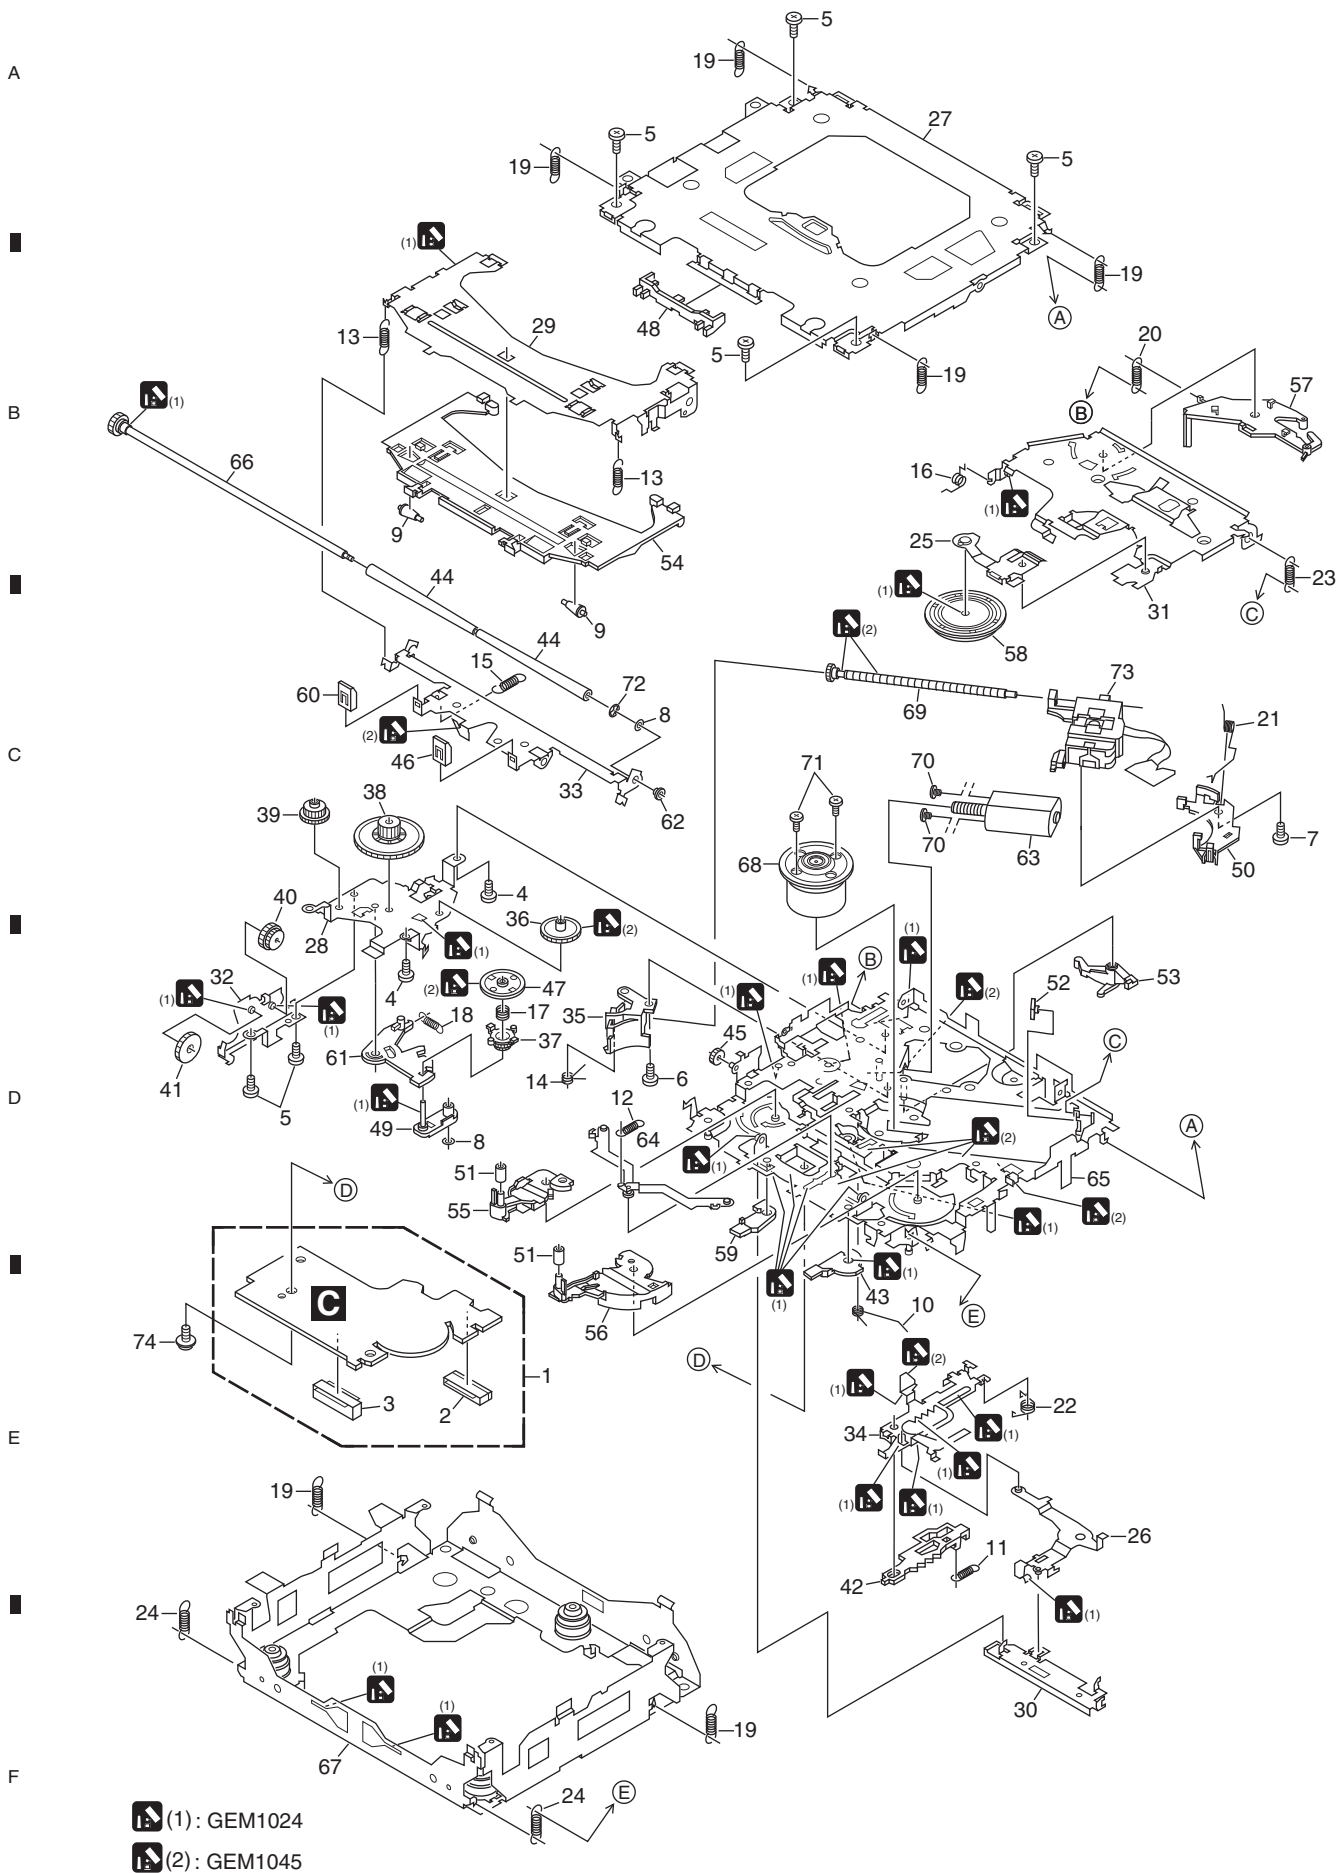

5

6

7

8

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	CD Core Unit(S10.5CODE3H)(P710BT)	CWX3858	49	Arm	CNV7805
	CD Core Unit(S10.5COMP2-iPod-C3)(P7100BT)	CWX3680	50	Rack	CNV8342
2	Connector(CN101)	CKS4808			
3	Connector(CN701)	CKS5854	51	Roller	CNV8343
4	Screw	BMZ20P025FTC	52	Holder	CNV8344
5	Screw	BSZ20P040FTC	53	Arm	CNV8345
			54	Guide	CNV9498
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348
7	Screw(M2 x 4)	CBA1835			
8	Washer	CBF1038	56	Arm	CNV8349
9	Roller	CNV9499	57	Arm	CNV8350
10	Spring	CBH2609	58	Clamper	CNV8365
			59	Arm	CNV8386
11	Spring	CBH2612	60	Guide	CNV8396
12	Spring	CBH2614			
13	Spring	CBH2616	61	Arm	CNV8413
14	Spring	CBH2617	62	Collar	CNV8938
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026
			64	Arm Unit	CXC4027
16	Spring	CBH2855	65	Chassis Unit	CXC4028
17	Spring	CBH2937			
18	Spring	CBH2735	66	Gear Unit	CXC4029
19	Spring	CBH2854	67	Frame Unit	CXC4031
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134
			69	Screw Unit	CXC6359
21	Spring	CBH2856	70	Screw	JFZ20P020FTC
22	Spring	CBH2857			
23	Spring	CBH2860	71	Screw	JGZ17P022FTC
24	Spring	CBH2861	72	Washer	YE20FTC
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942
			74	Screw	IMS26P030FTC
26	Arm	CND1909			
27	Frame	CND2582			
28	Bracket	CND2583			
29	Arm	CND3831			
30	Lever	CND2585			
31	Arm	CND2586			
32	Bracket	CND2587			
33	Arm	CND2588			
34	Lever	CND2589			
35	Holder	CNV7201			
36	Gear	CNV7207			
37	Gear	CNV7208			
38	Gear	CNV7209			
39	Gear	CNV7210			
40	Gear	CNV7211			
41	Gear	CNV7212			
42	Rack	CNV7214			
43	Arm	CNV7216			
44	Roller	CNV7218			
45	Gear	CNV7219			
46	Guide	CNV7361			
47	Gear	CNV7595			
48	Guide	CNV7799			

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J, RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.

Part No.

Unit Number: 0A020124(P710BT)

Unit Number: 0A020119(P7100BT)

Unit Name : Tuner Amp Unit

Unit Number: (P710BT)

Unit Number: (P7100BT)

Unit Name : Keyboard Unit

Unit Number: CWX3858(P710BT)

Unit Name : CD Core Unit(S10.5CODE3H)

Unit Number: CWX3680(P7100BT)

Unit Name : CD Core Unit(S10.5COMP2-iPod-C3)

Unit Number: 0A020129

Unit Name : Panel Unit

Unit Number: 0A020108

Unit Name : Antenna Unit

A

Unit Number: 0A020124(P710BT)

Unit Number: 0A020119(P7100BT)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,31,118) IC	HA12241FP
IC 151	(A,101,99) IC	NJM2794V
IC 251	(A,94,92) IC	TC4066BFT
IC 351	(A,105,136) IC	PA2030A
IC 431	(A,154,24) IC	NJM2885DL1-33

IC 461	(A,16,65) IC	NJM2885DL1-33
IC 501	(A,100,59) L-MOS And Gate	TC7SET08FUS1
IC 551	(A,90,60) IC	TC4066BFT
IC 581	(A,78,56) IC	NJM4558MD
IC 582	(A,68,64) D/A Converter	PCM1753DBQ

Circuit Symbol and No.

Part No.

IC 601	(A,129,61) IC	PEG543A8
IC 651	(A,106,69) IC	S-80835CNMC-B8U
IC 701	(A,100,46) IC	NJM2885DL1-33
IC 741	(A,58,76) IC	BD6538G
IC 742	(A,44,76) IC	BD6538G

IC 743	(A,51,81) IC	TC7MB3257FK
IC 781	(A,80,99) Regulator IC	BD9781HFP
IC 851	(A,32,25) IC	NJM2360AM
IC 911	(A,6,117) IC	NJM2388F84
IC 912	(A,123,89) IC	PML017A

Q 101	(A,38,117) Transistor	UMF23N
Q 201	(A,125,103) Transistor	2SC4081
Q 202	(A,122,98) Transistor	RT3T22M
Q 251	(A,95,88) Transistor	RT3T22M
Q 301	(A,136,123) Transistor	IMH23

Q 302	(A,143,123) Transistor	IMH23
Q 303	(A,130,123) Transistor	IMH23
Q 304	(A,129,107) Transistor	RT3T22M
Q 381	(A,126,129) Transistor	2SC4081
Q 382	(A,119,119) Chip Transistor	DTC114EUA

Q 383	(A,112,118) Chip Transistor	DTC114EUA
Q 401	(A,155,48) Transistor	UMH1N
Q 402	(A,155,43) Transistor	UMH1N
Q 451	(A,13,77) Transistor	RT3T22M
Q 452	(A,7,70) Transistor	2SD2396

Q 551	(A,94,56) Transistor	RT3T22M
Q 721	(A,7,48) Transistor	2SD2396
Q 722	(A,17,50) Transistor	RT3T22M
Q 801	(A,84,13) Transistor	2SA1576A
Q 802	(A,80,9) Chip Transistor	DTC114EUA

Q 821	(A,7,57) Transistor	2SD1767
Q 823	(A,24,55) Transistor	RT3T22M
Q 831	(A,37,42) Chip Transistor	DTC114EUA
Q 832	(A,32,43) Transistor	2SA1576A
Q 841	(A,124,31) Transistor	2SA1576A

Q 842	(A,129,25) Chip Transistor	DTC114EUA
Q 851	(A,16,31) Transistor	2SD1760F5
Q 852	(A,17,24) Transistor	RT3T22M
Q 891	(A,91,109) Transistor	RT3T22M
Q 892	(A,84,112) Transistor	2SD1767

Q 901	(A,7,101) Transistor	2SD2396
-------	----------------------	---------

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Q 902 (A,14,107) Transistor	RT3T22M	U 401 (A,162,98) FM/AM Tuner Unit	CWE2097
Q 921 (A,93,116) Transistor	UMX1N	CN551 (A,53,63) Connector	CKS6117
Q 922 (A,107,109) Chip Transistor	DTC114EUA	CN701 (A,81,29) Connector	CKS3833
D 151 (A,10,126) Diode	MALS068X		
		CN741 (A,48,91) Plug	KM200NA9L
D 152 (A,14,126) Diode	MALS068X	CN761 (A,67,107) Connector	CKS4824
D 201 (A,122,104) Diode	HZU13(B1)	CN801 (A,114,9) Plug	CKS3537
D 203 (A,117,81) Diode Network	DA204U	CN891 (A,77,110) Connector	VKN1928
D 301 (A,125,105) Diode	1SS355	CN981 (A,59,133) Plug	CKM1278
D 381 (A,123,130) Diode	HZU8R2(B3)		
		JA101 (A,32,130) Connector	CKS5271
D 382 (A,126,126) Diode	MC2848-11	JA151 (A,14,134) Jack	YKS5001
D 383 (A,122,119) Diode(P710BT)	MC2848-11	JA301 (A,144,133) Pin Jack	XKB7001
D 451 (A,12,88) Diode	MPG06G-6415G50	JA401 (A,169,123) Antenna Jack	CKX1070
D 452 (A,13,74) Diode	UDZS5R6(B)	Fan Motor	CXM1288
D 651 (A,104,62) Diode	1SS355		
		RESISTORS	
D 721 (A,13,54) Diode	HZU7R5(B3)	R 101 (A,97,102)	RS1/16SS181J
D 781 (A,73,85) Diode	RB060L-40	R 102 (A,95,104)	RS1/16SS181J
D 782 (A,63,102) Diode	1SR154-400	R 103 (A,99,103)	RS1/16SS102J
D 821 (A,20,51) Diode	UDZS9R1(B)	R 104 (A,99,104)	RS1/16SS102J
D 851 (A,21,25) Diode	HZU10(B1)	R 105 (A,97,104)	RS1/16SS223J
D 852 (A,37,23) Diode	RB551V-30	R 106 (A,39,116)	RS1/16SS222J
D 853 (A,21,22) Diode	MC2848-11	R 107 (A,38,120)	RS1/16SS150J
D 891 (A,90,112) Diode	UDZS12(B)	R 108 (A,39,120)	RS1/16SS470J
D 901 (A,14,103) Diode	UDZS5R6(B)	R 109 (A,35,114)	RS1/16SS101J
D 902 (A,20,100) Diode	MPG06G-6415G50	R 110 (A,37,120)	RS1/16SS101J
D 921 (A,87,116) Diode	UDZS7R5(B)	R 111 (A,40,120)	RS1/16SS101J
D 922 (A,98,115) Diode	HZU6R8(B2)	R 112 (A,28,114)	RS1/16SS102J
D 923 (A,103,113) Diode	MPG06G-6415G50	R 113 (A,40,118)	RS1/16SS562J
D 941 (A,117,124) Diode	MPG06G-6415G50	R 114 (A,42,117)	RS1/16SS332J
D 942 (A,120,124) Diode	MPG06G-6415G50	R 115 (A,99,102)	RS1/16SS223J
D 981 (A,43,122) Diode	MPG06G-6415G50	R 151 (A,7,123)	RS1/16SS102J
D 982 (A,46,122) Diode	MPG06G-6415G50	R 152 (A,16,123)	RS1/16SS102J
L 101 (A,26,115) Inductor	LCTC1R0K1608	R 153 (A,92,96)	RS1/16SS181J
L 401 (A,155,99) Inductor	LCTAW220J2520	R 154 (A,92,101)	RS1/16SS181J
L 402 (A,154,91) Chip Coil	LCTAW1R0J2520	R 155 (A,93,98)	RS1/16SS223J
L 403 (A,152,53) Inductor	LCTAW2R2J3225	R 156 (A,93,100)	RS1/16SS223J
L 581 (A,78,63) Inductor	CTF1379	R 201 (A,125,100)	RS1/16SS182J
L 582 (A,72,62) Inductor	CTF1379	R 202 (A,119,81)	RS1/16SS101J
L 601 (A,109,59) Chip Coil	LCTAW100J2520	R 203 (A,114,82)	RS1/16SS101J
L 741 (A,57,82) Inductor	CTF1713	R 204 (A,121,80)	RAB4CQ102J
L 743 (A,44,81) Inductor	CTF1713	R 209 (A,110,92)	RS1/16SS102J
L 781 (A,66,81) Inductor	ATH7048	R 210 (A,136,87)	RS1/16SS102J
L 841 (A,125,25) Chip Coil	LCTAW4R7J2520	R 211 (A,111,83)	RS1/16SS222J
L 851 (A,30,17) Inductor	CTF1660	R 212 (A,136,85)	RS1/16SS222J
X 601 (A,114,61) Oscillator 20 000 kHz	CSS1775	R 251 (A,99,92)	RS1/16SS103J
S 651 (A,34,6) Switch(RESET)	CSG1020	R 252 (A,92,88)	RS1/16SS103J
S 801 (A,51,6) Switch(DETACH)	CSN1039	R 301 (A,138,121)	RS1/16SS472J
△FU801 (A,87,15) Fuse 250 mA	CEK1276	R 302 (A,142,119)	RS1/16SS472J
P 301 (A,159,120) Poly Switch	RXEF075P	R 304 (A,133,121)	RS1/16SS390J
P 401 (A,160,109) Surge Protector	IMSA-6801-01Y901	R 305 (A,128,120)	RS1/16SS390J
BZ601 (A,144,39) Buzzer	CPV1062	R 306 (A,129,125)	RS1/16SS223J
VA151 (A,7,126) Varistor	EZJZ1V270RM	R 307 (A,131,125)	RS1/16SS223J
VA152 (A,16,125) Varistor	EZJZ1V270RM	R 308 (A,144,120)	RS1/16SS390J
VA741 (A,52,85) Varistor	EZJZ1V800AM	R 309 (A,141,121)	RS1/16SS390J
VA742 (A,54,85) Varistor	EZJZ1V800AM	R 310 (A,141,125)	RS1/16SS223J
VA743 (A,46,85) Varistor	EZJZ1V800AM	R 311 (A,144,125)	RS1/16SS223J
VA744 (A,45,85) Varistor	EZJZ1V800AM	R 312 (A,139,125)	RS1/16SS390J
VA761 (A,68,112) Varistor	EZJZ1V270RM	R 313 (A,135,120)	RS1/16SS390J
VA762 (A,69,112) Varistor	EZJZ1V270RM	R 314 (A,135,125)	RS1/16SS223J
VA763 (A,66,112) Varistor	EZJZ1V270RM	R 315 (A,137,125)	RS1/16SS223J
VA764 (A,65,112) Varistor	EZJZ1V270RM		

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	R 316 (A,126,106)	RS1/16SS102J	R 601 (A,142,63) (P7100BT)	RS1/16SS104J
	R 317 (A,120,131)	RS1/16SS820J	R 602 (A,143,63) (P710BT)	RS1/16SS104J
	R 351 (A,123,126)	RS1/16SS153J	R 603 (A,139,33)	RS1/16SS102J
	R 352 (A,102,118)	RS1/16SS182J	R 605 (A,112,55)	RS1/16SS104J
	R 353 (A,105,118)	RS1/16SS182J	R 606 (A,140,57)	RAB4C681J
			R 607 (A,121,53)	RS1/16SS472J
	R 354 (A,110,117)	RS1/16SS182J		
	R 355 (A,110,119)	RS1/16SS182J	R 608 (A,134,50)	RAB4C681J
	R 356 (A,104,118)	RS1/16SS272J	R 609 (A,121,52)	RS1/16SS472J
	R 357 (A,106,118)	RS1/16SS272J	R 610 (A,140,53)	RS1/16SS103J
	R 358 (A,109,117)	RS1/16SS272J	R 611 (A,133,73)	RS1/16SS104J
			R 612 (A,118,56)	RS1/16SS473J
	R 359 (A,108,119)	RS1/16SS272J		
	R 381 (A,126,132)	RS1/16SS473J	R 613 (A,139,63)	RS1/16SS681J
	R 382 (A,129,105)	RS1/16SS473J	R 614 (A,118,64)	RS1/16SS821J
B	R 383 (A,126,131)	RS1/16SS104J	R 616 (A,127,43)	RS1/16SS473J
	R 384 (A,116,116)	RS1/16SS472J	R 617 (A,124,75)	RS1/16SS103J
	R 385 (A,123,121) (P7100BT)	RS1/16SS0R0J	R 619 (A,117,71)	RS1/16SS104J
	R 386 (A,116,118)	RS1/16SS103J	R 620 (A,139,67)	RS1/16SS104J
	R 387 (A,116,119)	RS1/16SS103J	R 621 (A,139,69)	RS1/16SS104J
	R 388 (A,116,120)	RS1/16SS331J	R 622 (A,122,71)	RS1/16SS0R0J
	R 389 (A,112,116)	RS1/16SS101J	R 624 (A,130,72)	RS1/16SS473J
	R 401 (A,148,69)	RS1/16SS104J	R 625 (A,126,75)	RS1/16SS223J
	R 402 (A,147,69)	RS1/16SS104J	R 626 (A,139,60)	RS1/16SS103J
	R 412 (A,150,47)	RAB4C223J	R 627 (A,117,54)	RS1/16SS222J
C	R 413 (A,155,61)	RS1/16SS681J	R 628 (A,118,68)	RS1/16SS472J
	R 415 (A,156,78)	RS1/16SS681J	R 629 (A,131,51)	RS1/16SS473J
			R 631 (A,129,52)	RS1/16SS103J
	R 416 (A,156,79)	RS1/16SS681J		
	R 417 (A,156,81)	RS1/16SS681J	R 632 (A,117,55)	RS1/16SS331J
	R 418 (A,156,80)	RS1/16SS681J	R 641 (A,139,81)	RS1/16SS104J
	R 419 (A,156,83)	RS1/16SS681J	R 651 (A,106,60)	RS1/16SS183J
	R 451 (A,13,80)	RS1/16SS392J	R 652 (A,118,67)	RS1/16SS102J
			R 701 (A,75,33)	RAB4C682J
	R 453 (A,32,60)	RS1/16S223J		
	R 454 (A,35,60)	RS1/16S103J	R 702 (A,102,38)	RS1/16SS104J
	R 501 (A,101,57)	RS1/16SS681J	R 703 (A,103,39)	RS1/16SS473J
	R 502 (A,101,60)	RS1/16SS0R0J	R 704 (A,105,37)	RS1/16SS221J
D	R 503 (A,99,57)	RS1/16SS681J	R 705 (A,105,36)	RS1/16SS221J
			R 706 (A,105,35)	RS1/16SS221J
	R 521 (A,109,52)	RS1/16SS182J		
	R 522 (A,110,47)	RS1/16SS182J	R 707 (A,105,34)	RS1/16SS221J
	R 524 (A,106,57)	RS1/16SS332J	R 708 (A,105,32)	RS1/16SS221J
	R 525 (A,108,47)	RS1/16SS332J	R 709 (A,105,31)	RS1/16SS102J
	R 551 (A,97,56)	RS1/16SS103J	R 721 (A,13,50)	RS1/4SA102J
			R 742 (A,50,85)	RS1/16S0R0J
	R 553 (A,88,54)	RS1/16SS0R0J		
	R 554 (A,45,61)	RS1/16SS0R0J	R 743 (A,48,85)	RS1/16S0R0J
	R 555 (A,91,67)	RS1/16SS102J	R 745 (A,59,73)	RS1/16SS102J
	R 556 (A,92,55)	RS1/16SS102J	R 746 (A,46,70)	RS1/16SS102J
	R 557 (A,93,65)	RS1/16SS220J	R 747 (A,47,78)	RS1/16SS5R6J
			R 748 (A,49,78)	RS1/16SS5R6J
E	R 560 (A,85,54)	RS1/16SS105J		
	R 561 (A,85,55)	RS1/16SS151J	R 749 (A,52,78)	RS1/16SS7502D
	R 563 (A,95,58)	RS1/16SS103J	R 750 (A,53,78)	RS1/16SS7502D
	R 564 (A,62,65)	RS1/16SS101J	R 752 (A,54,78)	RS1/16SS102J
	R 565 (A,45,64)	RS1/16S0R0J	R 753 (A,50,75)	RS1/16SS1003D
			R 754 (A,49,75)	RS1/16SS1003D
	R 566 (A,50,70)	RS1/16S0R0J		
	R 581 (A,77,52)	RS1/16SS103J	R 755 (A,53,75)	RS1/16SS1003D
	R 582 (A,79,62)	RS1/16SS103J	R 756 (A,52,75)	RS1/16SS1003D
	R 583 (A,73,53)	RS1/16SS103J	R 757 (A,46,76)	RS1/16SS102J
	R 584 (A,73,60)	RS1/16SS103J	R 781 (A,82,84)	RS1/16SS0R0J
			R 782 (A,82,88)	RS1/16SS333J
F	R 585 (A,74,56)	RS1/16SS473J		
	R 586 (A,74,58)	RS1/16SS473J	R 783 (A,84,86)	RS1/16SS3302F
	R 587 (A,81,57)	RS1/16SS103J	R 784 (A,81,90)	RS1/16S683J
	R 588 (A,82,57)	RS1/16SS103J	R 785 (A,84,89)	RS1/16S8201F
	R 589 (A,63,63)	RAB4C101J	R 786 (A,84,84)	RS1/10SR471J

5		6		7		8	
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.	
R 787	(A,79,91)	RS1/16SS8202F		C 206	(A,124,81)	CKSRYB105K10	
				C 211	(A,112,82)	CKSRYB105K6R3	
R 788	(A,79,89)	RS1/16SS123J		C 212	(A,132,84)	CKSRYB105K6R3	
R 802	(A,121,27)	RS1/16S222J					
R 803	(A,119,27)	RS1/16S222J		C 213	(A,114,84)	CKSRYB105K6R3	
R 804	(A,118,27)	RS1/16S222J		C 214	(A,132,85)	CKSRYB105K6R3	
R 805	(A,114,27)	RS1/16S222J		C 215	(A,114,85)	CKSRYB105K6R3	
				C 216	(A,131,86)	CKSRYB105K6R3	
R 806	(A,113,27)	RS1/16S222J		C 217	(A,114,87)	CKSRYB105K6R3	
R 807	(A,80,13)	RS1/16SS473J					
R 808	(A,79,13)	RS1/16S682J		C 218	(A,131,88)	CKSRYB105K6R3	
R 810	(A,112,27)	RS1/16S102J		C 219	(A,114,88)	CKSRYB105K6R3	
R 813	(A,120,30)	RS1/16SS104J		C 220	(A,131,89)	CKSRYB105K6R3	
				C 221	(A,115,90)	CKSRYB105K6R3	
R 814	(A,118,31)	RS1/16SS104J		C 222	(A,132,91)	CKSRYB105K6R3	
R 815	(A,110,25)	RS1/16SS104J					
R 816	(A,109,25)	RS1/16SS104J		C 223	(A,115,93)	CKSRYB105K6R3	
R 817	(A,108,25)	RS1/16SS102J		C 224	(A,132,95)	CKSRYB105K6R3	
R 821	(A,27,55)	RS1/16SS182J		C 225	(A,117,95)	CKSRYB105K6R3	
				C 226	(A,129,95)	CKSRYB105K6R3	
R 822	(A,10,58)	RS1/16S1R0J		C 227	(A,114,105)	CEJQ100M50	
R 823	(A,12,58)	RS1/16S222J					
R 831	(A,35,42)	RS1/16SS103J		C 228	(A,138,93)	CEJQ100M16	
R 832	(A,34,42)	RS1/16SS473J		C 229	(A,149,101)	CKSSYB104K16	
R 833	(A,28,43)	RS1/4SA391J		C 231	(A,115,82)	CCSSCH470J50	
				C 251	(A,99,89)	CKSRYB105K6R3	
R 841	(A,128,28)	RS1/16SS102J		C 252	(A,89,90)	CKSRYB105K6R3	
R 842	(A,128,29)	RS1/16SS473J					
R 843	(A,125,28)	RS1/16SS472J		C 253	(A,100,91)	CKSRYB224K10	
R 851	(A,13,25)	RS1/10SR561J		C 254	(A,89,93)	CKSRYB224K10	
R 852	(A,25,27)	RS1/16S1R0J		C 255	(A,99,93)	CKSSYB104K16	
				C 301	(A,129,117)	CEJQ100M25	
R 853	(A,27,24)	RS1/10SR821J		C 302	(A,135,112)	CEJQ100M25	
R 854	(A,30,39)	RS1/16S1502F					
R 855	(A,28,39)	RS1/16S4700F		C 305	(A,147,114)	CEJQ100M25	
R 856	(A,27,39)	RS1/16S8200F		C 306	(A,152,114)	CEJQ100M25	
R 891	(A,80,112)	RS1/16SS152J		C 309	(A,135,117)	CEJQ100M25	
				C 310	(A,141,114)	CEJQ100M25	
R 894	(A,80,109)	RS1/16SS1R0J		C 313	(A,128,111)	CEJQ220M16	
R 901	(A,14,101)	RS1/16S333J					
R 902	(A,14,100)	RS1/16S392J		C 351	(A,106,121)	CKSRYB474K16	
R 912	(A,13,109)	RS1/16S473J		C 352	(A,104,121)	CKSRYB474K16	
R 921	(A,90,116)	RS1/16SS104J		C 353	(A,109,122)	CKSRYB474K16	
				C 354	(A,111,122)	CKSRYB474K16	
R 922	(A,96,115)	RS1/16SS103J		C 355	(A,106,124)	CKSQYB474K16	
R 923	(A,90,117)	RS1/16SS473J					
R 924	(A,96,114)	RS1/16SS223J		C 356	(A,104,124)	CKSQYB474K16	
R 925	(A,96,117)	RS1/16SS472J		C 357	(A,109,125)	CKSQYB474K16	
R 926	(A,107,112)	RS1/16SS103J		C 358	(A,111,125)	CKSQYB474K16	
				C 359	(A,113,122)	CKSQYB225K10	
CAPACITORS				C 360	(A,113,125)	CKSQYB225K10	
C 103	(A,19,124)	CKSRYB104K16		C 362	(A,121,114)	CEJQ100M25	
C 106	(A,26,117)	CKSSYB104K16		C 363	(A,86,132)	CKSRYB104K16	
C 151	(A,91,98)	CKSSYB472K16		C 364	(A,82,120)	3 300 uF/16 V CCH1486	
C 152	(A,91,100)	CKSSYB472K16		C 382	(A,114,112)	CEJQ330M16	
C 153	(A,95,96)	CKSRYB105K6R3		C 401	(A,149,69)	CKSSYB122K50	
C 154	(A,95,101)	CKSRYB105K6R3		C 402	(A,146,69)	CKSSYB122K50	
C 155	(A,95,97)	CKSRYB105K6R3		C 412	(A,156,55)	CKSSYB103K16	
C 156	(A,95,100)	CKSRYB105K6R3		C 413	(A,155,65)	CKSSYB102K50	
C 157	(A,94,99)	CKSSYB104K16		C 414	(A,153,58)	CEJQ470M10	
C 158	(A,105,99)	CKSSYB104K16		C 416	(A,155,93)	CKSSYB103K16	
C 159	(A,104,105)	CEJQ220M16		C 417	(A,152,85)	CEJQ101M10	
C 201	(A,121,109)	CEJQ470M16		C 431	(A,166,27)	CEJQ470M10	
C 202	(A,118,97)	CKSSYB104K16		C 432	(A,161,29)	CKSRYB103K16	
C 203	(A,123,100)	CKSRYB224K16		C 433	(A,158,20)	CKSRYB103K16	
C 204	(A,126,80)	CKSRYB474K10		C 434	(A,164,21)	CEJQ4R7M35	
C 205	(A,145,86)	CEJQ470M16		C 451	(A,34,64)	CEJQ101M10	
				C 452	(A,13,73)	CKSSYB103K16	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 454 (A,33,82) 470 uF/16 V
C 463 (A,34,55)
C 464 (A,26,67)

CCH1331
CEJQ220M16
CKSRYB103K16

C 853 (A,27,27)
C 854 (A,37,26)
C 855 (A,28,29)

CKSSYB104K16
CCSSCH331J50
CKSSYB103K25

A

C 465 (A,26,64)
C 466 (A,24,63)
C 501 (A,104,56)
C 551 (A,88,55)
C 552 (A,90,54)

CKSRYB103K16
CKSYB475K16
CKSRYB104K16
CKSSYB104K16
CKSSYB104K16

C 856 (A,34,33)
C 857 (A,34,39) 10 uF
C 891 (A,90,111)
C 892 (A,81,109)
C 893 (A,97,108)

CEJQ470M25
CCG1236
CKSRYB224K16
CKSSYB103K25
CEJQ100M25

C 553 (A,86,63)
C 554 (A,89,65)
C 555 (A,50,68)
C 556 (A,46,61)
C 557 (A,91,66)

CKSSYB104K16
CKSSYB104K16
CKSSYB104K16
CKSSYB104K16
CKSSYB104K16

C 901 (A,32,91)
C 902 (A,13,97)
C 903 (A,14,105)
C 904 (A,22,95) 2 200 uF/16 V
C 911 (A,21,105)

CEJQ101M10
CKSRYB104K16
CKSRYB103K16
CCH1405
CEJQ101M10

B

C 558 (A,97,64)
C 581 (A,74,53)
C 582 (A,77,61)
C 583 (A,81,54)
C 584 (A,82,63)

CEJQ330M16
CCSRCH391J50
CCSRCH391J50
CCSSCH221J50
CCSSCH221J50

C 912 (A,12,112)
C 913 (A,20,113)
C 921 (A,100,117)
C 922 (A,106,114)
C 942 (A,123,124)

CKSRYB103K16
CEJQ101M16
CKSRYB104K25
CKSRYB105K16
CKSRYB473K50

C 585 (A,75,63)
C 586 (A,81,67)
C 587 (A,73,56)
C 588 (A,73,59)
C 589 (A,74,67)

CKSRYB105K10
CEJQ100M50
CKSRYB105K6R3
CKSRYB105K6R3
CEJQ100M50

B**Unit Number : (P710BT)****Unit Number : (P7100BT)****Unit Name : Keyboard Unit****MISCELLANEOUS**

C 590 (A,72,63)
C 593 (A,67,71)
C 601 (A,137,50)
C 602 (A,141,61)
C 603 (A,118,60)

CKSSYB102K10
CEVW100M10
CCSRCH470J50
CKSRYB104K10
CCSSCH120J50

IC 1846 (A,151,7) IC GP1UX31RK
IC 1851 (B,153,23) IC S-1200B33-M5
IC 1855 (B,103,24) IC PEG538A8
IC 1856 (A,89,25) IC(P710BT) PD8182A
(A,89,25) IC(P7100BT) PD8189A9
Q 1801 (B,34,10) Transistor UMD22N

C 605 (A,118,62)
C 606 (A,109,65)
C 607 (A,110,61)
C 609 (A,122,72)
C 610 (A,126,72)

CCSSCH120J50
CEJQ4R7M35
CKSSYB103K16
CKSRYB474K10
CKSRYB474K10

Q 1802 (B,61,32) Digital Transistor DTC143EUA
Q 1803 (B,61,35) Transistor UMD3N
Q 1804 (B,61,13) Digital Transistor DTC143EUA
Q 1805 (A,79,7) Transistor UMD3N
Q 1806 (B,29,10) Digital Transistor DTC143EUA

D

C 611 (A,123,75)
C 651 (A,104,63)
C 702 (A,80,41)
C 704 (A,89,43)
C 705 (A,93,46)

CKSSYB102K50
CKSRYB105K10
CKSSYB104K16
CEJQ220M16
CKSSYB152K50

Q 1807 (B,25,39) Digital Transistor DTC143EUA
Q 1808 (B,42,11) Transistor DTC123JU
D 1801 (A,72,36) LED SMLE12BC7T(NP)
D 1803 (A,5,34) LED SMLE12BC7T(NP)
D 1804 (A,62,13) LED SMLE12BC7T(NP)

C 706 (A,104,40)
C 721 (A,20,45)
C 722 (A,12,42)
C 723 (A,14,54)
C 743 (A,56,85)

CKSRYB474K10
CEJQ101M10
CKSRYB102K50
CKSSYB473K16
CKSRYB105K6R3

D 1805 (A,5,12) LED SMLE12BC7T(NP)
D 1808 (A,72,11) LED SMLE12BC7T(NP)
D 1809 (A,42,34) LED SMLE12BC7T(NP)
D 1810 (A,28,14) LED SMLE12BC7T(NP)
D 1811 (A,16,13) LED SMLE12BC7T(NP)

E

C 744 (A,44,85)
C 745 (A,57,73)
C 746 (A,44,73)
C 747 (A,56,80)
C 781 (A,82,86)

CKSRYB105K6R3
CKSRYB105K6R3
CKSRYB105K6R3
CKSSYB104K10
CKSSYB471K50

D 1812 (A,62,34) LED SMLE12BC7T(NP)
D 1813 (A,16,34) LED SMLE12BC7T(NP)
D 1814 (A,28,33) LED SMLE12BC7T(NP)
D 1815 (A,42,13) LED SMLE12BC7T(NP)
D 1854 (B,116,33) Diode 1SS355

C 782 (A,81,91)
C 784 (A,68,93) 470 uF/16 V
C 785 (A,76,89)
C 786 (A,78,81) 150 uF/6.3 V
C 787 (A,78,91)

CKSSYB103K16
CCH1339
CKSRYB105K16
CCH1804
CKSSYB104K16

X 1854 (B,115,27) Ceramic Resonator 16.000 MHz CSS1616
S 1801 (A,7,39) Push Switch CSG1155
S 1802 (A,64,11) Push Switch CSG1155
S 1803 (A,7,7) Push Switch CSG1155
S 1804 (A,40,36) Push Switch CSG1155

F

C 805 (A,88,13)
C 807 (A,99,16)
C 821 (A,18,58)
C 823 (A,20,54)
C 841 (A,125,27)

CKSSYB102K50
CKSSYB104K16
CEJQ1R0M50
CKSSYB104K16
CKSSYB105K6R3

S 1805 (A,31,8) Push Switch CSG1155
S 1806 (A,19,7) Push Switch CSG1155
S 1807 (A,64,36) Push Switch CSG1155

C 851 (A,22,27)
C 852 (A,26,33)

CKSSYB104K16
CEJQ101M16

DEH-P710BT/XN/UC

1

2

3

4

5		6	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
S 1808	(A,31,39) Push Switch	CSG1155	
S 1809	(A,40,11) Push Switch	CSG1155	
S 1810	(A,19,39) Push Switch	CSG1155	
S 1831	(A,52,23) Switch(MULTI-CONTROL)	CSX1120	
CN1841	(B,132,25) Connector	CKS5207	
CN1886	(A,110,25) Connector	CKS6036	
	OEL Module	MXS8281	

RESISTORS

R 1804	(B,58,35)	RS1/16S561J
R 1806	(B,67,36)	RS1/16S471J
R 1807	(B,59,13)	RS1/16S561J
R 1809	(A,67,9)	RS1/16S471J
R 1813	(B,21,11)	RS1/16S182J
R 1815	(B,22,13)	RS1/16S681J
R 1816	(B,25,13)	RS1/16S471J
R 1818	(B,29,37)	RS1/16S182J
R 1820	(B,24,36)	RS1/16S681J
R 1821	(B,26,36)	RS1/16S471J
R 1822	(A,58,40)	RS1/16S561J
R 1824	(A,8,16)	RS1/16S561J
R 1825	(B,45,11)	RS1/16S181J
R 1827	(A,34,14)	RS1/16S561J
R 1828	(A,22,14)	RS1/16S561J
R 1831	(B,42,35)	RS1/16S103J
R 1832	(B,54,11)	RS1/16S333J
R 1833	(B,51,11)	RS1/16S103J
R 1834	(B,45,34)	RS1/16S102J
R 1835	(B,45,29)	RS1/16S332J
R 1836	(B,37,36)	RS1/16S102J
R 1838	(B,90,38)	RS1/16S103J
R 1839	(B,59,17)	RS1/16S222J
R 1841	(A,142,26)	RS1/16S223J
R 1846	(B,153,10)	RS1/16S101J
R 1848	(B,149,10)	RS1/16S2R2J
R 1851	(B,150,19)	RS1/16S222J
R 1857	(A,133,20)	RS1/16S103J
R 1858	(B,123,14)	RAB4C473J
R 1859	(A,123,34)	RS1/16S473J
R 1860	(B,116,32)	RS1/16S154J
R 1861	(A,97,35)	RS1/16S102J
R 1862	(A,81,34)	RS1/16S102J
R 1863	(A,101,32)	RS1/16S102J
R 1864	(A,121,30)	RS1/16S472J
R 1865	(A,125,30)	RS1/16S103J
R 1866	(A,150,19)	RS1/16S104J
R 1867	(A,131,20)	RS1/16S222J
R 1868	(A,132,18)	RS1/16S222J
R 1869	(B,110,8)	RAB4C473J
R 1870	(B,103,35)	RAB4C102J
R 1871	(B,106,8)	RAB4C473J
R 1872	(B,99,37)	RS1/16S221J
R 1873	(B,96,36)	RAB4C101J
R 1874	(B,73,24)	RAB4C101J
R 1875	(B,103,8)	RS1/16S473J
R 1876	(B,76,18)	RAB4C101J
R 1877	(A,90,15)	RS1/16S101J
R 1878	(B,101,12)	RS1/16S101J
R 1879	(B,81,19)	RAB4C101J

7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 1880	(B,91,26)	RAB4C101J	
R 1881	(B,90,22)	RAB4C101J	
R 1882	(A,96,15)	RAB4C101J	
R 1883	(A,92,15)	RAB4C101J	
R 1884	(A,102,22)	RAB4C101J	
R 1893	(B,112,15)	RS1/16S101J	
R 1894	(A,116,16)	RAB4C101J	
R 1895	(A,113,19)	RS1/16S101J	

CAPACITORS

C 1841	(A,142,29)	CKSRYB104K25
C 1846	(B,151,7)	CKSQYB106K6R3
C 1851	(B,150,23)	CKSRYB104K16
C 1852	(B,153,21)	CKSRYB104K16
C 1854	(B,112,24)	CKSRYB105K16
C 1855	(B,116,30)	CKSRYB104K16
C 1857	(B,89,19)	CKSRYB105K16
C 1858	(A,83,14)	CKSRYB103K50
C 1889	(A,105,18)	CKSQYB105K25
C 1890	(A,116,19)	CKSQYB105K25
C 1891	(A,109,17)	CKSRYB105K16
C 1892	(A,108,14)	CKSRYB104K16



Unit Number : CWX3858(P710BT)

Unit Name : CD Core Unit(\$10.5CODE3H)

Unit Number : CWX3680(P7100BT)

Unit Name : CD Core Unit(\$10.5COMP2-iPod-C3)

MISCELLANEOUS

IC 201	(A,33,34) IC	PE5662A
IC 205	(B,30,23) IC	341S2162
IC 301	(A,64,28) IC	BA5839FP
Q 101	(B,10,57) Transistor	2SA1577
Q 102	(B,21,48) Chip Transistor	2SB1689
Q 201	(B,25,26) Transistor	2SA1577
X 201	(A,42,21) Ceramic Resonator 16.934 MHz	CSS1603
X 205	(B,16,33) Oscillator 48.000 MHz	CSS1753
S 901	(A,42,54) Switch(HOME)	CSN1067
S 903	(B,21,19) Switch(DSCSNS)	CSN1067
S 904	(B,11,40) Switch(12EJ)	CSN1068
S 905	(B,10,24) Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,6,60)	RS1/10SR2R4J
R 102	(B,7,60)	RS1/10SR2R4J
R 103	(B,8,60)	RS1/10SR2R7J
R 104	(B,13,53)	RS1/16SS222J
R 105	(B,22,44)	RS1/16SS102J
R 107	(B,19,51)	RS1/16SS105J
R 203	(A,35,50)	RS1/16S473J
R 204	(A,22,23)	RS1/16SS221J
R 209	(B,28,18)	RS1/16SS103J
R 210	(B,56,9)	RS1/16SS102J
R 214	(B,29,49)	RS1/16SS472J
R 216	(B,31,48)	RS1/16SS472J
R 221	(A,31,50)	RS1/16SS103J
R 222	(A,33,50)	RS1/16SS103J
R 223	(B,36,13)	RS1/16SS473J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 225	(A,30,50)	RS1/16SS103J	C 207	(A,42,24)	CKSRYB104K16
	R 226	(A,29,50)	RS1/16SS393J	C 209	(B,45,35)	CEVW220M6R3
	R 227	(B,28,47)	RS1/16SS562J	C 210	(B,42,28)	CKSSYB104K10
	R 228	(B,28,44)	RS1/16SS122J	C 211	(A,44,27)	CKSSYB104K10
	R 229	(B,26,46)	RS1/16SS472J	C 212	(A,49,28)	CKSRYB104K16
B	R 230	(B,54,21)	RS1/16SS0R0J	C 213	(A,40,45)	CKSSYB104K10
	R 232	(B,28,45)	RS1/16SS122J	C 214	(A,46,28)	CKSSYB104K10
	R 233	(B,20,25)	RS1/16SS103J	C 216	(A,27,50)	CKSSYB332K50
	R 235	(A,20,25)	RS1/16SS473J	C 217	(A,28,47)	CKSSYB104K10
	R 237	(A,44,23)	RS1/16SS151J	C 218	(A,27,49)	CKSSYB473K10
B	R 240	(B,53,13)	RS1/16S473J	C 219	(A,26,46)	CKSSYB104K10
	R 241	(B,54,13)	RS1/16SS103J	C 220	(A,26,47)	CKSSYB182K50
	R 249	(B,30,13)	RS1/16SS103J	C 221	(A,25,45)	CKSSYB104K10
	R 250	(B,29,19)	RS1/16SS101J	C 222	(B,26,45)	CCSSCH560J50
	R 252	(B,32,18)	RS1/16SS101J	C 223	(B,26,47)	CCSSCH4R0C50
■	R 254	(A,15,25)	RS1/16SS104J	C 224	(A,24,43)	CKSSYB104K10
	R 255	(A,16,25)	RS1/16SS104J	C 226	(A,20,41)	CCSSCH680J50
	R 256	(A,17,25)	RS1/16SS104J	C 227	(A,18,41)	CCSSCH470J50
	R 259	(A,13,27)	RS1/16SS0R0J	C 228	(B,18,40)	CKSSYB103K16
	R 261	(A,14,25)	RS1/16SS104J	C 229	(B,19,47)	CKSSYB104K10
C	R 262	(A,20,29)	RS1/16SS0R0J	C 236	(A,21,49)	CKSSYB104K10
	R 263	(A,16,27)	RS1/16SS0R0J	C 239	(B,28,46)	CCSSCH220J50
	R 273	(B,31,18)	RS1/16SS103J	C 240	(A,18,37)	CKSSYB104K10
	R 277	(B,30,17)	RS1/16SS103J	C 243	(B,38,21)	CKSRYB475K10
	R 282	(A,18,29)	RS1/16SS120J	C 250	(A,31,51)	CKSSYB102K50
■	R 283	(A,18,28)	RS1/16SS120J	C 251	(A,33,51)	CKSSYB102K50
	R 284	(B,16,28)	RS1/16SS153J	C 260	(A,18,27)	CKSSYB104K10
	R 285	(B,16,27)	RS1/16SS153J	C 261	(B,13,33)	CCSSCH8R0D50
	R 291	(B,17,42)	RS1/16SS272J	C 262	(B,13,31)	CCSSCH8R0D50
	R 292	(B,36,24)	RS1/16SS272J	C 290	(B,34,25)	CKSSYB104K10
D	R 293	(B,27,26)	RS1/16SS472J	C 293	(B,18,43)	CKSSYB102K50
	R 294	(A,17,31)	RS1/16SS471J	C 294	(B,38,24)	CKSSYB104K10
	R 307	(A,60,34)	RS1/16SS183J	C 303	(A,60,35)	CKSSYB472K25
	R 308	(A,60,37)	RS1/16SS183J	C 304	(A,58,35)	CKSSYB223K16
	R 309	(A,58,34)	RS1/16SS183J	C 307	(A,68,21)	CKSRYB104K16
■	R 310	(A,57,37)	RS1/16SS183J	C 308	(B,61,10)	CKSRYB105K10
	R 502	(A,47,19)	RS1/16SS101J	C 501	(A,55,22)	CKSSYB104K10
	R 503	(B,53,22)	RS1/16SS473J	C 502	(B,47,22)	CKSSYB102K50
	R 504	(B,46,20)	RS1/16SS101J	C 703	(B,44,14)	CCSSCH101J50
	R 505	(B,47,23)	RS1/16SS473J	C 704	(B,44,11)	CKSSYB102K50
■	R 506	(B,41,21)	RS1/16SS101J	C 711	(A,54,30)	CKSSYB104K10
	R 507	(B,41,20)	RS1/16SS101J			
	R 508	(A,45,20)	RS1/16SS101J			
	R 510	(B,38,16)	RS1/16SS473J			
	R 601	(B,49,29)	RS1/16SS0R0J			
E	R 602	(B,49,26)	RS1/16SS0R0J			
	R 606	(B,56,27)	RS1/16S0R0J			
	R 701	(B,43,11)	RS1/16SS221J			
	R 702	(A,24,23)	RS1/16SS221J			
	R 708	(B,42,14)	RS1/16S0R0J			
■	R 712	(B,25,13)	RS1/16SS0R0J			
	R 713	(B,26,14)	RS1/16SS0R0J			

CAPACITORS

F	C 106	(B,12,56)	CKSQYB475K10
	C 202	(A,22,27)	CKSSYB104K10
	C 204	(A,20,23)	CKSSYB103K16
	C 205	(B,38,26)	CKSQYB475K10
	C 206	(A,39,22)	CKSSYB104K10

D**Unit Number : 0A020129****Unit Name : Panel Unit****MISCELLANEOUS**

D 1970	(A,5,19) LED	CL220PGC
D 1973	(B,45,18) Diode	MALSO68X
D 1974	(B,57,6) Diode	MALSO68X
D 1975	(B,51,10) Diode	MALSO68X
D 1976	(B,46,15) Diode	MALSO68X
S 1970	(A,78,40) Push Switch(EJECT)	CSG1174
CN1971	(B,37,9) Connector	CKS5192
CN1972	(A,63,28) Connector	CKS4806

RESISTORS

R 1970	(B,63,10)	RS1/16S101J
--------	-----------	-------------

DEH-P710BT/XN/UC

R 1971 (B,67,10)

RS1/16S101J

CAPACITORS

C 1970 (B,36,18)

CKSRYB104K16

C 1971 (B,59,6)

CKSRYB104K16



Unit Number : 0A020108
Unit Name : Antenna Unit

MISCELLANEOUS

CN1501 (A,17,5) Connector

CKS5749

JA1501 (B,9,9) Antenna

CTX1111

Miscellaneous Parts List

M 1 Pickup Unit(P10.5)(Service)

CXX1942

M 1 Motor Unit(SPINDLE)

CXC7134

M 2 Motor Unit(LOADING/CARRIAGE)

CXC4026