


KDC-116S/1018


EXPLODED VIEW (CD MECHANISM)

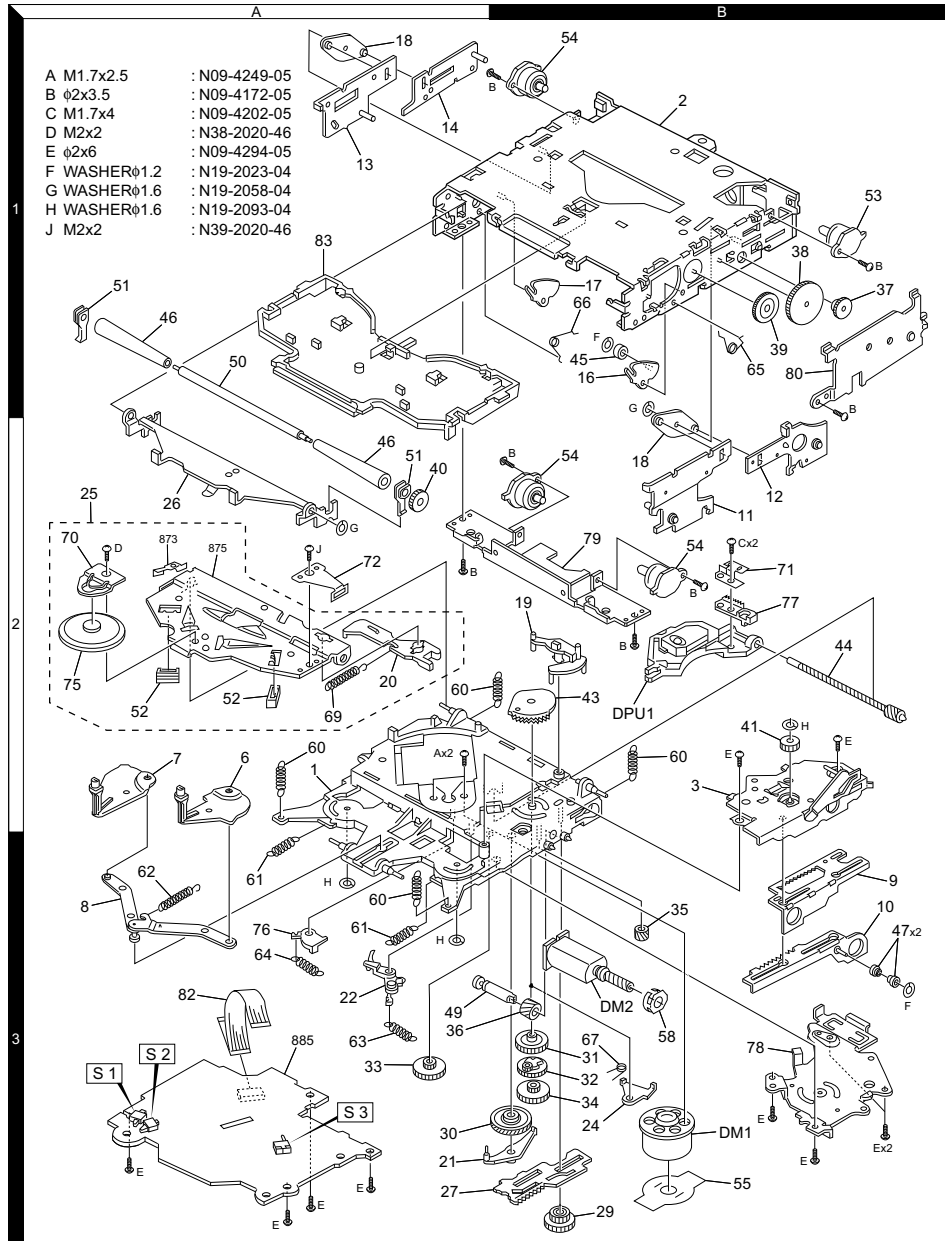

Parts with exploded numbers larger than 700 are not supplied.

KDC-116S/1018

EXPLODED VIEW (UNIT)

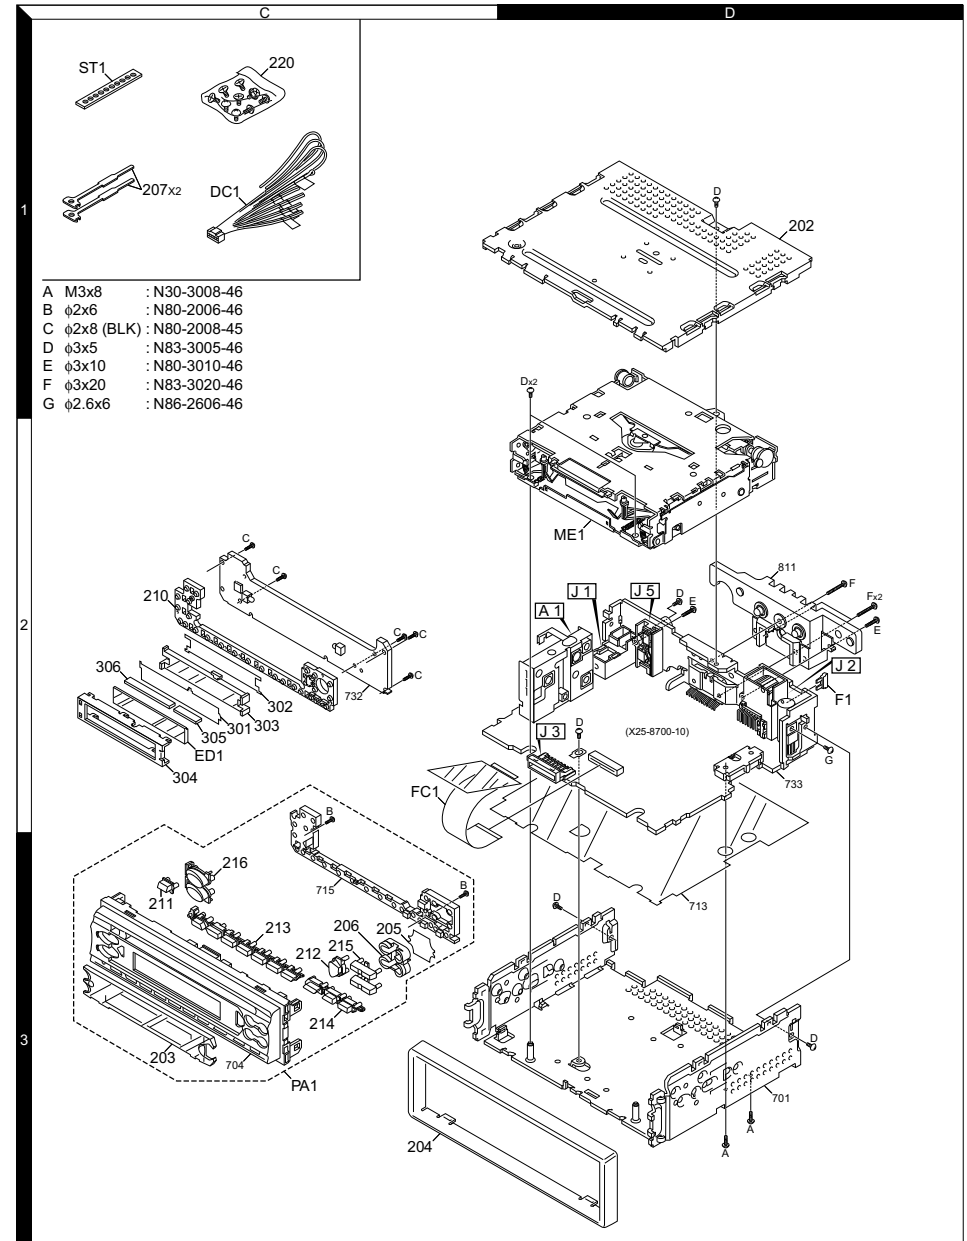

Parts with exploded numbers larger than 700 are not supplied.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-116S/1018

SWITCH UNIT(X13-9880-14)

ELECTRIC UNIT(X25-8700-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-116S/1018					
202	1D		A52-0783-02	TOP PLATE	
PA1	3C	*	A64-2225-02	PANEL ASSY	K
PA1	3C	*	A64-2226-02	PANEL ASSY	M1
203	3C	*	B10-4014-01	FRONT GLASS	K
203	3C	*	B10-4015-01	FRONT GLASS	M1
204	1C		B07-3001-02	ESCUTCHEON	
205	3C		B11-1345-04	OPTICAL DIFFUSER	
206	3C		B19-2076-03	LIGHTING BOARD	
-			B46-0100-50	WARRANTY CARD	
-			B58-1344-04	CAUTION CARD	K
-		*	B64-1830-00	INSTRUCTION MANUAL	K
-		*	B64-1831-00	INSTRUCTION MANUAL E,T	M1
-		*	B64-1832-00	INSTRUCTION MANUAL A	M1
207	1C		D10-4589-04	LEVER	
210	2C		E29-1830-02	CONDUCTIVE RUBBER	
DC1	1C		E30-4783-05	DC CORD	K
DC1	1C		E30-4784-05	DC CORD	M1
FC1	2C		E39-0343-05	FLAT CABLE	
F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)	
F1	2D		F52-0011-05	FUSE(MINI BLADE TYPE)	
-			H10-4740-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-1915-03	ITEM CARTON CASE	K
-		*	H54-1916-03	ITEM CARTON CASE	M1
ST1	1C		J54-0606-04	STAY	
211	3C		K24-3653-04	KNOB EJ	
212	3C		K24-3652-04	KNOB Q	
213	3C		K25-1253-03	KNOB 1-6	
214	3C		K25-1254-03	KNOB CLK	
215	3C		K25-1255-03	KNOB FM/AM	
216	3C		K25-1256-03	KNOB VOL	
220	1C		N99-1632-05	SCREW SET	
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	3C		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
ME1	2C		X92-4130-00	MECHANISM ASSY	
SWITCH UNIT (X13-9880-14)					
301	3C		B11-1327-04	OPTICAL DIFFUSER	
302	3C		B11-1328-04	REFLECTION SHEET	
303	3C		B19-2065-03	LIGHTING BOARD	
D1-14			B30-1533-05	LED(1608,PG)	
D17			B30-1533-05	LED(1608,PG)	
D20,21			B30-1533-05	LED(1608,PG)	
D24,25			B30-1533-05	LED(1608,PG)	
ED1			B38-1060-05	LIQUID CRYSTAL	
PL1,2			B30-1485-05	LAMP (5.5V 0.125A)	
PL1,2			B30-1543-05	LAMP (GRN,5.5V,0.12)	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C1			CK73GB1H102K	CHIP C 1000PF K	
C2,3			CK73GB1E473K	CHIP C 0.047UF K	
C2,3			CK73GB1H473K	CHIP C 0.047UF K	
C4			CK73GB1H103K	CHIP C 0.010UF K	
304	3C		E29-1829-04	CONDUCTIVE RUBBER	
305	3C		E29-1834-04	CONDUCTIVE RUBBER	
J1			E59-0828-05	RECTANGULAR PLUG	
CP1,2			R90-0724-05	MULTI-COMP 1K X4	
R2-4			RK73FB2A471J	CHIP R 470 J 1/10W	
R5			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R8			RK73GB1J563J	CHIP R 56K J 1/16W	
R9			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R10			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R14-16			RK73EB2B331J	CHIP R 330 J 1/8W	
R17,18			RK73EB2B511J	CHIP R 510 J 1/8W	
R19			RK73EB2B331J	CHIP R 330 J 1/8W	
R21			RK73EB2B331J	CHIP R 330 J 1/8W	
IC1			LC75853NE	MOS-IC	
Q1			DTA114EK	DIGITAL TRANSISTOR	
Q1			KRA102S	DIGITAL TRANSISTOR	
Q1			UN2111	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X25-8700-XX)					
C1			C90-2853-05	ELECTRO 4700UF 16WV	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H103K	CHIP C 0.010UF K	
C50			CE04CW1E100M	ELECTRO 10UF 25WV	K
C50,51			CE04CW1E100M	ELECTRO 10UF 25WV	M1
C52-54			C90-2597-05	ELECTRO 10UF 16WV	
C55			CE04CW1E100M	ELECTRO 10UF 25WV	
C56			CE04CW1H100M	ELECTRO 10UF 50WV	
C57			C90-2926-05	ELECTRO 220UF 16WV	
C63			CE04CW1C220M	ELECTRO 22UF 16WV	
C101			CE04CW0J101M	ELECTRO 100UF 6.3WV	
C102			CK73GB1H103K	CHIP C 0.010UF K	
C103			CK73GB1C104K	CHIP C 0.10UF K	
C103			CK73GB1H104K	CHIP C 0.10UF K	
C104,105			CC73GCH1H150J	CHIP C 15PF J	
C106			CK73GB1H472K	CHIP C 4700PF K	
C142			CK73GB1C104K	CHIP C 0.10UF K	
C142			CK73GB1H104K	CHIP C 0.10UF K	
C201			CE04CW1A470M	ELECTRO 47UF 10WV	
C202			CK73GB1H103K	CHIP C 0.010UF K	
C203-205			C90-2610-05	ELECTRO 2.2UF 50WV	
C206			CK73GB1H153K	CHIP C 0.015UF K	
C207			CK73GB1A474K	CHIP C 0.47UF K	
C208,209			CK73GB1C104K	CHIP C 0.10UF K	
C208,209			CK73GB1H104K	CHIP C 0.10UF K	
C210			CK73GB1E333K	CHIP C 0.033UF K	
C210			CK73GB1H333K	CHIP C 0.033UF K	
C211			CC73GCH1H151J	CHIP C 150PF J	
C223,224			C90-2597-05	ELECTRO 10UF 16WV	
C225			CK73GB1H103K	CHIP C 0.010UF K	

K: KDC-116S M1: KDC-1018

⚠ indicates safety critical components.

KDC-116S/1018

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C251-254 C255 C256 C257 C258			C90-5296-05 C90-2608-05 CE04CW1A101M C90-2608-05 C90-2935-05	NP-ELECT 0.22UF 50WV ELECTRO 1.0UF 50WV ELECTRO 100UF 10WV ELECTRO 1.0UF 50WV ELECTRO 1.0UF 50WV	
C301 C302,303 C304 C305 C306			CE04CW1A101M CK73GB1H103K CE04CW1A101M CK73GB1H103K C90-2594-05	ELECTRO 100UF 10WV CHIP C 0.010UF K ELECTRO 100UF 10WV CHIP C 0.010UF K ELECTRO 10UF 10WV	
C307			CK73GB1H103K	CHIP C 0.010UF K	
CN1 J1 J2 J3 J5			E40-9550-05 E04-0312-05 E58-0863-15 E58-0880-05 E63-0852-05	FLAT CABLE CONNECTOR RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE RECTANGULAR RECEPTACLE PIN JACK	
P1			E23-0745-05	TERMINAL	
L1 L4 L101 L201 L303-306			L33-1170-05 L33-1123-05 L40-4795-91 L40-4795-91 L40-4795-91	CHOKE COIL ASSY LINE FILTER COIL SMALL FIXED INDUCTOR(4.7UH,J) SMALL FIXED INDUCTOR(4.7UH,J) SMALL FIXED INDUCTOR(4.7UH,J)	
X1			L77-1167-05	CRYSTAL RESONATOR(4.19M)	
D E F G	2D 2D 2D 2D		N83-3005-46 N80-3010-46 N83-3020-46 N86-2606-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
CP1 CP2 CP3 R10 R11			R90-1056-05 R90-1047-05 R90-1046-05 RK73FB2A303J RK73GB1J103J	MULTIPLE RESISTOR MULTIPLE RESISTOR MULTIPLE RESISTOR CHIP R 30K J 1/10W CHIP R 10K J 1/16W	
R12 R20 R22 R23 R51			RK73GB1J104J RD14DB2H332J RK73GB1J103J RK73GB1J104J RK73GB1J473J	CHIP R 100K J 1/16W SMALL-RD 3.3K J 1/2W CHIP R 10K J 1/16W CHIP R 100K J 1/16W CHIP R 47K J 1/16W	
R57 R58 R67 R71 R72			RK73FB2A152J RK73GB1J472J RK73GB1J103J RK73FB2A823J RK73FB2A363J	CHIP R 1.5K J 1/10W CHIP R 4.7K J 1/16W CHIP R 10K J 1/16W CHIP R 82K J 1/10W CHIP R 36K J 1/10W	
R73 R103,104 R105 R106 R107,108			RK73GB1J104J RK73GB1J222J RK73GB1J471J RK73GB1J104J RK73GB1J222J	CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W CHIP R 470 J 1/16W CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W	
R110 R113,114 R115 R116 R117			RK73GB1J472J RK73GB1J473J RK73GB1J102J RK73GB1J103J RK73GB1J102J	CHIP R 4.7K J 1/16W CHIP R 47K J 1/16W CHIP R 1.0K J 1/16W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W	

ELECTRIC UNIT(X25-8700-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R118 R119 R121,122 R125 R126			RK73GB1J103J RK73GB1J473J RK73GB1J222J RK73GB1J102J RK73GB1J104J	CHIP R 10K J 1/16W CHIP R 47K J 1/16W CHIP R 2.2K J 1/16W CHIP R 1.0K J 1/16W CHIP R 100K J 1/16W	
R127 R128 R129,130 R131 R132			RK73GB1J222J RK73GB1J225J RK73GB1J222J RK73GB1J682J RK73GB1J223J	CHIP R 2.2K J 1/16W CHIP R 2.2M J 1/16W CHIP R 2.2K J 1/16W CHIP R 6.8K J 1/16W CHIP R 22K J 1/16W	
R133 R136 R136,137 R138,139 R139			RK73GB1J164J RK73GB1J473J RK73GB1J473J RK73GB1J473J RK73GB1J473J	CHIP R 160K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W	K M1 K M1
R143 R144 R201 R202,203 R223,224			RK73FB2A222J RK73GB1J104J RK73GB1J272J RK73GB1J472J RK73FB2A271J	CHIP R 2.2K J 1/10W CHIP R 100K J 1/16W CHIP R 2.7K J 1/16W CHIP R 4.7K J 1/16W CHIP R 270 J 1/10W	
R251 R254 R255 R256 R257			RK73GB1J472J RK73GB1J472J RK73GB1J333J RK73FB2A102J RK73GB1J362J	CHIP R 4.7K J 1/16W CHIP R 4.7K J 1/16W CHIP R 33K J 1/16W CHIP R 1.0K J 1/10W CHIP R 3.6K J 1/16W	
R258 R260 R261 R263 R264			RK73GB1J101J RK73GB1J751J RK73GB1J431J RK73GB1J184J RK73GB1J473J	CHIP R 100 J 1/16W CHIP R 750 J 1/16W CHIP R 430 J 1/16W CHIP R 180K J 1/16W CHIP R 47K J 1/16W	
R415 W151 W152 W155 W156,157			RK73GB1J104J R92-2053-05 R92-1252-05 R92-1252-05 R92-2053-05	CHIP R 100K J 1/16W CHIP R 0 J 1/8W CHIP R 0 OHM CHIP R 0 OHM CHIP R 0 J 1/8W	
W158,159 W160-165 W167-169			R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM CHIP R 0 J 1/8W CHIP R 0 OHM	
D1 D2 D2,3 D4 D4			S2V20*A 1SS133 1SS133 IMSA-6801 SA-C2012-101TB	DIODE DIODE DIODE SURGE ABSORBER SURGE ABSORBER	K M1
D10 D11 D12-14 D12-14 D12-14			MA4068(N)-M D1F60 AM01Z DSM1SD2 ERA15-02	ZENER DIODE DIODE DIODE DIODE DIODE	M1 M1 M1 M1
D13,14 D13,14 D13,14 D20 D40			AM01Z DSM1SD2 ERA15-02 MA4068(N)-M 1SS133	DIODE DIODE DIODE ZENER DIODE DIODE	K K K
D50			1SS133	DIODE	

K: KDC-116S M1: KDC-1018

 indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT(X25-8700-XX)

CD PLAYER UNIT(X32-5010-00)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D51			HZS9A1L	ZENER DIODE	
D51			MA4082(N)-L	ZENER DIODE	
D70			MA4068(N)-M	ZENER DIODE	
D101			1SS133	DIODE	
D103,104			1SS133	DIODE	
D201,202			MA4068(N)-M	ZENER DIODE	
D251-253			1SS133	DIODE	
IC1			UPD780058GC233	MI-COM IC	
IC2			TDA7407D	ANALOGUE IC	
IC4			TDA7386	ANALOGUE IC	
IC7			BA4911-V4	ANALOGUE IC	
IC8			HD74HC27FP	MOS-IC	
IC11			S-80830ANNP	MOS-IC	
IC12			BR24C01AF	MEMORY IC	
IC12			BR24C01AF-W	MEMORY IC	
IC12			M24C01-WMN6T	MEMORY IC	
IC12			S-24C01B	MEMORY IC	
Q10			2SC4081	TRANSISTOR	
Q10			2SD1819A	TRANSISTOR	
Q20			2SC4081	TRANSISTOR	
Q20			2SD1819A	TRANSISTOR	
Q40			DTA124EUA	DIGITAL TRANSISTOR	
Q40			UN5112	DIGITAL TRANSISTOR	
Q50			2SA1036K	TRANSISTOR	
Q51			UMC2N	TRANSISTOR	
Q53			UMC2N	TRANSISTOR	
Q55			2SD2375	TRANSISTOR	
Q55			2SD2396	TRANSISTOR	
Q70			2SC4081	TRANSISTOR	
Q70			2SD1819A	TRANSISTOR	
Q223,224			DTC143TUA	DIGITAL TRANSISTOR	
Q223,224			UN5216	DIGITAL TRANSISTOR	
Q251			DTC114YUA	DIGITAL TRANSISTOR	
Q251			UN5214	DIGITAL TRANSISTOR	
TH1			PTH9C42BE471Q	POSITIVE RESISTOR	
A1	2D		X86-3300-10	TUNER UNIT	
CD PLAYER UNIT (X32-5010-00)					
C1,2			CK73FB1C105K	CHIP C	1.0UF K
C3			CK73FB0J475K	CHIP C	4.7UF K
C4			C92-0566-05	CHIP-TAN	10UF 6.3WV
C5			CC73GCH1H330J	CHIP C	33PF J
C6			CC73GCH1H030C	CHIP C	3.0PF C
C7			CK73GB1C104K	CHIP C	0.10UF K
C8			CK73FB1C105K	CHIP C	1.0UF K
C10			CK73GB1H472K	CHIP C	4700PF K
C11			CK73GB1H682K	CHIP C	6800PF K
C12			CK73GB1H332K	CHIP C	3300PF K
C13			CK73GB1C333K	CHIP C	0.033UF K
C14			CK73GB1H472K	CHIP C	4700PF K
C15			CK73GB1C473K	CHIP C	0.047UF K
C16			CC73GCH1H221J	CHIP C	220PF J
C17			CK73GB1H472K	CHIP C	4700PF K
C18			CC73GCH1H471J	CHIP C	470PF J
C19,20			CK73GB1C104K	CHIP C	0.10UF K

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C21			CK73FB0J475K	CHIP C	4.7UF K
C23			CK73GB1H102K	CHIP C	1000PF K
C24			CK73GB1E223K	CHIP C	0.022UF K
C25			CK73GB1H153K	CHIP C	0.015UF K
C26			CK73GB0J105K	CHIP C	1.0UF K
C28			CK73GB0J105K	CHIP C	1.0UF K
C29			CK73GB1C104K	CHIP C	0.10UF K
C33			CK73GB1C104K	CHIP C	0.10UF K
C35			CK73GB1C104K	CHIP C	0.10UF K
C41			CK73EB1C225K	CHIP C	2.2UF K
C43			CK73GB1H153K	CHIP C	0.015UF K
C45			CK73GB1H153K	CHIP C	0.015UF K
C46			CK73GB1C473K	CHIP C	0.047UF K
C55			CK73GB1C104K	CHIP C	0.10UF K
C68			CK73GB1C104K	CHIP C	0.10UF K
C71,72			CK73GB1H471K	CHIP C	470PF K
C77,78			CC73GCH1H680J	CHIP C	68PF J
C79,80			CK73GB1H222K	CHIP C	2200PF K
C85			CK73GB1C104K	CHIP C	0.10UF K
C89			CK73GB1H222K	CHIP C	2200PF K
C90			CK73GB1C104K	CHIP C	0.10UF K
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN2			E40-9339-05	FLAT CABLE CONNECTOR	
CN2			E41-0036-05	FLAT CABLE CONNECTOR	
CN2			E41-0129-05	FLAT CABLE CONNECTOR	
X1			L78-0572-05	RESONATOR	(16.93MHZ)
CP1-3			R90-1019-05	MULTI-COMP	100 X 2
R3			RK73GB1J272J	CHIP R	2.7K J 1/16W
R5			RK73GB1J151J	CHIP R	150 J 1/16W
R6			RK73GB1J272J	CHIP R	2.7K J 1/16W
R8			RK73EB2B4R7J	CHIP R	4.7 J 1/8W
R9			RK73EB2B100J	CHIP R	10 J 1/8W
R10,11			RK73GB1J682J	CHIP R	6.8K J 1/16W
R12			RK73GB1J432J	CHIP R	4.3K J 1/16W
R15			RK73GB1J824J	CHIP R	820K J 1/16W
R16			RK73GB1J223J	CHIP R	22K J 1/16W
R17			RK73GB1J363J	CHIP R	36K J 1/16W
R18			RK73GB1J392J	CHIP R	3.9K J 1/16W
R19			RK73GB1J333J	CHIP R	33K J 1/16W
R20			RK73GB1J104J	CHIP R	100K J 1/16W
R21			RK73GB1J334J	CHIP R	330K J 1/16W
R32			RK73GB1J104J	CHIP R	100K J 1/16W
R34			RK73GB1J683J	CHIP R	68K J 1/16W
R36			RK73GB1J151J	CHIP R	150 J 1/16W
R37			RK73GB1J471J	CHIP R	470 J 1/16W
R38			RK73GB1J224J	CHIP R	220K J 1/16W
R46			RK73GB1J102J	CHIP R	1.0K J 1/16W
R47			RK73GB1J103J	CHIP R	10K J 1/16W
R49			RK73GB1J472J	CHIP R	4.7K J 1/16W
R52			RK73GB1J104J	CHIP R	100K J 1/16W
R54			RK73GB1J104J	CHIP R	100K J 1/16W
R71			RK73GB1J103J	CHIP R	10K J 1/16W
R72			RK73GB1J102J	CHIP R	1.0K J 1/16W

K: KDC-116S M1: KDC-1018

⚠ indicates safety critical components.

KDC-116S/1018

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

CD PLAYER UNIT(X32-5010-00)

MECHANISM ASSY(X92-4130-00)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R73			RK73GB1J473J	CHIP R 47K J 1/16W	
R75			RK73GB1J333J	CHIP R 33K J 1/16W	
R76			RK73GB1J622J	CHIP R 6.2K J 1/16W	
R77			RK73GB1J563J	CHIP R 56K J 1/16W	
R78			RK73GB1J243J	CHIP R 24K J 1/16W	
R81			RK73GB1J333J	CHIP R 33K J 1/16W	
R82			RK73GB1J123J	CHIP R 12K J 1/16W	
R83			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R102			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R104			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R107,108			RK73FB2A331J	CHIP R 330 J 1/10W	
R117,118			RK73FB2A203J	CHIP R 20K J 1/10W	
R121,122			RK73FB2A203J	CHIP R 20K J 1/10W	
R125,126			RK73FB2A203J	CHIP R 20K J 1/10W	
R202			RK73GB1J104J	CHIP R 100K J 1/16W	
R214			RK73GB1J104J	CHIP R 100K J 1/16W	
R218			RK73GB1J473J	CHIP R 47K J 1/16W	
R233			RK73GB1J622J	CHIP R 6.2K J 1/16W	
R234			RK73GB1J103J	CHIP R 10K J 1/16W	
R238			RK73FB2A201J	CHIP R 200 J 1/10W	
W17			R92-2053-05	CHIP R 0 J 1/8W	
S1,2			S68-0838-05	PUSH SWITCH	
S3			S68-0859-05	PUSH SWITCH	
D1,2			DAN202U	DIODE	
D3			DA204U	DIODE	
D4			DAN202U	DIODE	
D5			MA8051-L	ZENER DIODE	
IC1			AN22000AA	ANALOGUE IC	
IC2			MN662774KG1	MOS-IC	
IC4			BA5917AFP	ANALOGUE IC	
IC6			NJM4565MD	IC(OP AMP X2)	
Q1			MCH6101	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3			DTA143XUA	DIGITAL TRANSISTOR	
Q4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	
MECHANISM ASSY (X92-4130-00)					
1	2A		A10-4482-01	CHASSIS	
2	1B		A10-4225-33	CHASSIS CALKING ASSY	
3	2B		A11-0915-43	SUB CHASSIS CALKING ASSY	
6	2A		D10-4306-04	ARM ASSY	
7	2A		D10-4305-04	ARM ASSY	
8	3A		D10-3087-44	ARM ASSY	
9	3B		D10-3092-03	SLIDER	
10	3B		D10-3093-04	SLIDER ASSY	
11	2B		D10-3095-04	SLIDER ASSY	
12	2B		D10-3096-04	SLIDER ASSY	
13	1A		D10-3099-24	SLIDER ASSY	
14	1A		D10-3100-04	SLIDER ASSY	
16	1B		D10-4004-04	LEVER ASSY	
17	1B		D10-4006-04	LEVER	
18	1A		D10-4007-04	LEVER	
19	2B		D10-4008-14	LEVER	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
20	2A		D10-4009-23	ARM	
21	3A		D10-4010-04	LEVER	
22	3A		D10-4307-04	LEVER ASSY	
24	3B		D10-4050-04	ARM	
25	3A		D10-4038-23	ARM ASSY	
26	2A		D10-4123-24	LEVER ASSY	
27	3A		D13-1442-03	RACK (GEAR)	
29	3B		D13-1231-04	GEAR	
30	3A		D13-1240-04	GEAR	
31	3B		D13-1233-04	GEAR	
32	3B		D13-1234-14	GEAR ASSY	
33	3A		D13-1441-03	GEAR	
34	3B		D13-1232-04	GEAR	
35	3B		D13-1241-04	GEAR	
36	3A		D13-1242-04	GEAR	
37	1B		D13-1243-04	GEAR	
38	1B		D13-1244-04	GEAR	
39	1B		D13-1245-14	GEAR	
40	2A		D13-1246-04	GEAR	
41	2B		D13-1247-04	GEAR	
43	2B		D13-1249-04	GEAR ASSY	
44	2B		D13-1341-04	GEAR ASSY (LEAD SCREW)	
45	1B		D14-0668-04	ROLLER	
46	2A		D14-0670-04	ROLLER	
47	3B		D14-0674-04	ROLLER	
49	3A		D21-2228-14	SHAFT	
50	1A		D21-2229-04	SHAFT	
51	1A		D23-0925-24	RETAINER	
52	2A		D32-0614-04	STOPPER	
53	1B		D39-0223-05	DAMPER (YELLOW)	
54	2B		D39-0224-05	DAMPER (BLACK)	
55	3B		F09-1246-04	SHEET	
58	3B		F09-1266-14	SHEET	
60	2A		G01-2770-04	EXTENSION SPRING	
61	3A		G01-2771-04	EXTENSION SPRING	
62	3A		G01-2772-24	EXTENSION SPRING	
63	3A		G01-2773-14	EXTENSION SPRING	
64	3A		G01-2774-34	EXTENSION SPRING	
65	1B		G01-2775-04	TORSION COIL SPRING	
66	1B		G01-2776-14	TORSION COIL SPRING	
67	3B		G01-2777-24	TORSION COIL SPRING	
69	2A		G01-2844-04	EXTENSION SPRING	
70	2A		G02-1231-04	FLAT SPRING	
71	2B		G02-1232-24	FLAT SPRING	
72	2A		G02-1241-24	FLAT SPRING	
75	2A		J11-0613-13	CLAMPER	
76	3A		J19-4678-13	HOLDER	
77	2B		J19-4679-24	HOLDER	
78	3B		J21-7684-13	MOUNTING HARDWARE	
79	2B		J21-7686-13	MOUNTING HARDWARE	
80	1B		J21-7690-03	MOUNTING HARDWARE	
82	3A *		J84-0107-05	FLEXIBLE PRINTED WIRING BOARD	
83	1A		J90-0757-22	GUIDE	

K: KDC-116S **M1:** KDC-1018

 indicates safety critical components.

PARTS LIST

Teile ohne Parts No. werden nicht geliefert.

Ref.No.	Add	New	Parts No.	Description	Destination

25