


EXPLODED VIEW (CD MECHANISM)

- A : N09-6108-15
B : N09-6426-15
C : N09-6735-05
D : N09-6737-15
E : N09-6738-15
F : N19-2335-14
G : N35-2003-48
H : N39-1720-48

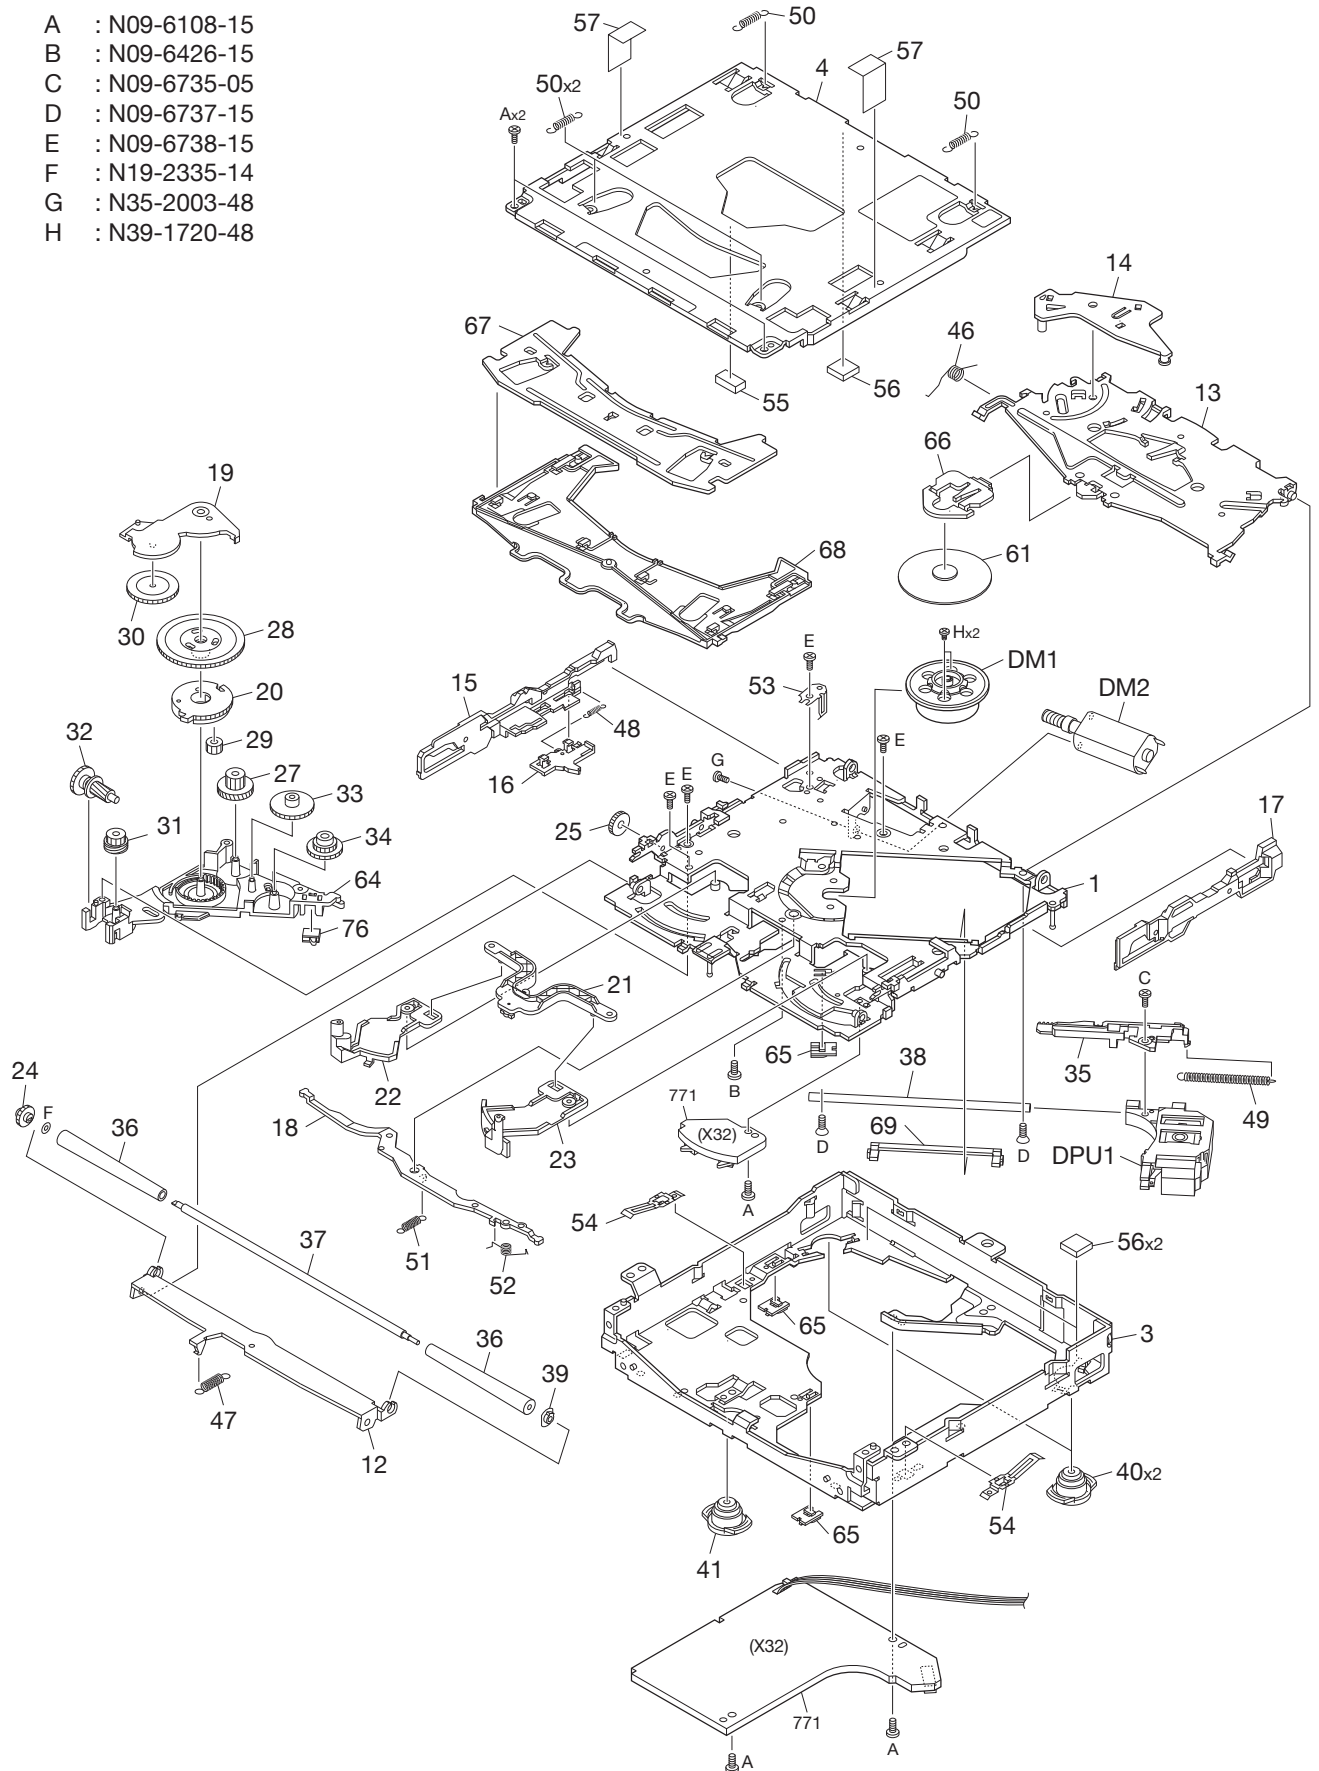

Parts with the exploded numbers larger than 700 are not supplied.



34

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-BT40U/BT645U/U546BT					
201	1C		A02-2755-23	PLASTIC CABINET ASSY	M1
204	2C	*	A22-3261-03	SUB PANEL ASSY	
205	3D		A40-1371-11	BOTTOM PLATE	
206	2C	*	A46-1902-01	REAR COVER	
207	1D		A52-1126-01	TOP COVER	
PA1	3C	*	A64-5013-02	PANEL ASSY	K
PA1	3C	*	A64-5015-02	PANEL ASSY	E2
PA1	3C	*	A64-5017-02	PANEL ASSY	M1
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	KM1
-		*	B64-4534-00	INST. MANUAL (ENG.FRE.SPA.)	K
-		*	B64-4535-00	INST. MANUAL (ENGLISH)	E2
-		*	B64-4536-00	INST. MANUAL (FRE.GER.DUT.)	E2
-		*	B64-4537-00	INST. MANUAL (ITA.SPA.POR.)	E2
-		*	B64-4538-00	INST. MANUAL (RUSSIAN)	E2
-		*	B64-4540-00	INST. MANUAL (ENG.S-CHI.ARA.)	M1
211	1C		B07-3271-01	ESCUTCHEON	
212	3C	*	B10-5336-01	FRONT GLASS	K
212	3C	*	B10-5338-01	FRONT GLASS	E2
212	3C	*	B10-5340-01	FRONT GLASS	M1
213	3C		B07-3326-03	ESCUTCHEON	M1
213	3C		B07-3329-03	ESCUTCHEON	E2
213	3C	*	B07-3339-03	ESCUTCHEON	K
221	2C		D10-7099-03	LEVER	
222	2C		D10-7098-03	LEVER	
223	1C		D10-7106-04	LEVER	
225	3C		E29-2153-02	CONDUCTIVE RUBBER	
227	3D		E29-2154-04	CONDUCTIVE RUBBER	
△ DC1	1C		E30-6933-05	DC CORD	KM1
△ DC2	1C		E30-6934-05	DC CORD	E2
FC1	2D	*	E39-1104-05	FLAT CABLE	
230	3C		F07-2219-03	COVER	
231	2D		F11-1874-03	SHIELDING COVER	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-4750-04	TORSION COIL SPRING	
237	2C		G01-4749-04	COMPRESSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING	
-		*	H54-4736-03	ITEM CARTON CASE	K
-		*	H54-4739-03	ITEM CARTON CASE	E2
-		*	H54-4740-03	ITEM CARTON CASE	M1
241	3C		J19-7287-11	HOLDER	
243	1C		J22-0789-03	MOUNTING HARDWARE ASSY	
251	3C		K24-5041-04	PUSH KNOB (EJECT)	
252	3C		K25-1983-03	PUSH KNOB (SRC/BAND)	
255	3C		K24-5043-03	PUSH KNOB (SEARCH)	
257	3C		K24-5042-04	PUSH KNOB (RELEASE)	
258	3C		K25-1982-02	PUSH KNOB (PRESET)	
261	3C		K28-0337-04	KNOB ASSY (VOL)	
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	KM1
264	1C		N99-1757-15	SCREW SET	KM1
A	3D		N09-6758-05	TAPTITE SCREW	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
B	3D		N35-2610-48	BINDING HEAD MACHINE SCREW	
C	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
E	2D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
F	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
265	2C	*	T91-1007-05	MICROPHONE ASSY	
266	1C		W01-1710-05	CARRYING CASE	KE2
268	3D	*	X34-6620-10	ELECTRIC UNIT (for IC51)	K
268	3D	*	X34-6620-21	ELECTRIC UNIT (for IC51)	M1
268	3D	*	X34-6622-72	ELECTRIC UNIT (for IC51)	E2
DME1	1D	*	X92-6360-04	MECHANISM ASSY (DXM-9B34W)	
SWITCH UNIT (X16-678x-xx)					
D51			B30-1566-05	LED (1608,RED)	
D56 -62			B30-1779-05	LED (1608,SR)	E2
D56 -62			B30-1781-05	LED (1608,BLUE)	KM1
D65			B30-1566-05	LED (1608,RED)	E2
D65			B30-1781-05	LED (1608,BLUE)	KM1
D84 -86			B30-1779-05	LED (1608,SR)	E2
D84 -86			B30-1781-05	LED (1608,BLUE)	KM1
C10 ,11			CK73GB1C104K	CHIP C 0.10UF	K
C12			CK73GB1H103K	CHIP C 0.010UF	K
C13			CK73GB1H102K	CHIP C 1000PF	K
C21			CK73GB1A105K	CHIP C 1.0UF	K
C83			CK73GB1H472K	CHIP C 4700PF	K
CN1			E41-1486-05	PIN ASSY	
J2			E11-0669-05	3.5D PHONE JACK	
J3			E58-1129-05	RECTANGULAR RECEPTACLE	
J4			E59-0855-05	RECTANGULAR PLUG	
CP11			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP13			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J101J	CHIP-COM 100 J 1/16W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	
R15			RK73GB2A101J	CHIP R 100 J 1/10W	
R22			RK73GB2A101J	CHIP R 100 J 1/10W	
R31 ,32			RK73EB2E150J	CHIP R 15 J 1/4W	
R51			RK73EB2E821J	CHIP R 820 J 1/4W	E2
R51 ,52			RK73EB2E821J	CHIP R 820 J 1/4W	KM1
R52			RK73EB2E621J	CHIP R 620 J 1/4W	E2
R53			RK73EB2E152J	CHIP R 1.5K J 1/4W	KM1
R53			RK73EB2E821J	CHIP R 820 J 1/4W	E2
R54 -57			RK73EB2E621J	CHIP R 620 J 1/4W	E2
R54 -57			RK73EB2E821J	CHIP R 820 J 1/4W	KM1
R81 ,82			RK73GB2A220J	CHIP R 22 J 1/10W	
S1			T99-0484-05	ROTARY ENCODER	
D9 ,10		*	RKZ4.7KG(B2)	ZENER DIODE	
D79			DA204U	DIODE	
D81			HZM6.8ZMWA-E	ZENER DIODE	
D82			DA204U	DIODE	
ED1			3-BT-266INK	FLUORESCENT INDICATOR TUBE	

K: KDC-BT645U M1: KDC-U546BT E2: KDC-BT40U

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-678x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
IC2 Q20 Q21 -23			PIC95603 RT1N441M-T111 RT1P237M-T111	ANALOGUE IC TRANSISTOR TRANSISTOR	
CD PLAYER UNIT (X32-6260-01) IN CD MECHA					
C1 ,2 C3 C4 -7 C9 C11			CK73GB1A105K CK73GB1A474K CK73GB1A105K CK73GB1C104K CK73GB1H153K	CHIP C 1.0UF K CHIP C 0.47UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.015UF K	
C12 C21 C22 C23 C24 ,25			CK73GB1H103K CK73GB1H103K CC73GCH1H220J CC73GCH1H180J CK73GB1H103K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 22PF J CHIP C 18PF J CHIP C 0.010UF K	
C26 C27 C28 C29 C30 -33			CK73FB0J106K CK73GB1A105K CK73GB1H103K CK73FB0J106K CK73GB1H103K	CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K	
C34 ,35 C36 C37 C38 C51			CC73GCH1H150J CK73GB1H103K CK73GB1A105K CK73GB1H103K CK73GB1C104K	CHIP C 15PF J CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C52 C53 C54 C55 C56			CK73GB1H222K CK73FB1C105K CK73GB1H103K CK73GB1H332K CK73GB1C104K	CHIP C 2200PF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 3300PF K CHIP C 0.10UF K	
C57 C58 C59 C61 C62			CK73GB1H153K CK73GB1C104K CC73GCH1H680J CK73GB1C104K CK73FB0J106K	CHIP C 0.015UF K CHIP C 0.10UF K CHIP C 68PF J CHIP C 0.10UF K CHIP C 10UF K	
C63 C64 C65 C66 C67			CK73GB1H333K CK73GB1H472K CK73GB1C104K CK73GB1H153K CK73GB1H103K	CHIP C 0.033UF K CHIP C 4700PF K CHIP C 0.10UF K CHIP C 0.015UF K CHIP C 0.010UF K	
C68 C69 C71 C73 ,74 C75 -77			CK73GB1C104K CK73FB0J106K CK73FB0J106K CK73GB1H102K CK73GB1C104K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 10UF K CHIP C 1000PF K CHIP C 0.10UF K	
C78 C79 -81 C83 C84 C85			CK73GB1A105K CK73GB1C104K CC73GCH1H470J CK73GB1H153K CK73GB1A105K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 47PF J CHIP C 0.015UF K CHIP C 1.0UF K	
C86 C92 C93 C94 C101,102			CK73GB1H103K CK73FB1A225K CC73GCH1H101J CC73GCH1H560J CK73GB1H103K	CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 100PF J CHIP C 56PF J CHIP C 0.010UF K	

Ref. No.	Ad	New	Parts No.	Description	Destination
C113			CK73GB1C104K	CHIP C 0.10UF K	
CN1 CN2			E41-2954-05 E41-2083-15	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
X1 X2 X3			L77-2964-05 L77-2921-15 L78-1221-05	CRYSTAL RESONATOR (9.00MHZ) CRYSTAL RESONATOR (32.768KHZ) RESONATOR (16.93MHZ)	
CP10 CP11,12 CP15 CP22 R1 ,2			RK74GA1J101J RK74GB1J101J RK74GB1J103J RK74GB1J103J RK73EB2E4R7J	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 10K J 1/16W CHIP R 4.7 J 1/4W	
R3 R4 R10 R19 R21			RK73GB2A202J RK73GB2A103J RK73GB2A000J RK73GB2A223J RK73GB2A102J	CHIP R 2.0K J 1/10W CHIP R 10K J 1/10W CHIP R 0.0 J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W	
R23 R24 R25 R26 R27			RK73GB2A223J RK73GB2A101J RK73GB2A104J RK73GB2A2R2J RK73GB2A101J	CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 2.2 J 1/10W CHIP R 100 J 1/10W	
R28 ,29 R30 R31 R33 R36			RK73GB2A102J RK73GB2A223J RK73GB2A000J RK73GB2A223J RK73GB2A102J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 0.0 J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W	
R38 R41 R44 R45 R47			RK73GB2A102J RK73GB2A223J RK73GB2A223J RK73GB2A101J RK73GB2A000J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 0.0 J 1/10W	
R48 R49 R50 R51 R52			RK73GB2A105J RK73GB2A102J RK73GB2A223J RK73GB2A102J RK73GB2A100J	CHIP R 1.0M J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10 J 1/10W	
R53 R54 R55 R57 R58 ,59			RK73GB2A153J RK73GB2A100J RK73GB2A153J RK73GB2A223J RK73GB2A101J	CHIP R 15K J 1/10W CHIP R 10 J 1/10W CHIP R 15K J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W	
R63 R65 ,66 R67 -69 R70 R81 ,82			RK73GB2A223J RK73GB2A332J RK73GB2A101J RK73GB2A223J RK73GB2A101J	CHIP R 22K J 1/10W CHIP R 3.3K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W	
R84 R86 R88 R90 -94 R95 -98			RK73GB2A101J RK73GB2A101J RK73GB2A101J RK73GB2A101J RK73GB2A223J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W	
R101 R102			RK73GB2A221J RK73GB2A4R7J	CHIP R 220 J 1/10W CHIP R 4.7 J 1/10W	

K: KDC-BT645U M1: KDC-U546BT E2: KDC-BT40U

△Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R103			RK73GB2A102J	CHIP R 1.0K J 1/10W		C56			CK73GB1H102K	CHIP C 1000PF K	M1
R104			RK73GB2A225J	CHIP R 2.2M J 1/10W		C57			CK73GB1A474K	CHIP C 0.47UF K	
R105			RK73GB2A104J	CHIP R 100K J 1/10W		C58			CK73FB0J106K	CHIP C 10UF K	
R106			RK73GB2A472J	CHIP R 4.7K J 1/10W		C59			CK73GB1C104K	CHIP C 0.10UF K	
R107			RK73GB2A560J	CHIP R 56 J 1/10W		C63			CK73GB1C104K	CHIP C 0.10UF K	
R108			RK73GB2A333J	CHIP R 33K J 1/10W		C64			CD04BK1A221M	ELECTRO 220UF 10WV	
R109			RK73GB2A622J	CHIP R 6.2K J 1/10W		C69			CK73GB1C104K	CHIP C 0.10UF K	
R110			RK73GB2A913J	CHIP R 91K J 1/10W		C73			CK73EB1H475K	CHIP C 4.7UF K	
R112,113			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		C101,102			CK73GB1H103K	CHIP C 0.010UF K	
R115			RK73GB2A105J	CHIP R 1.0M J 1/10W		C105			CK73GB1H103K	CHIP C 0.010UF K	
R116			RK73GB2A681J	CHIP R 680 J 1/10W		C201			CK73GB1A105K	CHIP C 1.0UF K	
R117-121			RK73GB2A103J	CHIP R 10K J 1/10W		C202,203			CC73GCH1H220J	CHIP C 22PF J	
R123			RK73GB2A104J	CHIP R 100K J 1/10W		C204			CK73GB1C104K	CHIP C 0.10UF K	
R127			RK73GB2A153J	CHIP R 15K J 1/10W		C301,302			CD04AV1HR47M	ELECTRO 0.47UF 50WV	
R128			RK73GB2A334J	CHIP R 330K J 1/10W		C306,307			CK73GB1C104K	CHIP C 0.10UF K	
R131			RK73GB2A204J	CHIP R 200K J 1/10W		C308			CD04AV0J470M	ELECTRO 47UF 6.3WV	
R132			RK73GB2A101J	CHIP R 100 J 1/10W		C309			CK73GB1H103K	CHIP C 0.010UF K	
R136			RK73GB2A363J	CHIP R 36K J 1/10W		C310,311			CK73GB1H102K	CHIP C 1000PF K	
R137			RK73GB2A223J	CHIP R 22K J 1/10W		C401			CD04AV1C470M	ELECTRO 47UF 16WV	
R139			RK73GB2A393J	CHIP R 39K J 1/10W		C403			CD04AV1H010M	ELECTRO 1UF 50WV	
R151			RK73GB2A333J	CHIP R 33K J 1/10W		C404-407			CK73GB1A105K	CHIP C 1.0UF K	
R152			RK73GB2A223J	CHIP R 22K J 1/10W		C501			CK73GB1H102K	CHIP C 1000PF K	
R173-178			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		C502			CK73GB1A105K	CHIP C 1.0UF K	
R180			RK73GB2A102J	CHIP R 1.0K J 1/10W		C505			CK73GB1A224K	CHIP C 0.22UF K	
S1 ,2			S68-0924-05	PUSH SWITCH		C506			CK73GB1C104K	CHIP C 0.10UF K	
D1			DAP202U	DIODE		C507			CC73GCH1H090D	CHIP C 9.0PF D	
D2 ,3			DA204U	DIODE		C509-511			CK73GB1A105K	CHIP C 1.0UF K	
IC1			92CD28AFGE0	MICROCONTROLLER IC		C512-514			CK73GB1H103K	CHIP C 0.010UF K	
IC2			TC94A92FG-301	MOS-IC		C515			CK73GB1C104K	CHIP C 0.10UF K	
IC3			BD8222EFV	ANALOGUE IC		C516			CK73GB1H103K	CHIP C 0.010UF K	
IC4			MFI341S2162	MICROPROCESSOR IC		C517			CK73GB1C104K	CHIP C 0.10UF K	
IC5			74AHCT08PW	MOS-IC		C518			CK73GB1H102K	CHIP C 1000PF K	
IC6			74LVC08APW	MOS-IC		C519			CD04AV1C470M	ELECTRO 47UF 16WV	
IC7			XC6415S001P1	MOS-IC		C520			CK73GB1C104K	CHIP C 0.10UF K	
IC9			XC6219B332MR	ANALOGUE IC		C523			CK73GB1H102K	CHIP C 1000PF K	
Q3			RUE003N02	FET		C524			CK73GB1A224K	CHIP C 0.22UF K	
Q5			2SA1577	TRANSISTOR		C525			CC73GCH1H270J	CHIP C 27PF J	
Q6			DTC114YUA	DIGITAL TRANSISTOR		C527			CC73GCH1H150J	CHIP C 15PF J	
Q7			2SB0970	TRANSISTOR		C528			CC73GCH1H471J	CHIP C 470PF J	KE2
Q9			DTC144EUA	DIGITAL TRANSISTOR		C529			CC73GCH1H471J	CHIP C 470PF J	M1
ELECTRIC UNIT (X34-662x-xx)						C530			CK73GB1H102K	CHIP C 1000PF K	
C1			C90-6906-05	ELECTRO 3300UF 16WV		C531			CC73GCH1H070D	CHIP C 7.0PF D	KE2
C2			CD04AV1C220M	ELECTRO 22UF 16WV		C531,532			CC73GCH1H040C	CHIP C 4.0PF C	M1
C3			CK73GB1H104K	CHIP C 0.10UF K		C532			CC73GCH1H060D	CHIP C 6.0PF D	KE2
C3 ,4			CK73GB1H104K	CHIP C 0.10UF K	KE2	C533			CC73GCH1H020C	CHIP C 2.0PF C	KE2
C5			CD04BN1C221M	ELECTRO 220UF 16WV	M1	C542			CK73GB1H103K	CHIP C 0.010UF K	E2
C7			CD04AV0J101M	ELECTRO 100UF 6.3WV		C543			CK73GB0J225K	CHIP C 2.2UF K	E2
C9			CK73GB1C104K	CHIP C 0.10UF K		C544			CC73GCH1H331J	CHIP C 330PF J	E2
C11			CK73GB1C104K	CHIP C 0.10UF K		C545,546			CC73GCH1H120J	CHIP C 12PF J	E2
C14			CK73GB1C104K	CHIP C 0.10UF K		C601,602			CK73GB1C104K	CHIP C 0.10UF K	K
C17			CK73GB1C104K	CHIP C 0.10UF K		C603			CD04AV0J470M	ELECTRO 47UF 6.3WV	K
C20			CK73GB1H152K	CHIP C 1500PF K		C701-706			CD04AV1V100M	ELECTRO 10UF 35WV	K
C54			CC73GCH1H471J	CHIP C 470PF J		C703-706			CD04AV1V100M	ELECTRO 10UF 35WV	M1
C55			CK73FB0J106K	CHIP C 10UF K		C703,704			CD04AV1V100M	ELECTRO 10UF 35WV	E2
						C801-804			CK73GB1A224K	CHIP C 0.22UF K	

K: KDC-BT645U M1: KDC-U546BT E2: KDC-BT40U

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-662x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C805 C806,807 C809 C851-858 C859			CD04AV1C330M CK73GB1A105K CK73GB1A105K CK73GB1H472K CK73GB1H103K	ELECTRO 33UF 16WV CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 4700PF K CHIP C 0.010UF K	E2 E2
C875,876 C904 C906 C907,908 C910,911			CC73GCH1H681J CK73GB1C104K CK73FB0J106K CC73GCH1H101J CK73GB1A105K	CHIP C 680PF J CHIP C 0.10UF K CHIP C 10UF K CHIP C 100PF J CHIP C 1.0UF K	E2
C912 C913 C914 C915 C916			CD04AV1V100M CK73GB1C104K CK73EB0J226K CK73FB1H334K CD04BK0J331M	ELECTRO 10UF 35WV CHIP C 0.10UF K CHIP C 22UF K CHIP C 0.33UF K ELECTRO 330UF 6.3WV	
C918 C920,921 C922 C923			CK73GB1H102K CK73GB1A105K CK73GB1C104K CK73GB1H102K	CHIP C 1000PF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1000PF K	
CN2 CN900			E41-1822-05 E41-3043-05	FLAT CABLE CONNECTOR PIN ASSY	
J1 J3 J4			E58-0991-05 E58-1095-05 E56-0855-05	RECTANGULAR RECEPTACLE RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE	K
J5 J5 J5 W551	2D	*	E63-0972-05 E63-0973-05 E63-0974-05 E30-6803-05	PIN JACK PIN JACK PIN JACK CORD WITH PLUG	K M1 E2
L1 L51 L71 -73 L401 L501			L33-2459-05 L33-2462-05 L92-0639-05 L40-4791-58 L40-4791-58	CHOKE COIL ASSY SMALL FIXED INDUCTOR CHIP FERRITE SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR	
L502,503 L504 L505 L506 L506			L33-1031-05 L40-2781-58 L40-4791-58 L40-1091-58 L40-4781-58	SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (0.27U) SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (1.0U) SMALL FIXED INDUCTOR	KE2 M1 KE2
L507 L507 L508 L551 L750,751			L40-1891-58 L40-3391-58 L40-4781-58 L31-0993-05 L92-0648-05	SMALL FIXED INDUCTOR (1.8U) SMALL FIXED INDUCTOR (3.3U) SMALL FIXED INDUCTOR FM-RF COIL CHIP FERRITE	KE2 M1
L900 X1 X2 X3 X501		*	L92-0662-05 L78-1237-05 L77-2921-15 L77-3825-05 L77-3824-05	CHIP FERRITE RESONATOR CRYSTAL RESONATOR (32.768KHZ) CRYSTAL RESONATOR (4.332MHZ) CRYSTAL RESONATOR (4.000MHZ)	E2
G H J K L	2D 2D 2D 2D 2D		N80-3008-48 N83-3005-48 N83-3016-48 N86-2606-48 N89-3010-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
CP201			RK74HB1J101J	CHIP-COM 100 J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
CP202,203 R1 R2 ,3 R5 R15			RK74GA1J101J RD14BB2C102J RK73GB2A103J RK73GB2A103J RD14DB2H7R5J	CHIP-COM 100 J 1/16W RD 1.0K J 1/6W CHIP R 10K J 1/10W CHIP R 10K J 1/10W SMALL-RD 7.5 J 1/2W	
R53 R54 R55 R56 R56			RK73GH2A153D RK73GH2A823D RK73GB2A103J RK73GH2A123D RK73GH2A153D	CHIP R 15K D 1/10W CHIP R 82K D 1/10W CHIP R 10K J 1/10W CHIP R 12K D 1/10W CHIP R 15K D 1/10W	KE2 M1
R57 R58 R59 R62 R101			RK73GH2A433D RK73GB2A473J RK73GB2A333J RK73GB2A223J RD14BB2C472J	CHIP R 43K D 1/10W CHIP R 47K J 1/10W CHIP R 33K J 1/10W CHIP R 22K J 1/10W RD 4.7K J 1/6W	M1 K
R101,102 R106 R107 R108 R109			RD14BB2C472J RD14BB2C332J RD14BB2C333J RK73GB2A103J RK73GB2A223J	RD 4.7K J 1/6W RD 3.3K J 1/6W RD 33K J 1/6W CHIP R 10K J 1/10W CHIP R 22K J 1/10W	E2M1
R110 R111 R112 R113 R114,115			RK73FB2B683J RK73GB2A473J RD14BB2C203J RK73GB2A104J RK73GB2A103J	CHIP R 68K J 1/8W CHIP R 47K J 1/10W RD 20K J 1/6W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	
R116,117 R118 R119 R151 R152			RK73GB2A682J RD14BB2C103J RK73GB2A473J RK73GB2A000J RK73GB2A000J	CHIP R 6.8K J 1/10W RD 10K J 1/6W CHIP R 47K J 1/10W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W	M1 E2
R201 R203 R204 R205 R207,208			RK73GB2A102J RK73GB2A103J RK73GB2A104J RK73GB2A473J RK73GB2A473J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	
R209,210 R218 R225 R226 R226			RK73GB2A471J RK73GB2A223J RK73GB2A473J RK73GB2A223J RK73GB2A473J	CHIP R 470 J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W	E2M1 M1 K
R262,263 R268 R275 R278 R279			RK73GB2A473J RK73GB2A471J RK73GB2A101J RK73GB2A101J RK73GB2A472J	CHIP R 47K J 1/10W CHIP R 470 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W	
R281,282 R301 R302 R306 R307			RK73GB2A472J RK73GB2A222J RK73GB2A101J RK73GB2A222J RK73GB2A101J	CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W	
R318 R320 R325 R327,328 R330			RK73GB2A472J RK73GB2A472J RK73GB2A000J RK73GB2A473J RK73GB2A101J	CHIP R 4.7K J 1/10W CHIP R 4.7K J 1/10W CHIP R 0.0 J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W	

K: KDC-BT645U M1: KDC-U546BT E2: KDC-BT40U

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-662x-xx)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
R331			RK73GB2A392J	CHIP R 3.9K J 1/10W		R805			RK73GB2A223J	CHIP R 22K J 1/10W	
R332			RK73GB2A101J	CHIP R 100 J 1/10W		R806			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R333			RK73GB2A102J	CHIP R 1.0K J 1/10W		R808			RK73GB2A100J	CHIP R 10 J 1/10W	
R334			RD14BB2C102J	RD 1.0K J 1/6W		R809			RD14BB2C102J	RD 1.0K J 1/6W	
R336,337			RK73GB2A222J	CHIP R 2.2K J 1/10W		R810			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R338			RK73GB2A102J	CHIP R 1.0K J 1/10W		R811			RK73GB2A473J	CHIP R 47K J 1/10W	
R339			RK73GB2A222J	CHIP R 2.2K J 1/10W		R812			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R340			RK73GB2A225J	CHIP R 2.2M J 1/10W		R813			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R341			RK73GB2A101J	CHIP R 100 J 1/10W		R903			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R342			RK73GB2A392J	CHIP R 3.9K J 1/10W		R905,906			RK73GB2A103J	CHIP R 10K J 1/10W	
R343			RK73GB2A102J	CHIP R 1.0K J 1/10W		R910,911			RK73GB2A473J	CHIP R 47K J 1/10W	
R344,345			RD14BB2C4R7J	RD 4.7 J 1/6W		R912,913			RK73GB2A223J	CHIP R 22K J 1/10W	
R346			RD14BB2C2R2J	RD 2.2 J 1/6W		R915,916			RK73GB2A331J	CHIP R 330 J 1/10W	
R347			RK73GB2A102J	CHIP R 1.0K J 1/10W		R918,919			RK73GB2A473J	CHIP R 47K J 1/10W	
R348,349			RK73GB2A103J	CHIP R 10K J 1/10W		R920			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R350,351			RK73GB2A104J	CHIP R 100K J 1/10W		R935			RK73GB2A101J	CHIP R 100 J 1/10W	
R352,353			RD14BB2C100J	RD 10 J 1/6W		S3			S70-0959-05	TACT SWITCH	
R354,355			RK73GB2A101J	CHIP R 100 J 1/10W		D1			S2V60-5009F46	DIODE	
R401			RK73GB2A103J	CHIP R 10K J 1/10W		D2			HZS9-E(A1)	ZENER DIODE	
R505			RK73GB2A472J	CHIP R 4.7K J 1/10W		D3			D1F60-5063	DIODE	
R506			RK73EB2E220J	CHIP R 22 J 1/4W		D4 ,5			HSS4148	DIODE	M1
R507,508			RK73GB2A221J	CHIP R 220 J 1/10W		D51			CMS14	DIODE	
R513,514			RK73GB2A474J	CHIP R 470K J 1/10W		D101-104			D1F60-5063	DIODE	E2M1
R513,514			RK73GB2A684J	CHIP R 680K J 1/10W		D101,102			D1F60-5063	DIODE	K
R515,516			RK73GB2A562J	CHIP R 5.6K J 1/10W		D106-108			MTZJ6.8(B)	ZENER DIODE	
R525			RK73GB2A101J	CHIP R 100 J 1/10W	M1	D109			HZS5-E(B1)	ZENER DIODE	
R541			RD14BB2C222J	RD 2.2K J 1/6W	E2	D110			MC2848-T111	DIODE	
R542,543			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2	D301			DA204U	DIODE	
R545			RK73GB2A102J	CHIP R 1.0K J 1/10W	E2	D304-306			HZS7-E(A3)	ZENER DIODE	
R601,602			RD14BB2C100J	RD 10 J 1/6W	K	D311,312			LVS10C270S030	VARISTOR	
R603			RD14BB2C4R7J	RD 4.7 J 1/6W	K	D401			HSS4148	DIODE	
R604			RK73GB2A102J	CHIP R 1.0K J 1/10W	K	D601-605			HZS7-E(A3)	ZENER DIODE	K
R605			RD14BB2C101J	RD 100 J 1/6W	K	D650			HZS7-E(A3)	ZENER DIODE	
R606,607			RD14BB2C472J	RD 4.7K J 1/6W	K	D801,802			HSS4148	DIODE	
R608			RD14BB2C101J	RD 100 J 1/6W	K	IC1	*		W05-1543-00	MICROCONTROLLER IC	
R609,610			RD14BB2C472J	RD 4.7K J 1/6W	K	IC2			E-TDA7718N	ANALOGUE IC	
R611			RD14BB2C432J	RD 4.3K J 1/6W	K	IC4			BD49131-V4	ANALOGUE IC	
R612			RD14BB2C472J	RD 4.7K J 1/6W	K	IC6			E-TDA7851A	ANALOGUE IC	
R613,614			RK73GB2A100J	CHIP R 10 J 1/10W	K	IC7			E-TDA7478AD	ANALOGUE IC	E2
R615			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K	IC8			XC6120N362N-G	MOS-IC	
R616			RK73GB2A473J	CHIP R 47K J 1/10W	K	IC51	2D		Impossible to replace	ANALOGUE IC (See exploded view)	
R617-620			RK73GB2A104J	CHIP R 100K J 1/10W	K	IC52			BD2224G	MOS-IC	
R650			RK73EB2E471J	CHIP R 470 J 1/4W		IC501			TEF6606T/V5	ANALOGUE IC	KM1
R701,702			RK73GB2A331J	CHIP R 330 J 1/10W	K	IC501			TEF6606T/V5S3	ANALOGUE IC	E2
R703,704			RK73GB2A223J	CHIP R 22K J 1/10W	K	IC900			NJM4565V-ZB	ANALOGUE IC	
R705,706			RK73FB2B181J	CHIP R 180 J 1/8W	K	IC901			SI-3033KMSA	ANALOGUE IC	
R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	KM1	Q2			KTA1046-P	TRANSISTOR	
R709,710			RK73GB2A223J	CHIP R 22K J 1/10W	KM1	Q3			2SC4081	TRANSISTOR	
R711,712			RK73FB2B181J	CHIP R 180 J 1/8W	KM1	Q11			RT1N241M-T111	TRANSISTOR	
R713,714			RK73GB2A331J	CHIP R 330 J 1/10W		Q12			RT1P241M-T111	TRANSISTOR	
R715,716			RK73GB2A223J	CHIP R 22K J 1/10W		Q13			RT1N241M-T111	TRANSISTOR	M1
R717,718			RK73FB2B181J	CHIP R 180 J 1/8W		Q14			RT1P241M-T111	TRANSISTOR	M1
R802			RK73GB2A333J	CHIP R 33K J 1/10W		Q53			RT1N441M-T111	TRANSISTOR	M1
R803			RK73GB2A473J	CHIP R 47K J 1/10W							
R804			RK73GB2A331J	CHIP R 330 J 1/10W							

K: KDC-BT645U M1: KDC-U546BT E2: KDC-BT40U

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-662x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q101-103 Q104,105 Q301 Q701-706 Q703-706			2SC4081 RT1N441M-T111 RT1P144M-T111 RT1N430M-T111 RT1N430M-T111	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K M1
Q705,706 Q707 Q901 Q902 TH1			RT1N430M-T111 RT1P241M-T111 RT1N241M-T111 UM6K1N PRF18BE471QS2	TRANSISTOR TRANSISTOR TRANSISTOR DUAL FET POSITIVE RESISTOR	E2
A900		*	W02-5374-05	ELECTRIC CIRCUIT MODULE	
MECHANISM ASSY (X92-6360-04) DXM-9B34W					
1	2B		A10-5450-63	CHASSIS ASSY	
3	3B		A10-5452-41	CHASSIS	
4	1B		A10-5453-32	CHASSIS	
12	3A		D10-4993-52	LEVER	
13	1B		D10-4991-22	ARM	
14	1B		D10-4992-13	ARM	
15	2A		D10-4994-02	SLIDER	
16	2A		D10-4995-03	SLIDER	
17	2B		D10-4996-02	SLIDER	
18	2A		D10-4997-03	LEVER	
19	1A		D10-4998-03	ARM	
20	2A		D10-4999-03	ARM	
21	2A		D10-7001-03	ARM	
22	2A		D10-7002-03	ARM	
23	2A		D10-7003-03	ARM	
24	2A		D13-2445-04	GEAR	
25	2A		D13-2446-04	GEAR	
27	2A		D13-2448-04	GEAR	
28	2A		D13-2449-04	GEAR	
29	2A		D13-2450-04	GEAR	
30	2A		D13-2451-04	GEAR	
31	2A		D13-2452-04	GEAR	
32	2A		D13-2453-04	GEAR	
33	2A		D13-2454-04	GEAR	
34	2A		D13-2455-04	GEAR	
35	2B		D13-2456-03	RACK (GEAR)	
36	2A		D14-1028-04	ROLLER	
37	3A		D21-2507-04	SHAFT	
38	2B		D21-2508-04	SHAFT	
39	3A		D23-0963-04	RETAINER	
40	3B		D39-0277-15	DAMPER	
41	3B		D39-0278-15	DAMPER	
46	1B		G01-4682-34	TORSION COIL SPRING	
47	3A		G01-4683-24	EXTENSION SPRING	
48	2A		G01-4684-04	EXTENSION SPRING	
49	2B		G01-4685-04	EXTENSION SPRING	
50	1B		G01-4686-14	EXTENSION SPRING	
51	3A		G01-4688-14	EXTENSION SPRING	
52	3A		G01-4692-24	TORSION COIL SPRING	
53	2B		G02-1587-04	FLAT SPRING	
54	3A		G02-1588-04	FLAT SPRING	
55	1B		G13-1297-04	CUSHION	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
56	1B		G13-1299-14	CUSHION	
57	1A		G16-1715-04	SHEET	
61	1B		J11-0675-03	CLAMPER	
64	2A		J19-7210-21	HOLDER	
65	2B		J19-7225-04	HOLDER	
66	1B		J22-0706-03	MOUNTING HARDWARE	
67	1A		J22-0707-12	MOUNTING HARDWARE	
68	1B		J90-1166-11	GUIDE	
69	2B		J90-1168-03	RAIL	
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)	
B	2B		N09-6426-15	MACHINE SCREW	
C	2B		N09-6735-05	TAPTITE SCREW	
D	2B		N09-6737-15	MACHINE SCREW	
E	2B		N09-6738-15	TAPTITE SCREW	
F	2A		N19-2335-14	FLAT WASHER	
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW	
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW	
76	2A		S68-0921-05	PUSH SWITCH	
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY	
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)	
DPU1	2B		X93-2280-00	OPTICAL PICKUP ASSY	

K: KDC-BT645U M1: KDC-U546BT E2: KDC-BT40U

△Indicates safety critical components.