


9. EXPLODED VIEWS AND PARTS LIST

NOTES :

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

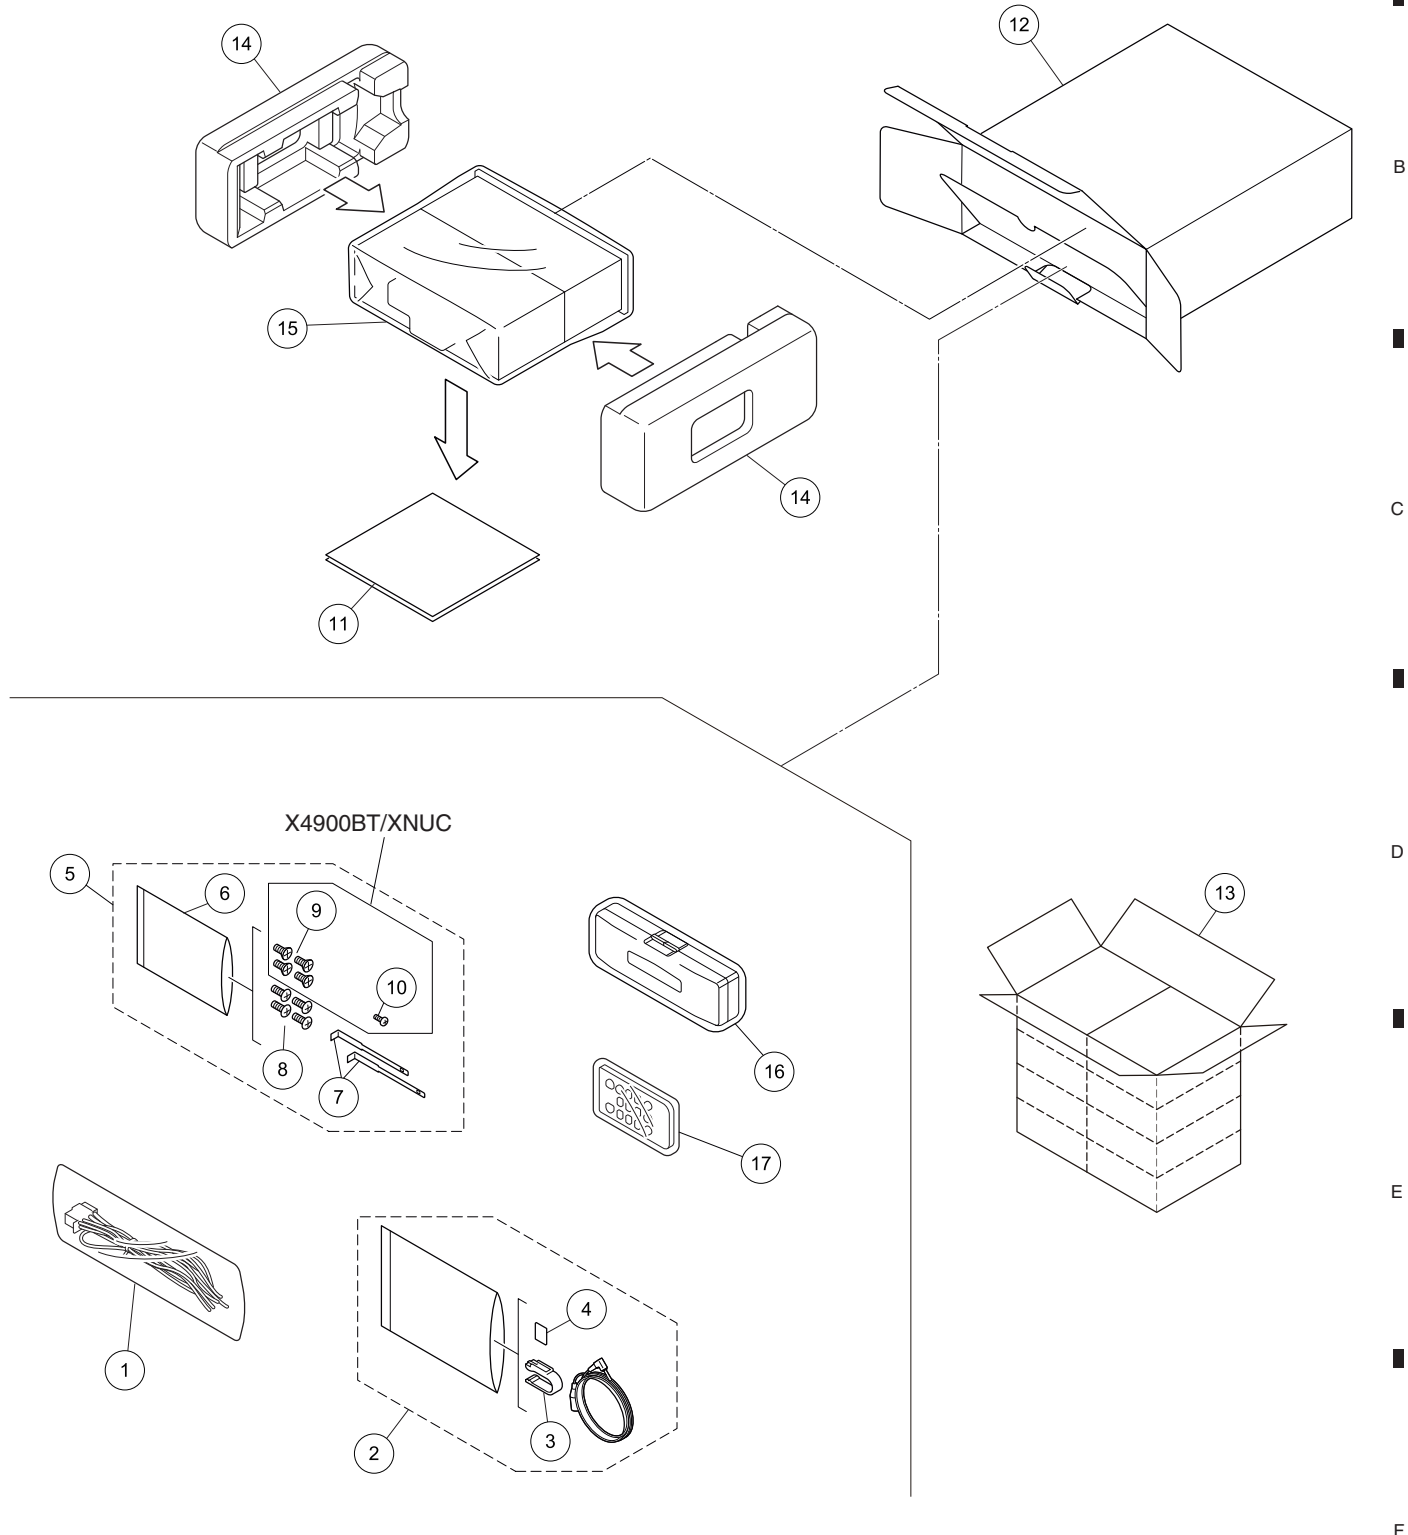

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDP1484			
2	Microphone Assy	CPM1109	11-1	Owner's Manual	See Contrast table (2)
3	Holder	CZN7192	11-2	Quick Start Guide	See Contrast table (2)
4	Cushion	CZN7193	* 11-3	Warranty Card	See Contrast table (2)
5	Accessory Assy	See Contrast table (2)	12	Unit Box	See Contrast table (2)
			13	Contain Box	See Contrast table (2)
* 6	Polyethylene Bag	CEG1160			
7	Handle	QNC3021	14	Protector	CHP4594
8	Screw	CBA2384	15	Polyethylene Bag	See Contrast table (2)
9	Screw	See Contrast table (2)	16	Case Assy	See Contrast table (2)
10	Screw	See Contrast table (2)	17	Card Remote Control Unit	CXE9605

(2) CONTRAST TABLE


DEH-X4900BT/XNUC, DEH-X5/XNCS and DEH-X4950BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-X4900BT/XNUC	DEH-X5/XNCS	DEH-X4950BT/XNGS
	5	Accessory Assy	QEA3337	QEA3338	QEA3338
	9	Screw	CBA2383	Not used	Not used
	10	Screw	BPZ20P060FTC	Not used	Not used
	11-1	Owner's Manual	QRD3393	QRD3369	QRD3370
	11-2	Quick Start Guide	QRD3428	Not used	Not used
*	11-3	Warranty Card	QRY3001	Not used	Not used
	12	Unit Box	QHG3991	QHG3992	QHG4005
	13	Contain Box	QHL3991	QHL3992	QHL4005
	15	Polyethylene Bag	CEG1173	CEG3001	CEG3001
	16	Case Assy	Not used	QXA3129	QXA3129

Owner's Manual, Installation Manual

Part No.	Language
QRD3393	English, French, Spanish(Espanol)
QRD3369	English, Spanish(Espanol), Portuguese(B)
QRD3370	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian

9.2 EXTERIOR

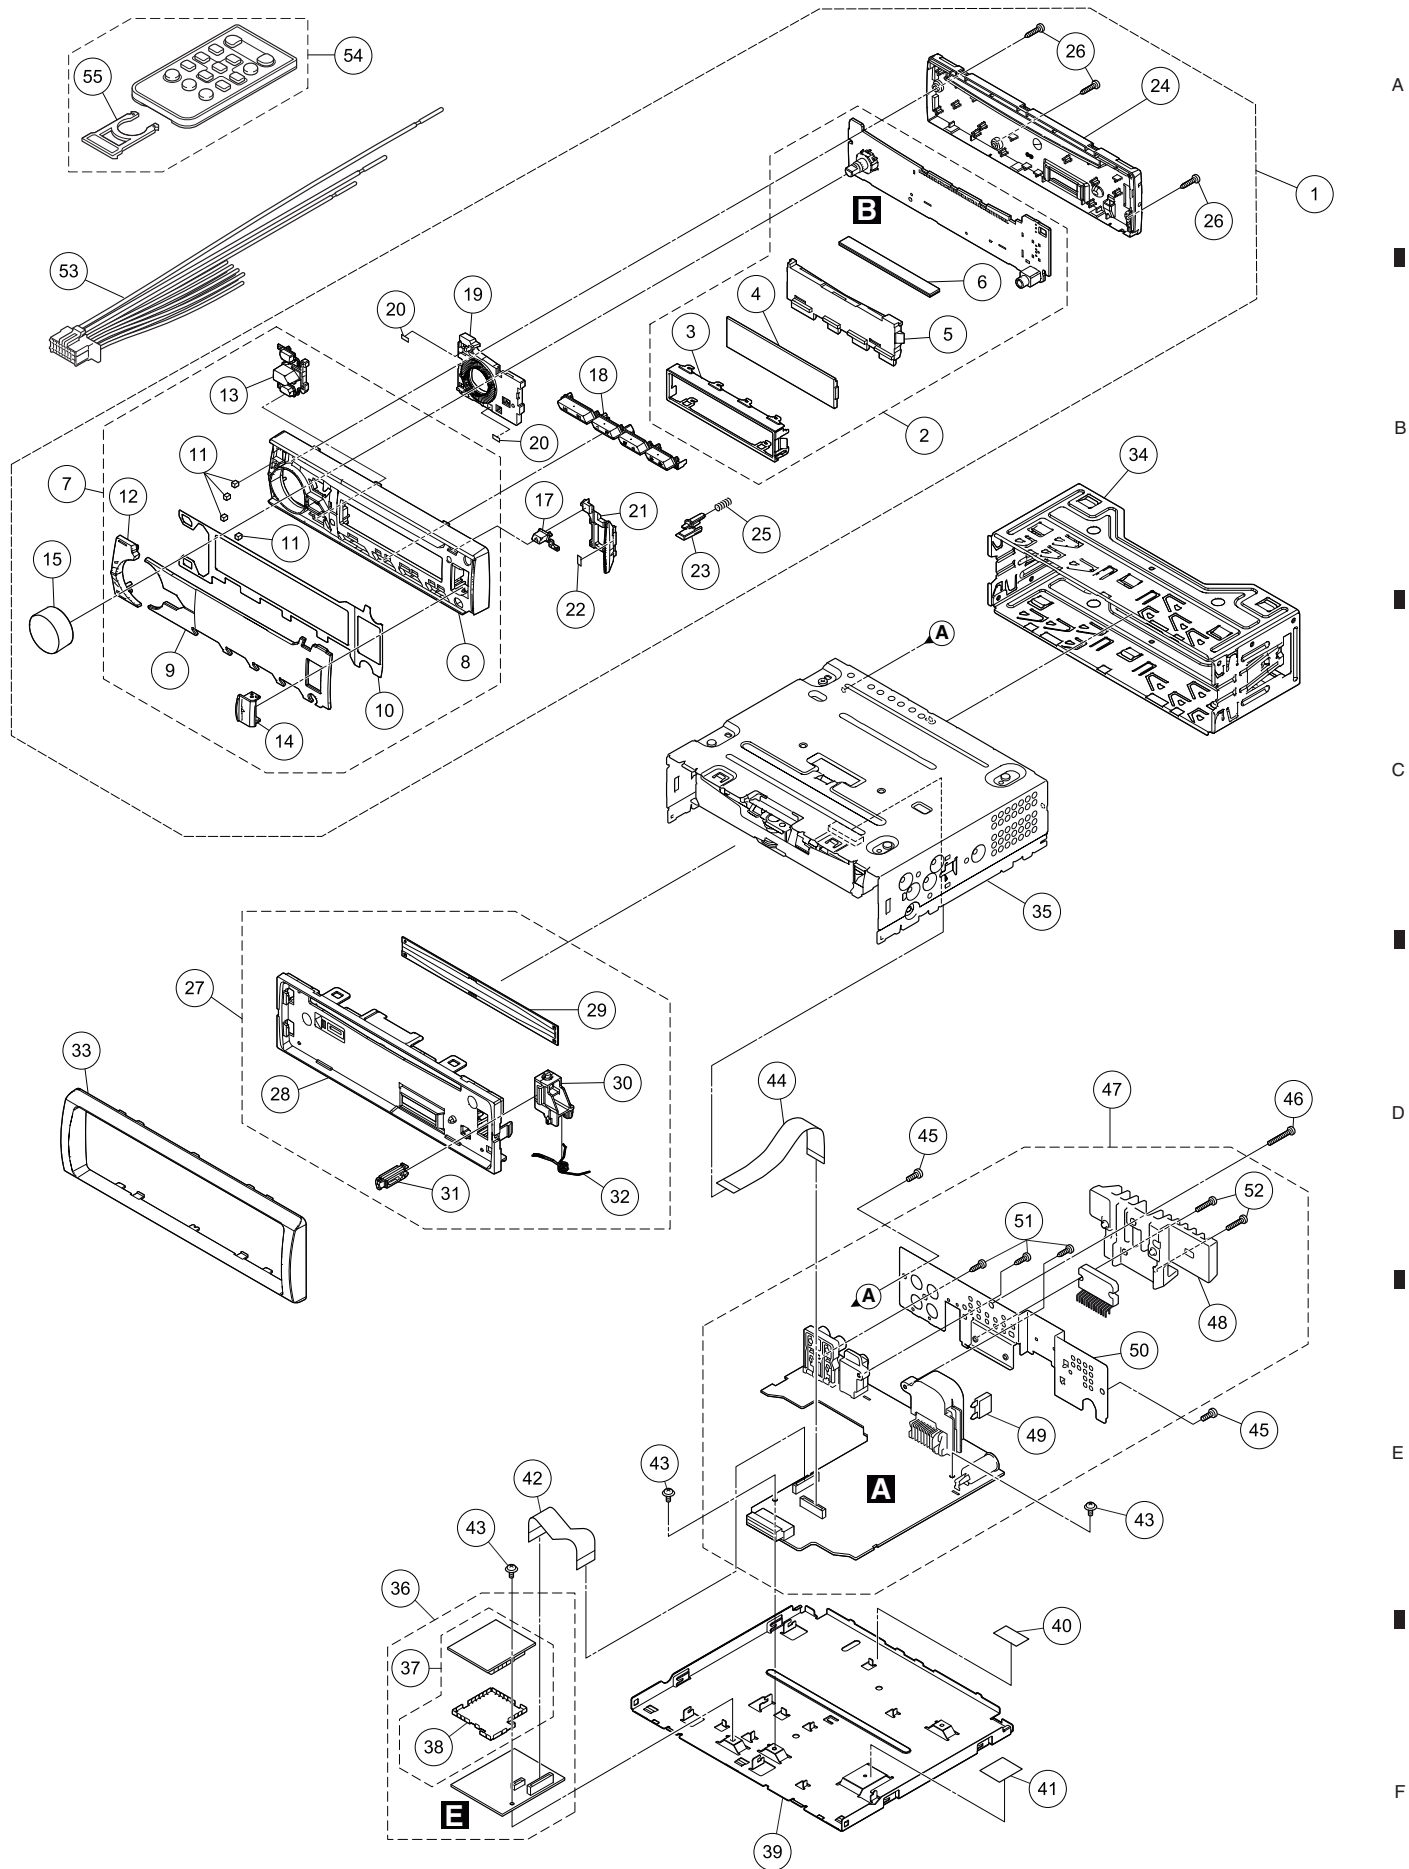

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
A	1	Detach Grille Assy	See Contrast table (2)	29	Cover		QNM3029
	2	Keyboard Unit	QWM4370	30	Arm		QNV3025
	3	Holder	QNC3131				
	4	Segment LCD(V1801)	CAW2056	31	Button		QNV3026
	5	Lighting Conductor	QNV3133	32	Spring		QBH3001
				33	Panel		QNS3576
	6	Rubber Connector	QNV3129	34	Holder		QNC3020
	7	Grille Unit	See Contrast table (2)	35	CD Mechanism Module(11.6VA_T07)	CXK5808	
	8	Grille	QNS4080		CD Mechanism Module(11.6VA_T07)	CXK5807	
	9	Plate	QNS4081				
B	10	DS Tape	QNM3160	36	BT Unit		QWM4410
				37	BT Module		CWX4869
	11	Cushion	QNM3142	38	Shield Case		YNC5123
	12	Button(SRC)	See Contrast table (2)	39	Case		QNB3049
	13	Button(iPod)	See Contrast table (2)	40	Sheet		See Contrast table (2)
	14	Door	QAT3025				
	15	Knob Unit	See Contrast table (2)	41	Sheet		QNM3175
				42	FFC		QDE3028
	16			43	Screw		ASZ26P050FTC
	17	Button(EJECT)	QAC3253	44	FFC		QDE3029
C	18	Button(TRACK, 1-6)	QAC3252	45	Screw		BSZ26P060FTC
	19	Lighting Conductor	QNV3132				
	20	Sheet	QNM3161	46	Screw		BSZ26P120FTC
				47	Tuner Amp Unit		See Contrast table (2)
	21	Lighting Conductor	QNV3134	48	Heat Sink		See Contrast table (2)
	22	Sheet	QNM3124	49	Fuse(10 A)		YEK5001
	23	Button(DETACH)	QAC3254	50	Holder		QNC3053
	24	Cover	QNS4082				
	25	Spring	CBH2210	51	Screw		BPZ26P080FTC
				52	Screw		BSZ26P120FTC
D	26	Screw	BPZ20P100FTC	53	Cord Assy		CDP1484
	27	Panel Assy	QXA3261	54	Card Remote Control Unit		CXE9605
	28	Panel	QNS3126	55	Cover		CNU3681


Notes: For No.35. please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.

(2) CONTRAST TABLE

DEH-X4900BT/XNUC, DEH-X5/XNCS and DEH-X4950BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-X4900BT/XNUC	DEH-X5/XNCS	DEH-X4950BT/XNGS
E	1	Detach Grille Assy	QXA4831	QXA4832	QXA4866
	7	Grille Unit	QXA4851	QXA4852	QXA4863
	12	Button(SRC)	QAC3250	QAC3257	QAC3257
	13	Button(iPod)	QAC3251	QAC3256(MIX)	QAC3251
	15	Knob Unit	QXA3670	QXA4843	QXA4843
	40	Sheet	Not used	QNM3130	QNM3130
	47	Tuner Amp Unit	QWM4322	QWM4323	QWM4389
	48	Heat Sink	QNR3010	QNR3010	QNR3002

9.3 CD MECHANISM MODULE

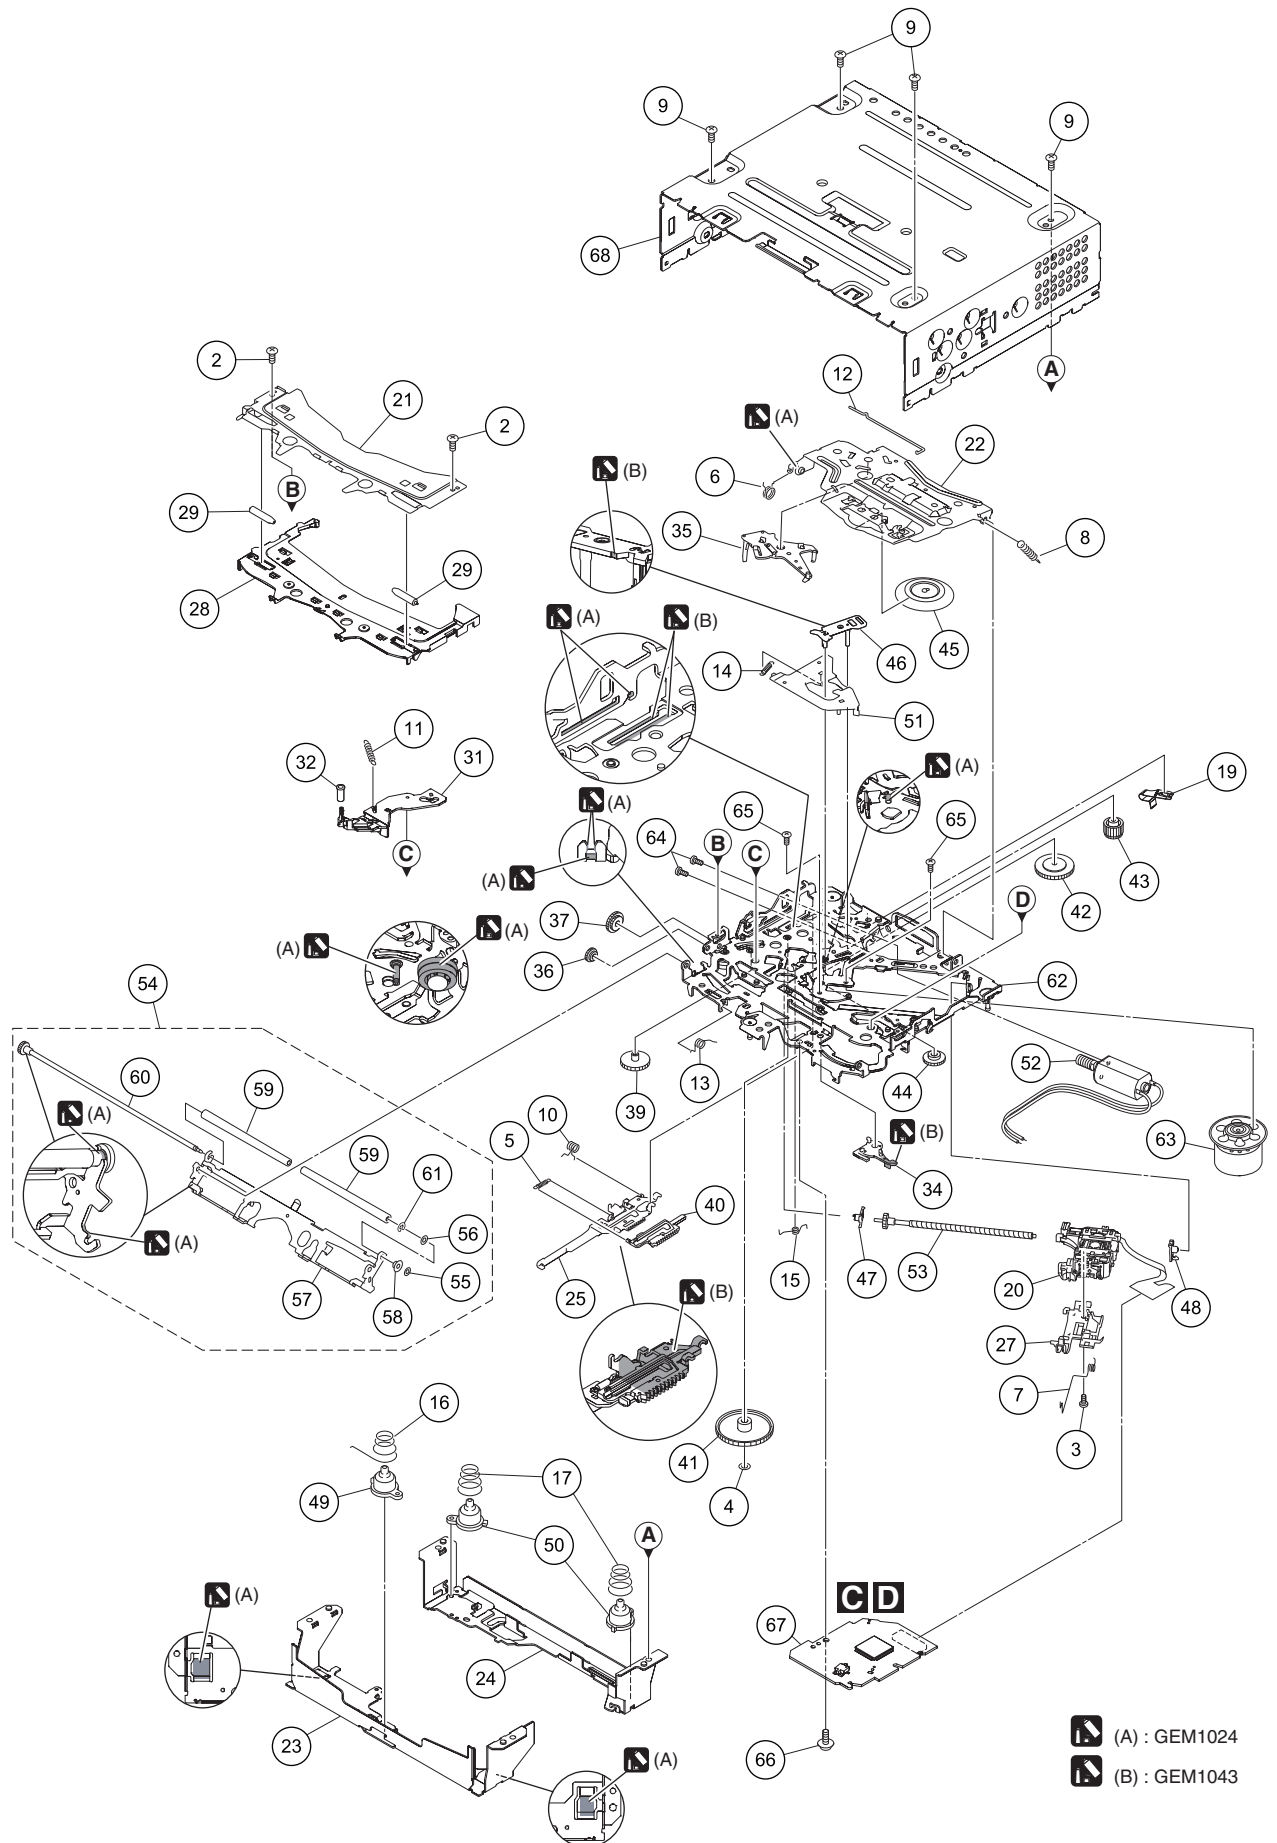

CD MECHANISM MODULE SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1				36	Gear	CNW1180
	2	Screw	BSZ20P040FTC		37	Gear	CNW1181
	3	Screw(M2 x 4)	CBA1835		38		
	4	Washer	CBF1038		39	Gear	CNW1183
	5	Spring	CBH3010		40	Rack	CNW1184
	6	Spring	CBH2855				
	7	Spring	CBH2856		41	Gear	CNW1185
	8				42	Gear	CNW1186
	9	Screw	BSZ26P060FTC		43	Gear	CNW1187
	10	Spring	CBH3011		44	Gear	CNW2287
B					45	Clamper	CNW1190
	11	Coil Spring	CBH3095				
	12	Spring	CBH3014		46	Arm	CNW1192
	13	Spring	CBH3145		47	Holder	CNW1193
	14	Spring	CBH3016		48	Holder	CNW1194
	15	Spring	CBH3017		49	Damper	CNW1197
					50	Damper	CNW1198
	16	Spring	CBH3086				
	17	Spring	CBH3019		51	Arm	CNW1726
	18				52	Motor Unit(M2)(LOAD/CRG)	CXC4026
C	19	Leaf Spring	CBL1824		53	Screw Unit	CXC8894
	20	Pickup Unit(P11)(Service) for CXK5808	CXX4754		54	Arm Assy	CXE8953
		Pickup Unit(P10.6)(Service) for CXK5807	CXX3556		55	Washer	CBF1037
	21	Bracket	CND4553		56	Washer	CBF1038
	22	Arm	CND7608		57	Arm	CND6242
	23	Bracket	CND6127		58	Collar	CNW2444
	24	Bracket	CND5710		59	Roller	CNW2500
	25	Lever	CND6834		60	Gear Unit	CXE8952
D	26				61	Washer	YE15FTC
	27	Rack	CNV8342		62	Chassis Unit	CXE4528
	28	Guide	CNW3489		63	Motor Unit(M1)(SPDL)	CXE2273
	29	Roller	CNW1172		64	Screw	JFZ20P025FTC
	30				65	Screw	JGZ17P022FTC
	31	Arm	CNW2241		66	Screw	EBA1028
	32	Roller	CNW1175		67	CD Core Unit (S11.6VA) for CXK5808	CWX4269
	33					CD Core Unit (S11.6STD) for CXK5807	CWX4023
	34	Arm	CNW1177		68	Chassis	CNA3373
	35	Arm	CNW1178				

Notes: For No.20 and 67. please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
A:DEH-X4900BT/XNUC			IC 801	L-MOS And Gate	TC7SET08FUS1
B:DEH-X5/XNCS			IC 851	Power Amp IC	PAL013B
C:DEH-X4950BT/XNGS			Q 111	Bipolar Transistor	LSCR523UB
			Q 121	Resistor Built-in Transistor	LTC014EEB
			Q 151	Power MOS FET	RRR040P03
Unit Number : QWM4322(A)					
Unit Number : QWM4323(B)			Q 501	Bipolar Transistor	LSAR523UB
Unit Number : QWM4389(C)			Q 751	Transistor	EMH53
Unit Name : Tuner Amp Unit			Q 752	Transistor	EMH53
			Q 781	Bipolar Transistor(B,C)	EMD53
			Q 782	Bipolar Transistor(B,C)	EMD53
Unit Number : QWM4370					
Unit Name : Keyboard Unit			Q 783	Bipolar Transistor(B,C)	EMD53
			Q 784	Bipolar Transistor(B,C)	EMD53
Unit Number : CWX4269			Q 901	Transistor	EMD52
			D 101	Diode	D1F60-5053
			D 102	Diode	D1F60-5053
Unit Name : CD Core Unit(S11.6VA)					
Unit Number : CWX4023			D 111	Diode	DZ2J068M0
			D 122	Rectifier Diode	DA2J101
Unit Name : CD Core Unit(S11.6STD)			D 152	Diode	RR264MM-400TF
			D 153	Schottky Diode	RB162M-40
Unit Number : QWM4410			D 154	Diode	RR264MM-400TF
Unit Name : BT Unit					
Notes:			D 155	Schottky Diode	DB2J41100
For CD Core Unit, please refer to "1.3 NOTES ON REPLACING PARTS"			D 156	Diode	RB056L-40
for part distinguish.			D 157	Schottky Diode	CMS30I30A
			D 252	Diode	RR264MM-400TF
			D 302	Diode	DZ2S068C
			D 303	Diode	DZ2S068C
			D 351	Schottky Diode	RB751SM-40
			D 352	Schottky Diode	RB751SM-40
			D 701	Diode	DZ2S068C
			D 702	Diode	DZ2S068C
			D 802	Diode	DZ2S068C
			D 803	Diode	DZ2S068C
			D 804	Diode	DZ2S068C
			D 805	Diode	DZ2S068C
			D 806	Diode	DZ2S068C
			D 807	Diode	DZ2S068C
			D 812	Diode	DZ2S068C
			D 813	Diode	DZ2S068C
			D 815	Diode	DZ2S068C
			D 816	Diode	DZ2S068C
			D 817	Diode	DZ2S068C
			D 911	Diode	RR264MM-400TF
			D 912	Diode	RR264MM-400TF

MISCELLANEOUS

5		6	7	8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
L 101	Choke Coil	CTH1620	R 178	RS1/16SS1003D
L 151	SMD SPL Inductor	CTH1521	R 179	RS1/16SS7503D
			R 180	RS1/16SS1603D
L 152	SMD SPL Inductor	CTH1584	R 182	RS1/16SS820J
L 193	Inductor(A,B)	CTF1786	R 184	RS1/16SS512J
L 301	Common Mode Choke Coil	ATH7015		
L 552	Inductor	CTF1736	R 185	RS1/16SS102J
L 602	Inductor(A,B)	CTF1389	R 187	RS1/16SS1203D
			R 188	RS1/16SS1802D
L 603	Chip Coil(C)	LCTAWR27J2520	R 189	RS1/16SS6802D
L 604	Chip Coil(C)	LCTAW3R3J2520	R 190	RS1/16SS3903D
L 605	Inductor(A,B)	LCYC150K1608		
L 606	Inductor	CTF1786	R 192	RS1/16SS102J
L 609	Inductor(C)	CTF1786	R 193 (C)	RS1/16SS0R0J
			R 194 (C)	RS1/16SS0R0J
L 610	Inductor	LCMAR27J1608	R 251	RS1/16SS101J
L 611	SMD SPL Inductor(C)	LCYAR82J2016	R 252	RS1/16SS101J
L 613	Inductor	CTF1786		
L 701	Inductor	CTF1389	R 253	RS1/16SS101J
L 801	Common Mode Choke Coil	ATH7015	R 256	RS1/16SS222J
			R 301	RS1/16SS473J
T 601	Variable Coil	CTC1215	R 302	RS1/10SR0R0J
X 351	Crystal Resonator 12.000000 MHz	CSS1876	R 323	RS1/16SS3002F
X 353	Resonator 16.93 MHz	CSS1794		
X 601	Crystal Resonator	CSS1867	R 325	RS1/16SS103J
P 601	Surge Absorber	IMSA-6803-01Y900	R 326	RS1/16SS103J
			R 327	RS1/16SS1001F
⚠ P753	Fuse 3.0 A	CEK1404	R 328	RS1/16SS103J
VA801	SMD Varistor	MLV0402ES012V0010N	R 337	RS1/16SS0R0J
VA802	SMD Varistor	MLV0402ES012V0010N		
CN251	Connector	VKN1192	R 353	RS1/16SS473J
CN701	Connector	VKN1192	R 354	RS1/16SS473J
			R 355	RS1/16SS103J
CN801	Connector	CKS6452	R 357	RS1/16SS473J
JA101	Plug	CKM1624	R 359	RS1/16SS0R0J
JA601	Antenna Jack	CKX1104		
JA751	Jack	CKB1109	R 360	RS1/16SS0R0J
JA781	Jack	CKN1103	R 364	RS1/16SS104J
			R 368	RS1/16SS102J
			R 369	RS1/16SS473J
			R 370	RS1/16SS473J
RESISTORS				
R 111		RS1/16SS223J		
R 112		RS1/16SS473J	R 371	RS1/16SS473J
R 113		RS1/16SS682J	R 373	RS1/16SS152J
R 114		RS1/4SA102J	R 374	RS1/16SS153J
R 121		RS1/16SS103J	R 375	RS1/16SS153J
			R 376	RS1/16SS473J
R 123		RS1/4SA102J		
R 151		RS1/16SS8202D	R 377	RS1/16SS103J
R 156		RS1/16SS102J	R 378	RS1/16SS473J
R 158		RS1/16SS2403D	R 380	RS1/16SS103J
R 159		RS1/16SS7502D	R 383	RS1/16SS222J
			R 384	RS1/16SS473J
R 160		RS1/16SS103J		
R 161		RS1/16SS4703D	R 385	RAB4CQ473J
R 162		RS1/16SS4303D	R 386	RS1/16SS473J
R 163		RS1/16SS3903D	R 387	RS1/16SS473J
R 164		RS1/16SS6202D	R 388	RS1/16SS473J
			R 389	RS1/16SS473J
R 165	30 mohm	CCN1401		
R 167		RS1/16SS102J	R 390	RS1/16SS473J
R 168		RS1/16SS102J	R 391	RS1/16SS221J
R 169		RS1/16SS102J	R 392	RS1/16SS221J
R 172		RS1/16SS393J	R 393	RS1/16SS221J
			R 394	RS1/16SS221J
R 173		RS1/16SS4703D		
R 174		RS1/16SS1503D	R 395	RS1/16SS221J
R 175		RS1/16SS393J	R 396	RS1/16SS221J
R 176		RS1/16SS103J	R 397	RS1/16SS473J
R 177		RS1/16SS472J	R 398	RS1/16SS473J
			R 399	RS1/16SS101J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 400	RS1/16SS473J	R 717	RS1/16SS331J
	R 401	RS1/16SS102J	R 718	RS1/16SS221J
	R 402	RS1/16SS473J	R 719	RS1/16SS104J
	R 403	RS1/16SS473J	R 721	RS1/16SS472J
	R 404	RS1/16SS473J	R 722	RS1/16SS472J
	R 409	RS1/16SS472J	R 723	RS1/16SS472J
	R 411	RS1/16SS472J	R 724	RS1/16SS0R0J
	R 412	RS1/16SS104J	R 751	RS1/16SS821J
	R 413	RS1/16SS101J	R 752	RS1/16SS821J
	R 414	RS1/16SS101J	R 753	RS1/16SS223J
B	R 415	RS1/16SS101J	R 754	RS1/16SS223J
	R 416	RS1/16SS102J	R 755	RS1/16SS821J
	R 417	RS1/16SS101J	R 756	RS1/16SS821J
	R 418	RS1/16SS102J	R 757	RS1/16SS223J
	R 419	RS1/16SS102J	R 758	RS1/16SS223J
	R 420	RS1/16SS101J	R 764	RS1/16SS0R0J
	R 421	RS1/16SS473J	R 765	RS1/16SS0R0J
	R 424	RS1/16SS222J	R 789	RS1/16SS0R0J
	R 425	RS1/16SS103J	R 795 (B,C)	RS1/16SS681J
	R 426 (B)	RS1/16SS0R0J	R 798 (B,C)	RS1/16SS681J
	R 428	RS1/16SS0R0J	R 799 (B,C)	RS1/16SS822J
	R 431	RS1/16SS473J	R 800 (B,C)	RS1/16SS822J
	R 432	RS1/16SS103J	R 801	RS1/10SR222J
	R 433	RS1/16SS102J	R 803	RS1/16SS223J
	R 434	RS1/16SS102J	R 804	RS1/16SS223J
C	R 501	RS1/16SS473J	R 805	RS1/10SR101J
	R 502	RS1/16SS222J	R 806	RS1/10SR101J
	R 503	RS1/16SS222J	R 807	RS1/10SR101J
	R 504	RS1/16SS272J	R 808	RS1/10SR222J
	R 505	RS1/16SS472J	R 809	RS1/10SR220J
	R 506	RS1/16SS472J	R 810	RS1/10SR220J
	R 507	RS1/16SS101J	R 813	RS1/10SR222J
	R 508	RS1/16SS101J	R 814	RS1/10SR222J
	R 603 (A,B)	RS1/16SS391J	R 815	RS1/16SS822J
	R 603 (C)	RS1/16SS101J	R 816	RS1/10SR222J
D	R 604	RS1/16SS105J	R 817	RS1/10SR222J
	R 605	RS1/16SS105J	R 821 (B)	RS1/16SS0R0J
	R 606	RS1/16SS101J	R 841	RS1/16SS472J
	R 607	RS1/16SS101J	R 859	RS1/16SS103J
	R 608	RS1/16SS103J	R 901	RS1/16SS103J
	R 610	RS1/16SS103J	R 902	RS1/16SS221J
	R 617	RS1/16SS0R0J	R 903	RS1/16SS223J
	R 620 (A,B)	RS1/16SS0R0J		
	R 637	RS1/16SS472J		
	R 638	RS1/16SS472J		
E	R 651	RS1/16SS0R0J		
	R 652	RS1/16SS0R0J		
	R 653 (A)	RS1/10SR0R0J		
	R 656 (C)	RS1/16SS0R0J		
	R 701	RS1/16SS473J		
	R 702	RS1/16SS104J		
	R 704	RS1/16SS104J		
	R 706	RS1/16SS221J		
	R 707	RS1/16SS221J		
	R 708	RS1/16SS101J		
F	R 709	RS1/16SS221J		
	R 710	RS1/16SS101J		
	R 711	RS1/16SS102J		
	R 715	RS1/16SS331J		
	R 716	RS1/16SS331J		

CAPACITORS

C 101	2 200 uF/16 V	CCH1405
C 111		CKSRYB103K50
C 121		CKSRYB103K50
C 123		CKSRYB104K16
C 151		CEVW221M16
C 152	1 uF	CCG1393
C 153	10 uF	CCG1236
C 154	1 uF/10 V	DCH1266
C 156		CEAT102M16
C 157	10 uF	CCG1236
C 158	1 uF	DCH1246
C 160	10 uF	CCG1236
C 162		CCSSCH391J50
C 163		CEVQW221M6R3
C 164		CCSSCH471J50

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 165	CCSSCH102J50	C 389	CKSSYB104K10
C 166 10 uF	CCG1192	C 390	CCSSCH100D50
C 167 10 uF	CCG1192	C 391	CCSSCH220J50
C 169 10 uF	CCG1192	C 392	CCSSCH220J50
C 171 10 uF	CCG1236	C 393	CCSSCH220J50
			A
C 172 10 uF	CCG1236	C 394	CKSSYB104K10
C 174	CKSRYB105K10	C 395	CKSSYB103K16
C 177 10 uF(A,B)	CCG1192	C 398 1 uF(A,C)	DCH1246
C 177 10 uF(C)	CCG1222	C 399	CKSSYB104K10
C 178	CCSSCH391J50	C 400	CCSSCH100D50
C 179	CKSSYB102K50	C 501	CKSSYB104K10
C 180 10 uF	CCG1192	C 502	CKSSYB104K10
C 181	CEVQW221M6R3	C 551	CKSRYB105K10
C 183 4.7 uF	CCG1212	C 553	CKSRYB105K10
C 184 (B)	CKSRYB105K10	C 554 1 uF	DCH1246
			B
C 185	CEVW221M10	C 555	CKSRYB105K10
C 186	CCSSCH331J50	C 560	CKSRYB105K10
C 187	CKSRYB104K50	C 561	CKSRYB105K10
C 188 (A)	CKSRYB105K10	C 562	CKSRYB105K10
C 188 (B)	CKSRYB102K50	C 563 10 uF	CCG1192
C 192 22 uF	CCG1254	C 564	CEVW470M16
C 194 (B,C)	CKSRYB103K50	C 565	CKSSYB104K10
C 195 1 uF	CCG1382	C 568	CKSSYB104K10
C 196 1 uF	DCH1246	C 569	CKSSYB104K10
C 197	CKSRYB105K16	C 570 10 uF	CCG1192
			C
C 198	CEAT102M16	C 573 1 uF/10 V	DCH1266
C 199	CKSSYB122K50	C 574 1 uF/10 V(C)	DCH1266
C 252	CCSSCH470J50	C 575 10 uF	CCG1192
C 253	CKSSYB104K10	C 576	CKSSYB104K10
C 255 2.2 uF	CCG1205	C 577 10 uF	CCG1192
C 321	CKSSYB104K10	C 583 10 uF	CCG1192
C 322 10 uF	CCG1192	C 584	CKSSYB104K10
C 323 10 uF	DCH1201	C 585	CKSSYB104K10
C 351	CKSSYB104K10	C 586	CKSSYB104K10
C 352	CKSSYB104K10	C 587	CKSSYB102K50
C 353	CKSSYB104K10	C 589 1 uF/10 V	DCH1266
C 354	CKSSYB104K10	C 590	CKSRYB105K10
C 357	CKSSYB104K10	C 591 (A,B)	CCSRCH391J50
C 359 1 uF/10 V	DCH1266	C 602 (C)	CCSSCK2R0C50
C 361	CKSSYB104K10	C 603 (C)	CCSSCK1R0C50
C 362 (A,B)	CKSSYB104K10	C 604 (C)	CCSSCK1R0C50
C 362 (C)	CCSSCH101J50	C 605 (C)	CCSSCH120J50
C 363 (A,B)	CKSSYB104K10	C 607	CKSSYB102K50
C 363 (C)	CKSSYB102K50	C 610	CKSSYB152K50
C 364 (C)	CCSSCH120J50	C 611	CCSSCH331J50
C 365 (A,B)	CCSSCH120J50	C 612	CCSSCH220J50
C 366	CCSSCH120J50	C 613	CCSSCH100D50
C 368	CKSSYB102K50	C 615	CKSSYB104K10
C 369	CKSSYB104K10	C 617	CKSSYB102K50
C 375	CCSSCH120J50	C 618	CKSSYB224K6R3
			E
C 376	CCSSCH120J50	C 620 (A,B)	CKSSYB104K10
C 377	CKSRYB105K10	C 620 1 uF/10 V(C)	DCH1266
C 379	CCSSCJ3R0C50	C 621	CCSSCH390J50
C 381	CKSSYB104K10	C 624 2.2 uF	CCG1205
C 383	CKSSYB104K10	C 626 10 uF	CCG1192
C 384	CCSSCH220J50	C 627 (C)	CCSSCH330J50
C 385	CKSSYB104K10	C 630 1 uF/10 V	DCH1266
C 386	CKSSYB104K10	C 631 (A,C)	CCSSCH391J50
C 387	CKSSYB104K10	C 631 (B)	CKSSYB102K50
C 388 (A,B)	CCSRCH330J50	C 632	CKSRYB104K16
			F

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 633
C 635 (B,C)
C 636 (A)
C 637 (A,B)
C 639

CKSRYB104K16
CCSSCH101J50
CKSSYB102K50
CKSSYB104K10
CCSSCH471J50

S 1828 Push Switch
S 1829 Push Switch
S 1830 Push Switch
S 1831 Push Switch
S 1832 Push Switch

CSG1155
CSG1155
CSG1155
CSG1155
CSG1155

C 701
C 702
C 709
C 751 10 uF
C 752 10 uF

CKSSYB103K16
CKSSYB103K16
CKSSYB104K10
CCG1192
CCG1192

S 1833 Push Switch
S 1834 Push Switch
S 1835 Push Switch
S 1836 Encoder (MULTI-CONTROL)
CN1941 Connector

CSG1155
CSG1155
CSG1155
CSD1193
CKS6451

C 755 10 uF
C 756 10 uF
C 760
C 785
C 786

DCH1201
CCG1192
CKSSYB104K10
CKSRYB102K50
CKSRYB102K50

JA 1901 Connector
JA 1921 Jack
V 1801 LCD

CKS6443
CKN1090
CAW2056

RESISTORS

C 787
C 788
C 801
C 803
C 806

CKSRYB104K16
CKSRYB104K16
CCSRCH102J50
CKSRYB105K10
CKSRYB104K16

R 1801
R 1821
R 1841
R 1842
R 1843

RS1/10SR103J
RS1/10SR273J
RS1/10SR332J
RS1/10SR152J
RS1/10SR332J

C 807
C 809
C 810
C 811
C 851

CKSRYB105K10
CCSRCH221J50
CCSRCH221J50
CKSSYB104K10
CKSRYB474K10

R 1844
R 1845
R 1846
R 1847
R 1849

RS1/10SR152J
RS1/10SR332J
RS1/10SR152J
RS1/10SR680J
RS1/10SR680J

C 853
C 855
C 857
C 863 2.2 uF
C 864

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CCG1205
CKSRYB104K50

R 1851
R 1865
R 1866
R 1867
R 1868

RS1/10SR680J
RS1/10SR332J
RS1/10SR152J
RS1/10SR332J
RS1/10SR152J

C 866
C 868 10 uF/16 V
C 901
C 913

CKSRYB105K16
DCH1263
CKSRYB105K10
CKSRYB104K50

R 1869
R 1870
R 1871
R 1873
R 1875

RS1/10SR332J
RS1/10SR152J
RS1/10SR680J
RS1/10SR680J
RS1/10SR680J

B
Unit Number: QWM4370
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801 IC
IC 1951 IC
Q 1841 Bipolar Transistor
Q 1842 Bipolar Transistor
Q 1843 Bipolar Transistor

PDC205A
PNJ4833M
LSCR523UB
LSCR523UB
LSCR523UB

R 1923
R 1941
R 1942
R 1953

RS1/10SR0R0J
RS1/10SR222J
RS1/10SR222J
RS1/10SR101J

Q 1847 Bipolar Transistor
Q 1848 Bipolar Transistor
Q 1849 Bipolar Transistor
D 1841 LED
D 1842 LED

LSCR523UB
LSCR523UB
LSCR523UB
NSSM124-6717
NSSM124-6717

D 1843 LED
D 1844 LED
D 1845 LED
X 1801 Ceramic Resonator 5.00 MHz
S 1821 Push Switch

NSSM124-6717
NSSM124-6717
NSSM124-6717
CSS1547
CSG1155

S 1822 Push Switch
S 1823 Push Switch
S 1825 Push Switch
S 1826 Push Switch
S 1827 Push Switch

CSG1155
CSG1155
CSG1155
CSG1155
CSG1155

CAPACITORS

C 1801 4.7 uF
C 1802
C 1803
C 1804
C 1805

C 1856
C 1901
C 1902
C 1904
C 1905

CCG1212
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16

CKSRYB105K16
CKSRYB104K16
CKSRYB102K50
CKSRYB105K10
CKSRYB105K10

C 1923
C 1951 10 uF

CCSRCH221J50
CCG1192

5
Circuit Symbol and No. **Part No.**
C
Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201	IC	PEQ094A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS152J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS102J
R 217	RS1/16SS562J
R 218	RS1/16SS472J
R 229	RS1/16SS471J
R 232	RS1/16SS0R0J
R 237	RS1/16SS221J
R 240	RS1/16SS473J
R 245	RS1/16SS104J
R 254	RS1/16SS104J
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J
R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J
R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J

CAPACITORS

C 104	CKSQYB475K6R3
C 110	CKSSYB104K10
C 111	CKSSYB103K16
C 203	CKSSYB104K10

7 Circuit Symbol and No.	8 Part No.	
C 205	CKSRYB105K10	
C 209	CKSRYB104K16	
C 210	CKSSYB104K10	A
C 211	CKSSYB104K10	
C 212	CKSSYB104K10	
C 213	CKSSYB332K50	
C 214	CKSSYB473K16	
C 215	CKSSYB104K10	
C 216	CKSSYB152K50	
C 217	CCSSCH390J50	
C 218	CCSSCH5R0C50	
C 219	CKSSYB104K10	
C 220	CKSSYB104K10	
C 221	CKSSYB104K10	B
C 222	CKSSYB104K10	
C 223	CCSSCH680J50	
C 224	CCSSCH470J50	
C 225	CKSSYB103K16	
C 228	CCSSCH180J50	
C 229	CKSSYB104K10	
C 233	CKSSYB103K16	
C 236	CKSSYB104K10	
C 238	CKSRYB104K16	
C 299	CKSSYB104K10	
C 302	CKSSYB102K50	C
C 303	CKSSYB102K50	
C 304	CKSSYB223K16	
C 305	CKSSYB104K10	
C 306	CKSSYB104K10	
C 307	CKSRYB105K10	
C 308	CKSRYB105K10	
C 710	CKSSYB102K50	

D
Unit Number : CWX4023
Unit Name : CD Core Unit(S11.6STD)

MISCELLANEOUS

IC 201	IC	PE5791A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS222J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS122J
R 217	RS1/16SS562J
R 218	RS1/16SS472J

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.C 307
C 308
C 710CKSRYB105K10
CKSRYB105K10
CKSSYB102K50**Unit Number : QWM4410****Unit Name : BT Unit****MISCELLANEOUS**IC 21 Regulator IC
IC 22 Regulator IC
CN21 B to B Connector
CN23 ConnectorMM3479A18P
MM3411A33N
CKS6346
CKS3857**RESISTORS**R 28
R 29
R 30
R 38
R 39RS1/16SS222J
RS1/16SS102J
RS1/16SS102J
RS1/16SS0R0J
RS1/16SS221JR 40
R 41RS1/16SS221J
RS1/16SS221J**CAPACITORS**C 23
C 24
C 26 4.7 uF
C 29
C 33 4.7 uFCEVW221M4
CKSRYB105K10
CCG1212
CKSRYB105K10
CCG1212C 34
C 36
C 38 4.7 uF
C 39 4.7 uF
C 40CKSRYB105K10
CKSRYB104K16
CCG1212
CCG1212
CKSRYB104K16R 229
R 232
R 237
R 240
R 245RS1/16SS471J
RS1/16SS0R0J
RS1/16SS221J
RS1/16SS473J
RS1/16SS104JR 254
R 260
R 264
R 281
R 282RS1/16SS104J
RS1/16SS103J
RS1/16SS102J
RS1/16SS560J
RS1/16SS560JR 291
R 294
R 303
R 304
R 305RS1/16SS560J
RS1/16SS471J
RS1/16SS123J
RS1/16SS123J
RS1/16SS102JR 306
R 307
R 308
R 309
R 310RS1/16SS472J
RS1/16SS102J
RS1/16SS472J
RS1/16SS473J
RS1/16SS472JR 311
R 312
R 313
R 701
R 702RS1/16SS472J
RS1/16SS472J
RS1/16SS472J
RS1/16SS101J
RS1/16SS101J

R 706

RS1/16SS221J

CAPACITORSC 104
C 203
C 209
C 210
C 211CKSQYB475K6R3
CKSSYB104K10
CKSRYB104K16
CKSSYB104K10
CKSSYB104K10C 212
C 213
C 214
C 215
C 216CKSSYB104K10
CKSSYB332K50
CKSSYB473K16
CKSSYB104K10
CKSSYB182K50C 217
C 218
C 219
C 220
C 221CCSSCH560J50
CCSSCH4R0C50
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10C 222
C 223
C 224
C 225
C 228CKSSYB104K10
CCSSCH680J50
CCSSCH470J50
CKSSYB103K16
CCSSCH270J50C 229
C 233
C 236
C 238
C 299CKSSYB104K10
CKSSYB103K16
CKSSYB104K10
CKSRYB104K16
CKSSYB104K10C 302
C 303
C 304
C 305
C 306CKSSYB102K50
CKSSYB102K50
CKSSYB223K16
CKSSYB104K10
CKSSYB104K10