



EXPLODED VIEW (MECHANISM)

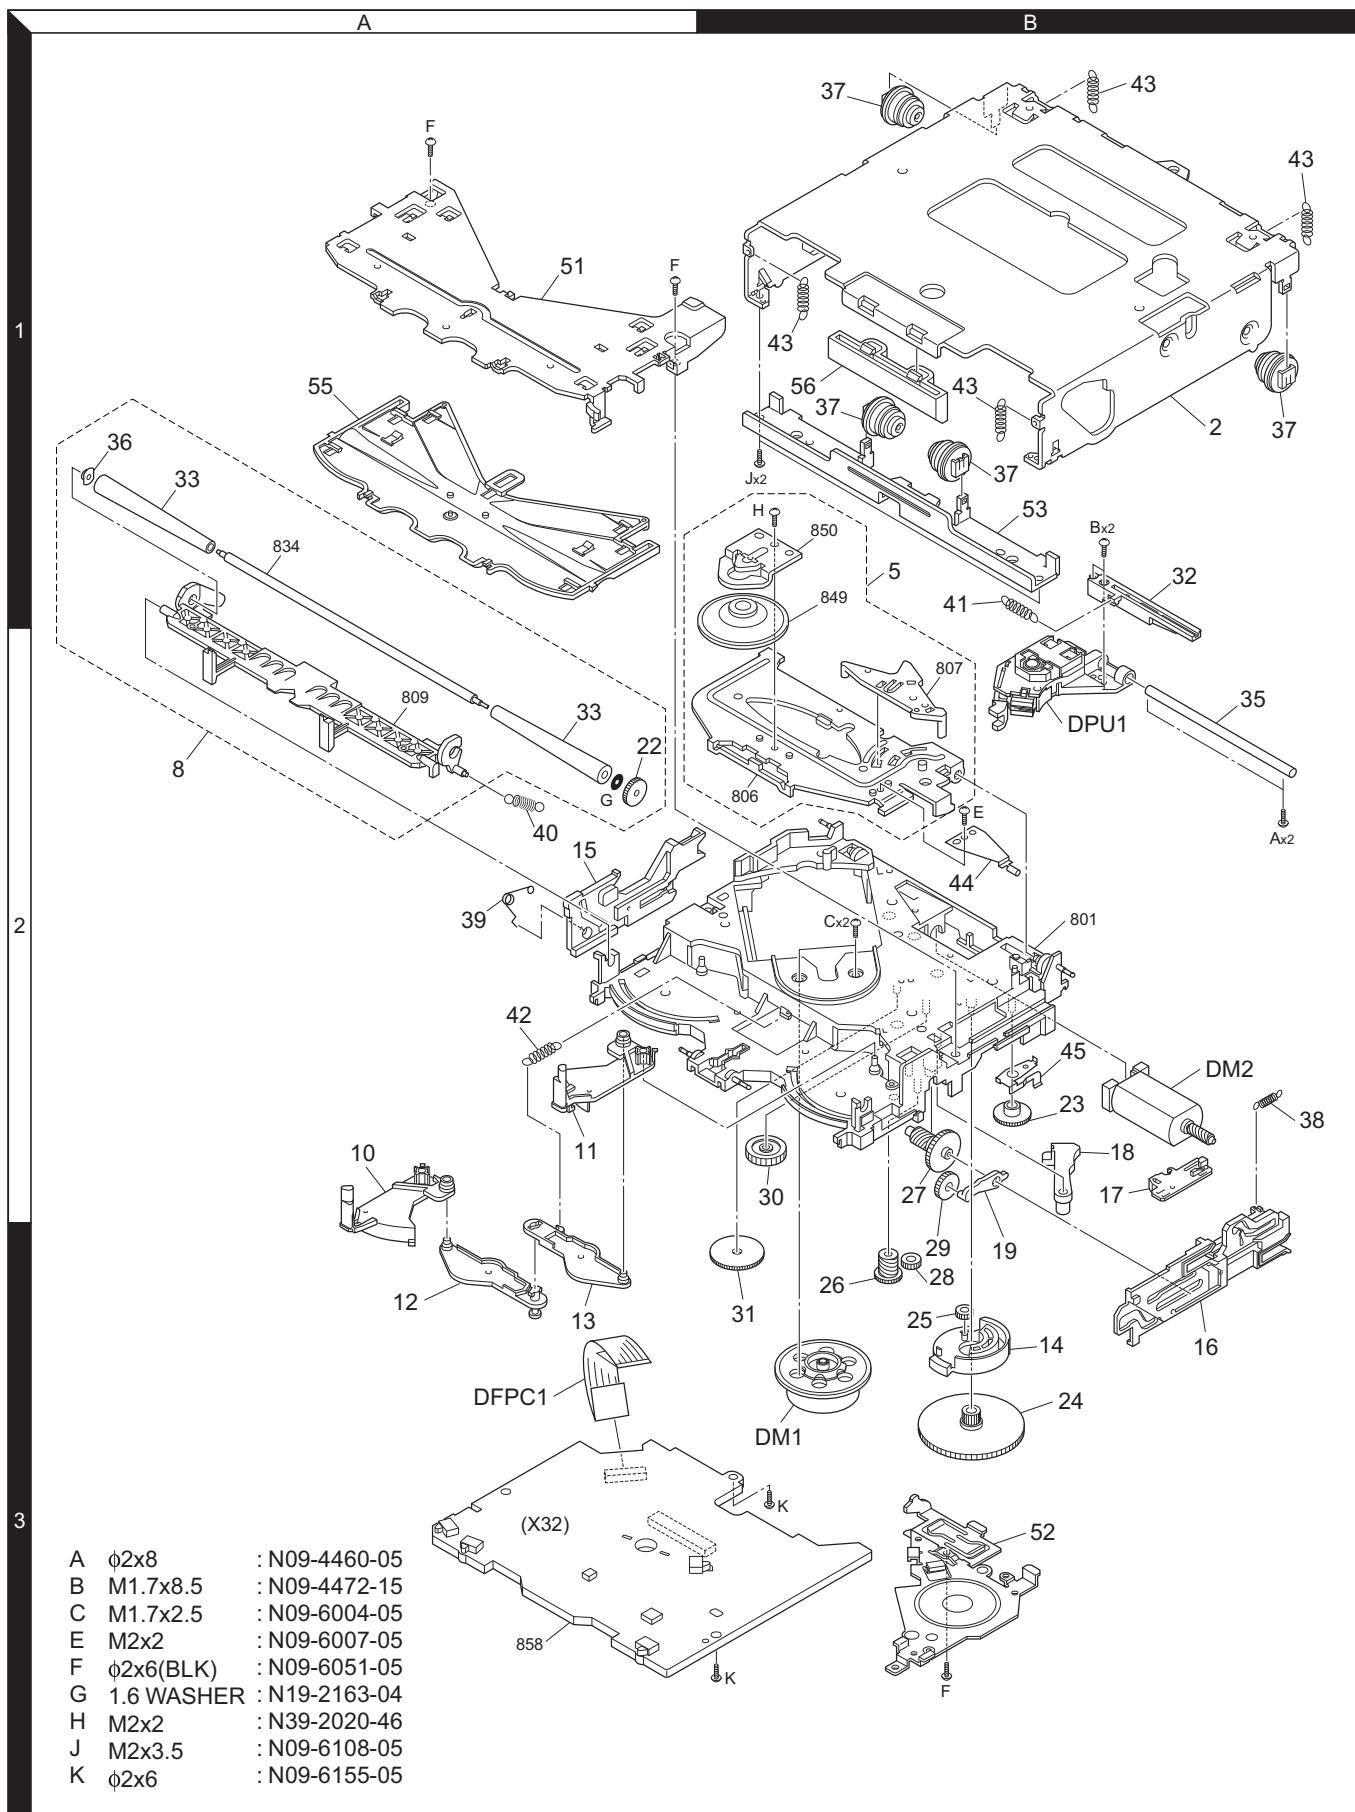

EXPLODED VIEW (UNIT)

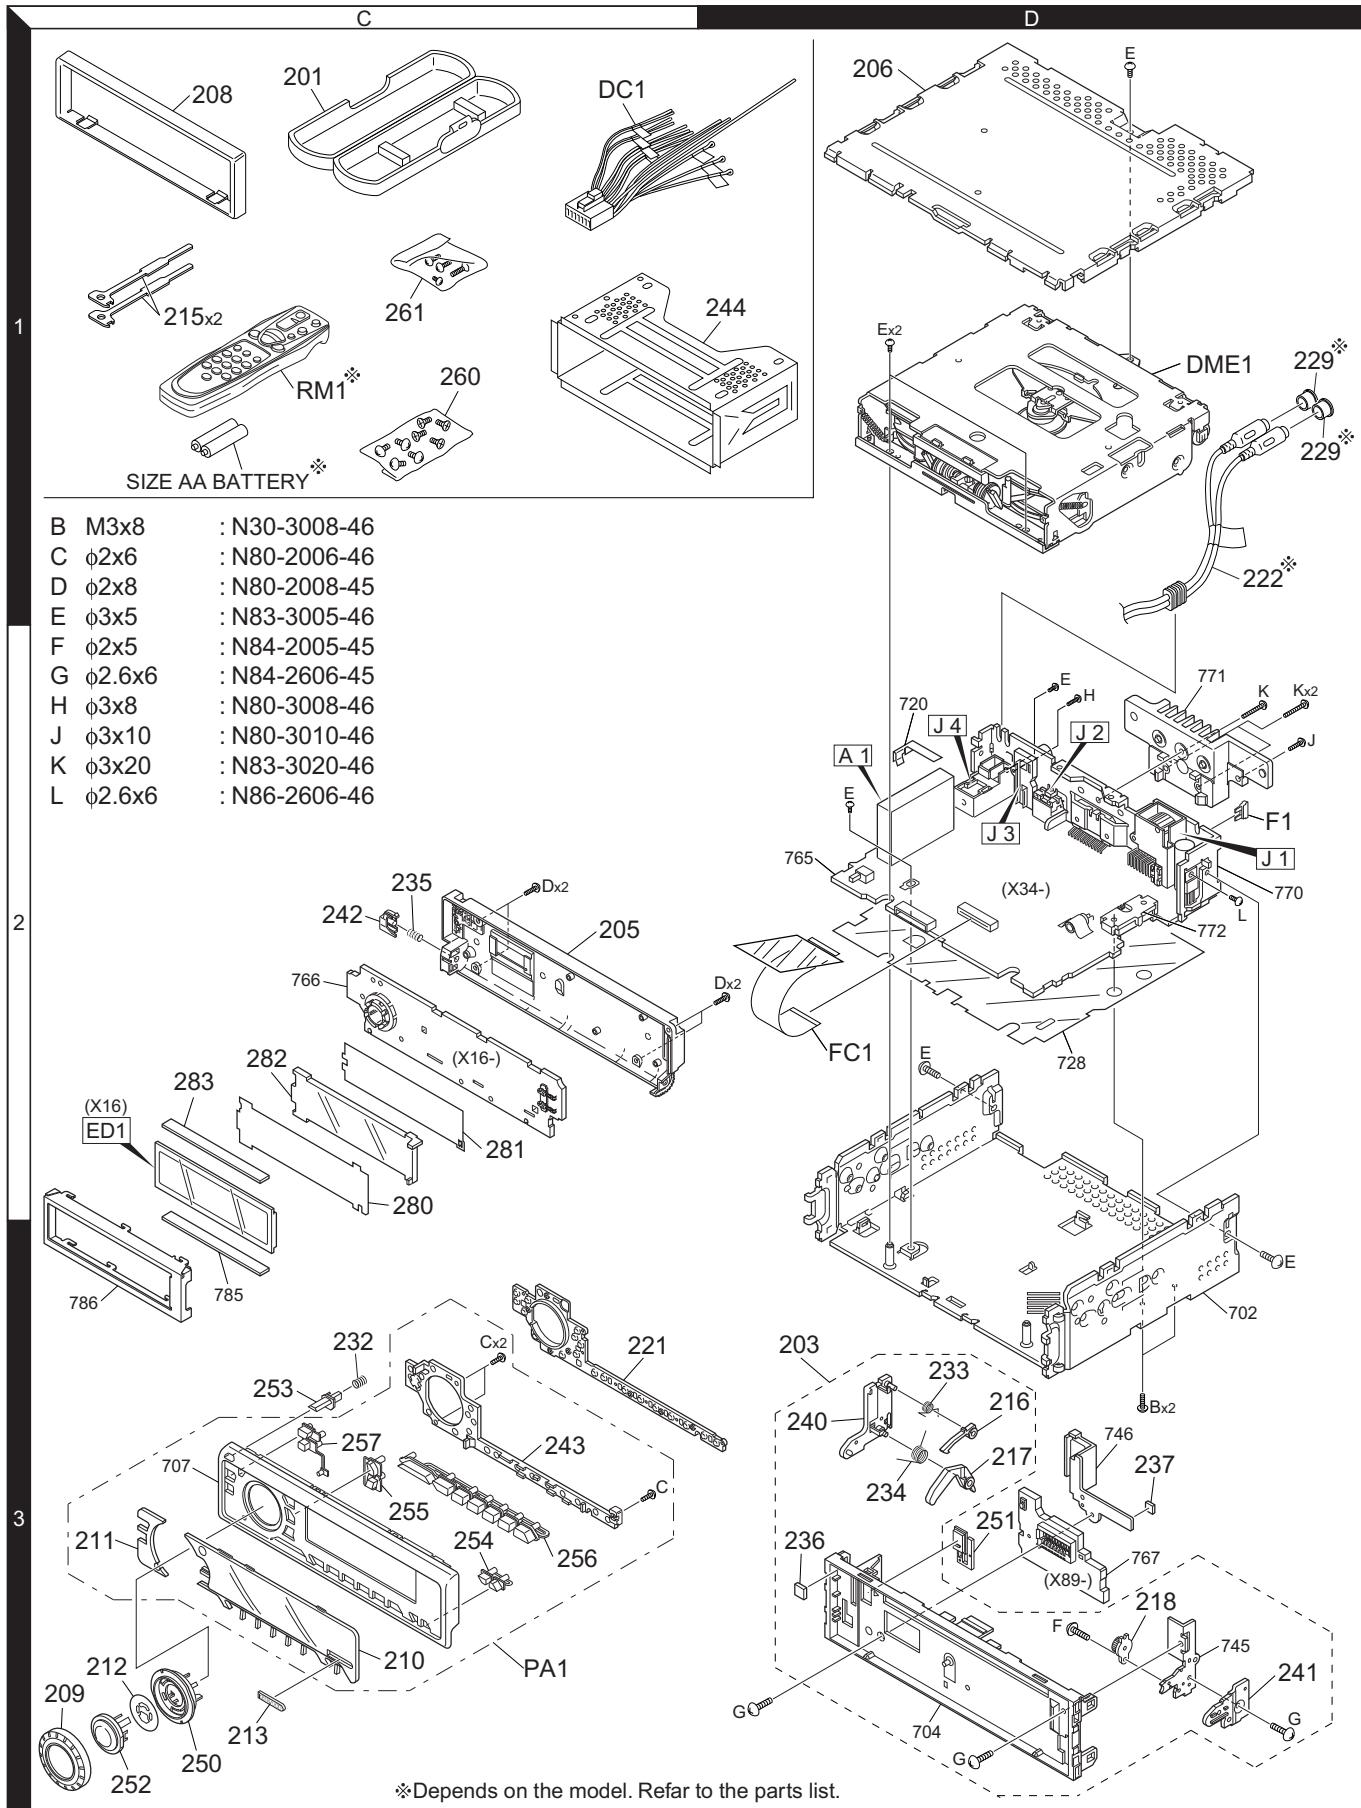

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-3025/325/5026/G											
201	1C	*	A02-1486-13	PLASTIC CABINET ASSY		-	*	*	H54-3011-03	ITEM CARTON CASE	M1
203	3D		A22-2982-22	SUB PANEL ASSY		-	*	*	H54-3012-03	ITEM CARTON CASE	M
205	2C	*	A46-1797-01	REAR COVER		240	3D		J19-5203-03	HOLDER (LEFT)	
206	1D		A52-0829-02	TOP PLATE		241	3D		J19-5204-03	HOLDER (RIGHT)	
PA1	3C	*	A64-3183-12	PANEL ASSY	K	242	2C		J19-5205-03	HOLDER (REAR COVER)	
PA1	3C	*	A64-3185-12	PANEL ASSY	K1	243	3C	*	J19-5271-02	HOLDER	
PA1	3C	*	A64-3190-12	PANEL ASSY	M	244	1D		J22-0011-03	MOUNTING HARDWARE ASSY	
PA1	3C	*	A64-3191-12	PANEL ASSY	M1	250	3C	*	K23-1081-03	KNOB (ROTARY)	
RM1	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	KK1M1	251	3D		K24-4000-03	KNOB (EJECT)	
-			B46-0100-50	WARRANTY CARD	KK1	252	3C	*	K24-4102-03	KNOB (SRC)	
-			B46-0606-04	ID CARD	MM1	253	3C	*	K24-4103-04	KNOB (REL)	
-			B46-0612-14	ID CARD	MM1	254	3C	*	K25-1593-03	KNOB (AUTO/CLK)	
-		*	B46-0653-03	USER CARD	KK1	255	3C	*	K25-1594-03	KNOB (PLAY/Q)	
-		*	B64-2694-00	INSTRUC. MANUAL (ENG.FRE.SPA.)	KK1	256	3C	*	K25-1641-02	KNOB (PRESET)	
-		*	B64-2697-00	INSTRUCTION MANUAL (ENG.T-CHI.)	MM1	257	3C	*	K25-1642-03	KNOB (FM/AM)	
-		*	B64-2698-00	INSTRUCTION MANUAL (ARABIC)	MM1	260	1C		N99-1719-05	SCREW SET	
208	1C		B07-3083-02	ESCU TCHEON	M	261	1C		N99-1730-15	SCREW SET (TENJI)	
208	1C		B07-3098-02	ESCU TCHEON	KM1	B	3D		N30-3008-46	PAN HEAD MACHINE SCREW (M3X8)	
208	1C	*	B07-3100-02	ESCU TCHEON	K1	C	3C		N80-2006-46	PAN HEAD TAPPIE SCREW (2X6)	
209	3C	*	B09-0533-03	CAP (ROTARY)	K	D	2C		N80-2008-45	PAN HEAD TAPPIE SCREW (2X8)	
210	3C	*	B10-4471-11	FRONT GLASS	K	E	1D		N83-3005-46	PAN HEAD TAPPIE SCREW (3X5)	
210	3C	*	B10-4473-11	FRONT GLASS	K1	F	3D		N84-2005-45	PAN HEAD TAPPIE SCREW	
210	3C	*	B10-4478-11	FRONT GLASS	M	G	3D		N84-2606-45	PAN HEAD TAPPIE SCREW (2.6X6)	
210	3C	*	B10-4479-11	FRONT GLASS	M1	DME1	1D		X92-4650-00	CD MECHANISM ASSY	
SWITCH UNIT (X16-2500-xx)											
211	3C	*	B10-4493-12	FRONT GLASS	KK1M1	280	2D	*	B11-1439-04	OPTICAL DIFFUSER	
211	3C	*	B10-4496-12	FRONT GLASS	M	281	2D	*	B11-1441-04	REFLECTION SHEET	
212	3C	*	B11-1440-04	OPTICAL DIFFUSER		282	2D	*	B19-2243-02	LIGHTING BOARD	
213	3C	*	B43-1518-04	BADGE		D1			B30-1564-05	LED (1608,BLUE)	
215	1C		D10-4589-04	LEVER		D2			B30-1566-05	LED (1608,RED)	MM1
216	3D		D10-4730-03	LEVER (LOCK)		D2-13			B30-1566-05	LED (1608,RED)	KK1
217	3D		D10-4731-03	LEVER (PUSH)		D3-13			B30-1565-05	LED (1608,PG)	MM1
218	3D		D39-0255-05	DAMPER		D31,32			B30-1571-05	LED (WHITE)	
221	3C	*	E29-1967-02	CONDUCTIVE RUBBER	K1	ED1		*	B38-1135-05	LIQUID CRYSTAL	MM1
222	1D		E30-6229-05	CORD WITH PINPLUG (1PRE FRONT)		ED1		*	B38-1141-05	LIQUID CRYSTAL	KK1
DC1	1C		E30-6322-05	DC CORD		C6			CK73GB1H103K	CHIP C 0.010UF	K
FC1	2D		E39-0476-05	FLAT CABLE (22PIN)		C7			CK73FB1A225K	CHIP C 2.2UF	K
229	1D		F29-0626-04	INSULATING COVER	K1	C8			CK73GB1H103K	CHIP C 0.010UF	K
△ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) (32V 10A)		C10-13			CK73GB1H103K	CHIP C 0.010UF	K
232	3C		G01-3203-04	COMPRESSION SPRING		283	2D	*	E29-1968-04	CONDUCTIVE RUBBER	
233	3D		G01-3171-04	TORSION COIL SPRING (LOCK)		J1			E59-0829-05	RECTANGULAR PLUG	
234	3D		G01-3172-04	TORSION COIL SPRING (PUSH)		CP1			R90-0714-05	MULTI-COMP 10K X4	
235	2C		G01-3173-04	COMPRESSION SPRING (REAR COVER)		CP2			R90-1016-05	MULTI-COMP 470 X4	
236	3D		G13-1267-04	CUSHION		CP3,4			R90-0724-05	MULTI-COMP 1K X4	
237	3D	*	G13-1273-04	CUSHION		R7			RK73GB2A102J	CHIP R 1.0K J 1/10W	
-		*	H10-4856-12	POLYSTYRENE FOAMED FIXTURE	K1	R8			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
-		*	H13-2043-04	CARTON BOARD		R10			RK73GB2A101J	CHIP R 100 J 1/10W	
-		*	H25-0329-04	PROTECTION BAG (280X450X0.03)		R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	
-		*	H25-0337-04	PROTECTION BAG (180X300X0.03)		R16			RK73GB2A102J	CHIP R 1.0K J 1/10W	
-		*	H54-3003-03	ITEM CARTON CASE	K	R21			RK73FB2B561J	CHIP R 560 J 1/8W	
-		*	H54-3004-03	ITEM CARTON CASE	K1	R22-25			RK73FB2B331J	CHIP R 330 J 1/8W	
						R31			RK73FB2B271J	CHIP R 270 J 1/8W	

K : KDC-325 **K1** : KDC-3025 **M** : KDC-5026G **M1** : KDC-5026
 (**K** : North America **M** : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2500-xx)

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
S2			S70-0814-05	TACT SWITCH			
S1	*		T99-0449-05	ROTARY ENCODER			
IC1			NJU6535	MOS-IC			
IC2			PNA4S22M	ANALOGUE IC			
Q1			DTA114EE	DIGITAL TRANSISTOR			
Q4			DTC144EE	DIGITAL TRANSISTOR			

CD PLAYER UNIT (X32-5390-00)

C1			C92-0566-05	CHIP-TAN	10UF	6.3WV	
C2			CK73FB1A225K	CHIP C	2.2UF	K	
C3			CK73GB0J105K	CHIP C	1.0UF	K	
C5			CC73GCH1H020C	CHIP C	2.0PF	C	
C6			CC73GCH1H390J	CHIP C	39PF	J	
C7			CK73GB1C104K	CHIP C	0.10UF	K	
C8			CK73GB0J105K	CHIP C	1.0UF	K	
C9			CK73GB1H472K	CHIP C	4700PF	K	
C10			CK73GB1C333K	CHIP C	0.033UF	K	
C11			CK73GB1H682K	CHIP C	6800PF	K	
C12			CK73GB1H332K	CHIP C	3300PF	K	
C13			CC73GCH1H271J	CHIP C	270PF	J	
C14			CK73GB1H472K	CHIP C	4700PF	K	
C15			CK73GB1H222K	CHIP C	2200PF	K	
C16			CC73GCH1H331J	CHIP C	330PF	J	
C17,18			CK73GB1C104K	CHIP C	0.10UF	K	
C31-34			CK73GB1C104K	CHIP C	0.10UF	K	
C36			CK73FB1A225K	CHIP C	2.2UF	K	
C37-39			CK73GB1H103K	CHIP C	0.010UF	K	
C40			CK73GB1H153K	CHIP C	0.015UF	K	
C41			CK73GB1H102K	CHIP C	1000PF	K	
C42			CK73GB1E473K	CHIP C	0.047UF	K	
C43			CK73GB1H222K	CHIP C	2200PF	K	
C44			CK73GB1H102K	CHIP C	1000PF	K	
C45-47			CK73GB1C104K	CHIP C	0.10UF	K	
C48			CK73GB1H682K	CHIP C	6800PF	K	
C49			CK73GB1H152K	CHIP C	1500PF	K	
C50			CK73GB1H472K	CHIP C	4700PF	K	
C51			CK73GB1H681K	CHIP C	680PF	K	
C52			CK73GB1C104K	CHIP C	0.10UF	K	
C61			CK73FB1A225K	CHIP C	2.2UF	K	
C62			CK73GB1C104K	CHIP C	0.10UF	K	
C71,72			CK73GB1H471K	CHIP C	470PF	K	
C73,74			CC73GCH1H680J	CHIP C	68PF	J	
C75,76			CK73GB1H222K	CHIP C	2200PF	K	
C77,78			CK73GB1C104K	CHIP C	0.10UF	K	
C100-102			CK73GB1H102K	CHIP C	1000PF	K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR			
CN1			E41-0193-05	FLAT CABLE CONNECTOR			
CN2			E40-9339-05	FLAT CABLE CONNECTOR			
CN2			E41-0129-05	FLAT CABLE CONNECTOR			
X1			L78-0851-05	RESONATOR (16.93MHZ)			
CP1			R90-1019-05	MULTI-COMP	100 X2		
CP2			R90-1014-05	MULTI-COMP	100 X4		
CP3			R90-0974-05	MULT R	1.8K X4		

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
CP4			R90-0718-05	MULTI-COMP	4.7K	X4	
CP5			R90-0720-05	MULTI-COMP	100K	X4	
R1			RK73GB2A910J	CHIP R	91	J	1/10W
R2,3			RK73GB2A562J	CHIP R	5.6K	J	1/10W
R4			RK73FB2B100J	CHIP R	10	J	1/8W
R5,6			RK73GB2A332J	CHIP R	3.3K	J	1/10W
R7			RK73GB2A362J	CHIP R	3.6K	J	1/10W
R8			RK73GB2A273J	CHIP R	27K	J	1/10W
R9			RK73GB2A392J	CHIP R	3.9K	J	1/10W
R10			RK73GB2A104J	CHIP R	100K	J	1/10W
R11			RK73GB2A333J	CHIP R	33K	J	1/10W
R12			RK73GB2A244J	CHIP R	240K	J	1/10W
R13			RK73GB2A914J	CHIP R	910K	J	1/10W
R14			RK73GB2A104J	CHIP R	100K	J	1/10W
R15			RK73GB2A472J	CHIP R	4.7K	J	1/10W
R31			RK73GB2A273J	CHIP R	27K	J	1/10W
R32			RK73GB2A103J	CHIP R	10K	J	1/10W
R33			RK73GB2A183J	CHIP R	18K	J	1/10W
R34			RK73GB2A103J	CHIP R	10K	J	1/10W
R35			RK73GB2A393J	CHIP R	39K	J	1/10W
R36			RK73GB2A103J	CHIP R	10K	J	1/10W
R37			RK73GB2A622J	CHIP R	6.2K	J	1/10W
R38			RK73GB2A224J	CHIP R	220K	J	1/10W
R39			RK73GB2A104J	CHIP R	100K	J	1/10W
R40			RK73GB2A821J	CHIP R	820	J	1/10W
R41			RK73GB2A473J	CHIP R	47K	J	1/10W
R42			RK73GB2A472J	CHIP R	4.7K	J	1/10W
R43			RK73GB2A102J	CHIP R	1.0K	J	1/10W
R44,45			RK73GB2A103J	CHIP R	10K	J	1/10W
R46			RK73GB2A273J	CHIP R	27K	J	1/10W
R47			RK73GB2A222J	CHIP R	2.2K	J	1/10W
R48			RK73GB2A103J	CHIP R	10K	J	1/10W
R49			RK73GB2A473J	CHIP R	47K	J	1/10W
R50			RK73GB2A392J	CHIP R	3.9K	J	1/10W
R51			RK73GB2A103J	CHIP R	10K	J	1/10W
R52,53			RK73GB2A472J	CHIP R	4.7K	J	1/10W
R71			RK73GB2A133J	CHIP R	13K	J	1/10W
R72			RK73FB2B201J	CHIP R	200	J	1/8W
R81-86			RK73FB2B203J	CHIP R	20K	J	1/8W
R87,88			RK73FB2B331J	CHIP R	330	J	1/8W
R89,90			RK73GB2A332J	CHIP R	3.3K	J	1/10W
R91,92			RK73GB2A562J	CHIP R	5.6K	J	1/10W
R94			RK73GB2A104J	CHIP R	100K	J	1/10W
R100			RK73GB2A100J	CHIP R	10	J	1/10W
S1,2			S68-0863-05	PUSH SWITCH			
S3			S68-0862-05	PUSH SWITCH			
D1			DAN202U	DIODE			
D1			MA142WK	DIODE			
D2			MA8051-L	ZENER DIODE			
D3			DA204U	DIODE			
IC1			AN22002AA	ANALOGUE IC			
IC2			MN6627771KP	MOS-IC			
IC3			BA5824FP	ANALOGUE IC			
IC4			NJM4580M1	ANALOGUE IC			

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5390-00)

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
Q1			MCH6101	TRANSISTOR				CN2			E40-9550-05	FLAT CABLE CONNECTOR			
Q2			2SA1362(Y)	TRANSISTOR				CN3			E40-3238-05	PIN ASSY			K1
Q3			DTC124EUA	DIGITAL TRANSISTOR				J1			E58-0863-15	RECTANGULAR RECEPTACLE			
Q3			UN5212	DIGITAL TRANSISTOR				J2			E56-0834-05	CYLINDRICAL RECEPTACLE			
Q4			DTA143XUA	DIGITAL TRANSISTOR				J3			E63-0887-05	PIN JACK			
Q5			2SC4081	TRANSISTOR				J4			E04-0312-05	RF COAXIAL CABLE RECEPTACLE			
Q6			2SA1576A	TRANSISTOR				L1			L33-1170-05	CHOKE COIL ASSY			
ELECTRIC UNIT (X34-3090-xx)								L2			L33-1926-05	CHOKE COIL			
C1			C94-0216-05	ELECTRO	3300UF	16WV		L3			L33-1123-05	LINE FILTER COIL			
C2			CK73GB1H103K	CHIP C	0.010UF	K		L10,11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)			
C3			CK73GB1H102K	CHIP C	1000PF	K		X1			L78-0879-05	RESONATOR (10.0MHZ)			
C4-6			CK73GB1H103K	CHIP C	0.010UF	K		X2			L77-2793-05	CRYSTAL RESONATOR			
C20			C90-2962-05	ELECTRO	100UF	16WV		E	2D		N83-3005-46	PAN HEAD TAPITTE SCREW			
C21			CD04AS1A101M	ELECTRO	100UF	10WV		H	2D		N80-3008-46	PAN HEAD TAPITTE SCREW			
C22,23			CD04AS1E100M	ELECTRO	10UF	25WV		J	2D		N80-3010-46	PAN HEAD TAPITTE SCREW			
C24,25			CD04AS1C100M	ELECTRO	10UF	16WV		K	2D		N83-3020-46	PAN HEAD TAPITTE SCREW			
C26			CD04AS1E100M	ELECTRO	10UF	25WV		L	2D		N86-2606-46	BINDING HEAD TAPITTE SCREW			
C27			CD04AT1H100M	ELECTRO	10UF	50WV		R1			RK73GB2A823J	CHIP R 82K J 1/10W			
C28			C90-2980-05	ELECTRO	220UF	16WV		R2			RK73GB2A363J	CHIP R 36K J 1/10W			
C29			CD04AS1C100M	ELECTRO	10UF	16WV		R3			RK73GB2A104J	CHIP R 100K J 1/10W			
C51,52			CK73GB1H103K	CHIP C	0.010UF	K		R4			RK73FB2B203J	CHIP R 20K J 1/8W			
C111			CK73GB1H102K	CHIP C	1000PF	K		R5,6			RK73GB2A103J	CHIP R 10K J 1/10W			
C119			CK73GB1H103K	CHIP C	0.010UF	K		R7			RK73GB2A223J	CHIP R 22K J 1/10W			
C163			CK73GB1H103K	CHIP C	0.010UF	K		R8			RD14DB2H332J	SMALL-RD 3.3K J 1/2W			
C164			CD04AS1C100M	ELECTRO	10UF	16WV		R9			RD14BB2C333J	RD 33K J 1/6W			
C165			CK73GB1H103K	CHIP C	0.010UF	K		R10,11			RK73GB2A223J	CHIP R 22K J 1/10W			
C201,202			CD04AS1H2R2M	ELECTRO	2.2UF	50WV		R12			RK73GB2A473J	CHIP R 47K J 1/10W			
C203			CK73GB1H223K	CHIP C	0.022UF	K		R13			RD14BB2C562J	RD 5.6K J 1/6W			
C204			CK73GB1H103K	CHIP C	0.010UF	K		R21			RK73FB2B152J	CHIP R 1.5K J 1/8W			
C205			CK73GB1A474K	CHIP C	0.47UF	K		R22,23			RD14BB2C472J	RD 4.7K J 1/6W			
C206			CC73GCH1H151J	CHIP C	150PF	J		R24-28			RK73GB2A103J	CHIP R 10K J 1/10W			
C209			CD04AS1H2R2M	ELECTRO	2.2UF	50WV		R51,52			RK73GB2A222J	CHIP R 2.2K J 1/10W			
C210			CK73GB1H103K	CHIP C	0.010UF	K		R53-56			RK73GB2A102J	CHIP R 1.0K J 1/10W			
C211			CD04AS1A470M	ELECTRO	47UF	10WV		R58			RK73GB2A222J	CHIP R 2.2K J 1/10W			
C212,213			CK73GB1C104K	CHIP C	0.10UF	K		R59			RK73GB2A101J	CHIP R 100 J 1/10W			
C251-254			C94-0179-05	ELECTRO	0.22UF	50WV		R60			RK73GB2A102J	CHIP R 1.0K J 1/10W			
C255			CD04AS1H010M	ELECTRO	1UF	50WV		R61,62			RK73GB2A104J	CHIP R 100K J 1/10W			
C256			CD04AS1C220M	ELECTRO	22UF	16WV		R63			RK73GB2A222J	CHIP R 2.2K J 1/10W			
C257		*	CK73GB1A105K	CHIP C	1.0UF	K		R64,65			RK73GB2A104J	CHIP R 100K J 1/10W			
C258		*	C94-0048-05	ELECTRO	0.22UF	50WV		R67,68			RK73GB2A471J	CHIP R 470 J 1/10W			
C301,302		*	CD04AS1HR47M	ELECTRO	0.47UF	50WV		R101			RK73GB2A102J	CHIP R 1.0K J 1/10W			
C303			CD04AS1A470M	ELECTRO	47UF	10WV		R102			RK73GB2A471J	CHIP R 470 J 1/10W			
C304			CK73GB1H103K	CHIP C	0.010UF	K		R103			RK73GB2A472J	CHIP R 4.7K J 1/10W			
C306			CK73GB1H103K	CHIP C	0.010UF	K	K1	R104			RK73GB2A471J	CHIP R 470 J 1/10W			
C351-354			CD04AS1C100M	ELECTRO	10UF	16WV	KMM1	R105			RK73GB2A472J	CHIP R 4.7K J 1/10W			
C351,352			CD04AS1C100M	ELECTRO	10UF	16WV	KMM1	R106			RK73GB2A222J	CHIP R 2.2K J 1/10W			
C356			CK73GB1H103K	CHIP C	0.010UF	K	K1	R152-154			RK73GB2A471J	CHIP R 470 J 1/10W			
C356,357			CK73GB1H103K	CHIP C	0.010UF	K		R155			RK73GB2A222J	CHIP R 2.2K J 1/10W			
C401			CC73GCH1H180J	CHIP C	18PF	J		R157,158			RK73GB2A471J	CHIP R 470 J 1/10W			
C402			CC73GCH1H220J	CHIP C	22PF	J		R159			RK73GB2A102J	CHIP R 1.0K J 1/10W			
C403			CK73GB1C104K	CHIP C	0.10UF	K		R160			RK73GB2A222J	CHIP R 2.2K J 1/10W			
C409		*	CD04AS0J470M	ELECTRO	47UF	6.3WV		R161			RK73GB2A225J	CHIP R 2.2M J 1/10W			
C410,411			CK73GB1H103K	CHIP C	0.010UF	K		R162,163			RK73GB2A104J	CHIP R 100K J 1/10W			
CN1			E41-0167-05	PIN ASSY											

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3090-xx)

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
R164,165			RK73GB2A473J	CHIP R	47K	J 1/10W	
R166			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R167			RK73GB2A474J	CHIP R	470K	J 1/10W	
R168			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R184,185			RK73GB2A474J	CHIP R	470K	J 1/10W	
R186			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R187			RK73GB2A473J	CHIP R	47K	J 1/10W	
R201			RK73GB2A103J	CHIP R	10K	J 1/10W	
R202-204			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R205			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R206-208			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R209,210			RK73GB2A103J	CHIP R	10K	J 1/10W	
R251			RK73GB2A473J	CHIP R	47K	J 1/10W	
R253			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R254			RK73GB2A100J	CHIP R	10	J 1/10W	
R255			RK73GB2A331J	CHIP R	330	J 1/10W	
R256			RK73GB2A334J	CHIP R	330K	J 1/10W	
R257			RK73GB2A153J	CHIP R	15K	J 1/10W	
R301,302			RK73EB2E100J	CHIP R	10	J 1/4W	
R303			RK73EB2E101J	CHIP R	100	J 1/4W	
R304,305			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R306			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R307-309			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R310,311			RK73EB2E101J	CHIP R	100	J 1/4W	
R312-315			RK73GB2A104J	CHIP R	100K	J 1/10W	
R351,352			RK73GB2A361J	CHIP R	360	J 1/10W	
R355,356			RK73GB2A223J	CHIP R	22K	J 1/10W	
R357,358			RK73FB2B181J	CHIP R	180	J 1/8W	
R359,360			RK73GB2A361J	CHIP R	360	J 1/10W	
R361,362			RK73GB2A223J	CHIP R	22K	J 1/10W	
R363,364			RK73FB2B181J	CHIP R	180	J 1/8W	
R374			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R401			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R402,403			RK73GB2A104J	CHIP R	100K	J 1/10W	
R404			RK73GB2A223J	CHIP R	22K	J 1/10W	
R406			RK73GB2A223J	CHIP R	22K	J 1/10W	
R409			RK73GB2A223J	CHIP R	22K	J 1/10W	
R409,410			RK73GB2A223J	CHIP R	22K	J 1/10W	
R411			RK73GB2A223J	CHIP R	22K	J 1/10W	
R413			RK73GB2A223J	CHIP R	22K	J 1/10W	
R414			RK73GB2A104J	CHIP R	100K	J 1/10W	
R501			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
W102			R92-1252-05	CHIP R	0 OHM	J 1/16W	
W103,104			R92-2053-05	CHIP R	0	J 1/8W	
W201			R92-1252-05	CHIP R	0 OHM	J 1/16W	
W203			R92-1252-05	CHIP R	0 OHM	J 1/16W	
S1			S74-0821-05	MICRO SWITCH			
D1			1N5393G-M6	DIODE			
D2-4			MA4068(N)-M	ZENER DIODE			
D21			MA4082(N)-L	ZENER DIODE			
D22,23			AM01ZNF	DIODE			
D24,25			D1F60	DIODE			
D26,27			1SS133	DIODE			

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation
D151-155			MA4062-L	ZENER DIODE			
D157,158			MA4062-L	ZENER DIODE			
D160-163			MA4062-L	ZENER DIODE			
D201,202			MA4068(N)-M	ZENER DIODE			
D203			1SS133	DIODE			
D269			1SS133	DIODE			
D271			1SS133	DIODE			
D301-308			MA4062-L	ZENER DIODE			
D309-311			MA4068 (N)-M	ZENER DIODE			
D401			1SS133	DIODE			
IC1			M30302MC-1N4FP	MICROCONTROLLER IC			
IC2			TDA7407D	ANALOGUE IC			
IC3			BA4911-V4	ANALOGUE IC			
IC4		*	TB2903H	ANALOGUE IC			
IC6			HD74HC27FP-E	MOS-IC			
IC8			PST3435UL	MOS-IC			
IC10			BR24C01AF-W	ROM IC			KK1
Q1-3			2SC4081	TRANSISTOR			
Q4			2SA1036K	TRANSISTOR			
Q21			2SD2375	TRANSISTOR			
Q22,23			UMC2N	TRANSISTOR			
Q151			DTA114YUA	DIGITAL TRANSISTOR			
Q152			2SA1576A	TRANSISTOR			
Q153			DTC144EUA	DIGITAL TRANSISTOR			
Q154			KRC404	DIGITAL TRANSISTOR			
Q201			2SA1577	TRANSISTOR			
Q351,352			DTC143TUA	DIGITAL TRANSISTOR			
Q354			DTC143TUA	DIGITAL TRANSISTOR			
Q354			DTA124EUA	DIGITAL TRANSISTOR			
Q354			KRA303	DIGITAL TRANSISTOR			
K1			Q355,356	DIGITAL TRANSISTOR			K1
K1			Q501	DIGITAL TRANSISTOR			
K1			Q501	DIGITAL TRANSISTOR			
K1			Q502	DIGITAL TRANSISTOR			
K1			Q502	DIGITAL TRANSISTOR			
TH1			PTH9C42BE471Q	POSITIVE RESISTOR			
A1			X86-3720-11	FRONT-END UNIT			
DAUGHTER UNIT (X89-2570-10)							
C1			CK73GB1H103K	CHIP C	0.010UF	K	
CN1			E41-0169-05	SOCKET FOR PIN ASSY			
J1			E58-0865-05	RECTANGULAR RECEPTACLE			
R1			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R2-5			RK73EB2E471J	CHIP R	470	J 1/4W	
R6,7			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R8			RK73EB2E241J	CHIP R	240	J 1/4W	
R9,10			RK73EB2E471J	CHIP R	470	J 1/4W	
R11-13			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
S1			S70-0871-05	TACT SWITCH			
CD MECHANISM ASSY (X92-4650-00)							
2	1B	*	A10-4827-32	CHASSIS			

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD MECHANISM ASSY (X92-4650-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
5	1B	*	D10-4576-63	ARM ASSY							
8	2A		D10-4579-13	LEVER ASSY							
10	2A		D10-4581-13	ARM							
11	2A		D10-4582-13	ARM							
12	3A		D10-4583-03	ARM							
13	3A		D10-4584-03	ARM							
14	3B		D10-4585-03	ARM							
15	2A		D10-4586-13	SLIDER							
16	3B		D10-4587-32	SLIDER							
17	2B		D10-4588-13	SLIDER							
18	2B		D10-4595-04	ARM							
19	3B		D10-4596-14	ARM							
22	2A		D13-2151-04	GEAR							
23	2B		D13-2152-04	GEAR							
24	3B		D13-2153-04	GEAR							
25	3B		D13-2154-04	GEAR							
26	3B		D13-2155-04	WORM							
27	2B		D13-2156-14	GEAR							
28	3B		D13-2157-04	GEAR							
29	3B		D13-2158-04	GEAR							
30	2B		D13-2168-04	GEAR							
31	3B		D13-2171-04	GEAR							
32	2B		D13-2172-03	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER							
35	2B		D21-2382-04	SHAFT							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3072-04	EXTENSION SPRING							
39	2A		G01-3073-04	TORSION COIL SPRING							
40	2A		G01-3074-04	EXTENSION SPRING							
41	1B		G01-3075-14	EXTENSION SPRING							
42	2A		G01-3076-04	EXTENSION SPRING							
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
51	1A		J21-9676-22	MOUNTING HARDWARE							
52	3B	*	J21-9677-22	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
A	2B		N09-4460-05	TAPITTE SCREW (OVAL P TAPITIT)							
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)							
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)							
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-05	TAPITTE SCREW (BIND P 2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW							
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)							
K	3B		N09-6155-05	SEMS (TAPITTE SCREW) (PT2X6)							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)							
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY							