


EXPLODED VIEW (CD MECHANISM)

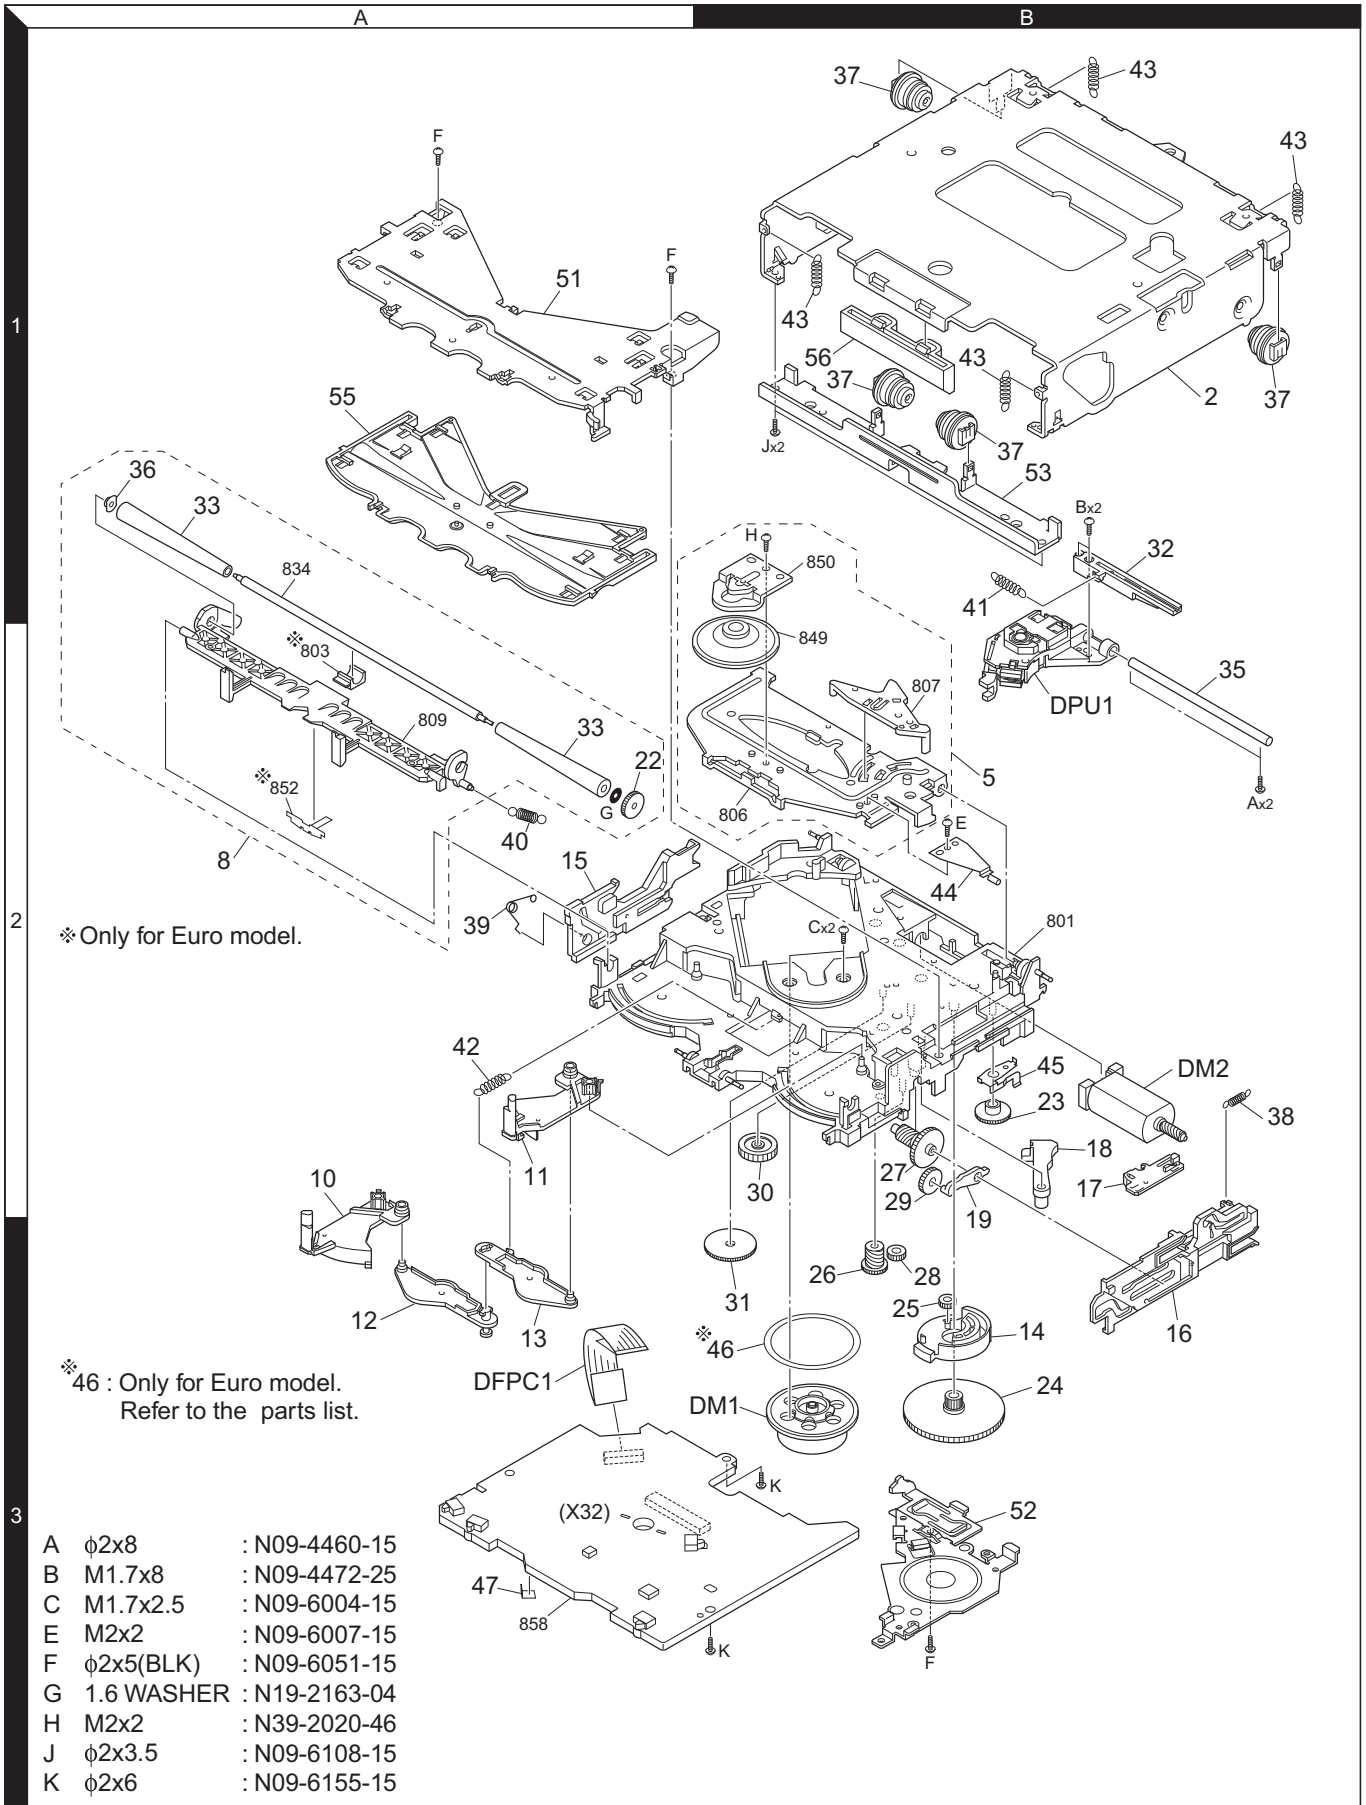


* Only for Euro model.

*46 : Only for Euro model.
Refer to the parts list.


A	φ2x8	: N09-4460-15
B	M1.7x8	: N09-4472-25
C	M1.7x2.5	: N09-6004-15
E	M2x2	: N09-6007-15
F	φ2x5(BLK)	: N09-6051-15
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	φ2x3.5	: N09-6108-15
K	φ2x6	: N09-6155-15

EXPLODED VIEW (UNIT)

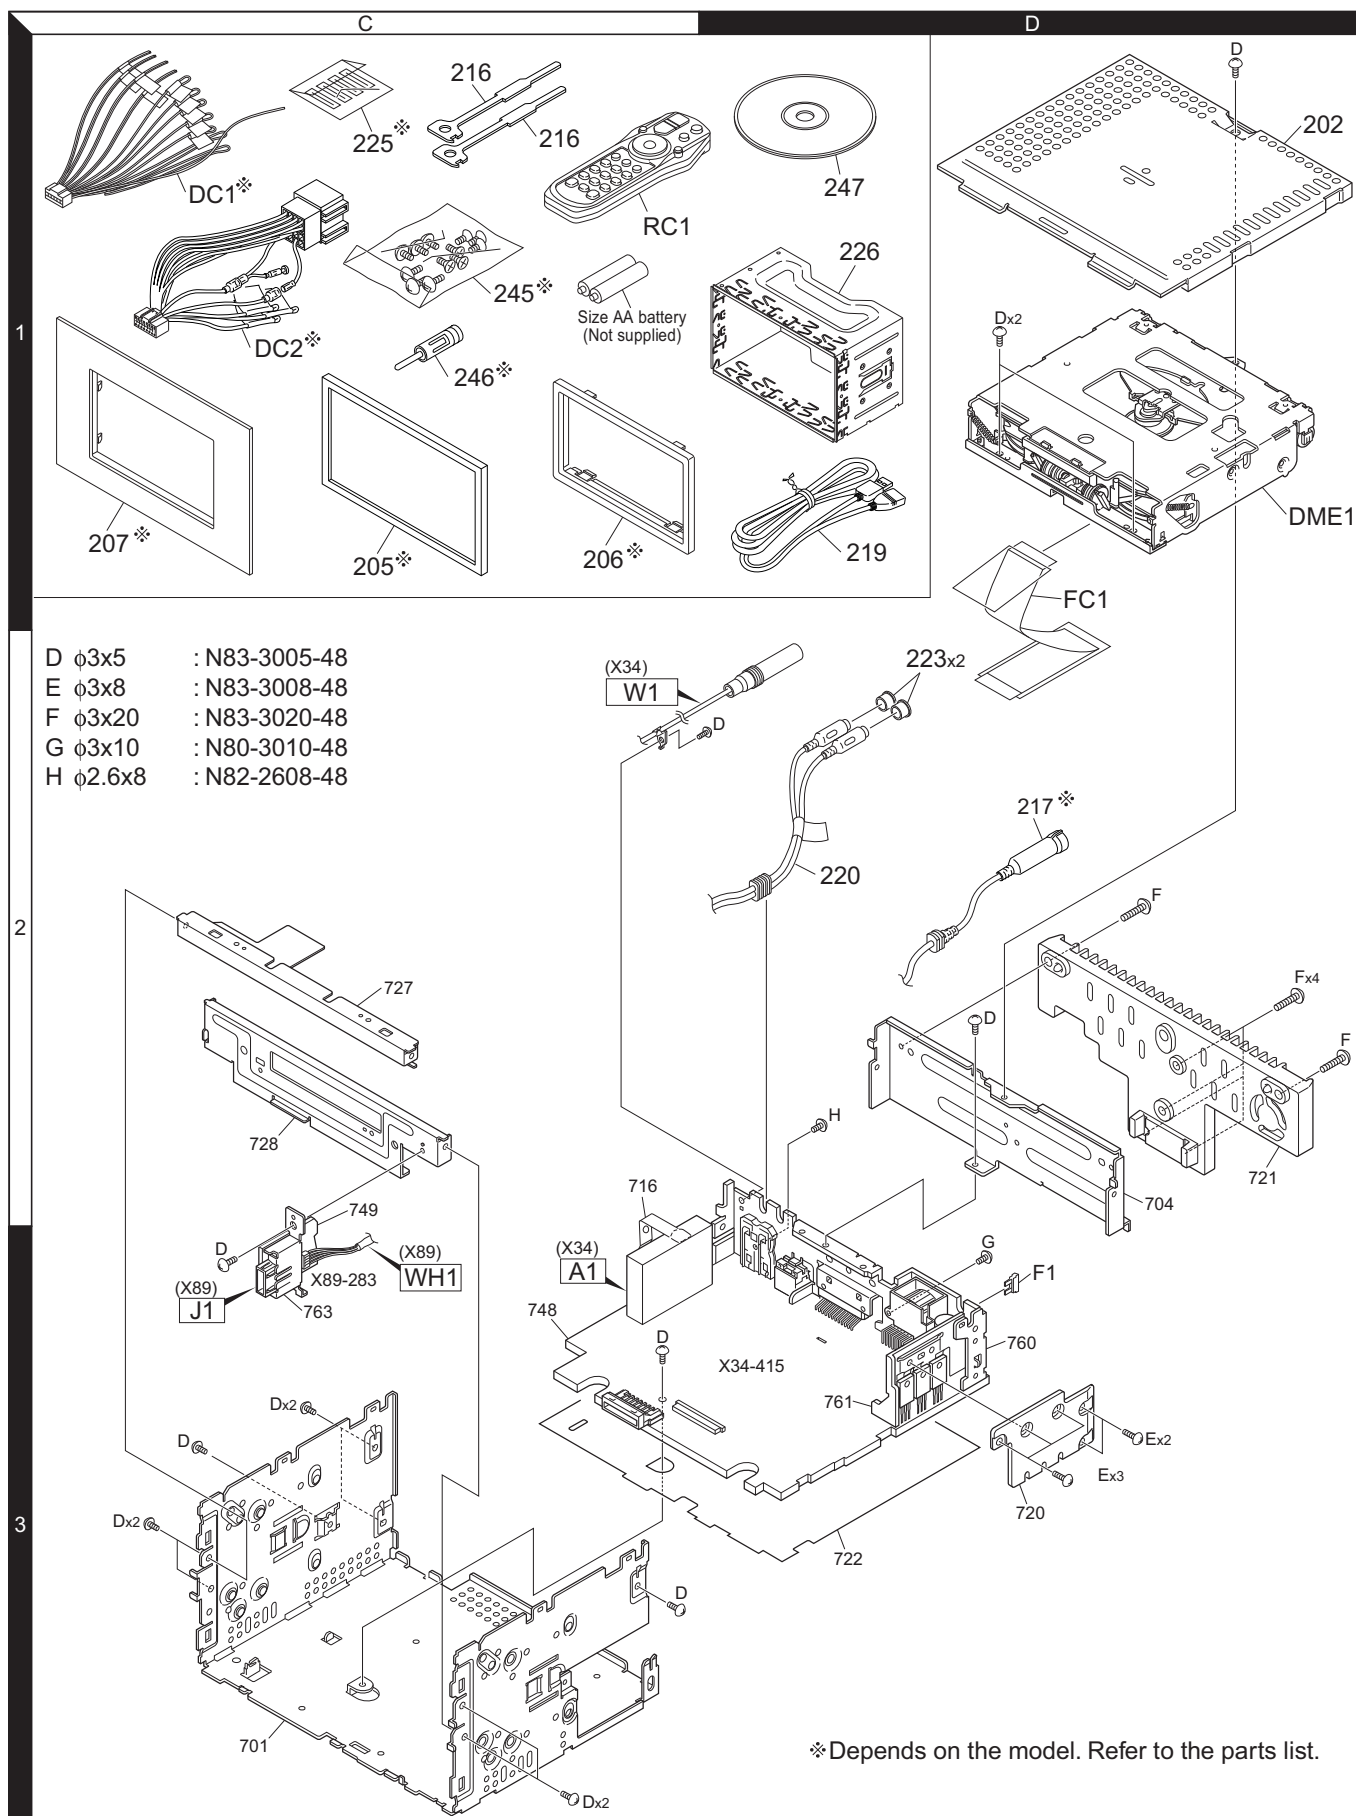

EXPLODED VIEW (PANEL)

- A $\phi 2.6 \times 6$: N78-2660-48
B $\phi 2 \times 6$: N80-2006-48
C $\phi 2 \times 8$: N80-2008-48

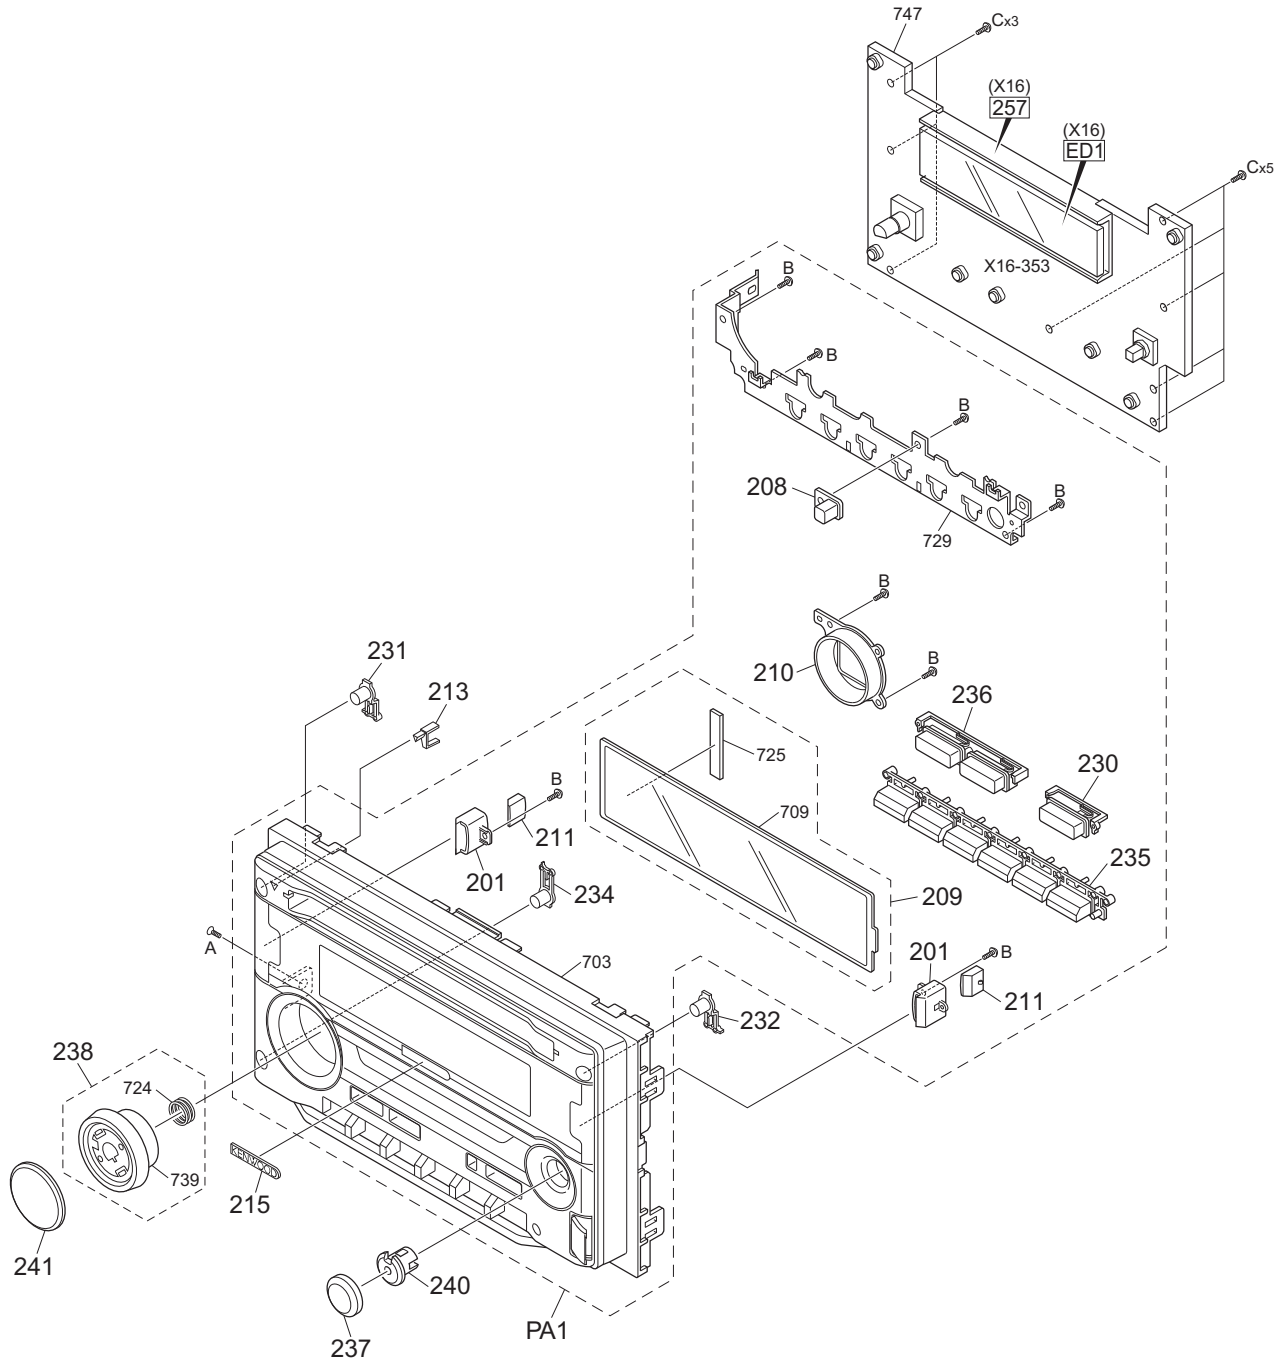

DPX501/501U/501UY DPX-MP2090U

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DPX501/501U/501UY, DPX-MP2090U					
201	2E		A33-0642-03	REFLECTOR	
202	1D	*	A52-0872-12	TOP PLATE	
PA1	3E	*	A64-3814-02	PANEL ASSY	K1
PA1	3E	*	A64-3871-02	PANEL ASSY	E3E4
PA1	3E	*	A64-3966-02	PANEL ASSY	M2
RC1	1C		A70-2067-15	REMOTE CONTROLLER ASSY (RC-527)	K1M2
-			B46-0612-14	ID CARD	E3E4
-			B46-0682-00	WARRANTY CARD	K1E3M2
-			B59-1850-00	SUB-INSTRUCTION MANUAL	
-		*	B64-3396-00	INSTRUCTION MANUAL (ENGLISH)	K1
-		*	B64-3397-00	INSTRUCTION MANUAL (FRENCH)	K1
-		*	B64-3398-00	INSTRUCTION MANUAL (SPANISH)	K1
-		*	B64-3402-00	INSTRUCTION MANUAL (ENGLISH)	E3E4
-		*	B64-3403-00	INSTRUCTION MANUAL (FRENCH)	E3
-		*	B64-3404-00	INSTRUCTION MANUAL (GERMAN)	E3
-		*	B64-3405-00	INSTRUCTION MANUAL (DUTCH)	E3
-		*	B64-3406-00	INSTRUCTION MANUAL (ITALIAN)	E3
-		*	B64-3407-00	INSTRUCTION MANUAL (SPANISH)	E3
-		*	B64-3408-00	INSTRUCTION MANUAL (PORTUGUESE)	E3
-		*	B64-3409-00	INSTRUCTION MANUAL (RUSSIAN)	E4
-		*	B64-3433-00	INSTRUCTION MANUAL (ENGLISH)	M2
-		*	B64-3434-00	INSTRUCTION MANUAL (T-CHI.KOR)	M2
205	1C		B07-3046-04	ESCUTCHEON ASSY	M2
206	1C		B07-3165-02	ESCUTCHEON	K1E3E4
207	1C		B07-3172-12	ESCUTCHEON	K1E3E4
208	2F		B10-4811-03	FRONT GLASS	
209	2F	*	B10-4809-03	FRONT GLASS ASSY	
210	2F		B19-2368-03	LIGHTING BOARD	
211	2E		B19-2370-04	LIGHTING BOARD	
213	2E		B19-2373-03	LIGHTING BOARD	
215	3E		B43-1535-04	BADGE	
216	1C		D10-4589-04	LEVER	K1E3E4
217	2D		E30-6420-05	CORD WITH DIN CONNECTOR	E3E4
219	1D	*	E30-6535-05	CORD WITH CONNECTOR (USB)	
220	2D		E30-6291-15	CORD WITH PINPLUG	
△ DC1	1C		E30-6408-05	DC CORD	M2
△ DC1	1C		E30-6414-05	DC CORD	K1
△ DC2	1C		E30-6412-05	DC CORD	E3E4
FC1	1D	*	E39-0812-05	FLAT CABLE	
223	2D		F29-0626-04	INSULATING COVER	
△ F1	3D		F52-0006-05	FUSE (MINI BLADE TYPE) 10A	
-			H10-4970-02	POLYSTYRENE FOAMED FIXTURE	M2
-			H10-4971-02	POLYSTYRENE FOAMED FIXTURE	K1E3E4
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1164-04	PROTECTION BAG (0.5X350X480)	
-			H25-1170-04	PROTECTION BAG	M2
-		*	H54-3663-03	ITEM CARTON CASE	K1
-		*	H54-3668-03	ITEM CARTON CASE	E3
-		*	H54-3669-03	ITEM CARTON CASE	E4
-		*	H54-3803-03	ITEM CARTON CASE	M2
225	1D		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K1E3E4

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
226	1D	*	J22-0429-13	MOUNTING HARDWARE ASSY	K1E3E4
230	2F		K24-4445-03	PUSH KNOB (SRC)	
231	2E		K24-4448-03	PUSH KNOB (DISP)	
232	3F		K24-4450-03	PUSH KNOB (EJECT)	
234	2E		K24-4454-03	PUSH KNOB (ATT)	
235	3F		K25-1787-02	PUSH KNOB (PRESET)	
236	2F		K25-1801-03	PUSH KNOB (AUTO)	K1M2
236	2F	*	K25-1820-03	PUSH KNOB (TI)	E3E4
237	3E		K28-0106-03	KEY TOP (CONTROL)	
238	3E		K29-7195-03	KNOB ASSY (VOL)	
240	3E		K29-7197-03	KNOB BASE (CONTROL)	
241	3E		K29-7198-03	KEY TOP (VOL)	
245	1C		N99-1779-05	SCREW SET	K1M2
A	3E		N78-2660-48	PAN HEAD TAPTITE SCREW	
B	2F		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	1F		N80-2008-48	PAN HEAD TAPTITE SCREW	
D	3C		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
F	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
246	1C		T90-0523-05	ANTENNA ADAPTOR	E3E4
247	1C		W01-1673-05	COMPACT DISC	K1M2
247	1C		W01-1674-05	COMPACT DISC	E3E4
DME1	1D		X92-5440-00	CD MECHANISM ASSY (DXM-6810W)	K1M2
DME1	1D		X92-5440-04	CD MECHANISM ASSY (DXM-6814W)	E3E4
SWITCH UNIT (X16-353x-xx)					
D1			B30-1690-05	LED (1608,YG)	
D2			B30-1567-05	LED (1608,RED)	E4M2
D2-10			B30-1567-05	LED (1608,RED)	K1E3
D3-10			B30-1690-05	LED (1608,YG)	E4M2
D12-17			B30-1567-05	LED (1608,RED)	K1E3
D12-17			B30-1690-05	LED (1608,YG)	E4M2
D18,19			B30-1758-05	LED (1608,BLUE RANK)	
D20-22			B30-1731-05	LED (1608,BLUE)	
D26,27			B30-1731-05	LED 1608,BLUE)	
C1-4			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	
C6-8			CK73GB1H103K	CHIP C 0.010UF K	
C10,11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73FB0J106K	CHIP C 10UF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	
C18,19			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
257	1F	*	J19-7119-12	HOLDER	
CP1,2			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP5,6			RK74GB1J473J	CHIP-COM 47K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	

E3 : DPX501U **E4** : DPX501UY (Europe)

K1 : DPX501 (North America)

M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-353x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R18			RK73GB2A104J	CHIP R 100K J 1/10W	
R19,20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R24			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R28			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A103J	CHIP R 10K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A104J	CHIP R 100K J 1/10W	
R32			RK73GB2A223J	CHIP R 22K J 1/10W	
R33			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R34			RK73GB2A224J	CHIP R 220K J 1/10W	
R35			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R37			RK73GB2A104J	CHIP R 100K J 1/10W	
R38			RK73GB2A301J	CHIP R 300 J 1/10W	
R39,40			RK73FB2B511J	CHIP R 510 J 1/8W	E4M2
R39,40			RK73FB2B621J	CHIP R 620 J 1/8W	K1E3
R41			RK73EB2E681J	CHIP R 680 J 1/4W	E4M2
R41			RK73EB2E821J	CHIP R 820 J 1/4W	K1E3
R42,43			RK73FB2B511J	CHIP R 510 J 1/8W	E4M2
R42,43			RK73FB2B621J	CHIP R 620 J 1/8W	K1E3
R44			RK73FB2B301J	CHIP R 300 J 1/8W	
R46			RK73FB2B431J	CHIP R 430 J 1/8W	
R48			RK73FB2B431J	CHIP R 430 J 1/8W	
R50			RK73FB2B431J	CHIP R 430 J 1/8W	
R51			RK73GB2A104J	CHIP R 100K J 1/10W	
R52			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R53			RK73FB2B201J	CHIP R 200 J 1/8W	
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	
S2			S70-0106-05	TACT SWITCH	
S3,4			S70-0051-15	TACT SWITCH	
S5,6			S70-0901-05	TACT SWITCH	
S7			S70-0051-15	TACT SWITCH	
S8-10			S70-0901-05	TACT SWITCH	
S11			S70-0051-15	TACT SWITCH	
S12			S70-0901-05	TACT SWITCH	
S13-15			S70-0051-15	TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
ED1			3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC1			PNA4S22M02KW	ANALOGUE IC	
Q1-3			2SA1774	TRANSISTOR	
Q6			DTA114EUA	DIGITAL TRANSISTOR	
Q7-11			2SC4617	TRANSISTOR	
Q12			DTC144EE	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5830-00)					
C3			CK73GB1A105K	CHIP C 1.0UF K	
C5			CK73GB1A105K	CHIP C 1.0UF K	
C7			CK73GB0J225K	CHIP C 2.2UF K	
C8			CK73GB1A105K	CHIP C 1.0UF K	
C12-14			CK73GB1H104K	CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C17,18			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C25,26			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73FB0J106K	CHIP C 10UF K	
C29			CK73GB1H104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C33			CK73GB0J225K	CHIP C 2.2UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1H104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1H104K	CHIP C 0.10UF K	
C40			CK73GB1A105K	CHIP C 1.0UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C44			CK73GB1A105K	CHIP C 1.0UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1H104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	
C52			CK73FB1A225K	CHIP C 2.2UF K	
C53			CK73GB0J225K	CHIP C 2.2UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CC73GCH1H391J	CHIP C 390PF J	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59-62			CK73GB1H102K	CHIP C 1000PF K	
C63			CK73GB1H152K	CHIP C 1500PF K	
C64,65			CK73GB1H104K	CHIP C 0.10UF K	
C66,67			CC73GCH1H100D	CHIP C 10PF D	
C69			CK73FB0J106K	CHIP C 10UF K	
C73			CK73GB1H104K	CHIP C 0.10UF K	
C76,77			CK73GB1H104K	CHIP C 0.10UF K	
C78			CC73GCH1H151J	CHIP C 150PF J	
C80			CC73GCH1H151J	CHIP C 150PF J	
C82			CC73GCH1H681J	CHIP C 680PF J	
C84			CC73GCH1H681J	CHIP C 680PF J	
C85			CK73GB1H104K	CHIP C 0.10UF K	
C86			CK73GB1A105K	CHIP C 1.0UF K	
C87			CK73GB0J475K	CHIP C 4.7UF K	
C88			CK73GB1H473K	CHIP C 0.047UF K	
C89			CK73GB1A105K	CHIP C 1.0UF K	
C91			CK73GB1H104K	CHIP C 0.10UF K	
C93-98			CK73GB1H104K	CHIP C 0.10UF K	
C99			CC73GCH1H060D	CHIP C 6.0PF D	
C100			CC73GCH1H020C	CHIP C 2.0PF C	
C101			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73GB1H102K	CHIP C 1000PF K	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C305-308			CK73GB1H103K	CHIP C 0.010UF K	
C309			CK73GB1H222K	CHIP C 2200PF K	
C310			CK73GB1H103K	CHIP C 0.010UF K	
C311,312			CC73GCH1H060D	CHIP C 6.0PF D	

E3 : DPX501U E4 : DPX501UY (Europe)
K1 : DPX501 (North America)
M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C313			CK73GB1H103K	CHIP C 0.010UF K	
C315			CK73GB1H104K	CHIP C 0.10UF K	
C316			CK73GB1H103K	CHIP C 0.010UF K	
C317,318			CK73GB1H102K	CHIP C 1000PF K	
C319			CK73GB1A105K	CHIP C 1.0UF K	
C320			CC73GCH1H070D	CHIP C 7.0PF D	
CN1			E41-2630-05	FLAT CABLE CONNECTOR	
CN2			E41-2612-05	FLAT CABLE CONNECTOR	
L1			L92-0615-05	CHIP FERRITE	
X1			L77-2863-05	CRYSTAL RESONATOR (16.899M)	
X2			L78-1215-05	RESONATOR (11.500MHZ)	
X3			L77-2923-05	CRYSTAL RESONATOR (6.000MHZ,LF)	
CP2			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP10			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP16			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP19			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP20-23			RK74HB1J153J	CHIP-COM 15K J 1/16W	
CP24,25			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP26			RK74GA1J100J	CHIP-COM 10 J 1/16W	
CP27-30			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP31			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP50			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP52			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP53			RK74GA1J473J	CHIP-COM 47K J 1/16W	
CP56,57			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP300			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP301			RK74GA1J680J	CHIP-COM 68 J 1/16W	
CP302,303			RK74HB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R2,3			RK73GB2A223J	CHIP R 22K J 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GH2A223D	CHIP R 22K D 1/10W	
R7			RK73GB2A223J	CHIP R 22K J 1/10W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W	
R9			RK73GB2A223J	CHIP R 22K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11			RK73GB2A220J	CHIP R 22 J 1/10W	
R12			RK73GB2A223J	CHIP R 22K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R15			RK73GB2A223J	CHIP R 22K J 1/10W	
R17			RK73GB2A221J	CHIP R 220 J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R20			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R21,22			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A103J	CHIP R 10K J 1/10W	
R24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R40			RK73GB2A274J	CHIP R 270K J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73GB2A123J	CHIP R 12K J 1/10W	
R61			RK73GB2A183J	CHIP R 18K J 1/10W	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R63			RK73GB2A133J	CHIP R 13K J 1/10W	
R64			RK73GB2A151J	CHIP R 150 J 1/10W	
R67,68			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R69			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R71-73			RK73GB2A101J	CHIP R 100 J 1/10W	
R109			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R110			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R112			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R115			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R116			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R118,119			RK73GH2A100D	CHIP R 10 D 1/10W	
R121			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R133			RK73GB2A681J	CHIP R 680 J 1/10W	
R138			RK73GB2A101J	CHIP R 100 J 1/10W	
R142			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R144			RK73GB2A223J	CHIP R 22K J 1/10W	
R148			RK73GB2A103J	CHIP R 10K J 1/10W	
R151			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R152			RK73GB2A221J	CHIP R 220 J 1/10W	
R153			RK73GB2A100J	CHIP R 10 J 1/10W	
R154,155			RK73GB2A330J	CHIP R 33 J 1/10W	
R300,301			RK73GB2A680J	CHIP R 68 J 1/10W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W	
R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R306,307			RK73GB2A270J	CHIP R 27 J 1/10W	
R308-310			RK73GB2A153J	CHIP R 15K J 1/10W	
R311-316			RK73GB2A100J	CHIP R 10 J 1/10W	
R320-323			RK73GB2A101J	CHIP R 100 J 1/10W	
R336			RK73GB2A101J	CHIP R 100 J 1/10W	
R337			RK73GB2A153J	CHIP R 15K J 1/10W	
R339			RK73GB2A682J	CHIP R 6.8K J 1/10W	

E3 : DPX501U E4 : DPX501UY (Europe)
K1 : DPX501 (North America)
M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R345			RK73GB2A103J	CHIP R 10K J 1/10W	
R346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R348			RK73GB2A223J	CHIP R 22K J 1/10W	
R351			RK73GB2A103J	CHIP R 10K J 1/10W	
R353			RK73GB2A473J	CHIP R 47K J 1/10W	
R358,359			RK73GB2A473J	CHIP R 47K J 1/10W	
R361			RK73GB2A223J	CHIP R 22K J 1/10W	
R363			RK73GB2A223J	CHIP R 22K J 1/10W	
R366			RK73GB2A101J	CHIP R 100 J 1/10W	
R368			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R369			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R370			RK73GB2A101J	CHIP R 100 J 1/10W	
R371			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R372,373			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R374			RK73GB2A473J	CHIP R 47K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204U	DIODE	
D3			DAN202U	DIODE	
D9			DA204U	DIODE	
IC1			M30620FCPPG	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	
IC4			BA5824FP	ANALOGUE IC	
IC5			BD33KA5WFP-E2	ANALOGUE IC	
IC13			NJM2100V-ZB	ANALOGUE IC	
IC14			TAR5S50-F	ANALOGUE IC	
IC15			CS74110-IQZ	MOS-IC	
IC16			IC42S164007TIG	DRAM IC	
IC17			29LV800CBT19V1	ROM IC	
IC18			PCM1754DB	MOS-IC	
IC19			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC20			S-1132B18U5T1G	ANALOGUE IC	
IC21			BD33KA5WFP-E2	ANALOGUE IC	
IC25			TDUHC1240F0C00	MOS-IC	
IC26			TC74LCX00FT-F	MOS-IC	
IC28			TC7WH125FK-F	MOS-IC	
Q3			UMD9N	TRANSISTOR	
Q6			UMD12N	TRANSISTOR	
Q7			DTC124EE	DIGITAL TRANSISTOR	
Q8			2SB0970	TRANSISTOR	
Q9			DTC114YE	DIGITAL TRANSISTOR	
Q10			DTC114YUA	DIGITAL TRANSISTOR	
Q17			DTA143XUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-415x-xx)					
C1			C90-6746-05	ELECTRO 3300UF 16WV	
C2			CC73GCH1H070D	CHIP C 7.0PF D	
C3			C90-5692-05	ELECTRO 220UF 16WV	
C5			CD04AS1V100M	ELECTRO 10UF 35WV	
C6			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C7			CK73FB1C105K	CHIP C 1.0UF K	
C8			CD04AT1A221M	ELECTRO 220UF 10WV	
C9			CD04BA1C101M	ELECTRO 100UF 16WV	
C10			CK73EB1E105K	CHIP C 1.0UF K	
C11			CD04AS1HR47M	ELECTRO 0.47UF 50WV	

Ref. No.	Add	New	Parts No.	Description	Destination
C12			CD04BF1V470M	ELECTRO 47UF 35WV	
C13			CK73GB1H104K	CHIP C 0.10UF K	
C18			CD04BF1E101M	ELECTRO 100UF 25WV	
C20			CD04BK1A221M	ELECTRO 220UF 10WV	
C24			CK73GB1A334K	CHIP C 0.33UF K	
C25		*	CD04BA0J220M	ELECTRO 22UF 6.3WV	
C40,41			CC73GCH1H070D	CHIP C 7.0PF D	
C45			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CD04BK1A221M	ELECTRO 220UF 10WV	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C101			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
C102			CK73GB1A105K	CHIP C 1.0UF K	
C103			CK73GB1H104K	CHIP C 0.10UF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C105			CK73GB1H223K	CHIP C 0.022UF K	
C106			CK73GB1A105K	CHIP C 1.0UF K	
C109-111			CK73GB1H103K	CHIP C 0.010UF K	
C201			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C202			CK73GB1H103K	CHIP C 0.010UF K	
C203,204			CC73GCH1H220J	CHIP C 22PF J	
C205			CK73GB1H104K	CHIP C 0.10UF K	
C206,207			CK73GB1H103K	CHIP C 0.010UF K	
C208			CK73GB1H102K	CHIP C 1000PF K	
C209			CK73GB1H103K	CHIP C 0.010UF K	
C210,211			CK73GB1H471K	CHIP C 470PF K	
C302			CK73GB1H103K	CHIP C 0.010UF K	
C304,305			CK73GB1H103K	CHIP C 0.010UF K	
C306			CD04AS1V100M	ELECTRO 10UF 35WV	
C307			CK73GB1H103K	CHIP C 0.010UF K	
C308			CD04AS1V100M	ELECTRO 10UF 35WV	
C309			CK73GB1H103K	CHIP C 0.010UF K	
C310			CD04BF1V470M	ELECTRO 47UF 35WV	
C311			CK73GB1H103K	CHIP C 0.010UF K	
C312			CD04BK1C101M	ELECTRO 100UF 16WV	
C313			CD04AS1V100M	ELECTRO 10UF 35WV	
C343			CK73GB1H104K	CHIP C 0.10UF K	
C347			CK73GB1H102K	CHIP C 1000PF K	
C350			CC73GCH1H331J	CHIP C 330PF J	K1E3E4
C351			CK73GB1H103K	CHIP C 0.010UF K	K1E3E4
C352			CK73GB0J225K	CHIP C 2.2UF K	K1E3E4
C353			CD04AS1V100M	ELECTRO 10UF 35WV	K1E3E4
C354,355			CC73GCH1H120J	CHIP C 12PF J	K1E3E4
C401			CD04AS1C470M	ELECTRO 47UF 16WV	
C402,403			CD04AS1H010M	ELECTRO 1UF 50WV	
C404			CK73GB1A105K	CHIP C 1.0UF K	
C406,407			CK73FB1A335K	CHIP C 3.3UF K	
C408,409			CK73FB1C105K	CHIP C 1.0UF K	
C411			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C413,414			CK73FB1E474K	CHIP C 0.47UF K	
C415,416			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C417-420			CD04AS1V100M	ELECTRO 10UF 35WV	
C423,424			CC73GCH1H070D	CHIP C 7.0PF D	
C426,427			CK73FB1E474K	CHIP C 0.47UF K	
C428			CD04AS0J470M	ELECTRO 47UF 6.3WV	

E3 : DPX501U E4 : DPX501UY (Europe)
K1 : DPX501 (North America)
M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C429 C431 C440 C501 C503-506			CK73GB1H103K CD04AS1V100M CC73GCH1H070D CK73FB1C105K C90-6779-05	CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 7.0PF D CHIP C 1.0UF K ELECTRO 0.47UF 16WV	
C507 C510,511 C512 C513 C529,530			CK73FB1C105K CK73FB1E474K CD04AS0J470M CK73GB1H103K C90-6711-05	CHIP C 1.0UF K CHIP C 0.47UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K ELECTRO 1UF 50WV	
C802 C999			CK73GB1H102K CD04BM1E330M	CHIP C 1000PF K ELECTRO 33UF 25WV	
CN1 CN3 CN4 CN5 J1			E41-2629-05 E41-0930-05 E41-2446-05 E41-0944-05 E58-0991-05	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY PIN ASSY RECTANGULAR RECEPTACLE	E3E4
J2 J3 J4 W1			E56-0855-05 E63-0896-05 E58-0993-05 E30-6218-15	CYLINDRICAL RECEPTACLE PIN JACK RECTANGULAR RECEPTACLE CORD WITH PLUG (ANT)	
L1 L3 L201 L203 L301			L33-1988-05 L33-2335-05 L41-4795-33 L92-0339-05 L33-2260-05	CHOKE COIL ASSY CHOKE COIL SMALL FIXED INDUCTOR (4.7U) CHIP FERRITE CHOKE COIL	
L302-304 L306 L307 X1 X2			L41-4795-33 L41-4795-33 L92-0616-05 L77-2880-05 L78-0872-05	SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U) CHIP FERRITE CRYSTAL RESONATOR RESONATOR (12MHZ)	K1E3E4
X3			L77-2002-05	CRYSTAL RESONATOR	K1E3E4
D G H	2D 3D 2D		N83-3005-48 N80-3010-48 N82-2608-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
CP201,202 CP203 CP206 CP207 CP209			RK74GB1J101J RK74GA1J471J RK74GB1J222J RK74GB1J102J RK74GB1J101J	CHIP-COM 100 J 1/16W CHIP-COM 470 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 100 J 1/16W	E3E4
R1 R3 R4 R5 R7			RK73FB2B153J RK73GB2A223J RK73GB2A472J RK73FB2B221J RK73GH2A243D	CHIP R 15K J 1/8W CHIP R 22K J 1/10W CHIP R 4.7K J 1/10W CHIP R 220 J 1/8W CHIP R 24K D 1/10W	
R8 R9 R10 R11 R12			RK73GH2A432D RK73FB2B152J RK73FB2B222J RK73GH2A273D RK73GH2A332D	CHIP R 4.3K D 1/10W CHIP R 1.5K J 1/8W CHIP R 2.2K J 1/8W CHIP R 27K D 1/10W CHIP R 3.3K D 1/10W	
R13 R17,18 R20			RK73GB2A102J RK73GB2A223J RK73GB2A473J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R21 R41 R42 R43,44 R45			RK73GB2A103J RK73GB2A201J RK73GB2A121J R92-5110-05 RK73GB2A473J	CHIP R 10K J 1/10W CHIP R 200 J 1/10W CHIP R 120 J 1/10W CHIP R 2.7 J 3/4W CHIP R 47K J 1/10W	
R46-51 R52 R53 R55 R56			R92-5110-05 RK73GH2A472D RK73GH2A332D R92-5110-05 RK73GB2A153J	CHIP R 2.7 J 3/4W CHIP R 4.7K D 1/10W CHIP R 3.3K D 1/10W CHIP R 2.7 J 3/4W CHIP R 15K J 1/10W	
R57 R101 R102,103 R104 R105			R92-5110-05 RK73EB2E102J RK73EB2E103J RK73EB2E472J RK73PB2H221J	CHIP R 2.7 J 3/4W CHIP R 1.0K J 1/4W CHIP R 10K J 1/4W CHIP R 4.7K J 1/4W CHIP R 220 J 1/2W	E3E4M2 K1M2
R106 R107 R108 R109 R110			RK73GB2A223J RK73FB2B472J R92-5024-05 RK73GB2A223J R92-5024-05	CHIP R 22K J 1/10W CHIP R 4.7K J 1/8W CHIP R 1K J 1/2W CHIP R 22K J 1/10W CHIP R 1K J 1/2W	K1M2
R111 R112 R113 R114 R115			RK73FB2B561J RK73GB2A223J RK73GB2A473J RK73GB2A104J RK73FB2B683J	CHIP R 560 J 1/8W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 68K J 1/8W	E3E4M2
R116 R117 R118 R122,123 R124			RK73GB2A393J RK73FB2B203J RK73GB2A104J RK73GB2A103J RK73GB2A104J	CHIP R 39K J 1/10W CHIP R 20K J 1/8W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
R125 R126 R127 R128 R130			RK73GB2A223J RD14DB2H332J-T RK73EB2E333J RK73GB2A103J RK73GB2A102J	CHIP R 22K J 1/10W SMALL-RD 3.3K J 1/2W CHIP R 33K J 1/4W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W	
R131 R132 R201 R203 R204			RK73GB2A473J RK73PB2H221J RK73GB2A222J RK73GB2A104J RK73GB2A102J	CHIP R 47K J 1/10W CHIP R 220 J 1/2W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	K1M2
R206 R207 R208 R210 R215			RK73GB2A102J RK73GB2A103J RK73GB2A102J RK73GB2A473J RK73GB2A104J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W	
R216 R220 R221 R224 R227,228			RK73GB2A102J RK73GB2A223J RK73GB2A104J RK73GB2A473J RK73GB2A472J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W	K1E3E4
R229,230 R233 R234,235 R236,237 R239			RK73GB2A473J RK73GB2A101J RK73GB2A392J RK73GB2A473J RK73GB2A222J	CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 3.9K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W	

E3 : DPX501U E4 : DPX501UY (Europe)
K1 : DPX501 (North America)
M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R240			RK73GB2A101J	CHIP R 100 J 1/10W	K1 E3E4M2 K1	R508			RK73EB2E472J	CHIP R 4.7K J 1/4W	K1E3E4 E3E4
R241			RK73GB2A222J	CHIP R 2.2K J 1/10W		R509			RK73EB2E101J	CHIP R 100 J 1/4W	
R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W		R510			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R243			RK73GB2A473J	CHIP R 47K J 1/10W		R511-515			RK73EB2E101J	CHIP R 100 J 1/4W	
R244,245			RK73GB2A473J	CHIP R 47K J 1/10W		R516,517			RK73EB2E100J	CHIP R 10 J 1/4W	
R245			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4 M2 K1 E3E4 K1M2	R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1E3E4 E3E4
R246,247			RK73GB2A473J	CHIP R 47K J 1/10W		R519			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R247			RK73GB2A473J	CHIP R 47K J 1/10W		R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R248-250			RK73GB2A473J	CHIP R 47K J 1/10W		R521-523			RK73EB2E471J	CHIP R 470 J 1/4W	
R249,250			RK73GB2A473J	CHIP R 47K J 1/10W		R524			RK73GB2A100J	CHIP R 10 J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4 K1M2	R530			RK73GB2A100J	CHIP R 10 J 1/10W	E3E4 K1M2
R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W		R531			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R259,260			RK73GB2A104J	CHIP R 100K J 1/10W		W2,3			R92-1252-05	CHIP R 0 OHM J 1/16W	
R261			RK73GB2A333J	CHIP R 33K J 1/10W		W3			R92-1252-05	CHIP R 0 OHM J 1/16W	
R262,263			RK73GB2A473J	CHIP R 47K J 1/10W		W15			R92-2053-05	CHIP R 0 OHM J 1/8W	
R270			RK73GB2A473J	CHIP R 47K J 1/10W	K1E3E4 K1E3E4	W16			R92-1252-05	CHIP R 0 OHM J 1/16W	E3E4 K1M2
R302,303			RK73EB2E101J	CHIP R 100 J 1/4W		W17-20			R92-2053-05	CHIP R 0 OHM J 1/8W	
R304			RK73EB2E102J	CHIP R 1.0K J 1/4W		W21			R92-1252-05	CHIP R 0 OHM J 1/16W	
R305-309			RK73EB2E101J	CHIP R 100 J 1/4W		W931			R92-1252-05	CHIP R 0 OHM J 1/16W	
R310			RK73EB2E102J	CHIP R 1.0K J 1/4W		W997,998			R92-1252-05	CHIP R 0 OHM J 1/16W	
R311			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1E3E4 K1E3E4	D1			S2V60*A	DIODE	E3E4M2
R312			RK73GB2A473J	CHIP R 47K J 1/10W		D2			RB160L-40	DIODE	
R313			RK73GB2A472J	CHIP R 4.7K J 1/10W		D3			02DZ5.6F-Y	ZENER DIODE	
R316			RK73GB2A104J	CHIP R 100K J 1/10W		D4			02DZ8.2F-Y	ZENER DIODE	
R317			RK73GB2A471J	CHIP R 470 J 1/10W		D5			02DZ20F-Y	ZENER DIODE	
R318			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1E3E4 K1E3E4	D6		*	PTZ4.7B	ZENER DIODE	E3E4M2
R320			RK73FB2B102J	CHIP R 1.0K J 1/8W		D10			RB081L-20	DIODE	
R321			RK73GB2A223J	CHIP R 22K J 1/10W		D52,53			02DZ6.8F-Y	ZENER DIODE	
R322			RK73GB2A471J	CHIP R 470 J 1/10W		D101			10EDA20	DIODE	
R323			RK73GB2A472J	CHIP R 4.7K J 1/10W		D102-105			1SR154-400	DIODE	
R324			RK73GB2A471J	CHIP R 470 J 1/10W	K1E3E4 K1E3E4	D106			02DZ5.6F-Y	ZENER DIODE	E3E4M2
R325			RK73GB2A472J	CHIP R 4.7K J 1/10W		D107			02DZ4.7F-Y	ZENER DIODE	
R327			RK73GB2A681J	CHIP R 680 J 1/10W		D108,109			02DZ6.8F-Y	ZENER DIODE	
R329-331			RK73GB2A222J	CHIP R 2.2K J 1/10W		D111			02DZ6.2F-Y	ZENER DIODE	
R333			RK73GB2A102J	CHIP R 1.0K J 1/10W		D301			IMSA-6802-E	SURGE ABSORBER	
R401			RK73GB2A103J	CHIP R 10K J 1/10W	K1E3E4 K1E3E4	D303			02DZ9.1F-Z	ZENER DIODE	E3E4
R402,403			RK73GB2A331J	CHIP R 330 J 1/10W		D304			IMSA-6802-E	SURGE ABSORBER	
R404,405			RK73GB2A223J	CHIP R 22K J 1/10W		D401-403			BAW56W	DIODE	
R406,407			RK73GB2A331J	CHIP R 330 J 1/10W		D404			UDZS3.3B	ZENER DIODE	
R408,409			RK73GB2A223J	CHIP R 22K J 1/10W		D405,406			02DZ6.8F-Y	ZENER DIODE	
R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	K1E3E4 K1E3E4	D408			DA204K	DIODE	E3E4
R420,421			RK73FB2B181J	CHIP R 180 J 1/8W		D412,413			UDZS5.6B	ZENER DIODE	
R422			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D414			02DZ6.2F-Y	ZENER DIODE	
R423,424			RK73EB2E100J	CHIP R 10 J 1/4W		D500			BAW56W	DIODE	
R425			RK73GB2A102J	CHIP R 1.0K J 1/10W		D502			BAW56W	DIODE	
R430			RK73GB2A101J	CHIP R 100 J 1/10W	K1E3E4 K1E3E4	D503,504			1SR154-400	DIODE	K1M2 E3E4
R431			RK73GB2A100J	CHIP R 10 J 1/10W		D505,506			1SR139-400T64	DIODE	
R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		D507-510			1SR154-400	DIODE	
R433,434			RK73GB2A101J	CHIP R 100 J 1/10W		D511-515			02DZ6.2F-Y	ZENER DIODE	
R435			RK73GB2A102J	CHIP R 1.0K J 1/10W		D511-523			02DZ6.2F-Y	ZENER DIODE	
R442			RK73GB2A121J	CHIP R 120 J 1/10W	K1M2 K1M2	D518-520			02DZ6.2F-Y	ZENER DIODE	K1M2 K1M2
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W		D523			02DZ6.2F-Y	ZENER DIODE	
R505			RK73GB2A432J	CHIP R 4.3K J 1/10W		IC1			30624MWP86GP	MICROCONTROLLER IC	
R506			RK73GB2A223J	CHIP R 22K J 1/10W		IC2			E-TDA7415C	ANALOGUE IC	
R507			RK73GB2A221J	CHIP R 220 J 1/10W		IC3			M5237ML-CF0J	ANALOGUE IC	

E3 : DPX501U E4 : DPX501UY (Europe)
K1 : DPX501 (North America)
M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC4 IC5 IC6 IC7 IC8			E-TDA7560A BA00CCWT-V5 SN74HC02APWR S-80836CNNB-J MIC2026-1YM	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC MOS-IC	
IC9 IC10 IC12 IC13 Q1			E-TDA7479AD BR24L04FV-W SI-8050RF3NF BA00CC0WFP 2SB1565	ANALOGUE IC ROM IC ANALOGUE IC ANALOGUE IC TRANSISTOR	K1E3E4
Q2 Q3,4 Q5 Q6 Q7			KTC4075P(Y,GR) KTA2014P(Y,GR) 2SB1565 DTA124EUA 2SB1565	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q8 Q9-11 Q12 Q13 Q17			2SC4081 DTC124EUA 2SA1488NF KTA2014P(Y,GR) DTC144EUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q21 Q101 Q102 Q103 Q104			KTC4075P(Y,GR) 2SB1188(Q,R) DTC114YUA 2SB1188(Q,R) KTA2014P(Y,GR)	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	K1M2 K1M2
Q105 Q106 Q107 Q108 Q109			DTA114EUA DTC114YUA DTA123JK DTC144EUA 2SC4155A(Q,R,S)	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	E3E4M2
Q111 Q112 Q113 Q116 Q300			2SC4081 2SC4155A(Q,R,S) KTA2014P(Y,GR) DTA124EUA 2SB1689	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q301 Q302 Q303 Q305 Q306			DTC124EUA 2SB1565 KTC4075P(Y,GR) 2SA1577 DTC144EUA	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q400-403 Q406,407 Q408			DTC143TUA DTC143TUA DTA124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
A1 A1	3E 3E		X86-4000-11 X86-4002-70	FRONT-END UNIT FRONT-END UNIT	K1M2 E3E4
DAUGHTER UNIT (X89-2830-10)					
J1 WH1		* *	E59-0849-05 E39-0848-15	RECTANGULAR PLUG WIRING HARNESS	
CD MECHANISM ASSY (X92-5440-00/04) (DXM-6810W/6814W)					
2	1B		A10-4827-32	CHASSIS	
5	2B		D10-4576-93	ARM ASSY	
8	2A		D10-4787-63	LEVER ASSY	E3E4
8	2A	*	D10-4901-13	LEVER ASSY	K1M2

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
10 11 12 13 14	2A 2A 3A 3A 3B		D10-4581-13 D10-4582-13 D10-4583-03 D10-4584-03 D10-4585-03	ARM ARM ARM ARM ARM	
15 16 17 18 19	2A 3B 2B 2B 2B		D10-4586-13 D10-4587-52 D10-4588-13 D10-4595-04 D10-4596-24	SLIDER SLIDER SLIDER ARM ARM	
22 23 24 25 26	2A 2B 3B 3B 3B		D13-2151-04 D13-2152-04 D13-2153-04 D13-2154-04 D13-2155-04	GEAR GEAR GEAR GEAR WORM	
27 28 29 30 31	2B 3B 2B 2B 3B		D13-2156-14 D13-2157-04 D13-2158-04 D13-2168-04 D13-2171-04	GEAR GEAR GEAR GEAR GEAR	
32 33 35 36 37	1B 2A 2B 1A 1B		D13-2172-13 D14-0759-04 D21-2382-04 D23-0954-04 D39-0246-05	RACK (GEAR) ROLLER SHAFT RETAINER DAMPER	K1M2
37	1B		D39-0260-05	DAMPER	E3E4
38 39 40 41 42	2B 2A 2A 1B 2A		G01-3072-04 G01-3073-04 G01-3074-04 G01-3075-24 G01-3076-04	EXTENSION SPRING TORSION COIL SPRING EXTENSION SPRING EXTENSION SPRING EXTENSION SPRING	
43 44 45	1B 2B 2B		G01-3077-14 G02-1399-04 G02-1408-04	EXTENSION SPRING FLAT SPRING FLAT SPRING	
46 47	3B 3A		F09-1804-04 F09-2824-14	SHEET SHEET	E3E4
51 52 53 55 56	1A 3B 1B 1A 1B		J21-9676-32 J21-9677-22 J21-9678-13 J90-1001-11 J90-1023-03	MOUNTING HARDWARE MOUNTING HARDWARE MOUNTING HARDWARE GUIDE GUIDE	
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
A B C E F	2B 1B 2B 2B 1A		N09-4460-15 N09-4472-25 N09-6004-15 N09-6007-15 N09-6051-15	TAPTITE SCREW (PT2X8) MACHINE SCREW (M1.7X8.0) MACHINE SCREW (M1.7X2.5) MACHINE SCREW (PAN M2X2) TAPTITE SCREW (BIND P 2X5)	
G H J K	2A 1B 1B 3B		N19-2163-04 N39-2020-46 N09-6108-15 N09-6155-15	FLAT WASHER PAN HEAD MACHINE SCREW TAPTITE SCREW (M2X3.5) SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	

E3 : DPX501U E4 : DPX501UY (Europe)
K1 : DPX501 (North America)
M2 : DPX-MP2090U (Other Areas)

△ Indicates safety critical components.

