

4. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)


4.1 PACKING SECTION



PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	1.2 m Coiled Cable (extended length 1.8 m)	20030235000020D01
2	φ6.3 mm Stereo Plug Adapter (threaded type)	30030150400101D
NSP 3	Carrying Pouch
NSP 4	Operating Instructions (En, Fr, De, It, Ni, Es, Pt, Ru, Zhcn, Zhtw, Ja)

4.2 EXTERIOR SECTION

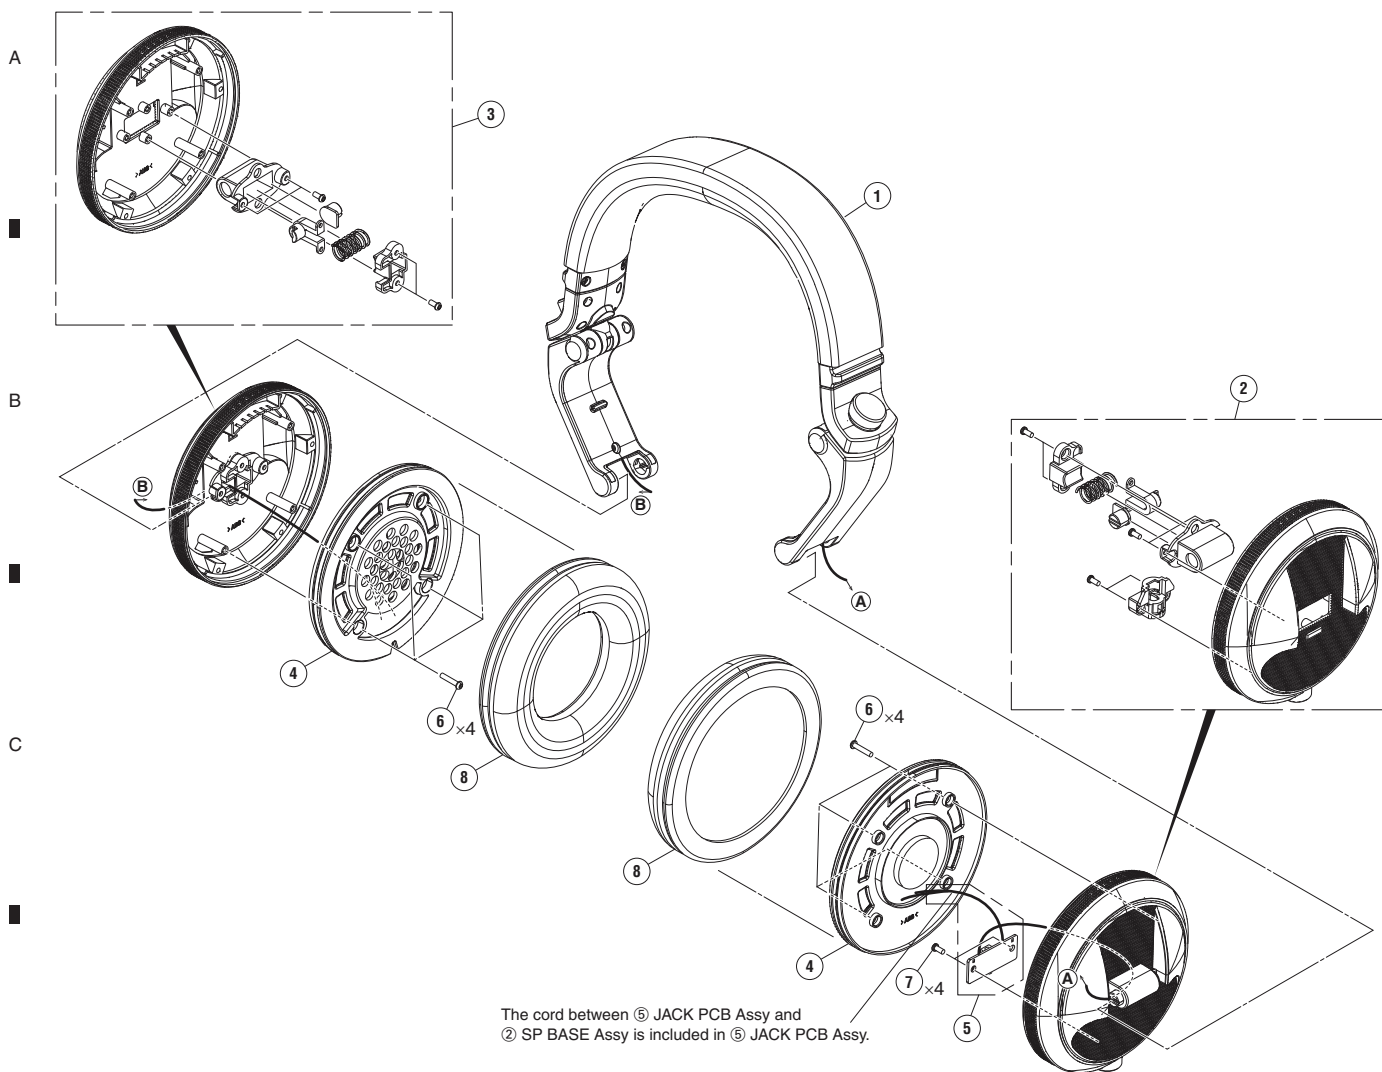

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Headband Assy	See Contrast table (2)
2	Housing L Assy	See Contrast table (2)
3	Housing R Assy	See Contrast table (2)
4	SP Base Assy	1003046275T0009
5	JACK PCB Assy	1003046275T0010
6	Tapping Screw T2*L8	30030220080015D
7	Tapping Screw T2*L5	30030220050025D
8	Ear Pad	301001000508D00

(2) CONTRAST TABLE

HDJ-X5-K/XEGWL and HDJ-X5-S/XEGWL are constructed the same except for the following:

Mark	No.	Symbol and Description	HDJ-X5-K/XEGWL	HDJ-X5-S/XEGWL
	1	Headband Assy	1003046275T0007	1003046275T0008
	2	Housing L Assy	1003046275T0004	1003046275T0005
	3	Housing R Assy	1003046275T0003	1003046275T0006