EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

PACKING

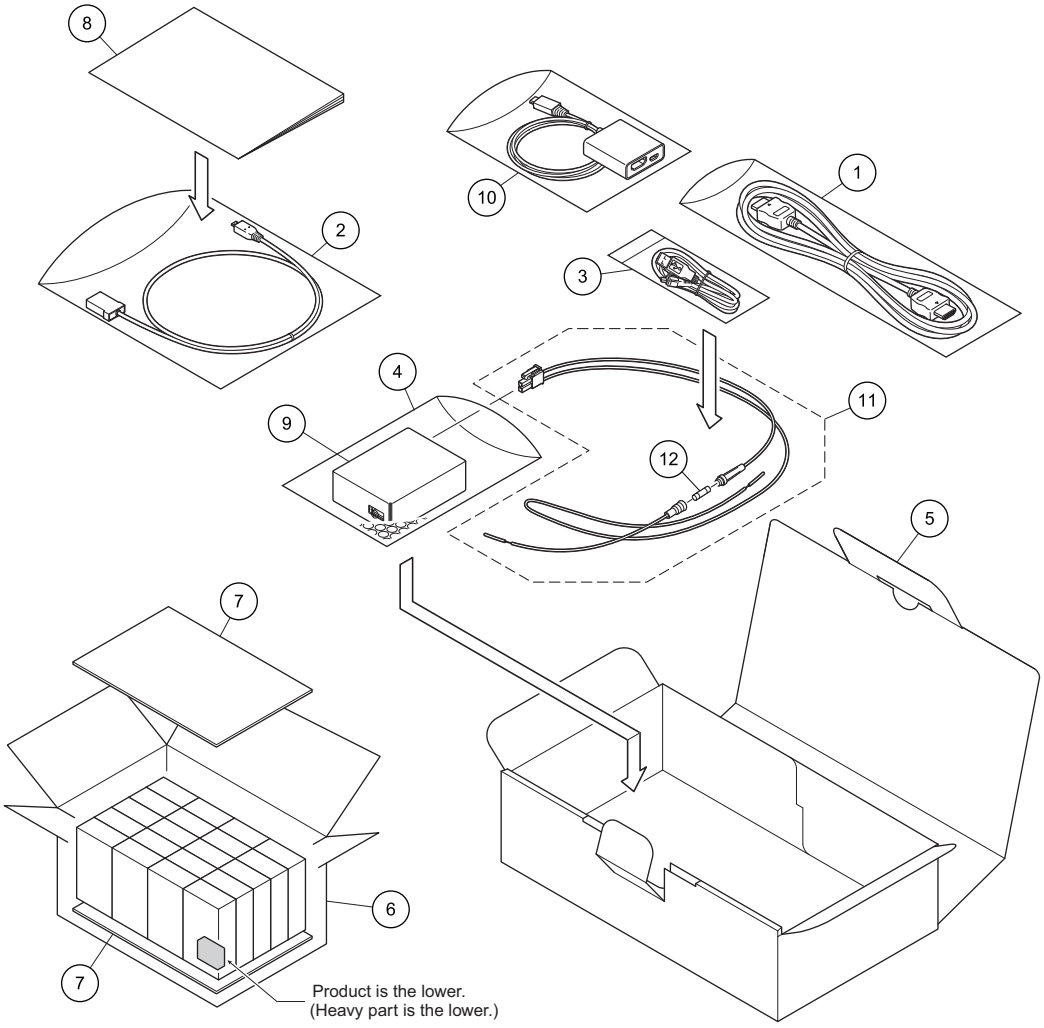

PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	HDMI CONN-Cable	CDP1512
	2	HDMI CONN-Cable	CDP1513
	3	USB Extended Cable	CDP1515
	4	Air Cushion	CEG1055
	5	Unit Box	CHG8119
	6	Contain Box	CHL8119
*	7	Board	CHW2287
	8	Owner's Manual (English, French, Italian, Spanish(Espanol), German, Dutch, Russian)	CRD4650
	9	Battery charger Assy	CXE5717
	10	HDMI-Adapter Unit	CXE5727
	11	Cord Assy	CDP1517
⚠	12	Fuse (2 A)	CEK1048