9. EXPLODED VIEWS AND PARTS LIST

9.1. PACKING SECTION

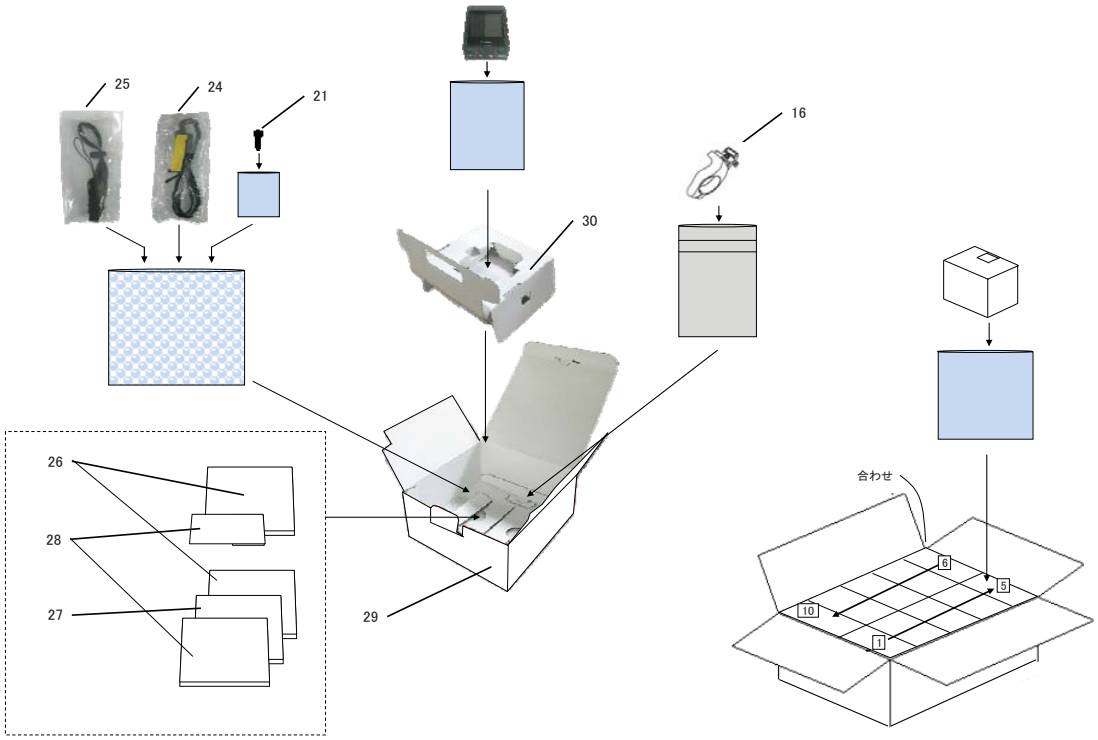

9.2. EXTERIOR SECTION

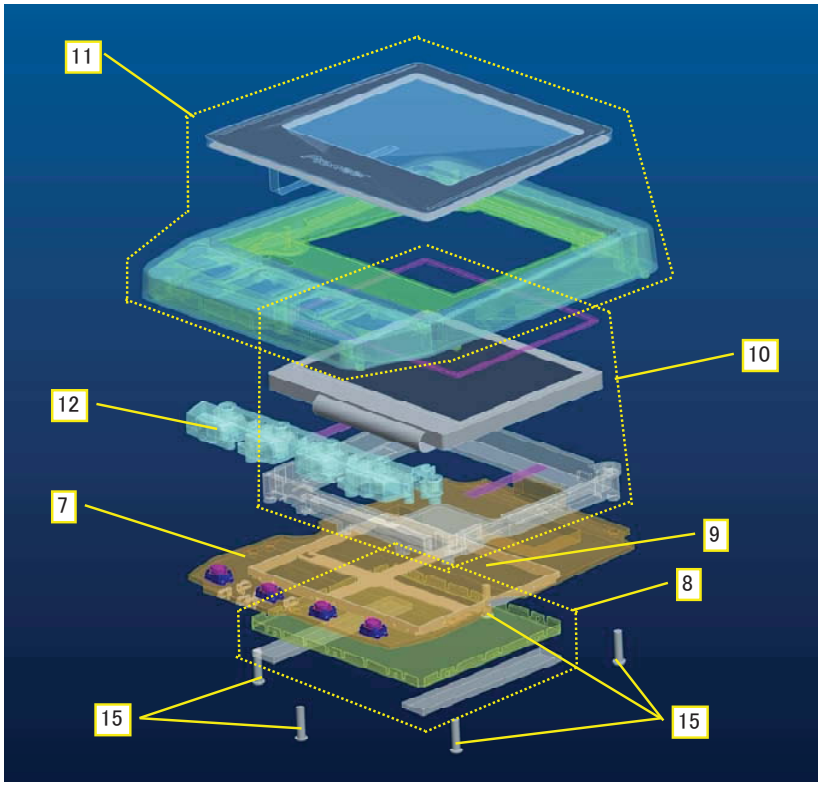

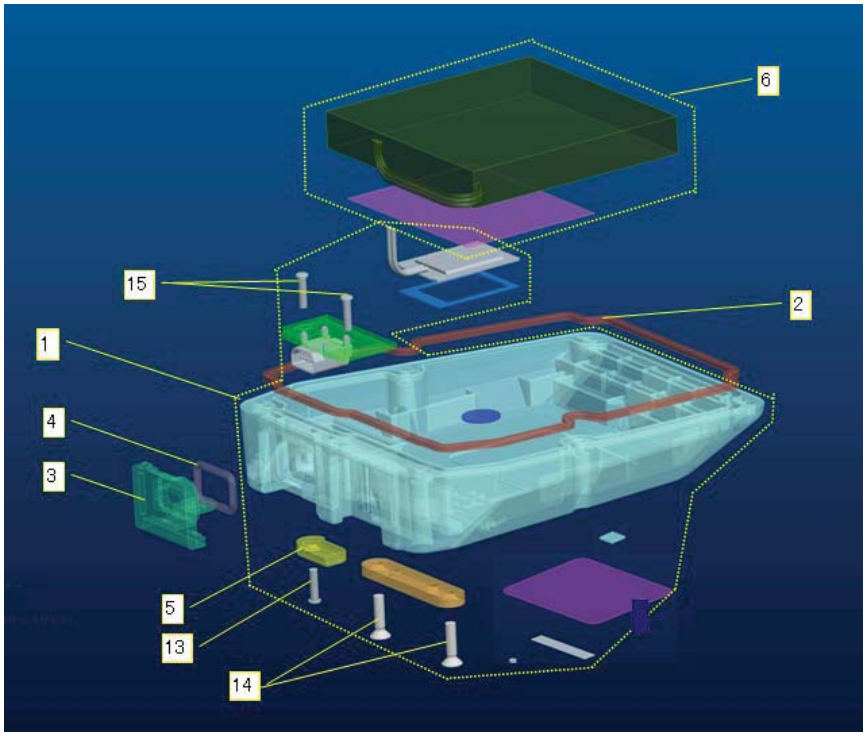

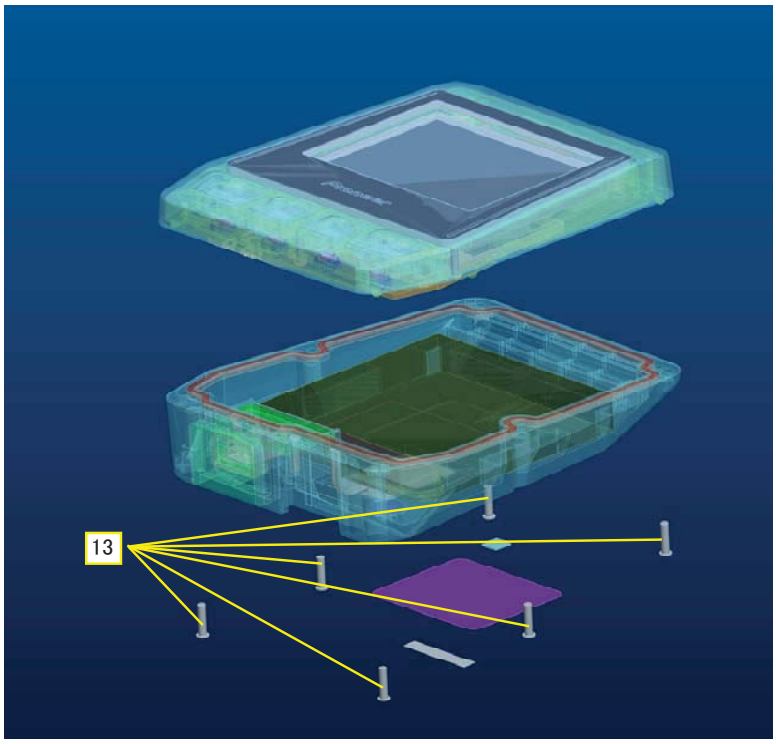
13

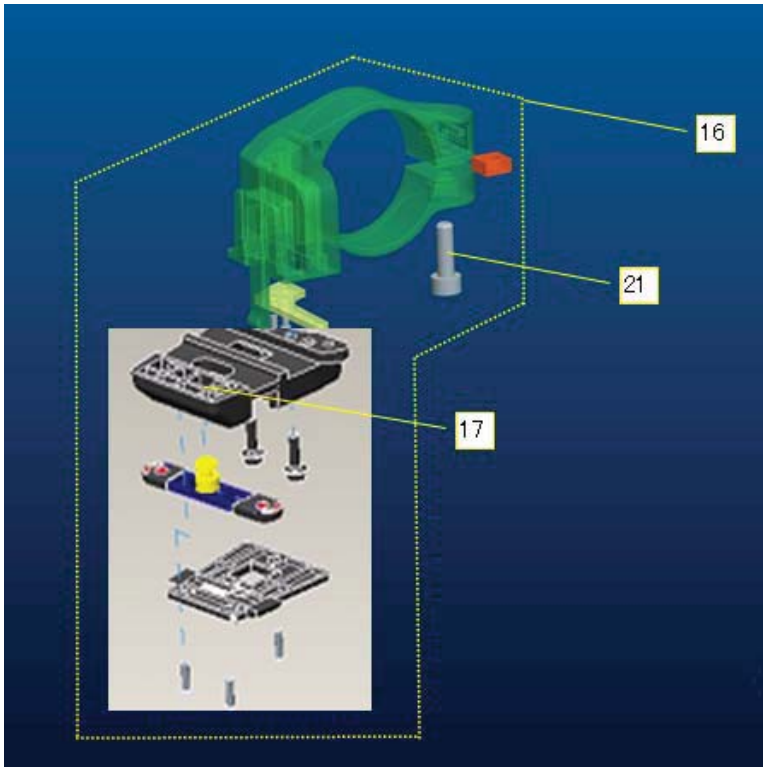
16
21
17

9.3. PARTS LIST

		Deliver	Parts number	Name of parts
1	Bottom Case ASSY	EL5	X-TAAA-055-1	CASE BOTTOM ASSY (U)(SVC)
2	Waterproof packing		Z-112-008-01	PACKING (CASE)
3	USB cover		Z-112-007-01	LID (USB)
4	Waterprof packing for USB		Z-112-009-01	PACKING (USB)
5	USB plate		Z-112-004-01	PLATE (BOTTOM)
6	Battery ASSY	EL5	X-TAAA-054-1	BATTERY ASSY (E)(SVC)
7	Main Board ASSY		A-TAAB-368-A	MAIN MOUNT
8	Shield case ASSY		X-TAAA-056-1	SHIELD (TOP) ASSY(SVC)
9	Micro SD		D-862-014-11	microSD(8GB CLASS10)
10	LCD ASSY		X-TAAA-047-1	LCD ASSY(SVC)
11	Top Case ASSY		X-TAAA-048-1	CASE TOP ASSY
12	Button		Z-112-006-01	BUTTON
13	Screw		Z-822-001-02	SCREW TAPPING 1.7*6
14	Screw		Z-822-002-02	FLAT HEAD SCREW TAPPING 2x10
15	Screw		Z-822-004-01	SCREW TAPPING 1.7*5
16	Bracket ASSY		X-TAAA-057-1	CLAMP ASSY(SVC)
17	Cushion Pad		Z-422-026-01	CUSION PAD
21	Screw		Z-812-001-01	HEXGON SOCKETCAP SCREW M4
24	USB cable		A-TAAB-374-A	USB CABLE ASSY
25	Strap		Z-512-003-01	STRAP
26	User manual	EL5	Z-912-015-21	USER MANUAL(SGX-CA900) U
27	Important information	EL5	Z-919-019-01	IMPORTANT INFORMATION(SGX-CA900)
* 28	Warranty card	EL5	Z-912-016-21	WARRANTY CARD(SGX-CA900) U
29	Unit Box	EL5	Z-922-019-21	BOX U
30	Cushion		Z-922-020-01	CUSHION

* NSP