2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

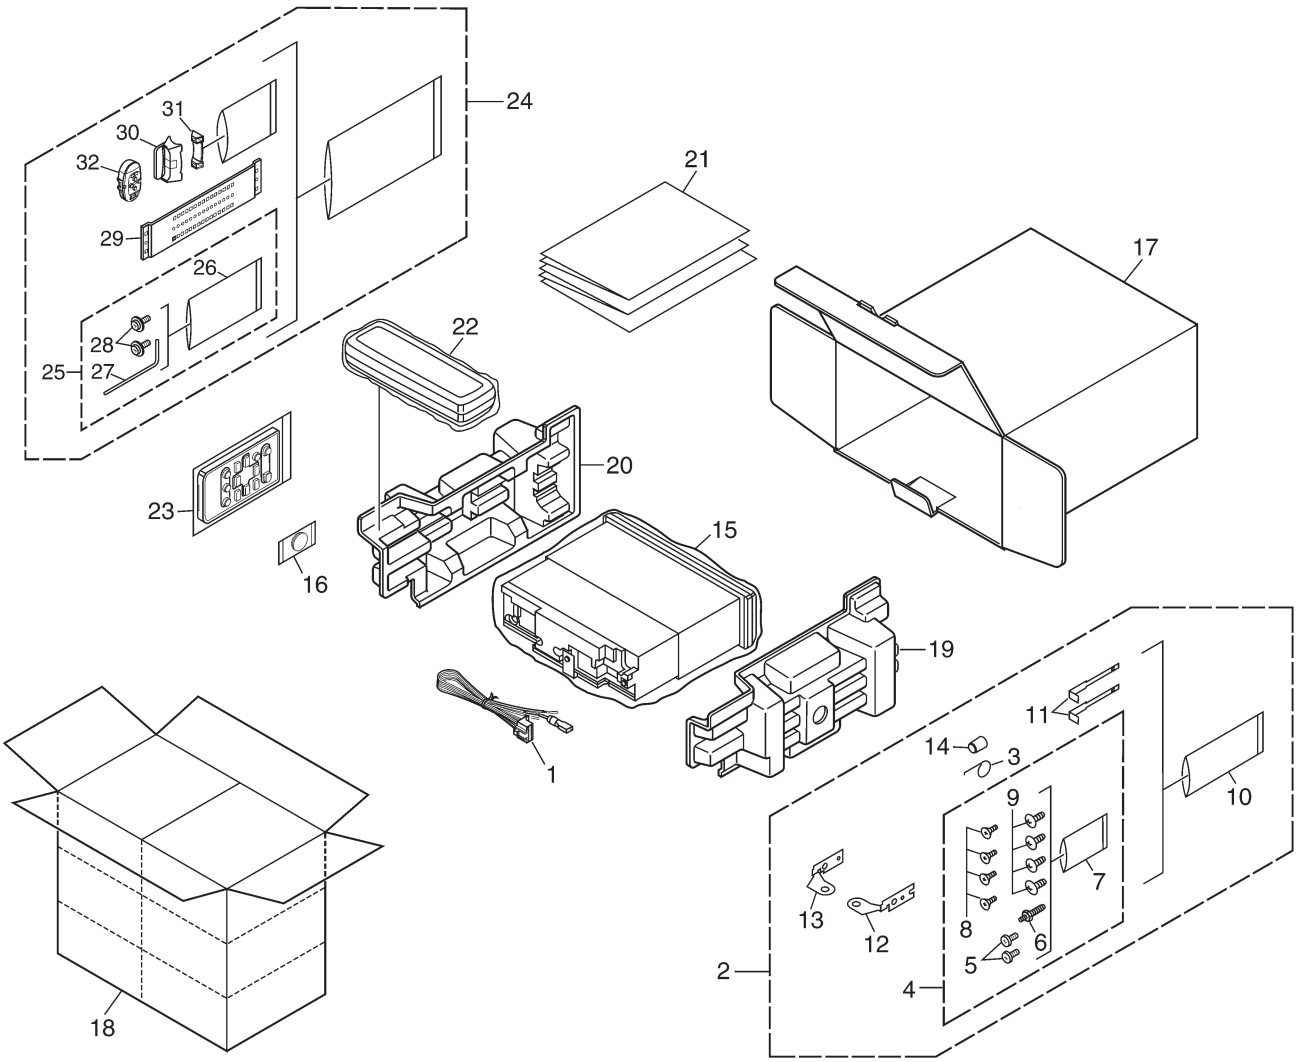

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

● PACKING SECTION PARTS LIST

Mark No.	Symbol and Description	Part No. DEH-P450MP/XM/UC	DEH-P4500MP/XM/UC	DEH-P3550MP/XM/ES
1	Cord Assy	CDE7060	CDE7060	CDE7060
2	Accessory Assy	CEA3376	CEA3376	CEA3439
3	Spring	CBH1650	CBH1650	CBH1650
4	Screw Assy	CEA3445	CEA3445	CEA3437
5	Fixing Screw	BPZ20P060FZK	BPZ20P060FZK	Not used
6	Screw	CBA1002	CBA1002	CBA1002
* 7	Polyethylene Bag	CEG-127	CEG-127	CEG-127
8	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC
9	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
* 10	Polyethylene Bag	CEG-158	CEG-158	CEG-158
11	Handle	CNC5395	CNC5395	CNC5395
12	Holder	CND1249	CND1249	Not used
13	Holder	CND1250	CND1250	Not used
14	Bush	CNV3930	CNV3930	CNV3930
15	Polyethylene Bag	CEG1173	CEG1173	CEG-162
* 16	Battery	CEX1030	CEX1065	Not used
17	Carton	CHG4952	CHG4953	CHG4954
18	Contain Box	CHL4952	CHL4953	CHL4954
19	Protector	CHP2663	CHP2663	CHP2663
20	Protector	CHP2664	CHP2664	CHP2664
21-1	Owner's Manual	CRD3676	CRD3678	CRD3680
21-2	Owner's Manual	Not used	Not used	CRD3681
21-3	Installation Manual	CRD3677	CRD3679	CRD3682
* 21-4	Warranty Card	CRY1070	Not used	Not used
* 21-5	Card	Not used	ARY1048	Not used
* 21-6	Caution Card	Not used	CRP1294	Not used
22	Case Assy	CXB3520	CXB3520	CXB3520
23	Remote Control Unit	Not used	CXC1265	Not used
24	Remote Control Assy	CXB9202	Not used	Not used
25	Screw Assy	CZE3169	Not used	Not used
* 26	Polyethylene Bag	CEG-127	Not used	Not used
* 27	Hexagonal Wrench	CZE3176	Not used	Not used
* 28	Screw	RMZ30H060FBK	Not used	Not used
29	Belt	CZN7661	Not used	Not used
30	Holder Assy	CZX3172	Not used	Not used
31	Holder Assy	CZX3173	Not used	Not used
32	Remote Control Assy	CZX3257	Not used	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P450MP/XM/UC	CRD3676	English, French, Spanish
	CRD3677	
DEH-P4500MP/XM/UC	CRD3678	English, French, Spanish
	CRD3679	
DEH-P3550MP/XM/ES	CRD3680	English, Spanish, Portuguese(B)
	CRD3681	Arabic, Chinese
	CRD3682	English, Spanish, Portuguese(B), Arabic, Chinese

2.2 EXTERIOR (DEH-P450MP, P4500MP)

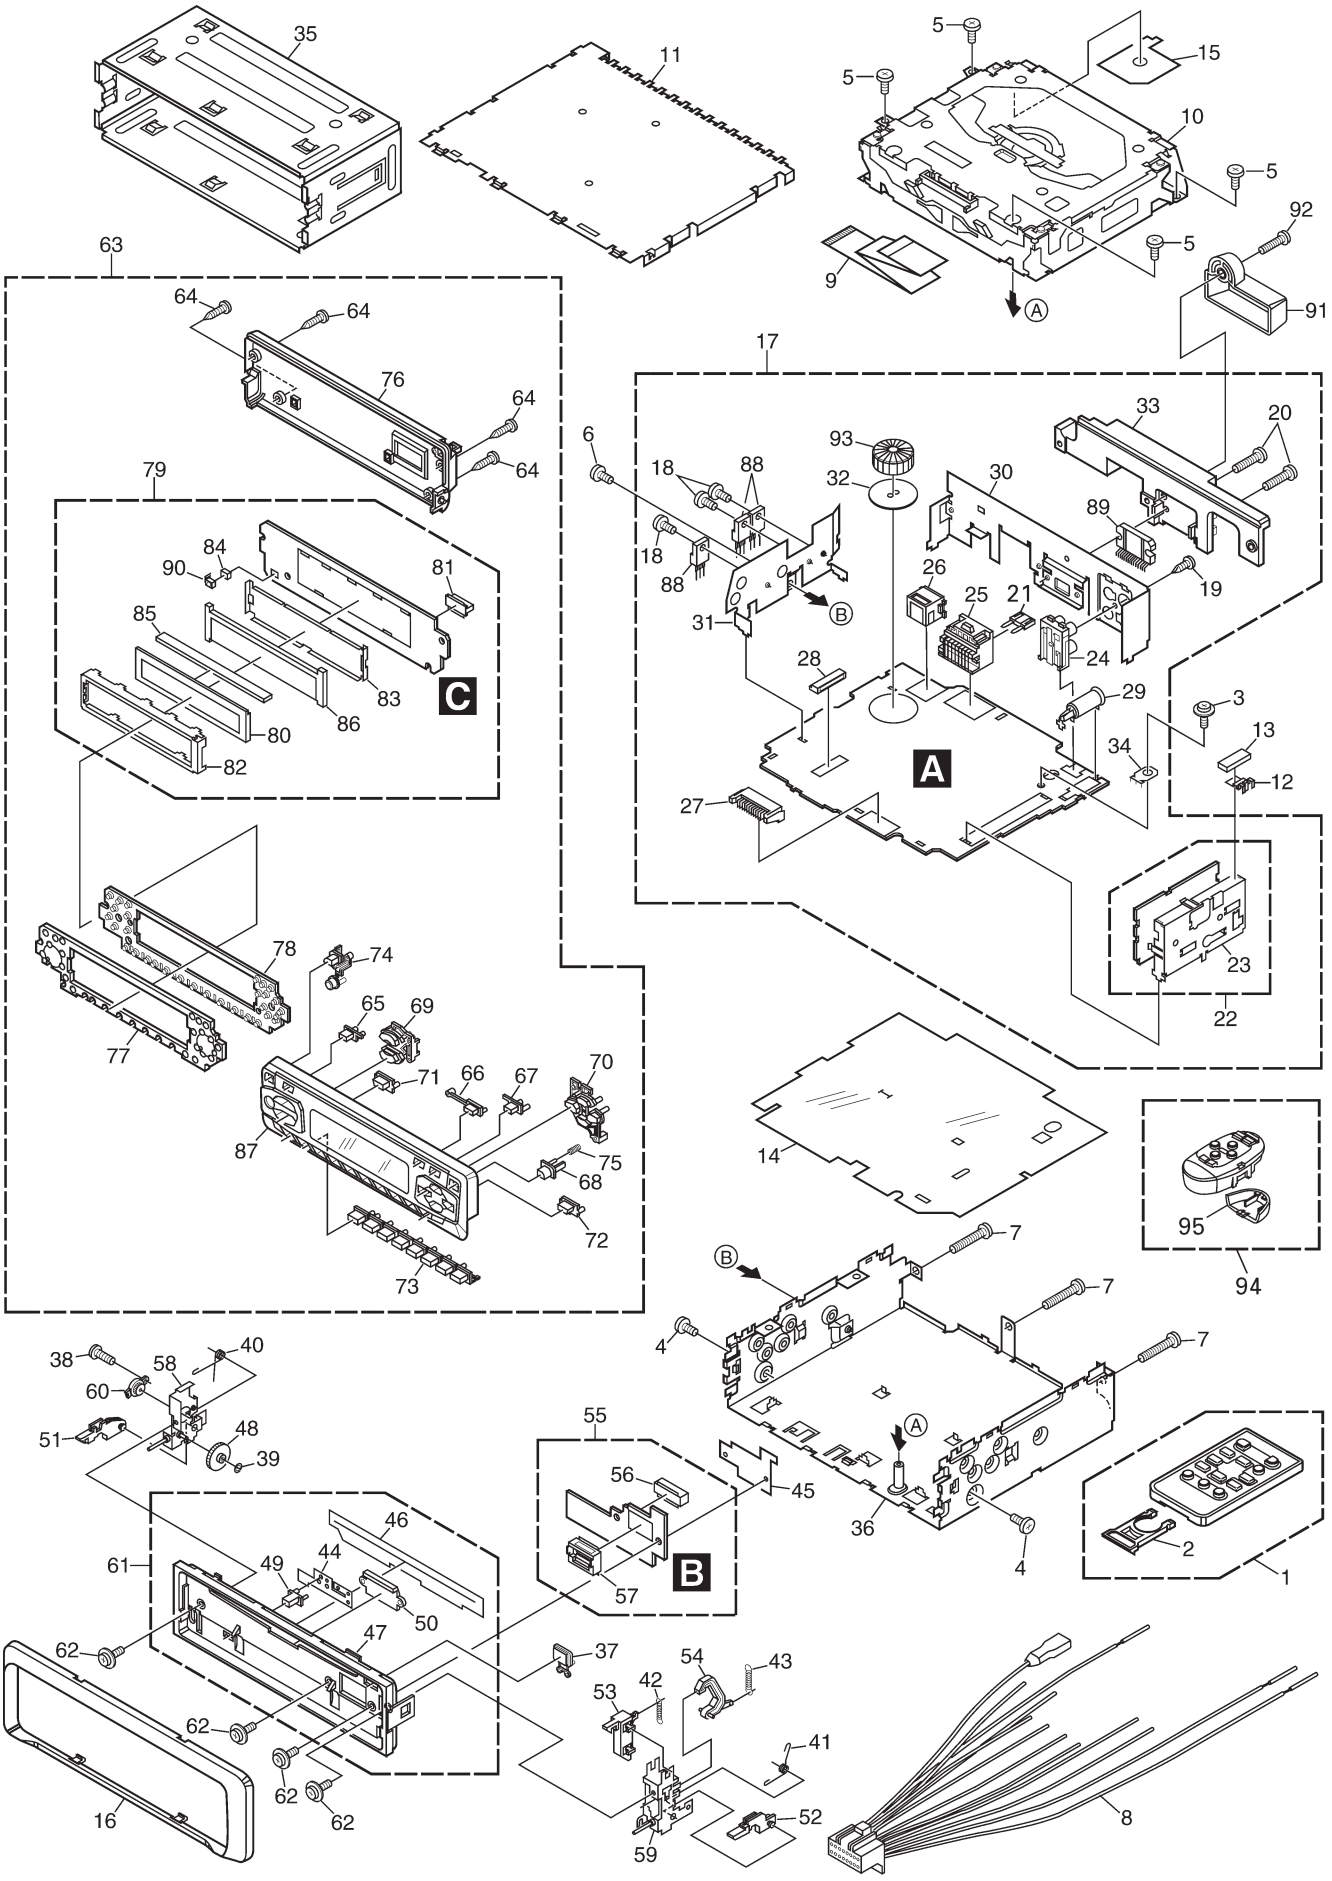

(1) EXTERIOR (DEH-P450MP, P4500MP) SECTION PARTS LIST

Mark No.	Description	Part No.
1	Remote Control Unit	See Contrast table(2)
2	Cover	See Contrast table(2)
3	Screw	ISS26P055FTC
4	Screw	BMZ30P040FZK
5	Screw	BSZ26P060FTC
6	Screw	BSZ30P060FTC
7	Screw	BSZ30P200FTC
8	Cord Assy	CDE7060
9	Cable	CDE7189
10	CD Mechanism Module(S10MP3)	CXK5660
11	Case	CNB2870
12	Earth Plate	CNC8915
13	Cushion	CNM4870
14	Insulator	CNM7935
15	Insulator	CNM8174
16	Panel	See Contrast table(2)
17	Tuner Amp Unit	CWM8653
18	Screw	ASZ26P060FTC
19	Screw	BPZ26P080FTC
20	Screw	BSZ26P160FTC
21	Fuse(10A)	CEK1208
22	FM/AM Tuner Unit	CWE1646
23	Holder	CND1054
24	Pin Jack(CN351)	CKB1051
25	Plug(CN981)	CKM1376
26	Connector(CN101)	CKS3408
27	Plug(CN831)	CKS3537
28	Connector(CN721)	CKS3837
29	Antenna Jack(CN401)	CKX1056
30	Holder	CND1238
31	Holder	CND1352
32	Insulator	CNM8245
33	Heat Sink	CNR1668
34	Terminal(CN402)	VNF1084
35	Holder Unit	CXB6681
36	Chassis Unit	CXB9528
37	Button(EJECT)	CAC7752
38	Screw(M2x2)	CBA1176
39	Washer	CBF1038
40	Spring	CBH2650
41	Spring	CBH2651
42	Spring	CBH2652
43	Spring	CBH2653
44	Spring	CBL1512
45	Holder	CND1254
46	Cover	CNM6854
47	Panel	CNS7245
48	Gear	CNV5997
49	Pin	CNV6486
50	Lighting Conductor	CNV6487
51	Arm	CNV7400
52	Arm	CNV7401
53	Arm	CNV7402
54	Arm	CNV7403
55	Panel Unit	CWM8758
56	Socket(CN1950)	CKS3550
57	Connector(CN1951)	CKS4462
58	Holder Unit	CXB9501
59	Holder Unit	CXB9502
60	Damper Unit	CXB9503
61	Service Panel Unit	CXX1691
62	Screw	IMS20P045FZK
63	Detach Grille Assy	See Contrast table(2)
64	Screw	BPZ20P100FZK
65	Button(DISP)	CAC7779
66	Button(PAUSE)	CAC7780
67	Button(AUDIO)	CAC7781
68	Button(OPEN)	CAC7782
69	Button(VOLUME)	See Contrast table(2)
70	Button(SELECT)	See Contrast table(2)
71	Button(SRC)	CAC7785
72	Button(FUNC)	CAC7786
73	Button(1-6)	CAC7787
74	Button(CLK, EQ)	CAC7808
75	Spring	CBH2630
76	Cover	CNS7269
77	Lighting Conductor	CNV7421
78	Rubber	CNV7422
79	Keyboard Unit	CWM8635
80	LCD(LCD1901)	CAW1759
81	Connector(CN1901)	CKS4524
82	Holder	CNC9757
83	Sheet	CNM7647
84	Cushion	CNM8092
85	Connector	CNV6440
86	Lighting Conductor	CNV7711
87	Grille Unit	See Contrast table(2)
88	Transistor(Q752, 901, 911)	2SD2375
89	IC(IC301)	PAL007A
90	IC(IC1902)	TSOP4840SB1
91	Holder	See Contrast table(2)
92	Screw	See Contrast table(2)
93	Choke Coil(L981)	CTH1280
94	Remote Control Assy	See Contrast table(2)
95	Cover	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P450MP/XM/UC and DEH-P4500MP/XM/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No. DEH-P450MP/XM/UC	Part No. DEH-P4500MP/XM/UC
1	Remote Control Unit	Not used	CXC1265
2	Cover	Not used	CNS7068
16	Panel	CNS6935	CNS6934
63	Detach Grille Assy	CXB9593	CXB9594
69	Button(VOLUME)	CAC7810	CAC7809
70	Button(SELECT)	CAC7812	CAC7811
87	Grille Unit	CXB9621	CXB9622
91	Holder	Not used	CNV7619
92	Screw	Not used	BMZ40P140FTC
94	Remote Control Assy	CZX3257	Not used
95	Cover	CZN7655	Not used

2.3 EXTERIOR (DEH-P3550MP)

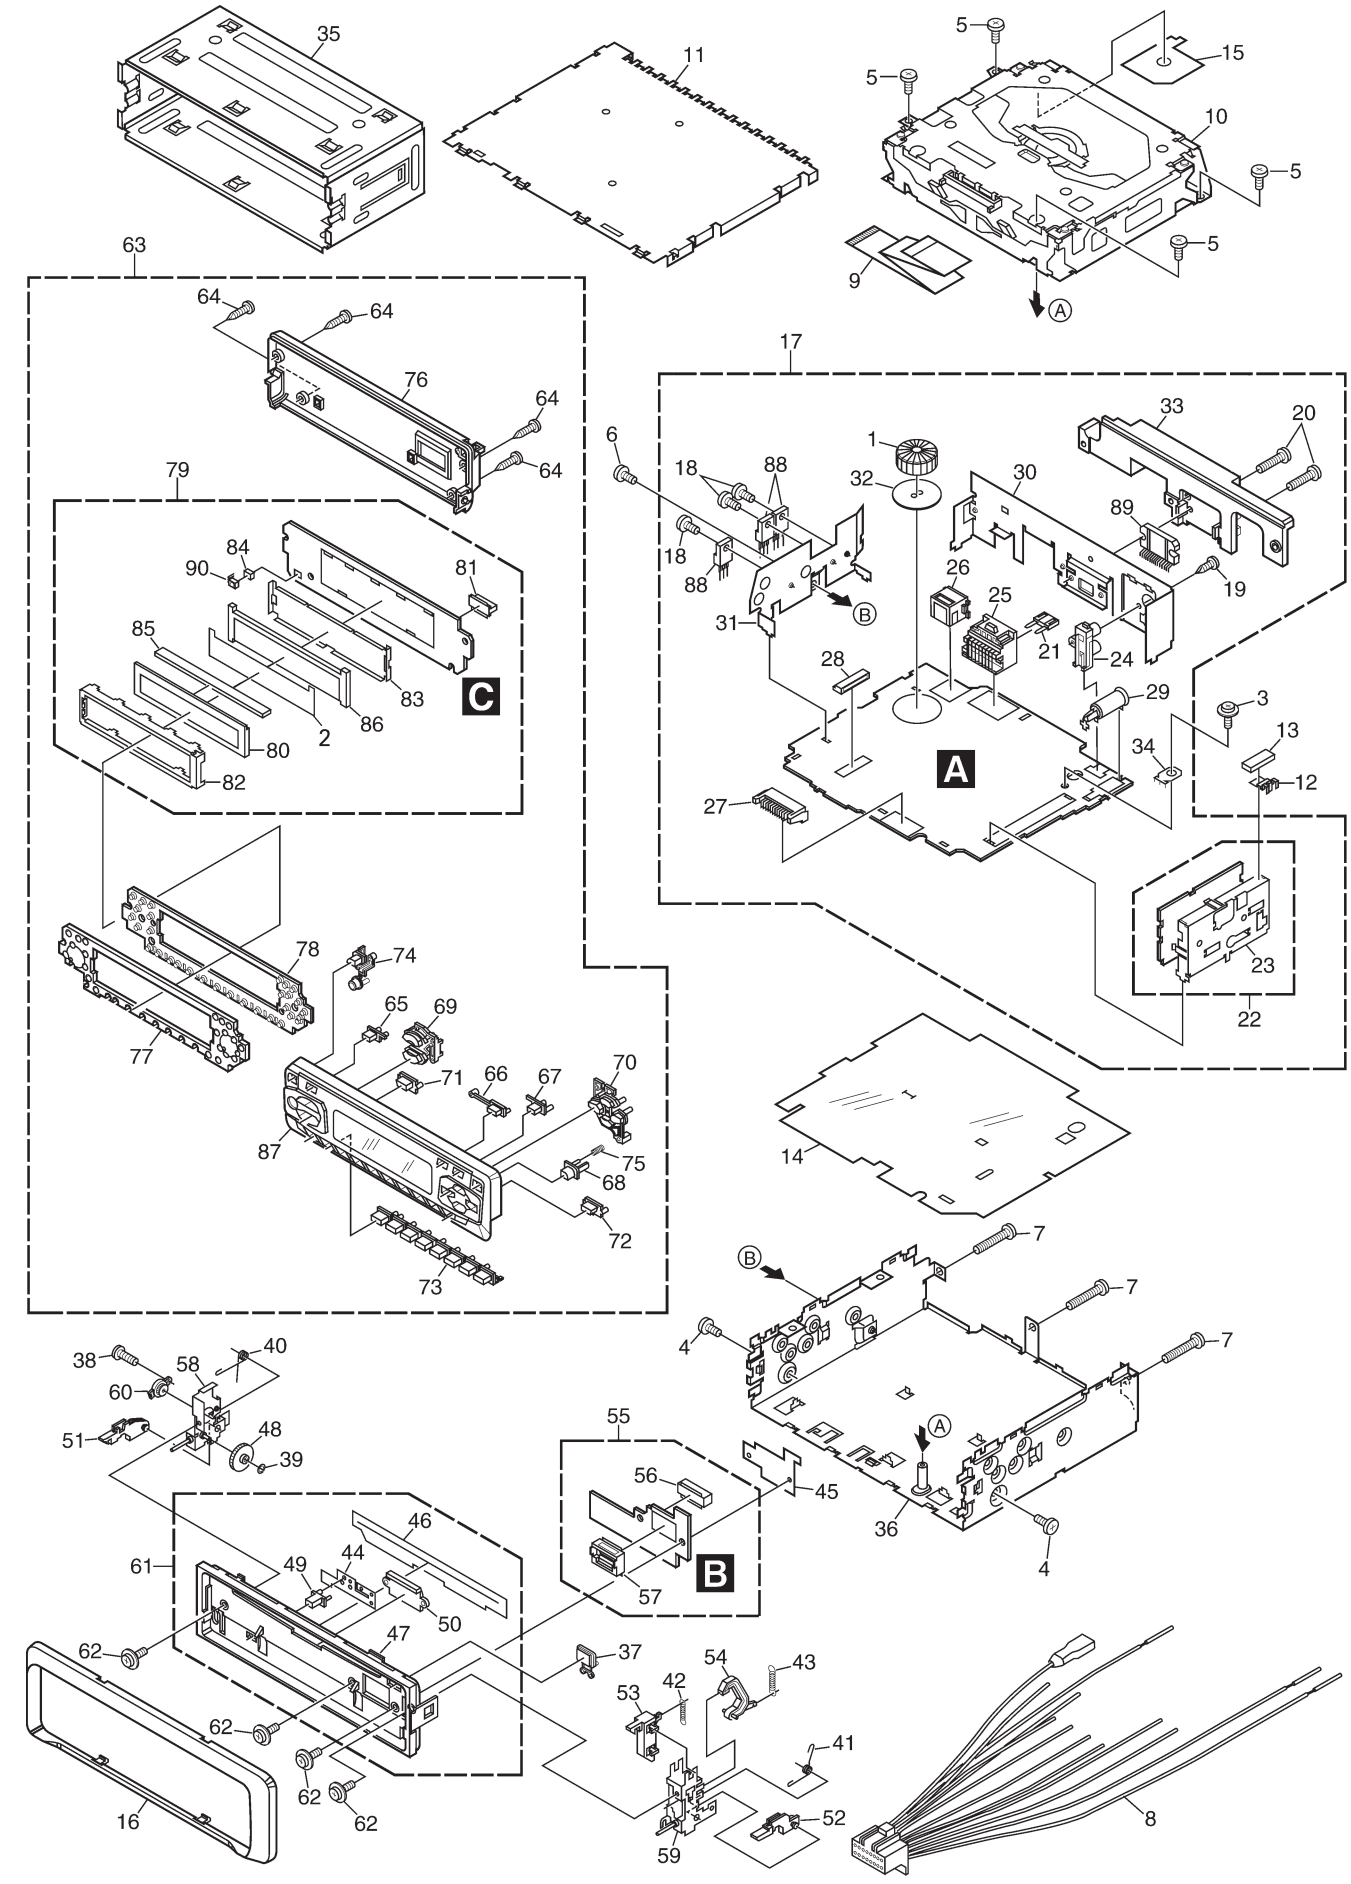

● EXTERIOR (DEH-P3550MP) SECTION PARTS LIST

Mark No.	Description	Part No.
1	Choke Coil(L981)	CTH1280
2	Sheet	CNM8386
3	Screw	ISS26P055FTC
4	Screw	BMZ30P040FZK
5	Screw	BSZ26P060FTC
6	Screw	BSZ30P060FTC
7	Screw	BSZ30P200FTC
8	Cord Assy	CDE7060
9	Cable	CDE7189
10	CD Mechanism Module(S10MP3)	CXK5660
11	Case	CNB2870
12	Earth Plate	CNC8915
13	Cushion	CNM4870
14	Insulator	CNM7935
15	Insulator	CNM8174
16	Panel	CNS6935
17	Tuner Amp Unit	CWM8654
18	Screw	ASZ26P060FTC
19	Screw	BPZ26P080FTC
20	Screw	BSZ26P160FTC
21	Fuse(10A)	CEK1208
22	FM/AM Tuner Unit	CWE1646
23	Holder	CND1054
24	Pin Jack(CN351)	CKB1059
25	Plug(CN981)	CKM1376
26	Connector(CN101)	CKS3408
27	Plug(CN831)	CKS3537
28	Connector(CN721)	CKS3837
29	Antenna Jack(CN401)	CKX1056
30	Holder	CND1237
31	Holder	CND1352
32	Insulator	CNM8245
33	Heat Sink	CNR1668
34	Terminal(CN402)	VNF1084
35	Holder Unit	CXB6681
36	Chassis Unit	CXB9528
37	Button(EJECT)	CAC7752
38	Screw(M2x2)	CBA1176
39	Washer	CBF1038
40	Spring	CBH2650
41	Spring	CBH2651
42	Spring	CBH2652
43	Spring	CBH2653
44	Spring	CBL1512
45	Holder	CND1254

Mark No.	Description	Part No.
46	Cover	CNM6854
47	Panel	CNS7245
48	Gear	CNV5997
49	Pin	CNV6486
50	Lighting Conductor	CNV6487
51	Arm	CNV7400
52	Arm	CNV7401
53	Arm	CNV7402
54	Arm	CNV7403
55	Panel Unit	CWM8758
56	Socket(CN1950)	CKS3550
57	Connector(CN1951)	CKS4462
58	Holder Unit	CXB9501
59	Holder Unit	CXB9502
60	Damper Unit	CXB9503
61	Service Panel Unit	CXX1691
62	Screw	IMS20P045FZK
63	Detach Grille Assy	CXB9596
64	Screw	BPZ20P100FZK
65	Button(DISP)	CAC7779
66	Button(PAUSE)	CAC7842
67	Button(AUDIO)	CAC7781
68	Button(OPEN)	CAC7782
69	Button(VOLUME)	CAC7810
70	Button(SELECT)	CAC7812
71	Button(SRC)	CAC7785
72	Button(FUNC)	CAC7786
73	Button(1-6)	CAC7813
74	Button(CLK, EQ)	CAC7808
75	Spring	CBH2630
76	Cover	CNS7269
77	Lighting Conductor	CNV7421
78	Rubber	CNV7422
79	Keyboard Unit	CWM8631
80	LCD(LCD1901)	CAW1762
81	Connector(CN1901)	CKS4524
82	Holder	CNC9757
83	Sheet	CNM7647
84	Cushion	CNM8092
85	Connector	CNV6440
86	Lighting Conductor	CNV7711
87	Grille Unit	CXB9624
88	Transistor(Q752, 901, 911)	2SD2375
89	IC(IC301)	PAL007A
90	IC(IC1902)	TSOP4840SB1

2.4 CD MECHANISM MODULE

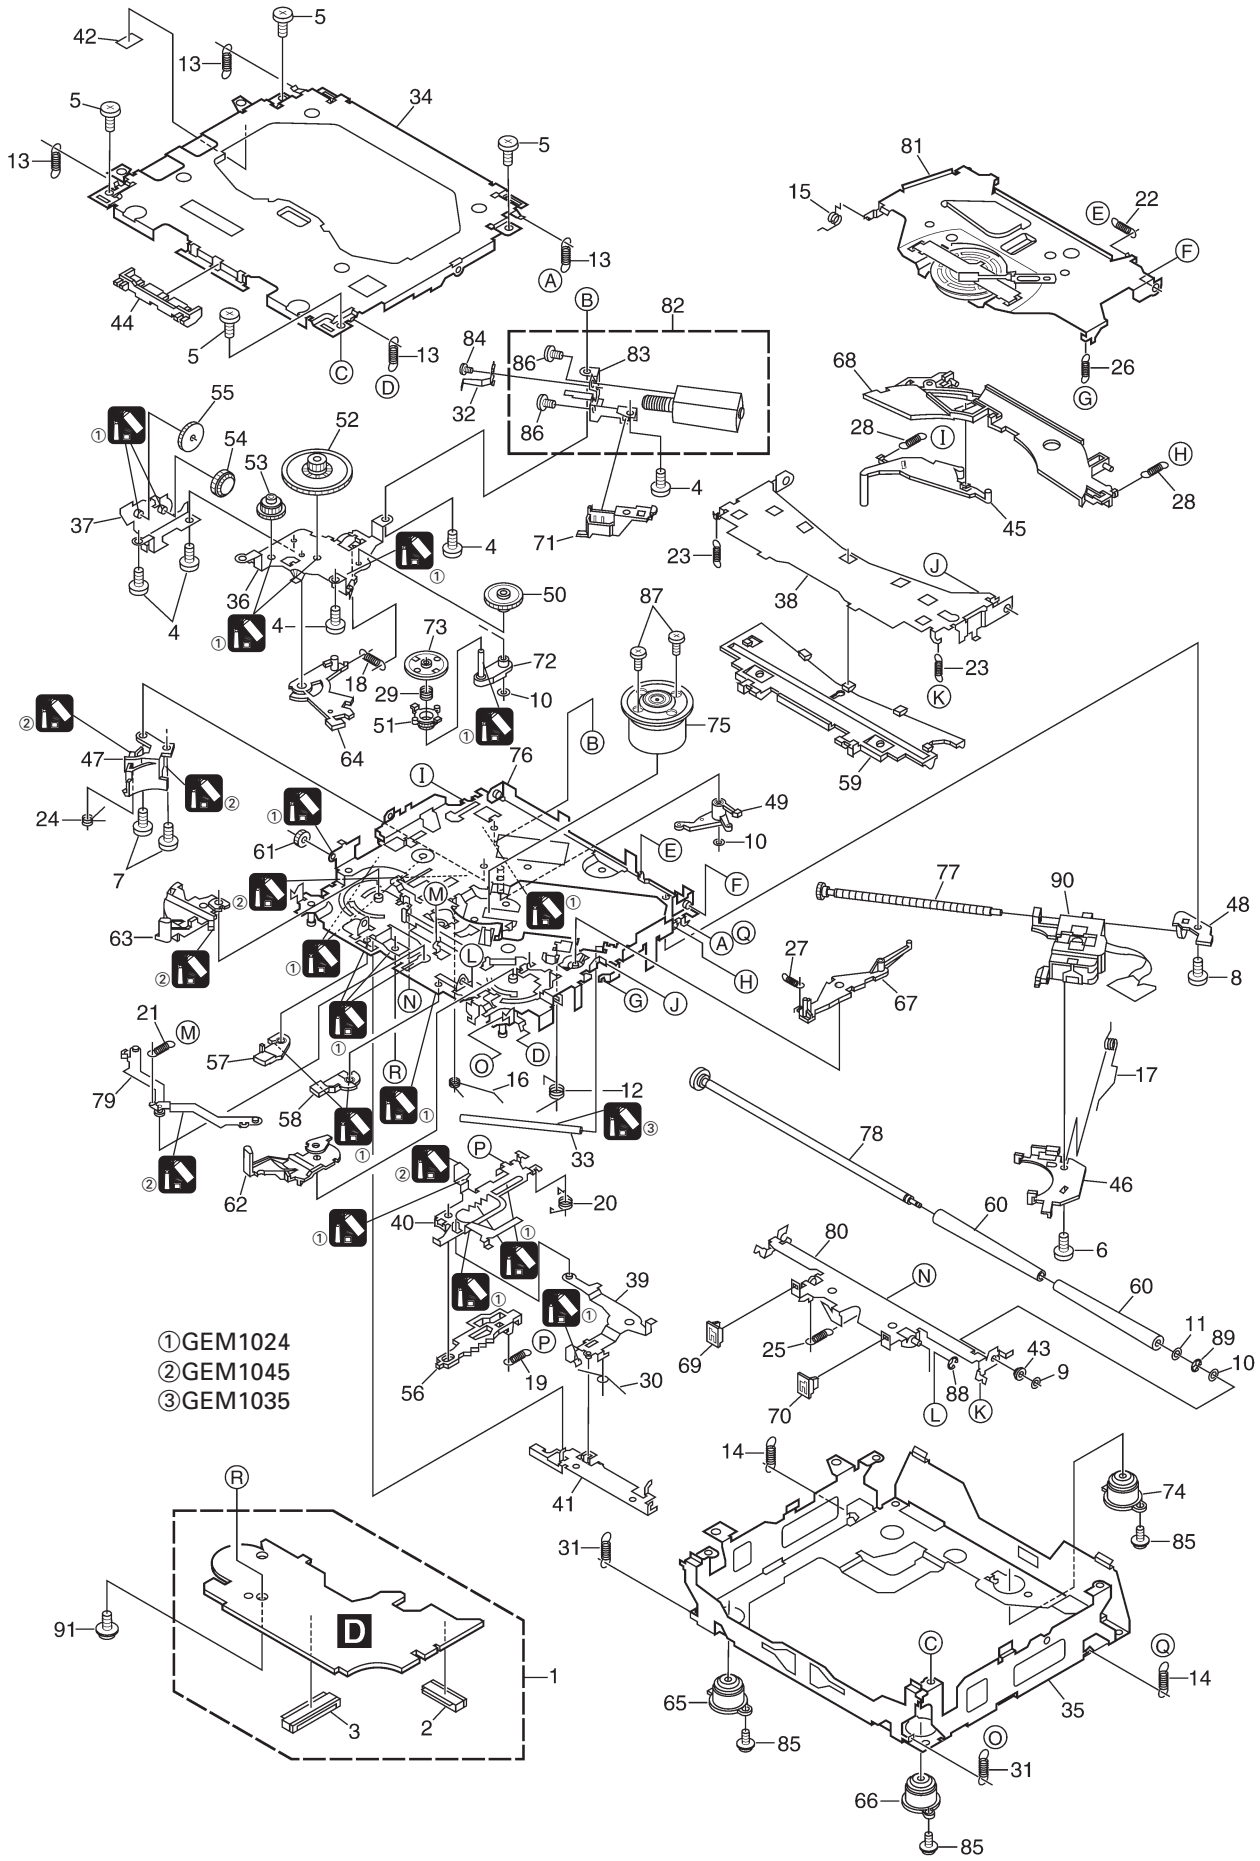

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10MP3)	CWX2742
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1511
	8	Screw(M2x3)	CBA1527
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2611
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
*	32	Spring	CBL1614
	33	Shaft	CLA3845
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CNC9966
	37	Bracket	CNC9967
	38	Arm	CNC9968
	39	Arm	CNC9973
	40	Lever	CNC9983
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV6906
	44	Guide	CNV6925
	45	Arm	CNV7198

Mark	No.	Description	Part No.
	46	Rack	CNV7199
	47	Holder	CNV7201
	48	Holder	CNV7202
	49	Arm	CNV7203
	50	Gear	CNV7207
	51	Gear	CNV7208
	52	Gear	CNV7209
	53	Gear	CNV7210
	54	Gear	CNV7211
	55	Gear	CNV7212
	56	Rack	CNV7214
	57	Arm	CNV7215
	58	Arm	CNV7216
	59	Guide	CNV7217
	60	Roller	CNV7218
	61	Gear	CNV7219
	62	Arm	CNV7221
	63	Arm	CNV7220
	64	Arm	CNV7222
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV7341
	68	Arm	CNV7342
	69	Guide	CNV7360
	70	Guide	CNV7361
	71	Holder	CNV7437
	72	Arm	CNV7444
	73	Gear	CNV7595
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXB6007
	76	Chassis Unit	CXB8728
	77	Screw Unit	CXB8729
	78	Gear Unit	CXB8731
	79	Arm Unit	CXB8732
	80	Arm Unit	CXB8735
	81	Arm Unit	CXB8852
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	Screw	JFZ20P020FTC
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	Washer	YE15FTC
	89	Washer	YE20FTC
	90	Pickup Unit(Service)(P10)	CXX1641
	91	Screw	IMS26P030FMC

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM8653
(P450MP/XM/UC, P4500MP/XM/UC)
: CWM8654
(P3550MP/XM/ES)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	101	IC	HA12187FP
IC	131	IC	PML003AM
IC	301	IC	PAL007A
IC	601	IC	PE5393A
IC	651	IC	BD4834G
IC	921	IC	BA033FP
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	352	Transistor (P450MP, P4500MP)	IMH3A
Q	501	Transistor	2SC2412K
Q	502	Transistor	IMD2A
Q	601	Transistor	DTA114EK
Q	751	Transistor	IMD2A
Q	752	Transistor	2SD2375
Q	754	Transistor	2SD1760F5
Q	831	Transistor	DTC143EK
Q	901	Transistor	2SD2375
Q	902	Transistor	IMD2A
Q	911	Transistor	2SD2375
Q	912	Transistor	2SB1238
Q	913	Transistor	DTC114EK
Q	931	Transistor	IMX1
Q	961	Transistor	2SB1238
Q	962	Transistor	DTC114EK
Q	971	Transistor	2SA1036K
D	501	Diode	DAN202U
D	502	Diode	HZS9L(A2)
D	571	Diode	MPG06G-6415G50
D	572	Diode	MPG06G-6415G50
D	751	Diode	HZS9L(B1)
D	753	Diode	HZS6L(C1)
D	831	Diode	DAN202U
D	832	Diode	DAN202U
D	833	Diode	DAP202U
D	834	Diode	DAP202U
D	901	Diode	HZS6L(B1)
D	902	Diode	MPG06G-6415G50
D	911	Diode	HZS9L(B3)
D	921	Diode	1SR154-400
D	922	Diode	1SR154-400
D	923	Diode	1SR154-400
D	931	Diode	HZS7L(C3)
D	932	Diode	HZS7L(A1)

=====Circuit Symbol and No.		===Part Name	Part No.
D	981	Diode	MPG06G-6415G50
D	982	Diode	MPG06G-6415G50
ZNR	401	Arrester	DSP-201M
L	131	Inductor	LCTA2R2J2520
L	401	Ferri-Inductor	LAU4R7K
L	402	Inductor	LAU1R0K
L	404	Inductor	LAU1R0K
L	601	Inductor	LAU2R2K
L	721	Inductor	LAU2R2K
L	971	Inductor	LAU2R2K
L	981	Choke Coil 600µH	CTH1280
X	601	Radiator 12.58291MHz	CSS1402
S	831	Switch(DETACH SENSE)	CSN1039
SP	601	Buzzer	CPV1062
		FM/AM Tuner Unit	CWE1646

RESISTORS

R	101		RS1/16S150J
R	102		RS1/16S470J
R	103		RS1/16S101J
R	104		RS1/16S101J
R	105		RS1/16S181J
R	106		RS1/16S181J
R	107		RS1/16S223J
R	108		RS1/16S223J
R	109		RS1/16S102J
R	110		RS1/16S102J
R	111		RS1/16S222J
R	112		RS1/16S103J
R	113		RS1/16S332J
R	114		RS1/16S562J
R	131		RS1/16S471J
R	132		RS1/16S471J
R	133		RAB4C102J
R	137		RS1/16S101J
R	138		RS1/16S101J
R	139		RS1/16S101J
R	140		RS1/16S101J
R	141		RS1/16S0R0J
R	142		RS1/16S0R0J
R	301		RS1/16S153J
R	302		RS1/16S103J
R	303		RS1/16S103J
R	304		RS1/16S331J
R	351		RS1/16S821J
R	352		RS1/16S821J
R	353	(P450MP, P4500MP)	RS1/16S821J
R	354	(P450MP, P4500MP)	RS1/16S821J
R	359		RS1/16S223J
R	360		RS1/16S223J
R	361	(P450MP, P4500MP)	RS1/16S223J
R	362	(P450MP, P4500MP)	RS1/16S223J

=====Circuit Symbol and No.		===Part Name	Part No.
R	401		RS1/16S681J
R	403		RS1/16S122J
R	404		RS1/16S681J
R	405		RS1/16S681J
R	406		RS1/16S681J
R	501		RS1/16S103J
R	502		RS1/16S473J
R	504		RS1/16S102J
R	601		RS1/16S102J
R	603		RS1/16S473J
R	605		RS1/16S102J
R	606		RS1/16S473J
R	607		RS1/16S104J
R	612		RS1/16S0R0J
R	617	(P3550MP)	RS1/16S104J
R	618	(P450MP, P4500MP)	RS1/16S104J
R	620		RS1/16S473J
R	621		RS1/16S473J
R	622		RS1/16S473J
R	623		RS1/16S473J
R	624		RS1/16S473J
R	625		RS1/16S473J
R	626		RS1/16S681J
R	627		RS1/16S681J
R	628		RS1/16S681J
R	640		RS1/16S0R0J
R	651		RS1/16S102J
R	652		RS1/16S183J
R	711		RS1/16S682J
R	718		RS1/16S473J
R	721		RS1/16S0R0J
R	722		RS1/16S682J
R	723		RS1/16S682J
R	724		RS1/16S682J
R	726		RS1/16S0R0J
R	727		RS1/16S821J
R	728		RS1/16S821J
R	734		RS1/16S102J
R	738		RS1/16S0R0J
R	739		RS1/16S0R0J
R	743		RS1/16S221J
R	744		RS1/16S221J
R	745		RS1/16S221J
R	746		RS1/16S221J
R	747		RS1/16S221J
R	748		RS1/16S221J
R	751		RD1/4PU821J
R	752		RD1/4PU221J
R	755		RS1/16S331J
R	757		RD1/4PU0R0J
R	831		RS1/16S222J
R	832		RS1/16S222J
R	833		RS1/16S222J
R	834		RS1/16S222J
R	835		RS1/16S473J
R	836		RS1/16S473J
R	837		RD1/4PU391J
R	838		RS1/16S102J
R	839		RS1/16S102J
R	840		RS1/16S102J
R	841		RS1/16S102J
R	845		RS1/16S102J
R	901		RD1/4PU221J
R	902		RS1/16S223J
R	903		RS1/16S821J

=====Circuit Symbol and No.		===Part Name	Part No.
R	904		RS1/16S821J
R	905		RS1/16S0R0J
R	911		RS1/16S223J
R	914		RS1/16S152J
R	915		RD1/4PU152J
R	916		RS1/16S223J
R	921		RD1/4PU1R8J
R	931		RS1/16S104J
R	932		RS1/16S473J
R	933		RS1/16S103J
R	934		RS1/16S473J
R	935		RS1/16S472J
R	961		RS1/16S223J
R	962		RS1/16S182J
R	963		RD1/4PU1R0J
R	965		RS1/16S182J
R	971		RS1/16S153J
R	972		RS1/16S153J
R	973		RS1/16S222J
R	981		RD1/4PU102J
R	9101		RD1/4PU0R0J
R	9403		RD1/4PU0R0J
R	9405		RD1/4PU0R0J

CAPACITORS

C	101		CKSRYB104K25
C	131		CEJQ1R0M50
C	132		CEJQ1R0M50
C	133		CKSRYB104K25
C	134		CKSRYB104K25
C	135		CEJQ1R0M50
C	136		CEJQ1R0M50
C	137		CEJQ1R0M50
C	138		CEJQ1R0M50
C	139		CEJQ470M16
C	140		CKSRYB104K25
C	141		CCSRCH102J25
C	143		CEJQ100M16
C	145		CKSRYB105K10
C	146		CKSRYB105K10
C	147		CKSRYB153K50
C	148		CKSRYB153K50
C	172		CCSRCH102J25
C	301		CKSRYB474K10
C	302		CKSRYB474K10
C	303		CKSRYB474K10
C	304		CKSRYB474K10
C	305		CKSRYB474K10
C	306		CKSRYB474K10
C	307		CKSRYB474K10
C	308		CKSRYB474K10
C	309		CEHAR330M10
C	310	3300µF/16V	CCH1486
C	311		CKSRYB104K25
C	312		CEHAR100M16
C	313		CKSQYB225K10
C	314		CKSQYB225K10
C	316		CKSQYB105K16
C	351		CEJQ100M16
C	352		CEJQ100M16
C	353	(P450MP, P4500MP)	CEJQ100M16
C	354	(P450MP, P4500MP)	CEJQ100M16
C	401		CKSRYB103K50
C	402		CEJQ470M6R3
C	403		CKSRYB103K50

=====Circuit Symbol and No.	===	Part Name	Part No.
C	404		CKSRYB103K50
C	405		CEJQ101M16
C	407		CKSYB475K10
C	602		CKSRYB105K10
C	603		CCSRCH200J50
C	604		CCSRCH200J50
C	605		CEJQ4R7M35
C	606		CKSRYB104K25
C	608		CCSRCH101J50
C	609		CCSRCH470J50
C	611		CKSRYB104K25
C	652		CKSRYB105K10
C	725		CCSRCH102J25
C	726		CCSRCH102J25
C	727	470µF/16V	CCH1331
C	751		CKSRYB224K10
C	752		CKSRYB102K50
C	753		CEJQ101M16
C	754		CKSRYB473K50
C	755		CEJQ101M16
C	901		CEJQ470M10
C	902		CKSRYB103K50
C	903		CKSRYB472K50
C	904	470µF/16V	CCH1331
C	911		CEJQ221M10
C	912		CKSRYB103K50
C	913		CEJQ101M16
C	921		CEJQ220M10
C	922		CKSRYB103K50
C	923		CKSYB475K10
C	931		CKSRYB104K25
C	961		CKSRYB473K50

C Unit Number : CWM8635
(P450MP/XM/UC, P4500MP/XM/UC)
CWM8631
(P3550MP/XM/ES)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1901	IC	PD6340A
IC	1902	IC	TSOP4840SB1
D	1801	LED (P450MP, P4500MP)	NSSW440-9159
D	1801	LED (P3550MP)	NSSW440-2549
D	1802	LED (P450MP, P4500MP)	NSSW440-9159
D	1802	LED (P3550MP)	NSSW440-2549
D	1803	LED	SML-310PT
D	1804	LED	SML-310PT
D	1805	LED	SML-310PT
D	1806	LED	SML-310PT
D	1807	LED	SML-310PT
D	1808	LED	SML-310PT
D	1809	LED	SML-310PT
D	1810	LED	SML-310PT
D	1811	LED	SML-310PT
D	1812	LED	SML-310PT
D	1813	LED	SML-310PT
D	1814	LED	SML-310PT
D	1901	Diode	DAN202U
D	1902	Diode	DAP202U
X	1901	Ceramic Resonator 4.97MHz	CSS1422
IL	1801	Lamp 14V 40mA	CEL1651
IL	1802	Lamp 14V 40mA	CEL1651
LCD	1901	LCD (P450MP, P4500MP)	CAW1759
LCD	1901	LCD (P3550MP)	CAW1762

=====Circuit Symbol and No.	===	Part Name	Part No.

RESISTORS

R	1801		RS1/16S151J
R	1802		RS1/16S151J
R	1803		RS1/16S151J
R	1804		RS1/16S181J
R	1805		RS1/16S151J
R	1806		RS1/16S181J
R	1807		RS1/16S181J
R	1808		RS1/16S151J
R	1809		RS1/16S181J
R	1810		RS1/16S181J
R	1811		RS1/16S151J
R	1812		RS1/16S181J
R	1813		RS1/16S181J
R	1814		RS1/16S151J
R	1815		RS1/16S181J
R	1901		RS1/16S121J
R	1902		RS1/16S2R2J
R	1904		RS1/16S222J
R	1905		RS1/16S222J
R	1906		RS1/16S473J

CAPACITORS

C	1801		CKSRYB104K16
C	1802		CKSRYB104K16
C	1901		CKSRYB224K10
C	1902		CSZS4R7M16

B Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D	1970	LED	CL220PGC
S	1970	Push Switch(EJECT)	CSG1112

RESISTORS

R	1970		RS1/16S101J
R	1971		RS1/16S101J
R	1972		RS1/16S0R0J

CAPACITORS

C	1970		CKSRYB104K16

D Unit Number : CWX2742
Unit Name : CD Core Unit(S10MP3)

MISCELLANEOUS

IC	201	IC	UPD63760GJ
IC	202	IC	MSM51V4265EP-70TS
IC	203	IC	BA033SFP
IC	301	IC	BA5996FM
IC	701	IC	PE5352B
IC	702	IC	TC74VHCT08AFT
IC	703	IC	S-818A33AUC-BGN
Q	101	Transistor	2SB1132
Q	601	Transistor	DTC323TK
Q	602	Transistor	DTC323TK
Q	603	Transistor	2SB709A
Q	701	Transistor	UN2111
D	101	Diode	1SS355
D	201	Diode	1SR154-400
D	601	Diode	MA152WA
L	201	Inductor	CTF1386
L	202	Inductor	CTF1386
L	204	Inductor	CTF1386
L	205	Inductor	CTF1386
L	206	Inductor	CTF1386

=====Circuit Symbol and No.		===Part Name	Part No.
L	207	Inductor	CTF1386
L	208	Inductor	CTF1386
L	209	Inductor	CTF1386
L	211	Inductor	CTF1386
L	212	Inductor	CTF1386
L	701	Inductor	CTF1386
L	702	Inductor	LCYBR22J1608
L	703	Inductor	CTF1386
L	704	Inductor	CTF1386
TH	701	Thermistor	CCX1037
X	201	Ceramic Resonator 16.934MHz	CSS1603
X	701	Ceramic Resonator 16.00MHz	CSS1616
S	901	Switch(HOME)	CSN1051
S	902	Switch(CLAMP)	CSN1051
S	903	Spring Switch(DSCSNS)	CSN1052
S	904	Switch(12EJ)	CSN1051
S	905	Switch(8EJ)	CSN1051

RESISTORS

R	101		RS1/10S1R5J
R	102		RS1/10S1R5J
R	103		RS1/10S1R5J
R	104		RS1/10S1R5J
R	105		RS1/10S1R5J
R	201		RS1/16SS102J
R	202		RS1/16SS333J
R	203		RS1/16SS333J
R	205		RS1/16SS0R0J
R	207		RS1/16SS0R0J
R	209		RS1/16SS0R0J
R	212		RS1/16SS221J
R	213		RS1/16SS1002D
R	214		RS1/16SS1002D
R	215		RS1/16SS6801D
R	216		RS1/16SS6801D
R	217		RS1/16SS1002D
R	218		RS1/16SS1002D
R	219		RS1/16SS1002D
R	220		RS1/16SS1002D
R	221		RS1/16SS103J
R	222		RS1/16SS103J
R	223		RS1/16SS103J
R	224		RS1/16SS103J
R	225		RS1/16SS103J
R	226		RS1/16SS393J
R	227		RS1/16SS103J
R	228		RS1/16SS182J
R	229		RS1/16SS103J
R	231		RS1/16SS0R0J
R	232		RS1/16SS182J
R	233		RS1/16SS0R0J
R	237		RS1/16SS104J
R	238		RS1/16SS473J
R	239		RS1/16SS333J
R	240		RS1/16SS0R0J
R	301		RS1/16SS183J
R	302		RS1/16SS822J
R	303		RS1/16SS0R0J
R	304		RS1/16SS183J
R	305		RS1/16SS822J
R	306		RS1/16SS0R0J
R	307		RS1/16SS183J
R	308		RS1/16SS822J
R	309		RS1/16SS183J

=====Circuit Symbol and No.		===Part Name	Part No.
R	310		RS1/16SS822J
R	311		RS1/16SS0R0J
R	601		RS1/16S101J
R	602		RS1/16S101J
R	603		RS1/16S223J
R	604		RS1/16S223J
R	605		RS1/16SS103J
R	707		RS1/16SS0R0J
R	708		RS1/16SS102J
R	710		RS1/16SS102J
R	711		RS1/16SS102J
R	712		RS1/16SS102J
R	713		RS1/16SS102J
R	714		RS1/16SS473J
R	715		RAB4CQ221J
R	716		RAB4CQ221J
R	717		RAB4CQ221J
R	718		RAB4CQ221J
R	719		RAB4CQ221J
R	720		RS1/16SS471J
R	721		RS1/16SS471J
R	722		RAB4CQ221J
R	723		RS1/16SS102J
R	724		RN1/16SE1302D
R	725		RS1/16SS222J
R	726		RS1/16SS103J
R	727		RS1/16SS473J
R	728		RS1/16SS473J
R	729		RS1/16SS223J
R	730		RS1/16SS473J
R	731		RS1/16SS104J
R	732		RS1/16SS104J
R	733		RS1/16SS104J
R	737		RAB4CQ473J
R	739		RAB4CQ473J
R	740		RS1/16SS473J
R	742		RS1/16SS104J
R	744		RS1/16SS104J
R	745		RS1/16SS473J
R	746		RS1/16SS104J
R	747		RS1/16SS104J
R	748		RS1/16SS104J
R	754		RS1/16SS102J
R	755		RS1/16SS102J
R	756		RS1/16SS104J
R	801		RS1/16SS104J
R	802		RS1/16SS473J
R	803		RS1/16SS273J
R	901		RS1/16SS221J
R	902		RS1/16SS221J
R	903		RS1/16SS221J
R	904		RS1/16SS221J
R	905		RS1/16SS221J
R	906		RS1/16SS221J

CAPACITORS

C	101		CKSSYB104K10
C	102		CKSSYB104K10
C	103		CEV101M16
C	104		CEV101M4
C	105		CKSSYB104K10
C	106		CCSRCH101J50
C	108		CKSSYB104K10
C	109		CEV100M16
C	201		CKSSYB471K50
C	202		CKSSYB104K10

	=====Circuit Symbol and No.===		Part Name	Part No.
C	203			CKSSYB104K10
C	204			CEV220M6R3
C	205			CKSSYB103K16
C	206			CKSSYB103K16
C	207			CEV221M4
C	208			CKSSYB104K10
C	209			CKSSYB104K10
C	210			CKSSYB104K10
C	211			CKSSYB104K10
C	216			CKSSYB332K50
C	217			CKSSYB104K10
C	218			CKSSYB223K16
C	219			CKSSYB104K10
C	220			CKSSYB103K16
C	221			CKSSYB104K10
C	222			CCSSCH270J50
C	223			CCSSCJ3R0C50
C	224			CKSSYB104K10
C	225			CKSSYB103K16
C	226			CCSSCH680J50
C	227			CCSSCH470J50
C	228			CKSSYB682K25
C	230			CKSSYB104K10
C	232			CKSSYB104K10
C	233	47µF/6.3V		CCH1436
C	234			CEV221M4
C	235			CKSRYB224K16
C	237			CKSSYB104K10
C	238			CKSSYB104K10
C	239			CCSSCH9R0D50
C	242			CKSSYB104K10
C	243			CKSSYB104K10
C	245			CKSSYB104K10
C	246			CKSSYB104K10
C	301			CKSSYB331K50
C	302			CKSSYB331K50
C	303			CKSSYB472K25
C	304			CKSSYB472K25
C	305			CEV101M16
C	306			CKSRYB224K16
C	601			CCSRCH102J50
C	602			CCSRCH102J50
C	603	4.7µF/25V		CCH1508
C	604	4.7µF/25V		CCH1508
C	701			CKSSYB104K10
C	702			CKSSYB471K50
C	703			CKSSYB103K16
C	704			CEV1R0M50
C	705			CKSSYB104K10
C	706			CKSSYB471K50
C	707			CKSSYB104K10
C	708			CKSSYB104K10
C	709			CKSSYB103K16
C	710			CKSSYB104K10
C	711	10µF/10V		CCH1349
C	712			CKSRYB224K16
C	713			CKSSYB104K10
C	714			CKSSYB104K10
C	715			CKSSYB103K16
C	716			CKSSYB103K16
C	901			CKSSYB104K10
C	903			CCSRCH101J50

Miscellaneous Parts List

		Pickup Unit(Service)(P10)	CXX1641
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB8933