9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING AND EXTERIOR

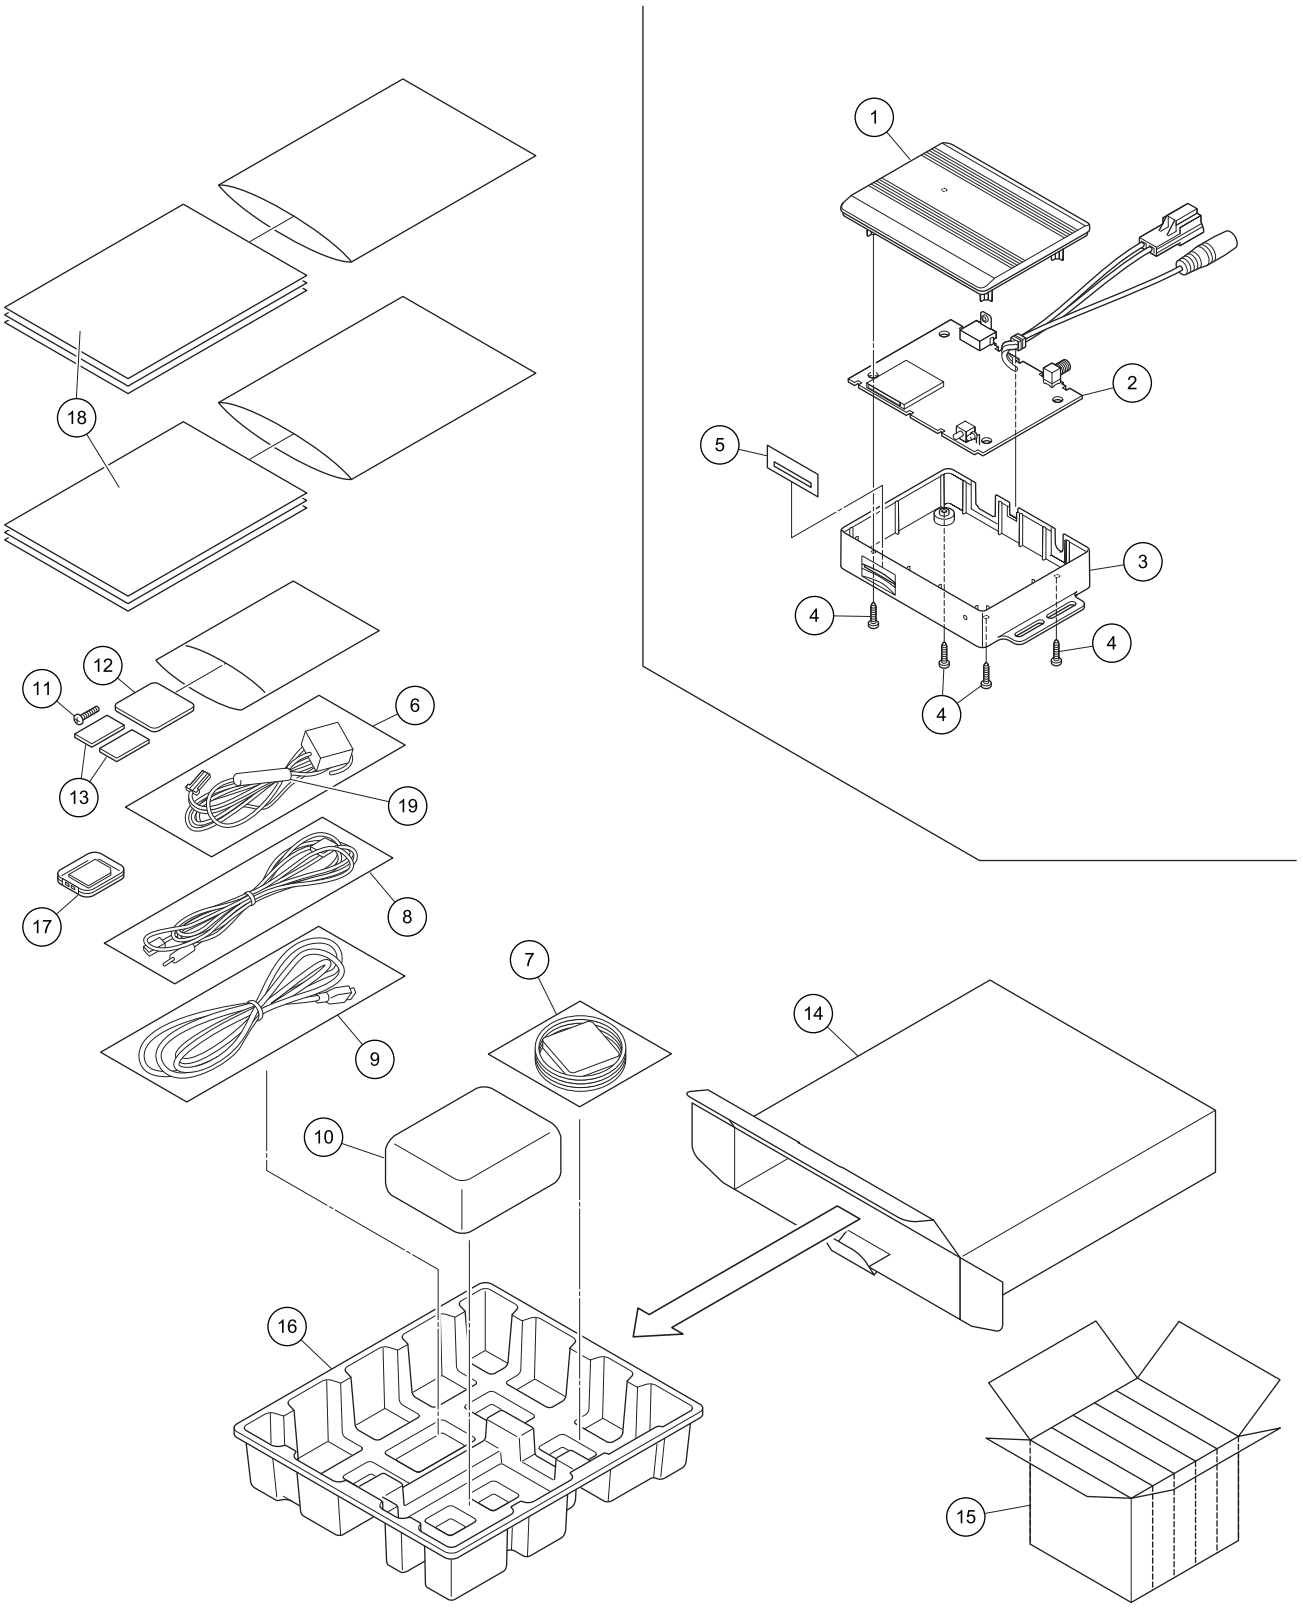

PACKING AND EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Case (Top)	141250300135174-FY
	2	Main Unit	845NV3421MB000-FY
	3	Case (Bottom)	141250300137024-FY
	4	Screw	121040000067-FY
	5	Dust Proof	121450000050-FY
	6	Power Cable	845NV3421PL000-FY
	7	GPS Antenna	124845000126-FY
	8	NAVI Cable	123835000916-FY
	9	TMC Antenna	124845000159-FY
	10	Poly Bag	127045000078-FY
	11	Screw	121100050085-FY
	12	GPS Antenna Mat	121405000232-FY
	13	Magic Tape	121490000797-FY
	14	Gift Box	127020002976-FY
	15	Carton Box	127000002732-FY
	16	PULP Form	127015000325-FY
	17	SD Card (Included SW)	845NV3421SD000-FY
	18-1	Manual	127075003894-FY
	18-2	Manual	127075003899-FY
	18-3	Manual	127075003900-FY
	18-4	Manual	127075003901-FY
	18-5	Manual	127075003902-FY
	18-6	Manual	127075003903-FY
*	18-7	Warranty Card	127070007828-FY
	19	Fuse(3 A/250 V)	124800000092-FY

Owner's Manual,Installation Manual

Part No.	Language
127075003894	English
127075003899	French
127075003900	Italian
127075003901	Spanish(Espanol)
127075003902	German
127075003903	Dutch