EXPLODED VIEW (CD MECHANISM)

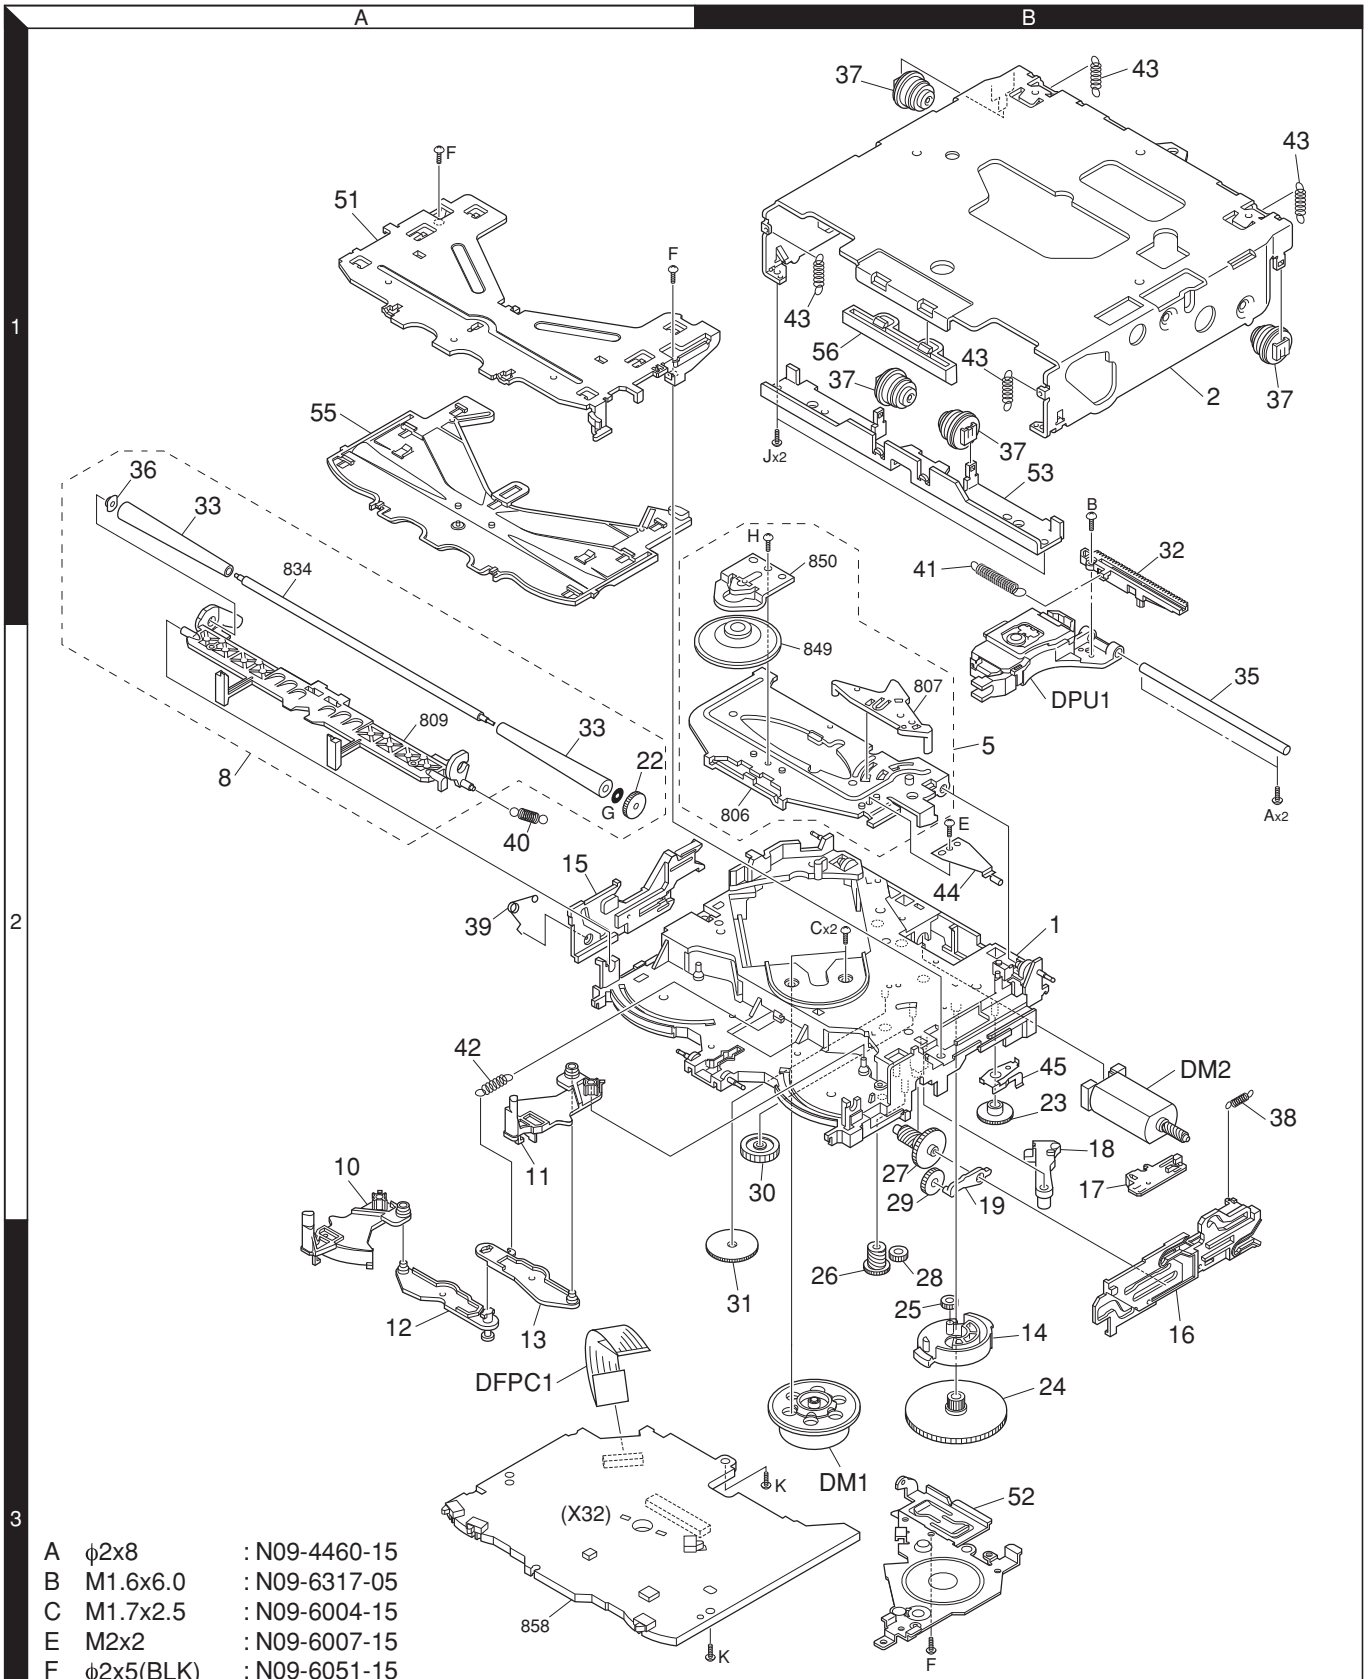

A	ϕ2x8	: N09-4460-15
B	M1.6x6.0	: N09-6317-05
C	M1.7x2.5	: N09-6004-15
E	M2x2	: N09-6007-15
F	ϕ2x5(BLK)	: N09-6051-15
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-48
J	ϕ2x3.5	: N09-6108-15
K	ϕ2x6	: N09-6155-15

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

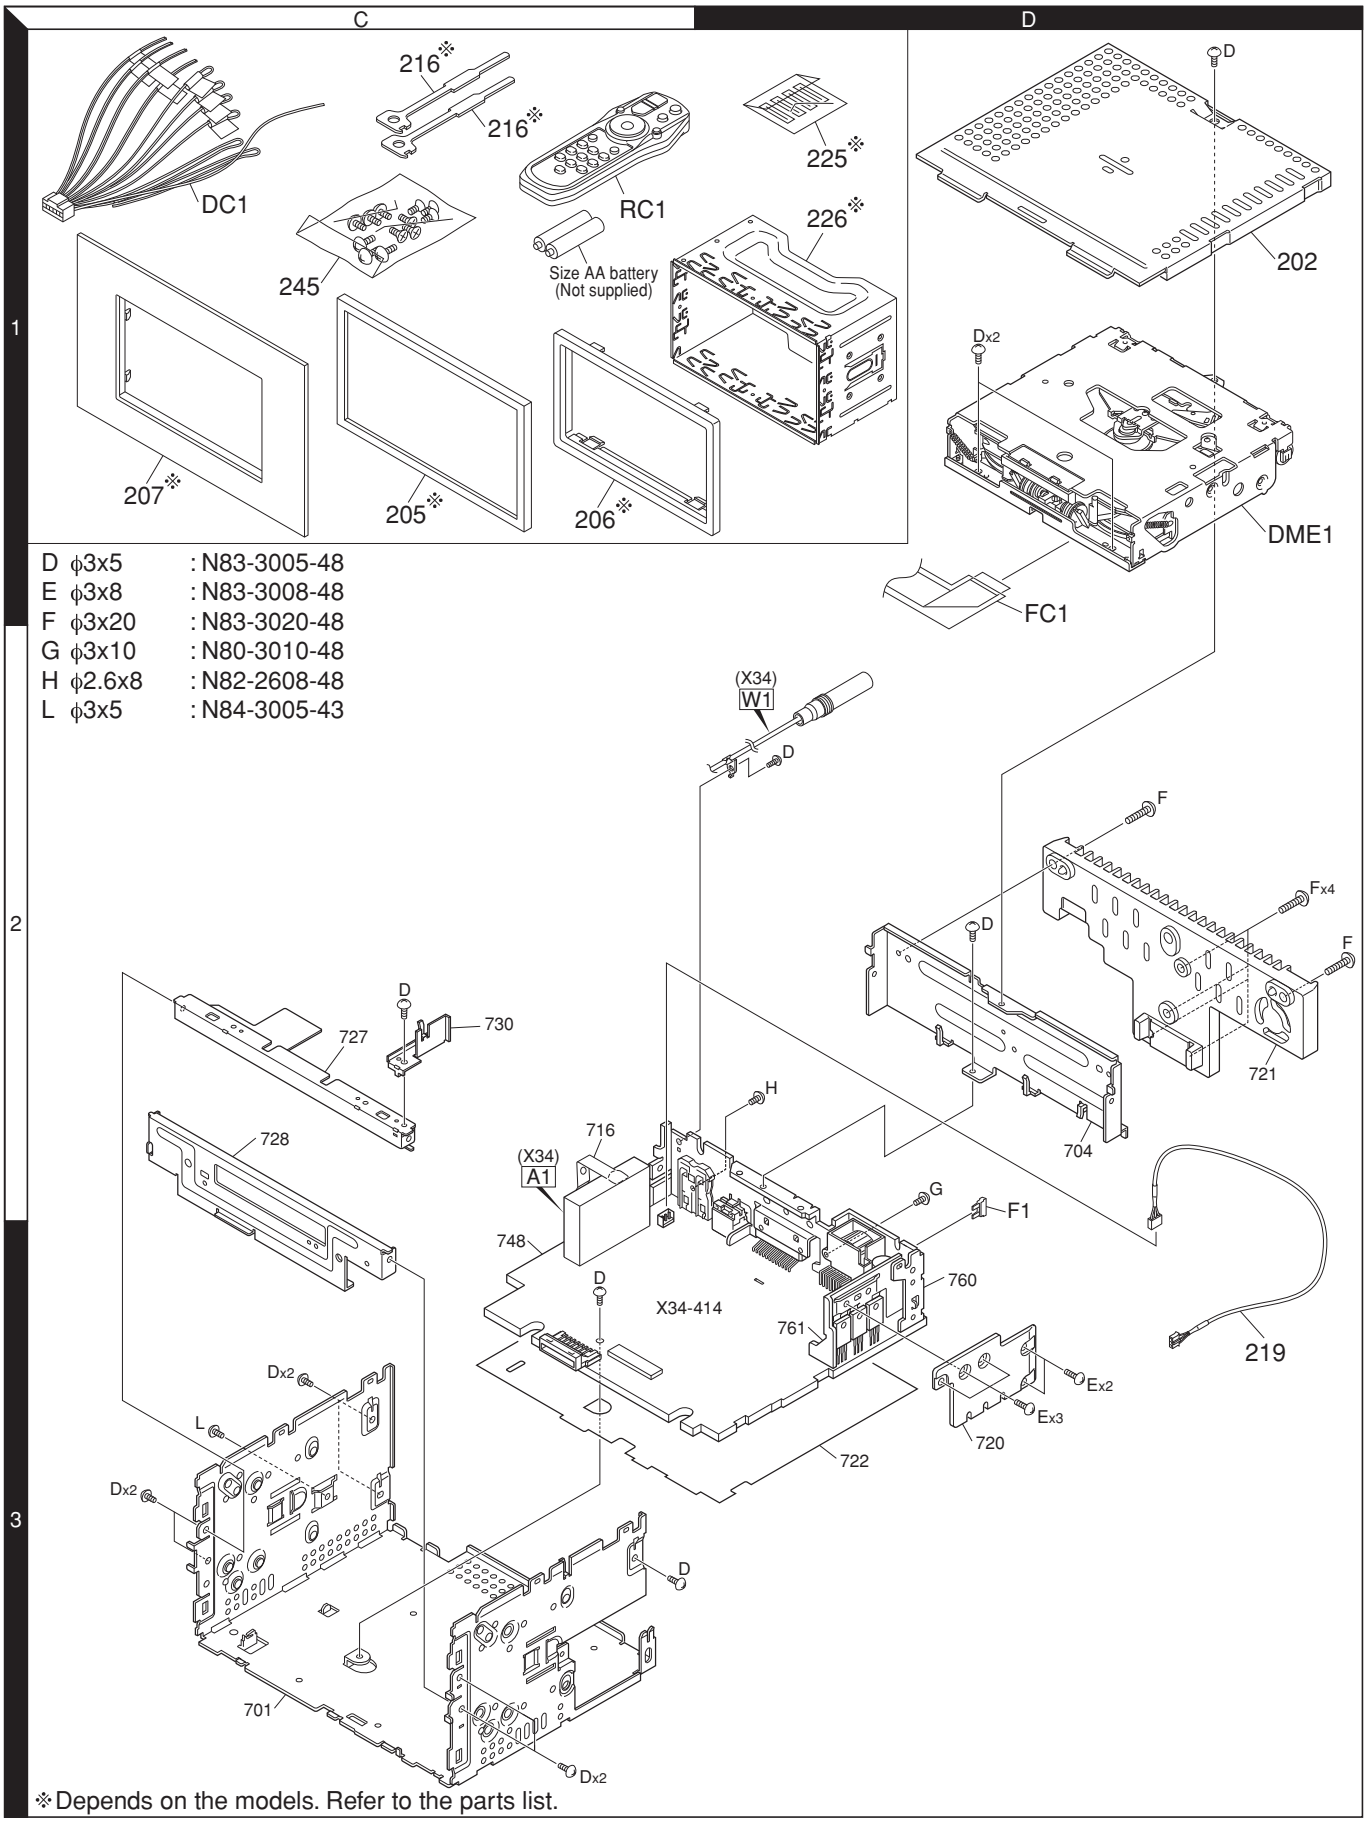

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL)

E F

A φ2.6x6 : N78-2660-48
B φ2x6 : N80-2006-48
C φ2x8 : N80-2008-48

1 2 3

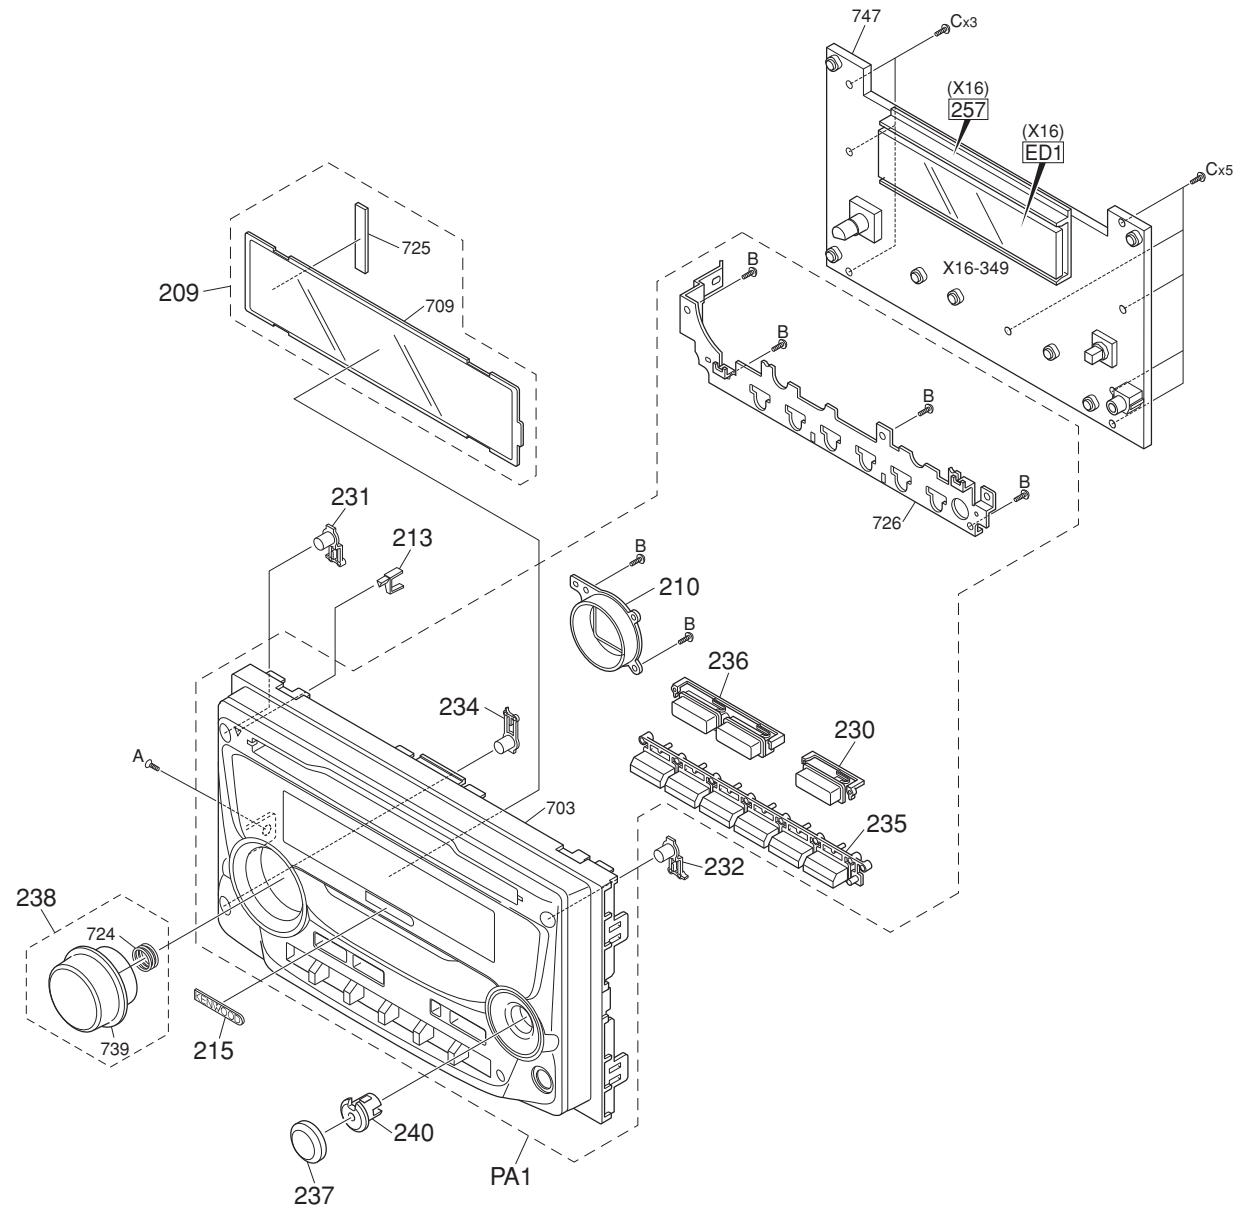

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DPX302 / DPX-MP2100					
202	1D		A52-0872-12	TOP PLATE	
PA1	3E	✻	A64-4099-02	PANEL ASSY	K1
PA1	3E	✻	A64-4100-02	PANEL ASSY	M2
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	
-		✻	B64-3612-00	INST. MANUAL (ENGLISH)	M2
-		✻	B64-3613-00	INST. MANUAL (T-CHI.KOR.)	M2
-		✻	B64-3614-00	INST. MANUAL (ENGLISH)	K1
-		✻	B64-3615-00	INST. MANUAL (FRE.SPA.)	K1
205	1C		B07-3046-04	ESCUTCHEON ASSY	M2
206	1C		B07-3165-02	ESCUTCHEON	K1
207	1C		B07-3172-12	ESCUTCHEON	K1
209	2E		B10-4809-03	FRONT GLASS ASSY	
210	2F		B19-2368-03	LIGHTING BOARD (VOL)	
213	2E		B19-2373-03	LIGHTING BOARD (TRIANGLE LED)	
215	3E		B43-1535-04	BADGE	
216	1C		D10-4589-04	LEVER	K1
219	3D	✻	E39-0884-05	WIRING HARNESS	
⚠ DC1	1C		E30-6408-05	DC CORD	M2
⚠ DC1	1C		E30-6414-05	DC CORD	K1
FC1	1D		E39-0811-05	FLAT CABLE	
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
-		✻	H54-3902-03	ITEM CARTON CASE	K1
-		✻	H54-3903-03	ITEM CARTON CASE	M2
225	1D		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K1
226	1D		J22-0429-13	MOUNTING HARDWARE ASSY	K1
230	2F	✻	K24-4638-03	PUSH KNOB (SRC)	
231	2E		K24-4448-03	PUSH KNOB (DISP)	
232	3F		K24-4450-03	PUSH KNOB (EJECT)	
234	2E		K24-4454-03	PUSH KNOB (ATT)	
235	3F		K25-1787-02	PUSH KNOB (PRESET)	
236	2F		K25-1801-03	PUSH KNOB (AUTO/Q)	
237	3E		K28-0195-03	KEY TOP (FM/AM)	
238	3E	✻	K28-0175-03	KNOB ASSY (VOL)	
240	3E		K29-7141-03	KNOB BASE (FM/AM)	
245	1C		N99-1779-05	SCREW SET	
A	3E		N78-2660-48	PAN HEAD TAPTITE SCREW	
B	2F		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	1F		N80-2008-48	PAN HEAD TAPTITE SCREW	
D	3C		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
F	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
L	3C	✻	N84-3005-43	PAN HEAD TAPTITE SCREW	
DME1	1D		X92-5690-00	MECHANISM ASSY (DXM-6B00W)	
SWITCH UNIT (X16-394x-xx)					
D2			B30-1566-05	LED (1608,RED)	M2
D2 -10			B30-1566-05	LED (1608,RED)	K1
D3 -10			B30-1575-05	LED (1608,YG)	M2
D12 -17			B30-1566-05	LED (1608,RED)	K1
D12 -17			B30-1575-05	LED (1608,YG)	M2
D20 -22			B30-1575-05	LED (1608,YG)	M2
D20 -22			B30-1767-05	LED	K1
D26 ,27			B30-1575-05	LED (1608,YG)	M2
D26 ,27			B30-1767-05	LED	K1
C1 -4			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	
C14 ,15			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-2672-05	PIN ASSY	
J1			E59-0851-05	RECTANGULAR PLUG	
J2			E11-0650-05	3.5D PHONE JACK	
257	1F		J19-7119-12	HOLDER	
CP1 ,2			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP5 ,6			RK74GB1J473J	CHIP-COM 47K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3 -9			RK73EB2E101J	CHIP R 100 J 1/4W	
R18			RK73GB2A104J	CHIP R 100K J 1/10W	
R19 ,20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R24			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R28			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A103J	CHIP R 10K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A104J	CHIP R 100K J 1/10W	
R33			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R38			RK73GB2A301J	CHIP R 300 J 1/10W	
R39 ,40			RK73FB2B511J	CHIP R 510 J 1/8W	M2
R39 ,40			RK73FB2B621J	CHIP R 620 J 1/8W	K1
R41			RK73EB2E681J	CHIP R 680 J 1/4W	M2
R41			RK73EB2E821J	CHIP R 820 J 1/4W	K1
R42 ,43			RK73FB2B511J	CHIP R 510 J 1/8W	M2
R42 ,43			RK73FB2B621J	CHIP R 620 J 1/8W	K1
R45			RK73EB2E561J	CHIP R 560 J 1/4W	K1
R45			RK73EB2E681J	CHIP R 680 J 1/4W	M2
R47			RK73EB2E102J	CHIP R 1.0K J 1/4W	M2
R47			RK73EB2E911J	CHIP R 910 J 1/4W	K1
R49			RK73EB2E561J	CHIP R 560 J 1/4W	K1
R49			RK73EB2E681J	CHIP R 680 J 1/4W	M2
R50 ,51			RK73GB2A103J	CHIP R 10K J 1/10W	
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	
S2			S70-0106-05	TACT SWITCH	
S3 ,4			S70-0051-15	TACT SWITCH	
S5 ,6			S70-0901-05	TACT SWITCH	
S7			S70-0051-15	TACT SWITCH	
S8 -10			S70-0901-05	TACT SWITCH	
S11			S70-0051-15	TACT SWITCH	
S12			S70-0901-05	TACT SWITCH	
S13 -15			S70-0051-15	TACT SWITCH	

E : Europe **K** : North America **M** : Other Areas

K1 : DPX302
M2 : DPX-MP2100

⚠Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-394x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
S1			T99-0457-15	ROTARY ENCODER	
ED1	1F		3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC1			PNA4S22M02KW	ANALOGUE IC	
Q1 -3			2SA1774	TRANSISTOR	
Q6			DTA114EUA	DIGITAL TRANSISTOR	
Q7			2SC4617	TRANSISTOR	
Q9			2SC4617	TRANSISTOR	
Q12			DTC144EE	DIGITAL TRANSISTOR	

CD PLAYER UNIT (X32-5920-04)

Ref. No.	Add	New	Parts No.	Description	Destination
C1 ,2			CK73GB1A105K	CHIP C 1.0UF K	
C3 ,4			CC73GCH1H681J	CHIP C 680PF J	
C5 ,6			CC73GCH1H680J	CHIP C 68PF J	
C7 ,8			CK73GB1H222K	CHIP C 2200PF K	
C9			CK73GB1H104K	CHIP C 0.10UF K	
C10			CK73FB0J106K	CHIP C 10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73GB1A105K	CHIP C 1.0UF K	
C20			CC73GCH1H391J	CHIP C 390PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H152K	CHIP C 1500PF K	
C23			CC73GCH1H391J	CHIP C 390PF J	
C24			CK73EB1A475K	CHIP C 4.7UF K	
C25			CK73FB0J106K	CHIP C 10UF K	
C30			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1A105K	CHIP C 1.0UF K	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C34			CK73FB0J475K	CHIP C 4.7UF K	
C35			CK73GB1H104K	CHIP C 0.10UF K	
C38 -40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C42			CK73GB1A105K	CHIP C 1.0UF K	
C44			CK73GB0J225K	CHIP C 2.2UF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H102K	CHIP C 1000PF K	
C52			CK73GB0J225K	CHIP C 2.2UF K	
C53 ,54			CK73GB0J475K	CHIP C 4.7UF K	
C55			CK73FB0J106K	CHIP C 10UF K	
C56 ,57			CK73GB1H104K	CHIP C 0.10UF K	
C58			CK73FB0J475K	CHIP C 4.7UF K	
C60			CK73GB0J225K	CHIP C 2.2UF K	
C61			CK73GB1H104K	CHIP C 0.10UF K	
C62			CK73FB0J475K	CHIP C 4.7UF K	
C63			CK73GB0J225K	CHIP C 2.2UF K	
C64			CK73GB1H152K	CHIP C 1500PF K	
C65 ,66			CK73GB1H102K	CHIP C 1000PF K	
C67			CK73GB1H152K	CHIP C 1500PF K	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73GB1H332K	CHIP C 3300PF K	
C70			CK73GB1H682K	CHIP C 6800PF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73GB1H103K	CHIP C 0.010UF K	
C73			CC73GCH1H120J	CHIP C 12PF J	
C74			CC73GCH1H060D	CHIP C 6.0PF D	
C75			CK73GB1H104K	CHIP C 0.10UF K	
C76			CC73GCH1H030C	CHIP C 3.0PF C	
C77			CC73GCH1H020C	CHIP C 2.0PF C	
C78			CK73GB0J225K	CHIP C 2.2UF K	
C79 ,80			CK73GB1H104K	CHIP C 0.10UF K	
C81 ,82			CC73GCH1H470J	CHIP C 47PF J	
C83			CK73GB1H103K	CHIP C 0.010UF K	
C85			CK73FB0J106K	CHIP C 10UF K	
C96			CK73GB0J475K	CHIP C 4.7UF K	
C100			CK73GB1C224K	CHIP C 0.22UF K	
C101			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-2083-15	FLAT CABLE CONNECTOR	
CN2			E41-2612-05	FLAT CABLE CONNECTOR	
X1			L78-0862-05	RESONATOR (16.00MHZ)	
X2			L78-1216-05	RESONATOR (16.93MHZ)	
CP1			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP2			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP4 ,5			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP6 ,7			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP8 -11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP13			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP27			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP28			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1 ,2			RK73GH2A103D	CHIP R 10K D 1/10W	
R3 ,4			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R5 ,6			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R7 ,8			RK73GB2A333J	CHIP R 33K J 1/10W	
R9 ,10			RK73GH2A103D	CHIP R 10K D 1/10W	
R11 ,12			RK73GB2A331J	CHIP R 330 J 1/10W	
R14 -16			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R20			RK73GB2A123J	CHIP R 12K J 1/10W	
R21			RK73GB2A133J	CHIP R 13K J 1/10W	
R22 ,23			RK73GB2A123J	CHIP R 12K J 1/10W	
R24			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R25			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R26			RK73GB2A183J	CHIP R 18K J 1/10W	
R27			RK73GB2A163J	CHIP R 16K J 1/10W	
R28			RK73GB2A133J	CHIP R 13K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A133J	CHIP R 13K J 1/10W	
R40 -44			RK73GB2A103J	CHIP R 10K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R50 -52			RK73GB2A103J	CHIP R 10K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A101J	CHIP R 100 J 1/10W	
R57			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R71			RK73GB2A101J	CHIP R 100 J 1/10W	
R72			RK73GB2A333J	CHIP R 33K J 1/10W	
R74			RK73GB2A333J	CHIP R 33K J 1/10W	
R75			RK73GB2A750J	CHIP R 75 J 1/10W	
R78			RK73GB2A103J	CHIP R 10K J 1/10W	
R79			RK73GB2A333J	CHIP R 33K J 1/10W	

E : Europe **K** : North America **M** : Other Areas

K1 : DPX302
M2 : DPX-MP2100

⚠Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5920-04)

Ref. No.	Add	New	Parts No.	Description				Destination
R80 ,81			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R88			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R89			RK73GB2A104J	CHIP R	100K	J	1/10W	
R90			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R91			RK73GB2A910J	CHIP R	91	J	1/10W	
R92			RK73GB2A225J	CHIP R	2.2M	J	1/10W	
R93			RK73GB2A103J	CHIP R	10K	J	1/10W	
R100			RK73GB2A470J	CHIP R	47	J	1/10W	
R101			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R102			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R103,104			RK73GB2A223J	CHIP R	22K	J	1/10W	
R112,113			RK73GB2A100J	CHIP R	10	J	1/10W	
R150			RK73GB2A103J	CHIP R	10K	J	1/10W	
R151			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R152			RK73FB2B6R8J	CHIP R	6.8	J	1/8W	
R153			RK73GB2A103J	CHIP R	10K	J	1/10W	
R157			RK73FB2B6R8J	CHIP R	6.8	J	1/8W	
W1	2D		R92-1252-05	CHIP R	0 OHM	J	1/16W	
W20 ,21			R92-1252-05	CHIP R	0 OHM	J	1/16W	
S1 ,2			S68-0863-05	PUSH SWITCH				
S3			S68-0862-05	PUSH SWITCH				
D1			DAP202U	DIODE				
IC1			TAR5S33-F	ANALOGUE IC				
IC2			NJM4580V-ZB	ANALOGUE IC				
IC3			BA5824FP	ANALOGUE IC				
IC4			703030BYGCJ29A	MICROCONTROLLER IC				
IC5			XC6219B332MR	ANALOGUE IC				
IC6			NJM2846DL3-33	ANALOGUE IC				
IC7			UPD63763CGJ	MOS-IC				
IC11			TC7SET32FU-F	MOS-IC				
Q1			2SA1576A	TRANSISTOR				
Q4			2SB0970	TRANSISTOR				
Q5			DTA143XUA	DIGITAL TRANSISTOR				
Q6			DTC143XUA	DIGITAL TRANSISTOR				
Q7			DTA143XUA	DIGITAL TRANSISTOR				
Q8			DTC143XUA	DIGITAL TRANSISTOR				

ELECTRIC UNIT (X34-414x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
C1			C90-6746-05	ELECTRO	3300UF	16WV		
C3			C90-5692-05	ELECTRO	220UF	16WV		
C4			CK73GB1H103K	CHIP C	0.010UF	K		
C5			CD04AS1V100M	ELECTRO	10UF	35WV		
C6			CD04AS0J101M	ELECTRO	100UF	6.3WV		
C7			CK73FB1C105K	CHIP C	1.0UF	K		
C8			CD04AT1A221M	ELECTRO	220UF	10WV		
C9			CD04AS1C101M	ELECTRO	100UF	16WV		
C11			CD04AS1HR47M	ELECTRO	0.47UF	50WV		
C12			CD04BF1V470M	ELECTRO	47UF	35WV		
C18			CD04BF1E101M	ELECTRO	100UF	25WV		
C19			CK73GB1A105K	CHIP C	1.0UF	K		
C20			CD04BK1C101M	ELECTRO	100UF	16WV		
C45			CK73GB1H104K	CHIP C	0.10UF	K		
C101			CD04AS1H3R3M	ELECTRO	3.3UF	50WV		
C102			CK73GB1A105K	CHIP C	1.0UF	K		
C103			CK73GB1H104K	CHIP C	0.10UF	K		
C104			CK73GB1H103K	CHIP C	0.010UF	K		
C105			CK73GB1H223K	CHIP C	0.022UF	K		
C106			CK73GB1A105K	CHIP C	1.0UF	K		
C109,110			CK73GB1H103K	CHIP C	0.010UF	K		
C201			CD04AS0J470M	ELECTRO	47UF	6.3WV		
C202			CK73GB1H103K	CHIP C	0.010UF	K		
C203,204			CC73GCH1H220J	CHIP C	22PF	J		
C205			CK73GB1H104K	CHIP C	0.10UF	K		
C206,207			CK73GB1H103K	CHIP C	0.010UF	K		
C208			CK73GB1H102K	CHIP C	1000PF	K		
C209			CK73GB1H103K	CHIP C	0.010UF	K		
C301			CK73GB1H104K	CHIP C	0.10UF	K		
C302,303			CK73GB1H103K	CHIP C	0.010UF	K		
C305			CK73GB1H103K	CHIP C	0.010UF	K		
C306			CD04AS1V100M	ELECTRO	10UF	35WV		
C307			CK73GB1H103K	CHIP C	0.010UF	K		
C308			CD04AS1V100M	ELECTRO	10UF	35WV		
C309			CK73GB1H103K	CHIP C	0.010UF	K		
C310			CD04BF1V470M	ELECTRO	47UF	35WV		
C311			CK73GB1H103K	CHIP C	0.010UF	K		
C312			CD04BK1C101M	ELECTRO	100UF	16WV		
C313			CD04AS1V100M	ELECTRO	10UF	35WV		
C401			CD04AS1C470M	ELECTRO	47UF	16WV		
C402,403			CD04AS1H010M	ELECTRO	1UF	50WV		
C404			CK73GB1A105K	CHIP C	1.0UF	K		
C406,407			CK73FB1A335K	CHIP C	3.3UF	K		
C410			CK73GB1H103K	CHIP C	0.010UF	K		
C411			CD04AS1H010M	ELECTRO	1UF	50WV		
C413,414			CK73FB1E474K	CHIP C	0.47UF	K		
C415,416			CD04AS1H2R2M	ELECTRO	2.2UF	50WV		
C417-420			CD04AS1V100M	ELECTRO	10UF	35WV		
C423,424			CC73GCH1H101J	CHIP C	100PF	J		
C426,427			CK73FB1E474K	CHIP C	0.47UF	K		
C428			CD04AS0J470M	ELECTRO	47UF	6.3WV		
C429			CK73GB1H103K	CHIP C	0.010UF	K		
C431			CD04AS1V100M	ELECTRO	10UF	35WV		
C501			CK73FB1C105K	CHIP C	1.0UF	K		
C503-506			C90-5620-05	ELECTRO	0.47UF	50WV		
C507			CK73FB1C105K	CHIP C	1.0UF	K		
C510,511			CK73FB1E474K	CHIP C	0.47UF	K		
C512			CD04AS0J470M	ELECTRO	47UF	6.3WV		
C513			CK73GB1H103K	CHIP C	0.010UF	K		
C529,530			C90-6711-05	ELECTRO	1UF	50WV		
C802			CK73GB1H102K	CHIP C	1000PF	K		
C999			CD04AS1C330M	ELECTRO	33UF	16WV		
CN1			E41-2581-05	FLAT CABLE CONNECTOR				
CN4			E41-2446-05	PIN ASSY				
CN5			E41-0944-05	PIN ASSY				K1
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE				
J2			E56-0855-05	CYLINDRICAL RECEPTACLE				
J3			E63-0896-05	PIN JACK				
J4			E58-0993-05	RECTANGULAR RECEPTACLE				
W1	2D		E30-6218-15	CORD WITH PLUG				
L1			L33-2319-05	CHOKE COIL ASSY				

E : Europe **K** : North America **M** : Other Areas

K1 : DPX302
M2 : DPX-MP2100

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-414x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
L2			L33-1925-05	CHOKE COIL	
L3			L33-2262-05	CHOKE COIL	
L201			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
L202			L92-0075-05	CHIP FERRITE	
L301			L33-2260-05	CHOKE COIL	
L302-304			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
X1			L77-2880-05	CRYSTAL RESONATOR	
X2			L78-0872-05	RESONATOR (12MHZ)	
D	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
G	3D		N80-3010-48	PAN HEAD TAPTITE SCREW	
H	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
CP201,202			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP203			RK74GB1J471J	CHIP-COM 470 J 1/16W	
CP206			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP207			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP209			RK74GB1J101J	CHIP-COM 100 J 1/16W	K1
R1			RK73FB2B153J	CHIP R 15K J 1/8W	
R2			RK73GB2A101J	CHIP R 100 J 1/10W	
R3			RK73GB2A223J	CHIP R 22K J 1/10W	
R4			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R5			RK73FB2B221J	CHIP R 220 J 1/8W	
R7			RK73GH2A243D	CHIP R 24K D 1/10W	
R8			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R9			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R11			RK73GH2A273D	CHIP R 27K D 1/10W	
R12			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R13			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R15			RK73GB2A473J	CHIP R 47K J 1/10W	
R17 ,18			RK73GB2A223J	CHIP R 22K J 1/10W	
R20			RK73GB2A473J	CHIP R 47K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R31			RK73PB2H180J	CHIP R 18 J 1/2W	
R39			RK73PB2H180J	CHIP R 18 J 1/2W	
R45			RK73GB2A473J	CHIP R 47K J 1/10W	
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	M2
R102,103			RK73EB2E103J	CHIP R 10K J 1/4W	
R104			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R106			RK73GB2A223J	CHIP R 22K J 1/10W	
R107			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R108			R92-5024-05	CHIP R 1K J 3/4W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W	
R110			R92-5024-05	CHIP R 1K J 3/4W	
R111			RK73FB2B561J	CHIP R 560 J 1/8W	M2
R112			RK73GB2A223J	CHIP R 22K J 1/10W	
R113			RK73GB2A473J	CHIP R 47K J 1/10W	
R114			RK73GB2A104J	CHIP R 100K J 1/10W	
R115			RK73FB2B683J	CHIP R 68K J 1/8W	
R116			RK73GB2A393J	CHIP R 39K J 1/10W	
R117			RK73FB2B203J	CHIP R 20K J 1/8W	
R118			RK73GB2A104J	CHIP R 100K J 1/10W	
R122,123			RK73GB2A103J	CHIP R 10K J 1/10W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W	
R126			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W	

Ref. No.	Add	New	Parts No.	Description	Destination
R127			RK73EB2E333J	CHIP R 33K J 1/4W	
R128,129			RK73GB2A103J	CHIP R 10K J 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R132,133			RK73PB2H221J	CHIP R 220 J 1/2W	
R201			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R202			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W	
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R207,208			RK73GB2A103J	CHIP R 10K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W	
R213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R215			RK73GB2A104J	CHIP R 100K J 1/10W	
R224			RK73GB2A473J	CHIP R 47K J 1/10W	
R227,228			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R229,230			RK73GB2A473J	CHIP R 47K J 1/10W	
R233			RK73GB2A101J	CHIP R 100 J 1/10W	
R234,235			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R236,237			RK73GB2A473J	CHIP R 47K J 1/10W	
R239			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R240			RK73GB2A101J	CHIP R 100 J 1/10W	
R241			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1
R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2
R243			RK73GB2A473J	CHIP R 47K J 1/10W	M2
R244,245			RK73GB2A473J	CHIP R 47K J 1/10W	K1
R245			RK73GB2A473J	CHIP R 47K J 1/10W	M2
R247			RK73GB2A473J	CHIP R 47K J 1/10W	
R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R259,260			RK73GB2A104J	CHIP R 100K J 1/10W	
R261			RK73GB2A333J	CHIP R 33K J 1/10W	
R262,263			RK73GB2A473J	CHIP R 47K J 1/10W	
R302,303			RK73EB2E101J	CHIP R 100 J 1/4W	
R304			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R305-309			RK73EB2E101J	CHIP R 100 J 1/4W	
R310			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R311			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R312			RK73GB2A473J	CHIP R 47K J 1/10W	
R313			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R316			RK73GB2A104J	CHIP R 100K J 1/10W	
R317			RK73GB2A471J	CHIP R 470 J 1/10W	
R318			RK73GB2A104J	CHIP R 100K J 1/10W	
R319			RK73GB2A471J	CHIP R 470 J 1/10W	
R320			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R321			RK73GB2A223J	CHIP R 22K J 1/10W	
R322			RK73GB2A471J	CHIP R 470 J 1/10W	
R323			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R324			RK73GB2A471J	CHIP R 470 J 1/10W	
R325			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R326			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R327			RK73GB2A681J	CHIP R 680 J 1/10W	
R401			RK73GB2A103J	CHIP R 10K J 1/10W	
R402,403			RK73GB2A331J	CHIP R 330 J 1/10W	

E : Europe **K** : North America **M** : Other Areas

K1 : DPX302
M2 : DPX-MP2100

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-414x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R404,405			RK73GB2A223J	CHIP R 22K J 1/10W	
R406,407			RK73GB2A331J	CHIP R 330 J 1/10W	
R408,409			RK73GB2A223J	CHIP R 22K J 1/10W	
R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	
R420,421			RK73FB2B181J	CHIP R 180 J 1/8W	
R422			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R423,424			RK73EB2E100J	CHIP R 10 J 1/4W	
R425			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R431			RK73GB2A100J	CHIP R 10 J 1/10W	
R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R433,434			RK73GB2A101J	CHIP R 100 J 1/10W	
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R505			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R506			RK73GB2A223J	CHIP R 22K J 1/10W	
R507			RK73GB2A221J	CHIP R 220 J 1/10W	
R508			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R509			RK73EB2E101J	CHIP R 100 J 1/4W	
R510			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R511-515			RK73EB2E101J	CHIP R 100 J 1/4W	
R516,517			RK73EB2E100J	CHIP R 10 J 1/4W	
R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R519			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	K1
R521-523			RK73EB2E471J	CHIP R 470 J 1/4W	K1
R524			RK73GB2A100J	CHIP R 10 J 1/10W	
R801			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R802			RK73GB2A5R6J	CHIP R 5.6 J 1/10W	
W3			R92-1252-05	CHIP R 0 OHM J 1/16W	
W15			R92-2053-05	CHIP R 0 OHM J 1/8W	
W931,932			R92-1252-05	CHIP R 0 OHM J 1/16W	
W997,998			R92-1252-05	CHIP R 0 OHM J 1/16W	
D1			S2V60✻A	DIODE	
D2			RB160L-40	DIODE	
D3			02DZ5.6F-Y	ZENER DIODE	
D4			02DZ8.2F-Y	ZENER DIODE	
D10			SFPB-54VNF	DIODE	
D101			1SR139-400T64	DIODE	
D102-105			1SR154-400	DIODE	
D106			02DZ5.6F-Y	ZENER DIODE	M2
D107			02DZ4.7F-Y	ZENER DIODE	
D108,109			02DZ6.8F-Y	ZENER DIODE	
D111			02DZ6.2F-Y	ZENER DIODE	
D301			IMSA-6801-E	SURGE ABSORBER	
D303			02DZ9.1F-Z	ZENER DIODE	
D401-403			BAW56W	DIODE	
D404			STZ6.8N	ZENER DIODE	
D405			02DZ6.8F-Y	ZENER DIODE	
D406			STZ6.8N	ZENER DIODE	
D408,409			DA204K	DIODE	
D502			BAW56W	DIODE	
D511			STZ6.2N	ZENER DIODE	
D512-515			02DZ6.2F-Y	ZENER DIODE	
D518-520			02DZ6.2F-Y	ZENER DIODE	
IC1		✻	30624MWPB40GP	MICROCONTROLLER IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC2			E-TDA7415CB	ANALOGUE IC	
IC3			M5237ML-CF0J	ANALOGUE IC	
IC4			E-TDA7850A	ANALOGUE IC	
IC5			BA00CCWT-V5	ANALOGUE IC	
IC6			SN74HC02APWR	MOS-IC	
IC7			S-80836CNNB-J	MOS-IC	
IC12			SI-8050JF3NF	ANALOGUE IC	
Q1			2SB1565	TRANSISTOR	
Q2			KTC4075P(Y,GR)	TRANSISTOR	
Q3 ,4			KTA2014P(Y,GR)	TRANSISTOR	
Q5			2SB1565	TRANSISTOR	
Q6			DTA124EUA	DIGITAL TRANSISTOR	
Q7			2SB1565	TRANSISTOR	
Q8			KTC4075P(Y,GR)	TRANSISTOR	
Q9 -11			DTC124EUA	DIGITAL TRANSISTOR	
Q12			DTC144EUA	DIGITAL TRANSISTOR	
Q13			KTA2014P(Y,GR)	TRANSISTOR	
Q101			2SB1188(Q,R)	TRANSISTOR	
Q102			DTC114YUA	DIGITAL TRANSISTOR	
Q103			2SB1188(Q,R)	TRANSISTOR	
Q104			KTA2014P(Y,GR)	TRANSISTOR	
Q105			DTA114EUA	DIGITAL TRANSISTOR	
Q106			DTC114YUA	DIGITAL TRANSISTOR	
Q107			DTA123JK	DIGITAL TRANSISTOR	M2
Q108			DTC144EUA	DIGITAL TRANSISTOR	
Q109			2SC4081	TRANSISTOR	
Q111,112			2SC4081	TRANSISTOR	
Q113			KTA2014P(Y,GR)	TRANSISTOR	
Q114			DTA144EE	DIGITAL TRANSISTOR	
Q115,116			DTA124EUA	DIGITAL TRANSISTOR	
Q298			DTA124EUA	DIGITAL TRANSISTOR	
Q299			DTC124EUA	DIGITAL TRANSISTOR	
Q300			2SB1689	TRANSISTOR	
Q301			DTC124EUA	DIGITAL TRANSISTOR	
Q302			2SB1565	TRANSISTOR	
Q303			KTC4075P(Y,GR)	TRANSISTOR	
Q305			2SA1577	TRANSISTOR	
Q306			DTC144EUA	DIGITAL TRANSISTOR	
Q400-403			DTC143TUA	DIGITAL TRANSISTOR	
A1	2C		X86-3840-11	FRONT-END UNIT	

MECHANISM ASSY (X92-5690-00) DXM-6B00W

1	2B		A10-5328-11	CHASSIS	
2	1B	✻	A10-5329-11	CHASSIS	
5	2B		D10-4910-13	ARM ASSY	
8	2A	✻	D10-4911-13	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-12	SLIDER	
17	2B		D10-4588-13	SLIDER	

E : Europe **K** : North America **M** : Other Areas

K1 : DPX302
M2 : DPX-MP2100

⚠Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-5690-00) DXM-6B00W

Ref. No.	Add	New	Parts No.	Description	Destination
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1547-04	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B		J22-0519-03	MOUNTING HARDWARE	
55	1A		J90-1138-41	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (PT2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY (LF)	

Ref. No.	Add	New	Parts No.	Description	Destination

E : Europe **K** : North America **M** : Other Areas

K1 : DPX302
M2 : DPX-MP2100

⚠Indicates safety critical components.