KDC-MP832U

EXPLODED VIEW (CD MECHANISM)

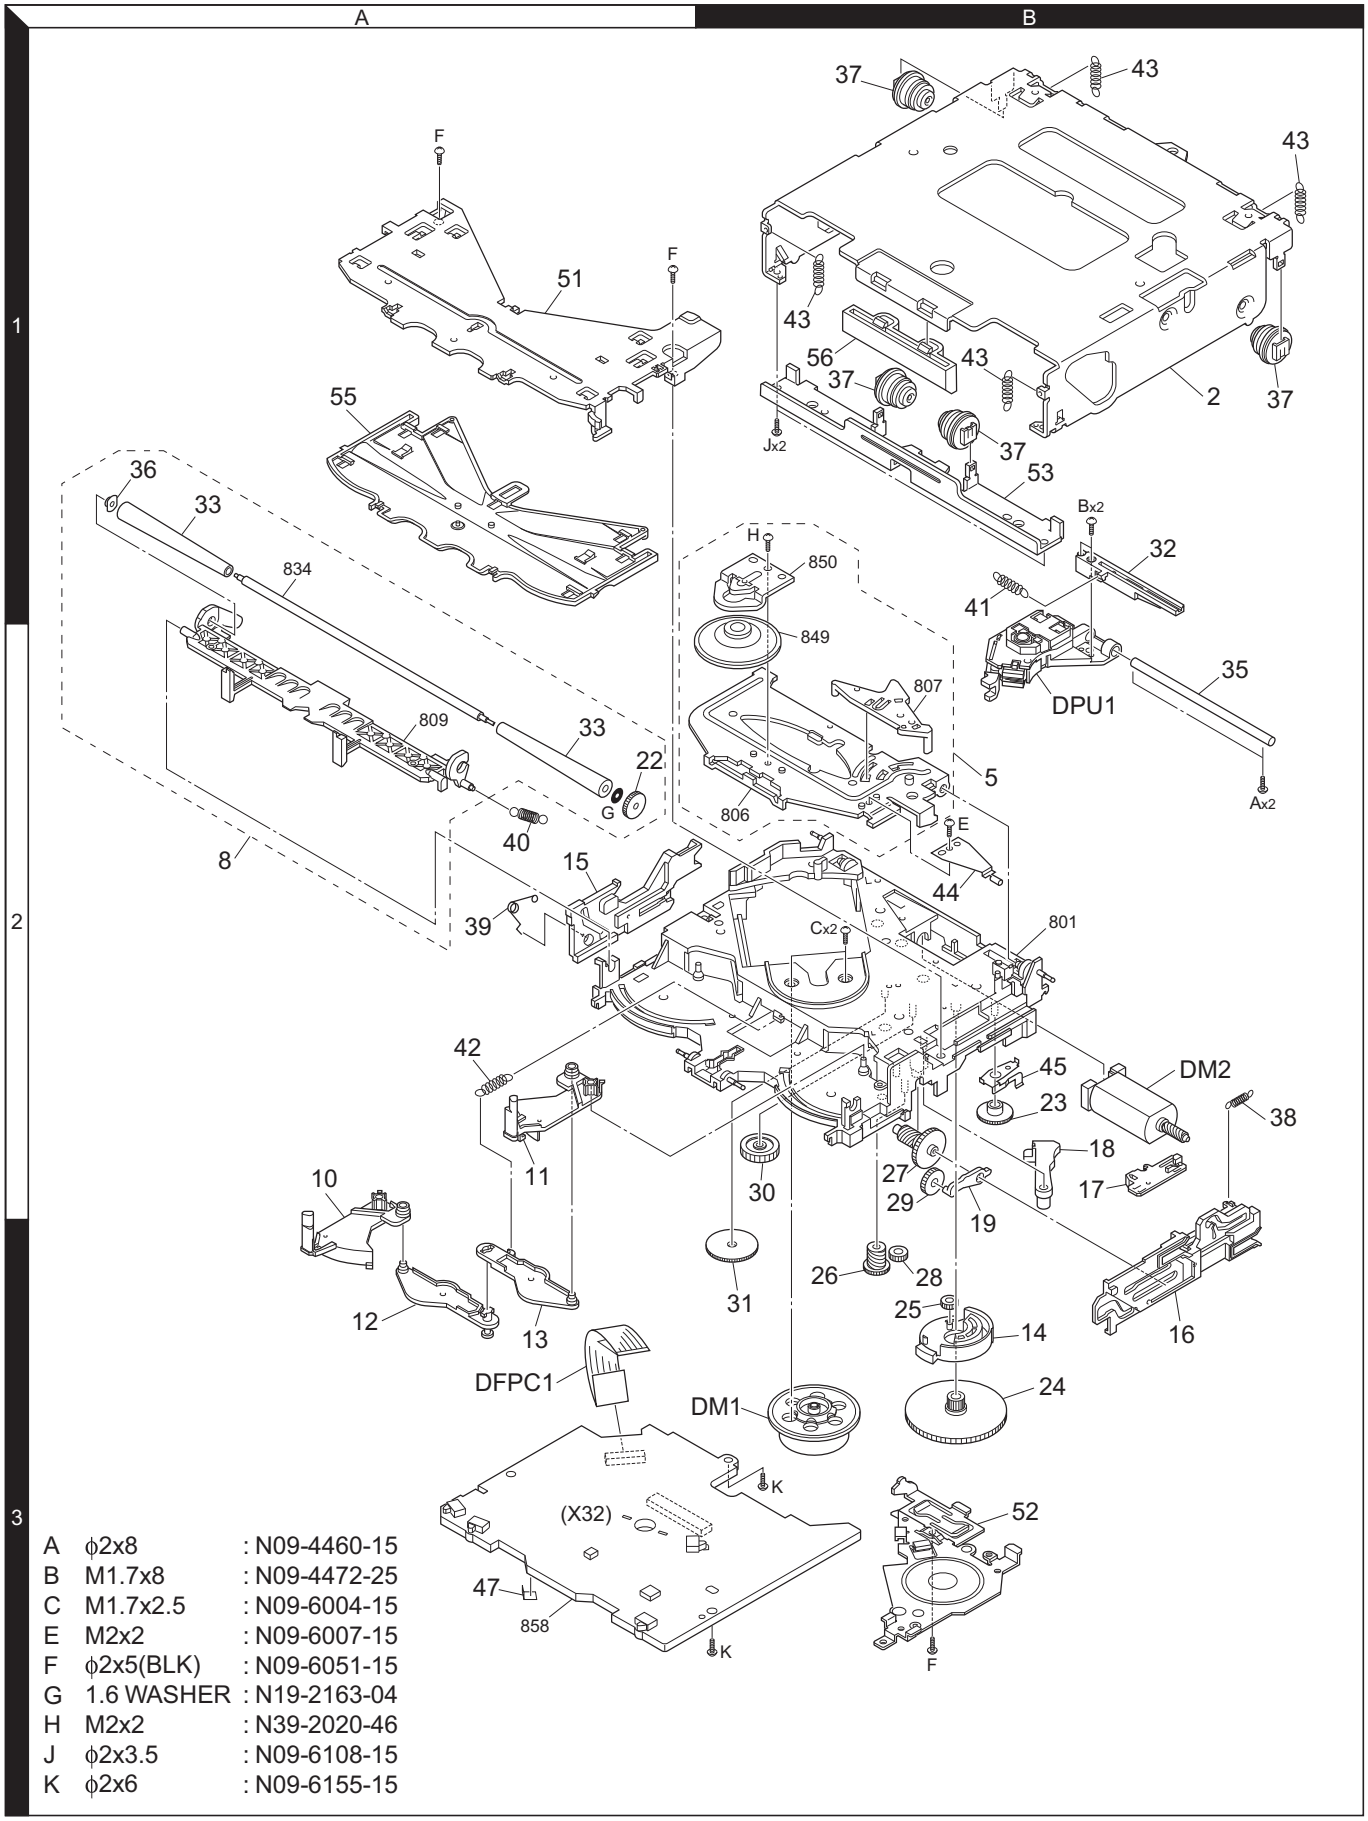

A	ϕ2x8	: N09-4460-15
B	M1.7x8	: N09-4472-25
C	M1.7x2.5	: N09-6004-15
E	M2x2	: N09-6007-15
F	ϕ2x5(BLK)	: N09-6051-15
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	ϕ2x3.5	: N09-6108-15
K	ϕ2x6	: N09-6155-15

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

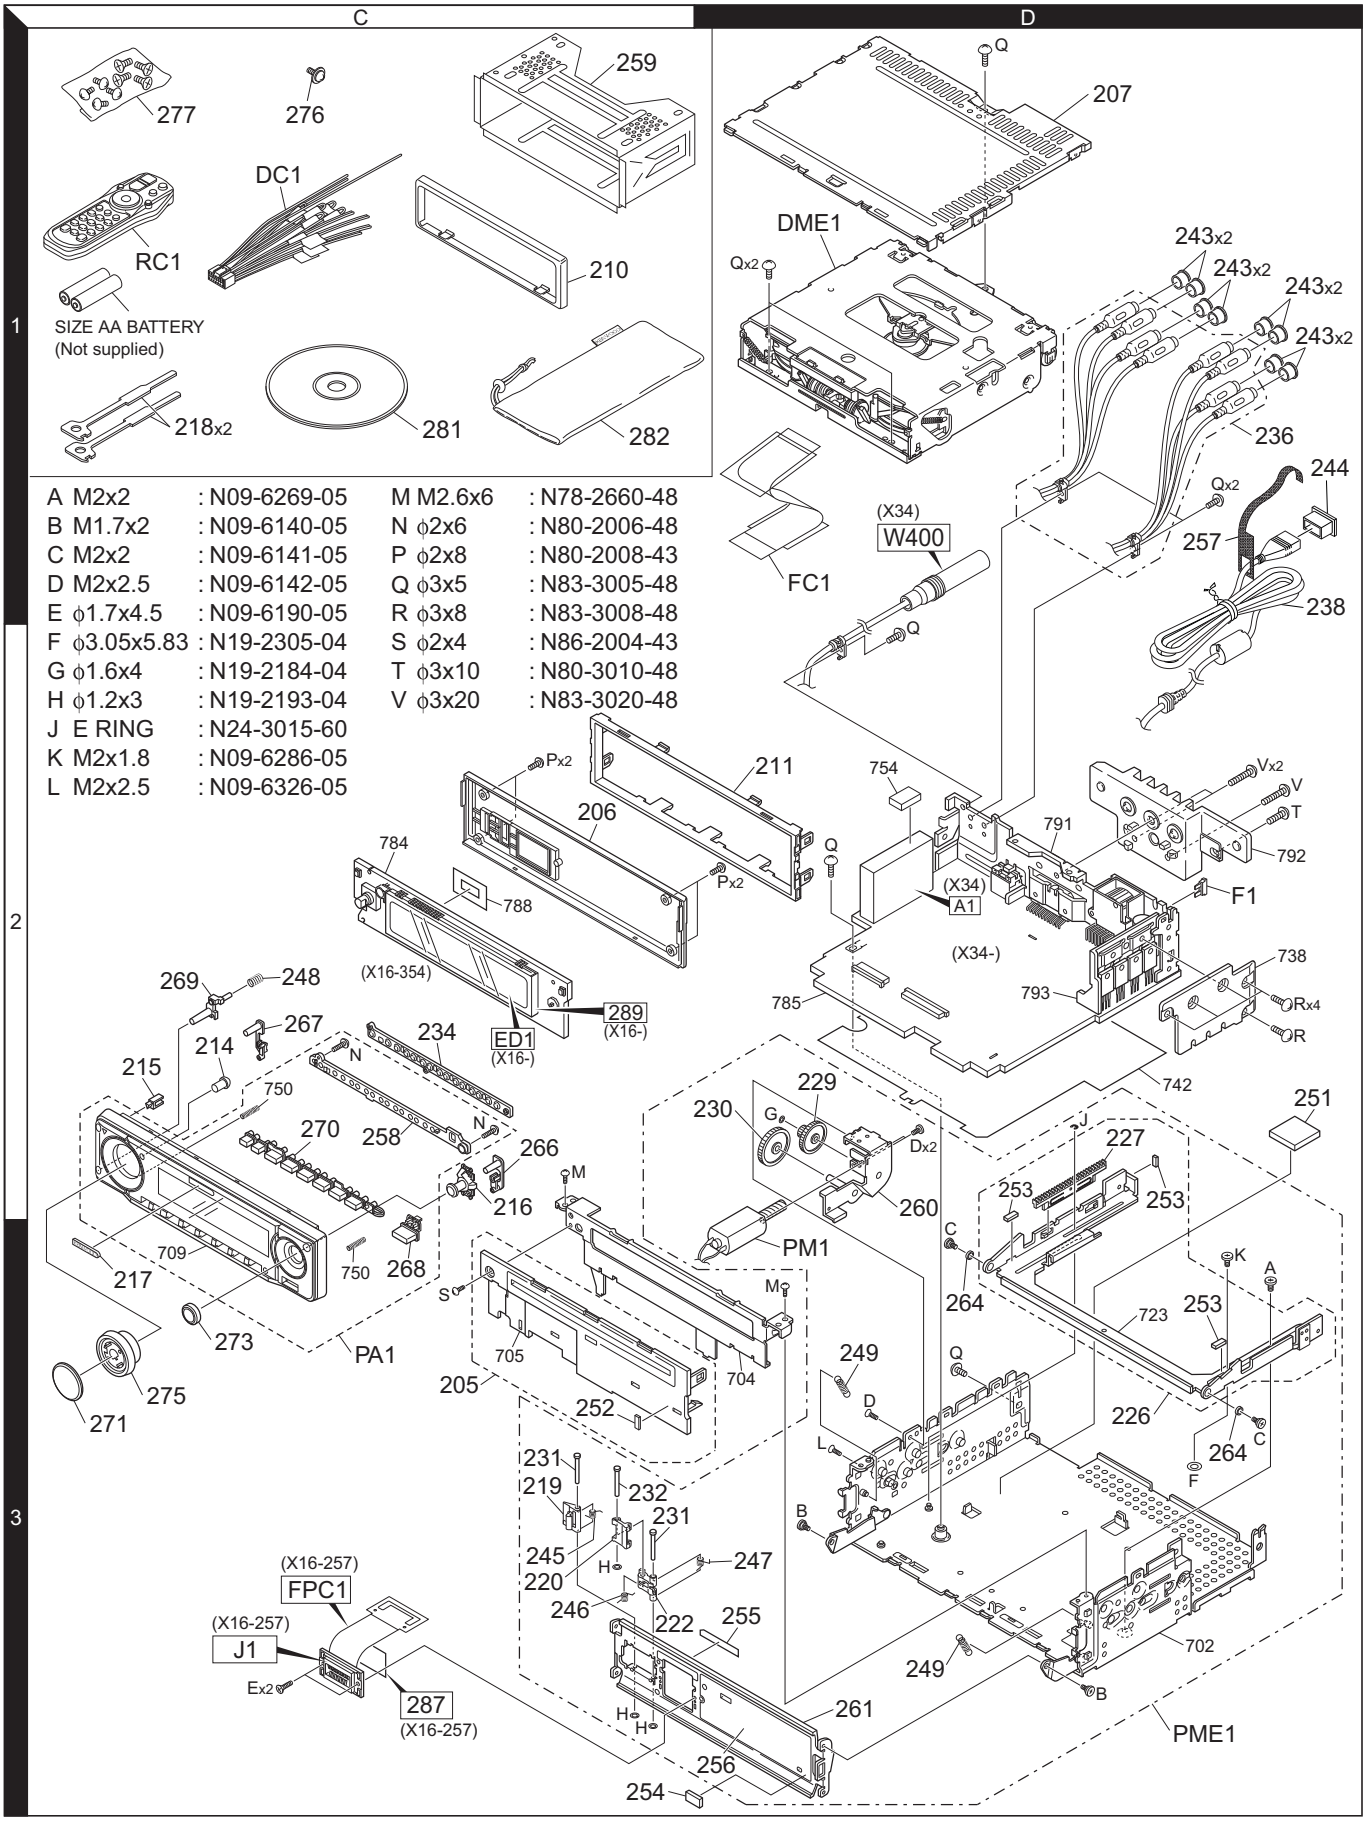

Parts with the exploded numbers larger than 700 are not supplied.

KDC-MP832U

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

	Ref. No.	Add	New	Parts No.	Description	Destination
	KDC-MP832U					
	205	3C		A22-3023-22	SUB PANEL ASSY	
	206	2C		A46-1817-01	REAR COVER	
	207	1D		A52-0845-12	TOP PLATE	
	PA1	3C	✻	A64-3737-02	PANEL ASSY	
	PME1	3D		A10-5205-22	CHASSIS ASSY	
	RC1	1C		A70-2067-15	REMOTE CONTROLLER ASSY	
	-			B46-0681-04	ID CARD	
	-			B46-0682-00	WARRANTY CARD	
	-			B58-1426-04	CAUTION CARD	
	-		✻	B59-1850-00	SUB-INSTRUCTION MANUAL	
	-		✻	B64-3382-00	INSTRUCTION MANUAL (ENGLISH)	
	-		✻	B64-3383-00	INSTRUCTION MANUAL (FRENCH)	
	-		✻	B64-3384-00	INSTRUCTION MANUAL (SPANISH)	
	210	1C		B07-3126-01	ESCUTCHEON	
	211	2C		B07-3095-02	ESCUTCHEON	
	214	2C		B10-4837-04	FRONT GLASS	
	215	2C		B19-2359-04	LIGHTING BOARD	
	216	2C		B19-2360-03	LIGHTING BOARD	
	217	3C		B43-1518-04	BADGE	
	218	1C		D10-4589-04	LEVER	
	219	3C		D10-4805-03	LEVER	
	220	3C		D10-4806-03	LEVER	
	222	3C		D10-4807-13	LEVER	
	226	3D		D10-4875-13	SLIDER ASSY	
	227	2D		D13-2318-13	RACK (GEAR)	
	229	2D		D13-2320-04	GEAR	
	230	2D		D13-2321-04	GEAR	
	231	3C		D21-2442-04	SHAFT	
	232	3C		D21-2443-04	SHAFT	
	234	2C		E29-2026-03	CONDUCTIVE RUBBER	
	236	1D		E30-6436-05	CORD WITH PINPLUG	
	238	2D	✻	E30-6588-05	CORD WITH CONNECTOR (USB 1m)	
⚠	DC1	1C		E30-6414-05	DC CORD	
	FC1	1D	✻	E39-0814-05	FLAT CABLE (30P)	
	243	1D		F29-0626-04	INSULATING COVER (RCA)	
	244	1D	✻	F29-0637-04	INSULATING COVER (USB)	
⚠	F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) 10A	
	245	3C		G01-3210-04	TORSION COIL SPRING	
	246	3C		G01-3211-04	TORSION COIL SPRING	
	247	3D		G01-3212-04	TORSION COIL SPRING	
	248	2C		G01-3213-04	COMPRESSION SPRING	
	249	3D		G01-3215-04	EXTENSION SPRING	
	251	2D	✻	G16-1642-04	SHEET	
	252	3C		G11-3594-04	CUSHION	
	253	2D		G11-3646-04	CUSHION	
	254	3D		G16-1606-04	SHEET	
	255	3D		G16-1482-14	SHEET	
	256	3D		G16-1483-04	SHEET	
	-		✻	H10-4925-12	POLYSTYRENE FOAMED FIXTURE	
	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
	-		✻	H54-3776-03	ITEM CARTON CASE	
	257	1D	✻	H30-0594-04	MAGIC TAPE	
	258	2C		J19-7053-02	HOLDER	
	259	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
	260	2D		J22-0114-03	MOUNTING HARDWARE ASSY	
	261	3D		J22-0263-02	MOUNTING HARDWARE	
	264	3D		J31-1062-04	COLLAR	
	266	2C		K24-4429-13	PUSH KNOB (EJECT)	
	267	2C		K24-4432-13	PUSH KNOB (ATT)	
	268	2C	✻	K24-4292-13	PUSH KNOB (SRC)	
	269	2C		K24-4435-03	PUSH KNOB (RELEASE)	
	270	2C		K25-1780-02	PUSH KNOB (PRESET)	
	271	3C		K28-0103-03	KEY TOP (VOL)	
	273	3C		K28-0106-03	KEY TOP (CONTROL)	
	275	3C		K29-7194-03	KNOB (VOL)	
	276	1C		N09-6280-05	TAPPING SCREW	
	277	1C		N99-1758-05	SCREW SET	
	A	3D		N09-6269-05	STEPPED SCREW	
	B	3D		N09-6140-05	STEPPED SCREW (P SCREW1)	
	C	3D		N09-6141-05	STEPPED SCREW (P SCREW2)	
	D	3D		N09-6142-05	MACHINE SCREW	
	E	3C		N09-6190-05	TAPPING SCREW	
	F	3D		N19-2305-04	FLAT WASHER	
	G	2D		N19-2184-04	FLAT WASHER	
	H	3C		N19-2193-04	FLAT WASHER	
	J	2D		N24-3015-60	E TYPE RETAINING RING	
	K	2D		N09-6286-05	STEPPED SCREW	
	L	3D		N09-6326-05	MACHINE SCREW	
	M	2C		N78-2660-48	PAN HEAD TAPTITE SCREW	
	N	2C		N80-2006-48	PAN HEAD TAPTITE SCREW	
	P	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
	Q	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
	R	2D		N83-3008-48	PAN HEAD TAPTITE SCREW	
	S	3C		N86-2004-43	BINDING HEAD TAPTITE SCREW	
	PM1	2D		T42-1086-14	MOTOR ASSY	
	281	1C	✻	W01-1673-05	COMPACT DISC	
	282	1C		W01-1661-05	CARRYING CASE	
	DME1	1D	✻	X92-5440-00	CD MECHANISM ASSY (DXM-6810W)	
	SUB-CIRCUIT UNIT (X16-2570-12)					
	J1			E58-1038-05	RECTANGULAR RECEPTACLE	
	287	3C		F20-2284-14	INSULATING SHEET	
	FPC1	3C	✻	J86-0025-05	FPC (LEAD FREE)	
	SWITCH UNIT (X16-3540-14)					
	D1-3			B30-1605-05	LED (2COLOR PG/RED)	
	D5-7			B30-1729-05	LED (1608,BLUE)	
	D8-12			B30-1605-05	LED (2COLOR PG/RED)	
	D13-15			B30-1729-05	LED (1608,BLUE)	
	D16-18			B30-1605-05	LED (2COLOR PG/RED)	
	C2-4			CK73GB1H103K	CHIP C 0.010UF K	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-3540-14)

Ref. No.	Add	New	Parts No.	Description	Destination
C6-8			CK73GB1H103K	CHIP C 0.010UF K	
C10			CK73GB1A105K	CHIP C 1.0UF K	
C16-18			CK73GB1H103K	CHIP C 0.010UF K	
C20-23			CK73GB1H103K	CHIP C 0.010UF K	
C24,25			CK73GB1H473K	CHIP C 0.047UF K	
C26,27			CK73GB1H103K	CHIP C 0.010UF K	
C28,29			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73GB1H103K	CHIP C 0.010UF K	
C31			CC73GCH1H221J	CHIP C 220PF J	
C32			CK73FB1A225K	CHIP C 2.2UF K	
C33			CK73GB1H103K	CHIP C 0.010UF K	
C34			CK73GB1C224K	CHIP C 0.22UF K	
C35,36			CK73GB1H103K	CHIP C 0.010UF K	
C37			C93-1217-05	CHIP C 0.047UF 100WV	
C38			CK73FB1A225K	CHIP C 2.2UF K	
C39			CK73FB0J106K	CHIP C 10UF K	
C40			CK73GB1H104K	CHIP C 0.10UF K	
C41,42			CK73FB0J106K	CHIP C 10UF K	
C43			CC73GCH1H101J	CHIP C 100PF J	
C44			CK73GB1H104K	CHIP C 0.10UF K	
J1			E59-0846-05	RECTANGULAR PLUG	
289	2C		J19-7054-03	HOLDER	
X1			L78-1208-05	RESONATOR (6.6M)	
CP2			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP3			RK74GA1J223J	CHIP-COM 22K J 1/16W	
CP4			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP5			RK74GA1J332J	CHIP-COM 3.3K J 1/16W	
CP6			RK74GA1J473J	CHIP-COM 47K J 1/16W	
CP7			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP8			RK74GA1J331J	CHIP-COM 330 J 1/16W	
CP9-14			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP15			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP16			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP17			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP18			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP19			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP20			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP21			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP22			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP23			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP24			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP25			RK74HB1J332J	CHIP-COM 3.3K J 1/16W	
CP26			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP27			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP28			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP29			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP30			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP31			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP34			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP35			RK74GA1J223J	CHIP-COM 22K J 1/16W	
R2			RK73FB2B681J	CHIP R 680 J 1/8W	
R3,4			RK73FB2B361J	CHIP R 360 J 1/8W	
R5-7			RK73EB2E471J	CHIP R 470 J 1/4W	

Ref. No.	Add	New	Parts No.	Description	Destination
R8			RK73FB2B271J	CHIP R 270 J 1/8W	
R9			RK73GB2A333J	CHIP R 33K J 1/10W	
R11			RK73GB2A223J	CHIP R 22K J 1/10W	
R13			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R17			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18			RK73GB2A473J	CHIP R 47K J 1/10W	
R20			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R23,24			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R26			RK73GB2A223J	CHIP R 22K J 1/10W	
R27,28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A101J	CHIP R 100 J 1/10W	
R36			RK73GB2A101J	CHIP R 100 J 1/10W	
R37			RK73GB2A473J	CHIP R 47K J 1/10W	
R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R39-41			RK73GB2A473J	CHIP R 47K J 1/10W	
R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R43,44			RK73PB2H120J	CHIP R 12 J 1/2W	
R45			RK73EB2E101J	CHIP R 100 J 1/4W	
R47-49			RK73EB2E101J	CHIP R 100 J 1/4W	
R50			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R52			RK73GB2A223J	CHIP R 22K J 1/10W	
R53			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R54			RK73EB2E333J	CHIP R 33K J 1/4W	
R55			RK73GB2A473J	CHIP R 47K J 1/10W	
R56			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R59			RK73GB2A473J	CHIP R 47K J 1/10W	
R60			RK73FB2B220J	CHIP R 22 J 1/8W	
R61			RK73GB2A104J	CHIP R 100K J 1/10W	
R62			RK73PB2H2R7J	CHIP R 2.7 J 1/2W	
R64			RK73GB2A223J	CHIP R 22K J 1/10W	
R66			RK73EB2E821J	CHIP R 820 J 1/4W	
W1,2			R92-2053-05	CHIP R 0 OHM J 1/8W	
S2			S70-0901-05	TACT SWITCH	
S17,18			S70-0901-05	TACT SWITCH	
S19			S70-0941-05	TACT SWITCH	
S1			T99-0456-15	ROTARY ENCODER	
D22,23			DA204U	DIODE	
ED1			JN12823AB	FLUORESCENT INDICATOR TUBE	
IC1		✻	MX231613TI7V2	ROM IC	
IC4		✻	703134AGJ011A	MICROCONTROLLER IC	
IC5			BD5237FVE	ANALOGUE IC	
IC6			PNA4S22M02KW	ANALOGUE IC	
IC7			TC74LVX08FT	MOS-IC	
IC8			TC7WT126FU-F	MOS-IC	
IC9			TC7SH32FU-F	MOS-IC	
IC10			SI-3025KMNF	ANALOGUE IC	
IC11			SI-3033LUSNF	ANALOGUE IC	
Q1,2			2SC4617	TRANSISTOR	
Q3-5			2SD2351 (W)	TRANSISTOR	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-3540-14)

Ref. No.	Add	New	Parts No.	Description			Destination
Q6			2SB1689	TRANSISTOR			
Q7			2SA1774	TRANSISTOR			
Q8			DTC143ZE	DIGITAL TRANSISTOR			
Q9			2SC4617	TRANSISTOR			
Q10			2SA1774	TRANSISTOR			
Q11			2SC2713-F	TRANSISTOR			
Q12			2SC4667-F	TRANSISTOR			
Q13			2SB1198K	TRANSISTOR			

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description			Destination
C3			CK73GB1A105K	CHIP C	1.0UF	K	
C5			CK73GB1A105K	CHIP C	1.0UF	K	
C7			CK73GB0J225K	CHIP C	2.2UF	K	
C8			CK73GB1A105K	CHIP C	1.0UF	K	
C12-14			CK73GB1H104K	CHIP C	0.10UF	K	
C17,18			CK73GB1H104K	CHIP C	0.10UF	K	
C21			CK73GB1H102K	CHIP C	1000PF	K	
C25,26			CK73GB1H104K	CHIP C	0.10UF	K	
C28			CK73FB0J106K	CHIP C	10UF	K	
C29			CK73GB1H104K	CHIP C	0.10UF	K	
C30			CK73GB1H152K	CHIP C	1500PF	K	
C31			CC73GCH1H470J	CHIP C	47PF	J	
C32			CK73GB1H104K	CHIP C	0.10UF	K	
C33			CK73GB0J225K	CHIP C	2.2UF	K	
C34			CC73GCH1H560J	CHIP C	56PF	J	
C35,36			CK73GB1H104K	CHIP C	0.10UF	K	
C37			CK73GB1H102K	CHIP C	1000PF	K	
C38			CK73GB1H682K	CHIP C	6800PF	K	
C39			CK73GB1H104K	CHIP C	0.10UF	K	
C40			CK73GB1A105K	CHIP C	1.0UF	K	
C41			CK73GB0J225K	CHIP C	2.2UF	K	
C44			CK73GB1A105K	CHIP C	1.0UF	K	
C46			CK73GB1H682K	CHIP C	6800PF	K	
C47			CK73GB1H104K	CHIP C	0.10UF	K	
C48			CC73GCH1H040C	CHIP C	4.0PF	C	
C49			CK73GB1H332K	CHIP C	3300PF	K	
C50			CK73GB1H104K	CHIP C	0.10UF	K	
C51			CC73GCH1H330J	CHIP C	33PF	J	
C52			CK73FB1A225K	CHIP C	2.2UF	K	
C53			CK73GB0J225K	CHIP C	2.2UF	K	
C54,55			CK73GB1H103K	CHIP C	0.010UF	K	
C56,57			CC73GCH1H391J	CHIP C	390PF	J	
C58			CK73GB1H472K	CHIP C	4700PF	K	
C59-62			CK73GB1H102K	CHIP C	1000PF	K	
C63			CK73GB1H152K	CHIP C	1500PF	K	
C64,65			CK73GB1H104K	CHIP C	0.10UF	K	
C66,67			CC73GCH1H100D	CHIP C	10PF	D	
C69			CK73FB0J106K	CHIP C	10UF	K	
C73			CK73GB1H104K	CHIP C	0.10UF	K	
C76,77			CK73GB1H104K	CHIP C	0.10UF	K	
C78			CC73GCH1H151J	CHIP C	150PF	J	
C80			CC73GCH1H151J	CHIP C	150PF	J	
C82			CC73GCH1H681J	CHIP C	680PF	J	
C84			CC73GCH1H681J	CHIP C	680PF	J	
C85			CK73GB1H104K	CHIP C	0.10UF	K	
C86			CK73GB1A105K	CHIP C	1.0UF	K	
C87			CK73GB0J475K	CHIP C	4.7UF	K	
C88			CK73GB1H473K	CHIP C	0.047UF	K	
C89			CK73GB1A105K	CHIP C	1.0UF	K	
C91			CK73GB1H104K	CHIP C	0.10UF	K	
C93-98			CK73GB1H104K	CHIP C	0.10UF	K	
C99			CC73GCH1H060D	CHIP C	6.0PF	D	
C100			CC73GCH1H020C	CHIP C	2.0PF	C	
C101			CK73GB1H104K	CHIP C	0.10UF	K	
C102			CK73GB1H102K	CHIP C	1000PF	K	
C103			CK73GB1H103K	CHIP C	0.010UF	K	
C305-308			CK73GB1H103K	CHIP C	0.010UF	K	
C309			CK73GB1H222K	CHIP C	2200PF	K	
C310			CK73GB1H103K	CHIP C	0.010UF	K	
C311,312			CC73GCH1H060D	CHIP C	6.0PF	D	
C313			CK73GB1H103K	CHIP C	0.010UF	K	
C315			CK73GB1H104K	CHIP C	0.10UF	K	
C316			CK73GB1H103K	CHIP C	0.010UF	K	
C317,318			CK73GB1H102K	CHIP C	1000PF	K	
C319			CK73GB1A105K	CHIP C	1.0UF	K	
C320			CC73GCH1H070D	CHIP C	7.0PF	D	
CN1		✻	E41-2630-05	FLAT CABLE CONNECTOR			
CN2			E41-2612-05	FLAT CABLE CONNECTOR			
L1		✻	L92-0615-05	CHIP FERRITE			
X1			L77-2863-05	CRYSTAL RESONATOR (16.899M)			
X2		✻	L78-1215-05	RESONATOR (11.500MHZ)			
X3		✻	L77-2923-05	CRYSTAL RESONATOR (6.000MHZ,LF)			
CP2			RK74GA1J101J	CHIP-COM	100	J 1/16W	
CP5			RK74GA1J102J	CHIP-COM	1.0K	J 1/16W	
CP7			RK74HB1J102J	CHIP-COM	1.0K	J 1/16W	
CP10			RK74HB1J103J	CHIP-COM	10K	J 1/16W	
CP11			RK74HB1J472J	CHIP-COM	4.7K	J 1/16W	
CP16			RK74HB1J104J	CHIP-COM	100K	J 1/16W	
CP19			RK74GA1J103J	CHIP-COM	10K	J 1/16W	
CP20-23		✻	RK74HB1J153J	CHIP-COM	15K	J 1/16W	
CP24,25			RK74HB1J100J	CHIP-COM	10	J 1/16W	
CP26		✻	RK74GA1J100J	CHIP-COM	10	J 1/16W	
CP27-30			RK74HB1J100J	CHIP-COM	10	J 1/16W	
CP31			RK74GA1J101J	CHIP-COM	100	J 1/16W	
CP50			RK74HB1J102J	CHIP-COM	1.0K	J 1/16W	
CP52			RK74GA1J472J	CHIP-COM	4.7K	J 1/16W	
CP53			RK74GA1J473J	CHIP-COM	47K	J 1/16W	
CP56,57			RK74GA1J103J	CHIP-COM	10K	J 1/16W	
CP300			RK74HB1J680J	CHIP-COM	68	J 1/16W	
CP301		✻	RK74GA1J680J	CHIP-COM	68	J 1/16W	
CP302,303			RK74HB1J101J	CHIP-COM	100	J 1/16W	
R1			RK73GB2A225J	CHIP R	2.2M	J 1/10W	
R2,3			RK73GB2A223J	CHIP R	22K	J 1/10W	
R5			RK73GB2A101J	CHIP R	100	J 1/10W	
R6			RK73GH2A223D	CHIP R	22K	D 1/10W	
R7			RK73GB2A223J	CHIP R	22K	J 1/10W	
R8			RK73GH2A393D	CHIP R	39K	D 1/10W	
R9			RK73GB2A223J	CHIP R	22K	J 1/10W	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description			Destination
R10			RK73GB2A101J	CHIP R	100	J 1/10W	
R11			RK73GB2A220J	CHIP R	22	J 1/10W	
R12			RK73GB2A223J	CHIP R	22K	J 1/10W	
R13			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R15			RK73GB2A223J	CHIP R	22K	J 1/10W	
R17			RK73GB2A221J	CHIP R	220	J 1/10W	
R18			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R19			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R20			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R21,22			RK73GB2A104J	CHIP R	100K	J 1/10W	
R23			RK73GB2A103J	CHIP R	10K	J 1/10W	
R24			RK73GB2A104J	CHIP R	100K	J 1/10W	
R25			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R29			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R34			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R35			RK73GB2A104J	CHIP R	100K	J 1/10W	
R36			RK73FB2B4R7J	CHIP R	4.7	J 1/8W	
R37			RK73GB2A103J	CHIP R	10K	J 1/10W	
R40			RK73GB2A274J	CHIP R	270K	J 1/10W	
R41			RK73GB2A103J	CHIP R	10K	J 1/10W	
R42			RK73GB2A101J	CHIP R	100	J 1/10W	
R43			RK73GB2A393J	CHIP R	39K	J 1/10W	
R44,45			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R48			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R50			RK73GB2A101J	CHIP R	100	J 1/10W	
R51			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R52			RK73GB2A163J	CHIP R	16K	J 1/10W	
R53			RK73GB2A123J	CHIP R	12K	J 1/10W	
R54			RK73GB2A333J	CHIP R	33K	J 1/10W	
R55			RK73GB2A103J	CHIP R	10K	J 1/10W	
R56			RK73GB2A123J	CHIP R	12K	J 1/10W	
R57,58			RK73GB2A133J	CHIP R	13K	J 1/10W	
R59			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R60			RK73GB2A123J	CHIP R	12K	J 1/10W	
R61			RK73GB2A183J	CHIP R	18K	J 1/10W	
R62			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R63			RK73GB2A133J	CHIP R	13K	J 1/10W	
R64			RK73GB2A151J	CHIP R	150	J 1/10W	
R67,68			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R69			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R70			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R71-73			RK73GB2A101J	CHIP R	100	J 1/10W	
R109			RK73GH2A822D	CHIP R	8.2K	D 1/10W	
R110			RK73GH2A392D	CHIP R	3.9K	D 1/10W	
R112			RK73GH2A682D	CHIP R	6.8K	D 1/10W	
R115			RK73GH2A822D	CHIP R	8.2K	D 1/10W	
R116			RK73GH2A682D	CHIP R	6.8K	D 1/10W	
R118,119			RK73GH2A100D	CHIP R	10	D 1/10W	
R121			RK73GH2A392D	CHIP R	3.9K	D 1/10W	
R130			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R132			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R133			RK73GB2A681J	CHIP R	680	J 1/10W	
R138			RK73GB2A101J	CHIP R	100	J 1/10W	
R142			RK73FB2B4R7J	CHIP R	4.7	J 1/8W	
R144			RK73GB2A223J	CHIP R	22K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R148			RK73GB2A103J	CHIP R	10K	J 1/10W	
R151			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R152			RK73GB2A221J	CHIP R	220	J 1/10W	
R153			RK73GB2A100J	CHIP R	10	J 1/10W	
R154,155			RK73GB2A330J	CHIP R	33	J 1/10W	
R300,301			RK73GB2A680J	CHIP R	68	J 1/10W	
R302			RK73GB2A101J	CHIP R	100	J 1/10W	
R304			RK73GB2A101J	CHIP R	100	J 1/10W	
R306,307			RK73GB2A270J	CHIP R	27	J 1/10W	
R308-310			RK73GB2A153J	CHIP R	15K	J 1/10W	
R311-316			RK73GB2A100J	CHIP R	10	J 1/10W	
R320-323			RK73GB2A101J	CHIP R	100	J 1/10W	
R336			RK73GB2A101J	CHIP R	100	J 1/10W	
R337			RK73GB2A153J	CHIP R	15K	J 1/10W	
R339			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R345			RK73GB2A103J	CHIP R	10K	J 1/10W	
R346			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R348			RK73GB2A223J	CHIP R	22K	J 1/10W	
R351			RK73GB2A103J	CHIP R	10K	J 1/10W	
R353			RK73GB2A473J	CHIP R	47K	J 1/10W	
R358,359			RK73GB2A473J	CHIP R	47K	J 1/10W	
R361			RK73GB2A223J	CHIP R	22K	J 1/10W	
R363			RK73GB2A223J	CHIP R	22K	J 1/10W	
R366			RK73GB2A101J	CHIP R	100	J 1/10W	
R368			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R369			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R370			RK73GB2A101J	CHIP R	100	J 1/10W	
R371			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R372,373			RK73FB2B2R2J	CHIP R	2.2	J 1/8W	
R374			RK73GB2A473J	CHIP R	47K	J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH			
S3			S68-0862-05	PUSH SWITCH			
D2			DA204U	DIODE			
D3			DAN202U	DIODE			
D9			DA204U	DIODE			
IC1		✻	M30620FCPGP	MICROCONTROLLER IC			
IC2			UPD63712GC	MOS-IC			
IC4			BA5824FP	ANALOGUE IC			
IC5		✻	BD33KA5WFP-E2	ANALOGUE IC			
IC13		✻	NJM2100V-ZB	ANALOGUE IC			
IC14			TAR5S50-F	ANALOGUE IC			
IC15			CS7410-IQZ	MOS-IC			
IC16		✻	IC42S164007TIG	DRAM IC			
IC17		✻	29LV800CBTI9V1	ROM IC			
IC18			PCM1754DB	MOS-IC			
IC19		✻	R1114N331B-TR	ANALOGUE IC (3.3V LF)			
IC20		✻	S-1132B18U5T1G	ANALOGUE IC			
IC21		✻	BD33KA5WFP-E2	ANALOGUE IC			
IC25		✻	TDUHC1240F0C00	MOS-IC			
IC26		✻	TC74LCX00FT-F	MOS-IC			
IC28		✻	TC7WH125FK-F	MOS-IC			
Q3			UMD9N	TRANSISTOR			
Q6			UMD12N	TRANSISTOR			
Q7			DTC124EE	DIGITAL TRANSISTOR			

(North America)

⚠ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description			Destination
Q8			2SB0970	TRANSISTOR			
Q9			DTC114YE	DIGITAL TRANSISTOR			
Q10			DTC114YUA	DIGITAL TRANSISTOR			
Q17			DTA143XUA	DIGITAL TRANSISTOR			
ELECTRIC UNIT (X34-4100-11)							
D451			B30-1567-05	LED (1608,RED)			
C1		*	C90-6783-05	ELECTRO	3900UF	16WV	
C2			CC73GCH1H070D	CHIP C	7.0PF	D	
C10			CK73FB1C105K	CHIP C	1.0UF	K	
C11			CD04AY1A221M	ELECTRO	220UF	10WV	
C12			CC73GCH1H070D	CHIP C	7.0PF	D	
C20			CD04BA0J101M	ELECTRO	100UF	6.3WV	
C21			C90-5692-05	ELECTRO	220UF	16WV	
C22			CK73GB1H103K	CHIP C	0.010UF	K	
C23			CE32CL1C100M	CHIP EL	10UF	16WV	
C30			CK73GB1A474K	CHIP C	0.47UF	K	
C31			CD04AY1A101M	ELECTRO	100UF	10WV	
C32			CK73GB1A474K	CHIP C	0.47UF	K	
C33			CE32BJ1C101M	CHIP EL	100UF	16WV	
C40			CK73GB1H103K	CHIP C	0.010UF	K	
C41			CD04BA0J470M	ELECTRO	47UF	6.3WV	
C42,43			CK73GB1H104K	CHIP C	0.10UF	K	
C50			CK73GB1H104K	CHIP C	0.10UF	K	
C51			CD04AT1E101M	ELECTRO	100UF	25WV	
C81			C93-1382-05	CHIP C	1UF	K	
C82			C93-1381-05	CHIP C	1UF	K	
C84			C93-1381-05	CHIP C	1UF	K	
C85			C93-1382-05	CHIP C	1UF	K	
C86			CK73EB1E105K	CHIP C	1.0UF	K	
C87			CK73GB1H103K	CHIP C	0.010UF	K	
C100			CK73GB1H104K	CHIP C	0.10UF	K	
C102,103			CC73GCH1H220J	CHIP C	22PF	J	
C104-106			CK73GB1H103K	CHIP C	0.010UF	K	
C107			CK73GB1H102K	CHIP C	1000PF	K	
C109-113			CK73GB1H103K	CHIP C	0.010UF	K	
C114			CD04AS0J470M	ELECTRO	47UF	6.3WV	
C201			CK73GB1H103K	CHIP C	0.010UF	K	
C203			CK73GB1H223K	CHIP C	0.022UF	K	
C204			CK73GB1H103K	CHIP C	0.010UF	K	
C205			CK73FB1C105K	CHIP C	1.0UF	K	
C300			CD04AS1C470M	ELECTRO	47UF	16WV	
C301			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	
C303,304			CD04AS1H3R3M	ELECTRO	3.3UF	50WV	
C305			CK73FB1C105K	CHIP C	1.0UF	K	
C306			CK73GB1H103K	CHIP C	0.010UF	K	
C307		*	CE32BE1V100M	CHIP EL	10UF	35WV	
C308,309			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	
C310,311			CK73FB1E474K	CHIP C	0.47UF	K	
C364,365			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	
C369			CK73FB1C105K	CHIP C	1.0UF	K	
C384			CK73FB1C105K	CHIP C	1.0UF	K	
C387,388			CC73GCH1H070D	CHIP C	7.0PF	D	
C402			CK73GB1H103K	CHIP C	0.010UF	K	
C403			CK73FB1A225K	CHIP C	2.2UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C404			CC73GCH1H331J	CHIP C	330PF	J	
C405			CD04AS1V100M	ELECTRO	10UF	35WV	
C407			CK73GB1H103K	CHIP C	0.010UF	K	
C409,410			CK73GB1H103K	CHIP C	0.010UF	K	
C412			CK73GB1H103K	CHIP C	0.010UF	K	
C414,415			CC73GCH1H150J	CHIP C	15PF	J	
C423			CC73GCH1H070D	CHIP C	7.0PF	D	
C450-455			CK73GB1H104K	CHIP C	0.10UF	K	
C458			CK73GB1A105K	CHIP C	1.0UF	K	
C550,551			CK73GB1H103K	CHIP C	0.010UF	K	
C554			CC73GCH1H070D	CHIP C	7.0PF	D	
C595			CK73GB1A105K	CHIP C	1.0UF	K	
C600,601			CK73EB1E225K	CHIP C	2.2UF	K	
C602			CK73GB1H103K	CHIP C	0.010UF	K	
C603			CK73GB1H223K	CHIP C	0.022UF	K	
C604			CD04AS1C220M	ELECTRO	22UF	16WV	
C605-608			CK73EB1E225K	CHIP C	2.2UF	K	
C609			CD04BF1E101M	ELECTRO	100UF	25WV	
C610			CD04AS1C220M	ELECTRO	22UF	16WV	
C611		*	CE32BE1V100M	CHIP EL	10UF	35WV	
C612,613			CD04AS1V100M	ELECTRO	10UF	35WV	
C614,615		*	CE32BE1V100M	CHIP EL	10UF	35WV	
C616,617			CD04AS1V100M	ELECTRO	10UF	35WV	
C618,619		*	CE32BE1V100M	CHIP EL	10UF	35WV	
C620,621			CD04AS1V100M	ELECTRO	10UF	35WV	
C622		*	CE32BE1V100M	CHIP EL	10UF	35WV	
C623-628			CK73GB1H102K	CHIP C	1000PF	K	
C629			CK73FB1E474K	CHIP C	0.47UF	K	
C630			CD04AT0J470M	ELECTRO	47UF	6.3WV	
C631			CK73FB1E474K	CHIP C	0.47UF	K	
C632			CK73GB1H103K	CHIP C	0.010UF	K	
C633,634		*	CE32BE1V100M	CHIP EL	10UF	35WV	
C635-638			CK73GB1A105K	CHIP C	1.0UF	K	
C701			CK73FB1E474K	CHIP C	0.47UF	K	
C702			CD04AS0J470M	ELECTRO	47UF	6.3WV	
C703			CK73FB1E474K	CHIP C	0.47UF	K	
C704			CK73GB1H103K	CHIP C	0.010UF	K	
C750			CK73FB1C105K	CHIP C	1.0UF	K	
C752-755			C90-6781-05	ELECTRO	4.7UF	16WV	
C756		*	CD04BM1A101M	ELECTRO	100UF	10WV	
C757			C90-6781-05	ELECTRO	4.7UF	16WV	
C758			CK73GB1H103K	CHIP C	0.010UF	K	
C759			CK73FB1C105K	CHIP C	1.0UF	K	
C760-768			CC73GCH1H150J	CHIP C	15PF	J	
C771-775			CC73GCH1H150J	CHIP C	15PF	J	
C780			CC73GCH1H150J	CHIP C	15PF	J	
C782			CC73GCH1H150J	CHIP C	15PF	J	
C800-802			CD04AS1V100M	ELECTRO	10UF	35WV	
C803			CK73GB1H104K	CHIP C	0.10UF	K	
C804			CK73GB1H103K	CHIP C	0.010UF	K	
C805			CD04AS1C470M	ELECTRO	47UF	16WV	
C806,807			CK73GB1H102K	CHIP C	1000PF	K	
C808			CD04BA1C101M	ELECTRO	100UF	16WV	
C811,812			CC73GCH1H070D	CHIP C	7.0PF	D	
C816			CK73GB1H104K	CHIP C	0.10UF	K	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4100-11)

Ref. No.	Add	New	Parts No.	Description	Destination
C901			CC73GCH1H680J	CHIP C 68PF J	
C902			CK73GB1H332K	CHIP C 3300PF K	
C903,904			CK73GB1H104K	CHIP C 0.10UF K	
C905			CK73GB1H682K	CHIP C 6800PF K	
C907,908			CK73GB1H104K	CHIP C 0.10UF K	
C910,911			CD04BK1A221M	ELECTRO 220UF 10WV	
C913			CD04BK1E101M	ELECTRO 100UF 25WV	
C914			CK73EB1E105K	CHIP C 1.0UF K	
C915			CD04BK1E101M	ELECTRO 100UF 25WV	
C917,918			CK73GB1H104K	CHIP C 0.10UF K	
C951			CK73GB1H104K	CHIP C 0.10UF K	
C952			CD04BK1A221M	ELECTRO 220UF 10WV	
C953			CK73GB1H104K	CHIP C 0.10UF K	
C955			CK73GB1H104K	CHIP C 0.10UF K	
C981			CK73FB1H224K	CHIP C 0.22UF K	
CN450			E41-2259-05	PIN ASSY	
CN500			E41-2344-05	FLAT CABLE CONNECTOR	
CN550		✻	E41-2358-05	FLAT CABLE CONNECTOR	
CN600			E41-2555-05	PIN ASSY	
CN900			E41-0944-05	PIN ASSY	
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J2			E56-0855-05	CYLINDRICAL RECEPTACLE	
W400			E30-6438-05	CORD WITH PLUG (ANT)	
L1		✻	L33-2319-05	CHOKE COIL ASSY	
L81			L33-2337-05	SMALL FIXED INDUCTOR	
L101			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L400			L33-2260-05	CHOKE COIL	
L405			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L550		✻	L92-0616-05	CHIP FERRITE	
L600			L41-2205-33	SMALL FIXED INDUCTOR(22U)	
L901		✻	L33-2296-05	SMALL FIXED INDUCTOR	
L902		✻	L33-2297-05	SMALL FIXED INDUCTOR	
X100			L78-0872-05	RESONATOR (12MHZ)	
X101			L77-2880-05	CRYSTAL RESONATOR	
X401			L77-2002-05	CRYSTAL RESONATOR	
Q	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
T	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
V	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
CP100			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP101-103			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP104			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP107			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP108			RK74GA1J222J	CHIP-COM 2.2K J 1/16W	
CP109			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP110,111			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R2,3			RK73EB2E103J	CHIP R 10K J 1/4W	
R10			RK73GH2A243D	CHIP R 24K D 1/10W	
R11			RK73FB2B221J	CHIP R 220 J 1/8W	
R13			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R14		✻	RK73GB2A160J	CHIP R 16 J 1/10W	
R20			RK73FB2B203J	CHIP R 20K J 1/8W	
R21			RK73GB2A223J	CHIP R 22K J 1/10W	
R23			RK73FB2B272J	CHIP R 2.7K J 1/8W	

Ref. No.	Add	New	Parts No.	Description	Destination
R30			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R31			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R40			RK73FB2B223J	CHIP R 22K J 1/8W	
R41			RK73FB2B182J	CHIP R 1.8K J 1/8W	
R42			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R45,46			RK73PB2H1R0J	CHIP R 1.0 J 1/2W	
R50			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R52			RK73FB2B104J	CHIP R 100K J 1/8W	
R80			RK73GH2A434D	CHIP R 430K D 1/10W	
R81			RK73GB2A473J	CHIP R 47K J 1/10W	
R82			RK73GH2A103D	CHIP R 10K D 1/10W	
R84			RK73GH2A153D	CHIP R 15K D 1/10W	
R91,92			RK73GB2A104J	CHIP R 100K J 1/10W	
R93			RK73FB2B431J	CHIP R 430 J 1/8W	
R100-104			RK73GB2A104J	CHIP R 100K J 1/10W	
R105			RK73GB2A101J	CHIP R 100 J 1/10W	
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R107			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73GB2A104J	CHIP R 100K J 1/10W	
R112			RK73GB2A473J	CHIP R 47K J 1/10W	
R113			RK73GB2A103J	CHIP R 10K J 1/10W	
R114			RK73GB2A473J	CHIP R 47K J 1/10W	
R115			RK73GB2A101J	CHIP R 100 J 1/10W	
R117			RK73GB2A101J	CHIP R 100 J 1/10W	
R119			RK73GB2A223J	CHIP R 22K J 1/10W	
R122,123			RK73GB2A101J	CHIP R 100 J 1/10W	
R125			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R126			RK73GB2A101J	CHIP R 100 J 1/10W	
R127			RK73GB2A103J	CHIP R 10K J 1/10W	
R128			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R132,133			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R134			RK73GB2A101J	CHIP R 100 J 1/10W	
R139			RK73GB2A473J	CHIP R 47K J 1/10W	
R141,142			RK73GB2A473J	CHIP R 47K J 1/10W	
R144,145			RK73GB2A101J	CHIP R 100 J 1/10W	
R146			RK73GB2A333J	CHIP R 33K J 1/10W	
R148			RK73GB2A473J	CHIP R 47K J 1/10W	
R149,150			RK73GB2A223J	CHIP R 22K J 1/10W	
R153			RK73GB2A223J	CHIP R 22K J 1/10W	
R155,156			RK73GB2A223J	CHIP R 22K J 1/10W	
R158			RK73GB2A223J	CHIP R 22K J 1/10W	
R161			RK73GB2A104J	CHIP R 100K J 1/10W	
R163			RK73GB2A104J	CHIP R 100K J 1/10W	
R164			RK73GB2A223J	CHIP R 22K J 1/10W	
R165,166			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R168			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R176			RK73GB2A104J	CHIP R 100K J 1/10W	
R177			RK73GB2A223J	CHIP R 22K J 1/10W	
R178			RK73GB2A473J	CHIP R 47K J 1/10W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W	
R187			RK73GB2A473J	CHIP R 47K J 1/10W	
R188			RK73GB2A102J	CHIP R 1.0K J 1/10W	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4100-11)

Ref. No.	Add	New	Parts No.	Description			Destination
R200			RK73EB2E473J	CHIP R	47K	J 1/4W	
R201			RD14DB2H332J-T	SMALL-RD	3.3K	J 1/2W	
R202			RK73GB2A183J	CHIP R	18K	J 1/10W	
R203			RK73GB2A104J	CHIP R	100K	J 1/10W	
R204			RK73GB2A393J	CHIP R	39K	J 1/10W	
R205			RK73GB2A103J	CHIP R	10K	J 1/10W	
R209			RK73FB2B683J	CHIP R	68K	J 1/8W	
R210			RK73FB2B203J	CHIP R	20K	J 1/8W	
R211			RK73GB2A103J	CHIP R	10K	J 1/10W	
R212			RK73GB2A473J	CHIP R	47K	J 1/10W	
R213,214			RK73GB2A104J	CHIP R	100K	J 1/10W	
R216			RK73GB2A223J	CHIP R	22K	J 1/10W	
R217			RK73PB2H221J	CHIP R	220	J 1/2W	
R218,219			RK73FB2B472J	CHIP R	4.7K	J 1/8W	
R220			RK73PB2H221J	CHIP R	220	J 1/2W	
R300			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	
R301			RK73GB2A103J	CHIP R	10K	J 1/10W	
R335,336			RK73GB2A101J	CHIP R	100	J 1/10W	
R402			RK73FB2B1R0J	CHIP R	1.0	J 1/8W	
R404			RK73GB2A223J	CHIP R	22K	J 1/10W	
R405,406			RK73GB2A471J	CHIP R	470	J 1/10W	
R407,408			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R409			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R410-412			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R425-428			RK73GB2A910J	CHIP R	91	J 1/10W	
R429			RK73GB2A270J	CHIP R	27	J 1/10W	
R450,451			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R452			RK73GB2A241J	CHIP R	240	J 1/10W	
R453,454			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R457			RK73GH2A241D	CHIP R	240	D 1/10W	
R458			RK73GH2A111D	CHIP R	110	D 1/10W	
R501			RK73EB2E101J	CHIP R	100	J 1/4W	
R510,511			RK73EB2E101J	CHIP R	100	J 1/4W	
R514			RK73EB2E101J	CHIP R	100	J 1/4W	
R515			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R516			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R517			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R550			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R551			RK73GB2A471J	CHIP R	470	J 1/10W	
R552,553			RK73GB2A104J	CHIP R	100K	J 1/10W	
R554			RK73GB2A471J	CHIP R	470	J 1/10W	
R557			RK73GB2A161J	CHIP R	160	J 1/10W	
R600,601			RK73GB2A913J	CHIP R	91K	J 1/10W	
R602			RK73GB2A103J	CHIP R	10K	J 1/10W	
R603			RK73GB2A470J	CHIP R	47	J 1/10W	
R604			RK73GB2A274J	CHIP R	270K	J 1/10W	
R605			RK73GB2A563J	CHIP R	56K	J 1/10W	
R606			RK73GB2A752J	CHIP R	7.5K	J 1/10W	
R607			RK73GB2A470J	CHIP R	47	J 1/10W	
R608			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R609			RK73GB2A750J	CHIP R	75	J 1/10W	
R610			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R611			RK73GB2A361J	CHIP R	360	J 1/10W	
R612			RK73GB2A820J	CHIP R	82	J 1/10W	
R613			RK73GB2A123J	CHIP R	12K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R614			RK73GB2A103J	CHIP R	10K	J 1/10W	
R615			RK73GB2A223J	CHIP R	22K	J 1/10W	
R616			RK73GB2A103J	CHIP R	10K	J 1/10W	
R617			RK73GB2A223J	CHIP R	22K	J 1/10W	
R618			RK73GB2A820J	CHIP R	82	J 1/10W	
R619			RK73GB2A123J	CHIP R	12K	J 1/10W	
R620,621			RK73GB2A361J	CHIP R	360	J 1/10W	
R622			RK73GB2A820J	CHIP R	82	J 1/10W	
R623			RK73GB2A123J	CHIP R	12K	J 1/10W	
R624			RK73GB2A103J	CHIP R	10K	J 1/10W	
R625			RK73GB2A223J	CHIP R	22K	J 1/10W	
R626			RK73GB2A103J	CHIP R	10K	J 1/10W	
R627			RK73GB2A223J	CHIP R	22K	J 1/10W	
R628			RK73GB2A820J	CHIP R	82	J 1/10W	
R629			RK73GB2A123J	CHIP R	12K	J 1/10W	
R630,631			RK73GB2A361J	CHIP R	360	J 1/10W	
R632			RK73GB2A820J	CHIP R	82	J 1/10W	
R633			RK73GB2A123J	CHIP R	12K	J 1/10W	
R634			RK73GB2A103J	CHIP R	10K	J 1/10W	
R635			RK73GB2A223J	CHIP R	22K	J 1/10W	
R636			RK73GB2A103J	CHIP R	10K	J 1/10W	
R637			RK73GB2A223J	CHIP R	22K	J 1/10W	
R638			RK73GB2A820J	CHIP R	82	J 1/10W	
R639			RK73GB2A123J	CHIP R	12K	J 1/10W	
R640			RK73GB2A361J	CHIP R	360	J 1/10W	
R641			RK73EB2E100J	CHIP R	10	J 1/4W	
R642			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R643			RK73EB2E100J	CHIP R	10	J 1/4W	
R644			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R655-660			RK73GB2A104J	CHIP R	100K	J 1/10W	
R700			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R701			RK73EB2E101J	CHIP R	100	J 1/4W	
R702			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R703-707			RK73EB2E101J	CHIP R	100	J 1/4W	
R708			RK73EB2E100J	CHIP R	10	J 1/4W	
R709			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R710			RK73EB2E100J	CHIP R	10	J 1/4W	
R711			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R712			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R750			RK73GB2A683J	CHIP R	68K	J 1/10W	
R752			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R755-758			RK73GB2A910J	CHIP R	91	J 1/10W	
R759-762			RK73GB2A103J	CHIP R	10K	J 1/10W	
R763			RK73GB2A100J	CHIP R	10	J 1/10W	
R764			RK73GB2A103J	CHIP R	10K	J 1/10W	
R765			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R766			RK73GB2A680J	CHIP R	68	J 1/10W	
R767			RK73GB2A220J	CHIP R	22	J 1/10W	
R768			RK73GB2A123J	CHIP R	12K	J 1/10W	
R770			RK73GB2A243J	CHIP R	24K	J 1/10W	
R771			RK73GB2A223J	CHIP R	22K	J 1/10W	
R772			RK73GB2A221J	CHIP R	220	J 1/10W	
R800			RK73GB2A391J	CHIP R	390	J 1/10W	
R801			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R803			RK73GH2A512D	CHIP R	5.1K	D 1/10W	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4100-11)

Ref. No.	Add	New	Parts No.	Description	Destination
R804			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R805,806			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R807			RK73GB2A103J	CHIP R 10K J 1/10W	
R808			RK73GB2A113J	CHIP R 11K J 1/10W	
R809			RK73GB2A101J	CHIP R 100 J 1/10W	
R810			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R811			RK73GB2A104J	CHIP R 100K J 1/10W	
R812			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R813			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R815			RK73GB2A101J	CHIP R 100 J 1/10W	
R817			RK73GB2A100J	CHIP R 10 J 1/10W	
R822		✻	RK73GB2A160J	CHIP R 16 J 1/10W	
R823			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R824			RK73GB2A3R9J	CHIP R 3.9 J 1/10W	
R825			RK73GB2A120J	CHIP R 12 J 1/10W	
R826			RK73GB2A1R5J	CHIP R 1.5 J 1/10W	
R827			RK73GB2A270J	CHIP R 27 J 1/10W	
R839,840			RK73GB2A103J	CHIP R 10K J 1/10W	
R841			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R901,902			RK73GB2A104J	CHIP R 100K J 1/10W	
R907		✻	RK73GH2A823D	CHIP R 82K D 1/10W	
R908		✻	RK73GH2A114D	CHIP R 110K D 1/10W	
R909			RK73GH2A683D	CHIP R 68K D 1/10W	
R910			RK73GH2A103D	CHIP R 10K D 1/10W	
R911			RK73GH2A753D	CHIP R 75K D 1/10W	
R913			RK73GH2A103D	CHIP R 10K D 1/10W	
R914			RK73GH2A753D	CHIP R 75K D 1/10W	
R915,916			RK73GB2A154J	CHIP R 150K J 1/10W	
R951			RK73GB2A153J	CHIP R 15K J 1/10W	
R954			RK73GB2A153J	CHIP R 15K J 1/10W	
R959			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R960			RK73GB2A101J	CHIP R 100 J 1/10W	
R981,982			RK73PB2H1R0J	CHIP R 1.0 J 1/2W	
R983			RK73GB2A104J	CHIP R 100K J 1/10W	
R984			RK73FB2B221J	CHIP R 220 J 1/8W	
R985			RK73GB2A473J	CHIP R 47K J 1/10W	
R987			RK73GB2A102J	CHIP R 1.0K J 1/10W	
W200			R92-1252-05	CHIP R 0 OHM J 1/16W	
W401			R92-2053-05	CHIP R 0 OHM J 1/8W	
W500			R92-1252-05	CHIP R 0 OHM J 1/16W	
W596,597			R92-1252-05	CHIP R 0 OHM J 1/16W	
W751			R92-1252-05	CHIP R 0 OHM J 1/16W	
W754			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1,2			S68-0886-05	PUSH SWITCH	
D1			S2V60✻A	DIODE	
D20			RB160L-40	DIODE	
D21			UDZS5.6B	ZENER DIODE	
D30			HZU9.1 (B1)-E	ZENER DIODE	
D31			UDZS8.2B	ZENER DIODE	
D40			UDZS5.6B	ZENER DIODE	
D41			02DZ11F-Y	ZENER DIODE	
D50		✻	UDZS20B	ZENER DIODE	
D80-82			RB060L-40	DIODE	
D102-104			DAP202U	DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D200			DAP202U	DIODE	
D202			UDZS6.2B	ZENER DIODE	
D203			UDZS6.8B	ZENER DIODE	
D204			DAP202U	DIODE	
D205			UDZS6.8B	ZENER DIODE	
D206			UDZS4.7B	ZENER DIODE	
D208,209			1SR154-400	DIODE	
D212,213			1SR154-400	DIODE	
D220			DAP202U	DIODE	
D302,303			UDZS5.6B	ZENER DIODE	
D500			DA204K	DIODE	
D501			STZ6.2N	ZENER DIODE	
D502			DA204K	DIODE	
D503			STZ6.2N	ZENER DIODE	
D505			DAP202U	DIODE	
D506			STZ6.2N	ZENER DIODE	
D550,551			IMSA-6802-E	SURGE ABSORBER	
D600			UDZS5.6B	ZENER DIODE	
D601			UDZS11B	ZENER DIODE	
D608,609			STZ6.8N	ZENER DIODE	
D700-704			STZ6.2N	ZENER DIODE	
D707			STZ6.2N	ZENER DIODE	
D750-753			1SR154-400	DIODE	
D754,755			DAP222	DIODE	
D756-759			1SR154-400	DIODE	
D800			UDZS6.8B	ZENER DIODE	
D802			UDZS16B	ZENER DIODE	
D803,804			DAP222	DIODE	
D901		✻	NSQ03A04G	DIODE	
D902			SFPB-54VNF	DIODE	
D952			STZ6.8N	ZENER DIODE	
D981			UDZS15B	ZENER DIODE	
IC10			M5237ML-CF0J	ANALOGUE IC	
IC80			LT3467A	ANALOGUE IC	
IC100			S-80836CNNB-J	MOS-IC	
IC102		✻	30625MGPA87GP	MICROCONTROLLER IC	
IC103			TC7W02FU-F	MOS-IC	
IC104			BR24L04FV-W	ROM IC	
IC200			TPD1018F-F	ANALOGUE IC	
IC300			E-TDA7415C	ANALOGUE IC	
IC400			E-TDA7479AD	ANALOGUE IC	
IC450			LB1930M-E	ANALOGUE IC	
IC451			MMA6261QR2	ANALOGUE IC	
IC600			ICL7660SIBAZ	ANALOGUE IC	
IC601-603			NJM4565V-ZB	ANALOGUE IC	
IC750			E-TDA7560A	ANALOGUE IC	
IC800			RC4580IDR	ANALOGUE IC	
IC901		✻	BD9302FP	ANALOGUE IC	
IC951		✻	MIC2026-1YM	MOS-IC	
Q10			2SB1565	TRANSISTOR	
Q11,12			UMC2N	TRANSISTOR	
Q20			2SB1565	TRANSISTOR	
Q21			2SD2351 (W)	TRANSISTOR	
Q22			2SA1577	TRANSISTOR	
Q23			DTC124EUA	DIGITAL TRANSISTOR	

(North America)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4100-11)

Ref. No.	Add	New	Parts No.	Description	Destination
Q30			2SB1565	TRANSISTOR	
Q31			2SB1184	TRANSISTOR	
Q32,33			2SC4081	TRANSISTOR	
Q34			UMC2N	TRANSISTOR	
Q40			2SB1565	TRANSISTOR	
Q41			2SB1443	TRANSISTOR	
Q42			UMD12N	TRANSISTOR	
Q43			UMC2N	TRANSISTOR	
Q44			2SC4081	TRANSISTOR	
Q45			2SD2351 (W)	TRANSISTOR	
Q50			2SB1449(R)-E	TRANSISTOR	
Q51			UMC2N	TRANSISTOR	
Q52			2SC2873-F	TRANSISTOR	
Q91			2SD2351 (W)	TRANSISTOR	
Q100			2SA1576A	TRANSISTOR	
Q101			DTC144EUA	DIGITAL TRANSISTOR	
Q201			DTA124EUA	DIGITAL TRANSISTOR	
Q202			2SC4081	TRANSISTOR	
Q204,205			2SC4081	TRANSISTOR	
Q207			DTC144EUA	DIGITAL TRANSISTOR	
Q208			2SB1184	TRANSISTOR	
Q209			DTC114YUA	DIGITAL TRANSISTOR	
Q210			DTA124EUA	DIGITAL TRANSISTOR	
Q402			2SB1689	TRANSISTOR	
Q403			DTC124EUA	DIGITAL TRANSISTOR	
Q450			DTC114YUA	DIGITAL TRANSISTOR	
Q600			2SC4081	TRANSISTOR	
Q601			2SA1576A	TRANSISTOR	
Q602			2SC4081	TRANSISTOR	
Q603			2SA1576A	TRANSISTOR	
Q604			2SC4081	TRANSISTOR	
Q605			2SA1576A	TRANSISTOR	
Q606			2SC4081	TRANSISTOR	
Q607			2SB1443	TRANSISTOR	
Q608-615			DTC143TUA	DIGITAL TRANSISTOR	
Q800			DTA124EUA	DIGITAL TRANSISTOR	
Q801			2SA1774	TRANSISTOR	
Q802			2SC2873-F	TRANSISTOR	
Q901,902			DTC143TUA	DIGITAL TRANSISTOR	
Q903			UMG2N	TRANSISTOR	
Q981			2SB1188 (R)	TRANSISTOR	
Q982			2SD2351 (W)	TRANSISTOR	
Q983			UMD12N	TRANSISTOR	
TH750			PRF18BE471QS2	POSITIVE RESISTOR	
A1	2D	✻	X86-4000-11	FRONT-END UNIT	
CD MECHANISM ASSY (X92-5440-00) (DXM-6810W)					
2	1B		A10-4827-32	CHASSIS	
5	2B		D10-4576-93	ARM ASSY	
8	2A		D10-4901-13	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2172-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
47	3A	✻	F09-2824-14	SHEET	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-4472-25	MACHINE SCREW (M1.7X8.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING)	
DPU1	2B		X93-2010-01	OPTICAL PICKUP ASSY	

(North America)

⚠ Indicates safety critical components.