EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

PACKING

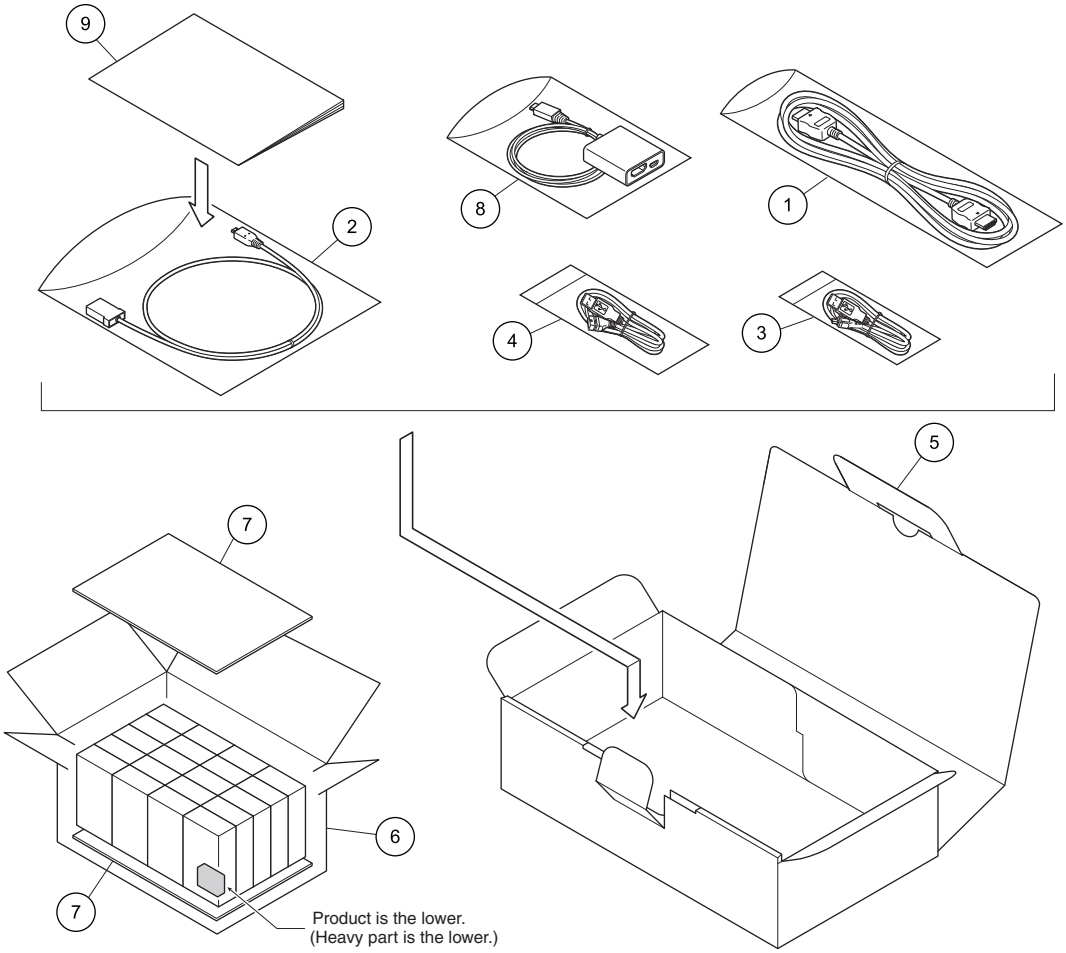

PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	High Speed HDMI Cable	CDP1512
	2	Adapter Cable	CDP1513
	3	USB - micro USB Cable	CDP1627
	4	USB Cable	CDP1585
	5	Unit Box	CHG8371
	6	Contain Box	CHL8371
*	7	Board	CHW2287
	8	HDMI-Adapter Unit	CXE5727
	9-1	Owner's Manual	CRD4724
	9-2	Owner's Manual	CRD4725

Owner's Manual

Part No.	Language
CRD4724	English, French, Italian, Spanish(Espanol), German, Dutch, Portuguese(B)
CRD4725	Russian, Arabic, Traditional Chinese