Pioneer DJ

Service Manual

ORDER NO.
RRV4640

TURNTABLE

PLX-1000
PLX-1000-N

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PLX-1000	AXEG	AC 110 V to 120 V or 220 V to 240 V	
PLX-1000	FUXEGCB2	AC 110 V to 120 V or 220 V to 240 V	*1
PLX-1000	LPSYXEG2	AC 110 V to 120 V or 220 V to 240 V	*1
PLX-1000-N	LPSYXEG	AC 110 V to 120 V or 220 V to 240 V	*2
PLX-1000-N	UXEGCB	AC 110 V to 120 V or 220 V to 240 V	*2

THIS SERVICE MANUAL SHOULD BE USED TOGETHER WITH THE FOLLOWING MANUAL(S).

Model No.	Order No.	Remarks
PLX-1000	RRV4511	PLX-1000/LPSYXE8

***1 The appearance of this model is the same as that of the base model. To distinguish this model from the base model, use the serial number; the most significant (6th) digit of the serial number of this model is 2.**

Sample: &&&&2######&& (&: Alphabet, #: Number)

***2 This product is a limited-production model (1,000 units) derived from the base model but in a different chassis color (gold instead of black)**

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**Pioneer DJ Corporation 2015**

K-ZZZ NOV. 2015 Printed in Japan

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Nos. indicate the pages and Nos. in the service manual for the base model.*

CONTRAST TABLE

PLX-1000/LPSYXE8, PLX-1000/AXEG, PLX-1000/FUXEGCB2 and PLX-1000/LPSYXEG2 are constructed the same except for the following:

Mark	No.	Symbol and Description	PLX-1000/ LPSYXE8	PLX-1000/ AXEG	PLX-1000/ FUXEGCB2	PLX-1000/ LPSYXEG2	Remarks
		PACKING					
⚠	P24-11	Power Cord	409-HDJ7100-055D -HA	Not Used	Not Used	409-HDJ7100-055D -HA	
⚠	P24-11	AC POWER CORD 3C	Not Used	409-DMX101-218	Not Used	Not Used	
⚠	P24-11	AC POWER CORD UL/CSA	Not Used	Not Used	409-HDJ7100-054D -HA	Not Used	
	P24-15	Operating Instructions (En)	502-PX1000B -3366A	Not Used	Not Used	Not Used	
	P24-15	Operating Instructions (Zhcn)	Not Used	502-PLX1000 -3499	Not Used	Not Used	
	P24-15	Operating Instructions (En)	Not Used	Not Used	502-PX1000A -3365B	Not Used	
	P24-15	Operating Instructions (En/Fr/De/It/Nl/Es/Ru/Pt)	Not Used	Not Used	Not Used	502-PX1000B -3366B	
	P24-23	Gift Box	507-PNTTB-3469	507-PNTTD-3469	507-PNTT-3469A	507-PNTTB-3469A	
		EXTERIOR					
⚠	P26-7	AC&PLAY PCB Assy	704-PLX-A863	704-PLX-B176	704-PLX-A863	704-PLX-A863	
	P26-21	Fixed Plate	300-PNTT-2134	300-PNTTD-2134	300-PNTT-2134	300-PNTT-2134	
	P26-40	Bottom Base Assy	701-PNTTA-5359	Not Used	701-PNTTA-5359	701-PNTTA-5359	
		FIXED CENTER WASHER	Not Used	606-C426-066	606-C426-066	606-C426-066	No.69
		PLATE	Not Used	300-PNTTN-2255	300-PNTTN-2255	300-PNTTN-2255	No.70
		RUBBER 2	Not Used	604-PNTTN-681	604-PNTTN-681	604-PNTTN-681	No.71
		SCREW (WPTP 3*18)	Not Used	602-WPTP0318-788	602-WPTP0318-788	602-WPTP0318-788	No.72

CONTRAST TABLE

PLX-1000/LPSYXE8, PLX-1000-N/LPSYXEG and PLX-1000-N/UXEGCB are constructed the same except for the following:

Mark	No.	Symbol and Description	PLX-1000/ LPSYXE8	PLX-1000-N/ LPSYXEG	PLX-1000-N/ UXEGCB	Remarks
		PACKING				
	P24-1	Turntable (ALUMINUM PLATTER(N) ASSY)	702-PNTT-075	702-PNTTN-075	702-PNTTN-075	
	P24-3	Slip Mat	612-PNTT-095	612-PNTTN-095	612-PNTTN-095	
	P24-5	Dust Cover	705-PLX1000-1583	705-PNTTN-1623	705-PNTTN-1623	
	P24-6	Adapter for EP Record	200-PNTT-211A	200-PNTTN-211A	200-PNTTN-211A	
	P24-7	Balance Weight	702-PNTT-076	702-PNTTN-076	702-PNTTN-076	
	P24-8	Sub Weight	200-PNTT-693	200-PNTTN-693	200-PNTTN-693	
	P24-9	Headshell	703-PNTT-1411	703-PNTTN-1411	703-PNTTN-1411	
	P24-10	Shell Weight	200-ST100-268	200-PNTTN-268	200-PNTTN-268	
⚠	P24-11	Power Cord	409-HDJ7100-055D-HA	409-HDJ7100-055D-HA	Not Used	
⚠	P24-11	AC POWER CORD UL/CSA	Not Used	Not Used	409-HDJ7100-054D-HA	
	P24-15	Operating Instructions (En)	502-PX1000B-3366A	502-PX1000B-3366A	Not Used	
	P24-15	Operating Instructions (En)	Not Used	Not Used	502-PX1000A-3365A	
	P24-23	Gift Box	507-PNTTB-3469	507-PNTTNB-3469	507-PNTTN-3469	
		EXTERIOR				
	P26-6	STROBOSCOPE Assy	704-PLX-A803	704-PLXN-B241	704-PLXN-B241	
⚠	P26-7	AC&PLAY PCB Assy	704-PLX-A863	704-PLXN-B315	704-PLXN-B315	
	P26-15	TEMPO Range Button	100-PNTT-3095	100-PNTTN-3095	100-PNTTN-3095	
	P26-16	SPEED Button	100-PNTT-3096	100-PNTTN-3096	100-PNTTN-3096	
	P26-21	Fixed Plate	300-PNTT-2134	300-PNTTN-2134	300-PNTTN-2134	
	P26-40	Bottom Base Assy	701-PNTTA-5359	701-PNTTN-5359	701-PNTTN-5359	
	P26-42	Back Board Assy	703-PNTT-1408	703-PNTTN-1408	703-PNTTN-1408	
	P26-43	TONE ARM PACKING ASSY	705-PNTT-1608	705-PNTTN-1625	705-PNTTN-1625	
	P26-44	Chassis Packing Assy	705-PNTT-1586	705-PNTTN-1624	705-PNTTN-1624	*

*The serial number 1-1000, which denotes that the product is a limited-production model, is printed on the Chassis Packing Assy of this product. However, when replacement of the Chassis Packing Assy is required, note that no serial number is printed on the Chassis Packing Assy to be supplied as a part for service.

EXPLODED VIEWS
EXTERIOR SECTION

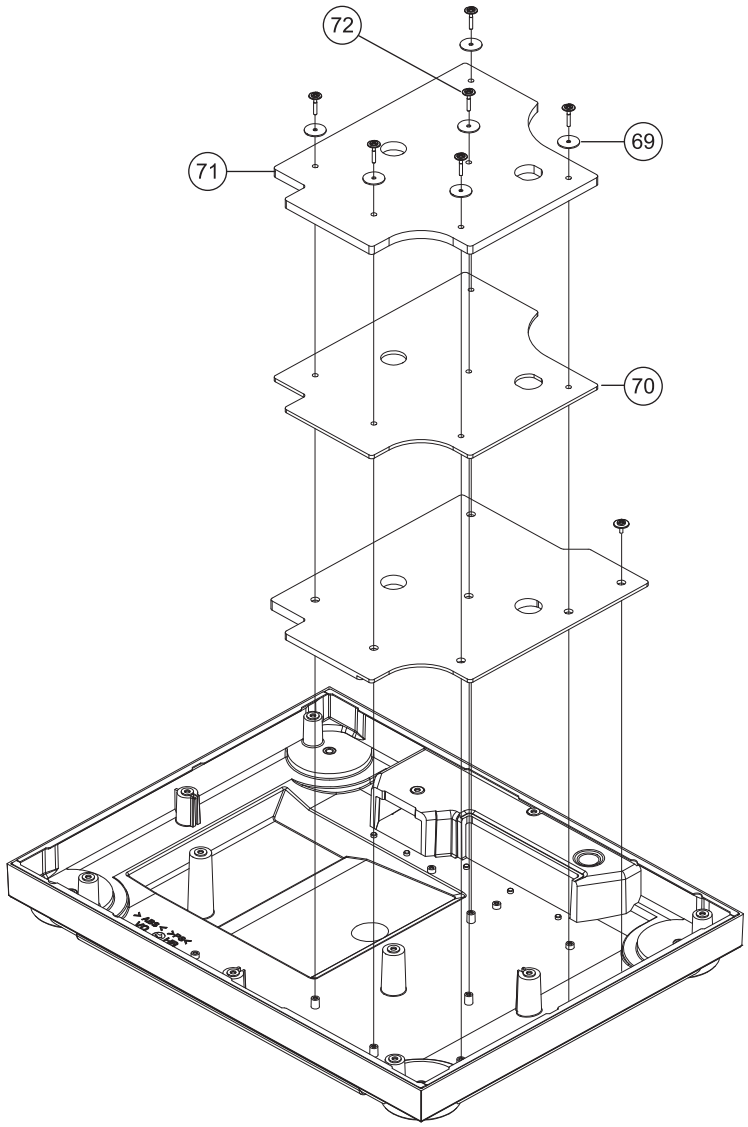

CONTRAST OF PCB ASSEMBLIES

F STROBOSCOPE ASSY

704-PLX-A803 and 704-PLXN-B241 are constructed the same except for the following:

Mark	Symbol and Description	704-PLX-A803	704-PLXN-B241	Remarks
	D308-311	410-CD1600-357T	Not Used	

H F AC PCB ASSY (AC & PLAY PCB ASSY)

704-PLX-A863, 704-PLX-B176 and 704-PLXN-B315 are constructed the same except for the following:

Mark	Symbol and Description	704-PLX-A863	704-PLX-B176	704-PLXN-B315	Remarks
	R1 (1M ohm, 1/2W)	412-PLX-1696	412-U5500-1778	412-PLX-1696	