2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

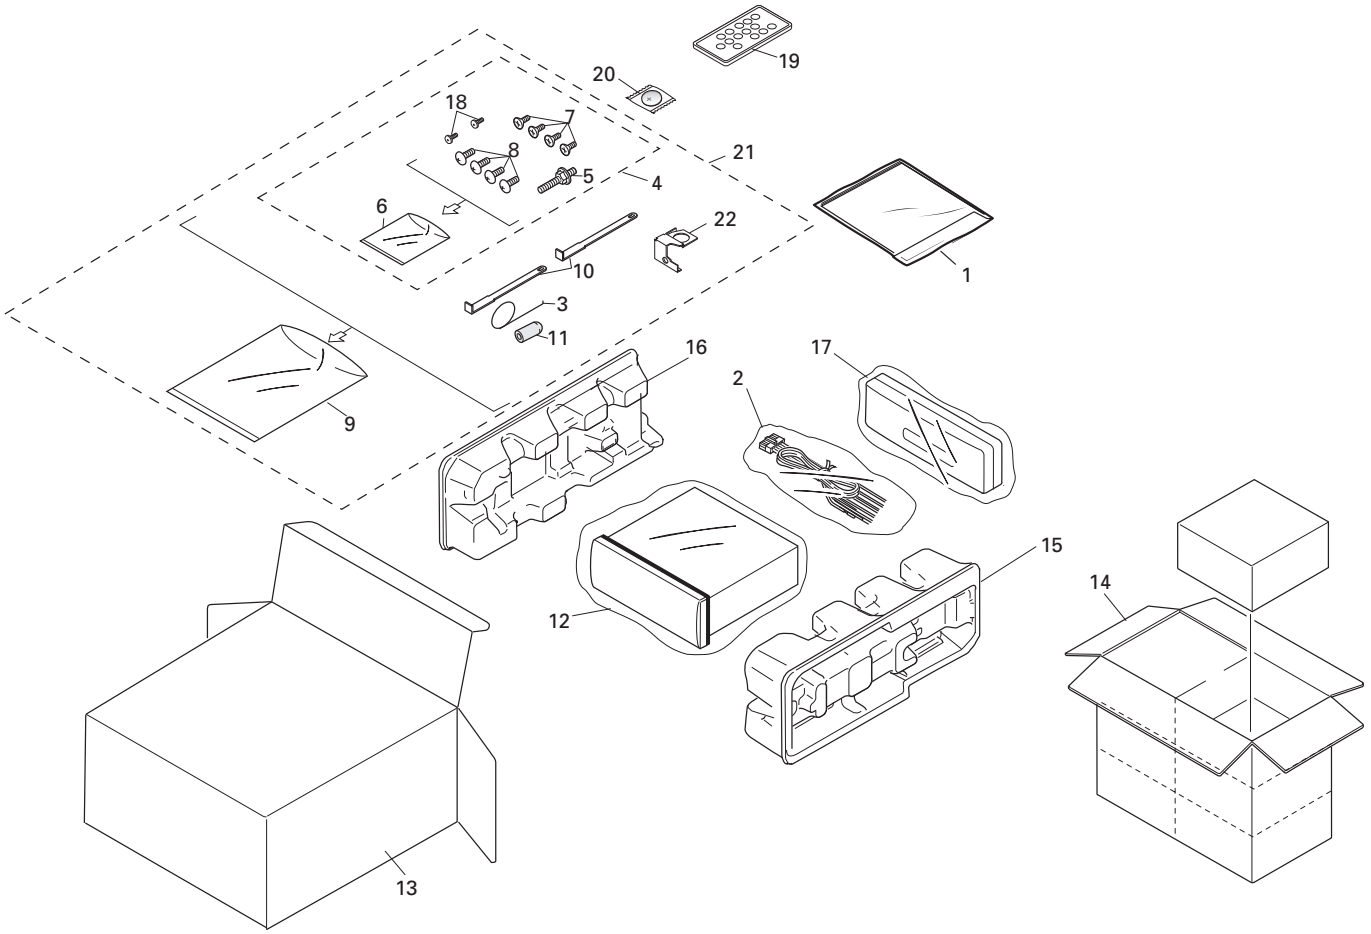

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

● PACKING SECTION PARTS LIST

Mark No.	Symbol and Description	Part No. DEH-P430/X1N/UC	DEH-P4300/X1N/UC	DEH-P43/X1N/UC
	1-1 Owner's Manual	CRD3300	CRD3301	CRD3301
	1-2 Installation Manual	CRD3309	CRD3311	CRD3311
*	1-3 Card	Not used	ARY1048	ARY1048
*	1-4 Warranty Card	CRY1070	Not used	Not used
	1-5 Polyethylene Bag	CEG1116	CEG1116	CEG1116
*	1-6 Caution Card	CRP1242	CRP1242	CRP1242
	2 Cord Assy	CDE6436	CDE6436	CDE6436
	3 Spring	CBH1650	CBH1650	CBH1650
	4 Screw Assy	CEA2796	CEA2796	CEA2796
	5 Screw	CBA1002	CBA1002	CBA1002
*	6 Polyethylene Bag	CEG-127	CEG-127	CEG-127
	7 Screw	CRZ50P090FMC	CRZ50P090FMC	CRZ50P090FMC
	8 Screw	TRZ50P080FMC	TRZ50P080FMC	TRZ50P080FMC
*	9 Polyethylene Bag	CEG-158	CEG-158	CEG-158
	10 Handle	CNC5395	CNC5395	CNC5395
	11 Bush	CNV3930	CNV3930	CNV3930
	12 Polyethylene Bag	CEG1173	CEG1173	CEG1173
	13 Carton	CHG4266	CHG4265	CHG4267
	14 Contain Box	CHL4266	CHL4265	CHL4267
	15 Protector	CHP2251	CHP2251	CHP2251
	16 Protector	CHP2252	CHP2252	CHP2252
	17 Case Assy	CXB3520	CXB3520	Not used
	18 Screw	BPZ20P060FZK	BPZ20P060FZK	BPZ20P060FZK
	19 Remote Control Unit	CXB6797	CXB6797	CXB6797
*	20 Battery	CEX1065	CEX1065	CEX1065
	21 Accessory Assy	CEA2773	CEA2773	CEA2773
	22 Earth Plate	CNC9450	CNC9450	CNC9450

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P430/X1N/UC	CRD3300, CRD3309	English, French, Spanish
DEH-P43/X1N/UC DEH-P4300/X1N/UC	CRD3301, CRD3311	English, French, Spanish

2.2 EXTERIOR

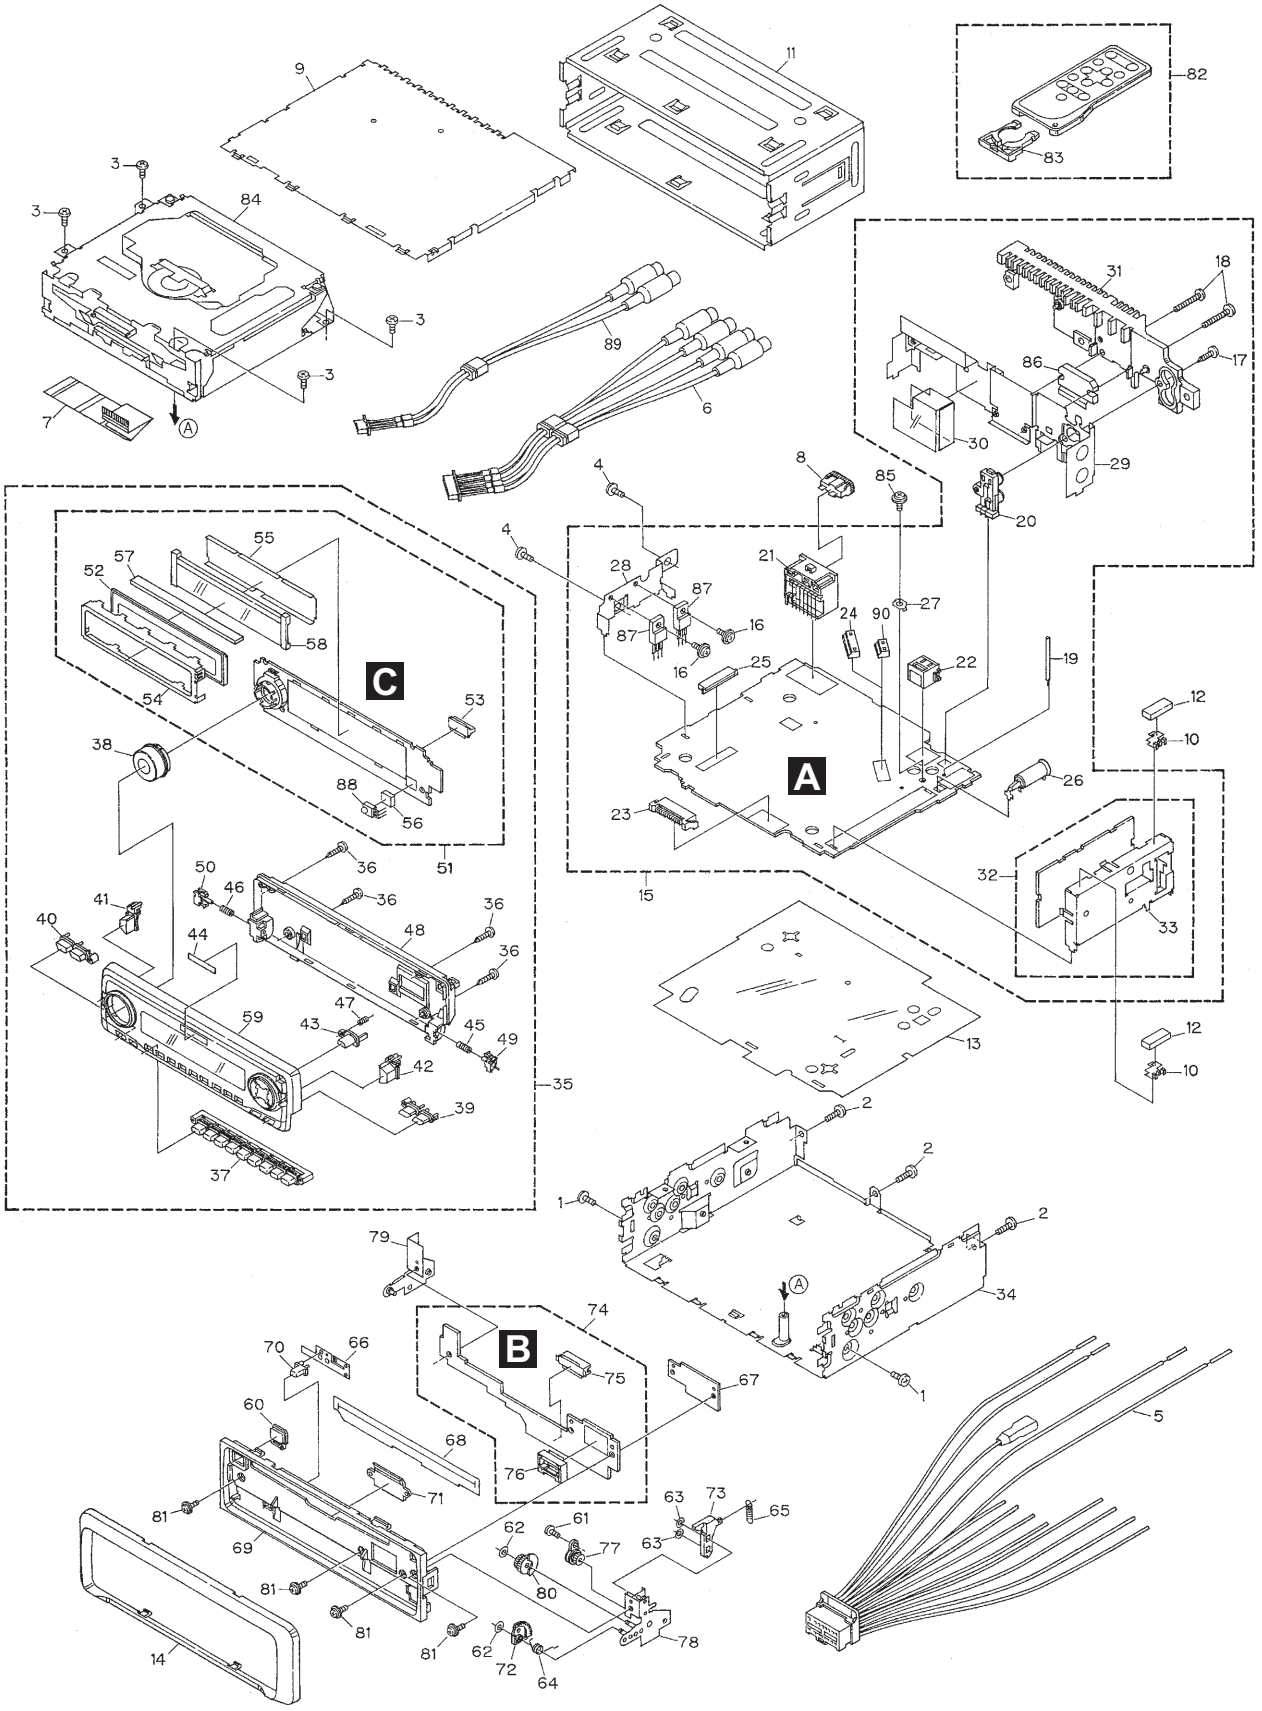

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BMZ30P100FMC
	3	Screw	BSZ26P060FMC
	4	Screw	BSZ30P060FMC
	5	Cord Assy	CDE6436
	6	Cord Assy	See Contrast table(2)
	7	Cable	CDE6444
	8	Fuse(10A)	CEK1136
	9	Case	CNB2686
	10	Holder	CNC5704
	11	Holder	CNC8659
	12	Cushion	CNM4870
	13	Insulator	CNM6948
	14	Panel	CNS6332
	15	Tuner Amp Unit	See Contrast table(2)
	16	Screw	ASZ26P060FMC
	17	Screw	BPZ26P100FMC
	18	Screw	BSZ26P160FMC
	19	Clamper	CEF1007
	20	Pin Jack(CN351)	CKB1035
	21	Plug(CN901)	CKM1330
	22	Connector(CN701)	CKS3408
	23	Plug(CN750)	CKS3537
	24	Connector(CN331)	See Contrast table(2)
	25	Connector(CN501)	CKS4398
	26	Antenna Jack(CN402)	CKX1056
	27	Holder(CN403)	CNC5399
	28	Holder	CNC8615
	29	Holder	See Contrast table(2)
	30	Insulator	CNM6949
	31	Heat Sink	CNR1583
	32	FM/AM Tuner Unit	CWE1563
	33	Holder	CNC8815
	34	Chassis Unit	CXB6100
	35	Detach Grille Assy	See Contrast table(2)
	36	Screw	BPZ20P100FZK
	37	Button(1-6)	CAC6773
	38	Knob(VOLUME)	CAC6775
	39	Button(FUNC/AUDIO)	CAC6776
	40	Button(SOURCE/DISP)	CAC6777
	41	Button(EQ)	CAC6778
	42	Button(SFEQ)	CAC6779
	43	Button(OPEN)	CAC6780
*	44	Badge	See Contrast table(2)
	45	Spring	CBH2430
	46	Spring	CBH2431
	47	Spring	CBH2491
	48	Cover	CNS6282
	49	Holder	CNV6505
	50	Holder	CNV6506
	51	Keyboard Unit	See Contrast table(2)
	52	LCD	CAW1626
	53	Connector(CN1901)	CKS4205
	54	Holder	CNC9053
	55	Sheet	CNM6969
	56	Cushion	CNM6984
	57	Connector	CNV6440
	58	Lighting Conductor	CNV6441
	59	Sub Grille Assy	See Contrast table(2)
	60	Button(EJECT)	CAC6839
	61	Screw(M2x2)	CBA1176
	62	Washer	CBF1038
	63	Washer	CBF1039
	64	Spring	CBH2428
	65	Spring	CBH2429
	66	Spring	CBL1512
	67	Holder	CNC9096
	68	Cover	CNM6854
	69	Panel	CNS6278
	70	Pin	CNV6486
	71	Lighting Conductor	CNV6487
	72	Gear	CNV6507
	73	Arm	CNV6508
	74	Panel Unit	CWM7375
	75	Socket(CN1950)	CKS3550
	76	Connector(CN1951)	CKS4206
	77	Damper Unit	CXB5070
	78	Holder Unit	CXB6356
	79	Holder Unit	CXB6357
	80	Clutch Unit	CXB6358
	81	Screw	IMS20P045FZK
	82	Remote Control Unit	CXB6797
	83	Cover	CNS6439
	84	CD Mechanism Module(S8.1)	CXK5201
	85	Screw	ISS26P055FUC
	86	IC(IC361)	PAL006A
	87	Transistor(Q510,Q910)	2SD2396
	88	IC(IC1902)	SBX8035-H
	89	Cord Assy	See Contrast table(2)
	90	Connector(CN331)	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P430/X1N/UC, DEH-P4300/X1N/UC and DEH-P43/X1N/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P430/X1N/UC	DEH-P4300/X1N/UC	DEH-P43/X1N/UC
6	Cord Assy	CDE6439	Not used	Not used
15	Tuner Amp Unit	CWM7382	CWM7379	CWM7381
24	Connector(CN331)	CKS3602	Not used	Not used
29	Holder	CNC9469	CNC9470	CNC9470
35	Detach Grille Assy	CXB6294	CXB6291	CXB6293
* 44	Badge	CAH1755	CAH1754	CAH1754
51	Keyboard Unit	CWM7398	CWM7398	CWM7403
59	Sub Grille Assy	CXB7152	CXB7153	CXB7154
89	Cord Assy	Not used	CDE6494	CDE6494
90	Connector(CN331)	Not used	CKS3598	CKS3598

2.3 CD MECHANISM MODULE

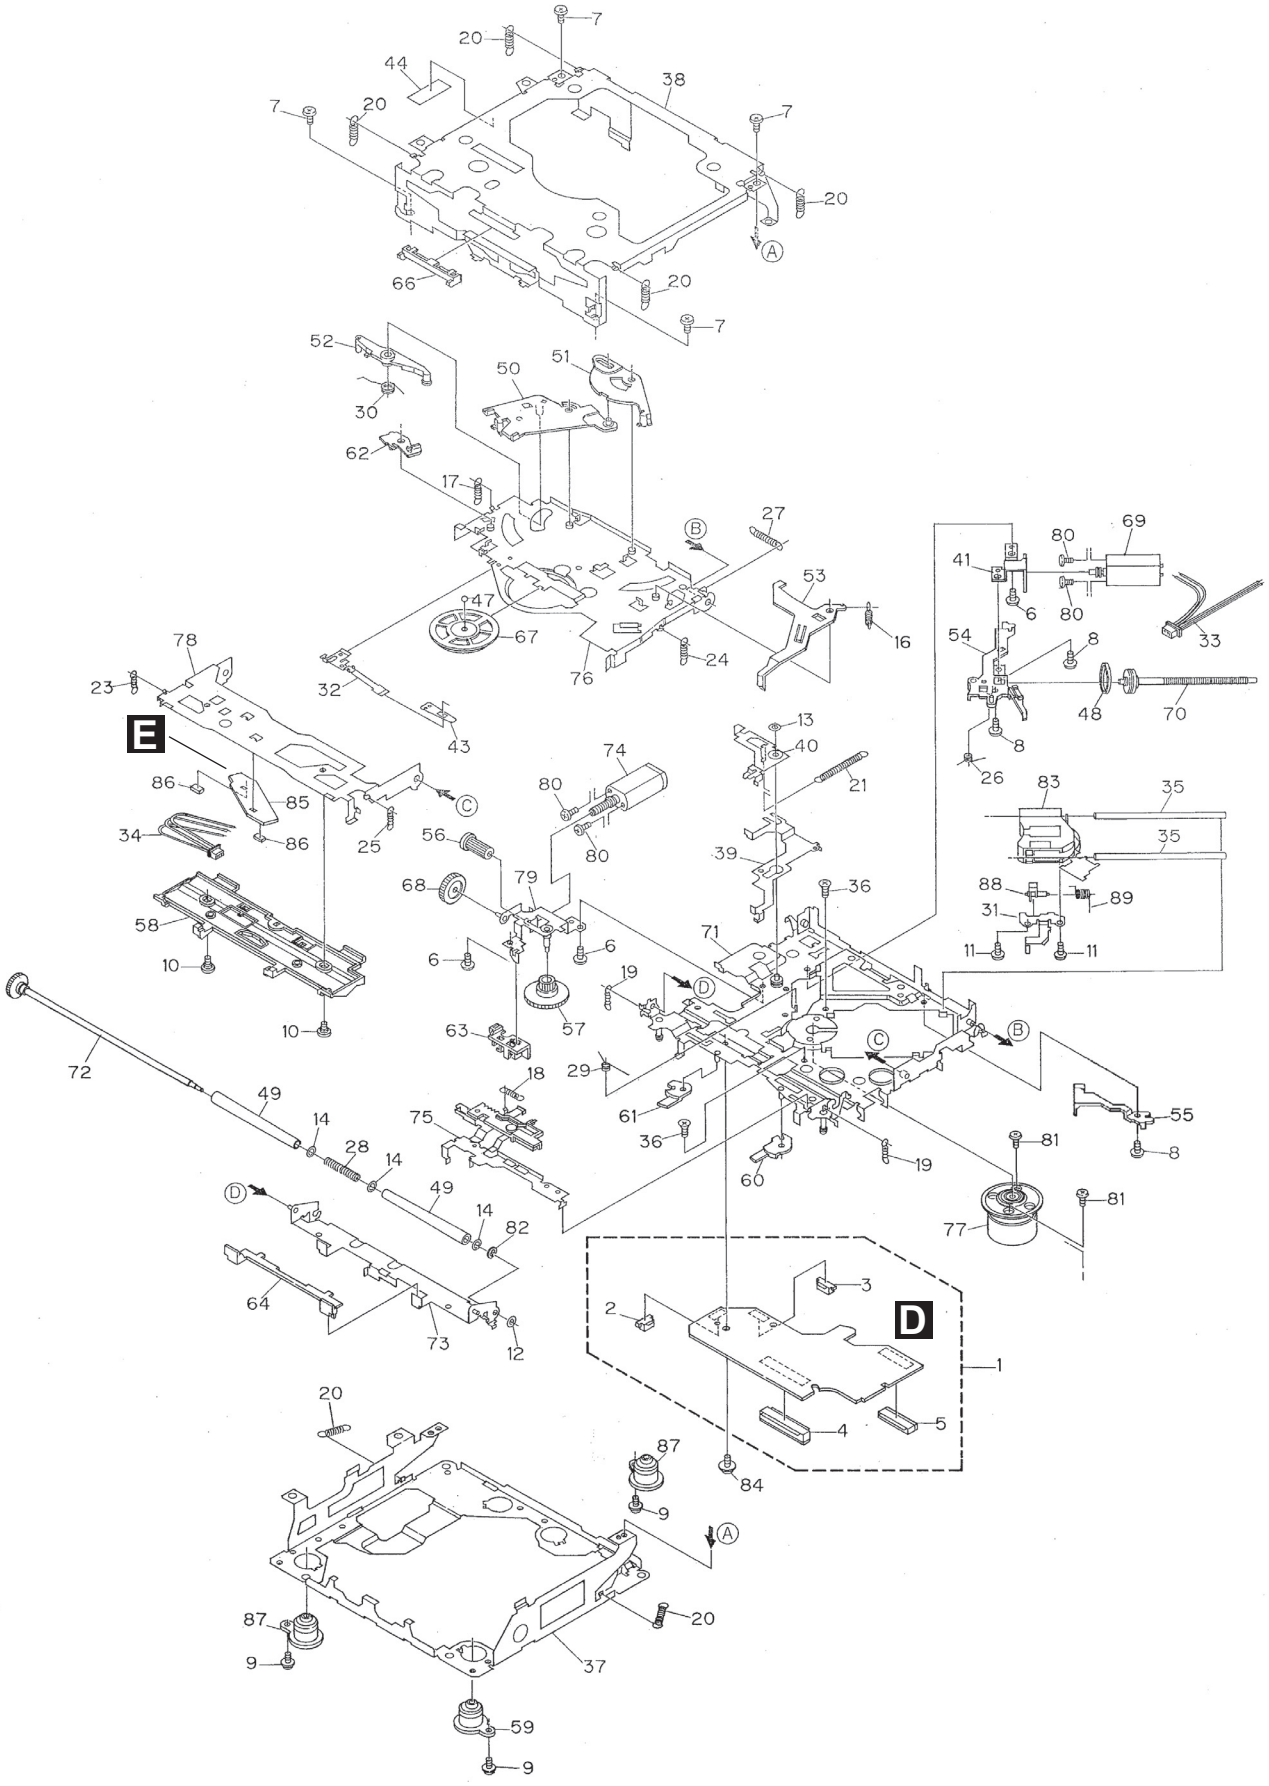

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2411
	2	Connector(CN802)	CKS2192
	3	Connector(CN801)	CKS2193
	4	Connector(CN701)	CKS2773
	5	Connector(CN101)	CKS3486
	6	Screw	BMZ20P030FMC
	7	Screw	BSZ20P040FMC
	8	Screw(M2x3)	CBA1077
	9	Screw(M2x5)	EBA1028
	10	Screw	CBA1243
	11	Screw(M2x4)	CBA1362
	12	Washer	CBF1037
	13	Washer	CBF1038
	14	Washer	CBF1060
	15	•••••	
	16	Spring	CBH2079
	17	Spring	CBH2117
	18	Spring	CBH2314
	19	Spring	CBH2110
	20	Spring	CBH2282
	21	Spring	CBH2318
	22	•••••	
	23	Spring	CBH2324
	24	Spring	CBH2118
	25	Spring	CBH2161
	26	Spring	CBH2163
	27	Spring	CBH2189
	28	Spring	CBH2377
	29	Spring	CBH2260
	30	Spring	CBH2262
	31	Bracket	CNC8568
	32	Spring	CBL1531
	33	Connector	CDE5531
	34	Connector	CDE5532
	35	Shaft	CLA3894
	36	Screw(M2.6x6)	CBA1458
	37	Frame	CNC8565
	38	Frame	CNC8749
	39	Lever	CNC9265
	40	Arm	CNC8663
	41	Bracket	CNC8567
	42	•••••	
	43	Spacer	CNM3315
	44	Sheet	CNM6659
	45	•••••	
	46	•••••	
	47	Ball	CNR1189
	48	Belt	CNT1086
	49	Roller	CNV4509
	50	Arm	CNV6037
	51	Arm	CNV5247
	52	Arm	CNV5248
	53	Arm	CNV5249
	54	Guide	CNV5254
	55	Guide	CNV5255
	56	Gear	CNV5257
	57	Gear	CNV5256
	58	Guide	CNV6272
	59	Damper	CNV6010
	60	Arm	CNV6096
	61	Arm	CNV6031
	62	Arm	CNV6211
	63	Guide	CNV6012
	64	Guide	CNV5510
	65	•••••	
	66	Guide	CNV5751
	67	Clamper	CNV6013
	68	Gear	CNV5813
	69	Motor Unit(M1)	CXB2190
	70	Screw Unit	CXB5892
	71	Chassis Unit	CXB4797
	72	Gear Unit	CXB4728
	73	Arm Unit	CXB5753
	74	Motor Unit(M2)	CXB2195
	75	Lever Unit	CXB4730
	76	Arm Unit	CXB4731
	77	Motor Unit(M3)	CXB2562
	78	Arm Unit	CXB4732
	79	Bracket Unit	CXB4795
	80	Screw	JFZ20P025FMC
	81	Screw	JGZ17P025FZK
	82	Washer	YE20FUC
	83	Pickup Unit(Service)(P8)	CXX1285
	84	Screw	IMS26P030FMC
*	85	PCB	CNX2982
	86	Photo-transistor(Q1, 2)	CPT230SX-TU
	87	Damper	CNV6011
	88	Rack	CNV6014
	89	Spring	CBH2315

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7382(DEH-P430/X1N/UC)
: CWM7381(DEH-P43/X1N/UC)
: CWM7379(DEH-P4300/X1N/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	301	IC(DEH-P430/X1N/UC)	PML009A
		IC(DEH-P43/X1N/UC,P4300/X1N/UC)	PML008A
IC	361	IC	PAL006A
IC	601	IC	PE5203A
IC	603	IC	S-80834ANY
IC	710	IC	HA12187FP
Q	331	Transistor(DEH-P430/X1N/UC)	IMH3A
Q	341	Transistor	IMH3A
Q	351	Transistor	IMH3A
Q	359	Transistor	DTA124EK
Q	361	Transistor	DTC124EK
Q	362	Transistor	DTC114EK
Q	410	Transistor	2SC2412K
Q	510	Transistor	2SD2396
Q	511	Transistor	RN46A1
Q	610	Transistor	DTA114EK
Q	710	Transistor	2SA1037K
Q	711	Transistor	DTC114EK
Q	750	Transistor	2SA1037K
Q	751	Transistor	2SA1036K
Q	752	Transistor	DTC114EK
Q	753	Transistor	DTC114EK
Q	754	Transistor	2SA1037K
Q	755	Transistor	DTC114EK
Q	909	Transistor	RN46A1
Q	910	Transistor	2SD2396
Q	911	Transistor	2SB1243
Q	912	Transistor	DTC114EK
Q	913	Transistor	2SD1760F5
Q	914	Transistor	2SC2412K
Q	915	Transistor	2SC2412K
Q	917	Transistor	2SC2412K
Q	918	Transistor	2SC2412K
D	320	Diode	DAN202U
D	361	Diode	S5688G
D	362	Diode	S5688G
D	510	Diode	HZS9L(B1)
D	750	Diode	1SS270
D	751	Diode	1SS270
D	752	Diode	DAP202U
D	753	Diode	DAN202U
D	754	Diode	DAP202U
D	755	Diode	DAN202U
D	762	Diode	DAN202U
D	763	Diode	DAP202U
D	910	Diode	HZS9L(B3)
D	911	Diode	HZS6L(B2)
D	912	Diode	S5688G
D	913	Diode	HZS7L(C2)
D	914	Diode	HZS7L(A1)
D	919	Diode	S5688G
D	920	Diode	S5688G
D	925	Diode	1SS270
D	926	Diode	HZS9L(A2)
L	311	Ferri-Inductor	LAU4R7K
L	361	Choke Coil 600µH	CTH1221
L	410	Ferri-Inductor	LAU4R7K
L	411	Ferri-Inductor	LAU2R2K
L	412	Ferri-Inductor	LAU2R2K
L	612	Inductor	LAU100K
L	621	Inductor	CTF1346
L	710	Ferri-Inductor	LAU2R2K
L	750	Ferri-Inductor	LAU2R2K
TH	610	Thermistor	CCX1037
X	610	Radiator 12.5829MHz	CSS1495
S	750	Switch(DETACH SENSE)	CSN1039
BZ	610	Buzzer	CPV1050
AR	410	Arrester	DSP-201M
		FM/AM Tuner Unit	CWE1563

RESISTORS

R	311		RS1/16S101J
R	312		RS1/16S101J
R	313		RS1/16S101J
R	314		RS1/16S101J
R	315	(DEH-P430/X1N/UC)	RS1/16S101J
R	316	(DEH-P430/X1N/UC)	RS1/16S101J
R	327		RS1/16S222J
R	328		RS1/16S222J
R	331	(DEH-P430/X1N/UC)	RS1/16S821J
R	332	(DEH-P430/X1N/UC)	RS1/16S821J
R	333	(DEH-P430/X1N/UC)	RS1/16S223J
R	334	(DEH-P430/X1N/UC)	RS1/16S223J
R	341		RS1/16S223J
R	342		RS1/16S821J
R	343		RS1/16S821J
R	344		RS1/16S223J
R	351		RS1/16S821J
R	352		RS1/16S821J
R	353		RS1/16S223J
R	354		RS1/16S223J
R	361		RS1/16S103J
R	362		RS1/16S103J
R	363		RS1/16S331J
R	364		RS1/16S153J
R	365		RD1/4PU182J
R	409		RS1/16S0R0J
R	410		RS1/16S222J
R	411		RS1/16S222J
R	413		RS1/16S473J
R	414		RS1/16S473J
R	415		RS1/16S393J
R	417		RS1/16S681J
R	418		RS1/16S681J
R	419		RS1/16S681J
R	420		RS1/16S103J

Circuit Symbol and No.		Part Name	Part No.
R	421		RS1/16S681J
R	422		RS1/16S473J
R	423		RS1/16S472J
R	424		RS1/16S473J
R	429		RS1/16S681J
R	430		RS1/16S681J
R	431		RS1/16S473J
R	432		RS1/16S473J
R	437		RS1/16S0R0J
R	438		RS1/16S0R0J
R	445		RS1/16S272J
R	446		RS1/16S272J
R	447		RS1/16S162J
R	448		RS1/16S162J
R	454		RS1/16S0R0J
R	510		RD1/4PU221J
R	511		RD1/4PU221J
R	512		RS1/16S472J
R	513		RS1/16S222J
R	514		RS1/16S473J
R	515		RS1/16S473J
R	516		RS1/16S473J
R	517		RS1/16S222J
R	518		RS1/16S222J
R	519		RS1/16S222J
R	520		RS1/16S681J
R	521		RS1/16S102J
R	522		RS1/16S0R0J
R	523		RS1/16S102J
R	524		RS1/16S0R0J
R	528		RD1/4PU0R0J
R	531		RS1/16S0R0J
R	532		RS1/16S0R0J
R	534		RS1/16S0R0J
R	535		RS1/16S0R0J
R	536		RS1/16S0R0J
R	610		RS1/16S473J
R	611	(DEH-P43/X1N/UC,P4300/X1N/UC)	RS1/16S473J
R	612		RS1/16S2202F
R	613		RS1/16S102J
R	614		RS1/16S821J
R	615		RS1/16S102J
R	616		RS1/16S0R0J
R	620		RS1/16S473J
R	621		RS1/16S331J
R	622		RS1/16S101J
R	624		RS1/16S104J
R	625		RS1/16S0R0J
R	626		RS1/16S473J
R	627		RS1/16S473J
R	628		RS1/16S473J
R	630		RAB4C102J
R	631		RS1/16S0R0J
R	710		RS1/16S101J
R	711		RS1/16S620J
R	712		RS1/16S101J
R	713		RS1/16S103J
R	714		RS1/16S102J
R	715		RS1/16S102J
R	716		RS1/16S473J
R	717		RS1/16S473J
R	718		RS1/16S102J
R	719		RS1/16S102J
R	720		RS1/16S223J
R	721		RS1/16S223J
R	722		RS1/16S821J
R	723		RS1/16S821J
R	724		RS1/16S222J
R	725		RS1/16S223J
R	726		RS1/16S472J

Circuit Symbol and No.		Part Name	Part No.
R	750		RS1/16S104J
R	751		RS1/16S103J
R	752		RS1/16S153J
R	753		RS1/16S153J
R	754		RS1/16S222J
R	756		RS1/16S433J
R	757		RS1/16S473J
R	758		RS1/16S102J
R	759		RD1/4PU222J
R	760		RS1/16S102J
R	763		RS1/16S222J
R	764		RS1/16S131J
R	765		RS1PMF390J
R	766		RS1/10S270J
R	767		RS1/16S103J
R	768		RS1/16S152J
R	769		RS1/16S152J
R	771		RS1/16S473J
R	773		RD1/4PU222J
R	774		RS1/16S102J
R	775		RS1/16S102J
R	776		RS1/16S220J
R	777		RS1/16S0R0J
R	778		RS1/16S103J
R	779		RS1/16S472J
R	781		RS1/16S104J
R	782		RS1/16S131J
R	783		RS1/16S131J
R	784		RS1/10S392J
R	786		RS1/16S102J
R	787		RS1/10S472J
R	788		RS1/10S222J
R	789		RS1/10S222J
R	909		RD1/4PU0R0J
R	910		RS1/16S0R0J
R	911		RD1/4PU121J
R	912		RS1/16S102J
R	913		RD1/4PU102J
R	914		RS1/16S103J
R	915		RS1/16S222J
R	916		RS1/16S133J
R	917		RS1/16S104J
R	918		RS1/16S104J
R	919		RS1/16S223J
R	920		RS1/16S473J
R	921		RS1/16S103J
R	922		RS1/16S473J
R	923		RD1/4PU102J
R	924		RS1/16S472J
R	927		RS1/16S102J
R	928		RS1/16S473J
R	929		RS1/16S104J
R	930		RS1/16S103J
R	931		RS1/16S103J
R	932		RD1/4PU102J
R	933		RS1/16S473J
R	934		RS1/16S103J
R	935		RS1/16S223J
R	936		RD1/4PU152J

CAPACITORS

Circuit Symbol and No.		Part Name	Part No.
C	310		CKSRYB102K50
C	311		CEJA1R0M50
C	312		CEJA1R0M50
C	314		CKSRYB105K6R3
C	315		CKSRYB105K6R3

=====Circuit Symbol and No.		===Part Name	Part No.
C	316		CKSRYB104K16
C	317		CKSRYB104K16
C	318		CKSRYB105K6R3
C	319		CKSRYB105K6R3
C	320		CKSRYB105K6R3
C	321		CKSRYB105K6R3
C	322	(DEH-P430/X1N/UC)	CKSRYB105K6R3
C	323	(DEH-P430/X1N/UC)	CKSRYB105K6R3
C	324	(DEH-P430/X1N/UC)	CKSRYB103K50
C	325		CKSRYB102K50
C	326		CEJA100M16
C	328		CKSRYB104K16
C	329		CEJA470M10
C	331	(DEH-P430/X1N/UC)	CEJA2R2M50
C	332	(DEH-P430/X1N/UC)	CEJA2R2M50
C	342		CEJA2R2M50
C	343		CEJA2R2M50
C	351		CEJA2R2M50
C	352		CEJA2R2M50
C	361	4700µF/16V	CCH1367
C	362		CKSQYB104K16
C	363		CKSQYB474K16
C	364		CKSQYB474K16
C	365		CKSQYB474K16
C	366		CKSQYB474K16
C	367		CKSQYB474K16
C	368		CKSQYB474K16
C	369		CKSQYB474K16
C	370		CKSQYB474K16
C	371		CEJA330M10
C	373		CKSQYB225K10
C	374		CKSQYB225K10
C	375		CEJA100M16
C	410		CKSQYB103K50
C	412		CKSRYB223K25
C	413		CKSRYB102K50
C	414		CEJA220M10
C	415		CKSRYB223K25
C	418		CEAL101M10
C	419		CKSRYB473K16
C	424		CKSRYB183K25
C	425		CKSRYB183K25
C	431		CKSRYB102K50
C	510		CKSRYB473K16
C	511		CKSRYB102K50
C	512		CEJA101M16
C	615		CEAL2R2M50
C	616		CCSRCH270J50
C	617		CCSRCH330J50
C	618		CKSRYB105K6R3
C	619		CEAL4R7M35
C	620		CKSRYB103K50
C	621		CCSRCH101J50
C	624		CKSRYB223K25
C	629		CCSRCH101J50
C	630		CKSRYB103K50
C	631		CCSRCH101J50
C	632		CCSRCH101J50
C	633		CKSRYB103K50
C	634		CKSRYB472K50
C	710		CKSRYB104K16
C	711		CKSRYB473K16
C	712		CEJA1R0M50
C	713		CEJA1R0M50
C	714		CEJA1R0M50
C	715		CEJA1R0M50
C	750		CKSRYB103K25
C	751		CKSQYB104K16
C	765		CKSQYB103K50
C	799		CKSQYB473K16

=====Circuit Symbol and No.		===Part Name	Part No.
C	910	330µF/16V	CCH1326
C	911		CKSRYB103K25
C	912		CEJA101M16
C	913		CEJA101M10
C	914		CKSRYB473K16
C	915		CKSRYB103K25
C	916	470µF/16V	CCH1331
C	920		CKSRYB104K16

C

Unit Number : CWM7398(DEH-P430/X1N/UC)
: (DEH-P4300/X1N/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1902	IC	SBX8035-H
IC	1903	IC	PD6294A
Q	1905	Transistor	DTC114EU
D	1901	Chip Diode	MA151WK
D	1902	Chip Diode	MA151WA
D	1903	LED	CL170UBX
D	1917	LED	NSSW440-9159
D	1918	LED	NSSW440-9159
X	1901	Radiator 5.00MHz	CSS1423
S	1901	Push Switch	CSG1112
S	1902	Push Switch	CSG1112
S	1903	Push Switch	CSG1112
S	1904	Push Switch	CSG1112
S	1905	Switch	CSG1107
S	1906	Push Switch	CSG1112
S	1908	Switch	CSG1107
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Push Switch	CSG1112
S	1917	Push Switch	CSG1112
S	1918	Push Switch	CSG1112
S	1919	Push Switch	CSG1112
S	1920	Push Switch	CSG1111
S	1922	Switch	CSD1061

RESISTORS

R	1901		RS1/10S222J
R	1902		RS1/10S222J
R	1903		RS1/16S470J
R	1904		RS1/16S470J
R	1905		RS1/16S121J
R	1906		RS1/16S2R2J
R	1909		RS1/16S151J
R	1910		RS1/16S121J
R	1911		RS1/16S121J
R	1912		RS1/16S121J
R	1913		RS1/16S121J
R	1914		RS1/16S121J
R	1915		RS1/16S121J
R	1916		RS1/16S121J
R	1917		RS1/16S131J
R	1918		RS1/16S151J
R	1919		RS1/16S131J
R	1920		RS1/16S131J
R	1927		RS1/16S472J
R	1929		RS1/16S0R0J
R	1930		RS1/16S101J
R	1931		RS1/16S101J
R	1933		RS1/16S161J
R	1935		RS1/16S393J
R	1936		RS1/16S131J

=====Circuit Symbol and No.		===Part Name	Part No.
R	1938		RS1/16S151J
R	1939		RS1/16S131J
R	1941		RS1/16S131J
R	1942		RS1/16S131J
R	1943		RS1/16S131J
R	1945		RS1/16S121J
R	1946		RS1/16S0R0J
R	1949		RS1/16S151J

CAPACITORS

C	1902		CKSRYB104K16
C	1903		CSZS100M6R3
C	1905		CKSRYB104K16
C	1906		CKSRYB104K16
C	1907		CKSRYB104K16
C	1923		CKSQYB104K16
C	1924		CKSRYB104K16
C	1930		CKSQYB104K16

C Unit Number : CWM7403(DEH-P43/X1N/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1902	IC	SBX8035-H
IC	1903	IC	PD6294A
Q	1905	Transistor	DTC114EU
D	1901	Chip Diode	MA151WK
D	1902	Chip Diode	MA151WA
D	1903	LED	CL170UBX
D	1917	LED	NSSW440-9159
D	1918	LED	NSSW440-9159
X	1901	Radiator 5.00MHz	CSS1423
S	1901	Push Switch	CSG1114
S	1902	Push Switch	CSG1114
S	1903	Push Switch	CSG1114
S	1904	Push Switch	CSG1114
S	1905	Push Switch	CSG1117
S	1906	Push Switch	CSG1114
S	1908	Push Switch	CSG1117
S	1909	Push Switch	CSG1117
S	1910	Push Switch	CSG1117
S	1911	Push Switch	CSG1117
S	1912	Push Switch	CSG1117
S	1913	Push Switch	CSG1117
S	1914	Push Switch	CSG1117
S	1915	Push Switch	CSG1117
S	1916	Push Switch	CSG1114
S	1917	Push Switch	CSG1114
S	1918	Push Switch	CSG1114
S	1919	Push Switch	CSG1114
S	1920	Push Switch	CSG1111
S	1922	Switch	CSD1061

RESISTORS

R	1901		RS1/10S222J
R	1902		RS1/10S222J
R	1903		RS1/16S470J
R	1904		RS1/16S470J
R	1905		RS1/16S121J
R	1906		RS1/16S2R2J
R	1909		RS1/16S151J
R	1910		RS1/16S121J
R	1911		RS1/16S121J
R	1912		RS1/16S121J
R	1913		RS1/16S121J
R	1914		RS1/16S121J
R	1915		RS1/16S121J
R	1916		RS1/16S121J
R	1917		RS1/16S131J

=====Circuit Symbol and No.		===Part Name	Part No.
R	1918		RS1/16S151J
R	1919		RS1/16S131J
R	1920		RS1/16S131J
R	1927		RS1/16S472J
R	1929		RS1/16S0R0J
R	1930		RS1/16S101J
R	1931		RS1/16S101J
R	1933		RS1/16S161J
R	1935		RS1/16S393J
R	1936		RS1/16S131J
R	1938		RS1/16S151J
R	1939		RS1/16S131J
R	1941		RS1/16S131J
R	1942		RS1/16S131J
R	1943		RS1/16S131J
R	1945		RS1/16S121J
R	1946		RS1/16S0R0J
R	1949		RS1/16S151J

CAPACITORS

C	1902		CKSRYB104K16
C	1903		CSZS100M6R3
C	1905		CKSRYB104K16
C	1906		CKSRYB104K16
C	1907		CKSRYB104K16
C	1923		CKSQYB104K16
C	1924		CKSRYB104K16
C	1930		CKSQYB104K16

B Unit Number : CWM7375
Unit Name : Panel Unit

MISCELLANEOUS

D	1950	LED	CL220PGC
S	1950	Push Switch	CSG1112

RESISTORS

R	1952		RS1/16S101J
R	1953		RS1/16S101J

D Unit Number : CWX2411
Unit Name : Control Unit

MISCELLANEOUS

IC	201	IC	UPD63711GC
IC	301	IC	BA5985FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SB1132
D	801	Chip LED	CL203IRXTU
D	802	Chip LED	CL203IRXTU
X	201	Ceramic Resonator 16.934MHz	CSS1456
S	801	Spring Switch(HOME)	CSN1051
S	802	Spring Switch(CLAMP)	CSN1052

RESISTORS

R	101		RS1/8S120J
R	102		RS1/8S100J
R	103		RS1/16S222J
R	201		RS1/16S104J
R	202		RS1/16S103J
R	203		RS1/16S393J
R	204		RS1/16S103J
R	205		RS1/16S103J
R	206		RS1/16S182J
R	207		RS1/16S123J

=====Circuit Symbol and No.		===Part Name	Part No.
R	302		RS1/16S153J
R	303		RS1/16S103J
R	501		RS1/16S102J
R	502		RA4C681J
R	601		RS1/16S102J
R	602		RS1/16S102J
R	605		RS1/16S0R0J
R	606		RS1/16S0R0J
R	801		RS1/8S751J
R	803		RS1/8S751J
R	902		RS1/16S0R0J
R	906		RS1/16S0R0J

CAPACITORS

C	101		CKSRYB102K50
C	102		CKSRYB104K16
C	103		CEV101M6R3
C	104		CEV470M6R3
C	105		CKSQYB334K16
C	106		CKSQYB334K16
C	107		CKSQYB334K16
C	201		CKSRYB104K16
C	202		CKSRYB471K50
C	203		CKSRYB104K16
C	205		CEV101M6R3
C	206		CKSRYB104K16
C	207		CKSRYB104K16
C	208		CKSRYB104K16
C	209		CKSRYB104K16
C	210		CKSRYB332K50
C	211		CKSRYB104K16
C	212		CKSRYB104K16
C	213		CKSRYB392K50
C	214		CKSRYB104K16
C	215		CKSRYB104K16
C	216		CCSRCJ3R0C50
C	217		CCSRCH270J50
C	218		CKSRYB104K16
C	219		CCSRCH181J50
C	220		CCSRCH510J50
C	221		CKSRYB682K25
C	222		CEV220M6R3
C	223		CKSRYB103K25
C	224		CKSRYB224K10
C	301		CEV101M10
C	603		CCSQSL152J50
C	604		CCSQSL152J50
C	702	10µF/10V	CCH1349
C	703		CKSQYB334K16

=====Circuit Symbol and No.		===Part Name	Part No.

E Unit Number :
Unit Name : Photo Unit(S8)

Q	1	Photo-transistor	CPT230SX-TU
Q	2	Photo-transistor	CPT230SX-TU

Miscellaneous Parts List

		Pickup Unit(Service)(P8)	CXX1285
M	1	Motor Unit(CARRIAGE)	CXB2190
M	2	Motor Unit(LOADING)	CXB2195
M	3	Motor Unit(SPINDLE)	CXB2562