9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

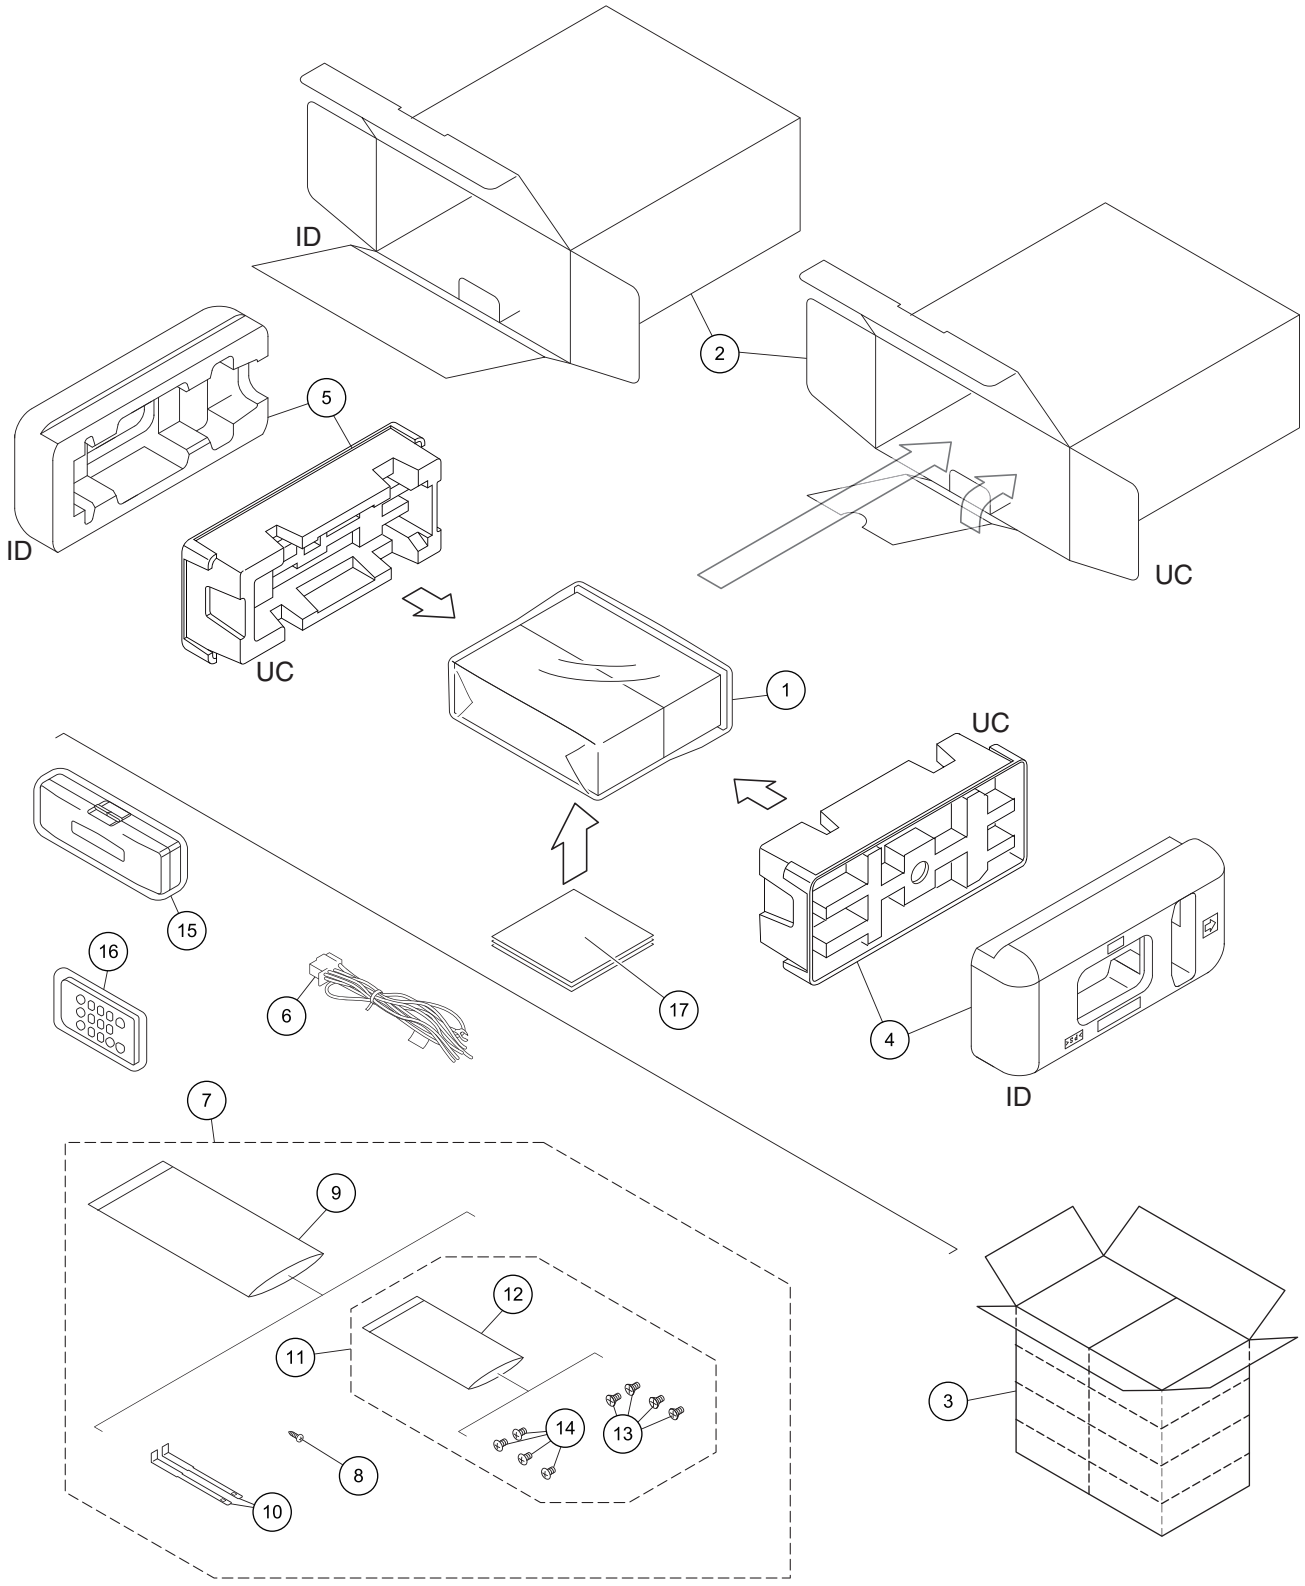

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	See Contrast table (2)
	2	Unit Box	See Contrast table (2)
	3	Contain Box	See Contrast table (2)
	4	Protector	See Contrast table (2)
	5	Protector	See Contrast table (2)
	6	Cord Assy	QDP3013
*	7	Accessory Assy	See Contrast table (2)
	8	Screw	See Contrast table (2)
	9	Polyethylene Bag	CEG1160
	10	Handle	QNC3021
	11	Screw Assy	See Contrast table (2)
*	12	Polyethylene Bag	CEG-127
	13	Screw	See Contrast table (2)
	14	Screw	TRZ50P080FTC
	15	Case Assy	See Contrast table (2)
	16	Remote Control Unit	CXE3669
	17-1	Owner's Manual	See Contrast table (2)
*	17-2	Warranty Card	See Contrast table (2)
*	17-3	Service Network	See Contrast table (2)

(2) CONTRAST TABLE

DEH-23UB/XSUC and DEH-2390UB/XNID are constructed the same except for the following:

Mark	No.	Description	DEH-23UB/XSUC	DEH-2390UB/XNID
	1	Polyethylene Bag	CEG1374	QEG3001
	2	Unit Box	CHG7471	CHG7469
	3	Contain Box	CHL7471	CHL7469
	4	Protector	CHP4103	QHP3016
	5	Protector	CHP4104	QHP3016
*	7	Accessory Assy	QEA3008	QEA3009
	8	Screw	BPZ20P060FTC	Not used
	11	Screw Assy	YEA5072	YEA5082
	13	Screw	CRZ50P090FTC	Not used
	15	Case Assy	Not used	QXA3129
	17-1	Owner's Manual	CRD4529	CRB3476
*	17-2	Warranty Card	CRY1276	CRY1304
*	17-3	Service Network	Not used	CRY1305

Owner's Manual,Installation Manual

Part No.	Language
CRD4529	English, French, Spanish(Espanol)
CRB3476	English

9.2 EXTERIOR

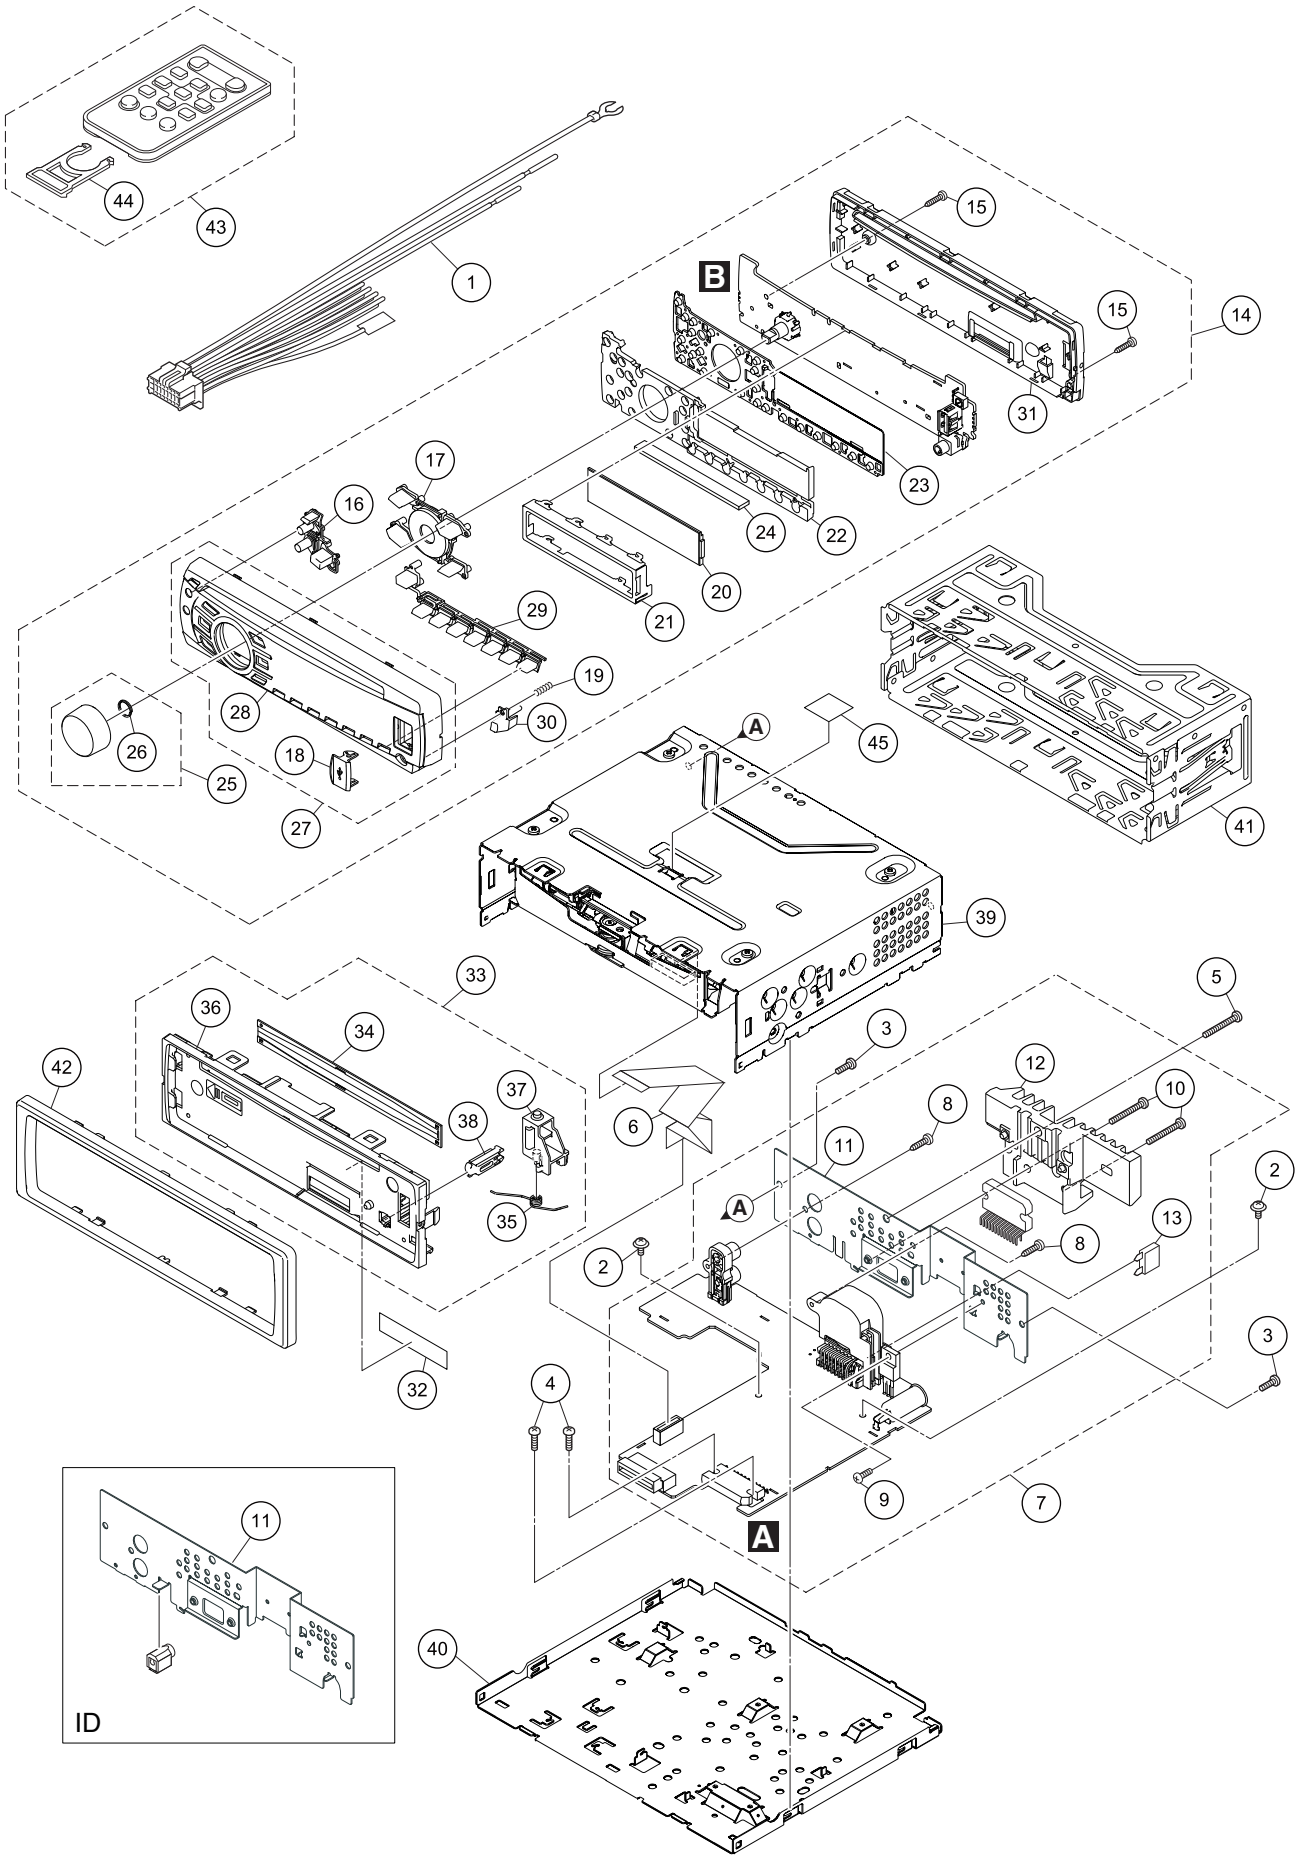
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
A
B
ID

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	QDP3013
	2	Screw	ASZ26P050FTC
	3	Screw	BSZ26P060FTC
	4	Screw	BSZ26P080FTC
	5	Screw	BSZ26P120FTC
	6	Cable	CDE9337
	7	Tuner Amp Unit	See Contrast table (2)
	8	Screw	BPZ26P080FTC
	9	Screw	BSZ26P060FTC
	10	Screw	BSZ26P120FTC
	11	Holder	See Contrast table (2)
	12	Heat Sink	QNR3002
⚠	13	Fuse(10 A)	YEK5001
	14	Detach Grille Assy	See Contrast table (2)
	15	Screw	BPZ20P100FTC
	16	Button(EJECT, SRC, BAND, LEFT)	CAI3203
	17	Button(LIST, RPT, UP, DOWN)	CAI3204
	18	Door	CAT2921
	19	Spring	CBH2210
	20	LCD(V1801)	CAW1998
	21	Holder	See Contrast table (2)
	22	Lighting Conductor	QNV3022
	23	Rubber Contact	QNV3023
	24	Connector	YNV5192
	25	Knob Unit	CXE3692
	26	Spring	YBL5010
	27	Grille Unit	See Contrast table (2)
	28	Grille Unit	See Contrast table (2)
	29	Button(RIGHT, -, 1-6)	QAC3052
	30	Button(DETACH)	QAC3053
	31	Cover	QNS3125
*	32	Seal	See Contrast table (2)
	33	Panel Unit	See Contrast table (2)
	34	Cover	See Contrast table (2)
	35	Spring	QBH3001
	36	Panel	See Contrast table (2)
	37	Arm	See Contrast table (2)
	38	Button	See Contrast table (2)
	39	CD Mechanism Module(S11.1)	CXK5802
	40	Case	QNB3001
	41	Holder	QNC3020
	42	Panel	QNS3127
	43	Remote Control Unit	CXE3669
	44	Cover	CNS7068
	45	Label	See Contrast table (2)

(2) CONTRAST TABLE

DEH-23UB/XSUC and DEH-2390UB/XNID are constructed the same except for the following:

Mark	No.	Description	DEH-23UB/XSUC	DEH-2390UB/XNID
	7	Tuner Amp Unit	CWN5640	CWN5489
	11	Holder	CND5849	CND5847
	14	Detach Grille Assy	CXE3785	CXE3789
	21	Holder	QNC3018	QNC3027
	27	Grille Unit	Not used	CXE3739
	28	Grille Unit	CXE3733	Not used
*	32	Seal	CAN3984	Not used
	33	Panel Unit	CXE3805	*QXA3261(Panel Assy)
	34	Cover	CNN1665	QNM3029
	36	Panel	QNS3126	QNS3126
	37	Arm	QNV3025	QNV3025
	38	Button	QNV3026	QNV3026
	45	Label	Not used	CNN3533

9.3 CD MECHANISM MODULE

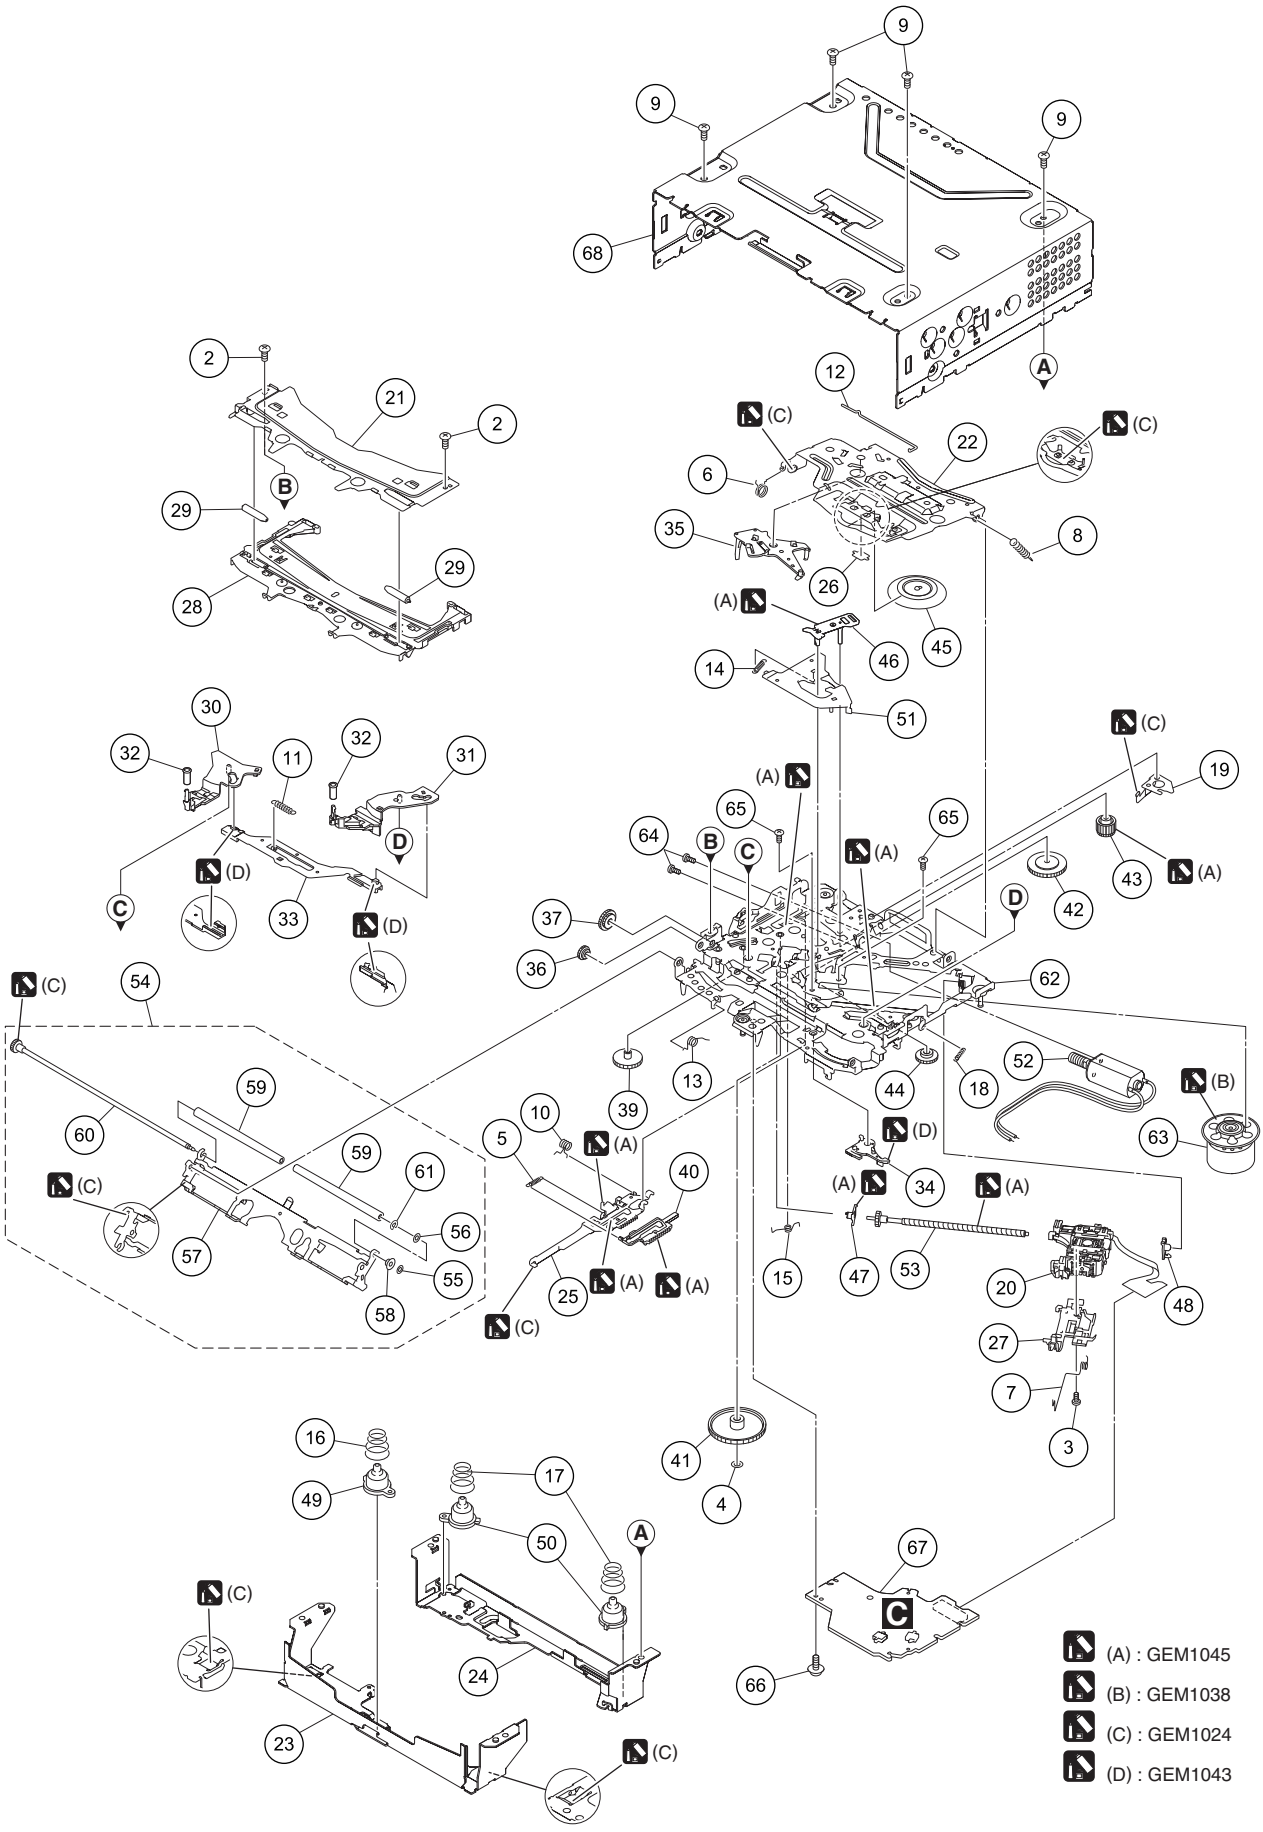

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	.....	
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	Screw	BSZ26P060FTC
10	Spring	CBH3011
11	Spring	CBH3012
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3086
17	Spring	CBH3019
18	.....	
19	Spring	CBL1822
20	Pickup Unit(S10.5)(Service)	CXX1942
21	Bracket	CND4553
22	Arm	CND4555
23	Bracket	CND5709
24	Bracket	CND5710
25	Lever	CND5398
26	Sheet	CNN2280
27	Rack	CNV8342
28	Guide	CNW1171
29	Roller	CNW1172
30	Arm	CNW2157
31	Arm	CNW1174
32	Roller	CNW1175
33	Lever	CNW1176
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	.....	
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW1188
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit(M2)(LOAD/CRG)	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXE3849
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND5886
58	Collar	CNV6906
59	Roller	CNW1196
60	Gear Unit	CXC8893
61	Washer	YE15FTC
62	Chassis Unit	CXE3818
63	Motor Unit(M1)(SPDL)	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	EBA1028
67	CD Core Unit (S11.1STD-DOUT)	CWX3985
68	Chassis	CNA3181

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

A:DEH-23UB/XSUC

B:DEH-2390UB/XNID

Unit Number : CWN5640(A)

: CWN5489(B)

Unit Name : Tuner Amp Unit

Unit Number :

Unit Name : Keyboard Unit

Unit Number : CWX3985

Unit Name : CD Core Unit(S11.1STD-DOUT)

A

Unit Number : CWN5640(A)

: CWN5489(B)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.			Part No.
IC 201	(A,98,112)	IC	PML022A
IC 231	(A,137,60)	D/A Converter	PCM1753DBQ
IC 301	(A,78,142)	IC	PAL007E
IC 401	(A,150,91)	IC	TDA7706
IC 501	(A,41,122)	IC	BD2226G
IC 502	(A,20,114)	IC	BD9008F
IC 601	(A,113,67)	IC	R5S7266ZD144FP
IC 651	(A,92,63)	IC	S-80827CNMC-B8M
IC 671	(A,129,82)	Flash ROM Unit(A)	PEA012A8
	(A,129,82)	Flash ROM Unit(B)	PEA011A8
IC 801	(A,108,25)	L-MOS And Gate	TC7SET08FUS1
IC 912	(A,145,28)	IC	BA49182-V12
Q 251	(A,23,131)	Chip Transistor	RN1910
Q 351	(A,88,127)	Chip Transistor	RN4983
Q 751	(A,142,139)	Transistor	2SD2396
Q 752	(A,137,132)	Chip Transistor	RN4983
Q 872	(A,146,52)	Transistor	LTC114EUB
Q 873	(A,147,58)	Transistor	LSA1576UB
Q 931	(A,118,105)	Transistor	LSC4081UB
D 301	(A,100,127)	Diode	CRG03
D 302	(A,97,127)	Diode	CRG03
D 401	(A,158,106)	Diode	KP2311E
D 402	(A,158,100)	Diode	KP2311E
D 501	(A,29,110)	Diode	RB160L-40
D 502	(A,22,125)	Diode	CRG03
D 601	(A,114,84)	Diode(B)	RB551V-30
D 602	(A,124,51)	Diode(B)	RB751S-40
D 751	(A,141,131)	Diode	RKZ8.2KG(B2)
D 801	(A,114,21)	Diode	DZ2S068C
D 802	(A,116,21)	Diode	DZ2S068C
D 803	(A,117,24)	Diode	DZ2S068C
D 804	(A,120,21)	Diode	DZ2S068C
D 805	(A,119,25)	Diode	DZ2S068C
D 809	(A,99,20)	Diode	DZ2S068C
D 810	(A,109,21)	Diode	DZ2S068C
D 901	(A,139,120)	Diode	1SR154-400
D 902	(A,136,120)	Diode	1SR154-400
D 911	(A,156,65)	Diode	1SR154-400
D 912	(A,160,65)	Diode	1SR154-400
D 931	(A,116,108)	Diode	HZU7L(A1)
L 401	(A,159,103)	Chip Coil	LCTAWR15J2520
L 402	(A,151,101)	Inductor	CTF1786
L 403	(A,146,103)	Inductor	CTF1786
L 404	(A,155,104)	Chip Coil	LCTAWR27J2520
L 405	(A,142,104)	Inductor	CTF1389
L 406	(A,139,101)	Inductor	LCTAW220J2520
L 407	(A,162,96)	Inductor	CTF1786
L 408	(A,162,94)	Inductor	CTF1786
L 409	(A,138,94)	Chip Coil	LCTAW470J2520
L 415	(A,146,81)	Inductor	CTF1786
L 420	(A,145,107)	Inductor(A)	LCYB68NJ1608
L 501	(A,34,110)	Coil	CTH1475
L 671	(A,133,78)	Inductor	CTF1786
L 802	(A,114,26)	Inductor	CTF1713
L 901	(A,112,141)	Choke Coil 600 uH	CTH1432
X 401	(A,161,87)	Oscillator 36.48 MHz	CSS1805
X 601	(A,129,61)	Ceramic Resonator 16.934 MHz	CSS1603
X 602	(A,109,51)	Oscillator 12.000 MHz	YSS5005
⚠ P251	(A,7,129)	Fuse 3 A	CEK1286

Circuit Symbol and No.		Part No.
P 401	(A,155,109) Surge Protector	IMSA-6802-01Y900
CN701	(A,91,39) Connector	VKN1192
CN801	(A,109,4) Connector	CKS6288
JA251	(A,19,138) Pin Jack(A)	YKB5010
	(A,19,138) Pin Jack(B)	CKB1056
JA401	(A,158,129) Antenna Jack	YKS5041
JA901	(A,113,141) Plug	CKM1586
JA961	(A,42,139) Connector(B)	CKS4124
⚠	Fuse(10 A)	YEK5001

RESISTORS

R 201	(A,96,63)	RAB4CQ102J
R 231	(A,142,60)	RS1/16SS821J
R 232	(A,143,60)	RS1/16SS821J
R 251	(A,19,131)	RS1/16SS821J
R 252	(A,29,131)	RS1/16SS821J
R 255	(A,21,131)	RS1/16SS223J
R 256	(A,26,131)	RS1/16SS223J
R 303	(A,86,123)	RS1/16SS103J
R 304	(A,86,125)	RS1/16SS473J
R 351	(A,92,127)	RS1/16SS103J
R 352	(A,90,128)	RS1/16SS103J
R 353	(A,92,128)	RS1/16SS221J
R 401	(A,161,106)	RS1/16SS221J
R 402	(A,161,100)	RS1/16SS751J
R 403	(A,139,103)	RS1/16SS152J
R 405	(A,142,99)	RS1/16SS105J
R 406	(A,138,97)	RS1/16SS471J
R 407	(A,139,96)	RS1/16SS330J
R 408	(A,138,92)	RS1/16SS681J
R 410	(A,136,80)	RS1/4SA8R2J
R 412	(A,137,85)	RS1/4SA8R2J
R 413	(A,145,108)	RS1/16SS105J
R 419	(A,132,72)	RS1/16SS103J
R 420	(A,133,72)	RS1/16SS103J
R 421	(A,153,80)	RS1/16SS0R0J
R 427	(A,142,84)	RS1/16SS102J
R 428	(A,139,87)	RS1/16SS0R0J
R 501	(A,22,120)	RS1/10SR471J
R 502	(A,23,117)	RS1/16SS4702F
R 503	(A,21,117)	RS1/16SS682J
R 504	(A,20,120)	RS1/16SS1002F
R 505	(A,26,113)	RS1/16SS183J
R 506	(A,15,114)	RS1/16SS513J
R 508	(A,95,67)	RS1/16SS103J
R 561	(A,119,84)	RS1/16SS103J
R 562	(A,118,80)	RS1/16SS473J
R 601	(A,112,85)	RS1/16SS103J
R 602	(A,109,82)	RS1/16SS473J
R 603	(A,111,85)	RS1/16SS104J
R 604	(A,98,81)	RAB4CQ473J
R 606	(A,100,78)	RS1/16SS473J
R 607	(A,100,73)	RS1/16SS473J
R 608	(A,97,73)	RS1/16SS473J
R 609	(A,127,69)	RS1/16SS101J
R 610	(A,100,67)	RS1/16SS222J
R 611	(A,132,69)	RS1/16SS101J
R 612	(A,98,79)	RS1/16SS473J
R 613	(A,132,68)	RS1/16SS101J
R 615	(A,98,64)	RS1/16SS104J
R 617	(A,127,65)	RS1/16SS221J
R 619	(A,130,57)	RAB4CQ473J
R 620	(A,99,60)	RS1/16SS473J
R 621	(A,125,54)	RS1/16SS473J
R 622	(A,103,50)	RS1/16SS473J
R 623	(A,108,54)	RS1/16SS152J
R 624	(A,103,52)	RS1/16SS473J
R 626	(A,116,53)	RS1/16SS5601F
R 628	(A,123,53)	RS1/16SS103J
R 629	(A,97,58)	RS1/16SS102J
R 630	(A,122,49)	RS1/16SS473J
R 632	(A,117,47)	RS1/16SS103J
R 633	(A,119,45)	RS1/16SS101J
R 636	(A,103,53)	RS1/16SS473J
R 638	(A,123,32)	RS1/16SS0R0J
R 651	(A,91,60)	RS1/16SS104J
R 671	(A,133,83)	RS1/10SR473J
R 672	(A,129,88)	RS1/10SR473J
R 691	(A,92,22)	RS1/10SR222J
R 701	(A,95,45)	RS1/16SS473J
R 702	(A,95,39)	RS1/16SS104J
R 703	(A,97,41)	RS1/16SS104J
R 704	(A,96,49)	RAB4CQ472J
R 707	(A,95,46)	RS1/16SS221J
R 708	(A,95,44)	RS1/16SS221J
R 709	(A,95,43)	RS1/16SS101J
R 710	(A,95,42)	RS1/16SS221J
R 711	(A,95,41)	RS1/16SS101J
R 712	(A,95,40)	RS1/16SS102J
R 713	(A,96,37)	RS1/16SS151J
R 714	(A,96,36)	RS1/16SS151J
R 715	(A,96,35)	RS1/16SS151J
R 716	(A,95,31)	RS1/16SS221J
R 717	(A,95,32)	RS1/16SS104J
R 751	(A,95,47)	RS1/16SS473J
R 752	(A,97,47)	RS1/16SS103J
R 753	(A,139,134)	RS1/10SR821J
R 801	(A,117,30)	RS1/10SR101J
R 802	(A,119,30)	RS1/10SR101J
R 806	(A,105,25)	RS1/10SR222J
R 807	(A,108,21)	RS1/10SR222J
R 808	(A,103,24)	RS1/16SS822J
R 809	(A,113,29)	RS1/10SR8R2J
R 810	(A,115,29)	RS1/10SR8R2J
R 811	(A,122,26)	RS1/10SR222J
R 812	(A,102,25)	RS1/10SR222J
R 813	(A,100,25)	RS1/10SR222J
R 819	(A,105,12)	RS1/10SR0R0J
R 820	(A,118,30)	RS1/10SR101J
R 821	(A,120,28)	RS1/16SS223J
R 822	(A,117,27)	RS1/16SS223J
R 823	(A,124,7)	RS1/10SR222J
R 851	(A,98,23)	RS1/16SS472J
R 872	(A,125,28)	RS1/10SR473J
R 873	(A,148,53)	RS1/16SS562J
R 874	(A,148,55)	RS1/16SS103J
R 911	(A,141,41)	RS1/10SR1R0J
R 912	(A,144,42)	RS1/10SR1R0J
R 931	(A,121,106)	RS1/16SS223J
R 932	(A,118,107)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 933	(A,115,106)	RS1/16SS472J
R 934	(A,115,114)	RS1/4SA102J
R 961	(A,50,134) (B)	RS1/16SS102J
R 962	(A,48,134) (B)	RS1/16SS102J

CAPACITORS

C 201	(A,106,108) 10 uF	CCG1192
C 202	(A,100,106)	CCSSCH100D50
C 203	(A,103,108) 4.7 uF	CCG1201
C 204	(A,100,107)	CCSSCH100D50
C 205	(A,94,106)	CKSRYB105K10
C 206	(A,94,118)	CKSRYB105K10
C 207	(A,97,106)	CKSRYB105K10
C 208	(A,96,119)	CKSRYB105K10
C 209	(A,98,106)	CKSRYB105K10
C 210	(A,98,119)	CKSRYB105K10
C 211	(A,95,106)	CKSSYB224K6R3
C 212	(A,95,119)	CKSSYB224K6R3
C 215	(A,102,108)	CCSSCH100D50
C 232	(A,138,56)	CKSSYB103K16
C 233	(A,139,55) 10 uF	CCG1192
C 234	(A,138,66) 10 uF	CCG1192
C 237	(A,142,62)	CCSRCH182J50
C 238	(A,143,64)	CCSRCH182J50
C 239	(A,141,60)	CKSSYB102K50
C 251	(A,31,129) 4.7 uF	CCG1201
C 252	(A,35,131) 4.7 uF	CCG1201
C 255	(A,20,130)	CCSSCH101J50
C 256	(A,28,131)	CCSSCH101J50
C 259	(A,35,139)	CKSSYB102K50
C 301	(A,74,128)	CKSRYB474K10
C 302	(A,81,128)	CKSRYB474K10
C 303	(A,76,128)	CKSRYB474K10
C 304	(A,80,128)	CKSRYB474K10
C 305	(A,74,132)	CKSRYB474K10
C 306	(A,81,132)	CKSRYB474K10
C 307	(A,76,132)	CKSRYB474K10
C 308	(A,79,132)	CKSRYB474K10
C 309	(A,137,135)	CKSRYB104K16
C 310	(A,82,129) 2.2 uF	CCG1205
C 311	(A,82,131) 2.2 uF	CCG1205
C 312	(A,98,128)	CKSRYB104K16
C 313	(A,67,128)	CEVW100M16
C 314	(A,61,135)	CCSSCH100D50
C 315	(A,84,129)	CCSSCH100D50
C 317	(A,62,136)	CCSSCK1R0C50
C 318	(A,107,129)	CCSRCH100D50
C 319	(A,103,129)	CCSRCH100D50
C 320	(A,96,133)	CCSRCH100D50
C 321	(A,92,137)	CCSRCH100D50
C 351	(A,94,127) 10 uF	CCG1192
C 401	(A,155,107)	CCSSCH330J50
C 402	(A,158,105)	CCSSCH6R0D50
C 403	(A,161,105)	CKSSYB103K16
C 404	(A,150,100)	CKSSYB104K10
C 405	(A,147,100)	CKSSYB104K10
C 406	(A,160,101)	CKSSYB103K16
C 407	(A,148,100)	CKSSYB104K10
C 409	(A,162,101)	CKSSYB103K16

Circuit Symbol and No.		Part No.
C 410	(A,148,99)	CKSSYB103K16
C 411	(A,145,100)	CKSSYB103K16
C 412	(A,144,101) 10 uF	CCG1192
C 413	(A,155,101)	CKSSYB103K16
C 414	(A,152,102)	CKSRYB105K10
C 415	(A,140,99)	CKSSYB103K16
C 416	(A,159,96)	CKSRYB224K16
C 417	(A,160,96)	CKSSYB104K10
C 418	(A,138,98) 10 uF	CCG1192
C 419	(A,158,93)	CKSRYB105K10
C 420	(A,140,97)	CKSSYB104K10
C 421	(A,137,96)	CCSSCH101J50
C 422	(A,143,98)	CKSSYB104K10
C 423	(A,136,96)	CKSSYB103K16
C 424	(A,162,92)	CKSSYB472K25
C 425	(A,162,93)	CKSSYB472K25
C 426	(A,158,91)	CKSSYB104K10
C 427	(A,138,91)	CCSSCH820J50
C 428	(A,161,90)	CCSSCH9R0D50
C 429	(A,161,85)	CCSSCH9R0D50
C 430	(A,139,85)	CKSRYB474K10
C 431	(A,158,84)	CKSSYB104K10
C 437	(A,156,82)	CKSSYB104K10
C 440	(A,147,83)	CKSSYB104K10
C 441	(A,152,82) 2.2 uF	CCG1205
C 443	(A,145,104) (B)	CKSSYB103K16
C 445	(A,142,101)	CKSSYB223K16
C 447	(A,142,86)	CKSSYB102K50
C 451	(A,142,103) (A)	CCSSCJ3R0C50
C 452	(A,134,91) (A)	CKSSYB102K50
C 455	(A,137,89) (A)	CCSSCH100D50
C 501	(A,38,122)	CKSRYB105K10
C 503	(A,32,120)	CEVQW221M6R3
C 504	(A,44,123)	CKSRYB105K10
C 505	(A,12,121)	CEJQ221M16
C 506	(A,27,113)	CKSSYB153K16
C 508	(A,25,114)	CCSSCH220J50
C 509	(A,24,110)	CKSRYB105K16
C 601	(A,116,80)	CKSSYB104K10
C 602	(A,113,80)	CKSSYB104K10
C 603	(A,109,80)	CKSSYB104K10
C 604	(A,99,76)	CKSSYB104K10
C 605	(A,126,74)	CKSSYB104K10
C 606	(A,100,75)	CKSSYB104K10
C 607	(A,128,73)	CKSSYB104K10
C 608	(A,100,71)	CKSSYB104K10
C 609	(A,127,70)	CKSSYB104K10
C 610	(A,100,69)	CKSSYB104K10
C 612	(A,130,69)	CKSSYB104K10
C 616	(A,100,64)	CKSSYB104K10
C 617	(A,129,65)	CCSSCH100D50
C 618	(A,99,63)	CKSSYB104K10
C 619	(A,127,64)	CKSSYB104K10
C 620	(A,132,61)	CKSSYB104K10
C 621	(A,100,60)	CKSSYB104K10
C 622	(A,124,53)	CKSSYB104K10
C 623	(A,119,53)	CKSSYB104K10
C 624	(A,118,52)	CKSSYB104K10
C 625	(A,117,53)	CKSSYB104K10
C 626	(A,115,53)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 627	(A,113,52)	CKSSYB104K10
C 628	(A,109,54)	CKSSYB104K10
C 629	(A,104,54)	CKSSYB104K10
C 630	(A,123,54)	CKSSYB104K10
C 632	(A,110,49)	CCSSCH120J50
C 633	(A,108,49)	CCSSCH120J50
C 638	(A,117,45)	CKSRYB105K10
C 651	(A,95,60)	CKSRYB105K10
C 671	(A,133,81)	CKSSYB104K10
C 701	(A,98,41)	CKSSYB103K16
C 707	(A,88,30)	CKSSYB102K50
C 708	(A,87,32)	CKSRYB105K10
C 751	(A,142,127) 10 uF	CCG1192
C 754	(A,140,130)	CKSSYB104K10
C 807	(A,106,21)	CKSRYB104K16
C 808	(A,94,24)	CKSRYB104K16
C 809	(A,122,21)	CKSRYB104K16
C 810	(A,103,21)	CCSRCH221J50
C 811	(A,101,21)	CCSRCH221J50
C 812	(A,120,26)	CKSRYB105K16
C 817	(A,110,28)	CKSSYB104K10
C 818	(A,125,10)	CKSQYB102K50
C 820	(A,105,21)	CCSRCH221J50
C 871	(A,124,26)	CKSRYB104K16
C 901	(A,133,125) 3 300 uF/16 V	CCH1732
C 913	(A,140,40)	CKSSYB102K50
C 914	(A,141,44) 4.7 uF	CCG1201
C 916	(A,150,43) 4.7 uF	CCG1201
C 917	(A,138,41) 4.7 uF	CCG1201
C 918	(A,153,42) 4.7 uF	CCG1201
C 919	(A,145,40)	CKSSYB102K50
C 920	(A,147,42) 4.7 uF	CCG1201
C 921	(A,133,40)	CKSRYB104K16
C 922	(A,155,52)	CEAT102M16(P30)
C 923	(A,154,40)	CKSSYB102K50
C 926	(A,133,41)	CKSRYB102K50
C 931	(A,114,105)	CKSRYB104K16
C 961	(A,48,138) (B)	CKSSYB104K16
C 962	(A,50,138) (B)	CKSSYB104K16

B

Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,88,24) IC	PD6340A
IC 1802	(A,160,35) Remote IC	GP1UXC14RK
D 1868	(A,11,42) LED(RED)	SML-D12V8W(PQ)
D 1869	(A,6,35) LED(RED)	SML-D12V8W(PQ)
D 1870	(A,7,22) LED(RED)	SML-D12V8W(PQ)
D 1871	(A,22,10) LED(RED)	SML-D12V8W(PQ)
D 1872	(A,18,21) LED(RED)	SML-D12V8W(PQ)
D 1873	(A,25,32) LED(RED)	SML-D12V8W(PQ)
D 1874	(A,55,8) LED(RED)	SML-D12V8W(PQ)
D 1875	(A,60,19) LED(RED)	SML-D12V8W(PQ)
D 1876	(A,54,29) LED(RED)	SML-D12V8W(PQ)
D 1877	(A,71,6) LED(RED)	SML-D12V8W(PQ)
D 1878	(A,83,6) LED(RED)	SML-D12V8W(PQ)
D 1879	(A,95,6) LED(RED)	SML-D12V8W(PQ)
D 1880	(A,143,9) LED(RED)	SML-D12V8W(PQ)

Circuit Symbol and No.		Part No.
D 1881	(A,131,8) LED(RED)	SML-D12V8W(PQ)
D 1882	(A,119,8) LED(RED)	SML-D12V8W(PQ)
D 1883	(A,107,7) LED(RED)	SML-D12V8W(PQ)
D 1913	(A,69,23) White LED	SMLXA4WBETW1(Z1)
X 1801	(B,76,22) Ceramic Resonator 5.00 MHz	CSS1547
S 1845	(A,39,19) Encoder(MULTI-CONTROL)	CSD1168
CN1821	(B,108,10) Connector	CKS6287
CN1901	(A,154,7) Jack(A)	YKN5001
	(A,154,7) Jack(B)	CKN1082
CN1911	(A,155,22) Connector(A)	CKS6266
	(A,155,22) Connector(B)	CKS6267
V 1801	(A,143,32) LCD	CAW1998

RESISTORS

R 1804	(B,147,30)	RS1/10SR101J
R 1805	(B,74,18)	RS1/10SR222J
R 1806	(B,73,16)	RS1/10SR222J
R 1822	(B,55,28)	RS1/10SR273J
R 1823	(A,146,4)	RS1/10SR0R0J
R 1824	(B,25,20)	RS1/10SR0R0J
R 1880	(B,56,20)	RS1/4SA271J
R 1888	(B,61,26)	RS1/10SR0R0J
R 1894	(B,17,19)	RS1/10SR272J
R 1895	(B,56,12)	RS1/10SR272J
R 1896	(B,139,20)	RS1/10SR272J
R 1897	(B,16,13)	RS1/10SR272J
R 1898	(B,48,6)	RS1/10SR102J
R 1899	(B,61,13)	RS1/4SA271J

CAPACITORS

C 1801	(B,149,33) 10 uF	CCG1192
C 1802	(B,98,24)	CKSRYB105K10

C

Unit Number : CWX3985
Unit Name : CD Core Unit(S11.1STD-DOUT)

MISCELLANEOUS

IC 201	(A,28,33) IC	PE5756A
IC 301	(A,64,27) IC	BA5839FP
Q 101	(B,8,56) Transistor	2SA1577
Q 102	(B,21,51) Chip Digital Transistor	LTA123JUB
X 201	(A,15,27) Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,42,53) Switch(HOME)	CSN1080
S 903	(B,21,12) Switch(DSCSNS)	CSN1081
CN101	(A,16,58) Connector	CKS4808
CN701	(A,37,10) Connector	CKS6146

RESISTORS

R 101	(B,6,59)	RS1/10SR2R4J
R 102	(B,7,59)	RS1/10SR2R4J
R 103	(B,8,59)	RS1/10SR2R7J
R 108	(B,19,53)	RS1/16SS105J
R 109	(B,11,52)	RS1/16SS222J
R 214	(A,38,41)	RS1/16SS103J
R 215	(A,38,40)	RS1/16SS393J

Circuit Symbol and No.		Part No.
R 216	(A,30,44)	RS1/16SS122J
R 217	(A,33,46)	RS1/16SS562J
R 218	(A,30,46)	RS1/16SS472J
R 225	(A,33,23)	RS1/16SS0R0J
R 229	(A,31,44)	RS1/16SS471J
R 232	(A,19,21)	RS1/16SS0R0J
R 235	(A,45,32)	RS1/16SS103J
R 236	(A,46,32)	RS1/16SS103J
R 237	(B,24,25)	RS1/16SS221J
R 240	(B,26,30)	RS1/16SS473J
R 245	(B,28,30)	RS1/16SS104J
R 254	(B,29,30)	RS1/16SS104J
R 260	(B,41,21)	RS1/16SS103J
R 262	(A,44,32)	RS1/16SS472J
R 263	(A,47,32)	RS1/16SS472J
R 264	(A,44,25)	RS1/16SS102J
R 281	(A,31,22)	RS1/16SS560J
R 282	(A,30,22)	RS1/16SS560J
R 283	(B,32,18)	RS1/16SS0R0J
R 291	(B,31,17)	RS1/16SS560J
R 292	(B,32,16)	RS1/16SS0R0J
R 293	(B,32,11)	RS1/16SS0R0J
R 294	(A,18,28)	RS1/16SS471J
R 296	(B,32,30)	RS1/16SS0R0J
R 299	(B,31,13)	RS1/16SS0R0J
R 305	(A,60,34)	RS1/16SS183J
R 306	(A,61,37)	RS1/16SS183J
R 307	(A,58,34)	RS1/16SS183J
R 308	(A,58,36)	RS1/16SS183J
R 701	(B,37,21)	RS1/16SS101J
R 702	(B,38,20)	RS1/16SS101J
R 706	(B,43,11)	RS1/16SS221J
R 708	(A,40,22)	RS1/16SS0R0J
R 709	(A,40,21)	RS1/16SS0R0J
R 722	(B,37,22)	RS1/16SS0R0J

CAPACITORS

C 104	(B,11,55)	CKSQYB475K6R3
C 203	(A,18,35)	CKSSYB104K10
C 209	(A,17,28)	CKSRYB104K16
C 210	(A,21,21)	CKSSYB104K10
C 211	(A,24,23)	CKSSYB104K10
C 212	(A,38,33)	CKSSYB104K10
C 213	(A,40,41)	CKSSYB332K50
C 214	(A,40,40)	CKSSYB473K10
C 215	(A,38,37)	CKSSYB104K10
C 216	(A,36,46)	CKSSYB182K50
C 217	(A,31,46)	CCSSCH560J50
C 218	(A,29,46)	CCSSCH4R0C50
C 219	(A,32,43)	CKSSYB104K10
C 220	(B,32,41)	CKSSYB104K10
C 221	(A,35,43)	CKSSYB104K10
C 222	(A,29,43)	CKSSYB104K10
C 223	(A,25,44)	CCSSCH680J50
C 224	(A,23,44)	CCSSCH470J50
C 225	(A,20,43)	CKSSYB103K16
C 228	(A,32,46)	CCSSCH270J50
C 229	(B,28,40)	CKSSYB104K10
C 231	(B,44,28)	CKSSYB102K50
C 232	(B,45,28)	CKSSYB102K50
C 233	(B,25,25)	CKSSYB103K16
C 236	(B,26,41)	CKSSYB104K10
C 238	(A,15,35)	CKSRYB104K16
C 299	(A,17,33)	CKSSYB104K10
C 304	(A,60,35)	CKSSYB472K25
C 305	(A,58,35)	CKSSYB223K16
C 306	(A,68,20)	CKSRYB105K10
C 710	(B,43,10)	CKSSYB102K50

Miscellaneous Parts List

M 1	Motor Unit(SPDL)	CXE2273
M 2	Motor Unit(LOAD/CRG)	CXC4026
	Pickup Unit(S10.5)(Service)	CXX1942