9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

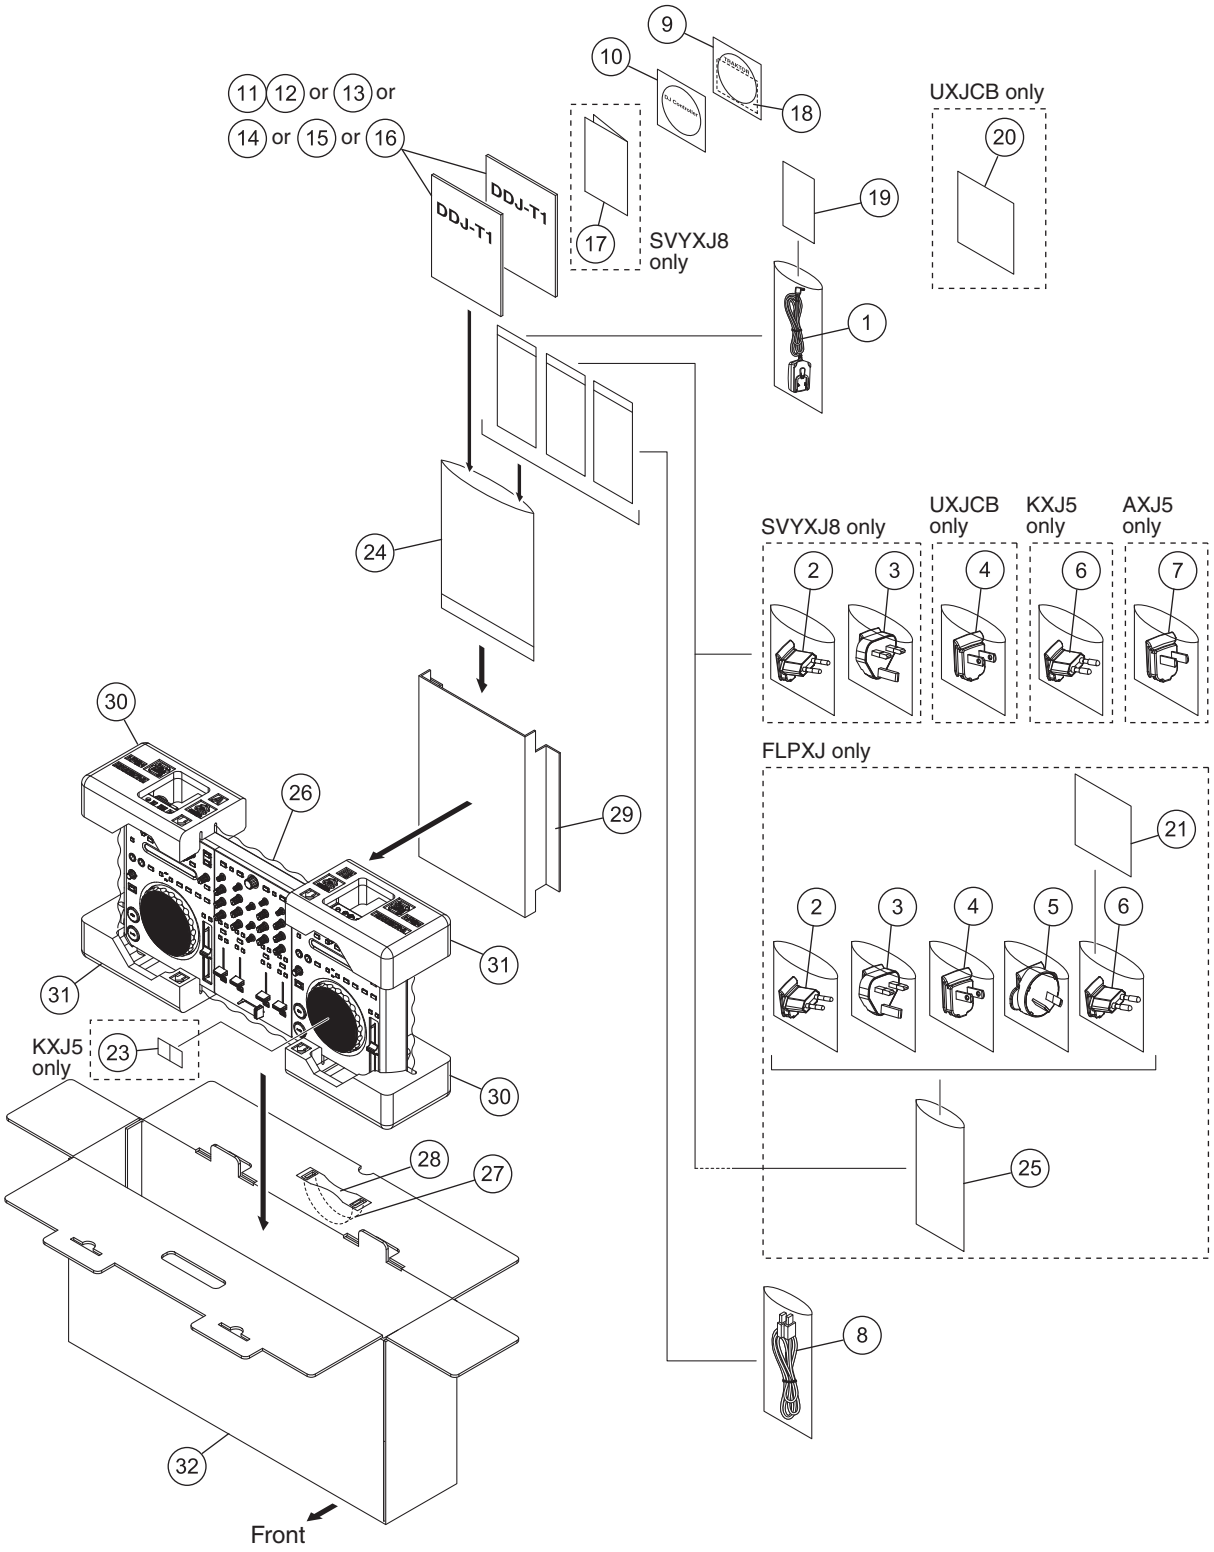

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	AC Adapter	DWR1491
⚠	2	Power Plug (EU)	See Contrast table (2)
⚠	3	Power Plug (UK)	See Contrast table (2)
⚠	4	Power Plug (US)	See Contrast table (2)
⚠	5	Power Plug (AUS)	See Contrast table (2)
⚠	6	Power Plug (KOR)	See Contrast table (2)
⚠	7	Power Plug (CHI)	See Contrast table (2)
	8	USB Cable	DDE1140
	9	TRAKTOR Pioneer DDJ-T1 EDITION software CD-ROM	DXX2665
	10	Driver software CD-ROM	DXX2666
	11	Operating Instructions	See Contrast table (2)
	12	Operating Instructions	See Contrast table (2)
	13	Operating Instructions	See Contrast table (2)
	14	Operating Instructions	See Contrast table (2)
	15	Operating Instructions	See Contrast table (2)
	16	Operating Instructions	See Contrast table (2)
NSP	17	Warranty Card	See Contrast table (2)
NSP	18	License Key Label AS	DXA2242
	19	Caution Card/ADP	DRM1345
	20	Caution Card/CU	See Contrast table (2)
	21	Caution Card/PLG	See Contrast table (2)
	22	•••••	
	23	Recycle Label (M)	See Contrast table (2)
NSP	24	Polyethylene Bag	AHG7117
	25	Vinyl Bag	See Contrast table (2)
	26	Packing Sheet	RHC1023
	27	Plastic Handle (PE)	VEC2292
	28	Spacer (PE)	VEC2293
	29	Accessory Pad	DHA1875
	30	Pad A	DHA1871
	31	Pad B	DHA1872
	32	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-T1/SVYXJ8, UXJCB, FLPXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-T1/SVYXJ8	DDJ-T1/UXJCB	DDJ-T1/FLPXJ	DDJ-T1/KXJ5	DDJ-T1/AXJ5
⚠	2	Power Plug (EU)	DKX1048	Not used	DKX1048	Not used	Not used
⚠	3	Power Plug (UK)	DKX1049	Not used	DKX1049	Not used	Not used
⚠	4	Power Plug (US)	Not used	DKX1047	DKX1047	Not used	Not used
⚠	5	Power Plug (AUS)	Not used	Not used	DKX1050	Not used	Not used
⚠	6	Power Plug (KOR)	Not used	Not used	DKX1051	DKX1051	Not used
⚠	7	Power Plug (CHI)	Not used	Not used	Not used	Not used	DKX1052
	11	Operating Instructions (En/Fr/De)	DRB1537	Not used	Not used	Not used	Not used
	12	Operating Instructions (It/Nl/Es/Ru)	DRB1563	Not used	Not used	Not used	Not used
	13	Operating Instructions (En)	Not used	DRB1536	Not used	Not used	Not used
	14	Operating Instructions (En/Es/Zhtw)	Not used	Not used	DRB1539	Not used	Not used
	15	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1541	Not used
	16	Operating Instructions (Zhcn/En)	Not used	Not used	Not used	Not used	DRB1540
NSP	17	Warranty Card	ARY7107	Not used	Not used	Not used	Not used
	20	Caution Card/CU	Not used	DRM1353	Not used	Not used	Not used
	21	Caution Card/PLG	Not used	Not used	DRM1346	Not used	Not used
	23	Recycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
	25	Vinyl Bag	Not used	Not used	Z21-013	Not used	Not used
	32	Packing Case	DHG3055	DHG3056	DHG3057	DHG2987	DHG2985

9.2 EXTERIOR SECION

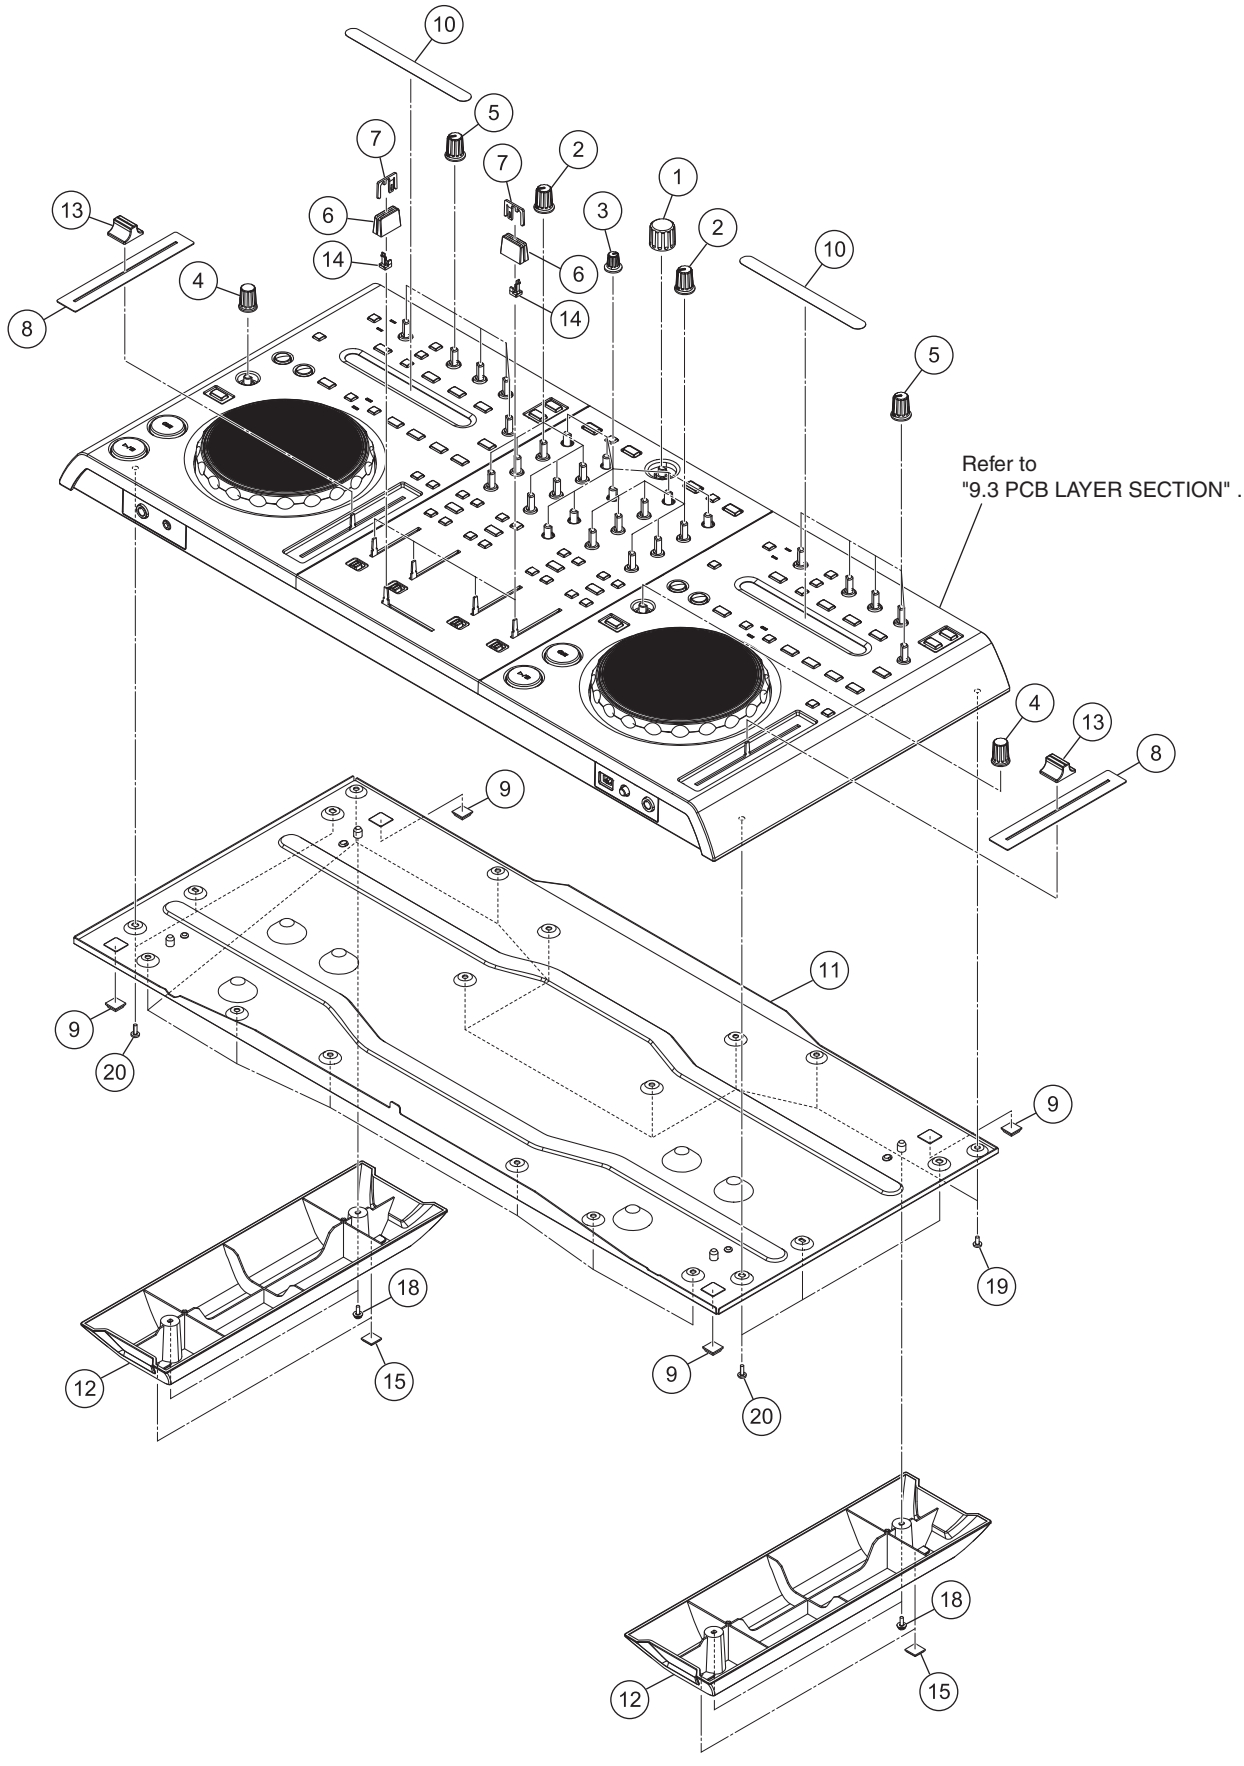

(1) EXTERIOR SECION SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Dial Knob	DAA1259
	2	Rotary Knob L (Black)	DAA1261
	3	Rotary Knob S (Black)	DAA1262
	4	Dial Knob S	DAA1264
	5	Rotary Knob L (Gray)	DAA1267
	6	Slider Knob 1	DAC2684
	7	Slider Knob 2	DAC2685
	8	Slide Sheet	DAH2836
	9	Rubber Foot (H6)	DEB1996
	10	CDC Sheet	DEC3354
	11	Chassis	See Contrast table (2)
	12	Foot	DNK5864
	13	Slide Knob (Metal)	DNK5876
	14	Slider Knob Stopper	DNK5888
	15	Rubber Foot	VEB1349
	16	•••••	
	17	•••••	
	18	Screw	PMB30P080FTB
	19	Screw	BBZ30P060FTC
	20	Screw	BPZ30P080FNI

(2) CONTRAST TABLE

DDJ-T1/SVYXJ8, UXJCB, FLPXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-T1/SVYXJ8	DDJ-T1/UXJCB	DDJ-T1/FLPXJ	DDJ-T1/KXJ5	DDJ-T1/AXJ5
	11	Chassis	DNA1419	DNA1414	DNA1415	DNA1416	DNA1416

9.3 PCB LAYER SECION

• Bottom view

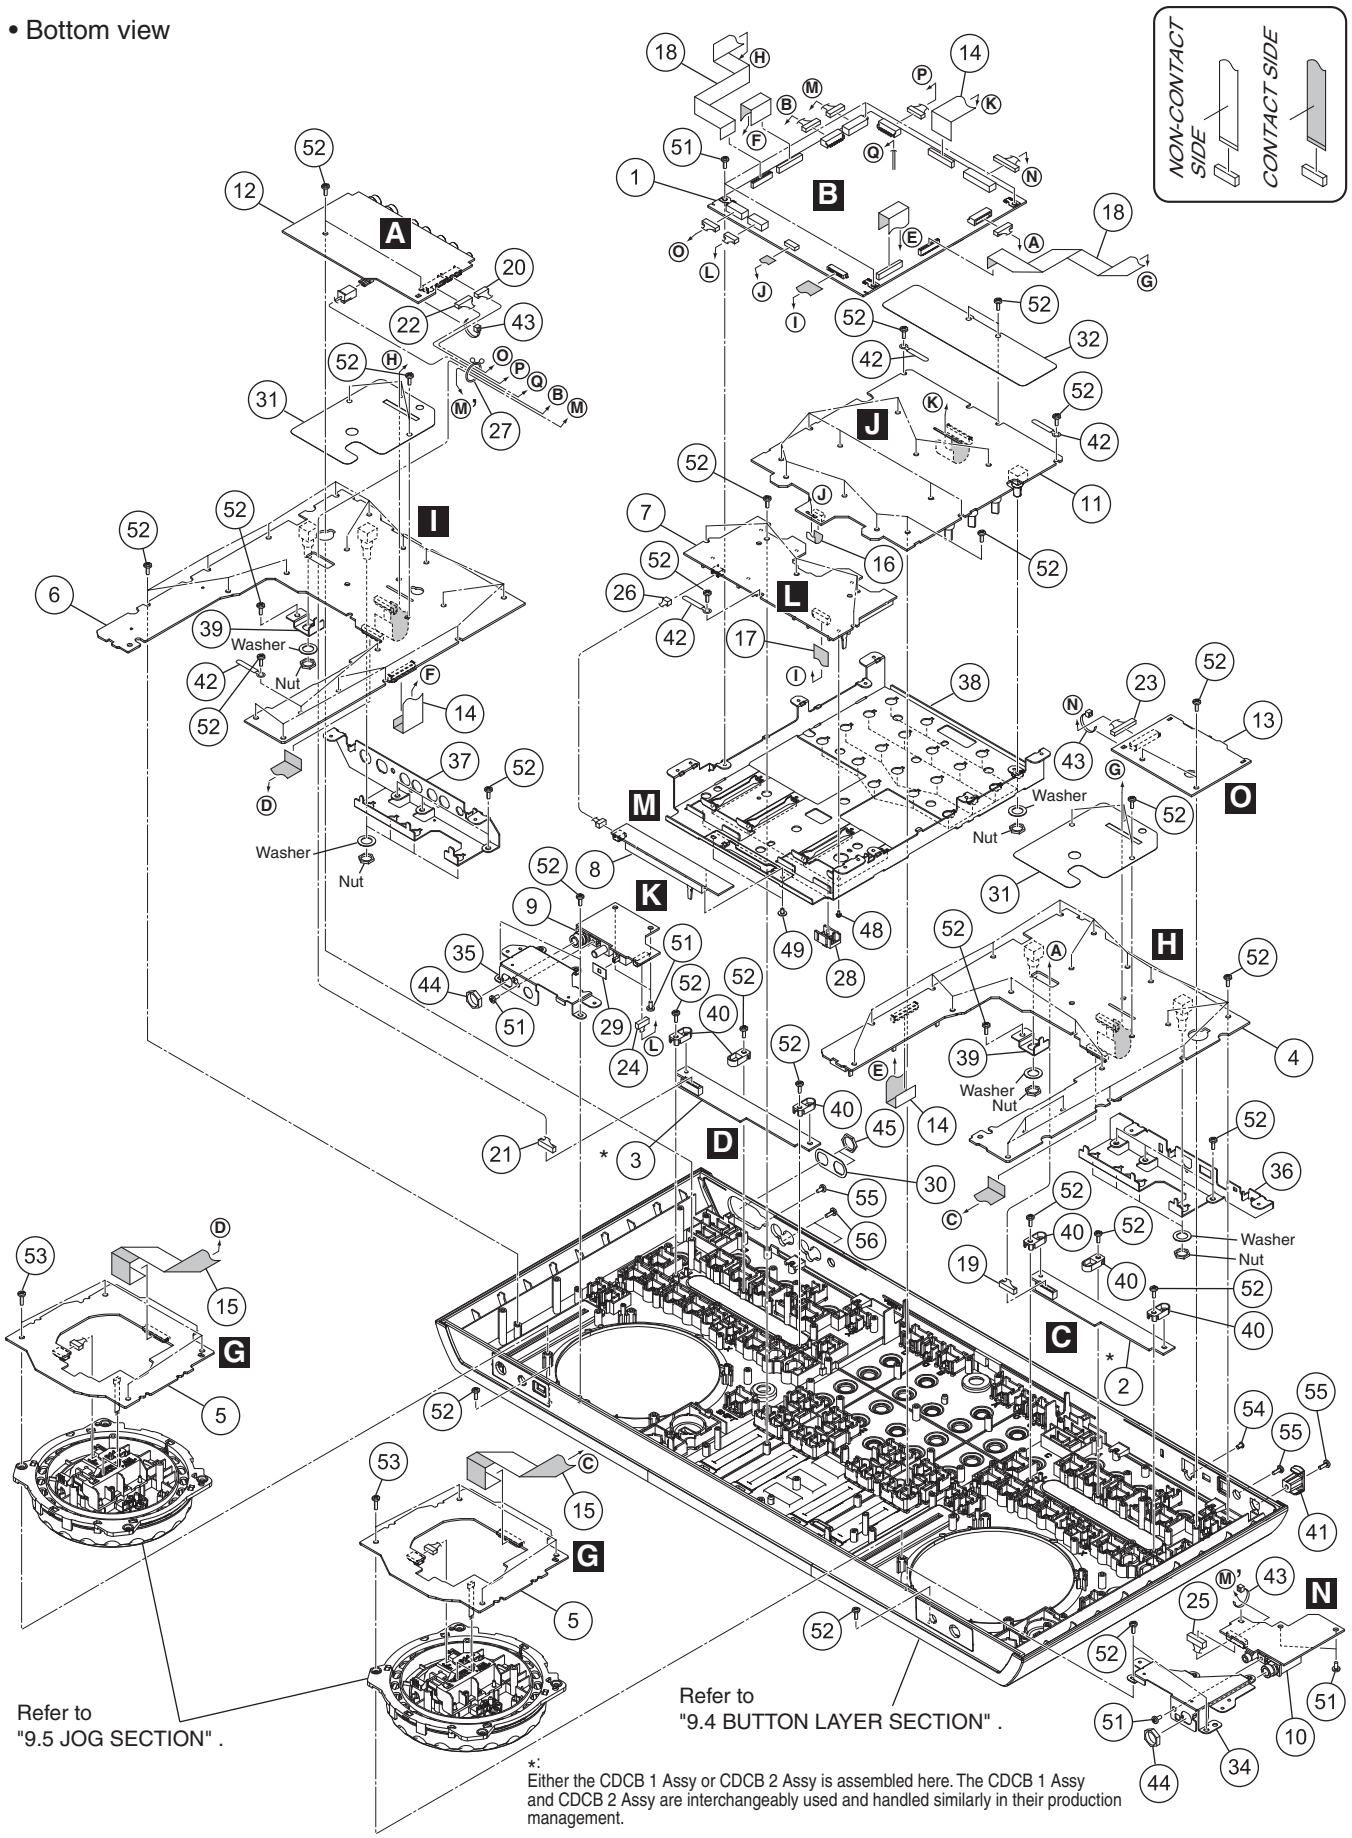

*:
Either the CDCB 1 Assy or CDCB 2 Assy is assembled here. The CDCB 1 Assy and CDCB 2 Assy are interchangeably used and handled similarly in their production management.

PCB LAYER SECTION PARTS LIST

Mark No.	Description	Part No.
1	UCOM Assy	DWX3209
2	CDCB 1 Assy	DWX3210
3	CDCB 2 Assy	DWX3224
4	CDJ1B Assy	DWS1430
5	LEDB Assy	DWS1434
6	CDJ2B Assy	DWS1431
7	CHFD Assy	DWX3212
8	CRFD Assy	DWX3213
9	MICB Assy	DWX3215
10	HPJK Assy	DWX3216
11	DJMB Assy	DWX3211
12	JACB Assy	DWX3214
13	USBB Assy	DWX3222
14	25P FFC	DDD1543
15	19P FFC	DDD1545
16	8P FFC	DDD1547
17	15P FFC	DDD1548
18	FFC/20P	DDD1561
19	Crimp Connector	DKP3894
20	Crimp Connector	DKP3897
21	Crimp Connector	DKP3900
22	Crimp Connector	DKP3920
23	Crimp Connector	DKP3921
24	Crimp Connector	DKP3922
25	Crimp Connector	DKP3923
26	Connector Assy	PF03PP-C06
27	Clamper	CNV3477
28	Cap/FDR	DAC2771
29	Slide SW Packing (B)	DEC2590
30	Phone Spacer	DEC2914
31	FFC Guard 1	DEC3362
32	FFC Guard M	DEC3364
33	•••••	
34	Front Stay L	DNH2959
35	Front Stay R	DNH2960
36	Rear Stay L	DNH2961
37	Rear Stay R	DNH2962
38	VR Stay L	DNH2963
39	VR Stay S	DNH2964
40	CDC Stopper	DNK5863
41	Cord Hook	DNK5928
42	Cord Clamper (Steel)	RNH-184
43	Binder	ZCA-SKB90BK
44	Nut M12	DBN1018
45	Nut	NKX2FTC

Mark No.	Description	Part No.
46	•••••	
47	•••••	
48	Screw	PMH20P040FTC
49	Screw	IMZ30P040FTC
50	•••••	
51	Screw	BBZ30P060FTC
52	Screw	BPZ30P080FNI
53	Screw	BPZ30P100FTB
54	Screw (M3x5)	DBA1340
55	Screw	BBZ30P060FTB
56	Screw	BPZ30P080FTB

9.4 BUTTON LAYER SECION

• Bottom view

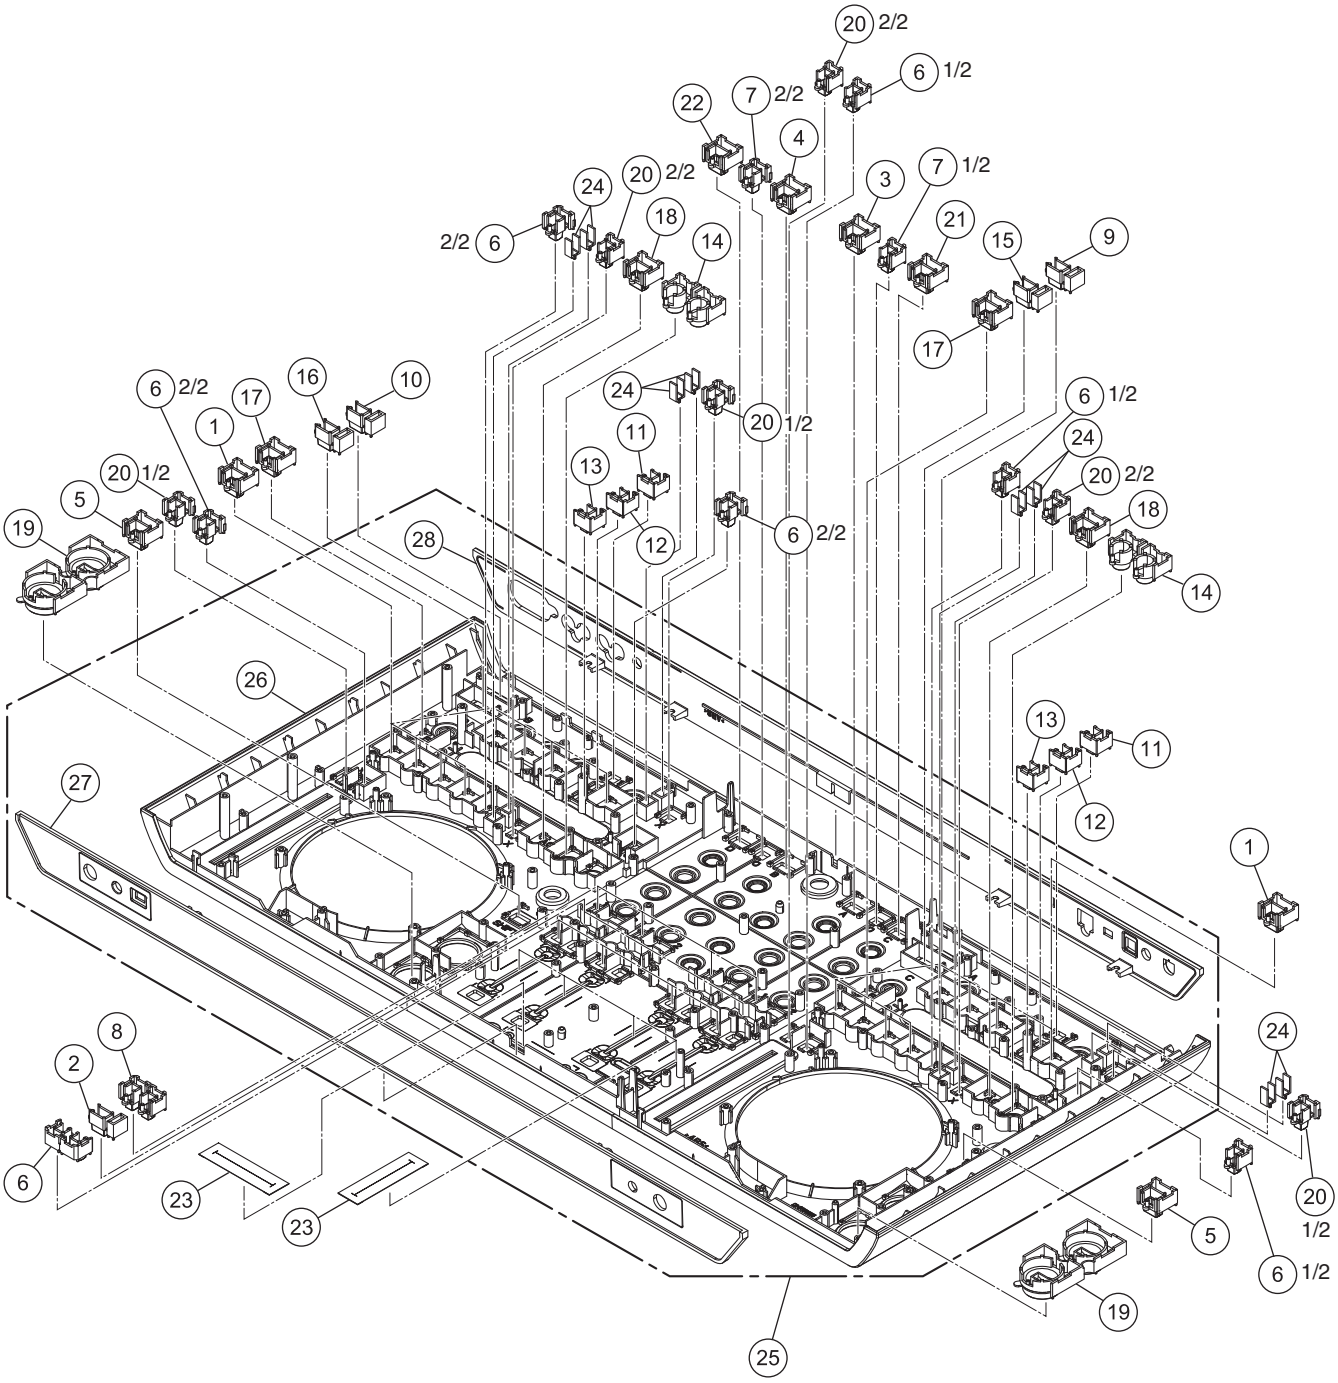

(1) BUTTON LAYER SECTION PARTS LIST

Mark	No.	Description	Part No.	
	1	Button L (Opal)	DAC2657	
	2	Cue Button R	DAC2658	
	3	Load Button A	DAC2659	
	4	Load Button B	DAC2660	
	5	Shift Button	DAC2661	
	6	Button S (Opal)	DAC2662	*
	7	Button S (Black)	DAC2663	*
	8	FX Assign Button	DAC2664	
	9	Deck Select Button A	DAC2665	
	10	Deck Select Button B	DAC2666	
	11	FX Select Button 1	DAC2667	
	12	FX Select Button 2	DAC2668	
	13	FX Select Button 3	DAC2669	
	14	Loop Button	DAC2671	
	15	Deck Select Button C	DAC2677	
	16	Deck Select Button D	DAC2678	
	17	Filter Button	DAC2680	
	18	Active Button	DAC2681	
	19	Play Button	DAC2682	
	20	Button S (Gray)	DAC2683	*
	21	Load Button C	DAC2687	
	22	Load Button D	DAC2688	
	23	Fader Packing	DEC3355	
	24	Lens	DNK5862	
	25	1..Control PNL Assy	See Contrast table (2)	
	26	2..Control Panel	DNK5859	
	27	2..Front Panel	DNK5869	
	28	2..Rear Panel	See Contrast table (2)	

*: Note that there are two types of button S, as some of them have to be split into two when used.

(2) CONTRAST TABLE

DDJ-T1/SVYXJ8, UXJCB, FLPXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-T1/SVYXJ8	DDJ-T1/UXJCB	DDJ-T1/FLPXJ	DDJ-T1/KXJ5	DDJ-T1/AXJ5
	25	Control PNL Assy	DXB2096	DXB2106	DXB2107	DXB2110	DXB2108
	28	Rear Panel	DNK5870	DNK5878	DNK5879	DNK5882	DNK5880

9.5 JOG SECTION

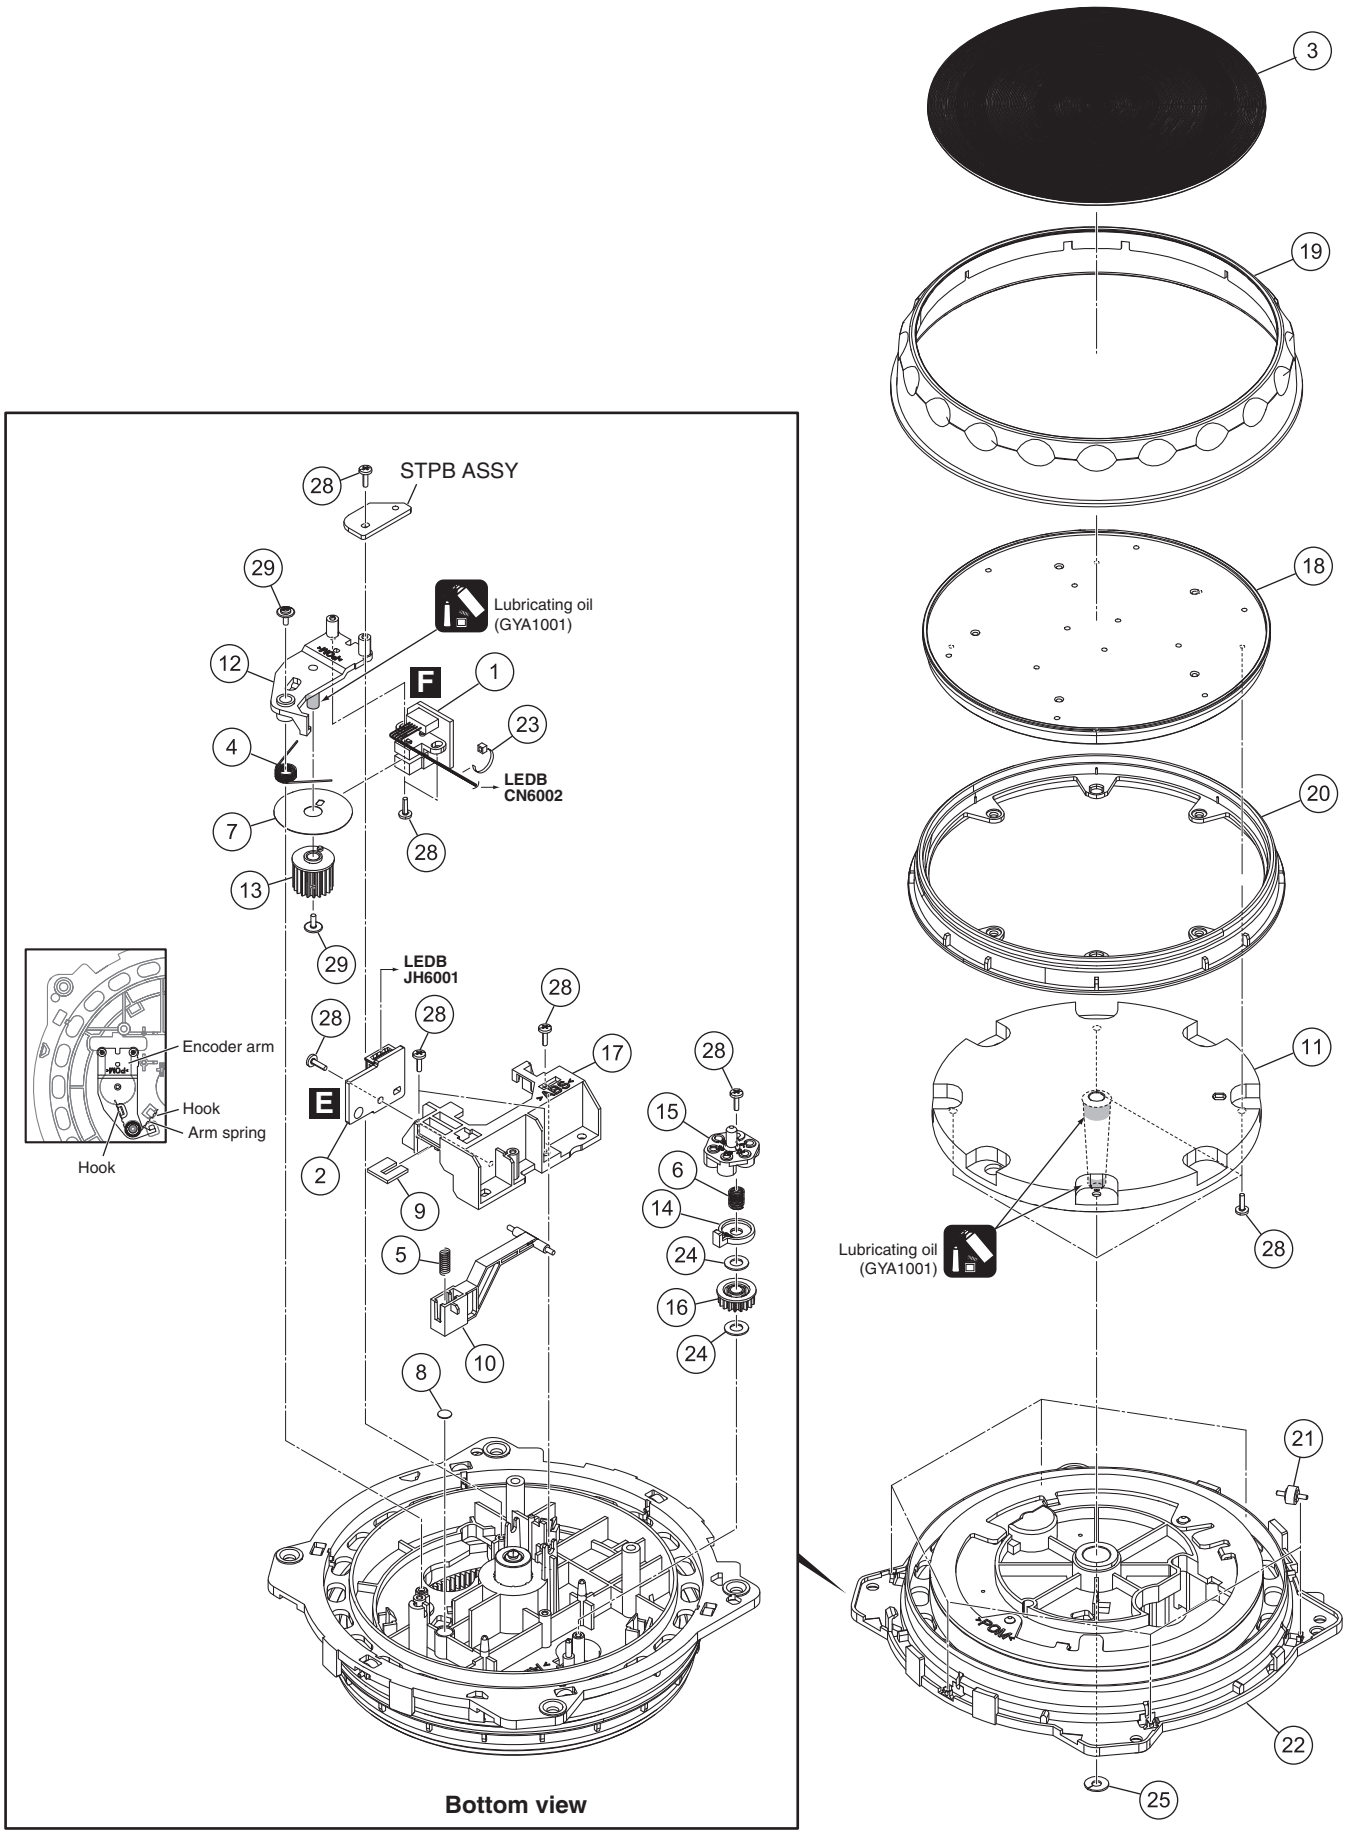

JOG SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	JOGB Assy	DWS1432
	2	TCHB Assy	DWS1433
	3	JOG Plate	DAH2837
	4	Arm Spring	DBH1612
	5	Lever Spring	DBH1626
	6	Load Spring	DBH1676
	7	Encorder Plate	DEC2889
	8	Lever Cushion (A)	DEC3001
	9	Lever Cushion (B)	DEC3002
	10	JOG Lever	DNK4763
	11	JOG Shaft	DNK4934
	12	Encorder Arm	DNK4936
	13	Encorder Gear	DNK4937
	14	Load Smoother	DNK4939
	15	Adjust Plate	DNK4943
	16	Load Gear	DNK5178
	17	Lever Holder	DNK5206
	18	JOG Dial A	DNK5860
	19	JOG Dial B	DNK5861
	20	Ring Lens	DNK5945
	21	Roller B Assy	DXB1877
	22	JOG Holder Assy	DXB2002
	23	Binder	ZCA-SKB90BK
	24	Washer	WA41D070D025
	25	Washer	WT32D080D050
	26	•••••	
	27	•••••	
	28	Screw	BPZ20P060FTC
	29	Screw (FE)	DBA1265

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω	→	*56 × 10¹*	→	*561* ····· *RD1/4PU 5 6 1 J*
47 kΩ	→	*47 × 10³*	→	*473* ····· *RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50* ····· *RN2H R 5 0 K*		
1 Ω	→	*1R0* ····· *RS1P 1 R 0 K*		

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ	→	*562 × 10¹*	→	*5621* ····· *RN1/4PC 5 6 2 1 F*

● *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.
IC 301 (A, 91, 111) IC NJM2068V

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
NSP	1	..MAIN ASSY	DWM2421
	2	..UCOM ASSY	DWX3209
	2	..CDCB 1 ASSY	DWX3210
	2	..CDCB 2 ASSY	DWX3224
NSP	1	..CDJ1 ASSY	DWM2422
	2	..CDJ1B ASSY	DWS1430
	2	..JOGB ASSY	DWS1432
	2	..TCHB ASSY	DWS1433
	2	..LEDB ASSY	DWS1434
NSP	1	..CDJ2 ASSY	DWM2423
	2	..CDJ2B ASSY	DWS1431
	2	..JOGB ASSY	DWS1432
	2	..TCHB ASSY	DWS1433
	2	..LEDB ASSY	DWS1434
NSP	1	..DJM1 ASSY	DWM2424
	2	..CHFD ASSY	DWX3212
	2	..CRFD ASSY	DWX3213
	2	..MICB ASSY	DWX3215
	2	..HPJK ASSY	DWX3216
NSP	1	..DJM2 ASSY	DWM2426
	2	..DJMB ASSY	DWX3211
	2	..JACB ASSY	DWX3214
	2	..USBB ASSY	DWX3222

* Either the CDCB 1 Assy or CDCB 2 Assy is assembled here. The CDCB 1 Assy and CDCB 2 Assy are interchangeably used and handled similarly in their production management.

A JACB ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	IC	4401,4402	NJM4565MD
	IC	4403-4405	NJM4580MD
	Q	4401-4412	INC2002AC1
MISCELLANEOUS			
	L	4401-4404 INDUCTOR	CTF1378
	JA	4401,4403 PIN JACK (2P)	AKB7181
	JA	4402,4404 HEADPHONE JACK	DKN1622
	KN	4401 SCREW PLATE	VNE1948
	VR	4401 POTENTIOMETER	DCS1115
	CN	4401 L-PLUG (9P)	KM200NA9L
	CN	4402 L-PLUG (7P)	KM200NA7L
	CN	4403 CONNECTOR	B2PS-VH
	VA	4401-4404 VARISTORS	EZJZ1V270RM
RESISTORS			
	R	4401,4402	RS1/10SR1102D
	R	4403,4404	RS1/10SR1001D
	R	4405-4408	RS1/10SR1202D
	R	4409,4429-4432,4464	RS1/10SR5600D
	R	4410,4463,4467,4474	RS1/10SR4301D
	R	4413-4420	RS1/10SR4701D
	R	4421,4423,4425,4427	RS1/10SR1002D
	R	4422,4424,4426,4428	RS1/10SR9101D
	R	4445,4447,4453,4455	RS1/10SR1200D
	R	4468,4473	RS1/10SR5600D
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	4401	CCSRCH102J50
	C	4402-4405,4422-4429	CCSRCH101J50
	C	4406,4408,4420,4421	CEJQ101M16
	C	4407,4410,4416,4418	CEJQ470M16
	C	4412-4415	CEJQ100M35
	C	4430,4431,4438-4443	CEJQ101M16
	C	4444-4449	DCE1016
	C	4457,4460,4462	CKSRYB103K50
	C	4458	CKSRYB104K16

B UCOM ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
⚠	IC	101	BD9851EFV
⚠	IC	102,104,105	S-1200B33-M5
⚠	IC	103	S-1200B50-M5
	IC	106	S-80927CNMC-G8X
	IC	201	S-24CS64A0I
	IC	202	TUSB3200ACPAH
	IC	203	TC7SB66FU
	IC	205	S-80942CNMC-G9C
	IC	301,302	NJM2121MD
	IC	303	AK5358AET

Mark	No.	Description	Part No.
	IC	304,506	AK4387ET
	IC	305	NJM4565MD
	IC	501	NJM4580MD
	IC	701	PEG850A8-K
	IC	702	TC74VHC238FK
	IC	1101,1102	TC74LCX541FK
⚠	Q	101	RTQ025P02
⚠	Q	102	RTQ045N03
	Q	103,106	LSA1576UB
	Q	104,203,301	RT1N241M
	Q	105,202,501,581	LSC4081UB
	Q	201	RT3N22M
	Q	302,303,503,504	INC2002AC1
	Q	502,505,582	LTC124EUB
	Q	506,509,583	LTA124EUB
	Q	507,508	INC2002AC1
	Q	701	RT3P22M
	D	101,102	RB160L-40
	D	103-105	1SS352
	D	301,303	1SS302
	D	302	RKZ3.3KG(B2)
	D	304,305,501,502	HSU119
	D	701,702	RB160M-30

MISCELLANEOUS

	L	101,102 POWER INDUCTOR	ATH7047
	L	201,202 CHIP BEEDS FILTER	BTX1042
	L	203 COIL	ATH7015
	L	206 CHIP BEEDS FILTER	BTX1042
	L	501-504 CHIP INDUCTOR (10U)	DTL1105
	L	701-704 CHIP BEEDS FILTER	BTX1042
	KN	1003,1004 EARTH METAL FITTING	VNF1109
	KN	1006 EARTH METAL FITTING	VNF1109
	X	201 CRYSTAL RESONATOR (6.0 MHz)	DSS1136
	X	701 CERAMIC OSCILLATOR	CSS1616
	CN	301,501 CONNECTOR	AKM1295
	CN	302 CONNECTOR	AKM1293
	CN	303 CONNECTOR	AKM1292
	CN	901,902 CONNECTOR	AKM1294
	CN	903,905,1001 25P CONNECTOR	VKN1429
	CN	904,906 20P CONNECTOR	VKN1424
	CN	1002 8P CONNECTOR	VKN1300
	CN	1003 15P CONNECTOR	VKN1307
	CN	1004 CONNECTOR	AKM1299
	JP	501 CRIMP CONNECTOR	DKP3926

RESISTORS

	R	101	RS1/10SR4701D
	R	102	RS1/10SR1202D
	R	103,114	RS1/10SR222J
	R	104	RS1/10SR1003D
	R	105,106	RS1/10SR1502D
	R	107,115	RS1/10SR153J
	R	108,116,131	RS1/10SR333J
	R	109	RS1/10SR1002D
	R	110,146	RS1/10SR562J
	R	111	RS1/10SR1802D
	R	112	RS1/10SR8202D
	R	113	RS1/10SR8201D
	R	120,147,230	RS1/8SQ0R0J
	R	121,122,128	RS1/10SR103J
	R	123,125,326	RS1/10SR223J
	R	124	RS1/10SR203J
	R	126	RS1/10SR273J
	R	127,130,139,325	RS1/10SR473J
	R	132-134,137,144	RS1/10SR103J
	R	135,141,143	RS1/10SR0R0J
	R	136	RS1/10SR101J
	R	138	RS1/10SR220J
	R	145	RS1/10SR332J
	R	212	RS1/16SS2701F
	R	215	RS1/16SS3900F
	R	255,306,524,525	RS1/10SR103J
	R	256,257	RS1/10SR221J
	R	301-304,340,720	RS1/10SR0R0J
	R	305,329	RS1/10SR470J
	R	309,319	RS1/10SR471J
	R	310	RAB4CQ103J
	R	311,512	RS1/10SR100J
	R	313,314	RS1/16SS8201D
	R	315,316	RS1/16SS6801D
	R	317,318	RS1/16SS1601D
	R	322-324,346,347	RS1/10SR104J
	R	336,337	RS1/16SS1001D
	R	338,339,501,502	RS1/16SS4701D
	R	341,342	RS1/10SR2401D
	R	343,344	RS1/10SR8200D
	R	505-508	RS1/16SS3301D
	R	509,510	RS1/16SS3901D
	R	523,526-528	RS1/10SR102J
	R	718,719,752,765	RAB4CQ220J
	R	721	RAB4CQ470J
	R	722-724,737,738	RAB4CQ221J
	R	741	RAB4CQ221J
	R	824	RAB4CQ220J
	R	1109-1111	RAB4CQ101J
	Other Resistors		RS1/16SS###J

CAPACITORS

	C	101	CCSRCH561J50
	C	102	CKSRYB332K50
	C	103	CCSRCH820J50
	C	104,113,149	CCG1205
	C	105,110-112,114	CKSRYB105K10
	C	106,115,203,204	DCH1201
	C	108	CKSRYB222K50
	C	109	CCSRCH121J50
	C	117,141,144,335	CKSRYB103K50
	C	119,121,122,125	CKSRYB104K16
	C	120,123,124,137	CKSRYB105K10
	C	126,227	CKSSYB222K50
	C	130-135,140,143	CKSRYB104K16
	C	139	CCSRCH221J50
	C	142,503,506	CCSRCH471J50
	C	145,336,520	CCSRCH102J50
	C	147,225,312,313	CKSRYB104K16
	C	150	CKSRYB105K10
	C	205,206,211,213	CKSSYB104K16
	C	207,208,212	CCSSCH471J50
	C	210,702,713,750	DCH1201
	C	214,228,229,714	CCSSCH220J50

Mark	No.	Description	Part No.
	C	215,219,221,226	CKSSYB104K16
	C	216,318,716	CKSSYB103K16
	C	217,218	CCSSCH470J50
	C	220,715,718,719	CCSSCH101J50
	C	222,707,708,711	CCSSCH102J50
	C	223,224	CCSSCH270J50
	C	231,232,701,703	CKSSYB104K16
	C	305-307,316,326	CEVW100M16
	C	308-311,328,329	CEVW470M16
	C	315,317,319,513	CKSRYB104K16
	C	320,321,504,505	CCSSCH681J50
	C	322,323	CCSRCH391J50
	C	327,331	CEVW100M16
	C	330	CEVW470M6R3
	C	332-334,337,338	CEVW470M16
	C	340,342	CCSSCH821J50
	C	341,514	CEVW470M16
	C	509,510,554	CCH1565
	C	511,516,517,1019	CEVW101M16
	C	515,717,724	CKSRYB104K16
	C	519	CKSRYB103K50
	C	704,712,721,749	CKSSYB104K16
	C	705,706	CKSSYB471K50
	C	709,710	CCSSCH100D50
	C	720	CCSSCH220J50
	C	725-748,760,1020	CKSSYB103K16
	C	752,759,762	CCSSCH102J50
	C	755,923-930	DCH1201
	C	756,1101,1110	CKSSYB104K16
	C	1013-1018	DCH1201
	C	1021	CKSSYB103K16

C CDCB 1 ASSY

SEMICONDUCTORS

	IC	2001	AD7147ACPZ500RL7

RESISTORS

	All Resistors		RS1/16SS###J

CAPACITORS

	C	2001	CKSRYB103K50
	C	2003	CKSRYB104K16
	C	2005-2007	CCSSCH101J50
	C	2009	DCH1201

D CDCB 2 ASSY

SEMICONDUCTORS

	IC	2101	AD7147ACPZ500RL7

RESISTORS

	All Resistors		RS1/16SS###J

CAPACITORS

	C	2101	CKSRYB103K50
	C	2103	CKSRYB104K16
	C	2105-2107	CCSSCH101J50
	C	2109	DCH1201

E TCHB ASSY

Mark	No.	Description	Part No.

SEMICONDUCTORS

	IC	3301	GP1S094HCZ0F
	Q	3301	LSC4081UB
	D	3301	HSU119

MISCELLANEOUS

	CN	3301	3PJUMPER CONNECTOR 52151-0310

RESISTORS

	All Resistors		RS1/10SR###J

CAPACITORS

	C	3301	CKSRYB104K16

F JOGB ASSY

MISCELLANEOUS

	CN	3201	CONNECTOR ASS'Y PF04PG-B05

RESISTORS

	All Resistors		RS1/10SR###J

MISCELLANEOUS

	PC	3201	PHOTO INTERRUPTER SEDS-7573

CAPACITORS

	C	3201	CKSQYB225K10
	C	3202,3203	CKSRYB103K50

G LEDB ASSY

SEMICONDUCTORS

	Q	6001-6004	RT1N241M
	Q	6005-6008	LSA1576UB
	Q	6009-6014	2SC4154-11
	D	6001-6024	SLI-343U3R(HJKL)

MISCELLANEOUS

	CN	6001	19P CONNECTOR VKN1279
	CN	6002	L-PLUG (4P) KM200NA4L
	JH	6001	3P CABLE HOLDER 51048-0300
	JP	6001	3P JUMPER WIRE D20PDY0310E

RESISTORS

	R	6049-6051,6053,6056	RS1/8SQ0R0J
	R	6072-6075,6077,6079	RS1/8SQ0R0J
	R	6088	RS1/8SQ472J
	R	6089,6096,6098,6100	RS1/8SQ0R0J
	R	6103,6105,6113	RS1/8SQ0R0J
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	6001-6004	CKSRYB104K16

H CDJ1B ASSY

SEMICONDUCTORS

	Q	3030-3033	RT1N241M
	Q	3035,3045-3047	2SB1197K
	Q	3038-3043	2SC4154-11
	D	3001-3008,3011-3029	HSU119
	D	3009,3010,3048-3050	SLI-343M8G(GHJ)
	D	3030-3047	SLI-343Y8Y(KLM)
	D	3051,3052	SLI-343U8R(HJK)
	D	3053	SLI-343M8G(GHJ)

Mark	No.	Description	Part No.
	D	3056-3059	HSU119
		MISCELLANEOUS	
	VR	3001,3002,3004-3006 ROTARY VR	DCS1078
	VR	3003 VR	DCV1009
	S	3001,3002,3012 TACT SWITCH	DSG1079
	S	3003-3006,3009-3011 TACT SWITCH	DSG1089
	S	3013 TACT SWITCH	DSG1089
	S	3014-3026 TACT SWITCH	DSG1079
	S	3027,3028 TACT SWITCH	DSG1117
	S	3030 ENCODER	DSX1082
	CN	3001 19P CONNECTOR	VKN1250
	CN	3002 25P CONNECTOR	VKN1256
	CN	3003 20P CONNECTOR	VKN1251
		RESISTORS	
	R	3001,3002,3015	RS1/8SQ0R0J
	R	3020-3022,3028,3067	RS1/8SQ0R0J
	R	3076	RS1/8SQ472J
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	3001-3003,3005-3008	CKSRYB103K50
	C	3009,3010,3014,3017	CKSRYB104K16
	C	3011	CEJQ101M16
	C	3041,3042	CKSRYB103K50
	C	3043,3046-3051	CKSRYB104K16

I CDJ2B ASSY

Mark	No.	Description	Part No.
		SEMICONDUCTORS	
	Q	3530-3533	RT1N241M
	Q	3538-3543	2SC4154-11
	Q	3544-3547	2SB1197K
	D	3501-3510,3512	HSU119
	D	3511,3513,3548-3550	SLI-343M8G(GHJ)
	D	3514-3529,3556-3559	HSU119
	D	3530-3547	SLI-343Y8Y(KLM)
	D	3551,3552	SLI-343U8R(HJK)
	D	3553	SLI-343M8G(GHJ)
		MISCELLANEOUS	
	VR	3501,3502,3504-3506 ROTARY VR	DCS1078
	VR	3503 VR	DCV1009
	S	3501,3503,3504 TACT SWITCH	DSG1079
	S	3502,3505-3511 TACT SWITCH	DSG1089
	S	3512-3524 TACT SWITCH	DSG1079
	S	3525,3526 TACT SWITCH	DSG1117
	S	3527 ENCODER	DSX1082
	CN	3501 19P CONNECTOR	VKN1250
	CN	3502 25P CONNECTOR	VKN1256
	CN	3503 20P CONNECTOR	VKN1251
		RESISTORS	
	R	3600	RS1/8SQ0R0J
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	3501,3502,3504,3505	CKSRYB103K50
	C	3520,3521,3541-3547	CKSRYB104K16
	C	3535-3539	CKSRYB103K50
	C	3540	CEJQ101M16
	C	3550-3552	CKSRYB104K16

J DJMB ASSY

Mark	No.	Description	Part No.
		SEMICONDUCTORS	
	IC	4001-4003	TC74HC4052AF
	Q	4001-4008	RT1N241M
	Q	4009-4016	LSA1576UB
	Q	4017-4019	2SC4154-11
	D	4001-4027	HSU119
	D	4028-4034,4037	SLI-343Y8Y(KLM)
	D	4035,4036,4038,4039	SLI-343U8R(HJK)
	D	4040-4047	SLI-343Y8Y(KLM)
		MISCELLANEOUS	
	VR	4001,4005,4009,4013 ROTARY VR	DCS1117
	VR	4002-4004,4006-4008 ROTARY VR	DCS1078
	VR	4010-4012,4014-4016 ROTARY VR	DCS1078
	VR	4017,4019 ROTARY VR	DCS1117
	VR	4018 ROTARY VR	DCS1116
	S	4001,4003,4004,4007 TACT SWITCH	DSG1089
	S	4002,4005,4006,4008 TACT SWITCH	DSG1079
	S	4009,4011,4013-4018 TACT SWITCH	DSG1089
	S	4010,4012,4019-4026 TACT SWITCH	DSG1079
	S	4027 ROTARY SW	YSD5019
	CN	4001 8P CONNECTOR	VKN1239
	CN	4002 25P CONNECTOR	VKN1256
		RESISTORS	
		All Resistors	RS1/10SR###J
		CAPACITORS	
	C	4028,4029	CEJQ470M16
	C	4030-4057	CKSRYB104K16
	C	4058-4076	CKSRYB103K50

K MICB ASSY

Mark	No.	Description	Part No.
		SEMICONDUCTORS	
	IC	4601	NJM4565MD
		MISCELLANEOUS	
	JA	4601 MIC JACK	DKN1614
	KN	4601 SCREW PLATE	VNE1948
	VR	4601 POTENTIOMETER	DCS1111
	S	4601 SLIDE SWITCH	DSH1025
	CN	4601 PLUG (6P)	KM200NA6
	VA	4601 VARISTORS	EZJZ1V270RM
		RESISTORS	
	R	4601	RS1/10SR2201D
	R	4602	RS1/10SR1002D
	R	4604	RS1/10SR1101D
	R	4605	RS1/10SR6802D
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	4601,4618	CCSRCH102J50
	C	4602	CCSRCH561J50
	C	4604,4612,4614	CEJQ100M35
	C	4605	CCSRCH331J50
	C	4606	CEJQ101M16
	C	4609,4611	CEJQ470M16

Mark	No.	Description	Part No.
	C	4613	CKSRYB103K50
	C	4615	CFTLA103J50
	C	4616	CKSRYB104K16
	C	4619,4620	CCSRCH101J50

L CHFD ASSY

SEMICONDUCTORS

	D	4201-4212	HSU119

MISCELLANEOUS

	VR	4201-4204	VARIABLE RESISTOR DCV1024
	S	4201-4204	SLIDE SWITCH ASH1039
	CN	4201	15P CONNECTOR VKN1246
	CN	4202	L-PLUG (3P) KM200NA3L

RESISTORS

	All Resistors		RS1/10SR###J

CAPACITORS

	C	4201	CEJQ101M16
	C	4202-4205	CKSRYB103K50
	C	4206-4210	CKSRYB104K16

M CRFD ASSY

SEMICONDUCTORS

	D	4301,4302	HSU119

MISCELLANEOUS

	VR	4301	VARIABLE RESISTOR DCV1023
	CN	4301	L-PLUG (3P) KM200NA3L

CAPACITORS

	C	4301	CKSRYB103K50
	C	4302	CKSRYB104K16

N HPJK ASSY

SEMICONDUCTORS

	IC	4801	NJM4556AD
	Q	4801-4804	INC2002AC1

MISCELLANEOUS

	JA	4801	HEADPHONE JACK DKN1622
	JA	4802	CONNECTOR CKS4124
	KN	4801	SCREW PLATE VNE1948
	CN	4801	PLUG (9P) KM200NA9
	VA	4801	VARISTORS EZJZ1V270RM

RESISTORS

	R	4807,4809	RS1/4SA270J
	R	4813,4814	RS1/4SA130J
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	4801-4803,4806	CEHAR470M16
	C	4807,4808,4813,4814	CEHAR101M10
	C	4809,4810,4815,4816	CKSRYB473K16
	C	4811	CKSRYB103K50

O USBB ASSY

SEMICONDUCTORS

	Q	2506	2SC4154-11
	Q	2507	LSA1576UB
	Q	2509,2510,2512-2515	RT1N141M-11
	Q	2516-2519,2526,2527	RT1P141M
	Q	2520,2521,2528,2531	RT1N141M-11
	Q	2522-2525	RTQ040P02
	Q	2529,2530	RT1P141M
	D	2504	UDZS5R6(B)
	D	2505,2507	RB160M-30
	D	2511-2514	HSU119
	D	2515	UDZS3R6(B)

MISCELLANEOUS

	L	2503,2504	CHIP BEEDS FILTER BTX1042
	L	2506	COIL DTH1197
	L	2507,2508	CHIP BEEDS FILTER BTX1042
	JA	2501	DCIN JACK DKN1523
	JA	2502	USB CONNECTOR DKN1237
	KN	4601	SCREW PLATE VNE1948
	S	2502	SLIDE SWITCH ASG1100
	CN	2501	L-PLUG (13P) KM200NA13L
	VA	2501,2502	VARISTORS EZJZ1V270RM

RESISTORS

	R	2510,2532	RS1/4SA0R0J
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	2501,2503-2506,2514	CKSRYB103K50
	C	2502,2508	CEJQNP470M25
	C	2507	CEJQ100M35
	C	2509,2533	CEHAZL121M10
	C	2515,2535	CKSRYB103K50
	C	2516,2517	DCH1201
	C	2519	CKSRYB474K16
	C	2520	CKSRYB224K16
	C	2521,2522,2534	CKSRYB105K16
	C	2523,2528	CCSRCH102J50
	C	2525,2529	CKSRYB104K16