EXPLODED VIEW (CD MECHANISM)

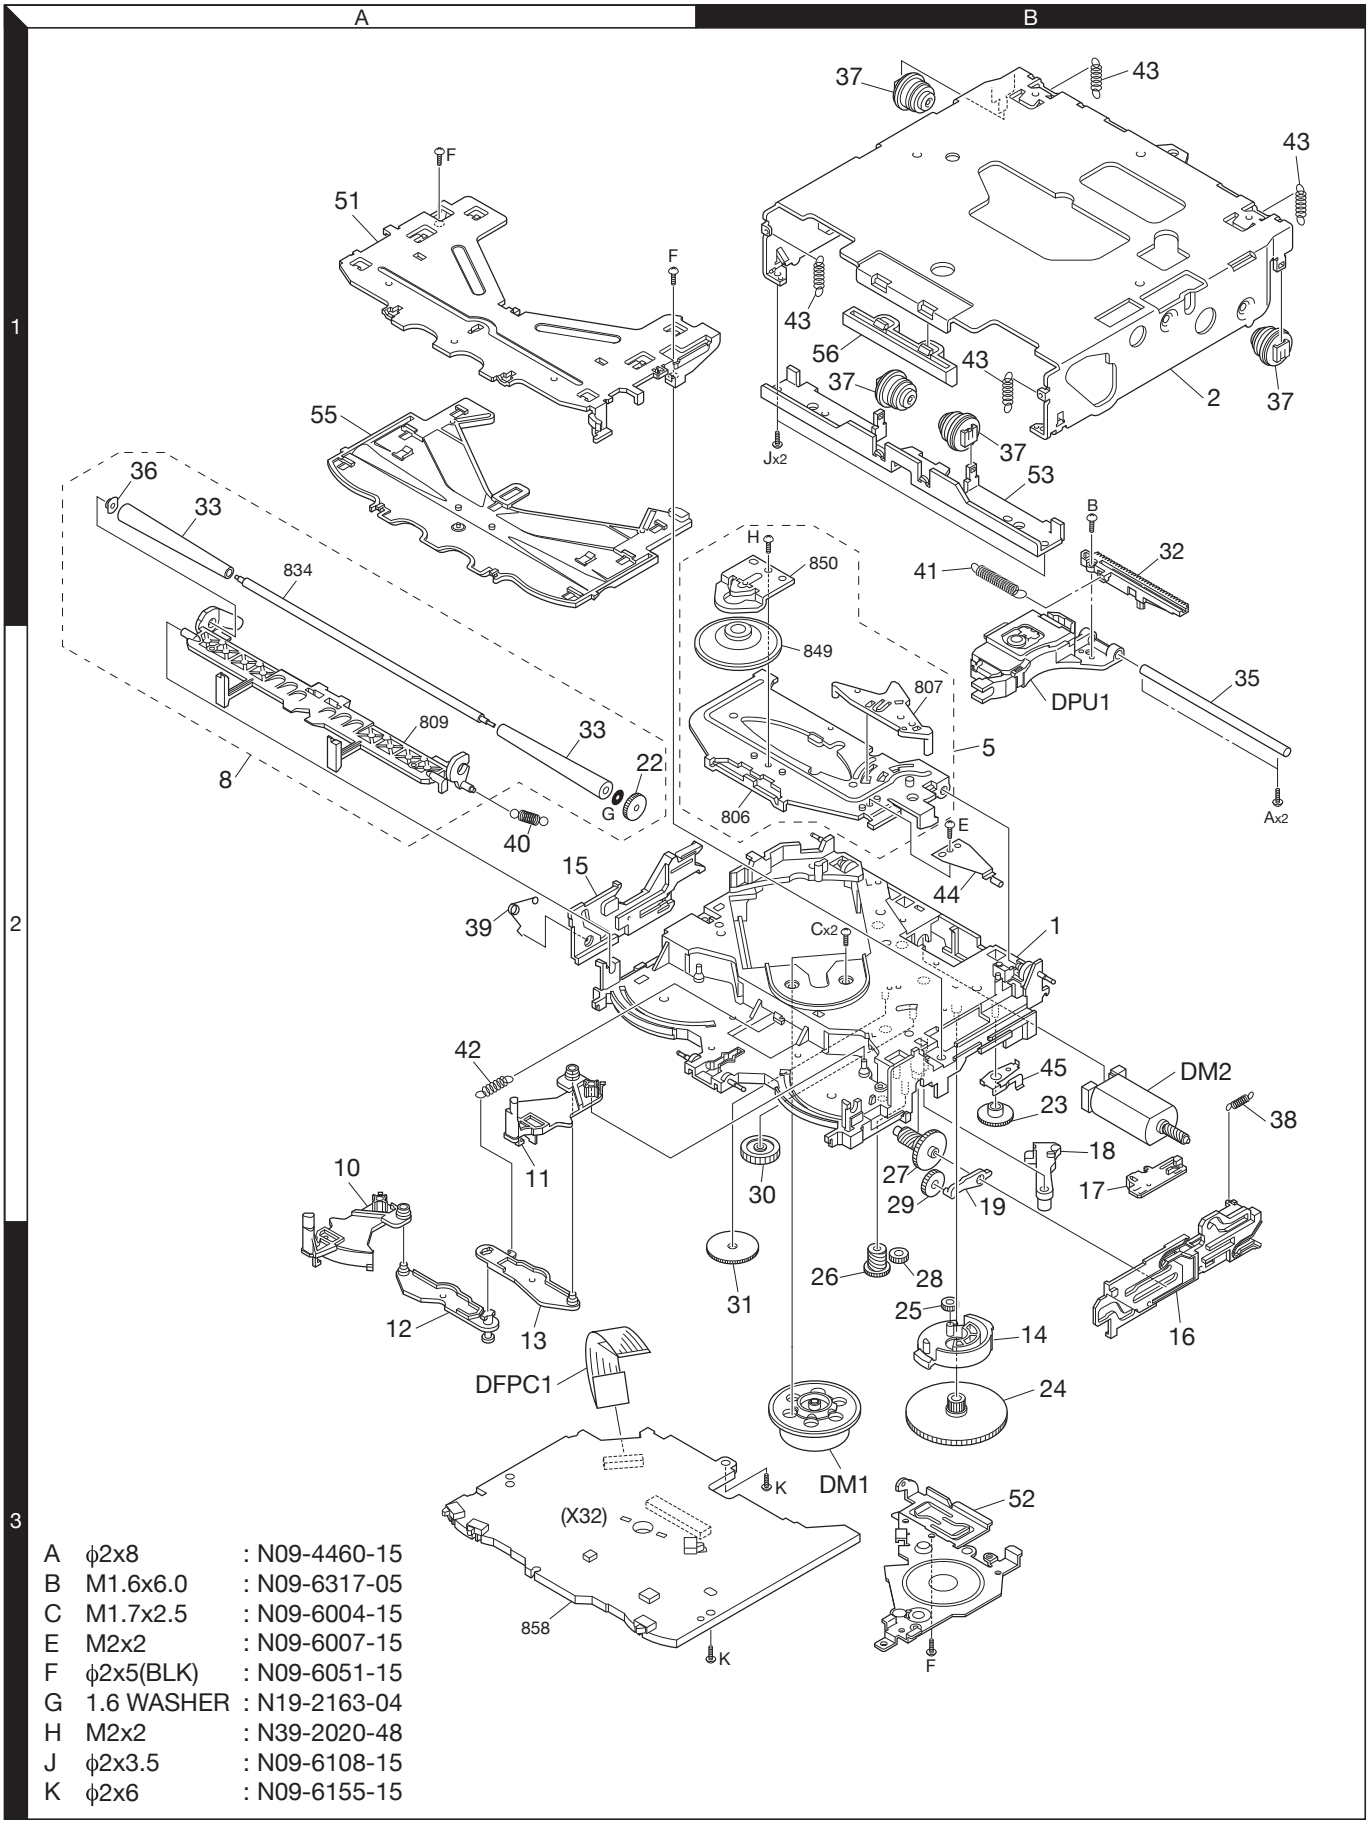

A	ϕ2x8	: N09-4460-15
B	M1.6x6.0	: N09-6317-05
C	M1.7x2.5	: N09-6004-15
E	M2x2	: N09-6007-15
F	ϕ2x5(BLK)	: N09-6051-15
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-48
J	ϕ2x3.5	: N09-6108-15
K	ϕ2x6	: N09-6155-15

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

C D

C φ3x5 : N84-3005-43
D φ3x5 : N83-3005-48
E φ3x8 : N83-3008-48
F φ3x20 : N83-3020-48
G φ3x8 : N80-3008-48
H φ2.6x8 : N82-2608-48

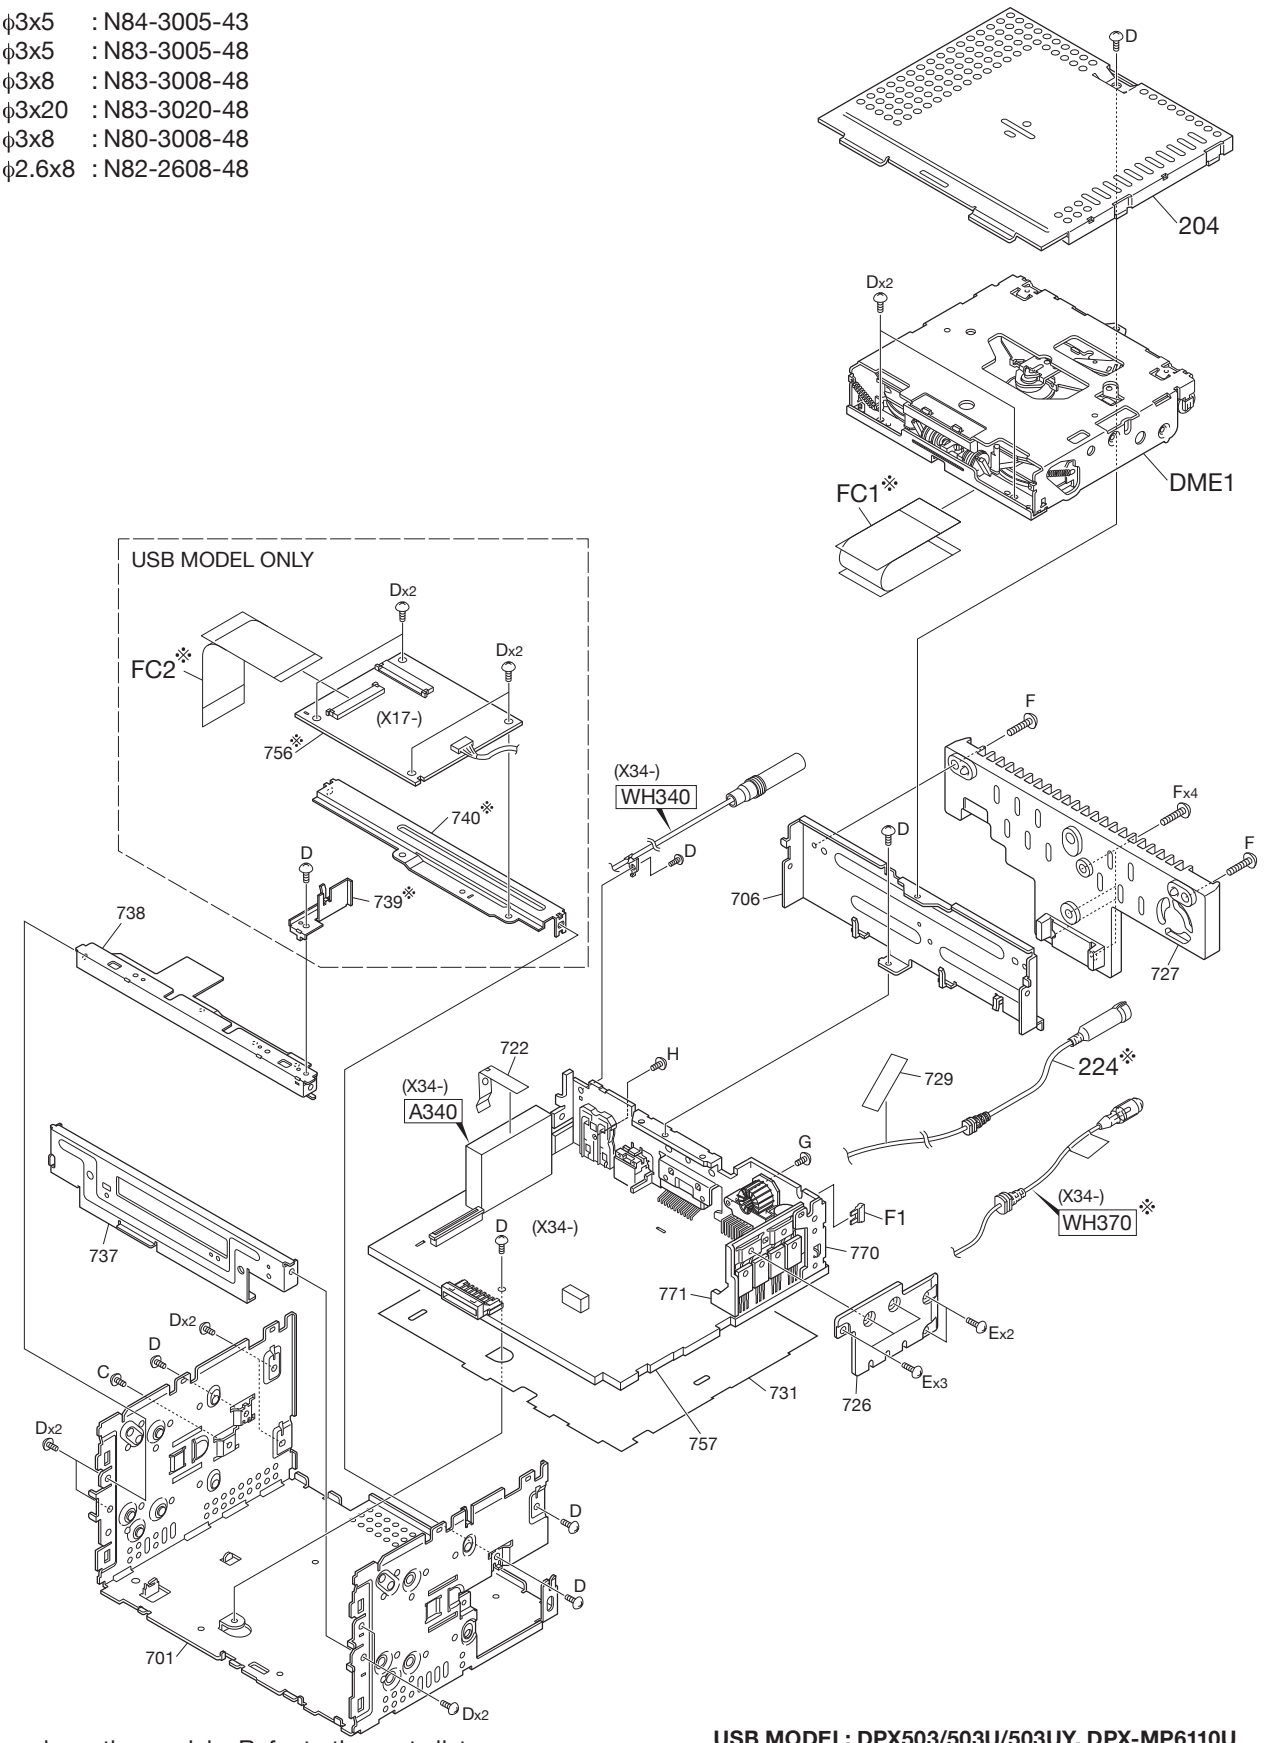

※Depends on the models. Refer to the parts list.

USB MODEL: DPX503/503U/503UY, DPX-MP6110U

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL)

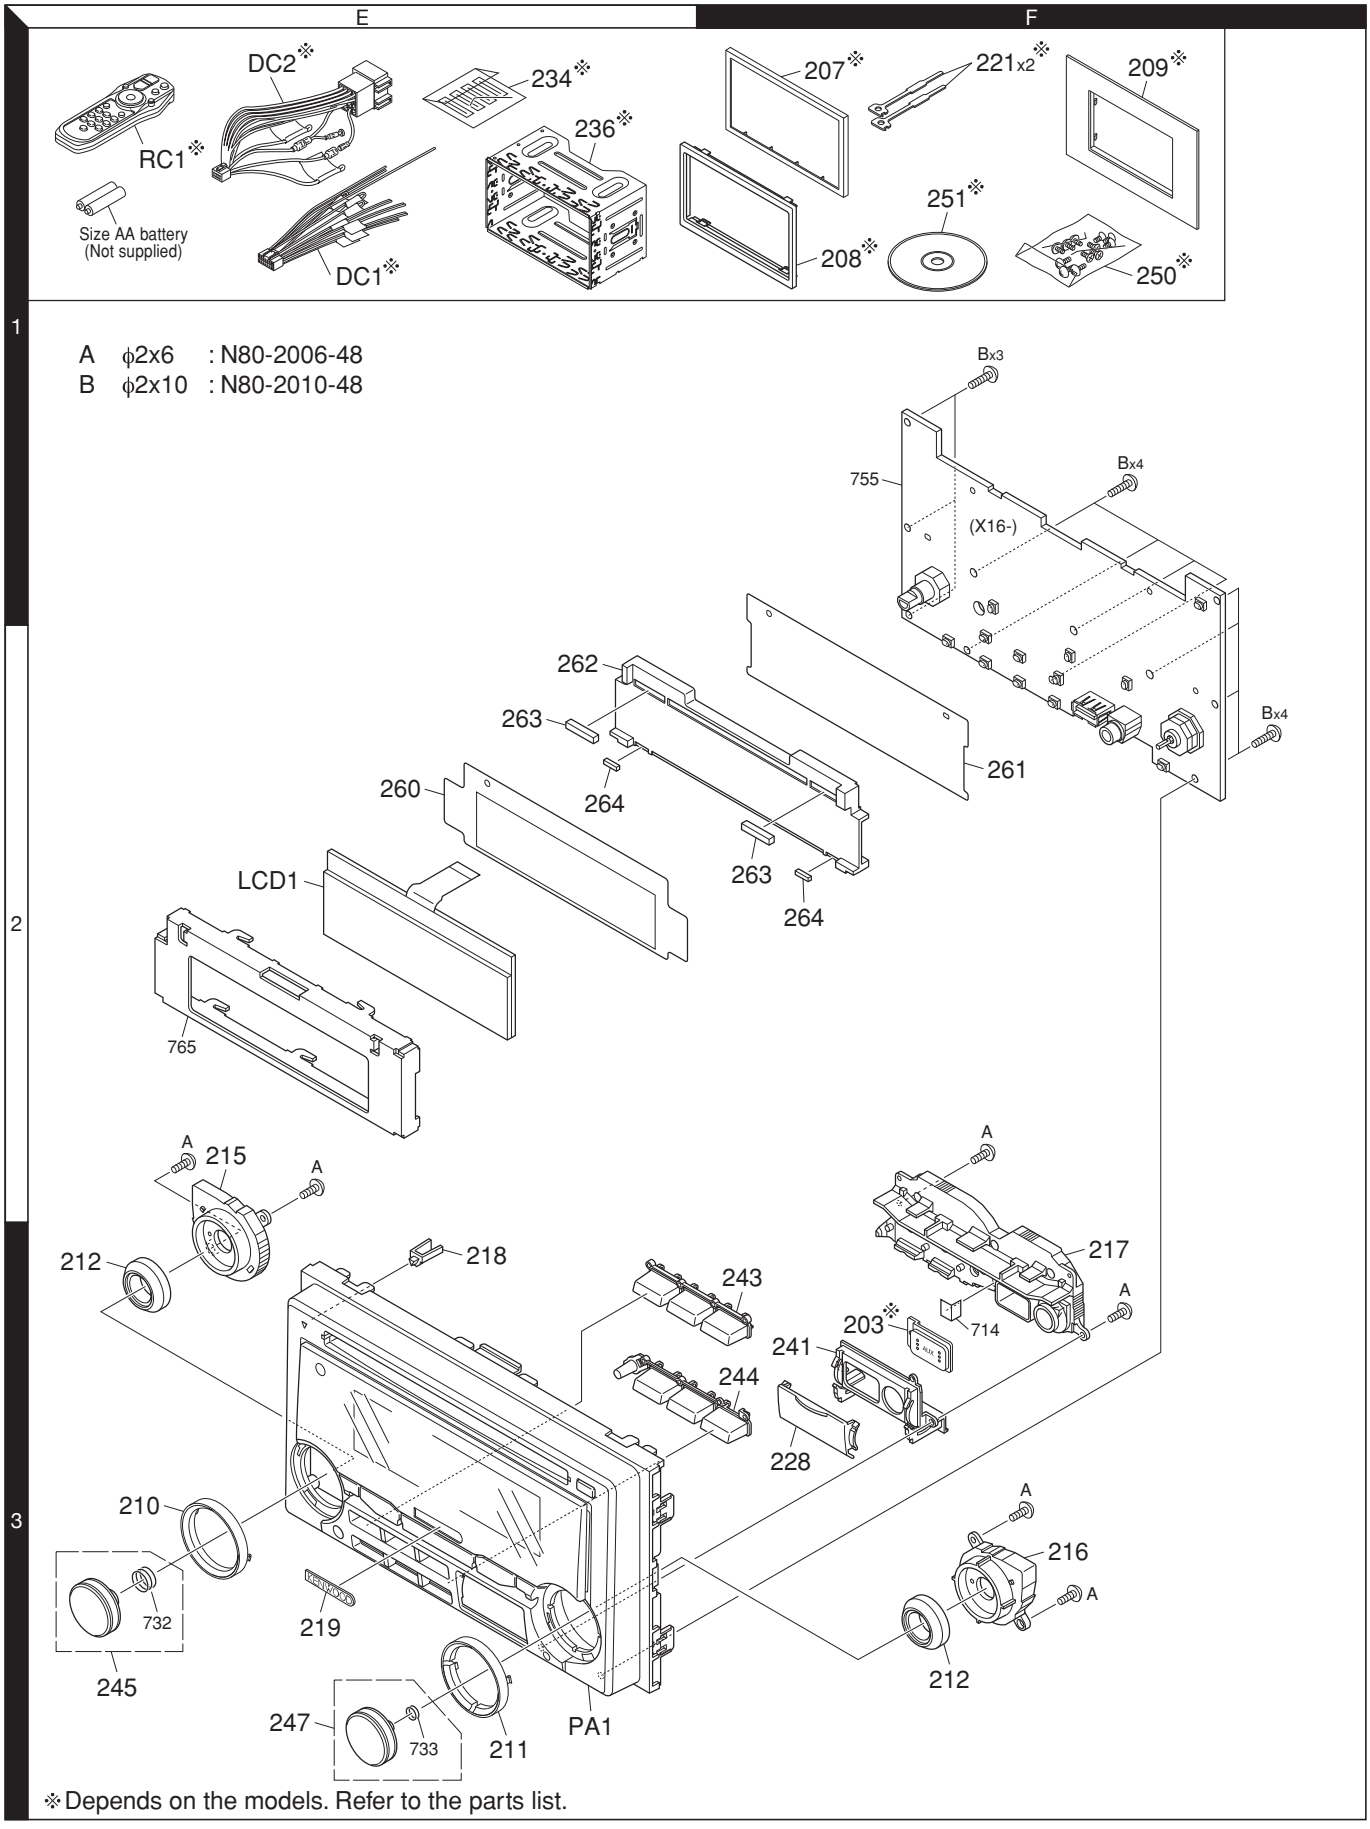

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DPX303/313Y/503/503U/503UY_DPX-MP6110U					
203	3F	✻	A21-6688-03	DRESSING PANEL	KE1E2
204	1D		A52-0872-12	TOP PLATE	
PA1	3E	✻	A64-4634-11	PANEL ASSY	K
PA1	3E	✻	A64-4635-11	PANEL ASSY	E1
PA1	3E	✻	A64-4636-11	PANEL ASSY	K1
PA1	3E		A64-4637-11	PANEL ASSY	M1
PA1	3E	✻	A64-4638-11	PANEL ASSY	E3E4
PA1	3E	✻	A64-4640-11	PANEL ASSY	E2
RC1	1E		A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	KE1K1
RC1	1E		A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	M1E3E4
-		✻	B64-4226-00	INSTRUCTION MANUAL (ENG.FRE.SPA	KK1
-		✻	B64-4227-00	INSTRUCTION MANUAL (ENG.)	E1E2E3
-		✻	B64-4227-00	INSTRUCTION MANUAL (ENG.)	E4
-		✻	B64-4228-00	INSTRUCTION MANUAL (FRE.GER.DUT	E2E4
-		✻	B64-4229-00	INSTRUCTION MANUAL (ITA.SPA.POR	E2E4
-		✻	B64-4230-00	INSTRUCTION MANUAL (RUS.)	E1E3
-			B64-4231-00	INSTRUCTION MANUAL (ENG.S-CHI.)	M1
-			B64-4232-00	INSTRUCTION MANUAL (ARA.)	M1
207	1F		B07-3025-02	ESCUTCHEON	M1
208	1F		B07-3165-02	ESCUTCHEON	KE1E2
208	1F		B07-3165-02	ESCUTCHEON	K1E3E4
209	1F		B07-3172-12	ESCUTCHEON	KK1
210	3E	✻	B07-3268-13	ESCUTCHEON (VOL)	
211	3E	✻	B07-3269-13	ESCUTCHEON (JOG)	
212	3E	✻	B07-3272-03	ESCUTCHEON	
215	2E	✻	B19-2508-02	LIGHTING BOARD (VOL)	
216	3F	✻	B19-2509-02	LIGHTING BOARD (JOG)	
217	3F	✻	B19-2510-01	LIGHTING BOARD (PRE)	KE1E2
217	3F	✻	B19-2515-01	LIGHTING BOARD	K1M1E3
217	3F	✻	B19-2515-01	LIGHTING BOARD	E4
218	3E	✻	B19-2511-04	LIGHTING BOARD	
219	3E		B43-1535-04	BADGE	
221	1F		D10-7012-04	LEVER	KE1E2
221	1F		D10-7012-04	LEVER	K1E3E4
224	2D	✻	E30-6860-05	CORD WITH DIN CONNECTOR (OPEL)	E1E2E3
224	2D	✻	E30-6860-05	CORD WITH DIN CONNECTOR (OPEL)	E4
⚠ DC1	1E		E30-6414-05	DC CORD	KK1M1
⚠ DC2	1E		E30-6671-05	DC CORD (E)	E1E2E3
⚠ DC2	1E		E30-6671-05	DC CORD (E)	E4
FC1	1D		E39-1014-05	FLAT CABLE (30P 240MM)	KE1E2
FC1	1D		E39-1016-15	FLAT CABLE (30P 110MM)	K1M1E3
FC1	1D		E39-1016-15	FLAT CABLE (30P 110MM)	E4
FC2	2C		E39-1015-05	FLAT CABLE	K1M1E3
FC2	2C		E39-1015-05	FLAT CABLE	E4
228	3F	✻	F07-2203-03	COVER (F-AUX)	
⚠ F1	3D		F52-0023-05	FUSE (MINI BLADE TYPE) 10A	
-		✻	H54-4395-03	ITEM CARTON CASE	K
-		✻	H54-4396-03	ITEM CARTON CASE	E1
-		✻	H54-4397-03	ITEM CARTON CASE	E2
-		✻	H54-4398-03	ITEM CARTON CASE	K1
-			H54-4399-03	ITEM CARTON CASE	M1
-		✻	H54-4400-03	ITEM CARTON CASE	E3
-		✻	H54-4401-03	ITEM CARTON CASE	E4
234	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KK1
236	1E		J22-0429-13	MOUNTING HARDWARE ASSY	KE1E2
236	1E		J22-0429-13	MOUNTING HARDWARE ASSY	K1E3E4
241	3F	✻	J90-1174-02	GUIDE	
243	3F	✻	K25-1938-03	PUSH KNOB (1-3)	
244	3F	✻	K25-1939-03	PUSH KNOB (4-6)	
245	3E	✻	K28-0319-14	KNOB ASSY (VOL)	
247	3E	✻	K28-0321-04	KNOB ASSY (JOG)	
250	1E		N99-1779-15	SCREW SET	KK1M1
A	3F		N80-2006-48	PAN HEAD TAPTITE SCREW	
B	1F		N80-2010-48	PAN HEAD TAPTITE SCREW	
C	3C		N84-3005-43	PAN HEAD TAPTITE SCREW	
D	3C		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
F	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
251	1F		W01-1723-15	COMPACT DISC	K1M1E3
251	1F		W01-1723-15	COMPACT DISC	E4
DME1	1D		X92-6130-00	CD MECHANISM ASSY (DXM-6E20W)	
SWITCH UNIT (X16-6480-xx)					
260	2E	✻	B11-2021-04	OPTICAL DIFFUSER	
261	2F	✻	B11-2022-04	REFLECTION SHEET	
262	2E	✻	B19-2512-02	LIGHTING BOARD	
D1			B30-1566-05	LED (1608,RED)	
D100-106			B30-1800-05	LED (RGB MPXA,B,C,D)	K1M1E3
D100-106			B30-1800-05	LED (RGB MPXA,B,C,D)	E4
D100-106		✻	B30-3208-05	LED (RGB F9)	KE1E2
D107			B30-1784-05	LED (RGB SIDE)	
D110			B30-1784-05	LED (RGB SIDE)	
LCD1	2E	✻	B38-1204-05	LCD	
C1			CK73GB1A105K	CHIP C 1.0UF K	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C4			CK73FB0J106K	CHIP C 10UF K	
C9			CK73GB1C104K	CHIP C 0.10UF K	
C10			CK73GB1H103K	CHIP C 0.010UF K	
C11 ,12			CK73GB1A105K	CHIP C 1.0UF K	
C13			CK73GB1H103K	CHIP C 0.010UF K	
C14 -17			CK73GB1C225K	CHIP C 2.2UF K	
C18			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73GB1A105K	CHIP C 1.0UF K	
C23 ,24			CK73GB1C104K	CHIP C 0.10UF K	
C114			CC73GCH1H101J	CHIP C 100PF J	
C116			CC73GCH1H101J	CHIP C 100PF J	
C119			CC73GCH1H101J	CHIP C 100PF J	
C121			CC73GCH1H101J	CHIP C 100PF J	
C201			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C201			CK73GB1A105K	CHIP C 1.0UF K	E4
C202			CK73GB1H103K	CHIP C 0.010UF K	
C203			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C203			CK73GB1A105K	CHIP C 1.0UF K	E4
CN1		✻	E41-3011-05	FLAT CABLE CONNECTOR	

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-6480-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
CN200			E41-2684-05	PIN ASSY	K1M1E3
CN200			E41-2684-05	PIN ASSY	E4
J1			E59-0852-05	RECTANGULAR PLUG	
J200			E11-0650-05	3.5D PHONE JACK	
J201		✻	E58-1109-05	RECTANGULAR RECEPTACLE	K1M1E3
J201		✻	E58-1109-05	RECTANGULAR RECEPTACLE	E4
263	2E	✻	G11-3776-04	CUSHION	
264	2E	✻	G11-3777-04	CUSHION	
L200			L92-0616-05	CHIP FERRITE	K1M1E3
L200			L92-0616-05	CHIP FERRITE	E4
X1			L78-0872-05	RESONATOR (12MHZ)	
CP1			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP2			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP3			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP4 ,5			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP6 -8			RK74GB1J473J	CHIP-COM 47K J 1/16W	
CP9 -11			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP12-14			RK74GB1J101J	CHIP-COM 100 J 1/16W	
R1 -3			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R4 -8			RK73GB2A101J	CHIP R 100 J 1/10W	
R9			RK73GB2A241J	CHIP R 240 J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R12			RK73GB2A223J	CHIP R 22K J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	
R18			RK73GB2A101J	CHIP R 100 J 1/10W	
R19 ,20			RK73GB2A473J	CHIP R 47K J 1/10W	
R21			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R22 -24			RK73GB2A103J	CHIP R 10K J 1/10W	
R25 ,26			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R31			RK73GB2A473J	CHIP R 47K J 1/10W	
R32			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R33			RK73GB2A106J	CHIP R 10M J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E2
R37			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R37			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R38			RK73GB2A103J	CHIP R 10K J 1/10W	
R39 -41			RK73GB2A473J	CHIP R 47K J 1/10W	
R43			RK73GB2A473J	CHIP R 47K J 1/10W	
R44			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R45			RK73GB2A473J	CHIP R 47K J 1/10W	
R47 ,48			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R49 ,50			RK73GB2A103J	CHIP R 10K J 1/10W	
R100			RK73EB2E331J	CHIP R 330 J 1/4W	
R101			RK73EB2E391J	CHIP R 390 J 1/4W	
R102			RK73EB2E331J	CHIP R 330 J 1/4W	
R103			RK73EB2E161J	CHIP R 160 J 1/4W	
R104			RK73EB2E301J	CHIP R 300 J 1/4W	
R105			RK73EB2E151J	CHIP R 150 J 1/4W	
R106			RK73EB2E161J	CHIP R 160 J 1/4W	
R107			RK73EB2E301J	CHIP R 300 J 1/4W	
R108			RK73EB2E151J	CHIP R 150 J 1/4W	
R109			RK73EB2E331J	CHIP R 330 J 1/4W	
R110			RK73EB2E391J	CHIP R 390 J 1/4W	
R111,112			RK73EB2E331J	CHIP R 330 J 1/4W	
R113			RK73EB2E391J	CHIP R 390 J 1/4W	
R114			RK73EB2E331J	CHIP R 330 J 1/4W	
R115			RK73EB2E561J	CHIP R 560 J 1/4W	
R116			RK73EB2E361J	CHIP R 360 J 1/4W	
R117			RK73EB2E181J	CHIP R 180 J 1/4W	
R121-132			RK73GB2A473J	CHIP R 47K J 1/10W	
R202,203			RK73GB2A120J	CHIP R 12 J 1/10W	K1M1E3
R202,203			RK73GB2A120J	CHIP R 12 J 1/10W	E4
R204			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
S2		✻	S70-0951-05	TACT SWITCH	
S3 -14			S70-0901-05	TACT SWITCH	
S1			T99-0484-05	ROTARY ENCODER	
D202			DA204U	DIODE	
IC1		✻	W05-1435-00	MICROCONTROLLER IC	M1
IC1		✻	30626MHPB89GP	MICROCONTROLLER IC	KE1E2
IC1		✻	30626MHPB89GP	MICROCONTROLLER IC	K1E3E4
IC2			PIC95603	ANALOGUE IC	
IC3			74AHC1G08GW	MOS-IC	
IC6		✻	S-1112B32MCG	ANALOGUE IC	
IC10,11			74AHC1G04GW	MOS-IC	
Q100-111			2SK3018	FET	

PROCESSOR UNIT (X17-2000-01): USB MODEL ONLY

Ref. No.	Add	New	Parts No.	Description	Destination
C700			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C700			CK73GB1A105K	CHIP C 1.0UF K	E4
C701			CK73GB1H103K	CHIP C 0.010UF K	K1M1E3
C701			CK73GB1H103K	CHIP C 0.010UF K	E4
C702			CC73GCH1H180J	CHIP C 18PF J	K1M1E3
C702			CC73GCH1H180J	CHIP C 18PF J	E4
C703			CC73GCH1H220J	CHIP C 22PF J	K1M1E3
C703			CC73GCH1H220J	CHIP C 22PF J	E4
C704,705			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C704,705			CK73GB1A105K	CHIP C 1.0UF K	E4
C707			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C707			CK73GB1A105K	CHIP C 1.0UF K	E4
C708-710			CK73GB1H103K	CHIP C 0.010UF K	K1M1E3
C708-710			CK73GB1H103K	CHIP C 0.010UF K	E4
C711,712			CC73GCH1H150J	CHIP C 15PF J	K1M1E3
C711,712			CC73GCH1H150J	CHIP C 15PF J	E4
C713,714			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C713,714			CK73GB1A105K	CHIP C 1.0UF K	E4
C715,716			CK73FB0J106K	CHIP C 10UF K	K1M1E3
C715,716			CK73FB0J106K	CHIP C 10UF K	E4
C720			CK73FB0J106K	CHIP C 10UF K	K1M1E3
C720			CK73FB0J106K	CHIP C 10UF K	E4
C753			CK73GB1H103K	CHIP C 0.010UF K	K1M1E3
C753			CK73GB1H103K	CHIP C 0.010UF K	E4
C772			CK73GB1C104K	CHIP C 0.10UF K	K1M1E3
C772			CK73GB1C104K	CHIP C 0.10UF K	E4
C774			CE32BF0J221M	CHIP EL 220UF 6.3WV	K1M1E3
C774			CE32BF0J221M	CHIP EL 220UF 6.3WV	E4
C775-777			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

PROCESSOR UNIT (X17-2000-01): USB MODEL ONLY

Ref. No.	Add	New	Parts No.	Description	Destination
C775-777			CK73GB1A105K	CHIP C 1.0UF K	E4
C778			CK73GB1C104K	CHIP C 0.10UF K	K1M1E3
C778			CK73GB1C104K	CHIP C 0.10UF K	E4
C800,801			CC73GCH1H050C	CHIP C 5.0PF C	K1M1E3
C800,801			CC73GCH1H050C	CHIP C 5.0PF C	E4
C803			CK73FB0J475K	CHIP C 4.7UF K	K1M1E3
C803			CK73FB0J475K	CHIP C 4.7UF K	E4
CN770,771			E41-2630-05	FLAT CABLE CONNECTOR	K1M1E3
CN770,771			E41-2630-05	FLAT CABLE CONNECTOR	E4
WH770			E39-0978-05	WIRING HARNESS	K1M1E3
WH770			E39-0978-05	WIRING HARNESS	E4
L772			L92-0652-05	CHIP FERRITE	K1M1E3
L772			L92-0652-05	CHIP FERRITE	E4
X700			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	K1M1E3
X700			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	E4
X701			L77-2964-05	CRYSTAL RESONATOR (9.00MHZ)	K1M1E3
X701			L77-2964-05	CRYSTAL RESONATOR (9.00MHZ)	E4
X800			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	K1M1E3
X800			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	E4
R700			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1M1E3
R700			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4
R701			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R701			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R702			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R702			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R703			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R703			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R704			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R704			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R705			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R705			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R706			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R706			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R707			RK73GB2A104J	CHIP R 100K J 1/10W	K1M1E3
R707			RK73GB2A104J	CHIP R 100K J 1/10W	E4
R708			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R708			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R709,710			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R709,710			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R711			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R711			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R713			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R713			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R714			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R714			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R715			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R715			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R716			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R716			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R719			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R719			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R720			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R720			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R721,722			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R721,722			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R724			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R724			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R725			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1M1E3
R725			RK73GB2A472J	CHIP R 4.7K J 1/10W	E4
R726			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R726			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R727			RK73GB2A105J	CHIP R 1.0M J 1/10W	K1M1E3
R727			RK73GB2A105J	CHIP R 1.0M J 1/10W	E4
R728			RK73GB2A153J	CHIP R 15K J 1/10W	K1M1E3
R728			RK73GB2A153J	CHIP R 15K J 1/10W	E4
R729			RK73GB2A330J	CHIP R 33 J 1/10W	K1M1E3
R729			RK73GB2A330J	CHIP R 33 J 1/10W	E4
R730			RK73GB2A153J	CHIP R 15K J 1/10W	K1M1E3
R730			RK73GB2A153J	CHIP R 15K J 1/10W	E4
R731			RK73GB2A330J	CHIP R 33 J 1/10W	K1M1E3
R731			RK73GB2A330J	CHIP R 33 J 1/10W	E4
R732			RK73GB2A153J	CHIP R 15K J 1/10W	K1M1E3
R732			RK73GB2A153J	CHIP R 15K J 1/10W	E4
R733			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1M1E3
R733			RK73GB2A472J	CHIP R 4.7K J 1/10W	E4
R734-737			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R734-737			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R738			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R738			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R739,740			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R739,740			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R741			RK73GB2A332J	CHIP R 3.3K J 1/10W	K1M1E3
R741			RK73GB2A332J	CHIP R 3.3K J 1/10W	E4
R742			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R742			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R743			RK73GB2A332J	CHIP R 3.3K J 1/10W	K1M1E3
R743			RK73GB2A332J	CHIP R 3.3K J 1/10W	E4
R744-746			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R744-746			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R759			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1M1E3
R759			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4
R760			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R760			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R765,766			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R765,766			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R770			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R770			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R774			RK73GB2A153J	CHIP R 15K J 1/10W	K1M1E3
R774			RK73GB2A153J	CHIP R 15K J 1/10W	E4
R776			RK73GB2A223J	CHIP R 22K J 1/10W	K1M1E3
R776			RK73GB2A223J	CHIP R 22K J 1/10W	E4
R778			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R778			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R781			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1M1E3
R781			RK73GB2A000J	CHIP R 0.0 J 1/10W	E4
R782			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	K1M1E3
R782			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	E4

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

PROCESSOR UNIT (X17-2000-01): USB MODEL ONLY

Ref. No.	Add	New	Parts No.	Description	Destination
R800			RK73GB2A105J	CHIP R 1.0M J 1/10W	K1M1E3
R800			RK73GB2A105J	CHIP R 1.0M J 1/10W	E4
R801-804			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R801-804			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R805			RK73GH2A104D	CHIP R 100K D 1/10W	K1M1E3
R805			RK73GH2A104D	CHIP R 100K D 1/10W	E4
R806-811			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R806-811			RK73GB2A473J	CHIP R 47K J 1/10W	E4
D770,771			AVRL1613R3FTA	VARISTOR	K1M1E3
D770,771			AVRL1613R3FTA	VARISTOR	E4
IC700			92CD28AFG6VV1	MICROCONTROLLER IC	K1M1E3
IC700			92CD28AFG6VV1	MICROCONTROLLER IC	E4
IC751			BR24L04FV-W	ROM IC	K1M1E3
IC751			BR24L04FV-W	ROM IC	E4
IC770			STMPS2151STR	MOS-IC	K1M1E3
IC770			STMPS2151STR	MOS-IC	E4
IC771			R1114N331B-TR	ANALOGUE IC (3.3V LF)	K1M1E3
IC771			R1114N331B-TR	ANALOGUE IC (3.3V LF)	E4
IC800			341S2094	MICROPROCESSOR IC	K1M1E3
IC800			341S2094	MICROPROCESSOR IC	E4
Q701			DTA114YUA	DIGITAL TRANSISTOR	K1M1E3
Q701			DTA114YUA	DIGITAL TRANSISTOR	E4
Q702			DTC114YUA	DIGITAL TRANSISTOR	K1M1E3
Q702			DTC114YUA	DIGITAL TRANSISTOR	E4
Q703			2SB1689	TRANSISTOR	K1M1E3
Q703			2SB1689	TRANSISTOR	E4
Q704,705			DTC114YUA	DIGITAL TRANSISTOR	K1M1E3
Q704,705			DTC114YUA	DIGITAL TRANSISTOR	E4

CD PLAYER UNIT (X32-6130-00): IN DVD MECHA.

C20			CC73GCH1H330J	CHIP C 33PF J	
C23			CC73GCH1H151J	CHIP C 150PF J	
C24			CK73FB1A225K	CHIP C 2.2UF K	
C25			CK73GB1A105K	CHIP C 1.0UF K	
C26			CK73GB1H153K	CHIP C 0.015UF K	
C27			CC73GCH1H470J	CHIP C 47PF J	
C30 -32			CK73GB1H103K	CHIP C 0.010UF K	
C33			CK73GB1H332K	CHIP C 3300PF K	
C34			CK73GB1H104K	CHIP C 0.10UF K	
C35			CK73GB1H153K	CHIP C 0.015UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C38			CC73GCH1H680J	CHIP C 68PF J	
C39			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB1A105K	CHIP C 1.0UF K	
C44			CK73GB1H104K	CHIP C 0.10UF K	
C45			CK73GB1H223K	CHIP C 0.022UF K	
C46			CK73GB1H103K	CHIP C 0.010UF K	
C47 ,48			CK73GB1H333K	CHIP C 0.033UF K	
C49 ,50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H222K	CHIP C 2200PF K	
C52 ,53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CK73GB1A105K	CHIP C 1.0UF K	
C58			CK73GB1A105K	CHIP C 1.0UF K	
C60			CK73EB0J226K	CHIP C 22UF K	
C61 -64			CK73GB1H104K	CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C66			CK73FB1C105K	CHIP C 1.0UF K	
C68 ,69			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73FB0J106K	CHIP C 10UF K	
C87 ,88			CK73GB1H332K	CHIP C 3300PF K	
C89 -91			CK73GB1H104K	CHIP C 0.10UF K	
C94 ,95			CK73GB1A105K	CHIP C 1.0UF K	
C96			CK73GB1H103K	CHIP C 0.010UF K	
C97			CK73GB1H104K	CHIP C 0.10UF K	
C101			CK73GB1C224K	CHIP C 0.22UF K	
C102			CK73GB1A474K	CHIP C 0.47UF K	
C103			CK73GB1H153K	CHIP C 0.015UF K	
C104			CK73FB1A225K	CHIP C 2.2UF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2630-05	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R20			RK73GB2A184J	CHIP R 180K J 1/10W	
R27			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A224J	CHIP R 220K J 1/10W	
R32			RK73GB2A181J	CHIP R 180 J 1/10W	
R33			RK73GB2A153J	CHIP R 15K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R36			RK73GB2A154J	CHIP R 150K J 1/10W	
R37			RK73GB2A334J	CHIP R 330K J 1/10W	
R38			RK73GB2A223J	CHIP R 22K J 1/10W	
R40			RK73GB2A114J	CHIP R 110K J 1/10W	
R41			RK73GB2A473J	CHIP R 47K J 1/10W	
R45			RK73GB2A221J	CHIP R 220 J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R50			RK73GB2A560J	CHIP R 56 J 1/10W	
R51			RK73EB2E220J	CHIP R 22 J 1/4W	
R52			RK73EB2E100J	CHIP R 10 J 1/4W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R59			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R60 ,61			RK73GB2A103J	CHIP R 10K J 1/10W	
R82 ,83			RK73GB2A331J	CHIP R 330 J 1/10W	
R207			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R216,217			RK73GB2A103J	CHIP R 10K J 1/10W	
R221,222			RK73GB2A101J	CHIP R 100 J 1/10W	
R226			RK73GB2A101J	CHIP R 100 J 1/10W	
R228-230			RK73GB2A101J	CHIP R 100 J 1/10W	
R231			RK73GB2A473J	CHIP R 47K J 1/10W	
R232			RK73GB2A104J	CHIP R 100K J 1/10W	
R233			RK73GB2A331J	CHIP R 330 J 1/10W	
R240			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R241			RK73GB2A104J	CHIP R 100K J 1/10W	
R243			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R244			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R246			RK73GB2A104J	CHIP R 100K J 1/10W	

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

CD PLAYER UNIT (X32-6130-00): IN DVD MECHA.

Ref. No.	Add	New	Parts No.	Description			Destination
R247			RK73GB2A101J	CHIP R	100	J 1/10W	
R252			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R257-261			RK73GB2A101J	CHIP R	100	J 1/10W	
R262-264			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R280			RK73GB2A103J	CHIP R	10K	J 1/10W	
R281,282			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R284,285			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R287			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R288			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R289			RK73GB2A103J	CHIP R	10K	J 1/10W	
S1 ,2			S68-0863-05	PUSH SWITCH			
S3			S68-0862-05	PUSH SWITCH			
D2			DAP202U	DIODE			
D3 ,4			DA204U	DIODE			
IC3			BD8222EFV	ANALOGUE IC			
IC4			TC94A70FG-010	MOS-IC			
IC5			S-1132B15U5T1G	ANALOGUE IC			
IC6			S-1132B33U5T1G	ANALOGUE IC			
IC11			XC6218S152MR	MOS-IC			
Q1			2SB0970	TRANSISTOR			
Q13			DTC114YUA	DIGITAL TRANSISTOR			
ELECTRIC UNIT (X34-624x-xx)							
C1			CD04AZ1C332M2	ELECTRO	3300UF	16WV	
C10			CD04AR1C221M	ELECTRO	220UF	16WV	
C11			CK73GB1A105K	CHIP C	1.0UF	K	
C20			C90-6851-05	ELECTRO	220UF	25WV	
C21			CK73GB1H103K	CHIP C	0.010UF	K	
C22			CD04AS1V100M	ELECTRO	10UF	35WV	
C23			CD04AS0J101M	ELECTRO	100UF	6.3WV	
C24			C90-6851-05	ELECTRO	220UF	25WV	
C30			CK73GB1A105K	CHIP C	1.0UF	K	
C31			CD04AY1A101M	ELECTRO	100UF	10WV	
C45			CK73FB1E474K	CHIP C	0.47UF	K	K1M1E3
C45			CK73FB1E474K	CHIP C	0.47UF	K	E4
C50			CK73FB1E474K	CHIP C	0.47UF	K	
C51			CD04AS1C101M	ELECTRO	100UF	16WV	
C60			CD04AS1V100M	ELECTRO	10UF	35WV	K1M1E3
C60			CD04AS1V100M	ELECTRO	10UF	35WV	E4
C61			CK73GB1A105K	CHIP C	1.0UF	K	K1M1E3
C61			CK73GB1A105K	CHIP C	1.0UF	K	E4
C70			CC73GCH1H331J	CHIP C	330PF	J	K1M1E3
C70			CC73GCH1H331J	CHIP C	330PF	J	E4
C71			CK73GB1C104K	CHIP C	0.10UF	K	K1M1E3
C71			CK73GB1C104K	CHIP C	0.10UF	K	E4
C72			CK73GB1A474K	CHIP C	0.47UF	K	K1M1E3
C72			CK73GB1A474K	CHIP C	0.47UF	K	E4
C73			C93-1446-05	CHIP C	10UF	K	K1M1E3
C73			C93-1446-05	CHIP C	10UF	K	E4
C74 ,75			CK73FB0J106K	CHIP C	10UF	K	K1M1E3
C74 ,75			CK73FB0J106K	CHIP C	10UF	K	E4
C76			CK73GB1H104K	CHIP C	0.10UF	K	K1M1E3
C76			CK73GB1H104K	CHIP C	0.10UF	K	E4
C77			CK73EB1E105K	CHIP C	1.0UF	K	K1M1E3
C77			CK73EB1E105K	CHIP C	1.0UF	K	E4

Ref. No.	Add	New	Parts No.	Description			Destination
C120			CK73GB1H102K	CHIP C	1000PF	K	
C122			CK73GB1H103K	CHIP C	0.010UF	K	
C140			CK73GB1H104K	CHIP C	0.10UF	K	
C141			CK73GB1A105K	CHIP C	1.0UF	K	
C142			CD04AS1H3R3M	ELECTRO	3.3UF	50WV	
C170			CK73GB1H103K	CHIP C	0.010UF	K	
C180			CK73GB1A105K	CHIP C	1.0UF	K	
C181			CK73GB1H223K	CHIP C	0.022UF	K	
C200,201			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	K1M1E3
C200,201			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	E4
C202			CK73GB1C104K	CHIP C	0.10UF	K	K1M1E3
C202			CK73GB1C104K	CHIP C	0.10UF	K	E4
C203			CK73GB0J225K	CHIP C	2.2UF	K	K1M1E3
C203			CK73GB0J225K	CHIP C	2.2UF	K	E4
C205			CK73GB1C104K	CHIP C	0.10UF	K	K1M1E3
C205			CK73GB1C104K	CHIP C	0.10UF	K	E4
C206			CK73GB1A105K	CHIP C	1.0UF	K	K1M1E3
C206			CK73GB1A105K	CHIP C	1.0UF	K	E4
C207,208			CK73GB1C104K	CHIP C	0.10UF	K	K1M1E3
C207,208			CK73GB1C104K	CHIP C	0.10UF	K	E4
C209,210			CK73GB1A105K	CHIP C	1.0UF	K	K1M1E3
C209,210			CK73GB1A105K	CHIP C	1.0UF	K	E4
C211			CK73GB1C104K	CHIP C	0.10UF	K	K1M1E3
C211			CK73GB1C104K	CHIP C	0.10UF	K	E4
C213			CK73FB0J475K	CHIP C	4.7UF	K	K1M1E3
C213			CK73FB0J475K	CHIP C	4.7UF	K	E4
C214,215			CC73GCH1H150J	CHIP C	15PF	J	K1M1E3
C214,215			CC73GCH1H150J	CHIP C	15PF	J	E4
C216			CK73GB1C104K	CHIP C	0.10UF	K	K1M1E3
C216			CK73GB1C104K	CHIP C	0.10UF	K	E4
C217			CK73GB1A474K	CHIP C	0.47UF	K	K1M1E3
C217			CK73GB1A474K	CHIP C	0.47UF	K	E4
C220-225			CK73GB1H332K	CHIP C	3300PF	K	K1M1E3
C220-225			CK73GB1H332K	CHIP C	3300PF	K	E4
C320-323			CK73EB1A475K	CHIP C	4.7UF	K	
C324			CK73GB1H103K	CHIP C	0.010UF	K	
C326			CK73EB1A475K	CHIP C	4.7UF	K	
C327			CC73GCH1H101J	CHIP C	100PF	J	
C340-343			CK73GB1H103K	CHIP C	0.010UF	K	
C350			CK73FB1A225K	CHIP C	2.2UF	K	E1E2K1
C350			CK73FB1A225K	CHIP C	2.2UF	K	E3E4
C351			CC73GCH1H331J	CHIP C	330PF	J	E1E2K1
C351			CC73GCH1H331J	CHIP C	330PF	J	E3E4
C353			CK73GB1C104K	CHIP C	0.10UF	K	E1E2K1
C353			CK73GB1C104K	CHIP C	0.10UF	K	E3E4
C354			CD04AS1V100M	ELECTRO	10UF	35WV	E1E2K1
C354			CD04AS1V100M	ELECTRO	10UF	35WV	E3E4
C355			CK73GB1H103K	CHIP C	0.010UF	K	E1E2K1
C355			CK73GB1H103K	CHIP C	0.010UF	K	E3E4
C356,357			CC73GCH1H180J	CHIP C	18PF	J	E1E2K1
C356,357			CC73GCH1H180J	CHIP C	18PF	J	E3E4
C400-403			CK73GB1H332K	CHIP C	3300PF	K	
C404-407			CD04AS1V100M	ELECTRO	10UF	35WV	
C420			CK73GB1A474K	CHIP C	0.47UF	K	
C421			CD04AS1C470M	ELECTRO	47UF	16WV	

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-624x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C422			CK73GB1A474K	CHIP C 0.47UF K	
C423			CK73GB1H103K	CHIP C 0.010UF K	
C450			CK73FB1C105K	CHIP C 1.0UF K	
C451			C90-6711-05	ELECTRO 1UF 50WV	
C455-458			C90-6768-05	ELECTRO 0.22UF 16WV	
C460			CK73FB1C105K	CHIP C 1.0UF K	
C461			CD04AS1A330M	ELECTRO 33UF 10WV	
C470			CD04AS1V100M	ELECTRO 10UF 35WV	
C471			CK73GB1H103K	CHIP C 0.010UF K	
C472,473			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	K1M1E3
C472,473			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	E4
C474-479			CK73GB1A105K	CHIP C 1.0UF K	K1M1E3
C474-479			CK73GB1A105K	CHIP C 1.0UF K	E4
C478,479			CK73GB1A105K	CHIP C 1.0UF K	KE1E2
C480			CD04AS1V100M	ELECTRO 10UF 35WV	
C481,482			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C483-485			CK73GB1A105K	CHIP C 1.0UF K	
C488,489			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C490,491			CK73GB1A105K	CHIP C 1.0UF K	
C492			CD04AS1C470M	ELECTRO 47UF 16WV	
C493,494			CK73GB1A474K	CHIP C 0.47UF K	
C500			CC73GCH1H220J	CHIP C 22PF J	
C501			CC73GCH1H180J	CHIP C 18PF J	
C502			CK73GB1C104K	CHIP C 0.10UF K	
C503-505			CK73GB1H103K	CHIP C 0.010UF K	
C508			CK73GB1H103K	CHIP C 0.010UF K	
C510			CD04AS1C220M	ELECTRO 22UF 16WV	
C511-513			CK73GB1H103K	CHIP C 0.010UF K	
C514			CK73GB1H102K	CHIP C 1000PF K	
C515			CK73GB1H103K	CHIP C 0.010UF K	
C550			CK73GB1A474K	CHIP C 0.47UF K	
C551			CE32BJ0J470M	CHIP EL 47UF 6.3WV	
C552			CK73GB1A474K	CHIP C 0.47UF K	
C553			CK73GB1H103K	CHIP C 0.010UF K	
C680			CK73GB1H103K	CHIP C 0.010UF K	
C691			CK73GB1H103K	CHIP C 0.010UF K	
CN370			E41-1685-05	PIN ASSY	E1E2E3
CN370			E41-1685-05	PIN ASSY	E4
CN690			E41-2635-05	FLAT CABLE CONNECTOR	
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J400			E63-0896-05	PIN JACK	
J420			E56-0855-05	CYLINDRICAL RECEPTACLE	
J550			E58-1060-15	RECTANGULAR RECEPTACLE	
W800-805			E31-0001-00	JUMPER WIRE	KM1
W800-812			E31-0001-00	JUMPER WIRE	E1E2K1
W800-812			E31-0001-00	JUMPER WIRE	E3E4
W807-812			E31-0001-00	JUMPER WIRE	KM1
W814-820			E31-0001-00	JUMPER WIRE	KE1E2
W814-835			E31-0001-00	JUMPER WIRE	K1M1E3
W814-835			E31-0001-00	JUMPER WIRE	E4
W823			E31-0001-00	JUMPER WIRE	KE1E2
W827			E31-0001-00	JUMPER WIRE	KE1E2
W829			E31-0001-00	JUMPER WIRE	KE1E2
W832-835			E31-0001-00	JUMPER WIRE	KE1E2
W837-840			E31-0001-00	JUMPER WIRE	KE1E2
W837-842			E31-0001-00	JUMPER WIRE	K1M1E3
W837-842			E31-0001-00	JUMPER WIRE	E4
W842			E31-0001-00	JUMPER WIRE	KE1E2
WH340			E30-6438-05	CORD WITH PLUG (ANT)	
WH370		✻	E30-6781-15	WIRING HARNESS (REMO)	KK1M1
⚠ L1			L33-2459-05	CHOKE COIL ASSY	
L71			L33-2462-05	SMALL FIXED INDUCTOR (22UH)	K1M1E3
L71			L33-2462-05	SMALL FIXED INDUCTOR (22UH)	E4
L500			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
X200		✻	L77-2992-05	CRYSTAL RESONATOR (12.288MHZ)	K1M1E3
X200		✻	L77-2992-05	CRYSTAL RESONATOR (12.288MHZ)	E4
X350			L77-2002-05	CRYSTAL RESONATOR	E1E2K1
X350			L77-2002-05	CRYSTAL RESONATOR	E3E4
X500			L78-0872-05	RESONATOR (12MHZ)	
X501			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
D	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
G	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
H	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
CP370			RK74GB1J101J	CHIP-COM 100 J 1/16W	E1E2E3
CP370			RK74GB1J101J	CHIP-COM 100 J 1/16W	E4
CP420,421			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP422			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP550			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP551			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R10			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R11			RK73GH2A243D	CHIP R 24K D 1/10W	
R12			RK73FB2B221J	CHIP R 220 J 1/8W	
R20			RK73FB2B153J	CHIP R 15K J 1/8W	
R21			RK73GB2A223J	CHIP R 22K J 1/10W	
R22			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R30			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R45			RK73GB2A122J	CHIP R 1.2K J 1/10W	K1M1E3
R45			RK73GB2A122J	CHIP R 1.2K J 1/10W	E4
R50			RK73FB2B182J	CHIP R 1.8K J 1/8W	
R52			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73FB2B682J	CHIP R 6.8K J 1/8W	K1M1E3
R60			RK73FB2B682J	CHIP R 6.8K J 1/8W	E4
R62			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	K1M1E3
R62			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	E4
R70			RK73GH2A104D	CHIP R 100K D 1/10W	K1M1E3
R70			RK73GH2A104D	CHIP R 100K D 1/10W	E4
R71			RK73GH2A333D	CHIP R 33K D 1/10W	K1M1E3
R71			RK73GH2A333D	CHIP R 33K D 1/10W	E4
R72			RK73GH2A123D	CHIP R 12K D 1/10W	K1M1E3
R72			RK73GH2A123D	CHIP R 12K D 1/10W	E4
R73			RK73GH2A183D	CHIP R 18K D 1/10W	K1M1E3
R73			RK73GH2A183D	CHIP R 18K D 1/10W	E4
R74			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R74			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R75 ,76			RK73EB2E271J	CHIP R 270 J 1/4W	K1M1E3
R75 ,76			RK73EB2E271J	CHIP R 270 J 1/4W	E4
R77			RS14DB3AR47J	FL-PROOF RS 0.47 J 1W	K1M1E3
R77			RS14DB3AR47J	FL-PROOF RS 0.47 J 1W	E4

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-624x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R78			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R78			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R79 ,80			RK73EB2E271J	CHIP R 270 J 1/4W	K1M1E3
R79 ,80			RK73EB2E271J	CHIP R 270 J 1/4W	E4
R120,121			RK73GB2A103J	CHIP R 10K J 1/10W	
R126			RK73GB2A183J	CHIP R 18K J 1/10W	
R127			RK73FB2B203J	CHIP R 20K J 1/8W	
R128			RK73GB2A104J	CHIP R 100K J 1/10W	
R129			RK73EB2E473J	CHIP R 47K J 1/4W	
R130			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R132			RK73FB2B683J	CHIP R 68K J 1/8W	
R133,134			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R140			RK73GB2A223J	CHIP R 22K J 1/10W	
R141,142			RK73PB2H561J	CHIP R 560 J 1/2W	
R143			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R144,145			RK73PB2H561J	CHIP R 560 J 1/2W	
R150			RK73GB2A223J	CHIP R 22K J 1/10W	
R151,152			RK73PB2H221J	CHIP R 220 J 1/2W	
R153			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R170,171			RK73GB2A473J	CHIP R 47K J 1/10W	
R172			RK73EB2E103J	CHIP R 10K J 1/4W	
R180			RK73GB2A473J	CHIP R 47K J 1/10W	
R181			RK73EB2E103J	CHIP R 10K J 1/4W	
R200			RK73GB2A220J	CHIP R 22 J 1/10W	K1M1E3
R200			RK73GB2A220J	CHIP R 22 J 1/10W	E4
R201			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K1M1E3
R201			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	E4
R202,203			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R202,203			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R204			RK73GB2A220J	CHIP R 22 J 1/10W	K1M1E3
R204			RK73GB2A220J	CHIP R 22 J 1/10W	E4
R205			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R205			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R206			RK73GB2A105J	CHIP R 1.0M J 1/10W	K1M1E3
R206			RK73GB2A105J	CHIP R 1.0M J 1/10W	E4
R207,208			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1M1E3
R207,208			RK73GB2A472J	CHIP R 4.7K J 1/10W	E4
R209-211			RK73GB2A221J	CHIP R 220 J 1/10W	K1M1E3
R209-211			RK73GB2A221J	CHIP R 220 J 1/10W	E4
R212			RK73GB2A100J	CHIP R 10 J 1/10W	K1M1E3
R212			RK73GB2A100J	CHIP R 10 J 1/10W	E4
R216			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K1M1E3
R216			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	E4
R217			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R217			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R218			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R218			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R219,220			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1M1E3
R219,220			RK73GB2A472J	CHIP R 4.7K J 1/10W	E4
R224-229			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1M1E3
R224-229			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4
R230,231			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R230,231			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R233			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1
R320,321			RK73GB2A334J	CHIP R 330K J 1/10W	
R322			RK73GB2A473J	CHIP R 47K J 1/10W	
R323			RK73GB2A333J	CHIP R 33K J 1/10W	
R324			RK73GB2A473J	CHIP R 47K J 1/10W	
R325			RK73GB2A821J	CHIP R 820 J 1/10W	
R326			RK73GB2A104J	CHIP R 100K J 1/10W	
R327			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R328			RK73GB2A473J	CHIP R 47K J 1/10W	
R329			RK73GB2A103J	CHIP R 10K J 1/10W	
R331			RK73GB2A103J	CHIP R 10K J 1/10W	
R332			RK73GB2A101J	CHIP R 100 J 1/10W	
R340			RK73GB2A223J	CHIP R 22K J 1/10W	
R341			RK73FB2B821J	CHIP R 820 J 1/8W	
R350-352			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2K1
R350-352			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R353			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2K1
R353			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R354			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2
R355			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2K1
R355			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3E4
R357,358			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2K1
R357,358			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R359			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2K1
R359			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R360			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2K1
R360			RK73GB2A223J	CHIP R 22K J 1/10W	E3E4
R370			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R371-373			RK73EB2E471J	CHIP R 470 J 1/4W	E1E2E3
R371-373			RK73EB2E471J	CHIP R 470 J 1/4W	E4
R400-403			RK73FB2B181J	CHIP R 180 J 1/8W	
R404-407			RK73GB2A223J	CHIP R 22K J 1/10W	
R408-411			RK73GB2A361J	CHIP R 360 J 1/10W	
R412			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R420			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R421,422			RK73EB2E101J	CHIP R 100 J 1/4W	
R423			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R424,425			RK73EB2E101J	CHIP R 100 J 1/4W	
R426			RK73EB2E100J	CHIP R 10 J 1/4W	
R427			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R428			RK73EB2E100J	CHIP R 10 J 1/4W	
R429,430			RK73EB2E101J	CHIP R 100 J 1/4W	
R431			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R432-435			RK73GB2A473J	CHIP R 47K J 1/10W	
R452			RK73GB2A223J	CHIP R 22K J 1/10W	
R453			RK73GB2A221J	CHIP R 220 J 1/10W	
R454			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R455			RK73GB2A100J	CHIP R 10 J 1/10W	
R457			RK73GB2A333J	CHIP R 33K J 1/10W	
R472			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R473,474			RK73GB2A103J	CHIP R 10K J 1/10W	
R477,478			RK73GB2A101J	CHIP R 100 J 1/10W	
R479			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R480			RK73GB2A101J	CHIP R 100 J 1/10W	
R501			RK73GB2A104J	CHIP R 100K J 1/10W	
R503			RK73GB2A222J	CHIP R 2.2K J 1/10W	

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-624x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R504			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R505			RK73GB2A101J	CHIP R 100 J 1/10W	
R506,507			RK73GB2A103J	CHIP R 10K J 1/10W	
R508			RK73GB2A104J	CHIP R 100K J 1/10W	
R509			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R511			RK73GB2A103J	CHIP R 10K J 1/10W	
R512			RK73GB2A101J	CHIP R 100 J 1/10W	
R513			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R514			RK73GB2A104J	CHIP R 100K J 1/10W	
R515			RK73GB2A471J	CHIP R 470 J 1/10W	
R516			RK73GB2A104J	CHIP R 100K J 1/10W	
R517			RK73GB2A471J	CHIP R 470 J 1/10W	
R518,519			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R522,523			RK73GB2A101J	CHIP R 100 J 1/10W	
R526			RK73GB2A473J	CHIP R 47K J 1/10W	
R527			RK73GB2A223J	CHIP R 22K J 1/10W	
R529			RK73GB2A473J	CHIP R 47K J 1/10W	
R530,531			RK73GB2A104J	CHIP R 100K J 1/10W	
R533			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R533			RK73GB2A473J	CHIP R 47K J 1/10W	E1E3
R533,534			RK73GB2A223J	CHIP R 22K J 1/10W	E2E4
R534			RK73GB2A223J	CHIP R 22K J 1/10W	E1E3
R534			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R535,536			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R537,538			RK73GB2A101J	CHIP R 100 J 1/10W	
R539			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R540			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R550			RK73EB2E100J	CHIP R 10 J 1/4W	
R551			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R552			RK73EB2E100J	CHIP R 10 J 1/4W	
R553,554			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R555			RK73GB2A223J	CHIP R 22K J 1/10W	
R556,557			RK73GB2A103J	CHIP R 10K J 1/10W	
R558-561			RK73GB2A473J	CHIP R 47K J 1/10W	
R562,563			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R660,661			RK73GB2A102J	CHIP R 1.0K J 1/10W	KE1E2
R662,663			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E2
R664,665			RK73GB2A101J	CHIP R 100 J 1/10W	KE1E2
R680,681			RK73GB2A101J	CHIP R 100 J 1/10W	K1M1E3
R680,681			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R682			RK73GB2A473J	CHIP R 47K J 1/10W	K1M1E3
R682			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R683			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1M1E3
R683			RK73GB2A000J	CHIP R 0.0 J 1/10W	E4
R685-689			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1M1E3
R685-689			RK73GB2A000J	CHIP R 0.0 J 1/10W	E4
R690-695			RK73GB2A101J	CHIP R 100 J 1/10W	
R696			RK73GB2A473J	CHIP R 47K J 1/10W	
R697,698			RK73GB2A101J	CHIP R 100 J 1/10W	
R699-702			RK73GB2A473J	CHIP R 47K J 1/10W	
R807,808			RK73GB2A473J	CHIP R 47K J 1/10W	
D1			S2V60-5009F46	DIODE	
D20			RB160L-40	DIODE	
D21			UDZW5.6(B)	ZENER DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D30			UDZW8.2(B)	ZENER DIODE	
D45			UDZW20(B)	ZENER DIODE	K1M1E3
D45			UDZW20(B)	ZENER DIODE	E4
D50			UDZW10(B)	ZENER DIODE	
D51			1SS355	DIODE	
D60			UDZW5.6(B)	ZENER DIODE	K1M1E3
D60			UDZW5.6(B)	ZENER DIODE	E4
D70			RB160L-40	DIODE	K1M1E3
D70			RB160L-40	DIODE	E4
D121,122			UDZW6.8(B)	ZENER DIODE	
D123			UDZW6.2(B)	ZENER DIODE	
D140			1SS355	DIODE	
D141,142			1SR154-400	DIODE	
D150,151			1SR154-400	DIODE	
D170			UDZW4.7(B)	ZENER DIODE	
D200,201			DA204U	DIODE	K1M1E3
D200,201			DA204U	DIODE	E4
D320			DA204U	DIODE	
D370			UDZW6.2(B)	ZENER DIODE	KK1M1
D370-373			UDZW6.2(B)	ZENER DIODE	E1E2E3
D370-373			UDZW6.2(B)	ZENER DIODE	E4
D402,403			DAP202U	DIODE	
D420-422			UDZW6.8(B)	ZENER DIODE	
D423-428			UDZW6.2(B)	ZENER DIODE	
D451			1SS355	DIODE	
D460			1SS355	DIODE	
D470-472			DAP202U	DIODE	
D473			UDZW3.3(B)	ZENER DIODE	
D474			DAP202U	DIODE	K1E3E4
D550-552			UDZW6.8(B)	ZENER DIODE	
D850,851			DA204U	DIODE	
IC10			M5237ML-CF0J	ANALOGUE IC	
IC70			LT3684EMSE	ANALOGUE IC	K1M1E3
IC70			LT3684EMSE	ANALOGUE IC	E4
IC200		✻	AK4626AVQ	MOS-IC	K1M1E3
IC200		✻	AK4626AVQ	MOS-IC	E4
IC201		✻	NJU26904V-ZB	MOS-IC	K1M1E3
IC201		✻	NJU26904V-ZB	MOS-IC	E4
IC202			S-1132B33U5T1G	ANALOGUE IC	K1M1E3
IC202			S-1132B33U5T1G	ANALOGUE IC	E4
IC320			NJM4565V-ZB	ANALOGUE IC	
IC350			E-TDA7478AD	ANALOGUE IC	E1E2K1
IC350			E-TDA7478AD	ANALOGUE IC	E3E4
IC450			E-TDA7850A	ANALOGUE IC	
IC470			E-TDA7415CB	ANALOGUE IC	
IC500		✻	30624MWPB84GP	MICROCONTROLLER IC	K1M1
IC500		✻	30624MWPB85GP	MICROCONTROLLER IC	E3E4
IC500		✻	30624MWPB86GP	MICROCONTROLLER IC	K
IC500		✻	30626MHPB87GP	MICROCONTROLLER IC	E1E2
IC501			XC6120N362N1	MOS-IC	
IC502			74HC2G02DP	MOS-IC	
IC503			BR24L04FV-W	ROM IC	
IC690			74LVC08APW	MOS-IC	
IC691			74AHCT08PW	MOS-IC	
Q10			KTA1046-P	TRANSISTOR	

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-624x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q11 ,12			UMC2N	TRANSISTOR	
Q20			KTA1046-P	TRANSISTOR	
Q21			2SC4081	TRANSISTOR	
Q22			2SA1577	TRANSISTOR	
Q23			DTC124EUA	DIGITAL TRANSISTOR	
Q30			KTA1046-P	TRANSISTOR	
Q31			2SC4081	TRANSISTOR	
Q45			2SB1443	TRANSISTOR	K1M1E3
Q45			2SB1443	TRANSISTOR	E4
Q46			2SC4081	TRANSISTOR	K1M1E3
Q46			2SC4081	TRANSISTOR	E4
Q50			KTA1046-P	TRANSISTOR	
Q51			2SC4081	TRANSISTOR	
Q52			UMC2N	TRANSISTOR	
Q60			KTA1046-P	TRANSISTOR	K1M1E3
Q60			KTA1046-P	TRANSISTOR	E4
Q61			2SC4081	TRANSISTOR	K1M1E3
Q61			2SC4081	TRANSISTOR	E4
Q120			2SC4081	TRANSISTOR	
Q122,123			2SC4081	TRANSISTOR	
Q140			DTC114YUA	DIGITAL TRANSISTOR	
Q141			DTA114EUA	DIGITAL TRANSISTOR	
Q142			2SA1576A	TRANSISTOR	
Q143			2SB1188(Q,R)	TRANSISTOR	
Q150			2SB1188(Q,R)	TRANSISTOR	
Q151			DTC114YUA	DIGITAL TRANSISTOR	
Q180			DTC144EUA	DIGITAL TRANSISTOR	
Q320			2SC4617	TRANSISTOR	
Q340			2SA1577	TRANSISTOR	
Q341			DTC124EUA	DIGITAL TRANSISTOR	
Q400-403			DTC143TUA	DIGITAL TRANSISTOR	
Q404,405			DTA124EUA	DIGITAL TRANSISTOR	
Q550			DTA124EUA	DIGITAL TRANSISTOR	
Q551			2SA1577	TRANSISTOR	
Q552			DTC124EUA	DIGITAL TRANSISTOR	
Q690			DTC114YUA	DIGITAL TRANSISTOR	
A340			X86-4032-70	FRONT-END UNIT	E1E2E3
A340			X86-4032-70	FRONT-END UNIT	E4
A340			X86-4160-11	FRONT-END UNIT	KK1M1

CD MECHANISM ASSY (X92-6130-00): (DXM-6E20W)

1	2B		A10-5328-31	CHASSIS	
2	1B		A10-5329-11	CHASSIS	
5	2B		D10-4910-13	ARM ASSY	
8	2A		D10-4911-23	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-22	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-23	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0271-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-14	FLAT SPRING	
45	2B		G02-1547-14	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B		J22-0519-13	MOUNTING HARDWARE	
55	1A		J90-1138-41	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J86-0039-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (BIND PT 2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW)(PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

E1: DPX313Y **E2**: DPX303 **E3**: DPX503UY **E4**: DPX503U (Europe)
K: DPX303 **K1**: DPX503 (North America) **M1**: DPX-MP6110U (Other Areas)

⚠Indicates safety critical components.