Pioneer

Service Manual

ORDER NO.
CRT4769

COMPLETE CAR AUDIO PACKAGE CD RECEIVER

DXT-2369UB/XSUS

This service manual should be used together with the following manual(s) listed below. For the parts numbers, adjustments, etc. which are not shown in this manual, refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
DEH-22UB/XSUC	CRT4454		
CX-3269	CRT4488	S11iPod/USB	CD Mech. Module : Circuit Descriptions, Mech. Descriptions, Disassembly

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2011**
K-ZZZ AUG. 2011 Printed in Japan

SAFETY INFORMATION

WARNING

This product may contain a chemical known to the State of California to cause cancer, or birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

EXPLODED VIEWS AND PARTS LIST

PACKING(Page 32)

PACKING SECTION PARTS LIST

* : Non spare part

Mark	No.	Description	DEH-22UB/XSUC	DXT-2369UB/XSUS
	2	Remote Control Unit	CXE2758	Not used
	3	Cord Assy	YDP5039	QDP3013
	11	Unit Box	YHG5557	CHG7679
	12	Contain Box	YHL5557	CHL7679
	13	Protector	YHP5071	CHP4296
	14	Protector	YHP5072	CHP4297
*	15-1	Warranty Card	CRY1276	QRY3001
	15-2	Owner's Manual	YRD5305	CRD4596
		Sub Unit Box	Not used	CHG7680
*		Speaker Set	Not used	TS-16695P/XIES
*		Speaker	Not used	16-1624CA/XI
*		Speaker	Not used	231-342CA/XI

Owner's Manual

Part No.	Language
CRD4596	English, Spanish(Espanol)

ELECTRICAL PARTS LIST(Page 66)

TUNER AMP UNIT

Circuit Symbol and No.	Part Name	DEH-22UB/XSUC	DXT-2369UB/XSUS
IC201	IC	PML014A	PML014B
IC301	IC	PAL007C	PAL007E
IC501	IC	BD9007F	BD9008F
IC601	IC	PN5035B	PNQ004A
Q351	Transistor	RT3T22M	RN4983
Q752	Transistor	RT3T22M	RN4983
Q802	Transistor	RT1N141M-11	LTC114EUB
L501	Choke Coil 47 uH	CTH1420	CTH1475
ANT401	Antenna Jack	CKX1070	YKS5041
R677		RS1/16SS473J	Not used
R680		RS1/16SS273J	RS1/16SS473J
R681		RS1/16SS473J	Not used

SERVICE UNIT

Circuit Symbol and No.	Part Name	DEH-22UB/XSUC	DXT-2369UB/XSUS
IC691		PDH144A	Not used
R691		RS1/10SR103J	Not used
R692		RS1/10SR103J	Not used

EXPLODED VIEWS AND PARTS LIST
EXTERIOR

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

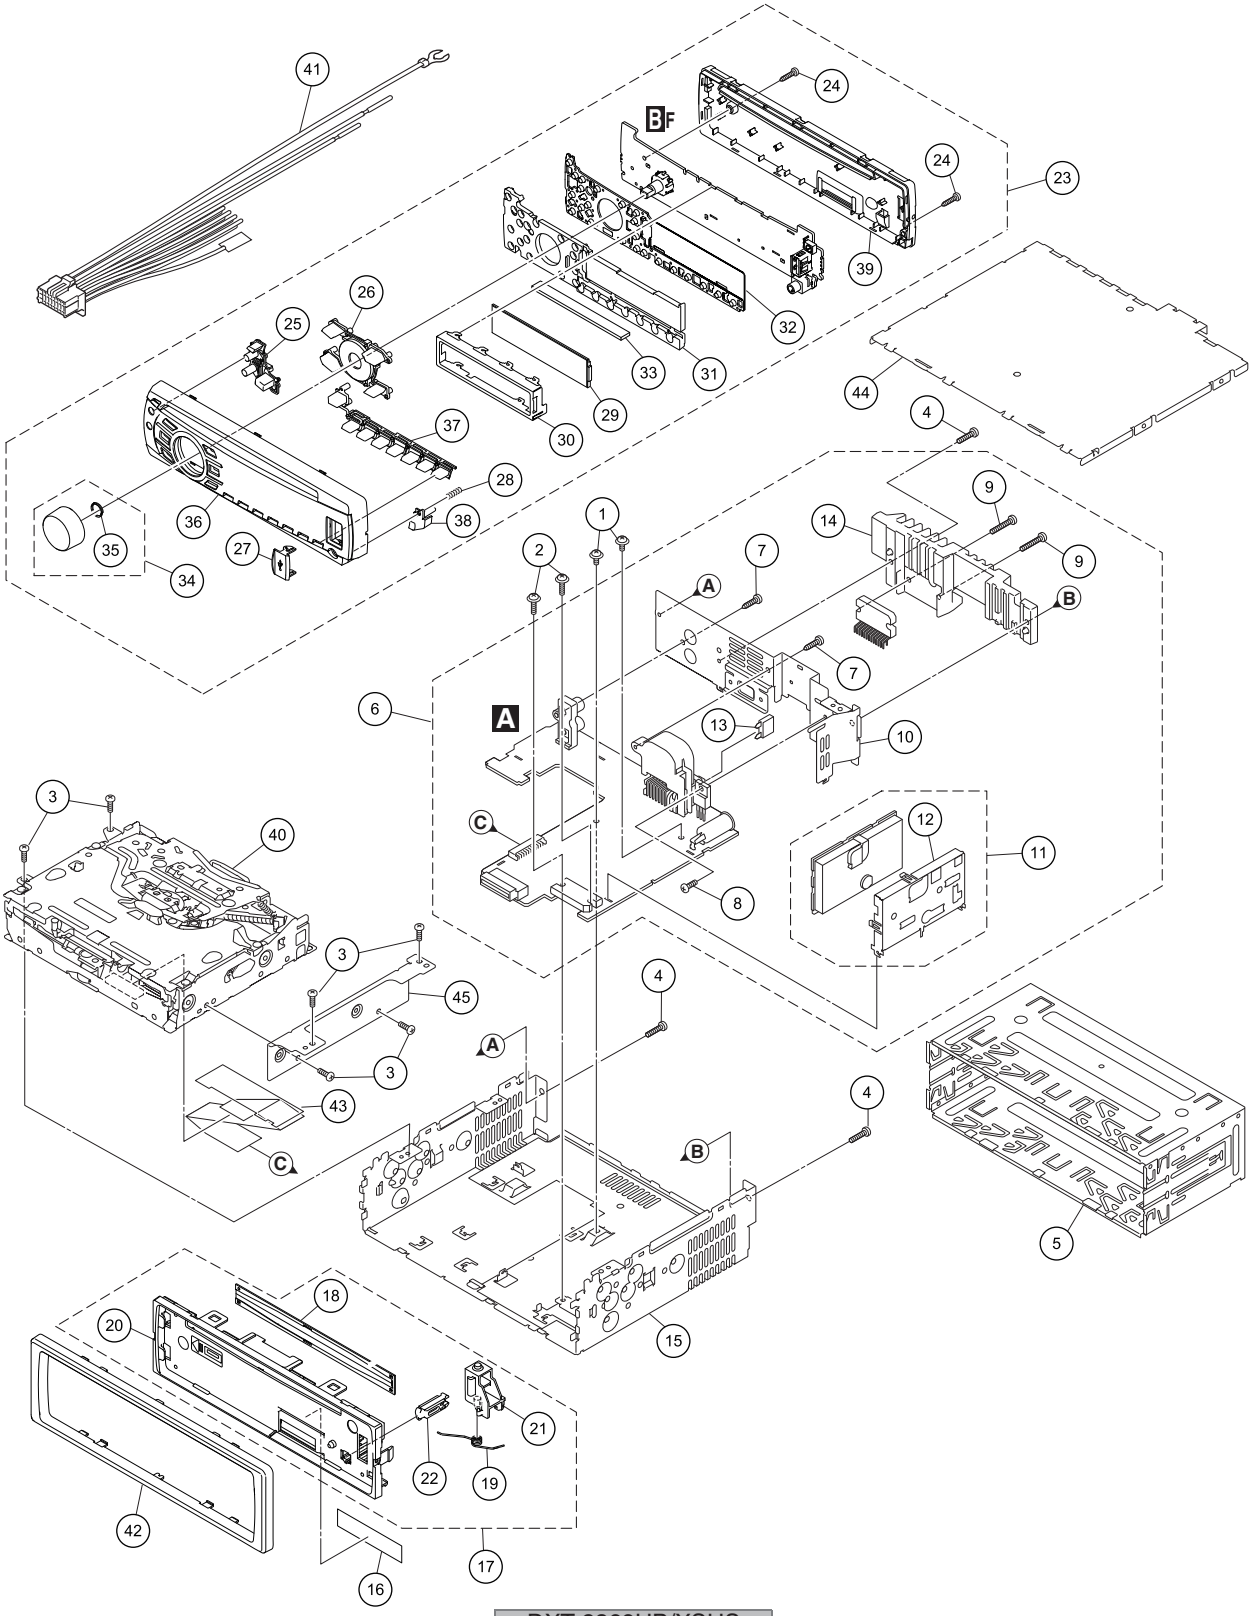

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	ASZ26P080FTC
	3	Screw	BSZ26P060FTC
	4	Screw	BSZ26P100FTC
	5	Holder	CND3598
	6	Tuner Amp Unit	CWN6452
	7	Screw	BPZ26P080FTC
	8	Screw	BSZ26P060FTC
	9	Screw	BSZ26P160FTC
	10	Holder	CND6366
	11	FM/AM Tuner Unit	CWE2256
	12	Holder	CND3466
⚠	13	Fuse(10 A)	YEK5001
	14	Heat Sink	YNR5139
	15	Chassis Unit	YXA5652
*	16	Seal	CAN3984
	17	Panel Unit	CXE5040
*	18	Cover	CNN1665
	19	Spring	QBH3001
*	20	Panel	QNS3180
*	21	Arm	QNV3025
*	22	Button	QNV3026
	23	Detach Grille Assy	CXE5055
	24	Screw	BPZ20P100FTC
	25	Button(EJECT, SRC, BAND, LEFT)	CAI3203
	26	Button(LIST, RPT, UP, DOWN)	CAI3204
	27	Door	CAT2921
	28	Spring	CBH2210
	29	LCD	CAW1998
	30	Holder	QNC3027
	31	Lighting Conductor	QNV3022
	32	Rubber	QNV3023
	33	Connector	YNV5192
	34	Knob Unit	CXE3692
	35	Spring	YBL5010
	36	Grille Unit	CXE5063
	37	Button(RIGHT, -, 1-6)	QAC3052
	38	Button(DETACH)	QAC3053
	39	Cover	QNS3125
	40	CD Mechanism Module(S11)	CXK5870
	41	Cord Assy	QDP3013
	42	Panel	QNS3127
	43	Cable	YDE5059
	44	Case	YNB5063
	45	Holder	YND5048