9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 EXTEIROR SECTION

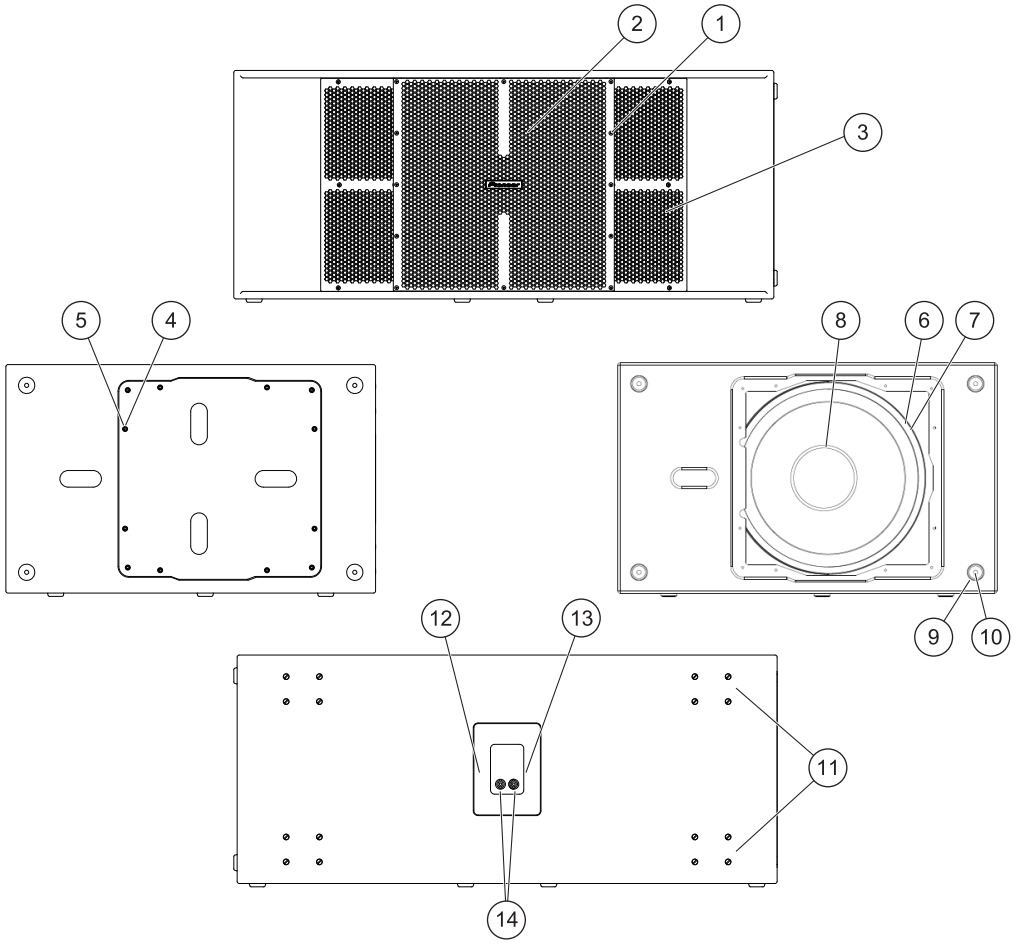

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw for grille	See Contrast table (2)
	2	Grill for center mouth	See Contrast table (2)
	3	Grill for side mouth	See Contrast table (2)
	4	Screw for side door (M6 x 40)	See Contrast table (2)
	5	Flat washer for side door (M6)	06D006
	6	Screw for drive unit (M6 x 40)	06G003
	7	Spring washer for drive unit (M6)	06D0075
	8	Drive unit	PT-XY118SL1 (01A027)
	9	Rubber foot	05A004
	10	Screw for rubber foot (M5 x 20)	See Contrast table (2)
	11	Blind screw for castor (M8 x 20)	06G045
	12	Connector & PCB assy	07AX005
	13	Screw for connector panel	06A006
	14	Nut for fix connector	06E008

(2) CONTRAST TABLE

XY-218HS/XGBWM and XY-218HS-W/XGBWM are constructed the same except for the following:

Mark	No.	Symbol and Description	XY-218HS/XGBWM	XY-218HS-W/XGBWM
	1	Screw for grille	06F002	06F002-SF
	2	Grill for center mouth	04X912	04X912W
	3	Grill for side mouth	04X913	04X913W
	4	Screw for side door (M6 x 40)	06G003	06B361A
	10	Screw for rubber foot (M5 x 20)	06B011	06B011-SF