9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

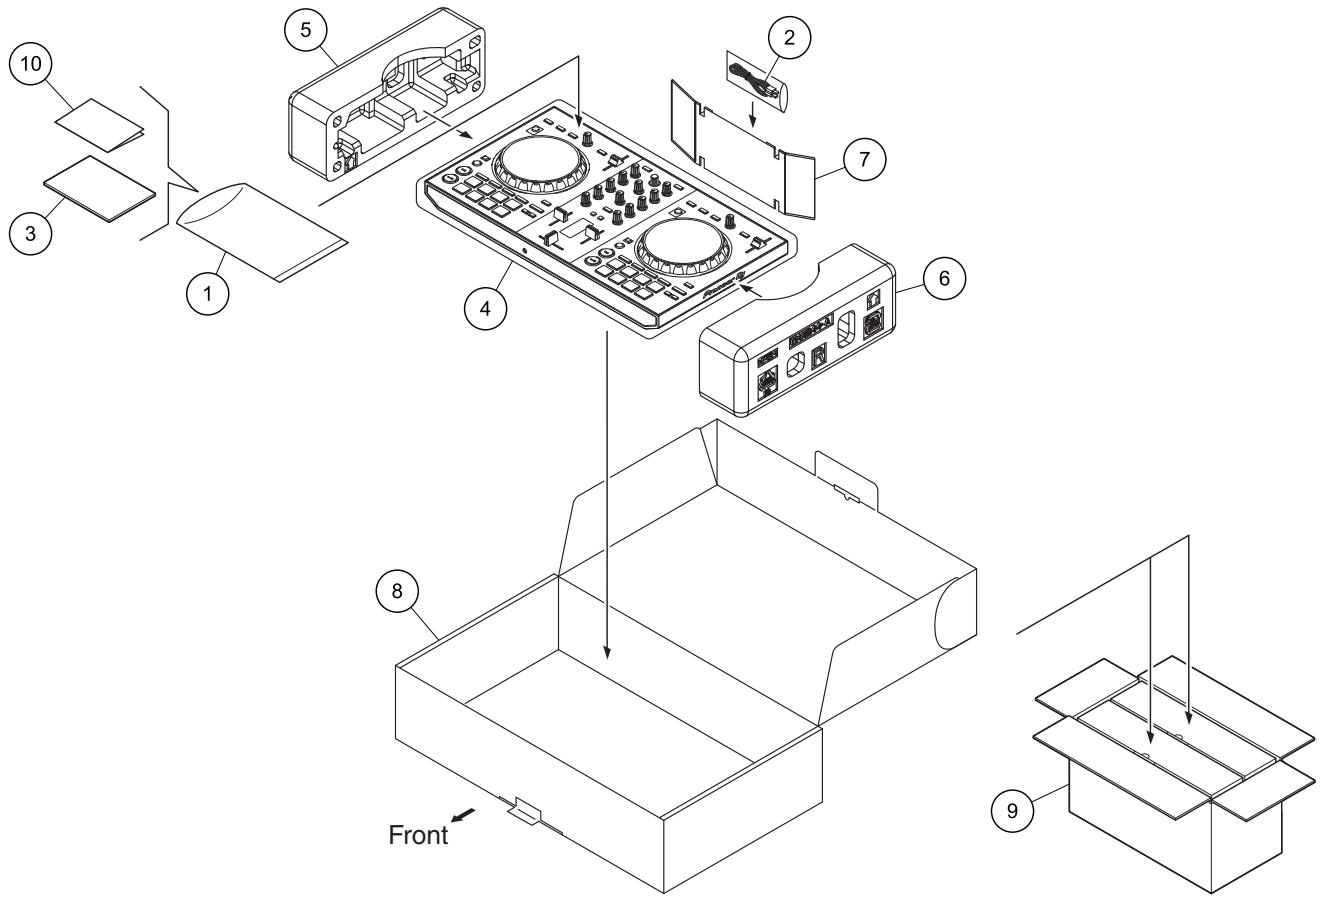

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
NSP	1	Polyethylene Bag	AHG7117
	2	USB Cable	DDE1150
	3	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	4	Packing Sheet	AHG7053
	5	Packing Pad	DHA1943
	6	Packing Pad	DHA1944
	7	Partition/ACC	DHC1085
	8	Packing Case	See Contrast table (2)
	9	Master Carton	See Contrast table (2)
NSP	10	Warranty	See Contrast table (2)

(2) CONTRAST TABLE

SXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	SXJ	XJCN
	3	Operating Instructions (Quick Start Guide)	DRH1498	DRH1499
	8	Packing Case	DHG3622	DHG3623
	9	Master Carton	DHG3625	DHG3626
NSP	10	Warranty	DRY1270	Not used

9.2 EXTERIOR SECTION

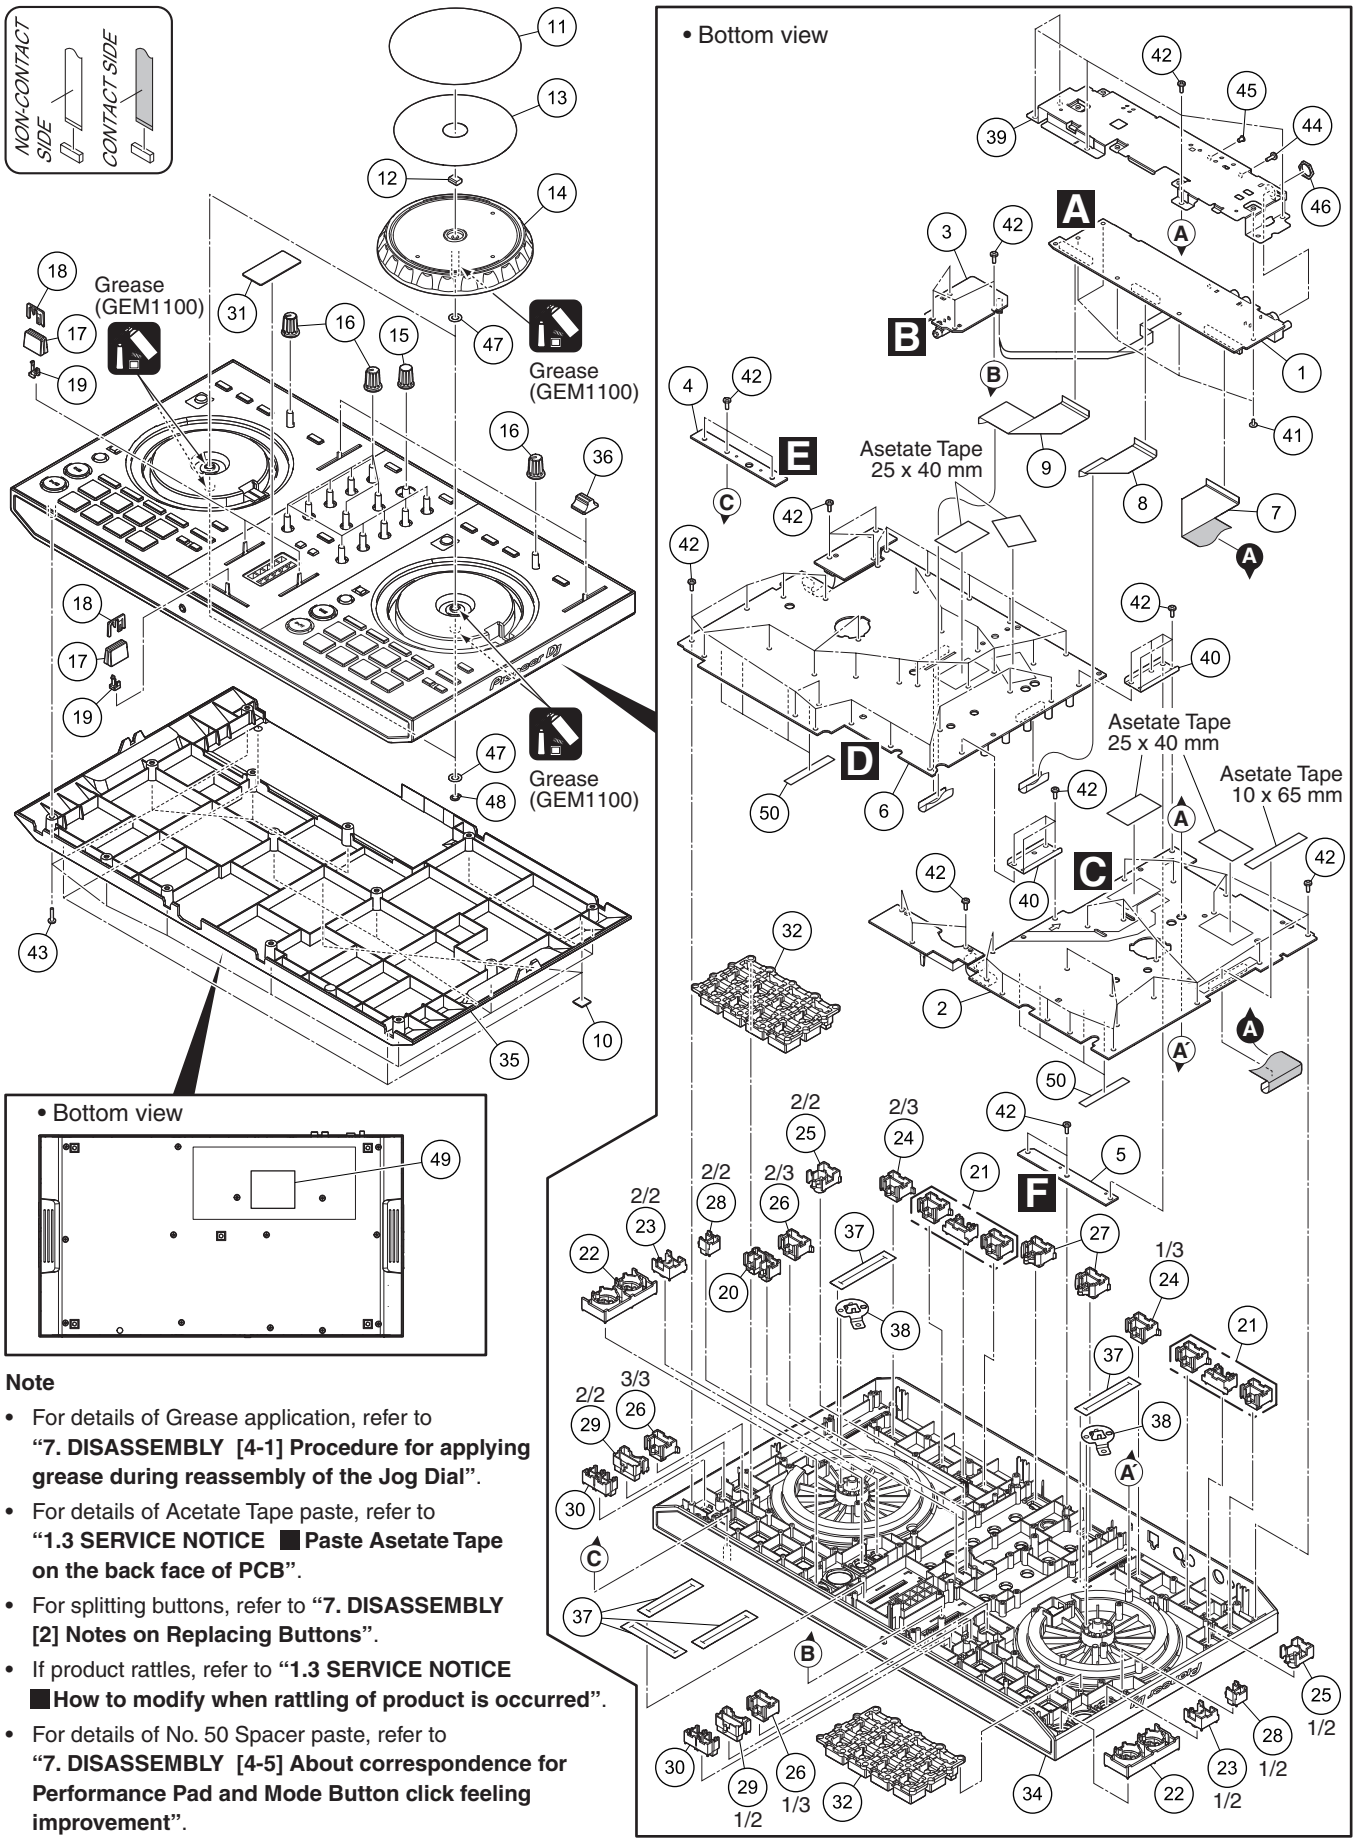

Note

- For details of Grease application, refer to **"7. DISASSEMBLY [4-1] Procedure for applying grease during reassembly of the Jog Dial"**.
- For details of Acetate Tape paste, refer to **"1.3 SERVICE NOTICE ■ Paste Asetate Tape on the back face of PCB"**.
- For splitting buttons, refer to **"7. DISASSEMBLY [2] Notes on Replacing Buttons"**.
- If product rattles, refer to **"1.3 SERVICE NOTICE ■ How to modify when rattling of product is occurred"**.
- For details of No. 50 Spacer paste, refer to **"7. DISASSEMBLY [4-5] About correspondence for Performance Pad and Mode Button click feeling improvement"**.

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN ASSY	DWX4132
	2	DCK1 ASSY	DWX4133
	3	HPJK ASSY	DWX4135
	4	HLD1 ASSY	DWX4136
	5	HLD2 ASSY	DWX4137
	6	PNL2 ASSY	DWX4134
	7	FFC	DDD1771
	8	FFC	DDD1851
	9	FFC	DDD1852
	10	Rubber Foot	VEB1349
	11	Plate	DAH3205
	12	Gasket/JOG	DEC3539
	13	DS Tape/JOG	DEH1042
	14	Jog Dial	DNK6768
	15	Dial Knob S(B)	DAA1273
	16	Knob/PLS	DAA1324
	17	Slider Knob 1	DAC2684
	18	Slider Knob 2	DAC2685
	19	Stopper/SLD	DNK6009
	20	Button/FX	DAC2796
	21	Button	DAC3373
	22	Button	DAC3379
	23	Button	DAC3230
	24	Button/OPL	DAC2952
	25	Button	DAC3098
	26	Button	DAC3375
	27	Button	DAC3151
	28	Button	DAC3376
	29	Button	DAC3350
	30	Button	DAC3221
	31	Panel	DAH3204
	32	Button	DEB2064
	33	•••••	
	34	Control Panel	DNK6759
	35	Chassis	DNK6760
	36	Knob	DNK6530
	37	Sheet	DEC3795
	38	Plate/CND	DNH3137
	39	Stay	DNH3352
	40	Plate	DNH3353
	41	Screw	ASZ26P050FTC
	42	Screw	BPZ30P100FTC
	43	Screw	BPZ30P120FTB
	44	Screw	BPZ30P080FTB
	45	Screw (M3 x 5)	DBA1340
	46	Nut (M12)	NKX2FNI
	47	Washer	WA62D095D050
	48	Washer	YC60FAC
NSP	49	Name Label	See Contrast table (2)
	50	Spacer	DEC3808

*** Cross fader part and deck 2 side tempo slider part are connected with parallel jumper wires, but the service parts are not supplied as board ASSY.**
Please correspond by parts replacement.
If you can not respond by replacing parts, order DCK 1 ASSY, PNL 2 ASSY.

(2) CONTRAST TABLE

SXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	SXJ	XJCN
NSP	49	Name Label	Not used	DRW2765

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω	→	*56 × 10¹*	→	*561* ····· *RD1/4PU 5 6 1 J*
47 kΩ	→	*47 × 10³*	→	*473* ····· *RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50*		····· *RN2H R 5 0 K*
1 Ω	→	*1R0*		····· *RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ	→	*562 × 10¹*	→	*5621* ····· *RN1/4PC 5 6 2 1 F*

Mark	No.	Description	Part No.

LIST OF ASSEMBLIES

	1	MAIN ASSY	DWX4132
NSP	1	PNL1 ASSY	DWM2679
	2	DCK1 ASSY	DWX4133
	2	HPJK ASSY	DWX4135
	2	HLD1 ASSY	DWX4136
	2	HLD2 ASSY	DWX4137
	1	PNL2 ASSY	DWX4134

Mark	No.	Description	Part No.

A

Unit Number: DWX4132
Unit Name: MAIN ASSY

SEMICONDUCTORS

⚠	IC	202,211 Regulator IC	MM3411A33N
⚠	IC	204,210 Regulator IC	MM1856A50N
⚠	IC	205 Regulator IC	S-1172B1C-U5
⚠	IC	207 DC-DC Converter IC	NJM2392M
	IC	209 IC	S-80942CNMC-G9C
	IC	406 Flash Blank UC IC	R5S72670P144FP
	IC	407 IC	TC74VHC08FK
	IC	408 Flash ROM	DYW2101*
		*Part number of the initial firmware equipped	
	IC	409 IC	S-80927CNMC-G8X
	IC	410 Buffer Logic IC	TC7SH126FUS1
	IC	701,703 Audio DAC	AK4387ET
	IC	702 Dual OP-AMP	NJM4565MD
	IC	705 IC	NJM4580MD
	IC	706 Headphone AMP IC	BH3547F
	IC	708 AD Converter IC	AK5358AET
	IC	711,712,713 Logic IC	74VHC4051AFT
	Q	104,105 Resistor Built-IN TR	RN1903S1
	Q	107,108 Resistor Built-IN TR	RN1903S1
	Q	109,201 Resistor Built-IN TR	LTC024EEB
	Q	202,206,705,706 Bipolar TR	LSCR523UB
⚠	Q	203 FET	RTQ040P02
	Q	205,211 Resistor Built-IN TR	LTC024EEB
	Q	207,209,213,713 Bipolar TR	LSAR523UB
	Q	221 Transistor	KTX101U
	Q	224 Resistor Built-IN TR	RN1903S1

Mark	No.	Description	Part No.
	Q	704,710 Resistor Built-IN TR	LTC024EEB
	Q	707,708 Transistor	IMX9
	Q	709,712 Resistor Built-IN TR	LTA024EEB
	Q	711 Bipolar TR	LSCR523UB
	D	202,212,215 Switching Diode	1SS355VM
⚠	D	207,208,209 Schottky Diode	RB551VM-30
	D	210 Schottky Diode	RB551VM-30
	D	214 Diode	MC2848-11
	D	217,702,704 Switching Diode	1SS355VM
	D	705,708 Schottky Diode	RB501VM-40

MISCELLANEOUS

	L	104 Coil	ATH7015
	L	205 Power Inductor	ATH7053
	L	401 Chip Beads	VTL1129
	L	402,403,404,406,408 Inductor	CTF1793
	X	401 Crystal(24.576MHz)	DSS1204
	X	404 Resonator	CSS1760
	JH	101 5P Cable Holder	51048-0500
	JP	101 Jumper Wire	D20PDY0520E
⚠	P	101 Protector(1.000A)	DEK1097
	VA	103,701,702,703 Varistors	EZJZ1V270RM
	VA	704 Varistors	EZJZ1V270RM
	VR	701 Potentiometer	DCS1111
	CN	101 39P Connector	VKN2097
	CN	102 31P Connector	VKN1262
	CN	103 25P Connector	VKN1256
	JA	101 USB Connector	DKN1237
	JA	701 6.5 DIA Jack	DKN1669
	JA	702 Pin Jack(2P)	AKB7181

RESISTORS

	R	125	RS1/10SR102J
	R	201	RS1/16SS102J
	R	202,205,227,243,258,261	RS1/16SS103J
	R	204,206	RS1/16SS104J
	R	208,211,248,259,267,292	RS1/10SR0R0J
	R	219,252	RS1/4SA100J
	R	224,226	RS1/8SQ1R5J
	R	231	RS1/10SR271J
	R	245	RS1/16SS1802F
	R	246	RS1/16SS3901D
	R	251	RS1/10SR103J
	R	254,256,280,307	RS1/16SS183J
	R	255	RS1/16SS123J
	R	257,265,281	RS1/16SS273J
	R	260	RS1/10SR471J

Mark	No.	Description	Part No.
	R	266	RS1/16SS473J
	R	268	RS1/16SS272J
	R	291,405	RS1/16SS0R0J
	R	293,294	RS1/16SS1002D
	R	295,309	RS1/10SR0R0J
	R	296	RS1/16SS223J
	R	297	RS1/16SS104J
	R	298,299,301,302	RS1/16SS472J
	R	303,408,412,416,425	RS1/16SS103J
	R	401	RS1/16SS105J
	R	402,403,406,409,415,424	RS1/16SS560J
	R	404	RS1/16SS102J
	R	411	RAB4CQ560J
	R	413,414,427,429,450	RS1/16SS221J
	R	418,422,446	RAB4CQ103J
	R	419,420,421,460	RS1/16SS220J
	R	423,459	RS1/16SS101J
	R	426,431,432,433,438,439	RS1/16SS0R0J
	R	430	RS1/16SS472J
	R	434	RAB4CQ101J
	R	435,436,437,454,463,464	RS1/16SS560J
	R	449	RAB4CQ221J
	R	453	RS1/16SS470J
	R	461,477	RS1/16SS103J
	R	462,472,474	RS1/16SS104J
	R	465,467,469	RS1/16SS330J
	R	466,471,475,482,485,487	RS1/16SS560J
	R	476	RAB4CQ103J
	R	479,480	RS1/16SS220J
	R	488,489,491	RS1/16SS560J
	R	490,493,496,507,511	RS1/16SS472J
	R	492,499,506,518,521,522	RS1/16SS221J
	R	494,497,501,503,504	RS1/16SS0R0J
	R	495,498,505,509,512,513	RS1/16SS101J
	R	514	RS1/16SS101J
	R	520,530,532	RS1/16SS103J
	R	523,549,552,591,592	RS1/16SS221J
	R	525	RAB4CQ472J
	R	531,535,564	RS1/16SS102J
	R	533	RS1/16SS5601F
	R	534	RS1/16SS472J
	R	536,571,572	RS1/10SR0R0J
	R	548	RS1/16SS105J
	R	555	RS1/16SS331J
	R	561	RS1/16SS104J
	R	566,605,651,659,663	RS1/16SS0R0J
	R	569,570,580,609,610,612	RS1/16SS560J
	R	576,701,702,703,704,713	RS1/16SS470J
	R	577,578,579	RS1/16SS330J
	R	582,603,604,708,716	RS1/16SS101J
	R	586,602,607,729,730	RS1/16SS103J
	R	593,594,599,600	RS1/16SS224J
	R	606,611	RS1/16SS221J
	R	706,737,738,744,745	RS1/16SS473J
	R	707	RS1/10SR1501D
	R	709	RS1/10SR6802D
	R	710	RS1/10SR1801D
	R	711,752,753	RS1/10SR3301D
	R	714,717,721	RS1/16SS470J
	R	715,720,723,761	RS1/10SR0R0J
	R	722,727	RS1/10SR100J
	R	724	RS1/10SR9101D
	R	728	RS1/10SR7500D
	R	740,741	RS1/10SR4701D
	R	746,747	RS1/10SR271J
	R	750,751	RS1/10SR1002D
	R	755,767,778,779,782,784	RS1/16SS103J
	R	756	RS1/16SS104J
	R	768,771	RS1/16SS472J
	R	772,773,791	RS1/16SS223J
	R	774,775,786,787,788,789	RS1/16SS473J
	R	776,777	RS1/10SR471J
	R	780,781,783,785	RS1/10SR331J
	R	790	RS1/10SR0R0J
	R	794	RS1/10SR3301D
	R	795	RS1/16SS103J
	R	797	RS1/16SS0R0J
	R	836	RS1/10SR1001D
	R	837	RS1/10SR7500D
	R	838,839,840	RS1/16SS470J
	R	841	RS1/16SS220J
	R	842	RS1/16SS101J
	R	843,844	RS1/10SR330J

CAPACITORS

	C	102	CKSSYB103K16
	C	104,209,264	CCG1192
	C	109,201,205,206,217,232	CKSRYB105K10
	C	118,120	CKSSYB102K50
	C	148,402,403,405,406	CCSSCH101J50
	C	211	DCH1266
	C	218,235,236,242,249,285	CKSSYB104K10
	C	234,412,413	CEVW470M6R3
	C	243,254,262,274,280,287	CKSRYB105K10
	C	244	CCSSCH121J50
	C	252,267,270	CEVW471M10
	C	257,286,425	CCSSCH221J50
	C	290	CKSRYB105K10
	C	401,404	CCSSCH120J50
	C	407,408,411,414,415,418	CCSSCH101J50
	C	410,437	CKSSYB102K50
	C	421,422,423,435,436,439	CCSSCH101J50
	C	424,426,427,428,429,430	CKSSYB103K16
	C	431,433,434,438,442,444	CKSSYB103K16
	C	432,441,458,469,470,473	CKSSYB104K10
	C	440	CCSSCH221J50
	C	443,446,449,471,480	CCSSCH101J50
	C	445,448,454,456	CKSSYB471K50
	C	447,450,452,455,457,459	CKSSYB103K16
	C	461,462,463,464,465,483	CKSSYB103K16
	C	466,468,475,476,493,494	CKSSYB102K50
	C	474,478,482,484,485,499	CKSSYB104K10
	C	477,489,490,503,504,505	CCG1192
	C	487	CCSSCH120J50
	C	488,492	CKSSYB103K16
	C	491	CKSSYB222K50
	C	495,507,544,545,547,548	CKSSYB102K50
	C	496,497,498,510,511,513	CCSSCH101J50

Mark	No.	Description	Part No.
C	500,501,506,546,554,561		CKSSYB104K10
C	502		CCSSCH100D50
C	514,515,516,519,520,521		CCSSCH101J50
C	522,523,524,564,565,566		CCSSCH101J50
C	533		CCG1192
C	549,550,552,553,555,556		CKSSYB102K50
C	557,558,560,562,570,571		CKSSYB102K50
C	568,569		CCSSCH221J50
C	572,573,702,708,709,715		CKSSYB102K50
C	575		CCSSCH101J50
C	701		CKSRYB104K25
C	704		CCSSCH561J50
C	705		CKSSYB332K50
C	706,710		CKSSYB103K16
C	707		ACG1147
C	712,721,731		CEVW470M6R3
C	713,714,726		CKSSYB104K10
C	716,722,723,727,728		CKSRYB104K16
C	717,718		CCSRCH222J50
C	719,724		CEVW101M16
C	729,742,743		CKSRYB105K10
C	730,734,782		CKSSYB102K50
C	732,733,765,804		CCG1192
C	735		CCH1565
C	739,740,773,774		CEVW220M16
C	744,807		DCH1263
C	745		CCSSCH221J50
C	747,748,783,814		CKSSYB103K16
C	749,750		CCSSCH681J50
C	751,752		CCSSCH181J50
C	753		CKSQYB475K6R3
C	755,761		CCH2090
C	766		CEVW470M6R3
C	781		CKSRYB104K25
C	784		CEVW331M6R3
C	785		CKSRYB105K10
C	786		CKSSYB102K50
C	806,809,811		CKSSYB104K10
C	808,810		CCG1192

PNL1 ASSY
Consist of
DCK1 ASSY
HPJK ASSY
HLD1 ASSY
HLD2 ASSY

B C E F

Unit Number: DWM2679
Unit Name: PNL1 ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
IC	1201	Flash Written UC IC	DYW1962*
		*Part number of the initial firmware equipped	
Q	1201,1202,1418	Bipolar TR	LSCR523UB
Q	1401,1403,1405	Transistor	LTC124EUB
Q	1402,1404	Chip Transistor	2SB1689
Q	1406,1408	Chip Transistor	2SB1689
Q	1407,1409,1411	Transistor	LTC124EUB
Q	1410,1412	Chip Transistor	2SB1689
Q	1413,1415	Transistor	LTC124EUB
Q	1414,1416	Chip Transistor	2SB1689
Q	1417,1421,1422	Transistor	LTC123JUB
Q	1419,1420	Bipolar TR	LSCR523UB
Q	1601,1602	Chip Transistor	INC2002AC1
D	1201,1202,1203,1204	Diode	MC2848-11
D	1205,1206,1207,1208	Diode	MC2848-11
D	1209,1210,1211,1212	Diode	MC2848-11
D	1213,1214,1215	Diode	MC2848-11
D	1216	Schottky Diode	RB501VM-40
D	1401,1402,1403,1404	LED(Red)	SLI-343U8R(HJK)
D	1405,1406,1407,1408	LED(Red)	SLI-343U8R(HJK)
D	1409,1410,1411,1413	LED(Red)	SLI-343U8R(HJK)
D	1412,1417	LED(Amber)	SLI-343Y8Y(KLM)
D	1414,1415,1416,1418	LED(Red)	SLI-343U8R(HJK)
D	1419,1420,1421,1422	LED(Red)	SLI-343U8R(HJK)
D	1423,1424,1425,1426	LED(Red)	SLI-343U8R(HJK)
D	1427	LED(Green)	SLI-343M8G(GHJ)

MISCELLANEOUS

Mark	No.	Description	Part No.
L	1201,1202,1204	Inductor	CTF1379
JH	1001,1201	4P Cable Holder	51048-0400
JP	1001	Jumper Wire	D20PYY0405E
KN	1201	Earth Terminal	AKF7002
PC	1201,1202	Photo Interrupter	RPI-579N1
S	1201,1205,1206	Tact Switch	DSG1079
S	1202,1203,1204	Tact Switch	DSG1117
S	1207,1208,1209	Tact Switch	DSG1117
S	1210,1211,1212	Tact Switch	DSG1079
S	1213,1214,1215	Tact Switch	DSG1079
S	1216,1219,1222	Tact Switch	DSG1079
S	1217,1218,1220	Tact Switch	DSG1117
S	1221	Tact Switch	DSG1117
S	1223,1224,1225	Tact Switch	DSG1079
VA	1001,1002,1003	Varistors	EZJZ1V270RM
VA	1201,1202	SMD Varistor	EZJZ1V80010
VA	1203,1204,1205	Varistors	EZJZ1V270RM
VA	1206	Varistors	EZJZ1V270RM
VR	1201	Potentiometer	DCS1096
VR	1202	Slide VR	DCV1034
VR	1203	Variable Resistor	DCV1023
CN	1001	39P Connector	VKN2097
CN	1601	5P Jumper Connector	52147-0510
JA	1601	Stereo Mini Jack	XKN3017

RESISTORS

Mark	No.	Description	Part No.
R	1001		RS1/4SA2R0J
R	1201,1202,1203,1221,1227		RS1/10SR0R0J
R	1204,1205,1225,1228		RS1/10SR103J
R	1206,1207		DCN1187
R	1208,1209,1222,1223,1226		RS1/10SR101J
R	1210,1211		RS1/10SR222J
R	1212,1213		RS1/10SR111J
R	1215		RS1/10SR2202D
R	1218,1219		RS1/10SR2201D
R	1220		RS1/10SR221J
R	1224		RS1/10SR391J

Mark	No.	Description	Part No.
	R	1401,1407,1413,1420,1427	RS1/10SR182J
	R	1402,1405,1410,1411,1417	RS1/10SR271J
	R	1403,1408,1415,1422,1428	RS1/10SR223J
	R	1404,1409,1416,1423,1429	RS1/10SR473J
	R	1406,1412,1419,1426,1431	RS1/10SR470J
	R	1414,1418,1421,1425,1435	RS1/10SR151J
	R	1424	RS1/10SR221J
	R	1430,1459	RS1/10SR271J
	R	1432,1437,1443	RS1/10SR182J
	R	1433,1439,1445	RS1/10SR223J
	R	1434,1440,1446,1454,1455	RS1/10SR473J
	R	1436,1442,1448	RS1/10SR470J
	R	1438,1441,1444,1447	RS1/10SR151J
	R	1449,1450	RS1/10SR152J
	R	1451	RS1/10SR821J
	R	1452,1457	RS1/10SR112J
	R	1456	RS1/10SR473J
	R	1601,1602	RS1/10SR272J
	R	1603,1604,1607,1608,1609	RS1/4SA0R0J
	R	1605,1606	RS1/10SR103J
	R	1611,1612	RS1/10SR0R0J

CAPACITORS

	C	1003	CEJQ101M16
	C	1202,1208,1209,1211	CKSRYB103K50
	C	1203,1206,1207,1212,1603	CKSRYB104K16
	C	1204	CCSRCH221J50
	C	1214	DCH1201
	C	1601,1602	CEAT471M10
	C	1604	CKSRYB104K16

D

Unit Number: DWX4134
Unit Name: PNL2 ASSY

SEMICONDUCTORS

	IC	2401 Flash Written UC IC	DYW1962*
		*Part number of the initial firmware equipped	
	Q	2401,2403,2405 Transistor	LTC124EUB
	Q	2402,2404 Chip Transistor	2SB1689
	Q	2406,2408 Chip Transistor	2SB1689
	Q	2407,2409,2411 Transistor	LTC124EUB
	Q	2410,2412 Chip Transistor	2SB1689
	Q	2413,2415 Transistor	LTC124EUB
	Q	2414,2416 Chip Transistor	2SB1689
	Q	2417,2418,2419 Bipolar TR	LSCR523UB
	Q	2420,2421,2423 Bipolar TR	LSCR523UB
	Q	2422 Transistor	LTC123JUB
	Q	2424 Bipolar TR	LSCR523UB
	D	2201,2202,2203,2204 Diode	MC2848-11
	D	2205,2206,2207,2208 Diode	MC2848-11
	D	2209,2210,2211,2212 Diode	MC2848-11
	D	2213,2214,2215,2216 Diode	MC2848-11
	D	2217,2218,2219 Diode	MC2848-11
	D	2401,2403,2404,2406 LED(Red)	SLI-343U8R(HJK)
	D	2402,2405,2408 LED(Amber)	SLI-343Y8Y(KLM)
	D	2407,2409,2411,2412 LED(Red)	SLI-343U8R(HJK)
	D	2410,2415,2422 LED(Amber)	SLI-343Y8Y(KLM)
	D	2413,2414,2416,2417 LED(Red)	SLI-343U8R(HJK)
	D	2418,2419,2420,2421 LED(Red)	SLI-343U8R(HJK)
	D	2423,2424,2427,2429 LED(Red)	SLI-343U8R(HJK)
	D	2425,2428,2431 LED(Amber)	SLI-343Y8Y(KLM)
	D	2426 Schottky Diode	RB501VM-40
	D	2430,2433,2434,2436 LED(Red)	SLI-343U8R(HJK)
	D	2432,2435,2437 LED(Green)	SLI-343M8G(GHJ)
	D	2438,2439 LED(Red)	SLI-343U8R(HJK)
	D	2440,2441 LED(Green)	SLI-343M8G(GHJ)

MISCELLANEOUS

	L	2403,2404,2407 Inductor	CTF1379
	JH	2001,2201 5P Cable Holder	51048-0500
	JP	2001 Parallel Jumper	D20PDY0505E
	KN	2401 Earth Terminal	AKF7002
	PC	2401,2402 Photo Interrupter	RPI-579N1
	S	2201,2202,2203 Tact Switch	DSG1117
	S	2204,2205,2209 Tact Switch	DSG1079
	S	2206,2207,2208 Tact Switch	DSG1117
	S	2210,2211,2212 Tact Switch	DSG1079
	S	2213,2214,2215 Tact Switch	DSG1079
	S	2216,2217,2218 Tact Switch	DSG1079
	S	2219,2220,2223 Tact Switch	DSG1117
	S	2221,2222,2225 Tact Switch	DSG1079
	S	2224 Tact Switch	DSG1117
	S	2226,2227,2228 Tact Switch	DSG1079
	S	2229,2230 Tact Switch	DSG1079
	S	2231 Rotary Encoder	DSX1138
	VA	2201,2202,2203 Varistors	EZJZ1V270RM
	VA	2204,2205,2206 Varistors	EZJZ1V270RM
	VA	2207,2208,2209 Varistors	EZJZ1V270RM
	VA	2210 Varistors	EZJZ1V270RM
	VA	2401,2402 SMD Varistor	EZJZ1V80010
	VR	2201,2207,2208 Potentiometer	DCS1096
	VR	2202,2203,2204 Potentiometer	DCS1097
	VR	2205,2211,2212 Potentiometer	DCS1097
	VR	2206,2209 Variable Resistor	DCV1024
	VR	2210,2216 Potentiometer	DCS1096
	VR	2213,2214 Potentiometer	DCS1097
	VR	2215 Slide VR	DCV1034
	CN	2001 25P Connector	VKN1256
	CN	2002 31P Connector	VKN1262

RESISTORS

	R	2001	RS1/4SA2R0J
	R	2206,2214	RS1/10SR0R0J
	R	2217,2218	RS1/10SR2201D
	R	2219,2220,2222,2223	RS1/10SR101J
	R	2401	RS1/10SR122J
	R	2402,2412,2422,2430	RS1/10SR223J
	R	2403,2413,2423,2431	RS1/10SR473J
	R	2404,2406,2414,2415,2424	RS1/10SR271J
	R	2405,2418,2427,2442	RS1/10SR221J
	R	2407,2417,2426,2434,2444	RS1/10SR470J
	R	2408	RS1/10SR121J
	R	2409,2419	RS1/10SR152J
	R	2410,2411	DCN1187
	R	2416,2420,2425,2429,2433	RS1/10SR151J

Mark	No.	Description	Part No.
R	2428		RS1/10SR222J
R	2432,2435		RS1/10SR271J
R	2437,2448		RS1/10SR182J
R	2438,2443,2450,2455		RS1/10SR151J
R	2439		RS1/10SR2202D
R	2440,2451,2462,2471		RS1/10SR223J
R	2441,2452,2463,2472		RS1/10SR473J
R	2445,2447,2454,2457		RS1/10SR221J
R	2453,2460		RS1/10SR101J
R	2456,2466,2475		RS1/10SR470J
R	2458,2468,2491		RS1/10SR103J
R	2459,2469,2478,2479,2481		RS1/10SR122J
R	2461,2487,2488		RS1/10SR0R0J
R	2464,2467,2473,2476		RS1/10SR820J
R	2465,2470,2474,2489		RS1/10SR271J
R	2477		RS1/10SR392J
R	2480		RS1/10SR821J
R	2482,2483,2484,2485,2486		RS1/10SR473J
R	2492		RS1/10SR103J
R	2493,2494		RS1/10SR101J
R	2495,2496		RS1/10SR222J
R	2497,2498		RS1/10SR111J

CAPACITORS

C	2001		CEJQ101M16
C	2206,2217,2230,2403,2405		CKSRYB104K16
C	2212,2228,2231,2233,2236		CKSRYB103K50
C	2237,2238		CKSRYB103K50
C	2402		CCSRCH221J50
C	2404		DCH1201