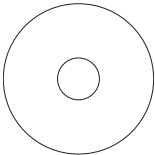
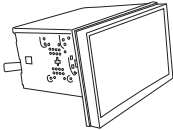
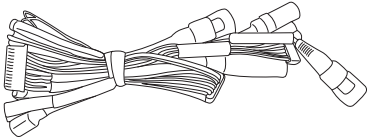
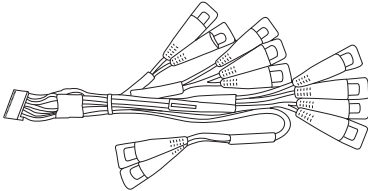
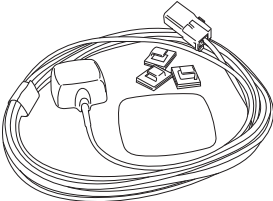
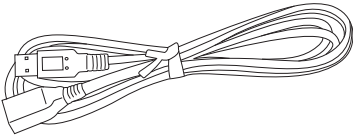
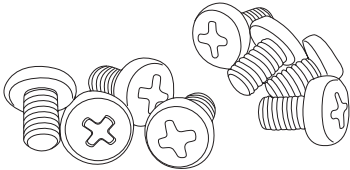
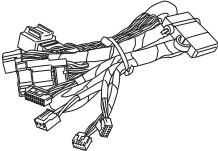
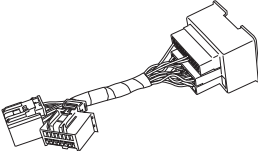
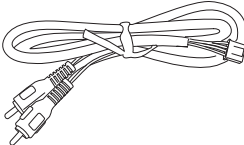
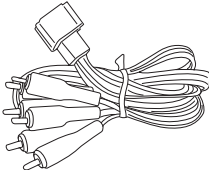

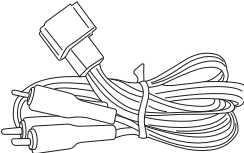
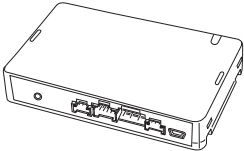


Accessory List







Head Unit Box Parts (X009)

Owner's Manual Disc	X009 Head Unit	X009 Camera Harness
		
AUX/Pre Out Harness	GPS Antenna	USB Extension Cable
		
8mm x 8 Screws	Quick Reference Guides	Registration Cards
	  QRG Audio QRG Navigation	  Alpine Registration Card NAVTEQ Registration Card



iDatalink Maestro Box Parts (ALP-MRR/ALP-HRN-GM)

Main Harness	Navigation Adapter	Bose Adapter Harnesses
		
Rear Seat A/V Harness	Chime Speaker	USB to Mini USB Cable
		
Vehicle Camera Harness	iDatalink Maestro Module	
		

Installation Kit Parts (G-KTX-009-GM)

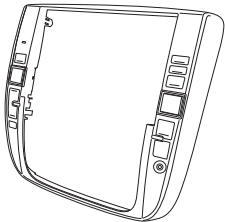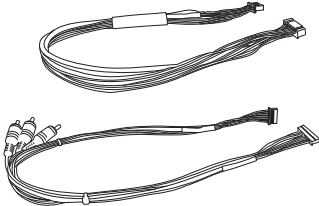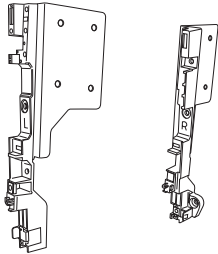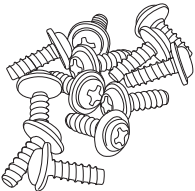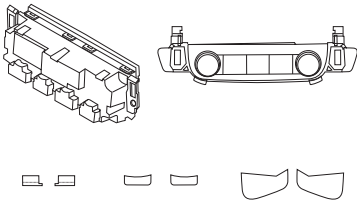X009-GM Key Panel 	Key Harnesses 	Side Mounting Brackets 
Screws x 12 	Rear Support Bracket 	8mm Screw x1 
Cutout Template 		

Optional 3rd-Party Parts (Not Included)

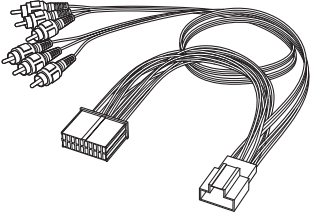
PAC GMRVD2^{*1} 	RCA A/V to 3.5 mm Adapter  Allows front panel A/V input to be used when vehicle is equipped with factory rear seat entertainment.^{*2} ^{*2} Note: To use this option, aux-3 input must be switched from iPod video to aux-3 in the “aux-3 source select” menu.
--	--

^{*1} Needed with 2012-2014 Navi-equipped models.

X009-GM System Wiring for 2012-14 Navigation Equipped Vehicles


To retain a pre-existing factory rearview camera

- Locate the 20-pin radio plug, connect the PINK or WHITE wire located at pin 5 to the center of yellow conductor of a yellow RCA, connect the LIGHT BLUE or BARE wire located at pin 15 to the shield of the yellow RCA.

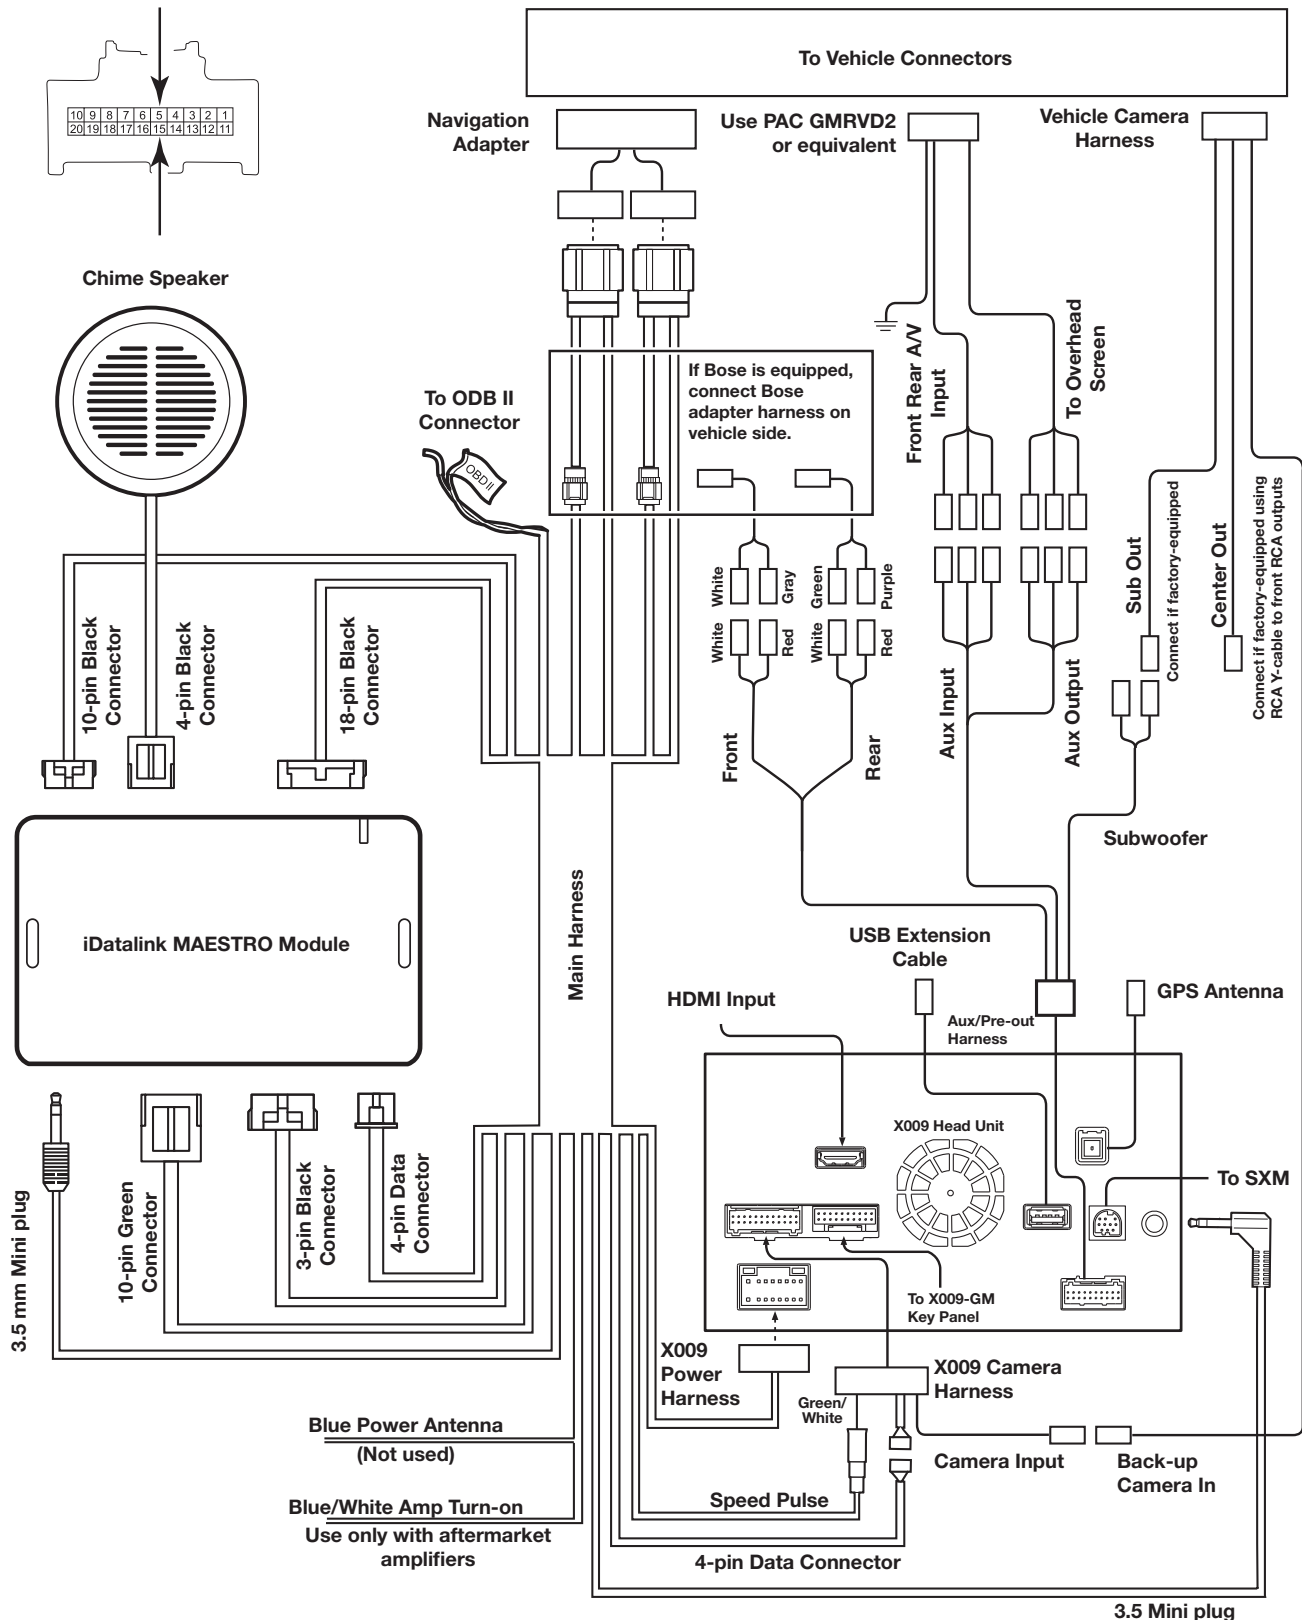

Exploded-View Diagram

Parts assembly diagram for the X009-GM kit.

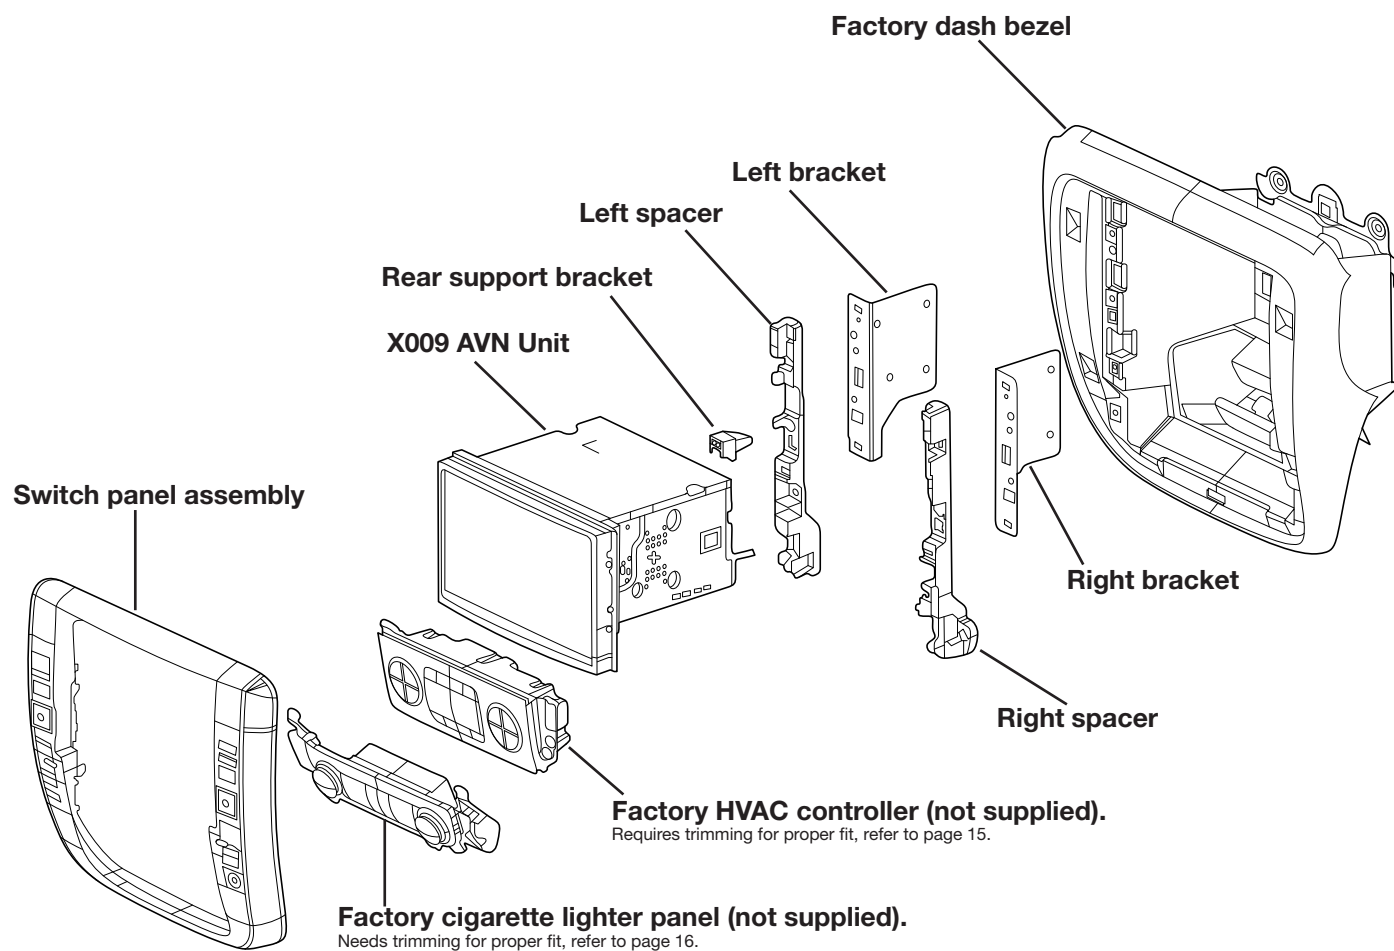

Bracket Assembly Procedure

Attach pre-assembled left and right bracket assemblies to the X009 unit using 4 supplied M5x8 bolts on each side.

