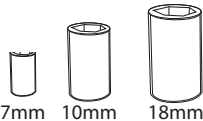




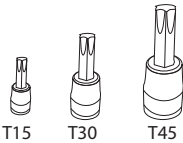
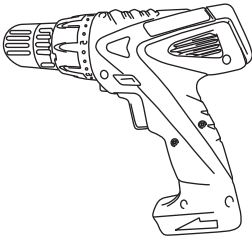
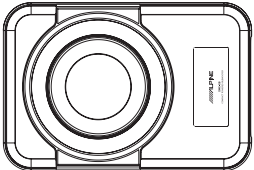
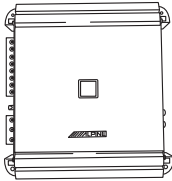
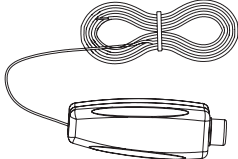
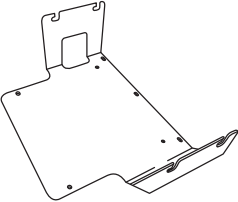
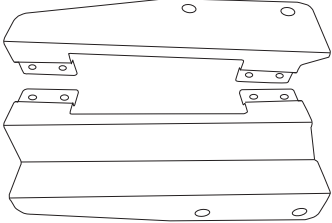
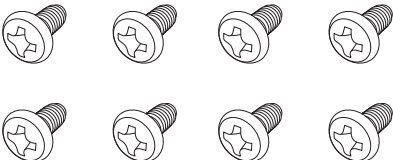
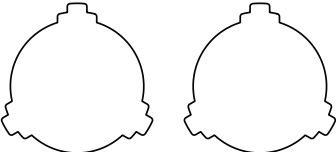
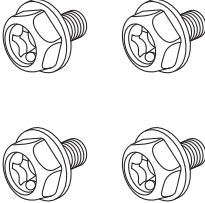












Tools Required

Panel Removal Tool	Sockets	#2 Phillips Screwdriver
	 7mm 10mm 18mm	
9/32" Drill Bit	Extension	Ratchet
		
Torx	Power Drill	Wire Cutters
 T15 T30 T45		


Accessory List

Subwoofer	Amplifier	Subwoofer Level Remote
		
Amplifier Mounting Bracket	R/L Subwoofer Mounting Brackets	(8) M4 Screws
		
(2) Dash Tweeter Mounting Caps	(4) 6.5" Speaker Adapters	(4) M6 Screws
		

Accessory List

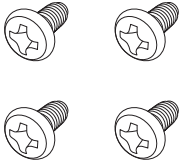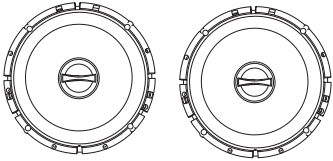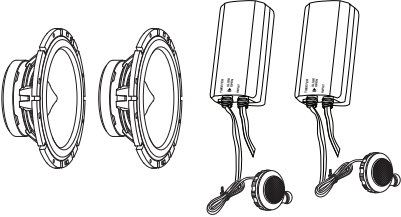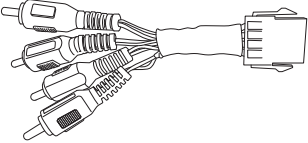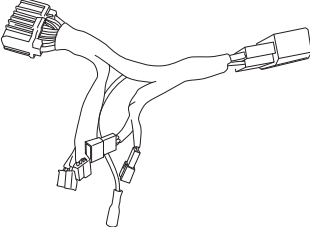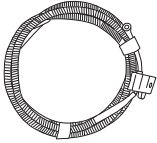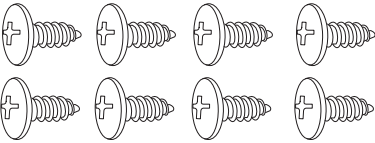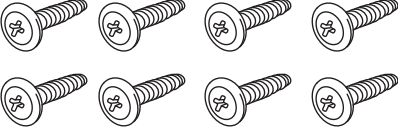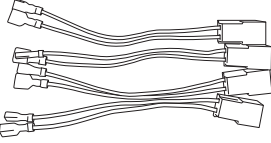
(4) 8/32" Phillips Screws	(4) 12" X 12" Polyfill fiber sheets	Main Wiring Harness
		
SPT-70 Rear Coaxial Speakers	SPT-71WRA Front Component Speaker	Hi/Lo RCA Adapter
		
OEM T-Harness Adapter	Power Cable	(4) RCA Adapters
		
(10) Cable Ties	(8) 1" Truss-Head Phillips Screws	(8) 1/2" Truss-Head Phillips Screws
		
Anti-Vibration Foam	Velcro	(4) 6.5" Speaker Wiring Adapters
		

PSS-20WRA Wiring Diagram For Alpine Restyle Headunit

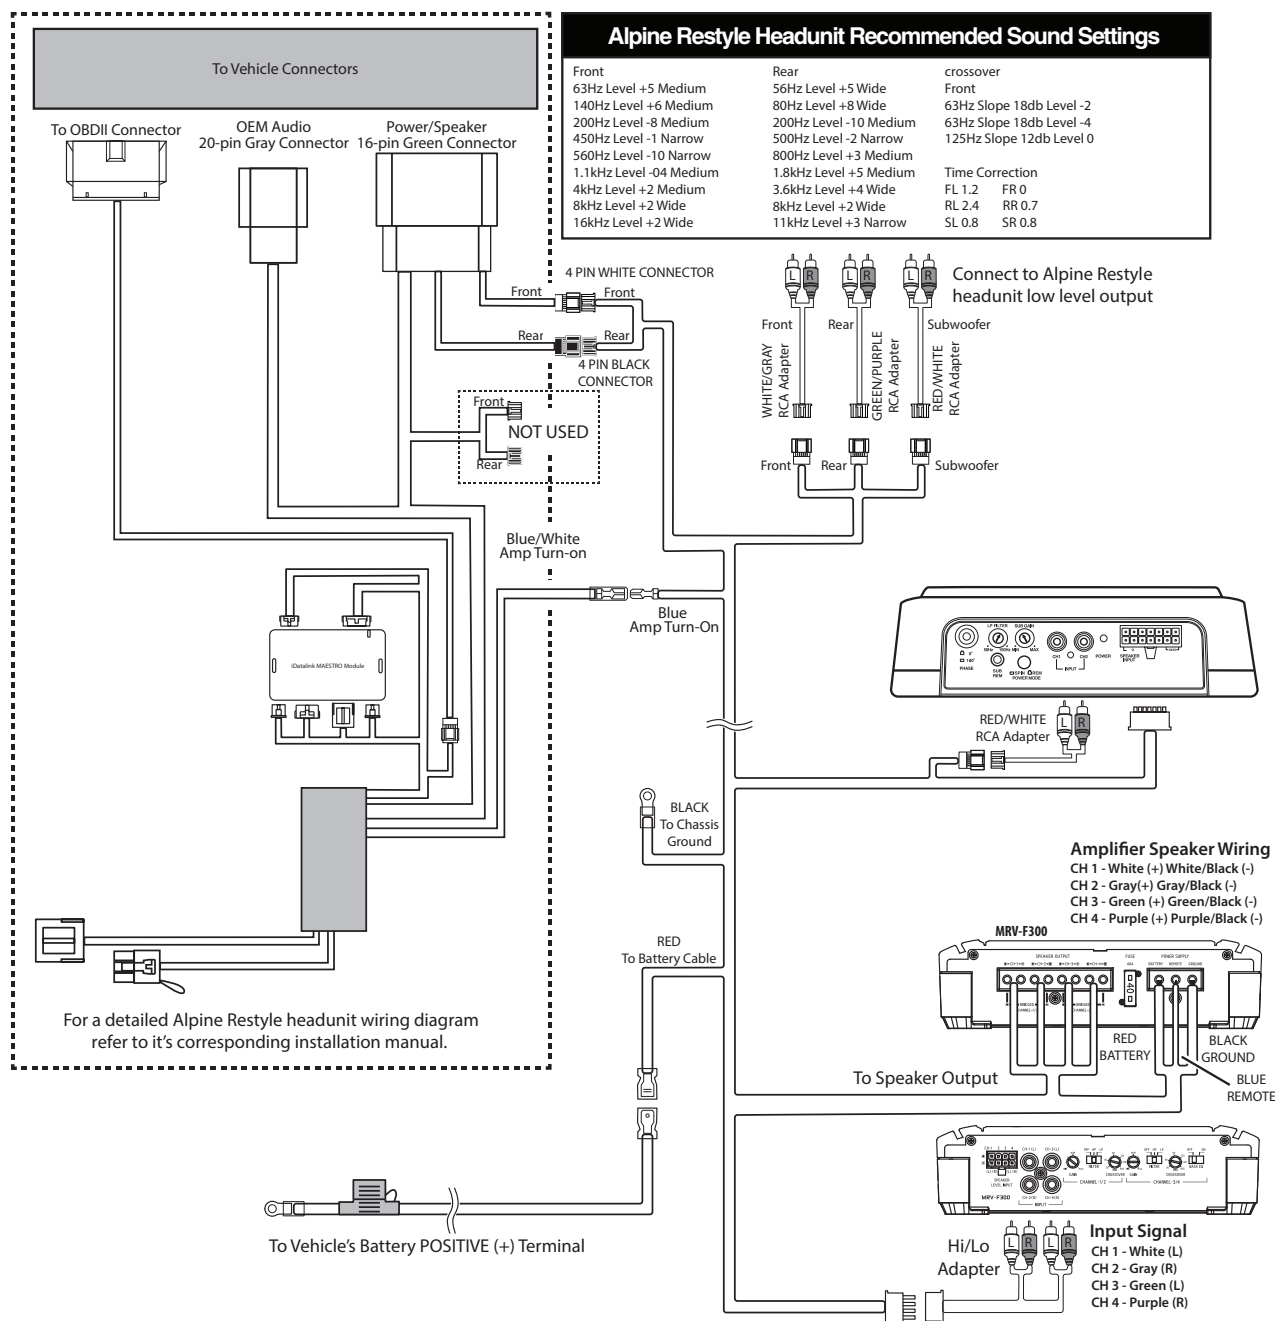



NOTE: FOR BEST PERFORMANCE SET AMPLIFIER AND SUBWOOFER TO RECOMMENDED SETTINGS AS SHOWN ABOVE

PSS-20WRA Wiring Diagram Aftermarket Headunit

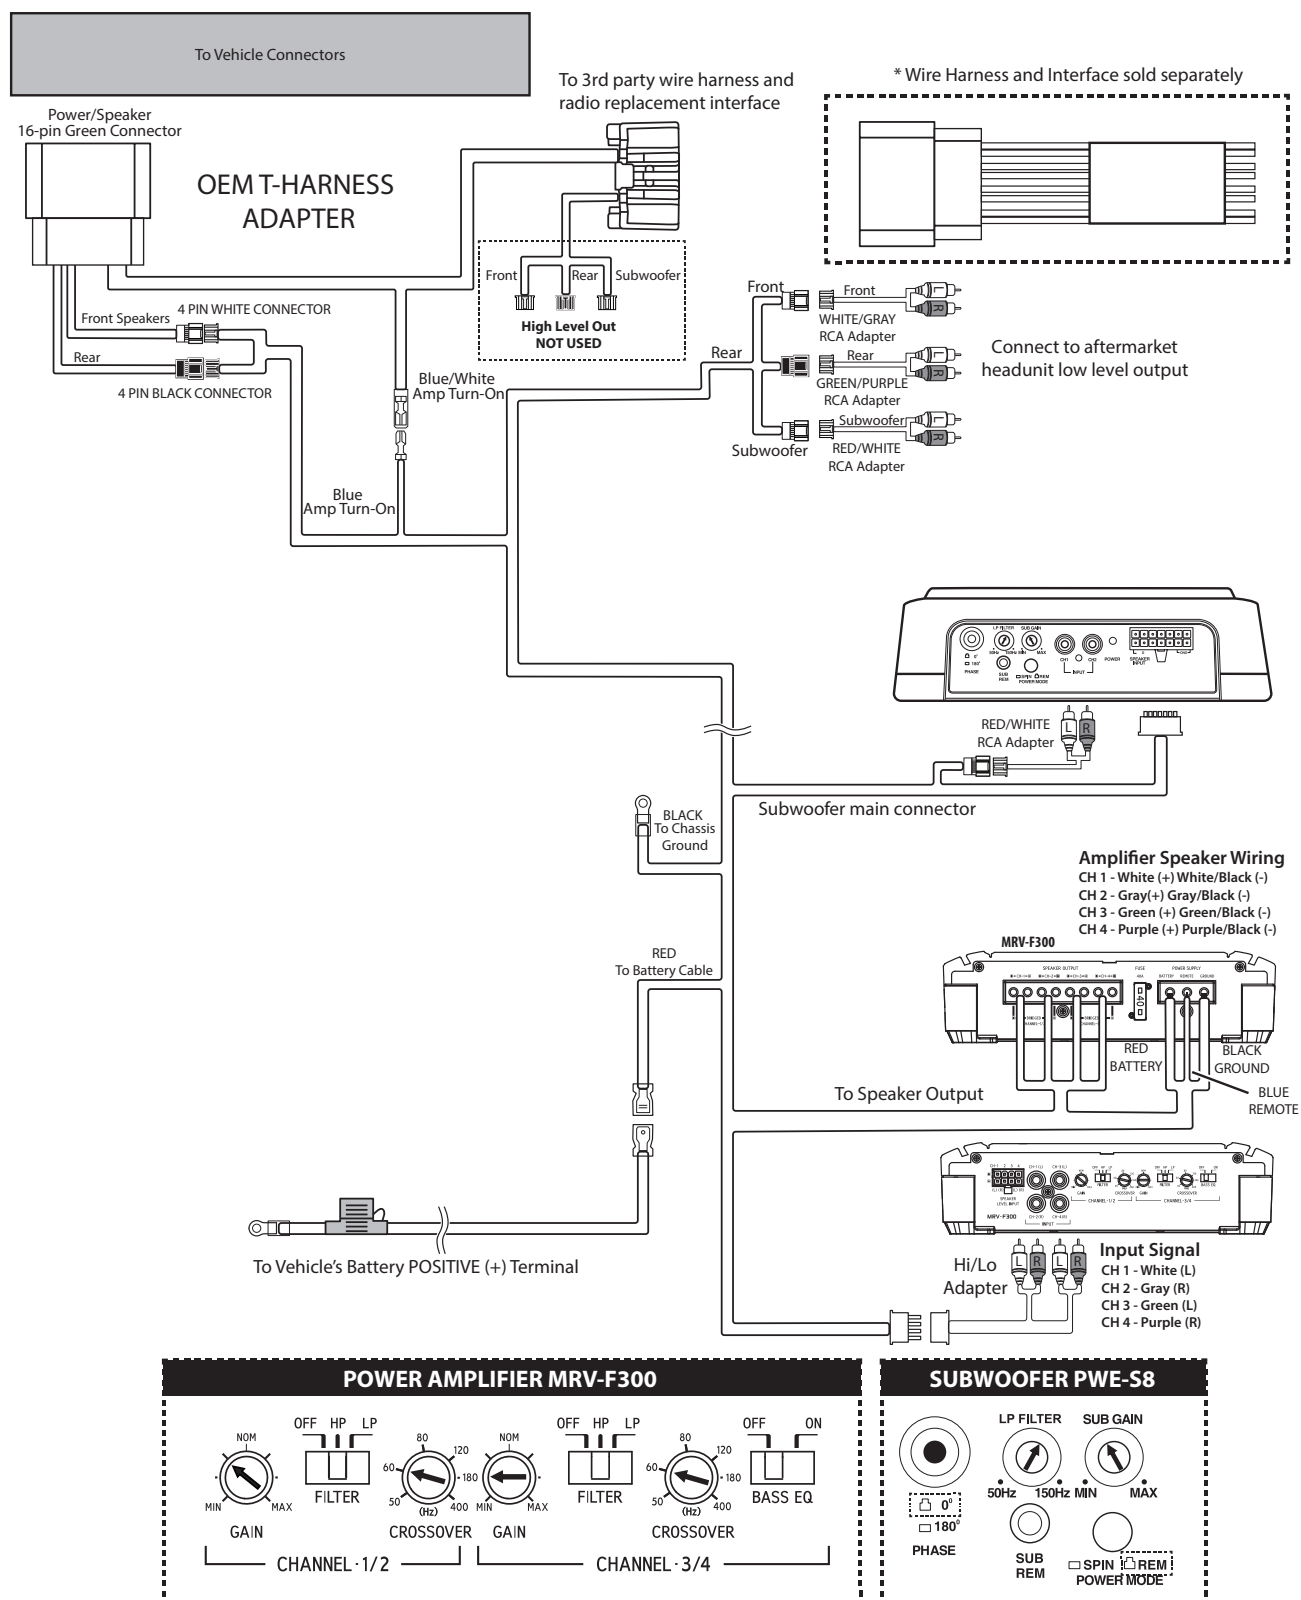

NOTE: FOR BEST PERFORMANCE SET AMPLIFIER AND SUBWOOFER TO RECOMMENDED SETTINGS AS SHOWN ABOVE

PSS-20WRA Wiring Diagram For Factory Headunit

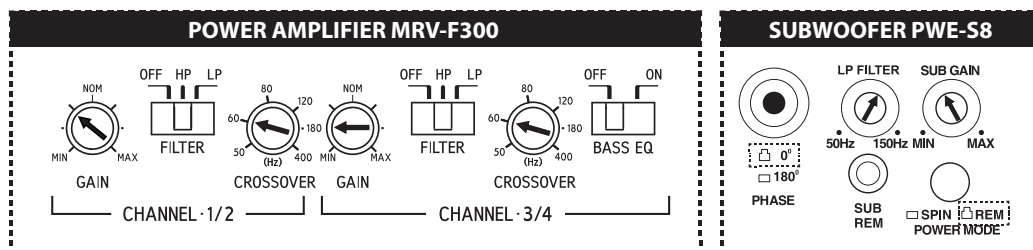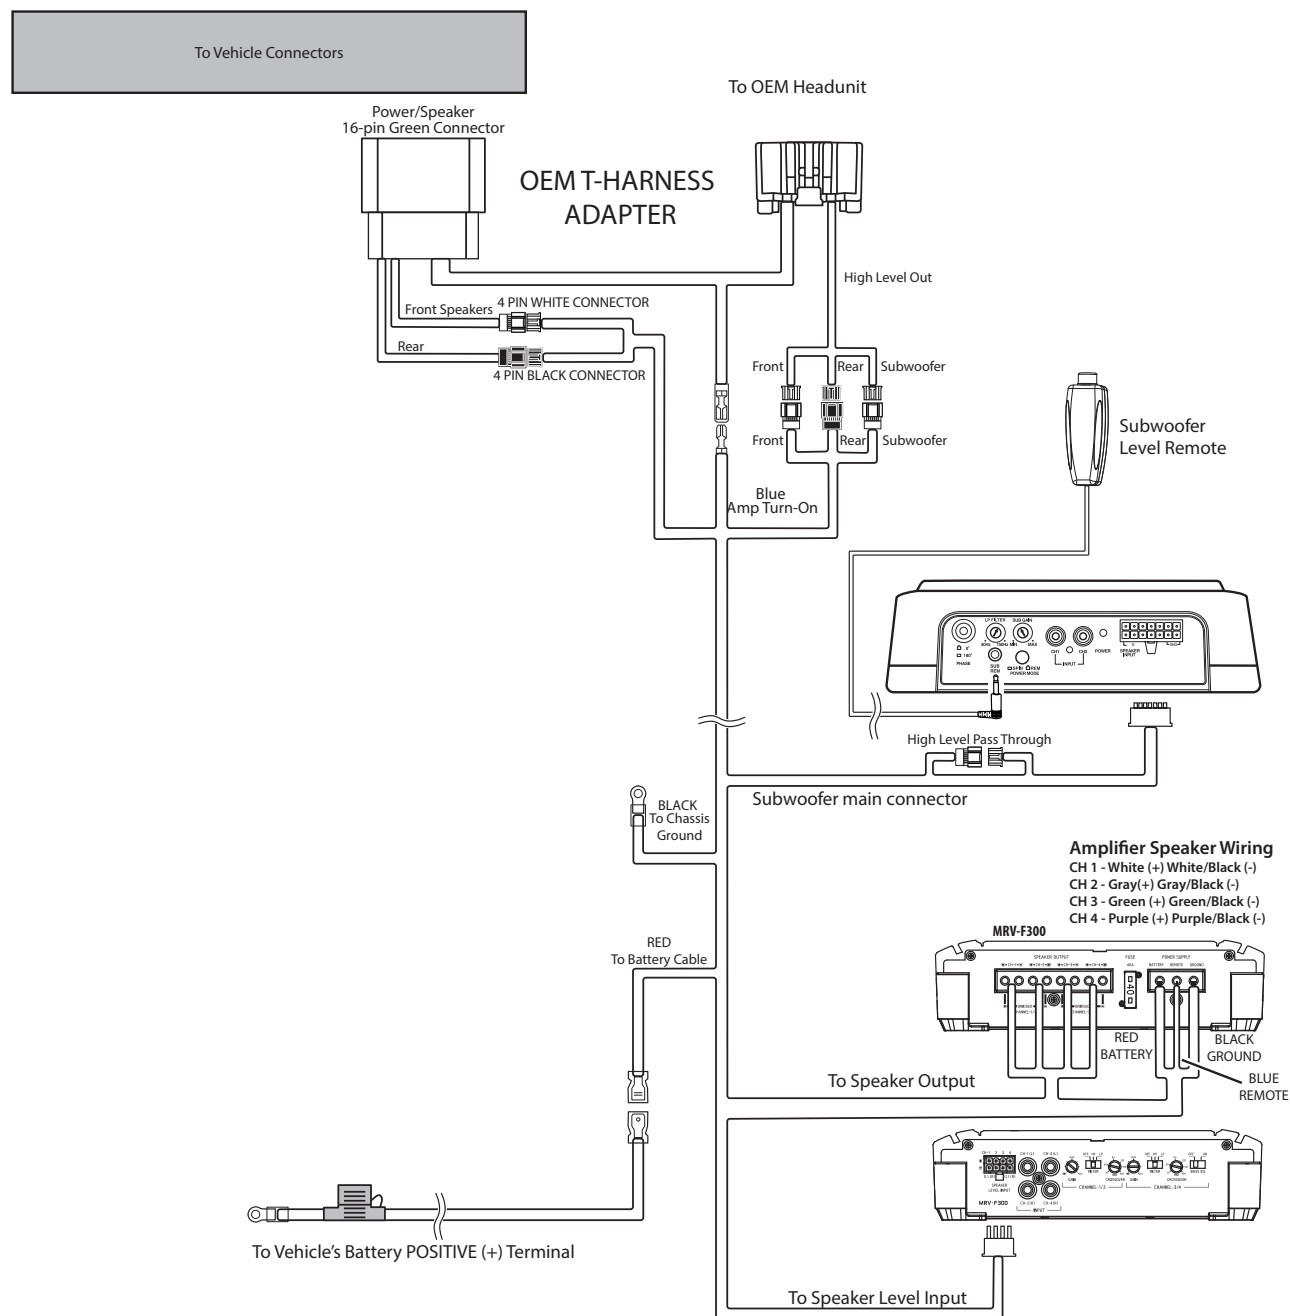

NOTE: FOR BEST PERFORMANCE SET AMPLIFIER AND SUBWOOFER TO RECOMMENDED SETTINGS AS SHOWN ABOVE