



EXPLODED VIEW

X92-4430-0x
X92-4450-0x

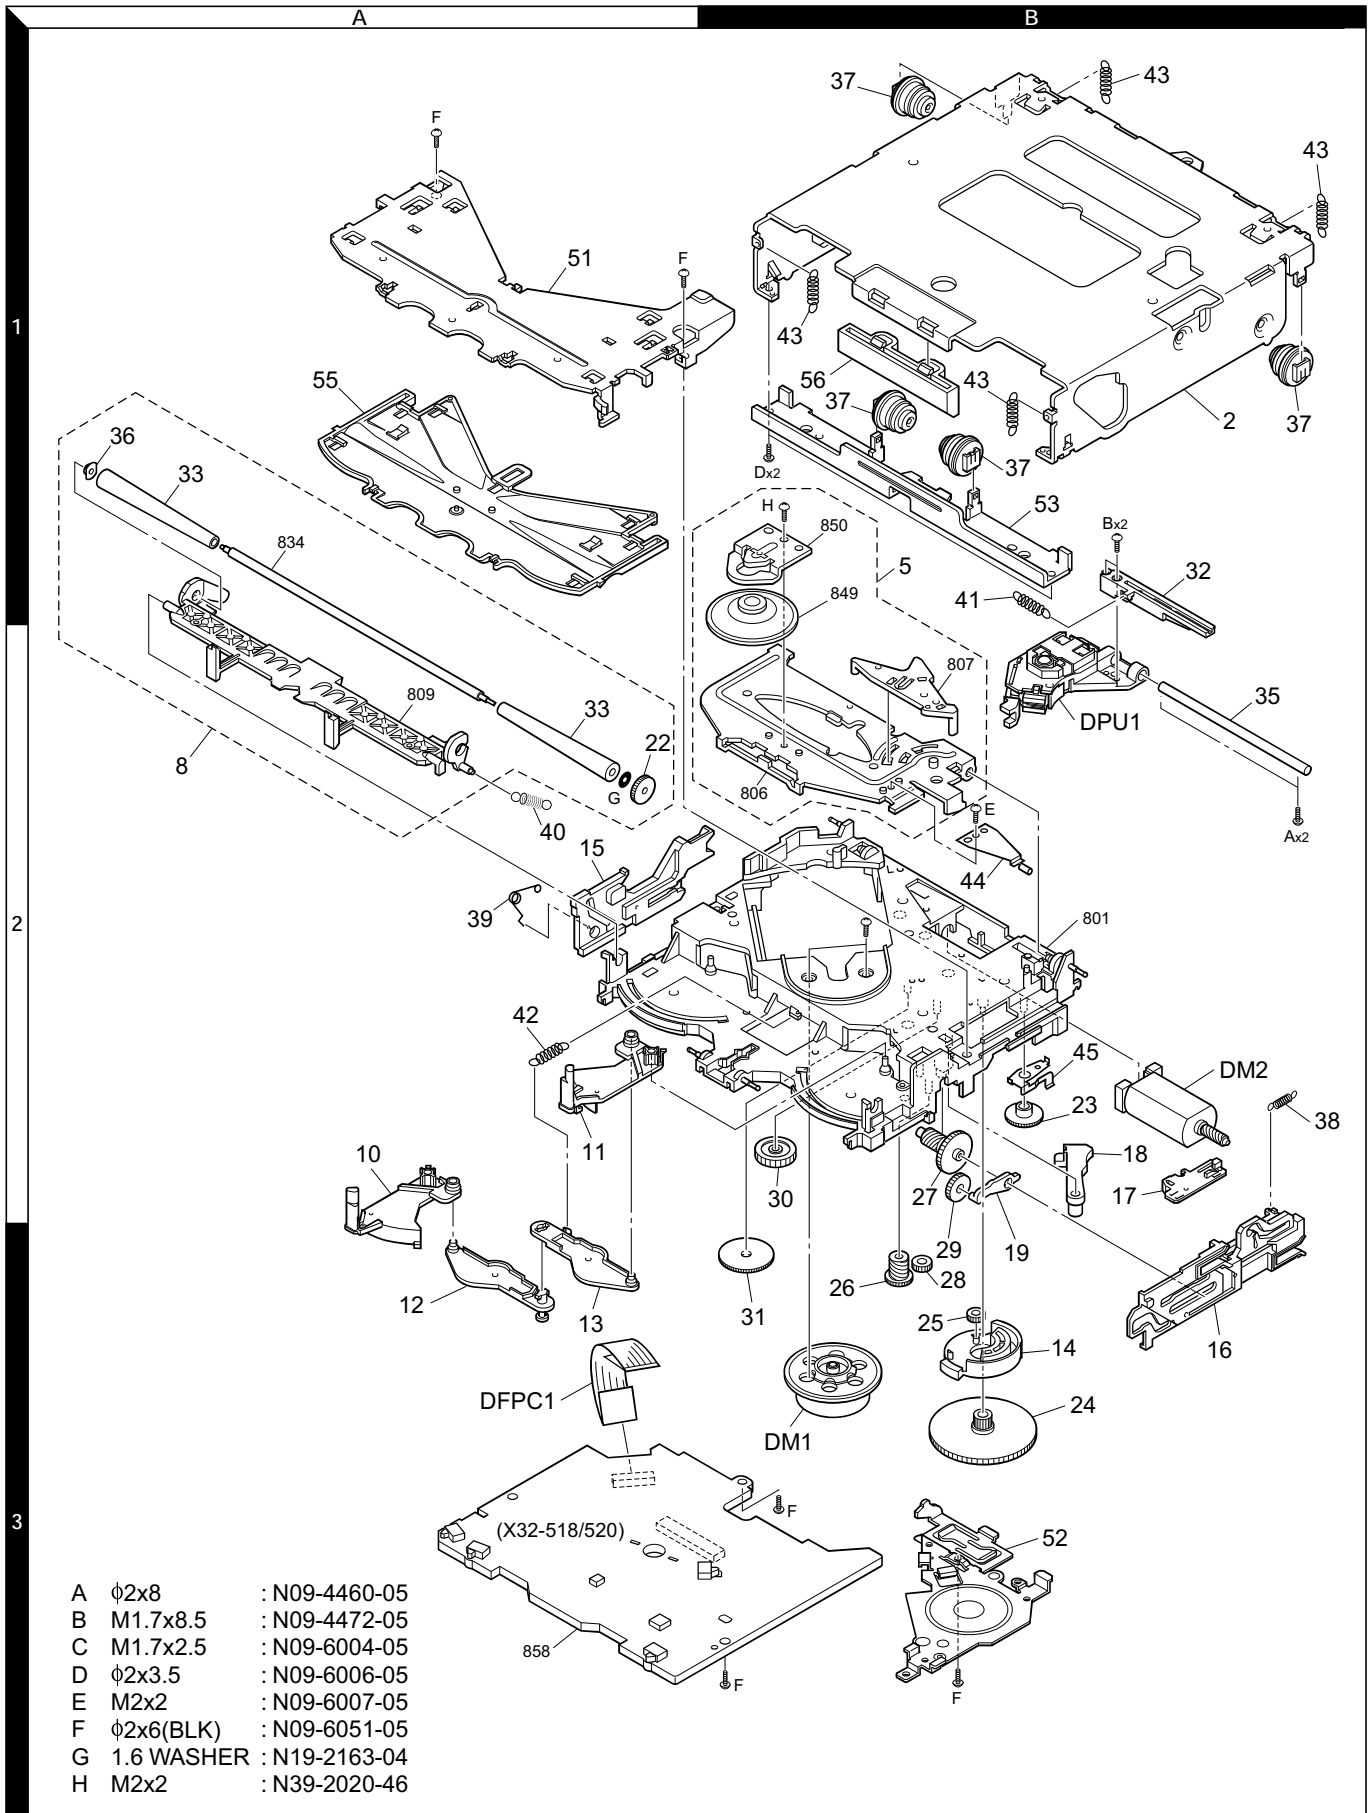

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW

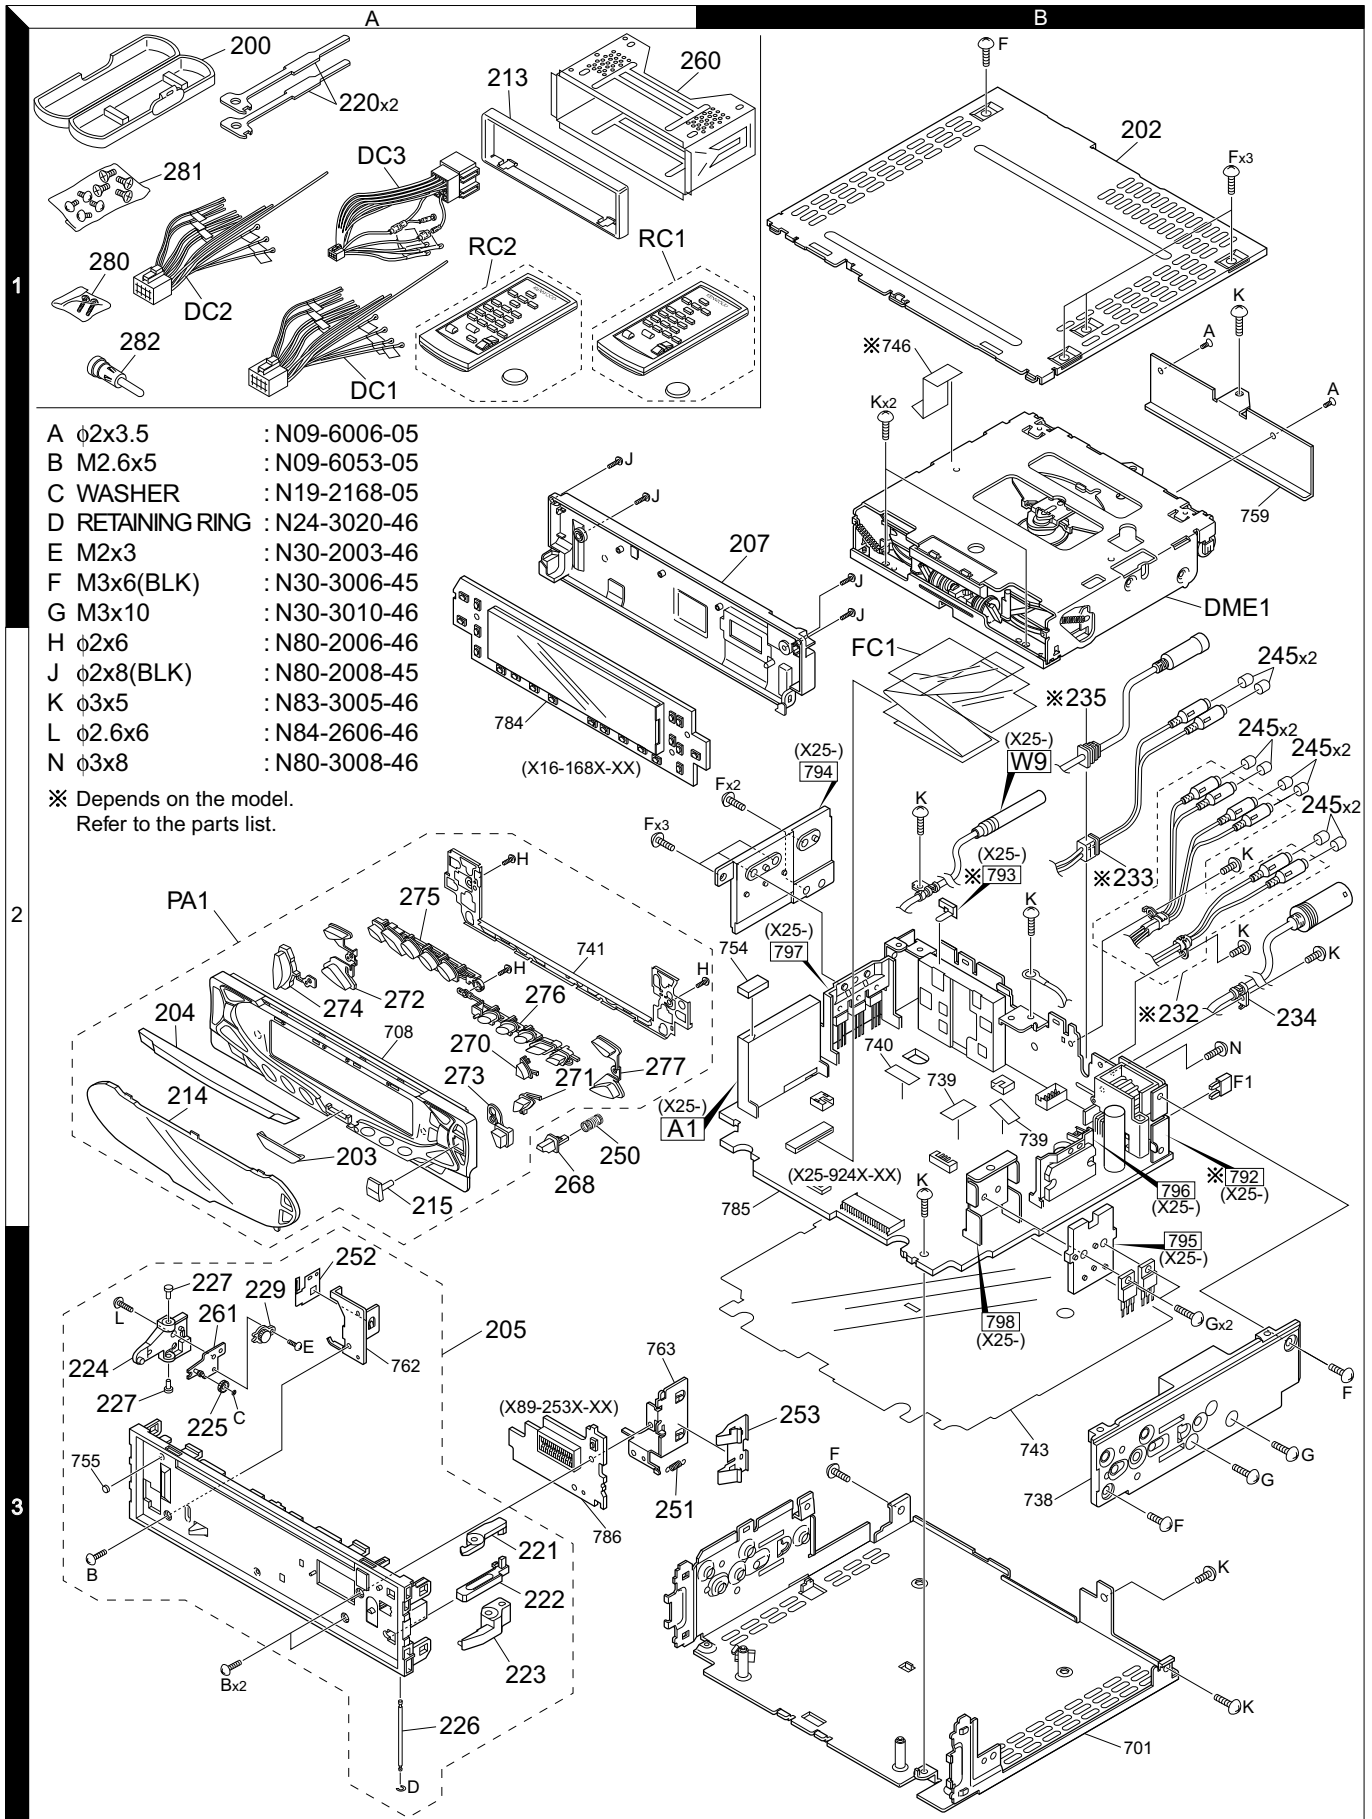

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-719/X559/Z737,Z638											
200	1A	*	A02-2712-13	PLASTIC CABINET ASSY		F1	2B		F52-0006-05	FUSE (MINI BLADE TYPE) (10A)	
202	1B	*	A52-0811-12	TOP PLATE		F1	2B		F52-0011-05	FUSE (MINI BLADE TYPE) (10A)	
203	2A	*	A21-4175-04	DRESSING PANEL		250	2A	*	G01-3135-04	COMPRESSION SPRING	
204	2A	*	A21-4209-02	DRESSING PANEL	K2E1M2	251	3A	*	G01-3136-14	EXTENSION SPRING	
204	2A	*	A21-4210-02	DRESSING PANEL	K4	252	3A	*	G02-1428-04	FLAT SPRING	
						253	3B	*	G02-1429-04	FLAT SPRING	
205	3A	*	A22-2946-12	SUB PANEL ASSY		-		*	H10-4802-12	POLYSTYRENE FOAMED FIXTURE	
207	1B	*	A46-1756-11	REAR COVER		-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K2K4M2
PA1	2A	*	A64-2646-11	PANEL ASSY	K2	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
PA1	2A	*	A64-2647-11	PANEL ASSY	E1	-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
PA1	2A	*	A64-2648-11	PANEL ASSY	M2	-		*	H54-2320-03	ITEM CARTON CASE	K2
PA1	2A	*	A64-2650-11	PANEL ASSY	K4	-		*	H54-2321-03	ITEM CARTON CASE	E1
RC1	1A		A70-2025-05	REMOTE CONTROLLER ASSY (RC-410)	K2K4	-		*	H54-2322-03	ITEM CARTON CASE	M2
RC2	1A	*	A70-2026-05	REMOTE CONTROLLER ASSY (RC-420)	E1M2	-		*	H54-2324-03	ITEM CARTON CASE	K4
213	1A	*	B07-3050-02	ESCUTCHEON	K2E1M2	260	1A	*	J21-9823-03	MOUNTING HARDWARE ASSY	
213	1A	*	B07-3057-02	ESCUTCHEON	K4	261	3A	*	J21-9831-04	MOUNTING HARDWARE ASSY	
214	2A	*	B10-4209-01	FRONT GLASS	K2						
214	2A	*	B10-4210-01	FRONT GLASS	E1	268	2A	*	K24-3837-04	KNOB (OPEN)	
214	2A	*	B10-4211-01	FRONT GLASS	M2	270	2A	*	K24-3850-04	KNOB (SKIP UP)	K2E1M2
						270	2A	*	K24-3852-04	KNOB (SKIP UP)	K4
214	2A	*	B10-4213-01	FRONT GLASS	K4	271	2A	*	K24-3851-04	KNOB (SKIP DOWN)	K2E1M2
215	2A	*	B10-4217-04	FRONT GLASS		271	2A	*	K24-3853-04	KNOB (SKIP DOWN)	K4
-			B46-0100-50	WARRANTY CARD							
-			B46-0606-04	ID CARD	K2K4	272	2A	*	K25-1417-13	KNOB (EQ, SRC)	
-			B46-0612-14	ID CARD	E1M2	273	2A	*	K25-1418-03	KNOB (PAUSE)	
						274	2A	*	K25-1423-03	KNOB (VOL)	
-			B46-0645-03	USER CARD	K2K4	275	2A	*	K25-1428-03	KNOB (PRE1-3, ATT, Q)	K4
-			B46-0648-03	USER CARD	K4	275	2A	*	K25-1456-03	KNOB (PRE1-3)	K2E1M2
-			B58-1365-04	CAUTION CARD							
-		*	B64-2176-00	INST. MANUAL (ENGLISH)	K2K4	276	2A	*	K25-1420-03	KNOB (PRE4-6, TI, DISP)	E1
-		*	B64-2177-00	INST. MANUAL (FRE, SPA)	K2K4	276	2A	*	K25-1429-03	KNOB (PRE4-6, AUTO, DISP)	K4
						276	2A	*	K25-1457-03	KNOB (PRE4-6)	K2M2
-		*	B64-2178-00	INST. MANUAL (ENG, T-CHI)	M2	277	2A	*	K25-1458-13	KNOB (FM, AM)	K4
-		*	B64-2180-00	INST. MANUAL (ENGLISH)	E1	277	2A	*	K25-1459-13	KNOB (FM, AM)	K2E1M2
-		*	B64-2181-00	INST. MANUAL (FRE, GER)	E1						
-		*	B64-2182-00	INST. MANUAL (DUT, ITA)	E1	280	1A		N99-1656-05	SCREW SET	
-		*	B64-2183-00	INST. MANUAL (SPA, POR)	E1	281	1A		N99-1723-05	SCREW SET	K2K4M2
						A	1B		N09-6006-05	TAPTITE SCREW (PAN ST 2X3.5T)	
220	1A	*	D10-4674-04	LEVER		B	3A	*	N09-6053-05	MACHINE SCREW (M2.6X5)	
221	3A	*	D10-4675-04	LEVER		C	3A	*	N19-2168-05	FLAT WASHER (1.4X3.0X0.25)	
222	3A	*	D10-4676-04	LEVER							
223	3A	*	D10-4677-04	LEVER		D	3A		N24-3020-46	E TYPE RETAINING RING (2X5X1.7)	
224	3A	*	D10-4678-03	LEVER		E	3A		N30-2003-46	PAN HEAD MACHINE SCREW	
						F	1B		N30-3006-45	PAN HEAD MACHINE SCREW	
225	3A	*	D13-2242-04	GEAR		G	3B		N30-3010-46	PAN HEAD MACHINE SCREW	
226	3A	*	D21-2406-04	SHAFT		H	2A		N80-2006-46	PAN HEAD TAPTITE SCREW	
227	3A	*	D21-2407-04	SHAFT							
229	3A		D39-0237-05	DAMPER		J	1A		N80-2008-45	PAN HEAD TAPTITE SCREW	
						K	1B		N83-3005-46	PAN HEAD TAPTITE SCREW	
232	2B	*	E30-6064-05	CORD WITH PINPLUG (6P)	K4	L	3A		N84-2606-46	PAN HEAD TAPTITE SCREW	
232	2B	*	E30-6065-05	CORD WITH PINPLUG (4P)	K2E1M2						
233	2B	*	E30-6067-15	CORD WITH PINPLUG (AUX 2P)	K4M2	282	1A		T90-0523-05	ANTENNA ADAPTOR	E1
234	2B	*	E30-6068-05	CORD WITH DIN CONNECTOR (13P)		282	1A		T90-0534-05	ANTENNA ADAPTOR	E1
235	2B	*	E30-6069-05	CORD WITH DIN CONNECTOR (4P)	E1	282	1A	*	T90-0552-05	ANTENNA ADAPTOR	E1
						DME1	1B	*	X92-4450-01	MECHANISM ASSY (DXM-6111W)	
△ DC1	1A	*	E30-6062-05	DC CORD	K4M2	SWITCH UNIT (X16-168x-xx)					
△ DC2	1A	*	E30-6106-05	DC CORD	K2	C1			CK73FB1A105K	CHIP C 1.0UF	K
△ DC3	1A	*	E30-6063-05	DC CORD	E1	C2			CK73GB1H103K	CHIP C 0.010UF	K
FC1	2B	*	E39-0447-05	FLAT CABLE (24P)		C3			CK73GB1C104K	CHIP C 0.10UF	K
245	2B		F29-0049-05	INSULATING COVER							

K2 : KDC-719 K4 : KDC-X559 M2 : KDC-Z737 E1 : Z638

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-168x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C4			CK73FB1A225K	CHIP C 2.2UF K	
C5			CK73GB1H103K	CHIP C 0.010UF K	
C6			CK73FB1A225K	CHIP C 2.2UF K	
C7			CC73GCH1H101J	CHIP C 100PF J	
C8			CK73EB0J106K	CHIP C 10UF K	
C9			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73FB1A105K	CHIP C 1.0UF K	
C12			CK73FB1A105K	CHIP C 1.0UF K	
C13			CK73GB1C104K	CHIP C 0.10UF K	
C16-19			CK73GB1H103K	CHIP C 0.010UF K	
C20			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0829-05	RECTANGULAR PLUG (16P)	
L1			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
L2		*	L40-1005-68	SMALL FIXED INDUCTOR (10UH)	
L4			L92-0332-05	CHIP FERRITE	
L9			L92-0332-05	CHIP FERRITE	
L13			L92-0332-05	CHIP FERRITE	
X1			L78-0821-05	RESONATOR (20.0MHZ)	
CP1			R90-1016-05	MULTI-COMP 470 X4	
CP2			R90-0724-05	MULTI-COMP 1K X4	
CP3			R90-0720-05	MULTI-COMP 100K X4	
CP4			R90-1022-05	MULTI-COMP 470 X2	
CP5			R90-0724-05	MULTI-COMP 1K X4	
CP6,7			R90-1019-05	MULTI-COMP 100 X2	
CP8			R90-1014-05	MULTI-COMP 100 X4	
CP9			R90-0737-05	MULTI-COMP 100K X2	
R1			RK73GB2A103J	CHIP R 10K J 1/10W	
R7		*	RK73GB2A220J	CHIP R 22 J 1/10W	
R8			RK73GB2A563J	CHIP R 56K J 1/10W	
R9			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R11			RK73GB2A101J	CHIP R 100 J 1/10W	
R12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13,14		*	RK73GB2A274J	CHIP R 270K J 1/10W	
R15,16			RK73GB2A153J	CHIP R 15K J 1/10W	
R17			RK73GB2A100J	CHIP R 10 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R27			RK73GB2A153J	CHIP R 15K J 1/10W	
R32			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R33			RK73GB2A223J	CHIP R 22K J 1/10W	
R34-36			RK73GB2A104J	CHIP R 100K J 1/10W	
R39			RK73GB2A101J	CHIP R 100 J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	E1M2
R43			RK73GB2A101J	CHIP R 100 J 1/10W	
R48			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R49			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R50			RK73GB2A392J	CHIP R 3.9K J 1/10W	E1M2
R51			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1M2
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1			S70-0863-05	TACT SWITCH	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
S2,3			S70-0856-05	TACT SWITCH	E1M2
S2,3			S70-0873-05	TACT SWITCH	K2K4
S4			S70-0857-05	TACT SWITCH	
S5-10			S70-0856-05	TACT SWITCH	E1M2
S5-10			S70-0873-05	TACT SWITCH	K2K4
S11			S70-0857-05	TACT SWITCH	
S12,13			S70-0856-05	TACT SWITCH	E1M2
S12,13			S70-0873-05	TACT SWITCH	K2K4
S14			S70-0857-05	TACT SWITCH	
S15-19			S70-0856-05	TACT SWITCH	E1M2
S15-19			S70-0873-05	TACT SWITCH	K2K4
S20			S70-0857-05	TACT SWITCH	
D1,2			DA204U	DIODE	
D3-5			MA8056-M	ZENER DIODE	
D9			MA8056-M	ZENER DIODE	
D10,11			FTZ6.8E	ZENER DIODE	
D12			MA8062-L	ZENER DIODE	
D13,14			MA8056-M	ZENER DIODE	
D15,16			DA204U	DIODE	
ED1		*	CN2034M	FLUORESCENT INDICATOR TUBE	
IC1		*	TAR5S33	ANALOGUE IC	
IC2			TC74HC4050AFT	MOS-IC	
IC3			RS-171	ANALOGUE IC	
IC4			BA3830F	ANALOGUE IC	
IC5		*	UPD703032GFA04	MI-COM IC	
Q1			DTA144EUA	DIGITAL TRANSISTOR	
Q1			UN5113	DIGITAL TRANSISTOR	
Q2			DTC114YUA	DIGITAL TRANSISTOR	
Q2			UN5214	DIGITAL TRANSISTOR	
Q3			DTA114EUA	DIGITAL TRANSISTOR	
Q3			UN5111	DIGITAL TRANSISTOR	
Q4			DTC114EUA	DIGITAL TRANSISTOR	
Q4			UN5211	DIGITAL TRANSISTOR	
Q6			DTC114YK	DIGITAL TRANSISTOR	
Q6			UN2214	DIGITAL TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			2SC4081	TRANSISTOR	E1M2
Q9			DTA114EUA	DIGITAL TRANSISTOR	K2K4
Q9			UN5111	DIGITAL TRANSISTOR	K2K4
Q9,10			DTA114EUA	DIGITAL TRANSISTOR	E1M2
Q9,10			UN5111	DIGITAL TRANSISTOR	E1M2
ELECTRIC UNIT (X25-924x-xx)					
D101			B30-1566-05	LED (1608,RED)	
C1			C90-2822-05	ELECTRO 3900UF 16WV	K2E1M2
C1			C90-5377-05	ELECTRO 3900UF 16WV	K4
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3			CK73GB1C104K	CHIP C 0.10UF K	
C4		*	C90-5442-05	ELECTRO 100UF 10WV	
C5,6			CE04NW1E4R7M	ELECTRO 4.7UF 25WV	K4M2
C7			CK73FB1C105K	CHIP C 1.0UF K	
C8			CE04DW1A221M	ELECTRO 220UF 10WV	
C9			CK73FB1C224K	CHIP C 0.22UF K	
C10			CK73GB1H103K	CHIP C 0.010UF K	

K2 : KDC-719 K4 : KDC-X559 M2 : KDC-Z737 E1 : Z638

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-924x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C11			C90-2966-05	ELECTRO 100UF 16WV		C97,98			CK73GB1H222K	CHIP C 2200PF K	
C12			CK73GB1H103K	CHIP C 0.010UF K		C99,100			CE04NW1C100M	ELECTRO 10UF 16WV	K2E1M2
C13			C90-2966-05	ELECTRO 100UF 16WV		C99,100			CE04NW1C220M	ELECTRO 22UF 16WV	K4
C14			CK73FB1A225K	CHIP C 2.2UF K		C101,102			CE04NW1C100M	ELECTRO 10UF 16WV	K4
C15			C90-2979-05	ELECTRO 100UF 50WV		C103,104			CK73GB1H222K	CHIP C 2200PF K	
C16			CK73GB1C104K	CHIP C 0.10UF K		C105,106			CE04NW1C220M	ELECTRO 22UF 16WV	K4
C17			CK73GB1H103K	CHIP C 0.010UF K		C107,108			CE04NW1C100M	ELECTRO 10UF 16WV	K4
C19			CK73GB1H103K	CHIP C 0.010UF K		C109,110			CK73GB1H222K	CHIP C 2200PF K	K4
C20			CK73GB1H103K	CHIP C 0.010UF K	E1	C111			CK73GB1H102K	CHIP C 1000PF K	
C21			CK73GB1E223K	CHIP C 0.022UF K		C113			CE04NW1C470M	ELECTRO 47UF 16WV	
C22			C90-2558-05	ELECTRO 1.0UF 50WV		C114			C90-2551-05	ELECTRO 33UF 10WV	
C23			CE04NW1E4R7M	ELECTRO 4.7UF 25WV	K4	C115,116			C90-2558-05	ELECTRO 1.0UF 50WV	
C24			C90-2966-05	ELECTRO 100UF 16WV	K4	C117-120			C90-5297-05	NP-ELEC 0.22UF 50WV	
C25-28			CK73EB1C225K	CHIP C 2.2UF K	K4	C129			C90-5308-05	ELECTRO 1.0UF 50WV	
C29			CE04NW1C220M	ELECTRO 22UF 16WV	K4	C131			CK73GB1H103K	CHIP C 0.010UF K	
C30			CK73GB1E223K	CHIP C 0.022UF K	K4	C132			CC73GCH1H100D	CHIP C 10PF D	
C31			CK73GB1H103K	CHIP C 0.010UF K	K4	C133			CK73GB1H103K	CHIP C 0.010UF K	
C32,33			CE04NW1E4R7M	ELECTRO 4.7UF 25WV	K4	C134			CC73GCH1H100D	CHIP C 10PF D	
C34			C90-2556-05	ELECTRO 3.3UF 50WV		C135			CK73GB1H103K	CHIP C 0.010UF K	
C35			CK73GB1C683K	CHIP C 0.068UF K		C136			CC73GCH1H100D	CHIP C 10PF D	
C36			C90-2562-05	ELECTRO 0.10UF 50WV		C137			CK73GB1H103K	CHIP C 0.010UF K	
C37			CK73GB1H102K	CHIP C 1000PF K		C139			CK73GB1H103K	CHIP C 0.010UF K	
C38,39			CK73GB1H103K	CHIP C 0.010UF K		C141			CK73GB1H331K	CHIP C 330PF K	E1
C40,41			CK73GB1H103K	CHIP C 0.010UF K	K4M2	C142,143	*		C90-5437-05	ELECTRO 10UF 16WV	E1
C42			CC73GCH1H270J	CHIP C 27PF J		C144			CK73GB1H103K	CHIP C 0.010UF K	E1
C43			CC73GCH1H220J	CHIP C 22PF J		C145,146			CC73GCH1H100D	CHIP C 10PF D	E1
C44			CE04NW1A220M	ELECTRO 22UF 10WV	K4M2	C201,202			CK73GB1H332K	CHIP C 3300PF K	K4M2
C45			CE04NW1C100M	ELECTRO 10UF 16WV	K4M2	C203			CK73GB1H104K	CHIP C 0.10UF K	
C46,47			C90-2658-05	NP-ELEC 1.0UF 50WV	K4M2	C204			CK73GB1H103K	CHIP C 0.010UF K	
C48			CK73GB1H103K	CHIP C 0.010UF K		C205			CK73GB1H104K	CHIP C 0.10UF K	K4M2
C49-53		*	C90-5444-05	ELECTRO 4.7UF 25WV		C206			CK73GB1C104K	CHIP C 0.10UF K	K4M2
C54			CK73GB1H103K	CHIP C 0.010UF K		C305			CK73FB0J475K	CHIP C 4.7UF K	
C55			CK73FB1C105K	CHIP C 1.0UF K		C351			CK73GB1H102K	CHIP C 1000PF K	
C56,57			C90-2524-05	NP-ELEC 4.7UF 16WV	K4	C352	*		C90-5443-05	ELECTRO 47UF 16WV	
C58			CE04NW1C100M	ELECTRO 10UF 16WV		C353			CK73GB1H103K	CHIP C 0.010UF K	
C59			CE04MW1C100M	ELECTRO 10UF 16WV		C354			CK73FB1C105K	CHIP C 1.0UF K	
C60			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	K4	C355			CK73GB1C104K	CHIP C 0.10UF K	
C63		*	CE04NW1E4R7MEL	ELECTRO 4.7UF 25WV		C479			C90-2547-05	ELECTRO 100UF 6.3WV	
C65,66			C90-2658-05	NP-ELEC 1.0UF 50WV		C480			C90-2554-05	ELECTRO 10UF 16WV	
C67,68			CE04NW1HR47M	ELECTRO 0.47UF 50WV		C481			CK73GB1H103K	CHIP C 0.010UF K	
C69			CE04NW0J470M	ELECTRO 47UF 6.3WV		C484			CK73GB1H103K	CHIP C 0.010UF K	
C70			CK73GB1A474K	CHIP C 0.47UF K		C485			C90-2980-05	ELECTRO 220UF 16WV	
C71			CC73GCH1H151J	CHIP C 150PF J		C802			CK73FB1H104K	CHIP C 0.10UF K	K4
C72			CK73GB1E333K	CHIP C 0.033UF K		C803,804			CK73FB1H104K	CHIP C 0.10UF K	
C73			CK73GB1H103K	CHIP C 0.010UF K		C851,852			CK73GB1H103K	CHIP C 0.010UF K	
C74,75			CK73GB1C104K	CHIP C 0.10UF K		C853,854			CK73GB1H104K	CHIP C 0.10UF K	
C76-79			C90-2524-05	NP-ELEC 4.7UF 16WV	K4	C855			CK73GB1H103K	CHIP C 0.010UF K	E1
C81,82		*	C90-5429-05	NP-ELEC 0.33UF 50WV	K4	C856			CK73GB1H103K	CHIP C 0.010UF K	
C83,84			CK73FB1C334K	CHIP C 0.33UF K	K4	C857			CK73GB1H102K	CHIP C 1000PF K	K2K4M2
C85,86			CE04NW1HR33M	ELECTRO 0.33UF 50WV	K4	C858-861			CK73GB1H104K	CHIP C 0.10UF K	
C87,88			CK73FB1C334K	CHIP C 0.33UF K	K4	C900			CK73GB1H103K	CHIP C 0.010UF K	
C89-92			CK73GB1C104K	CHIP C 0.10UF K	K4	CN1	*		E41-0174-05	PIN ASSY (10P)	
C93,94			CE04NW1C100M	ELECTRO 10UF 16WV	K2E1M2	CN2			E40-3299-05	PIN ASSY (2P)	
C93,94			CE04NW1C220M	ELECTRO 22UF 16WV	K4	CN3			E40-3266-05	PIN ASSY (8P)	
C95,96			CE04NW1C100M	ELECTRO 10UF 16WV	K4						

K2 : KDC-719 K4 : KDC-X559 M2 : KDC-Z737 E1 : Z638

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-924x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CN4			E40-3261-05	PIN ASSY (3P)		R19			RK73EB2E103J	CHIP R 10K J 1/4W	
CN6			E40-9490-15	PIN ASSY (20P)		R20			RK73GB2A104J	CHIP R 100K J 1/10W	
CN7			E40-3261-05	PIN ASSY (3P)	K4M2	R21			RK73FB2B102J	CHIP R 1.0K J 1/8W	K4
CN8		*	E41-0194-05	FLAT CABLE CONNECTOR (24P)		R23		*	RK73GB2A750J	CHIP R 75 J 1/10W	K4
CN9			E40-3263-05	PIN ASSY (5P)	E1	R24			RK73GB2A272J	CHIP R 2.7K J 1/10W	K4
△ J1			E58-0863-15	RECTANGULAR RECEPTACLE (16P)		R25			RK73GB2A470J	CHIP R 47 J 1/10W	K4
W9	2B	*	E30-6098-05	CORD WITH PLUG		R26		*	RK73GB2A752J	CHIP R 7.5K J 1/10W	K4
L1			L33-1170-05	CHOKE COIL ASSY (140UH)		R27			RK73GB2A563J	CHIP R 56K J 1/10W	K4
L2			L33-1153-05	SMALL FIXED INDUCTOR (10UH)	K4	R28			RK73GB2A913J	CHIP R 91K J 1/10W	K4
L3			L40-2201-78	SMALL FIXED INDUCTOR (22UH)		R29			RK73GB2A470J	CHIP R 47 J 1/10W	K4
L5			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)		R30			RK73GB2A103J	CHIP R 10K J 1/10W	K4
L7			L33-1039-05	LINE FILTER COIL (52mH)		R31,32			RK73GB2A913J	CHIP R 91K J 1/10W	K4
L9-13			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)		R33			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L14			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	E1	R35			RK73GB2A471J	CHIP R 470 J 1/10W	
L351			L92-0075-05	CHIP FERRITE		R36			RK73GB2A104J	CHIP R 100K J 1/10W	
L352			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)		R37			RK73FB2B472J	CHIP R 4.7K J 1/8W	
X1			L78-0821-05	RESONATOR (20.0MHZ)		R38			R92-0365-05	CHIP R 1.0K J 1/2W	
X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	E1	R39			RK73GB2A223J	CHIP R 22K J 1/10W	
X4			L77-2738-05	CRYSTAL RESONATOR (32.768kHz)		R40			R92-0365-05	CHIP R 1.0K J 1/2W	
F	2B		N30-3006-45	PAN HEAD MACHINE SCREW		R41			RK73GB2A123J	CHIP R 12K J 1/10W	
G	3B		N30-3010-46	PAN HEAD MACHINE SCREW		R42			RK73GB2A223J	CHIP R 22K J 1/10W	
K	2B		N83-3005-46	PAN HEAD TAPTITE SCREW		R43			RK73GB2A153J	CHIP R 15K J 1/10W	
N	2B		N80-3008-46	PAN HEAD TAPTITE SCREW		R44			RK73GB2A223J	CHIP R 22K J 1/10W	
CP2			R90-1016-05	MULTI-COMP 470 X4		R45			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
CP3,4			R90-1022-05	MULTI-COMP 470 X2		R46			RK73EB2E473J	CHIP R 47K J 1/4W	
CP5			R90-0725-05	MULTI-COMP 1K X2		R47			RK73GB2A183J	CHIP R 18K J 1/10W	
CP6			R90-1013-05	MULTI-COMP 2.2K X2		R48			RK73GB2A104J	CHIP R 100K J 1/10W	
CP7		*	R90-1048-05	MULTI-COMP 4.7K X2		R50			RK73GB2A104J	CHIP R 100K J 1/10W	K4M2
CP8		*	R90-1508-05	MULTI-COMP 100 X2		R52-54			RK73GB2A473J	CHIP R 47K J 1/10W	K4M2
CP9		*	R90-1048-05	MULTI-COMP 4.7K X2		R55,56			RK73EB2E100J	CHIP R 10 J 1/4W	K4M2
CP10		*	R90-1045-05	MULTI-COMP 470 X2		R57			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K4M2
CP11-13		*	R90-1051-05	MULTI-COMP 100K X2		R58			RK73GB2A104J	CHIP R 100K J 1/10W	
CP14		*	R90-1509-05	MULTI-COMP 100 X4	E1	R98			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CP15		*	R90-1054-05	MULTI-COMP 2.2K X4	E1	R103			RK73FB2B472J	CHIP R 4.7K J 1/8W	
CP16		*	R90-1058-05	MULTI-COMP 100K X4		R111			RK73FB2B223J	CHIP R 22K J 1/8W	K2K4M2
CP17			R90-1046-05	MULTI-COMP 1K X2		R112			R92-0366-05	CHIP R 560 J 1W	K2K4M2
R1			RK73GB2A104J	CHIP R 100K J 1/10W		R115			RK73GB2A333J	CHIP R 33K J 1/10W	
R2			RK73FB2B152J	CHIP R 1.5K J 1/8W		R121			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1
R3			RK73GB2A223J	CHIP R 22K J 1/10W		R122-124			RK73EB2E471J	CHIP R 470 J 1/4W	E1
R4			RK73GB2A222J	CHIP R 2.2K J 1/10W		R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73EB2E221J	CHIP R 220 J 1/4W		R130,131			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R6			RK73GB2A153J	CHIP R 15K J 1/10W		R132-134			RK73EB2E101J	CHIP R 100 J 1/4W	
R7			RK73GH1J432D	CHIP R 4.3K D 1/16W		R135-137			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R8			RK73GH1J243D	CHIP R 24K D 1/16W		R140			RK73GB2A473J	CHIP R 47K J 1/10W	
R10			RK73GB2A562J	CHIP R 5.6K J 1/10W		R141			RK73GB2A153J	CHIP R 15K J 1/10W	
R11			RK73GB2A104J	CHIP R 100K J 1/10W		R142			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R12			RK73FB2B103J	CHIP R 10K J 1/8W		R143			RK73GB2A473J	CHIP R 47K J 1/10W	
R13			RK73EB2E102J	CHIP R 1.0K J 1/4W	K4E1M2	R144			RK73GB2A333J	CHIP R 33K J 1/10W	
R14			RK73FB2B561J	CHIP R 560 J 1/8W	K4E1M2	R145		*	RK73GB2A473J	CHIP R 47K J 1/10W	
R15			RK73EB2E103J	CHIP R 10K J 1/4W	E1	R146			RK73GB2A821J	CHIP R 820 J 1/10W	
R16			RK73GB2A104J	CHIP R 100K J 1/10W	K2K4M2	R147			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R16			RK73GB2A223J	CHIP R 22K J 1/10W	E1	R148			RK73FB2B912J	CHIP R 9.1K J 1/8W	
R17			RK73GB2A473J	CHIP R 47K J 1/10W	E1	R149			RK73FB2B243J	CHIP R 24K J 1/8W	
						R150			RK73GB2A472J	CHIP R 4.7K J 1/10W	
						R151			RK73GB2A103J	CHIP R 10K J 1/10W	

K2 : KDC-719 K4 : KDC-X559 M2 : KDC-Z737 E1 : Z638

△ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-924x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R152			RK73GB2A472J	CHIP R 4.7K J 1/10W		R390			RK73GB2A473J	CHIP R 47K J 1/10W	
R153,154			RK73GB2A334J	CHIP R 330K J 1/10W		R393			RK73GB2A104J	CHIP R 100K J 1/10W	
R155,156			RK73EB2E100J	CHIP R 10 J 1/4W		R397			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R157			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R400			RK73GB2A101J	CHIP R 100 J 1/10W	
R161,162			RK73FB2B471J	CHIP R 470 J 1/8W		R401			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R163,164			RK73FB2B222J	CHIP R 2.2K J 1/8W	K4	R402			RK73GB2A471J	CHIP R 470 J 1/10W	K4M2
R163,164			RK73FB2B223J	CHIP R 22K J 1/8W	K2E1M2	R403			RK73GB2A104J	CHIP R 100K J 1/10W	K2K4M2
R165,166			RK73FB2B103J	CHIP R 10K J 1/8W	K4	R404			RK73GB2A104J	CHIP R 100K J 1/10W	E1
R167,168			RK73FB2B223J	CHIP R 22K J 1/8W	K4	R405			RK73GB2A104J	CHIP R 100K J 1/10W	K2K4
R169,170		*	RK73FB2B820J	CHIP R 82 J 1/8W		R406			RK73GB2A104J	CHIP R 100K J 1/10W	E1M2
R171,172			RK73FB2B471J	CHIP R 470 J 1/8W		R407			RK73GB2A104J	CHIP R 100K J 1/10W	K4E1M2
R173,174			RK73FB2B222J	CHIP R 2.2K J 1/8W	K4	R408			RK73GB2A104J	CHIP R 100K J 1/10W	K2
R173,174			RK73FB2B223J	CHIP R 22K J 1/8W	K2E1M2	R409			RK73GB2A104J	CHIP R 100K J 1/10W	
R175,176			RK73FB2B103J	CHIP R 10K J 1/8W	K4	R412			RK73GB2A104J	CHIP R 100K J 1/10W	
R177,178			RK73FB2B223J	CHIP R 22K J 1/8W	K4	R414			RK73GB2A104J	CHIP R 100K J 1/10W	
R179,180		*	RK73FB2B820J	CHIP R 82 J 1/8W		R417			RK73GB2A223J	CHIP R 22K J 1/10W	
R181,182			RK73FB2B471J	CHIP R 470 J 1/8W	K4	R421			RK73GB2A473J	CHIP R 47K J 1/10W	
R183,184			RK73FB2B222J	CHIP R 2.2K J 1/8W	K4	R422			RK73GB2A223J	CHIP R 22K J 1/10W	
R185,186			RK73FB2B103J	CHIP R 10K J 1/8W	K4	R475,476			RK73FB2B223J	CHIP R 22K J 1/8W	
R187,188			RK73FB2B223J	CHIP R 22K J 1/8W	K4	R815			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R189,190		*	RK73FB2B820J	CHIP R 82 J 1/8W	K4	R902			RK73GB2A104J	CHIP R 100K J 1/10W	
R200			RK73GB2A221J	CHIP R 220 J 1/10W		R903			RK73GB2A471J	CHIP R 470 J 1/10W	
R201			RK73GB2A102J	CHIP R 1.0K J 1/10W		R905			RK73GB2A471J	CHIP R 470 J 1/10W	
R202			RK73GB2A103J	CHIP R 10K J 1/10W		W1-6			R92-1252-05	CHIP R 0 OHM J 1/16W	K2E1M2
R203			RK73GB2A432J	CHIP R 4.3K J 1/10W		W7,8			R92-1252-05	CHIP R 0 OHM J 1/16W	K2E1
R204			RK73GB2A100J	CHIP R 10 J 1/10W		W11,12			R92-1252-05	CHIP R 0 OHM J 1/16W	K4
R205			RK73GB2A222J	CHIP R 2.2K J 1/10W		W15-18			R92-1252-05	CHIP R 0 OHM J 1/16W	K2E1M2
R206,207			RK73GB2A104J	CHIP R 100K J 1/10W		W19			R92-1252-05	CHIP R 0 OHM J 1/16W	
R210			RK73FB2B102J	CHIP R 1.0K J 1/8W		W111			R92-1252-05	CHIP R 0 OHM J 1/16W	E1
R211			RK73GB2A223J	CHIP R 22K J 1/10W		W112,113			R92-1252-05	CHIP R 0 OHM J 1/16W	
R212			RK73FB2B102J	CHIP R 1.0K J 1/8W		W117			R92-1252-05	CHIP R 0 OHM J 1/16W	E1
R213			RK73GB2A223J	CHIP R 22K J 1/10W		W120			R92-1252-05	CHIP R 0 OHM J 1/16W	
R230			RK73GB2A472J	CHIP R 4.7K J 1/10W		W121			R92-1252-05	CHIP R 0 OHM J 1/16W	K2K4M2
R231			RK73GB2A223J	CHIP R 22K J 1/10W		S1			S74-0809-05	MICRO SWITCH	
R242			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1	D1			RM10ZLF	DIODE	
R301		*	RK73GB2A104J	CHIP R 100K J 1/10W		D3		*	MA8082-L	ZENER DIODE	
R303			RK73GB2A241J	CHIP R 240 J 1/10W		D5		*	MA8100-L	ZENER DIODE	
R305			RK73GB2A394J	CHIP R 390K J 1/10W		D6			MA4051(N)-M	ZENER DIODE	
R306			RK73GB2A101J	CHIP R 100 J 1/10W		D7			MA8056-M	ZENER DIODE	K4E1M2
R353			RK73GB2A102J	CHIP R 1.0K J 1/10W		D8			MA8047-M	ZENER DIODE	E1
R355			RK73GB2A102J	CHIP R 1.0K J 1/10W		D9			MA4110(N)-M	ZENER DIODE	K4
R357			RK73GB2A222J	CHIP R 2.2K J 1/10W		D10			MA4056(N)-M	ZENER DIODE	K4
R358			RK73GB2A102J	CHIP R 1.0K J 1/10W		D13,14			S1J	DIODE	
R359			RK73GB2A104J	CHIP R 100K J 1/10W		D13,14			1SR154-400	DIODE	
R360			RK73GB2A471J	CHIP R 470 J 1/10W		D15			1SS133	DIODE	
R361,362			RK73GB2A222J	CHIP R 2.2K J 1/10W		D16			MA4068(N)-M	ZENER DIODE	
R364			RK73GB2A104J	CHIP R 100K J 1/10W		D17			MA4062(N)-M	ZENER DIODE	
R366			RK73GB2A102J	CHIP R 1.0K J 1/10W		D19,20			DAP202U	DIODE	
R367			RK73GB2A473J	CHIP R 47K J 1/10W		D19,20			MA142WA	DIODE	
R370			RK73GB2A104J	CHIP R 100K J 1/10W		D21			DA204U	DIODE	
R375			RK73GB2A105J	CHIP R 1.0M J 1/10W		D22-24			MA4062-L	ZENER DIODE	
R382			RK73GB2A104J	CHIP R 100K J 1/10W	K2K4M2	D25,26			RD6.8M(B2)	ZENER DIODE	
R382			RK73GB2A225J	CHIP R 2.2M J 1/10W	E1	D27,28			MA8068-M	ZENER DIODE	
R384			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1	D29			MA8062-L	ZENER DIODE	
R389			RK73GB2A102J	CHIP R 1.0K J 1/10W							

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-924x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D30			DAP202U	DIODE		Q15			DTC144EUA	DIGITAL TRANSISTOR	
D30			MA142WA	DIODE		Q15			UN5213	DIGITAL TRANSISTOR	
D31			MA4062-L	ZENER DIODE		Q16			2SB1443	TRANSISTOR	K4
D32			DAN202U	DIODE		Q17			2SC4081	TRANSISTOR	K4
D32			MA142WK	DIODE		Q18			2SA1576A	TRANSISTOR	K4
D33-36			S1J	DIODE		Q19			2SC4081	TRANSISTOR	K4
D33-36			1SR154-400	DIODE		Q20			2SA1576A	TRANSISTOR	K4
D38-41			1SR154-400	DIODE		Q21,22			2SC4081	TRANSISTOR	K4
D39,40			S1J	DIODE		Q23			2SA1576A	TRANSISTOR	K4
D42			DA204U	DIODE		Q26			2SB1277(Q,R)	TRANSISTOR	
D43			IMSA-6801	SURGE ABSORBER		Q27			2SA1576A	TRANSISTOR	
D44			MA8068-M	ZENER DIODE	K4M2	Q28			DTA124EUA	DIGITAL TRANSISTOR	
D45			MA8062-L	ZENER DIODE	K4M2	Q28			UN5112	DIGITAL TRANSISTOR	
D46			MA8068-M	ZENER DIODE	K4M2	Q29			DTC114YUA	DIGITAL TRANSISTOR	
D50			MA4056(N)-M	ZENER DIODE		Q29			UN5214	DIGITAL TRANSISTOR	
D51-53			FTZ6.8E	ZENER DIODE		Q30,31			2SC4081	TRANSISTOR	
D54			DA204U	DIODE		Q32,33			DTA124EUA	DIGITAL TRANSISTOR	
D111,112			S1J	DIODE		Q32,33			UN5112	DIGITAL TRANSISTOR	
D111,112			1SR154-400	DIODE		Q34			2SC4081	TRANSISTOR	
D121-124			MA4062-L	ZENER DIODE	E1	Q35			DTC124EUA	DIGITAL TRANSISTOR	
D473			MA8056-M	ZENER DIODE		Q35			UN5212	DIGITAL TRANSISTOR	
D474		*	MA8100-L	ZENER DIODE		Q36-40			DTC143TUA	DIGITAL TRANSISTOR	
D475			SS14	DIODE		Q36-40			UN5216	DIGITAL TRANSISTOR	
IC1			UPD703033GFA18	MI-COM IC		Q41,42			DTC143TUA	DIGITAL TRANSISTOR	K4
IC2			TDA7407	ANALOGUE IC		Q41,42			UN5216	DIGITAL TRANSISTOR	K4
IC3			M5237ML	IC(VOLTAGE REGULATOR)		Q43			DTC124EUA	DIGITAL TRANSISTOR	
IC4			TDA7560	ANALOGUE IC		Q43			UN5212	DIGITAL TRANSISTOR	
IC5			TDA7401	ANALOGUE IC	K4	Q44			CPH3105	TRANSISTOR	
IC6			ICL7660SIBA	ANALOGUE IC	K4	Q45			DTC124EUA	DIGITAL TRANSISTOR	
IC7			TC74HC02AF	MOS-IC		Q45			UN5212	DIGITAL TRANSISTOR	
IC8			NJM4565M-TE2	ANALOGUE IC		Q46			CPH3105	TRANSISTOR	
IC10-12			NJM4565M-TE2	ANALOGUE IC	K4	Q52			DTC143TUA	DIGITAL TRANSISTOR	E1
IC14			TDA7479D	ANALOGUE IC	E1	Q52			UN5216	DIGITAL TRANSISTOR	E1
IC16			S-80837ANNP	MOS-IC		Q101			DTA114YUA	DIGITAL TRANSISTOR	
IC20			BA3121F	IC (ISO AMP)	K4M2	Q101			UN5114	DIGITAL TRANSISTOR	
IC21			BA3129F	IC (SWITCH)	K4M2	Q103			DTC124EUA	DIGITAL TRANSISTOR	K4M2
IC25			BR24C02F-W	MEMORY IC		Q103			UN5212	DIGITAL TRANSISTOR	K4M2
Q1			2SD2375	TRANSISTOR		Q111			2SB1277(Q,R)	TRANSISTOR	K2K4M2
Q3			2SA1037K	TRANSISTOR		Q112			DTC114YUA	DIGITAL TRANSISTOR	K2K4M2
Q4			2SA2057	TRANSISTOR		Q112			UN5214	DIGITAL TRANSISTOR	K2K4M2
Q5			DTC144EUA	DIGITAL TRANSISTOR		Q201			2SC4081	TRANSISTOR	
Q5			UN5213	DIGITAL TRANSISTOR		Q305			DTA114YUA	DIGITAL TRANSISTOR	
Q6,7			DTA124EUA	DIGITAL TRANSISTOR		Q305			UN5114	DIGITAL TRANSISTOR	
Q6,7			UN5112	DIGITAL TRANSISTOR		Q306			DTA114YUA	DIGITAL TRANSISTOR	E1M2
Q8			DTC124EUA	DIGITAL TRANSISTOR		Q306			UN5114	DIGITAL TRANSISTOR	E1M2
Q8			UN5212	DIGITAL TRANSISTOR		Q473			2SC4081	TRANSISTOR	
Q9			2SB1427	TRANSISTOR		Q474			2SB1548(P)	TRANSISTOR	
Q10			2SA2057	TRANSISTOR		Q475			2SC4081	TRANSISTOR	
Q11			2SC4081	TRANSISTOR		Q476			2SB1548(P)	TRANSISTOR	
Q12			DTC124EUA	DIGITAL TRANSISTOR		TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
Q12			UN5212	DIGITAL TRANSISTOR		A1	2A	*	W02-3341-05	ELECTRIC CIRCUIT MODULE	
Q13			DTA124EUA	DIGITAL TRANSISTOR		FE1		*	X86-3530-11	TUNER UNIT	K2K4M2
Q13			UN5112	DIGITAL TRANSISTOR		FE1		*	X86-3532-70	TUNER UNIT	E1
Q14			DTA123JK	DIGITAL TRANSISTOR	K4E1M2						
Q14			KRA105S	DIGITAL TRANSISTOR	K4E1M2						

K2 : KDC-719 K4 : KDC-X559 M2 : KDC-Z737 E1 : Z638

△ Indicates safety critical components.

KDC-719/X559
/Z737,Z638

PARTS LIST

- * New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Partis No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DAUGHTER UNIT (X89-253x-xx)					
CN1 J1			E40-9488-05 E58-0865-05	SOCKET FOR PIN ASSY (20P) RECTANGULAR RECEPTACLE (16P)	
R1			RK73EB2E471J	CHIP R 470 J 1/4W	
R2			RK73EB2E241J	CHIP R 240 J 1/4W	
R3			RK73EB2E471J	CHIP R 470 J 1/4W	
R4-6			RK73EB2E241J	CHIP R 240 J 1/4W	
R7			RK73EB2E471J	CHIP R 470 J 1/4W	
R8			RK73EB2E511J	CHIP R 510 J 1/4W	
R9			RK73EB2E471J	CHIP R 470 J 1/4W	
R10			RK73EB2E221J	CHIP R 220 J 1/4W	E1M2
R11			RK73EB2E221J	CHIP R 220 J 1/4W	
S1			S70-0856-05	TACT SWITCH	E1M2
S1			S70-0873-05	TACT SWITCH	K2K4

Ref. No.	Add	New	Parts No.	Description	Destination

K2: KDC-719 **K4:** KDC-X559 **M2:** KDC-Z737 **E1:** Z638

⚠ Indicates safety critical components.

X92-4430-0x
X92-4450-0x

PARTS LIST

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description			D e s t i n a t i o n
CD PLAYER UNIT (X32-5180-0X, X32-5200-0X)							
C1 ,2 C3 C4 C5 C6			CK73GB0J105K CK73FB1A225K C92-0566-05 CC73GCH1H220J CC73GCH1H030C	CHIP C CHIP C CHIP-TAN CHIP C CHIP C	1.0UF 2.2UF 10UF 22PF 3.0PF	K K 6.3WV J C	
C7 C8 C10 C11 C12			CK73GB1C104K CK73GB0J105K CK73GB1H472K CK73GB1H682K CK73GB1H332K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 1.0UF 4700PF 6800PF 3300PF	K K K K K	
C13 C14 C15 C16 C17			CK73GB1C333K CK73GB1H472K CK73GB1E473K CC73GCH1H221J CK73GB1H472K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.033UF 4700PF 0.047UF 220PF 4700PF	K K K J K	
C18 C19 ,20 C21 C23 C24			CC73GCH1H331J CK73GB1C104K CK73FB1A225K CK73GB1H102K CK73GB1E223K	CHIP C CHIP C CHIP C CHIP C CHIP C	330PF 0.10UF 2.2UF 1000PF 0.022UF	J K K K K	
C25 C26 C28 C29 C33			CK73GB1H153K CK73GB0J105K CK73GB0J105K CK73GB1C104K CK73GB1C104K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.015UF 1.0UF 1.0UF 0.10UF 0.10UF	K K K K K	
C35 C39 C40 C41 C42			CK73GB1C104K CK73GB1H152K CK73GB1H103K CK73EB1C225K CK73GB1H152K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 1500PF 0.010UF 2.2UF 1500PF	K K K K K	
C44 C46 C51 C55 C67 ,68			CK73GB1H103K CK73GB1E473K CK73GB1C104K CK73GB1C104K CK73GB1C104K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 0.047UF 0.10UF 0.10UF 0.10UF	K K K K K	
C71 ,72 C77 ,78 C79 ,80 C85 C89			CK73GB1H471K CC73GCH1H680J CK73GB1H222K CK73GB1C104K CK73GB1H222K	CHIP C CHIP C CHIP C CHIP C CHIP C	470PF 68PF 2200PF 0.10UF 2200PF	K J K K K	
CN1 CN1 CN2 CN2			E40-9536-05 E41-0193-05 E40-9527-05 E41-0213-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR			
X1		*	L78-0851-05	RESONATOR (16.93MHZ)			
CP1 CP2 R3 R5 R6			R90-1019-05 R90-1014-05 RK73GB2A272J RK73GB2A361J RK73GB2A272J	MULTI-COMP MULTI-COMP CHIP R CHIP R CHIP R	100 X2 100 X4 2.7K 360 2.7K	J J J J J	
R9 R10 ,11			RK73FB2B100J RK73GB2A562J	CHIP R CHIP R	10 5.6K	J J	1/8W 1/10W

A : X92-4430-00 (DXM-6010W) A1 : X92-4430-01 (DXM-6011W)
A2 : X92-4430-02 (DXM-6012W) A3 : X92-4430-03 (DXM-6013W)

Ref. No.	A d d	N e w	Parts No.	Description			D e s t i n a t i o n
R12 R13 R15 R16 R17			RK73GB2A682J RK73GB2A392J RK73GB2A824J RK73GB2A223J RK73GB2A393J	CHIP R CHIP R CHIP R CHIP R CHIP R	6.8K 3.9K 820K 22K 39K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R18 R19 R20 R21 R22		*	RK73GB2A392J RK73GB2A473J RK73GB2A104J RK73GB2A244J RK73GB2A623J	CHIP R CHIP R CHIP R CHIP R CHIP R	3.9K 47K 100K 240K 62K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R32 R34 R35 R36 R37			RK73GB2A683J RK73GB2A363J RK73GB2A104J RK73GB2A151J RK73GB2A471J	CHIP R CHIP R CHIP R CHIP R CHIP R	68K 36K 100K 150 470	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R38 R40 R46 R47 R49			RK73GB2A224J RK73GB2A133J RK73GB2A102J RK73GB2A103J RK73GB2A472J	CHIP R CHIP R CHIP R CHIP R CHIP R	220K 13K 1.0K 10K 4.7K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R52 R53 R54 R70 R71			RK73GB2A104J RK73GB2A103J RK73GB2A104J RK73GB2A103J RK73GB2A183J	CHIP R CHIP R CHIP R CHIP R CHIP R	100K 10K 100K 10K 18K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R73 R74 R75 R76 R79 ,80			RK73GB2A683J RK73GB2A123J RK73GB2A333J RK73GB2A103J RK73GB2A103J	CHIP R CHIP R CHIP R CHIP R CHIP R	68K 12K 33K 10K 10K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R81 R82 R84 R81 ,102 R103 ,104			RK73GB2A333J RK73GB2A223J RK73GB2A103J RK73GB2A332J RK73GB2A562J	CHIP R CHIP R CHIP R CHIP R CHIP R	33K 22K 10K 3.3K 5.6K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R107 ,108 R110 R117 ,118 R121 ,122 R125 ,126			RK73FB2B331J RK73FB2B201J RK73FB2B203J RK73FB2B203J RK73FB2B203J	CHIP R CHIP R CHIP R CHIP R CHIP R	330 200 20K 20K 20K	J J J J J	1/8W 1/8W 1/8W 1/8W 1/8W
R202 R213 R213 R214 R214			RK73GB2A104J RK73GB2A104J RK73GB2A104J RK73GB2A104J RK73GB2A104J	CHIP R CHIP R CHIP R CHIP R CHIP R	100K 100K 100K 100K 100K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W
R218 R233 R234			RK73GB2A473J RK73GB2A622J RK73GB2A103J	CHIP R CHIP R CHIP R	47K 6.2K 10K	J J J	1/10W 1/10W 1/10W
S1 ,2 S3 S4 S4			S68-0863-05 S68-0862-05 S68-0864-05 S68-0864-05	PUSH SWITCH PUSH SWITCH PUSH SWITCH PUSH SWITCH			
D1 D2			DAN202U MA8051-L	DIODE ZENER DIODE			

B : X92-4450-00 (DXM-6110W) B1 : X92-4450-01 (DXM-6111W)
B2 : X92-4450-02 (DXM-6112W) B3 : X92-4450-03 (DXM-6113W)

⚠ indicates safety critical components.

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5180-0X, X32-5200-0X)

Ref. No.	A d d	N e w	Parts No.	Description	P e s t i n a t i o n
D3			DA204U	DIODE	
D4			DAN202U	DIODE	
IC1			AN22000AA	ANALOGUE IC	
IC2		*	MN662773KH2	MOS-IC	BB1B2
IC2		*	MN662773KH2	MOS-IC	B3
IC2			MN662774KJ2	MOS-IC	AA1A2
IC2			MN662774KJ2	MOS-IC	A3
IC4			BA5824FP	ANALOGUE IC	
IC6			NJM4580M1	ANALOGUE IC	
Q1			MCH6101	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3			DTA143XUA	DIGITAL TRANSISTOR	
Q4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	

CD MECHANISM ASSY (X92-4430-0X, X92-4450-0X)

2	1B		A10-4827-12	CHASSIS (OUTER)	
5	1B		D10-4576-23	ARM ASSY (CLAMPER ASSY)	
8	2A		D10-4579-03	LEVER ASSY (ROLLER ASSY)	
10	3A		D10-4581-13	ARM (DISC L)	
11	2A		D10-4582-13	ARM (DISC L)	
12	3A		D10-4583-03	ARM (JOINT L)	
13	3A		D10-4584-03	ARM (JOINT R)	
14	3B		D10-4585-03	ARM (CARRIER)	
15	2A		D10-4586-03	SLIDER (L)	
16	3B	*	D10-4587-12	SLIDER (R)	
17	3B		D10-4588-03	SLIDER (TRIG)	
18	3B		D10-4595-04	ARM (LOCK)	
19	3B		D10-4596-04	ARM (ROLLER)	
22	2A		D13-2151-04	GEAR (ROLLER)	
23	2B		D13-2152-04	GEAR (HELICAL 1)	
24	3B		D13-2153-04	GEAR (SUN)	
25	3B		D13-2154-04	GEAR (PLANET)	
26	3B		D13-2155-04	WORM (2)	
27	3B		D13-2156-04	GEAR (HELICAL 2)	
28	3B		D13-2157-04	GEAR (LOAD 1)	
29	3B		D13-2158-04	GEAR (LOAD 2)	
30	3B		D13-2168-04	GEAR (PICK 1)	
31	3B		D13-2171-04	GEAR (PICK 2)	
32	2B		D13-2172-03	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER (N100X3DIES)	
35	2B		D21-2382-04	SHAFT (PICK)	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING (TRIGGER)	
39	2A		G01-3073-04	TORSION COIL SPRING (ROLLER L)	
40	2A		G01-3074-04	EXTENSION SPRING (ROLLER R)	
41	2B		G01-3075-04	EXTENSION SPRING (PICKUP)	
42	2A		G01-3076-04	EXTENSION SPRING (JOINT SP)	
43	1B		G01-3077-04	EXTENSION SPRING (FLOATING)	
44	2B		G02-1399-04	FLAT SPRING (CLAMP)	
45	2B		G02-1408-04	FLAT SPRING (WORM)	
51	1A		J21-9676-12	MOUNTING HARDWARE (GUIDE BKT)	
52	3B		J21-9677-02	MOUNTING HARDWARE (GEAR BKT)	

Ref. No.	A d d	N e w	Parts No.	Description	P e s t i n a t i o n
53	1B		J21-9678-03	MOUNTING HARDWARE (DAMPER BKT)	
55	1A		J90-1001-11	GUIDE (1)	
56	1B		J90-1023-03	GUIDE (2)	
DFPC1	2B		J84-0128-15	FLEXIBLE P. W. B. (PICKUP FPC)	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 1B-L)	
D	1B		N09-6006-05	TAPTITE SCREW (PAN ST 2X3.5T)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X0.25X6)	
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW (M2X2)	
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	
DPU1	2B		T25-0105-15	OPTICAL PICKUP HEAD	

A : X92-4430-00 (DXM-6010W) **A1** : X92-4430-01 (DXM-6011W)
A2 : X92-4430-02 (DXM-6012W) **A3** : X92-4430-03 (DXM-6013W)

B : X92-4450-00 (DXM-6110W) **B1** : X92-4450-01 (DXM-6111W)
B2 : X92-4450-02 (DXM-6112W) **B3** : X92-4450-03 (DXM-6113W)