


EXPLODED VIEW (UNIT)

Block No.200

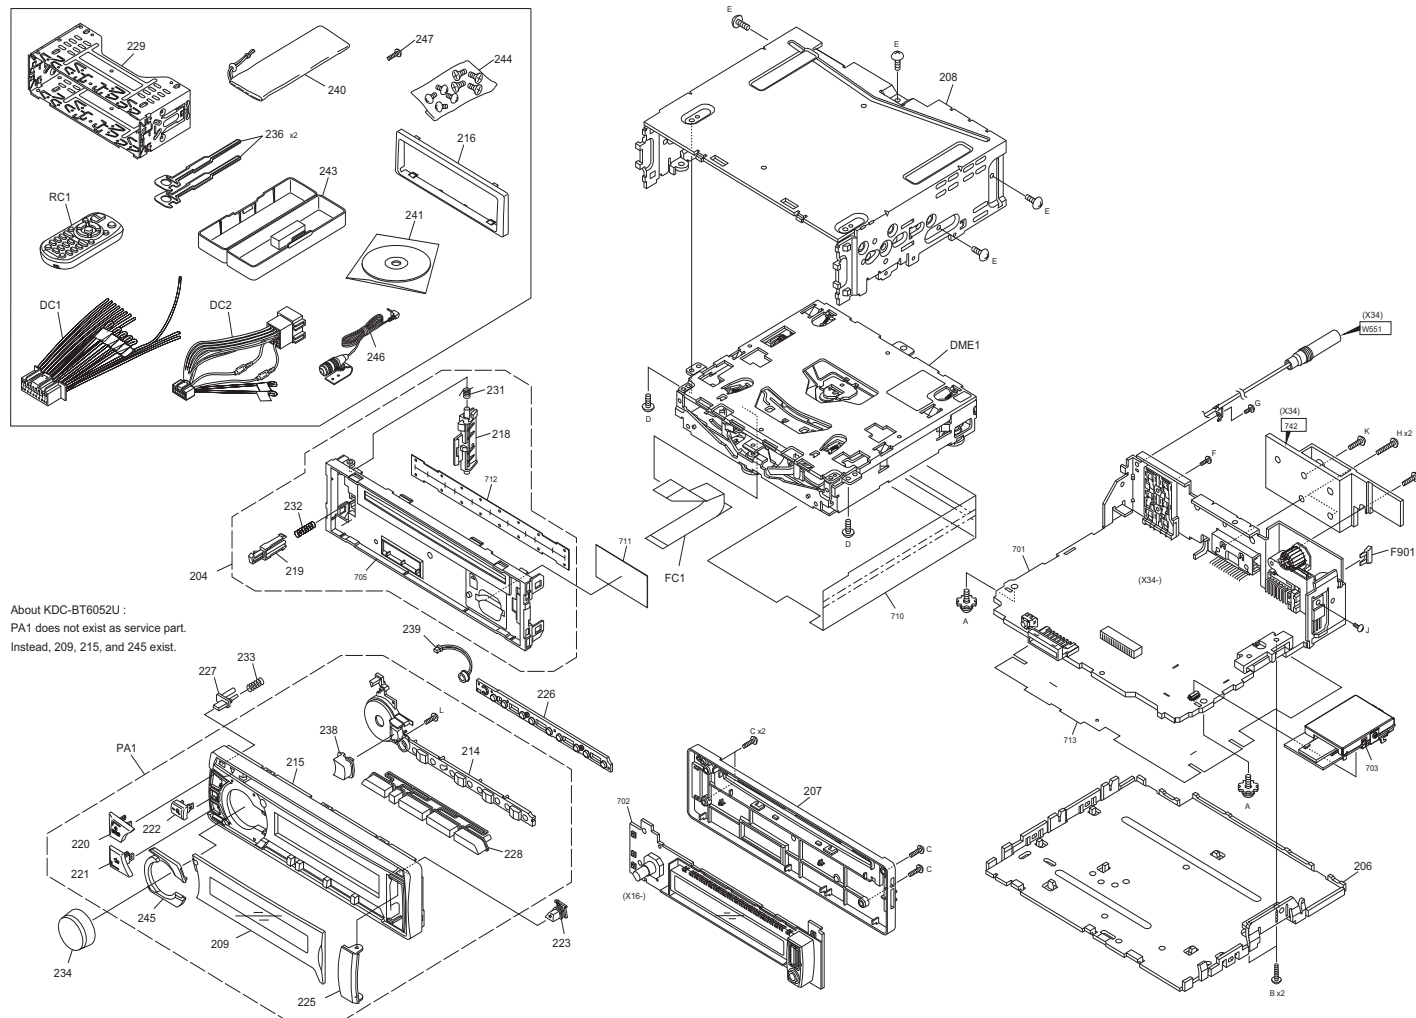


MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
EXPLODED VIEW (UNIT) <200>						
△	DC1	E30-6933-05	DC CORD		1	K0,M1,K1
△	DC2	E30-6934-05	DC CORD		1	E2
△	DC2	E30-6583-05	DC CORD		1	C0
	DME1	X92-6370-04	MECHANISM ASSY	DXM-9B24W	1	
△	F901	F52-0023-05	FUSE	32V 10A	1	
	FC1	E39-1266-05	FLAT CABLE		1	
	PA1	A64-5355-12	PANEL ASSY		1	E2
	PA1	A64-5352-12	PANEL ASSY		1	K0
	PA1	A64-5356-12	PANEL ASSY		1	M1
	PA1	A64-5353-12	PANEL ASSY		1	K1
	RC1	A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)		1	C0,K0,M1,K1
	A	N09-6758-05	TAPTITE SCREW		2	
	B	N35-2610-48	BINDING HEAD	M2.6x10	2	
			MACHINE SCREW			
	C	N80-2008-43	PAN HEAD TAPTITE	2x8	4	
			SCREW			
	D	N86-2604-43	BINDING HEAD TAPTITE	2.6x4	2	
			SCREW			
	E	N86-2606-48	BINDING HEAD TAPTITE	2.6x6	4	
			SCREW			
	F	N80-3008-48	PAN HEAD TAPTITE	3x8	1	
			SCREW			
	G	N83-3005-48	PAN HEAD TAPTITE	3x5 B	1	
			SCREW			
	H	N84-3014-48	PAN HEAD TAPTITE	3x14	2	
			SCREW			
	J	N86-2606-48	BINDING HEAD TAPTITE	2.6x6	1	
			SCREW			
	K	N89-3010-48	BINDING HEAD TAPTITE		2	
			SCREW			
	L	QYSPSF2006ZA	TAP SCREW	M2 x 6mm	1	
	204	A22-3297-13	SUB PANEL ASSY		1	
	206	A40-1421-11	BOTTOM PLATE		1	
	207	A46-1929-01	REAR COVER		1	
	208	A52-1156-01	TOP COVER		1	
	209	B10-5491-01	FRONT GLASS		1	C0
	214	GE10309-001A	LIGHT GUIDE (USB)		1	
	215	GE10311-003A	FRONT PANEL USB		1	C0
	216	GE20291-001A	TRIM PLATE		1	E2,M1,K1
	216	GE20300-001A	TRIM PLATE		1	C0,K0
	218	GE34045-001A	LOCK LEVER		1	
	219	GE34046-001A	RELEASE LEVER		1	
	220	GE34291-001A	SRC BUTTON		1	
	221	GE34292-001A	BACK BUTTON		1	
	222	GE34293-002A	SEARCH BTN		1	
	223	GE34497-001A	EJECT BUTTON		1	
	225	GE34502-001A	USB DOOR COVER		1	
	226	GE34504-001A	CONDUCT. RUBBER		1	
	227	GE34505-001A	DETACH BUTTON		1	
	228	GE34517-001A	PRESET BTN		1	
	229	GE34826-001A	M.SLEEVE ASSY		1	
	231	GE40504-001A	SPRING		1	
	232	GE40505-001A	SPRING		1	
	233	GE40505-002A	SPRING		1	
	234	GE40562-003A	VOL KNOB RUBBER		1	
	236	GE40578-001A	HOOK		2	
	238	K28-0498-03	KEY TOP		1	
	239	T91-1007-05	MICROPHONE ASSY		1	E2,C0,K0,M1
	240	W01-1710-05	CARRYING CASE		1	E2,C0,K0
	240	W01-1664-05	CARRYING CASE (EXCELON)		1	K1
	241	W01-2033-05	COMPACT DISC (INST. MANUAL)		1	E2
	243	A02-2757-13	PLASTIC CABINET ASSY		1	M1
	244	N99-1757-15	SCREW SET		1	K0,M1,K1
	245	GE34498-004A	RIM COVER		1	C0
	246	W01-1768-15	MICROPHONE (42dB)		1	K1
	247	N80-2008-48	PAN HEAD TAPTITE	2x8	1	K0,M1,K1
			SCREW			
-		B64-4942-00	INSTRUCTION MANUAL	POR	1	C0
-		B64-4919-00	INSTRUCTION MANUAL	ENG FRE SPA	1	K0,K1
-		B64-4920-00	INSTRUCTION MANUAL	ENG ARA	1	M1
-		B59-2123-00	SUB-INSTRUCTION MANUAL	ENG FRE GER DUT	1	E2
-		B59-2132-00	SUB-INSTRUCTION MANUAL	ITA SPA POR RUS UKR	1	E2
-		H54-5187-03	ITEM CARTON CASE		1	E2
-		H54-5191-03	ITEM CARTON CASE		1	C0
-		H54-5184-03	ITEM CARTON CASE		1	K0
-		H54-5188-03	ITEM CARTON CASE		1	M1
-		H54-5185-03	ITEM CARTON CASE		1	K1

EXPLODED VIEW (CD MECHANISM)

Block No.130

DXM-9B24W

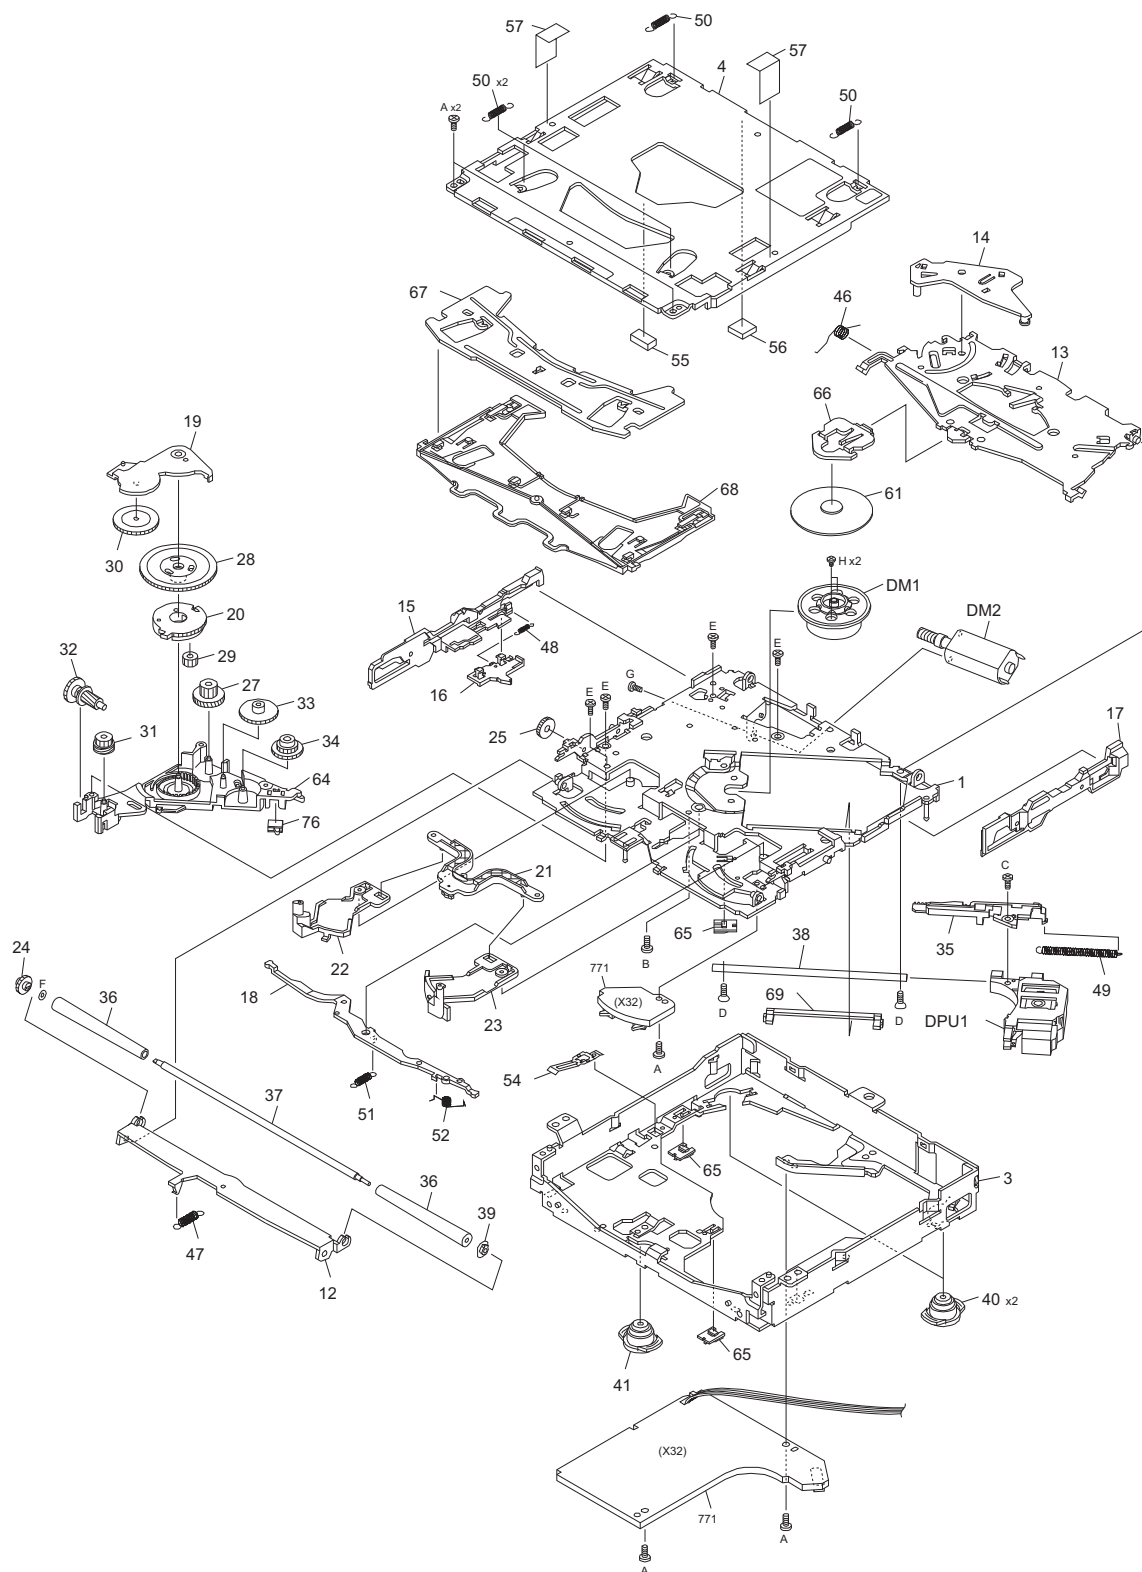

Parts with the exploded numbers larger than 700 are not supplied.

No.WA009

created date:2012-02-15

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
EXPLODED VIEW (CD MECHANISM) <130>						
	DM1	X94-2090-00	SPINDLE MOTOR ASSY		1	
	DM2	X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)		1	
	DPU1	X93-2280-00	OPTICAL PICKUP ASSY		1	
	A	N09-6108-15	TAPTITE SCREW		5	
	B	N09-6426-15	LOAD ARM SCREW		1	
	C	N09-6735-05	PICK SCREW		1	
	D	N09-6737-15	SHAFT SCREW		2	
	E	N09-6738-15	GEAR SCREW		4	
	F	N19-2335-14	ROLLER WASHER		1	
	G	N35-2003-48	BINDING HEAD	M2x3	1	
			MACHINE SCREW			
	H	N39-1720-48	PAN HEAD MACHINE SCREW	M1.7x2.0	2	
	1	A10-5450-73	MD CHASSIS ASSY		1	
	3	A10-5574-01	OUTER CHASSIS T2		1	
	4	A10-5453-32	TOP CHASSIS		1	
	12	D10-4993-62	ROLLER LEVER		1	
	13	D10-4991-22	CLAMP ARM		1	
	14	D10-4992-23	TRIGGER ARM		1	
	15	D10-4994-02	SLIDER L		1	
	16	D10-4995-03	TRIGGER SLIDER		1	
	17	D10-4996-02	SLIDER R		1	
	18	D10-4997-03	JOINT LEVER		1	
	19	D10-4998-03	LOADING ARM		1	
	20	D10-4999-03	CARRIER ARM		1	
	21	D10-7001-03	JOINT ARM		1	
	22	D10-7002-03	DISC ARM L		1	
	23	D10-7003-03	DISC ARM R		1	
	24	D13-2445-04	ROLLER GEAR		1	
	25	D13-2446-04	LOAD GEAR 2		1	
	27	D13-2448-04	HELICAL GEAR 1		1	
	28	D13-2449-04	SUN GEAR		1	
	29	D13-2450-04	PLANET GEAR		1	
	30	D13-2451-04	LOAD GEAR 1		1	
	31	D13-2452-04	WORM 2		1	
	32	D13-2453-04	HELICAL GEAR 2		1	
	33	D13-2454-04	PICK GEAR 1		1	
	34	D13-2455-04	PICK GEAR 2		1	
	35	D13-2456-03	RACK GEAR		1	
	36	D14-1028-04	ROLLER		2	
	37	D21-2507-04	ROLLER SHAFT		1	
	38	D21-2508-04	PICK UP SHAFT		1	
	39	D23-0963-04	ROLLER RETAINER		1	
	40	D39-0277-15	REAR DAMPER		2	
	41	D39-0278-15	FRONT DAMPER		1	
	46	G01-4682-34	CLAMP SPRING		1	
	47	G01-4756-04	ROLLER SPRING		1	
	48	G01-4684-04	TRIGGER SPRING		1	
	49	G01-4685-04	PICK UP SPRING		1	
	50	G01-4686-14	FLOATING SP F		4	
	51	G01-4688-14	JOINT ARM SPRING		1	
	52	G01-4692-24	LOAD SPRING		1	
	54	G02-1588-04	HOLE SPRING V		1	
	55	G13-1297-04	CLAMPER CUSSION		1	
	56	G13-1299-14	STROKE CUSHION		1	
	57	G16-1715-04	OUTER SHEET		2	
	61	J11-0675-03	CLAMPER		1	
	64	J19-7210-21	GEAR HOLDER		1	
	65	J19-7225-04	WIRE HOLDER		3	
	66	J22-0706-03	CLAMPER HOLDER		1	
	67	J22-0707-12	GUIDE BKT		1	
	68	J90-1166-11	DISC GUIDE		1	
	69	J90-1168-03	SUB RAIL HOLDER		1	
	76	S68-0921-05	PUSH SWITCH		1	
ELECTRIC UNIT (X34-735x-xx) <X34>						
	IC1	BD49131-V4	ANALOGUE IC		1	
	IC21	BU33TD3WG	ANALOGUE IC		1	
	IC51	MP2560DN-C413	ANALOGUE IC		1	
	IC60	AN33013UA-VB	ANALOGUE IC		1	
	IC201	W10-0729-08	IC(MCU)		1	E2,C0,M1
	IC201	W10-0728-08	IC(MCU)		1	K0,K1
	IC202	XC6119N28AN-G	MOS-IC		1	
	IC203	BR24T08FVT-W	ROM IC		1	
	IC261	MF1341S2162	MICROPROCESSOR IC		1	
	IC301	TC7SET125FU-F	MOS-IC		1	
	IC401	TDA7718B-X	ANALOGUE IC		1	E2
	IC401	TDA7720-X	ANALOGUE IC		1	C0,K0,M1,K1
	IC501	TEF6614TV1S3-X	ANALOGUE IC		1	E2
	IC501	TEF6614TV1S4-X	ANALOGUE IC		1	C0,K0,M1,K1
	IC801	TB2931HQ	ANALOGUE IC		1	
	IC901	BA4560RFV	ANALOGUE IC		1	
	IC921	TC4053BFT(N)	ANALOGUE IC		1	E2
	Q1	KTA1046-P	TRANSISTOR		1	
	Q4	LTA024EUBFS8	TRANSISTOR		1	
	Q6	LTA024EUBFS8	TRANSISTOR		1	M1
	Q8	LTA024EUBFS8	TRANSISTOR		1	
	Q10	LTA024EUBFS8	TRANSISTOR		1	
	Q91	LSAR523UBFS8	TRANSISTOR		1	K1

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	Q92	LSAR523UBFS8	TRANSISTOR		1	K1
	Q93	LSAR523UBFS8	TRANSISTOR		1	K1
	Q94	2SB1188(Q,R)	TRANSISTOR		1	K1
	Q301	LTA023JUBFS8	TRANSISTOR		1	
	Q707	LTA014YUBFS8	TRANSISTOR		1	
	Q850	2SA1576A	TRANSISTOR		1	
	D1	S2V60-5009F46	DIODE		1	
	D2	RKZ8.2KG(B2)	Z DIODE		1	
	D3	GS1J-LTP-X	DIODE		1	
	D4	MC2848-T111	DIODE		1	
	D10	RKZ5.1KG(B2)	Z DIODE		1	K1
	D11	RKS801KF	DIODE		1	K1
	D51	CMS14	DIODE		1	
	D52	RKS801KF	DIODE		1	
	D70	CMS14	DIODE		1	
	D101	GS1J-LTP-X	DIODE		1	
	D102	GS1J-LTP-X	DIODE		1	
	D103	GS1J-LTP-X	DIODE		1	E2,M1
	D104	GS1J-LTP-X	DIODE		1	E2,M1
	D105	MC2846-T111	DIODE		1	
	D106	UDZW6.8(B)	Z DIODE		1	
	D107	UDZW6.8(B)	Z DIODE		1	
	D108	UDZW6.8(B)	Z DIODE		1	
	D201	RB521S-30	DIODE		1	E2,K0,M1,K1
	D202	RKZ6.8KG(B2)	Z DIODE		1	E2,K0,M1,K1
	D301	MC2850-T111	DIODE		1	
	D302	RKZ6.8KG(B2)	Z DIODE		1	
	D303	RKZ6.8KG(B2)	Z DIODE		1	
	D304	RKZ6.8KG(B2)	Z DIODE		1	
	D307	HZM6.8ZMWA-E	Z DIODE		1	
	D308	MC2850-T111	DIODE		1	
	D403	MC2846-T111	DIODE		1	
	D501	IMSA-6802-E	SURGE ABSORBER		1	
	D502	MC2850-T111	DIODE		1	E2,K0,M1,K1
	D701	MC2846-T111	DIODE		1	
	D801	MC2846-T111	DIODE		1	
	D921	RKZ5.6KG(B2)	Z DIODE		1	E2,K1
	D922	RKZ5.6KG(B2)	Z DIODE		1	E2
	C1	CD04AZ1C332M2	ELECTRO	3300UF 16WV	1	
	C4	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C6	CK73GB1H104K	CHIP C	50V 0.10UF K	1	
	C7	CK73GB1H104K	CHIP C	50V 0.10UF K	1	M1
	C8	CD04BN1C221M	ELECTRO	220UF 16WV	1	
	C9	CD04AS0J101M	ELECTRO	100UF 6.3WV	1	
	C10	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C11	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C12	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C13	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C15	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C22	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C23	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C24	CD04AS0J470M	ELECTRO	47UF 6.3WV	1	
	C52	CK73FB0J226M	CHIP C	22UF M	1	
	C53	CC73HCH1H221J	CHIP C	50V 220PF J	1	
	C54	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C55	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C58	CK73EB1H475K	CHIP C	50V 4.7UF K	1	
	C62	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C64	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C66	CC73GCH1H471J	CHIP C	50V 470PF J	1	
	C67	CC73HCH1H270J	CHIP C	50V 27PF J	1	
	C68	CK73GB1H222K	CHIP C	50V 2200PF K	1	
	C72	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C76	CK73EB1H475K	CHIP C	50V 4.7UF K	1	
	C80	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C81	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C82	CD04BR1C221M	ELECTRO	220UF 16WV	1	
	C83	CK73FB0J226M	CHIP C	22UF M	1	
	C91	CD04BN1C221M	ELECTRO	220UF 16WV	1	K1
	C93	CC73GCH1H470J	CHIP C	50V 47PF J	1	K1
	C94	CK73GB1A105K	CHIP C	10V 1.0UF K	1	K1
	C95	CK73GB1H102K	CHIP C	50V 1000PF K	1	K1
	C101	CK73HB1E103K	CHIP C	25V 0.010UF K	1	
	C102	CK73GB1H104K	CHIP C	50V 0.10UF K	1	
	C202	CC73HCH1H180J	CHIP C	50V 18PF J	1	
	C203	CC73HCH1H220J	CHIP C	50V 22PF J	1	
	C204	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C205	CK73GB1H682K	CHIP C	50V 6800PF K	1	
	C210	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C211	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C212	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C213	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C214	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C215	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C216	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C217	CC73HCH1H080D	CHIP C	50V 8.0PF D	1	
	C218	CC73HCH1H080D	CHIP C	50V 8.0PF D	1	
	C261	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C301	CD04AS1HR47M	ELECTRO	0.47UF 50WV	1	
	C302	CD04AS1HR47M	ELECTRO	0.47UF 50WV	1	
	C303	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C304	CK73GB1C104K	CHIP C	16V 0.10UF K	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	C305	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C306	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C307	CD04AS0J470M	ELECTRO	47UF 6.3WV	1	
	C308	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C311	CC73GCH1H020C	CHIP C	50V 2.0PF C	1	
	C401	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C402	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C406	CD04AS1C470M	ELECTRO	47UF 16WV	1	
	C407	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C408	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C409	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C410	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C411	CD04AS1H010M	ELECTRO	1UF 50WV	1	
	C501	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C502	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C505	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C506	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C507	CC73GCH1H120J	CHIP C	50V 12PF J	1	
	C509	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C510	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C511	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C512	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C513	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C514	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C515	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C516	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C517	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C518	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C519	CD04AS1C470M	ELECTRO	47UF 16WV	1	
	C520	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C523	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C524	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C525	CC73GCH1H270J	CHIP C	50V 27PF J	1	
	C527	CC73GCH1H150J	CHIP C	50V 15PF J	1	
	C528	CC73GCH1H471J	CHIP C	50V 470PF J	1	
	C530	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C531	CC73GCH1H070D	CHIP C	50V 7.0PF D	1	
	C532	CC73GCH1H060D	CHIP C	50V 6.0PF D	1	
	C533	CC73GCH1H020C	CHIP C	50V 2.0PF C	1	
	C539	CC73GCH1H040C	CHIP C	50V 4.0PF C	1	
	C540	CC73GCH1H040C	CHIP C	50V 4.0PF C	1	
	C541	CK73GB1H102K	CHIP C	50V 1000PF K	1	E2,K0,M1,K1
	C701	CD04AS1V100M	ELECTRO	10UF 35WV	1	C0,K0,M1,K1
	C702	CD04AS1V100M	ELECTRO	10UF 35WV	1	C0,K0,M1,K1
	C703	CD04AS1V100M	ELECTRO	10UF 35WV	1	C0,K0,M1,K1
	C704	CD04AS1V100M	ELECTRO	10UF 35WV	1	C0,K0,M1,K1
	C705	CD04AS1V100M	ELECTRO	10UF 35WV	1	
	C706	CD04AS1V100M	ELECTRO	10UF 35WV	1	
	C801	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C802	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C803	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C804	CK73GB1C224K	CHIP C	16V 0.22UF K	1	
	C805	CD04AS1V100M	ELECTRO	10UF 35WV	1	
	C806	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C807	CK73HB0J105K	CHIP C	6.3V 1.0UF K	1	
	C808	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C852	CD04AS1V100M	ELECTRO	10UF 35WV	1	
	C853	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C854	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C855	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C856	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C857	CD04AS0J101M	ELECTRO	100UF 6.3WV	1	
	C858	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C863	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C864	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C865	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C866	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C867	CC73GCH1H470J	CHIP C	50V 47PF J	1	
	C868	CC73GCH1H470J	CHIP C	50V 47PF J	1	
	C869	CC73GCH1H470J	CHIP C	50V 47PF J	1	
	C870	CC73GCH1H470J	CHIP C	50V 47PF J	1	
	C921	CK73GB1H103K	CHIP C	50V 0.010UF K	1	E2
	R1	RK73FB2B152J	CHIP R	1.5K J 1/8W	1	
	R2	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R51	RK73GH2A243D	CHIP R	24K D 1/10W	1	
	R52	RK73GH2A753D	CHIP R	75K D 1/10W	1	
	R53	RK73HB1J683J	CHIP R	68K J 1/16W	1	
	R54	RK73GH2A913D	CHIP R	91K D 1/10W	1	
	R55	RK73GH2A334D	CHIP R	330K D 1/10W	1	
	R56	RK73GH2A154D	CHIP R	150K D 1/10W	1	
	R57	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R59	RK73EB2E150J	CHIP R	15 J 1/4W	1	
	R61	RK73GH2A273D	CHIP R	27K D 1/10W	1	
	R62	RK73GH2A623D	CHIP R	62K D 1/10W	1	
	R63	RK73HB1J473J	CHIP R	47K J 1/16W	1	
	R64	RK73GH2A153D	CHIP R	15K D 1/10W	1	
	R65	RK73GB2A152J	CHIP R	1.5K J 1/10W	1	
	R66	R92-5244-05	CHIP R	0.039 1/3W	1	
	R67	RK73GB2A752J	CHIP R	7.5K J 1/10W	1	
	R69	RK73GH2A273D	CHIP R	27K D 1/10W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R70	RK73EB2E330J	CHIP R	33 J 1/4W	1	
	R71	RK73EB2E470J	CHIP R	47 J 1/4W	1	
	R72	RK73EB2E470J	CHIP R	47 J 1/4W	1	
	R76	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R77	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R91	RK73GH2A562D	CHIP R	5.6K D 1/10W	1	K1
	R92	RK73GH2A432D	CHIP R	4.3K D 1/10W	1	K1
	R93	RK73FB2B561J	CHIP R	560 J 1/8W	1	K1
	R94	RK73FB2B4R7J	CHIP R	4.7 J 1/8W	1	K1
	R95	RK73FB2B152J	CHIP R	1.5K J 1/8W	1	K1
	R96	RK73FB2B432J	CHIP R	4.3K J 1/8W	1	K1
	R98	RK73FB2B201J	CHIP R	200 J 1/8W	1	K1
	R99	RK73GB2A103J	CHIP R	10K J 1/10W	1	K1
	R101	RK73FB2B472J	CHIP R	4.7K J 1/8W	1	
	R102	RK73FB2B472J	CHIP R	4.7K J 1/8W	1	E2,M1
	R103	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R104	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R105	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R106	RK73EB2E333J	CHIP R	33K J 1/4W	1	
	R107	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R108	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R109	RK73FB2B683J	CHIP R	68K J 1/8W	1	
	R110	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R111	RK73EB2E203J	CHIP R	20K J 1/4W	1	
	R112	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R113	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R114	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R115	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R117	RK73GB2A123J	CHIP R	12K J 1/10W	1	
	R118	RK73GB2A683J	CHIP R	68K J 1/10W	1	
	R119	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R124	RK73HB1J363J	CHIP R	36K J 1/16W	1	
	R125	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R151	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	M1
	R152	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	E2
	R202	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R203	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R204	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R205	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R206	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R207	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R208	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R209	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R212	RK73GB2A223J	CHIP R	22K J 1/10W	1	C0
	R212	RK73GB2A473J	CHIP R	47K J 1/10W	1	M1,K1
	R213	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2,C0,K0
	R216	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R217	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R218	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R219	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R220	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R222	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R223	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R224	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R225	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R226	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R227	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R228	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R229	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R230	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R231	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R232	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R233	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R234	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R238	RK73EB2E471J	CHIP R	470 J 1/4W	1	E2,K0,M1,K1
	R240	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R241	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R250	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R261	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R262	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R263	RK73HB1J333J	CHIP R	33K J 1/16W	1	
	R266	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R267	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R271	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R272	RK73HB1J473J	CHIP R	47K J 1/16W	1	E2,C0,K0,M1
	R273	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R301	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R302	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R303	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R304	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R305	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R306	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R307	RK73HB1J222J	CHIP R	2.2K J 1/16W	1	
	R308	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R309	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R310	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R311	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R312	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R313	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R314	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R315	RK73GB2A300J	CHIP R	30 J 1/10W	1	
	R318	RK73HB1J222J	CHIP R	2.2K J 1/16W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R319	RK73HB1J222J	CHIP R	2.2K J 1/16W	1	
	R321	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R322	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R323	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R324	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R327	RK73HB1J225J	CHIP R	2.2M J 1/16W	1	
	R331	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R332	RK73EB2E222J	CHIP R	2.2K J 1/4W	1	
	R333	RK73EB2E222J	CHIP R	2.2K J 1/4W	1	
	R334	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R335	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R336	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R337	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R338	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R339	RK73EB2E100J	CHIP R	10 J 1/4W	1	
	R340	RK73EB2E100J	CHIP R	10 J 1/4W	1	
	R341	RK73EB2E4R7J	CHIP R	4.7 J 1/4W	1	
	R342	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R343	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R409	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R410	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R505	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R506	RK73EB2E220J	CHIP R	22 J 1/4W	1	
	R507	RK73GB2A221J	CHIP R	220 J 1/10W	1	
	R508	RK73GB2A221J	CHIP R	220 J 1/10W	1	
	R513	RK73GB2A684J	CHIP R	680K J 1/10W	1	
	R514	RK73GB2A684J	CHIP R	680K J 1/10W	1	
	R515	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R516	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R518	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	E2,M1
	R519	RK73GB2A221J	CHIP R	220 J 1/10W	1	
	R520	RK73GB2A221J	CHIP R	220 J 1/10W	1	
	R701	RK73GB2A331J	CHIP R	330 J 1/10W	1	C0,K0,M1,K1
	R702	RK73GB2A331J	CHIP R	330 J 1/10W	1	C0,K0,M1,K1
	R703	RK73HB1J223J	CHIP R	22K J 1/16W	1	C0,K0,M1,K1
	R704	RK73HB1J223J	CHIP R	22K J 1/16W	1	C0,K0,M1,K1
	R705	RK73FB2B181J	CHIP R	180 J 1/8W	1	C0,K0,M1,K1
	R706	RK73FB2B181J	CHIP R	180 J 1/8W	1	C0,K0,M1,K1
	R707	RK73GB2A331J	CHIP R	330 J 1/10W	1	C0,K0,M1,K1
	R708	RK73GB2A331J	CHIP R	330 J 1/10W	1	C0,K0,M1,K1
	R709	RK73HB1J223J	CHIP R	22K J 1/16W	1	C0,K0,M1,K1
	R710	RK73HB1J223J	CHIP R	22K J 1/16W	1	C0,K0,M1,K1
	R711	RK73FB2B181J	CHIP R	180 J 1/8W	1	C0,K0,M1,K1
	R712	RK73FB2B181J	CHIP R	180 J 1/8W	1	C0,K0,M1,K1
	R713	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R714	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R715	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R716	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R717	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R718	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R801	RK73HB1J473J	CHIP R	47K J 1/16W	1	
	R803	RK73HB1J331J	CHIP R	330 J 1/16W	1	
	R804	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R805	RK73GB2A133J	CHIP R	13K J 1/10W	1	E2,C0,K0,M1
	R805	RK73GB2A153J	CHIP R	15K J 1/10W	1	K1
	R806	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R807	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R810	RK73GB2A272J	CHIP R	2.7K J 1/10W	1	
	R851	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R855	RK73GB2A220J	CHIP R	22 J 1/10W	1	
	R856	RK73GB2A2R2J	CHIP R	2.2 J 1/10W	1	
	R858	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R859	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R860	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R863	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R864	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R865	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R866	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R867	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R868	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R869	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R870	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R876	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R877	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R921	RK73EB2E101J	CHIP R	100 J 1/4W	1	E2,K1
	R922	RK73EB2E101J	CHIP R	100 J 1/4W	1	E2,K1
	R923	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K1
	R924	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K1
	R925	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	C0,K0,M1
	R926	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	C0,K0,M1
	R927	RK73GB2A101J	CHIP R	100 J 1/10W	1	E2,C0,K0,M1
	R928	RK73GB2A101J	CHIP R	100 J 1/10W	1	E2,C0,K0,M1
	R929	RK73HB1J473J	CHIP R	47K J 1/16W	1	E2
	R930	RK73HB1J103J	CHIP R	10K J 1/16W	1	E2
	R933	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
△	L1	L33-2459-05	CHOKE COIL ASSY		1	
	L30	L40-4791-58	SMALL FIXED INDUCTOR		1	
	L51	L33-2462-05	SMALL FIXED INDUCTOR	22UH	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	L52	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L53	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L54	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L60	L33-2462-05	SMALL FIXED INDUCTOR	22UH	1	
	L61	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L62	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L63	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L64	L92-0639-05	CHIP FERRITE	1608 220AT100MHZ	1	
	L302	NQR0682-001X	CHOKE COIL		1	
	L402	L40-4791-58	SMALL FIXED INDUCTOR		1	
	L501	L40-4791-58	SMALL FIXED INDUCTOR		1	
	L502	L33-1031-05	SMALL FIXED INDUCTOR		1	
	L503	L33-1031-05	SMALL FIXED INDUCTOR		1	
	L504	L40-2781-58	SMALL FIXED INDUCTOR	0.27U	1	
	L505	L40-4791-58	SMALL FIXED INDUCTOR		1	
	L506	L40-4781-58	SMALL FIXED INDUCTOR		1	
	L507	L40-1891-58	SMALL FIXED INDUCTOR	1.8U	1	
	L508	L40-4781-58	SMALL FIXED INDUCTOR		1	
	L509	L92-0607-05	CHIP FERRITE		1	C0,K0,K1
	L551	QQR1872-001	RF COIL		1	
	L851	L92-0652-05	CHIP FERRITE	1500 OHM	1	
	L852	L41-4795-33	SMALL FIXED INDUCTOR	4.7U	1	
	CN301	E41-1828-05	FLAT CABLE CONNECTOR	30P	1	
	CN851	E41-3325-05	PIN ASSY	24P	1	
	CP901	RK74GA1J101J	CHIP-COM	100 J 1/16W	1	
	F1	F53-0406-05	FUSE	2.5A/125V	1	
△	J1	E58-0991-05	RECTANGULAR RECEPTACLE	DC-CN	1	
	J301	E58-1144-05	RECTANGULAR RECEPTACLE	24PIN	1	
	J701	E63-0974-05	PIN JACK	1PRE	1	E2
	J701	E63-0972-05	PIN JACK	3PRE	1	C0,K0,M1,K1
	J921	E11-0625-05	PHONE JACK		1	E2,K1
	S301	S70-0959-05	TACT SWITCH		1	
	TH801	PRF18BE471QS2	POSITIVE RESISTOR		1	
	W551	E30-6803-05	CORD WITH PLUG		1	
	X201	L77-3846-05	CRYSTAL RESONATOR	12MHZ	1	
	X202	L77-2921-15	CRYSTAL RESONATOR	32.768KHZ 12.5PF	1	
	X501	QAX0952-001Z	CRYSTAL		1	
SWITCH UNIT (X16-728x-xx) <X16>						
	IC2	KSM-2003TN5B	IR SENSOR		1	
	Q21	LTA014EUBFS8	TRANSISTOR		1	
	Q22	LTA014EUBFS8	TRANSISTOR		1	
	Q23	LTA014EUBFS8	TRANSISTOR		1	
	D1	RKZ4.7KG(B2)	Z DIODE		1	
	D6	RKZ4.7KG(B2)	Z DIODE		1	
	D51	B30-1566-05	LED	1608 RED	1	
	D52	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D52	B30-1788-05	LED	1608 WHITE	1	M1
	D53	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D53	B30-1788-05	LED	1608 WHITE	1	M1
	D54	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D54	B30-1788-05	LED	1608 WHITE	1	M1
	D57	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D57	B30-1788-05	LED	1608 WHITE	1	M1
	D58	B30-3210-05	LED	1608 BLUE	1	E2,K0
	D58	B30-1788-05	LED	1608 WHITE	1	C0,M1,K1
	D59	B30-3210-05	LED	1608 BLUE	1	E2,K0
	D59	B30-1788-05	LED	1608 WHITE	1	C0,M1,K1
	D60	B30-3210-05	LED	1608 BLUE	1	E2,K0
	D60	B30-1788-05	LED	1608 WHITE	1	C0,M1,K1
	D61	B30-3210-05	LED	1608 BLUE	1	E2,K0
	D61	B30-1788-05	LED	1608 WHITE	1	C0,M1,K1
	D62	B30-3210-05	LED	1608 BLUE	1	E2,K0
	D62	B30-1788-05	LED	1608 WHITE	1	C0,M1,K1
	D63	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D63	B30-1788-05	LED	1608 WHITE	1	M1
	D65	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D65	B30-1788-05	LED	1608 WHITE	1	M1
	D66	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D66	B30-1788-05	LED	1608 WHITE	1	M1
	D67	B30-3210-05	LED	1608 BLUE	1	E2,C0,K0,K1
	D67	B30-1788-05	LED	1608 WHITE	1	M1
	D79	MC2850-T111	DIODE		1	
	D81	HZM6.8ZMWA-E	Z DIODE	6.8V	1	
	D82	MC2850-T111	DIODE		1	E2,K0,M1,K1
	D83	MC2850-T111	DIODE		1	
	C10	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C11	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C13	CK73GB1H102K	CHIP C	50V 1000PF K	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	C21	CK73HB0J105K	CHIP C	6.3V 1.0UF K	1	E2,K0,M1,K1
	C41	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C42	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C81	CC73HCH1H101J	CHIP C	50V 100PF J	1	
	C82	CC73GCH1H101J	CHIP C	50V 100PF J	1	
	C83	CK73GB1H472K	CHIP C	50V 4700PF K	1	
	C84	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	R10	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R13	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R15	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R22	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R31	RK73PB2H4R3J	CHIP R	4.3 J 1/2W	1	
	R51	RK73FB2B122J	CHIP R	1.2K J 1/8W	1	
	R52	RK73GB2A511J	CHIP R	510 J 1/10W	1	
	R53	RK73GB2A122J	CHIP R	1.2K J 1/10W	1	
	R54	RK73EB2E821J	CHIP R	820 J 1/4W	1	
	R55	RK73GB2A471J	CHIP R	470 J 1/10W	1	
	R56	RK73GB2A431J	CHIP R	430 J 1/10W	1	
	R57	RK73GB2A431J	CHIP R	430 J 1/10W	1	
	R58	RK73FB2B911J	CHIP R	910 J 1/8W	1	
	R59	RK73GB2A511J	CHIP R	510 J 1/10W	1	E2,K0,M1,K1 C0 E2,C0,K0,M1
	R81	RK73GB2A220J	CHIP R	22 J 1/10W	1	
	R82	RK73GB2A220J	CHIP R	22 J 1/10W	1	
	R107	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R108	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	CN1	E41-1486-05	PIN ASSY	2P 1MM SIDE	1	
	CP11	RK74GA1J101J	CHIP-COM	100 J 1/16W	1	
	CP13	RK74HB1J101J	CHIP-COM	100 J 1/16W	1	
	CP14	RK74HB1J473J	CHIP-COM	47K J 1/16W	1	
	CP15	RK74HB1J101J	CHIP-COM	100 J 1/16W	1	
	ED1	QLF0202-001	FL TUBE		1	
	J1	E59-0864-05	RECTANGULAR PLUG	24PIN	1	
	J2	QNS0308-001	3.5 JACK		1	
	J3	QNZ1076-001	USB CONNECTOR		1	
	S1	T99-0484-05	ROTARY ENCODER		1	
	S2	NSW0246-001X	TACT SWITCH		1	
	S3	NSW0246-001X	TACT SWITCH		1	
	S11	NSW0246-001X	TACT SWITCH		1	
	S15	NSW0246-001X	TACT SWITCH		1	
	S16	NSW0246-001X	TACT SWITCH		1	
BLUETOOTH UNIT (X17-2180-11) <X17>						
	IC1	S-1132B18U5T1G	ANALOGUE IC		1	
	IC2	BA4560RFV	ANALOGUE IC		1	
	IC3	TCC860000XEAU	MOS-IC		1	
	IC4	M24512-WMN6-X	ROM IC		1	
	IC5	E29LV32BT77E1	ROM IC		1	
	IC6	PCM1780-X	MOS-IC		1	
	IC7	A3V28S40FTP-G6	DRAM IC		1	
	D1	RKZ5.1KG(B2)	Z DIODE		1	
	C1	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C2	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C3	CK73HB1H122K	CHIP C	50V 1200PF K	1	
	C4	CC73HCH1H180J	CHIP C	50V 18PF J	1	
	C5	CC73HCH1H331J	CHIP C	50V 330PF J	1	
	C6	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C7	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C8	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C9	CK73GB0J475K	CHIP C	6.3V 4.7UF K	1	
	C10	CK73HB1E103K	CHIP C	25V 0.010UF K	1	
	C11	CK73HB0J105K	CHIP C	6.3V 1.0UF K	1	
	C12	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C13	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C14	CK73HB1C333K	CHIP C	16V 0.033UF K	1	
	C15	CK73GB0J475K	CHIP C	6.3V 4.7UF K	1	
	C16	CK73HB1C333K	CHIP C	16V 0.033UF K	1	
	C17	CC73HCH1H220J	CHIP C	50V 22PF J	1	
	C18	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C19	CK73HB1H471K	CHIP C	50V 470PF K	1	
	C20	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C21	CK73HB1H471K	CHIP C	50V 470PF K	1	
	C22	CC73HCH1H100D	CHIP C	50V 10PF D	1	
	C23	CK73HB0J105K	CHIP C	6.3V 1.0UF K	1	
	C24	CK73HB0J105K	CHIP C	6.3V 1.0UF K	1	
	C25	CC73HCH1H100D	CHIP C	50V 10PF D	1	
	C26	CK73HB1H102K	CHIP C	50V 1000PF K	1	
	C28	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C29	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C30	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C31	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C32	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C33	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C34	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C35	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C36	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C37	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C38	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C39	CK73FB0J106K	CHIP C	6.3V 10UF K	1	
	C40	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C41	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C42	CK73HB1E103K	CHIP C	25V 0.010UF K	1	
	C43	CK73FB0J106K	CHIP C	6.3V 10UF K	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	C44	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C45	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C46	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C47	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C48	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C49	CK73FB0J106K	CHIP C	6.3V 10UF K	1	
	C50	CK73FB0J106K	CHIP C	6.3V 10UF K	1	
	C51	CK73HB1H222K	CHIP C	50V 2200PF K	1	
	C52	CK73HB1H222K	CHIP C	50V 2200PF K	1	
	C53	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C54	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C55	CC73HCH1H331J	CHIP C	50V 330PF J	1	
	C300	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	C301	CK73HB1A104K	CHIP C	10V 0.10UF K	1	
	R1	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R3	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R4	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R6	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R7	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R8	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R9	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R10	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R11	RK73GB2A4R7J	CHIP R	4.7 J 1/10W	1	
	R13	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R14	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R15	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R16	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R17	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R18	RK73HB1J220J	CHIP R	22 J 1/16W	1	
	R19	RK73HB1J220J	CHIP R	22 J 1/16W	1	
	R20	RK73HB1J220J	CHIP R	22 J 1/16W	1	
	R21	RK73HB1J220J	CHIP R	22 J 1/16W	1	
	R22	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R23	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R25	RK73HB1J822J	CHIP R	8.2K J 1/16W	1	
	R26	RK73HB1J330J	CHIP R	33 J 1/16W	1	
	R27	RK73HB1J330J	CHIP R	33 J 1/16W	1	
	R28	RK73HB1J333J	CHIP R	33K J 1/16W	1	
	R29	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R34	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R35	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R38	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R39	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R40	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R41	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R42	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R43	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R44	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R45	RK73HB1J124J	CHIP R	120K J 1/16W	1	
	R46	RK73HB1J124J	CHIP R	120K J 1/16W	1	
	R47	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R48	RK73HB1J122J	CHIP R	1.2K J 1/16W	1	
	R49	RK73HB1J122J	CHIP R	1.2K J 1/16W	1	
	R50	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R51	RK73HB1J105J	CHIP R	1.0M J 1/16W	1	
	R52	RK73HB1J332J	CHIP R	3.3K J 1/16W	1	
	R54	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R55	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R56	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R57	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R59	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R61	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R62	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R64	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R65	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R66	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R67	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R68	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R69	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R70	RK73HB1J473J	CHIP R	47K J 1/16W	1	
	R71	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R72	RK73HB1J471J	CHIP R	470 J 1/16W	1	
	R73	RK73HB1J471J	CHIP R	470 J 1/16W	1	
	R74	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R75	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R80	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R81	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R82	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R83	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R88	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R89	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R91	RK73HB1J223J	CHIP R	22K J 1/16W	1	
	R93	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R94	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R300	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R302	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R303	RK73HB1J470J	CHIP R	47 J 1/16W	1	
	R306	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R307	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R311	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R323	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	A300	W02-5519-05	ELECTRIC CIRCUIT	BTR601	1	
	CN1	E41-3330-05	MODULE			
	X1	L77-3873-05	SOCKET FOR PIN ASSY	24P	1	
			CRYSTAL RESONATOR	12.000MHZ	1	
CD PLAYER UNIT (X32-6250-02) IN CD MECHA <X32>						
	IC3	BD8222EFV	ANALOGUE IC		1	
	IC4	JCV8023	MOS-IC		1	
	IC5	XC6415S001P1	MOS-IC		1	
	Q1	2SA2188-T1(E)	TRANSISTOR		1	
	Q14	RUE003N02	FET		1	
	D2	DAP202U	DIODE		1	
	D3	DA204U	DIODE		1	
	D4	DA204U	DIODE		1	
	C1	CK73FB0J106K	CHIP C	6.3V 10UF K	1	
	C3	CC73GCH1H680J	CHIP C	50V 68PF J	1	
	C4	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C6	CK73FB1C105K	CHIP C	16V 1.0UF K	1	
	C8	CK73GB1H222K	CHIP C	50V 2200PF K	1	
	C9	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C10	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C11	CK73GB1H153K	CHIP C	50V 0.015UF K	1	
	C12	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C13	CK73GB1H332K	CHIP C	50V 3300PF K	1	
	C14	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C15	CK73GB1C333K	CHIP C	16V 0.033UF K	1	
	C16	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C18	CK73GB1H153K	CHIP C	50V 0.015UF K	1	
	C19	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C20	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C22	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C23	CK73GB1H153K	CHIP C	50V 0.015UF K	1	
	C24	CC73GCH1H470J	CHIP C	50V 47PF J	1	
	C25	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C26	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C27	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C29	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C30	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C31	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C36	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C41	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C42	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C43	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C44	CK73GB1H102K	CHIP C	50V 1000PF K	1	
	C45	CK73GB1H103K	CHIP C	50V 0.010UF K	1	
	C46	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C47	CC73GCH1H560J	CHIP C	50V 56PF J	1	
	C48	CC73GCH1H101J	CHIP C	50V 100PF J	1	
	C49	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C50	CK73FB1A225K	CHIP C	10V 2.2UF K	1	
	C51	CK73FB0J106K	CHIP C	6.3V 10UF K	1	
	C54	CK73FB0J106K	CHIP C	6.3V 10UF K	1	
	C57	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C59	CK73GB1H472K	CHIP C	50V 4700PF K	1	
	C61	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	C101	CK73GB1A105K	CHIP C	10V 1.0UF K	1	
	C103	CK73GB1C104K	CHIP C	16V 0.10UF K	1	
	R1	RK73GB2A560J	CHIP R	56 J 1/10W	1	
	R2	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R3	RK73GB2A4R7J	CHIP R	4.7 J 1/10W	1	
	R4	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R5	RK73GB2A225J	CHIP R	2.2M J 1/10W	1	
	R6	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R7	RK73GB2A221J	CHIP R	220 J 1/10W	1	
	R8	RK73GB2A622J	CHIP R	6.2K J 1/10W	1	
	R9	RK73GB2A913J	CHIP R	91K J 1/10W	1	
	R10	RK73GB2A334J	CHIP R	330K J 1/10W	1	
	R11	RK73GB2A153J	CHIP R	15K J 1/10W	1	
	R13	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R14	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R15	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R17	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R18	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R25	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R27	RK73EB2E4R7J	CHIP R	4.7 J 1/4W	1	
	R39	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R40	RK73GB2A681J	CHIP R	680 J 1/10W	1	
	R43	RK73GB2A4R7J	CHIP R	4.7 J 1/10W	1	
	R44	RK73GB2A4R7J	CHIP R	4.7 J 1/10W	1	
	R49	RK73GB2A393J	CHIP R	39K J 1/10W	1	
	R50	RK73GB2A363J	CHIP R	36K J 1/10W	1	
	R51	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R52	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R53	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R54	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R55	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R56	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R57	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R58	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R59	RK73GB2A204J	CHIP R	200K J 1/10W	1	
	R64	RK73GB2A223J	CHIP R	22K J 1/10W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-BT42U	E2	KDC-BT6052U	C0	KDC-BT652U	K0	KDC-U553BT	M1
KDC-X696	K1						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
R65		RK73GB2A333J	CHIP R	33K J 1/10W	1	
R69		RK73GB2A101J	CHIP R	100 J 1/10W	1	
R70		RK73GB2A101J	CHIP R	100 J 1/10W	1	
R71		RK73GB2A101J	CHIP R	100 J 1/10W	1	
R72		RK73GB2A101J	CHIP R	100 J 1/10W	1	
R73		RK73GB2A101J	CHIP R	100 J 1/10W	1	
R74		RK73GB2A103J	CHIP R	10K J 1/10W	1	
R75		RK73GB2A103J	CHIP R	10K J 1/10W	1	
R76		RK73GB2A202J	CHIP R	2.0K J 1/10W	1	
R102		RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
CN1		E41-2954-05	FLAT CABLE CONNECTOR	15P	1	
CN2		E41-2630-05	FLAT CABLE CONNECTOR	30P	1	
CP7		RK74GB1J103J	CHIP-COM	10K J 1/16W	1	
S1		S68-0863-05	PUSH SWITCH		1	
S2		S68-0863-05	PUSH SWITCH		1	
X1		L78-1221-05	RESONATOR (16.93MHZ)	16.93MHZ	1	