



EXPLODED VIEW (CD MECHANISM)

- | | |
|-----------------------|---------------|
| A M1.7x2.5 | : N09-4249-05 |
| B $\phi 2 \times 3.5$ | : N09-4172-05 |
| C M1.7x4 | : N09-4202-05 |
| D M2x2 | : N38-2020-46 |
| E $\phi 2 \times 6$ | : N09-4294-05 |
| F WASHER $\phi 1.2$ | : N19-2023-04 |
| G WASHER $\phi 1.6$ | : N19-2058-04 |
| H WASHER $\phi 1.6$ | : N19-2093-04 |
| J M2x2 | : N39-2020-46 |

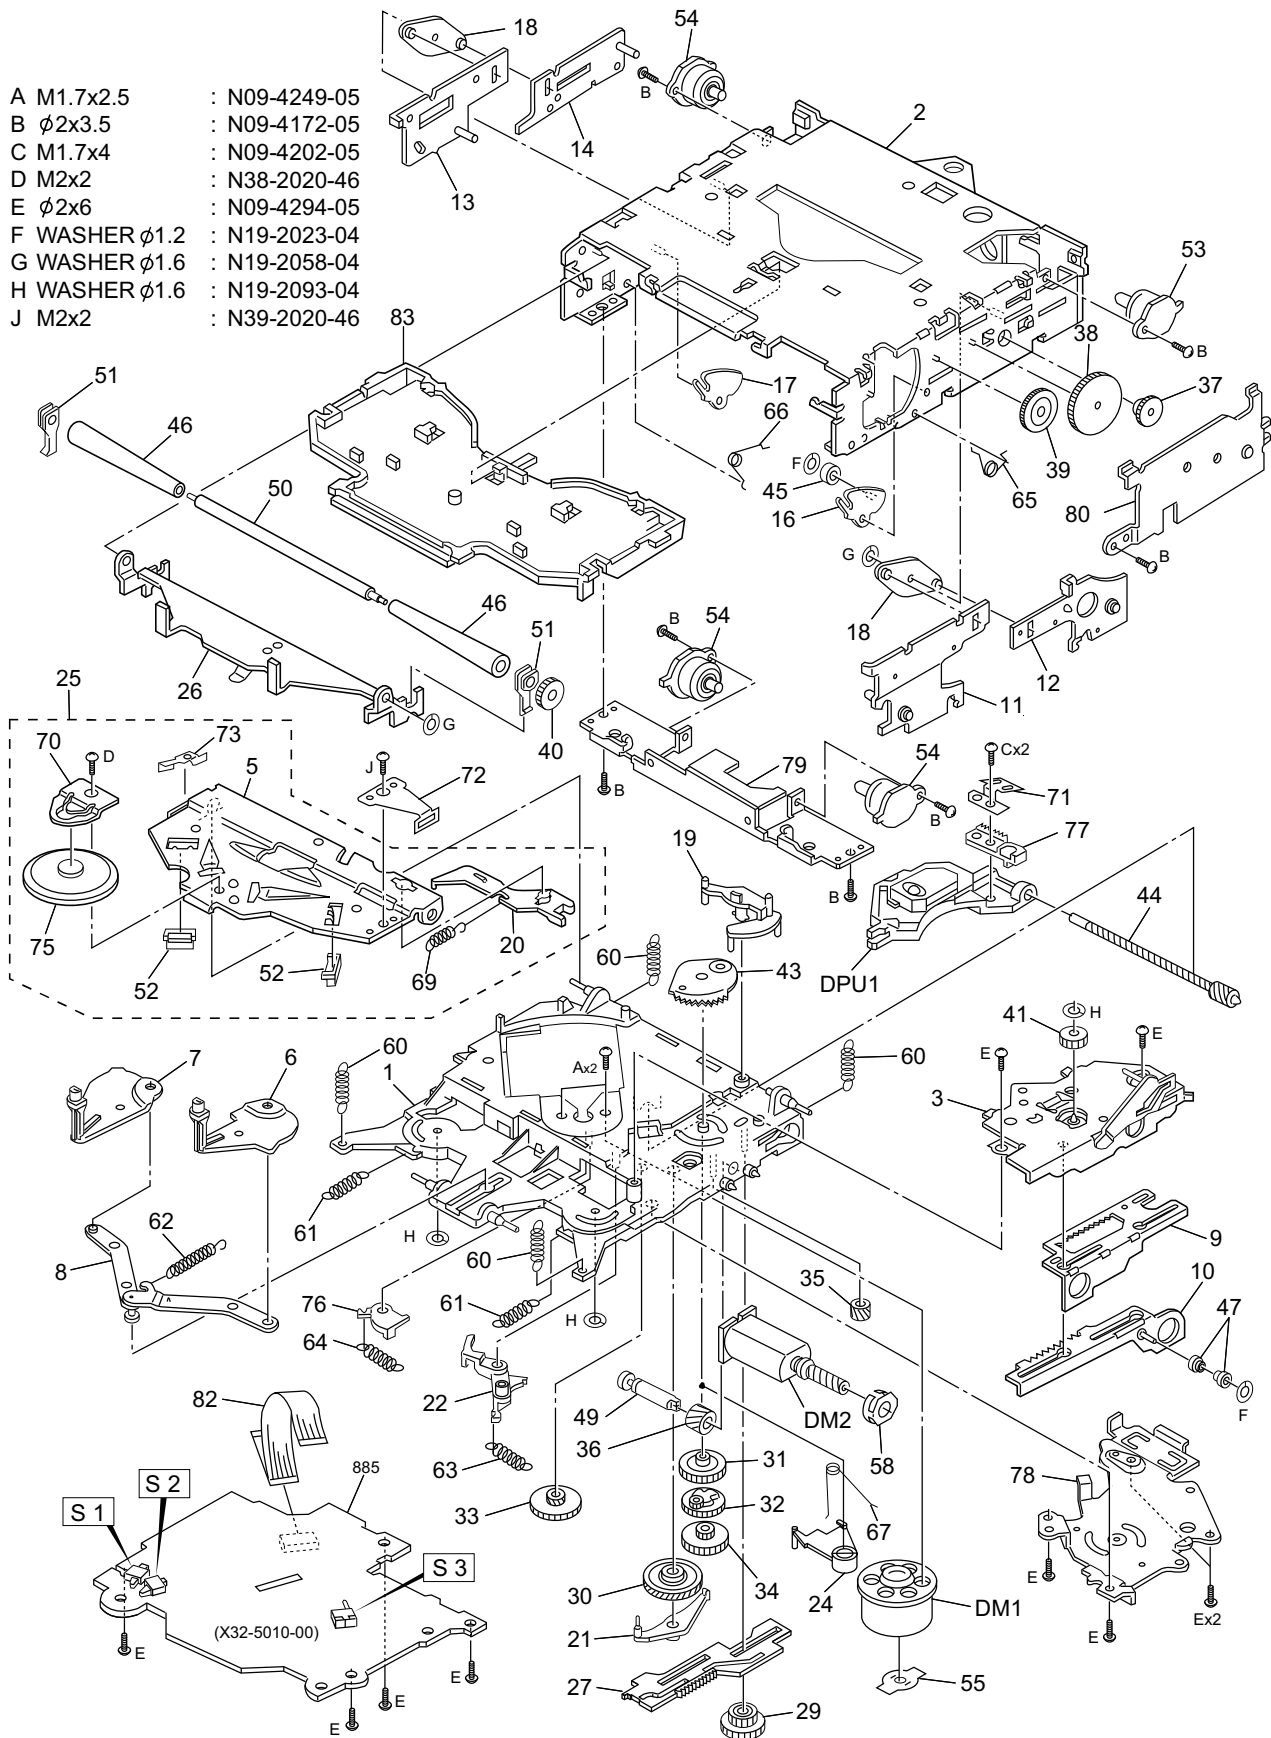

Parts with exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

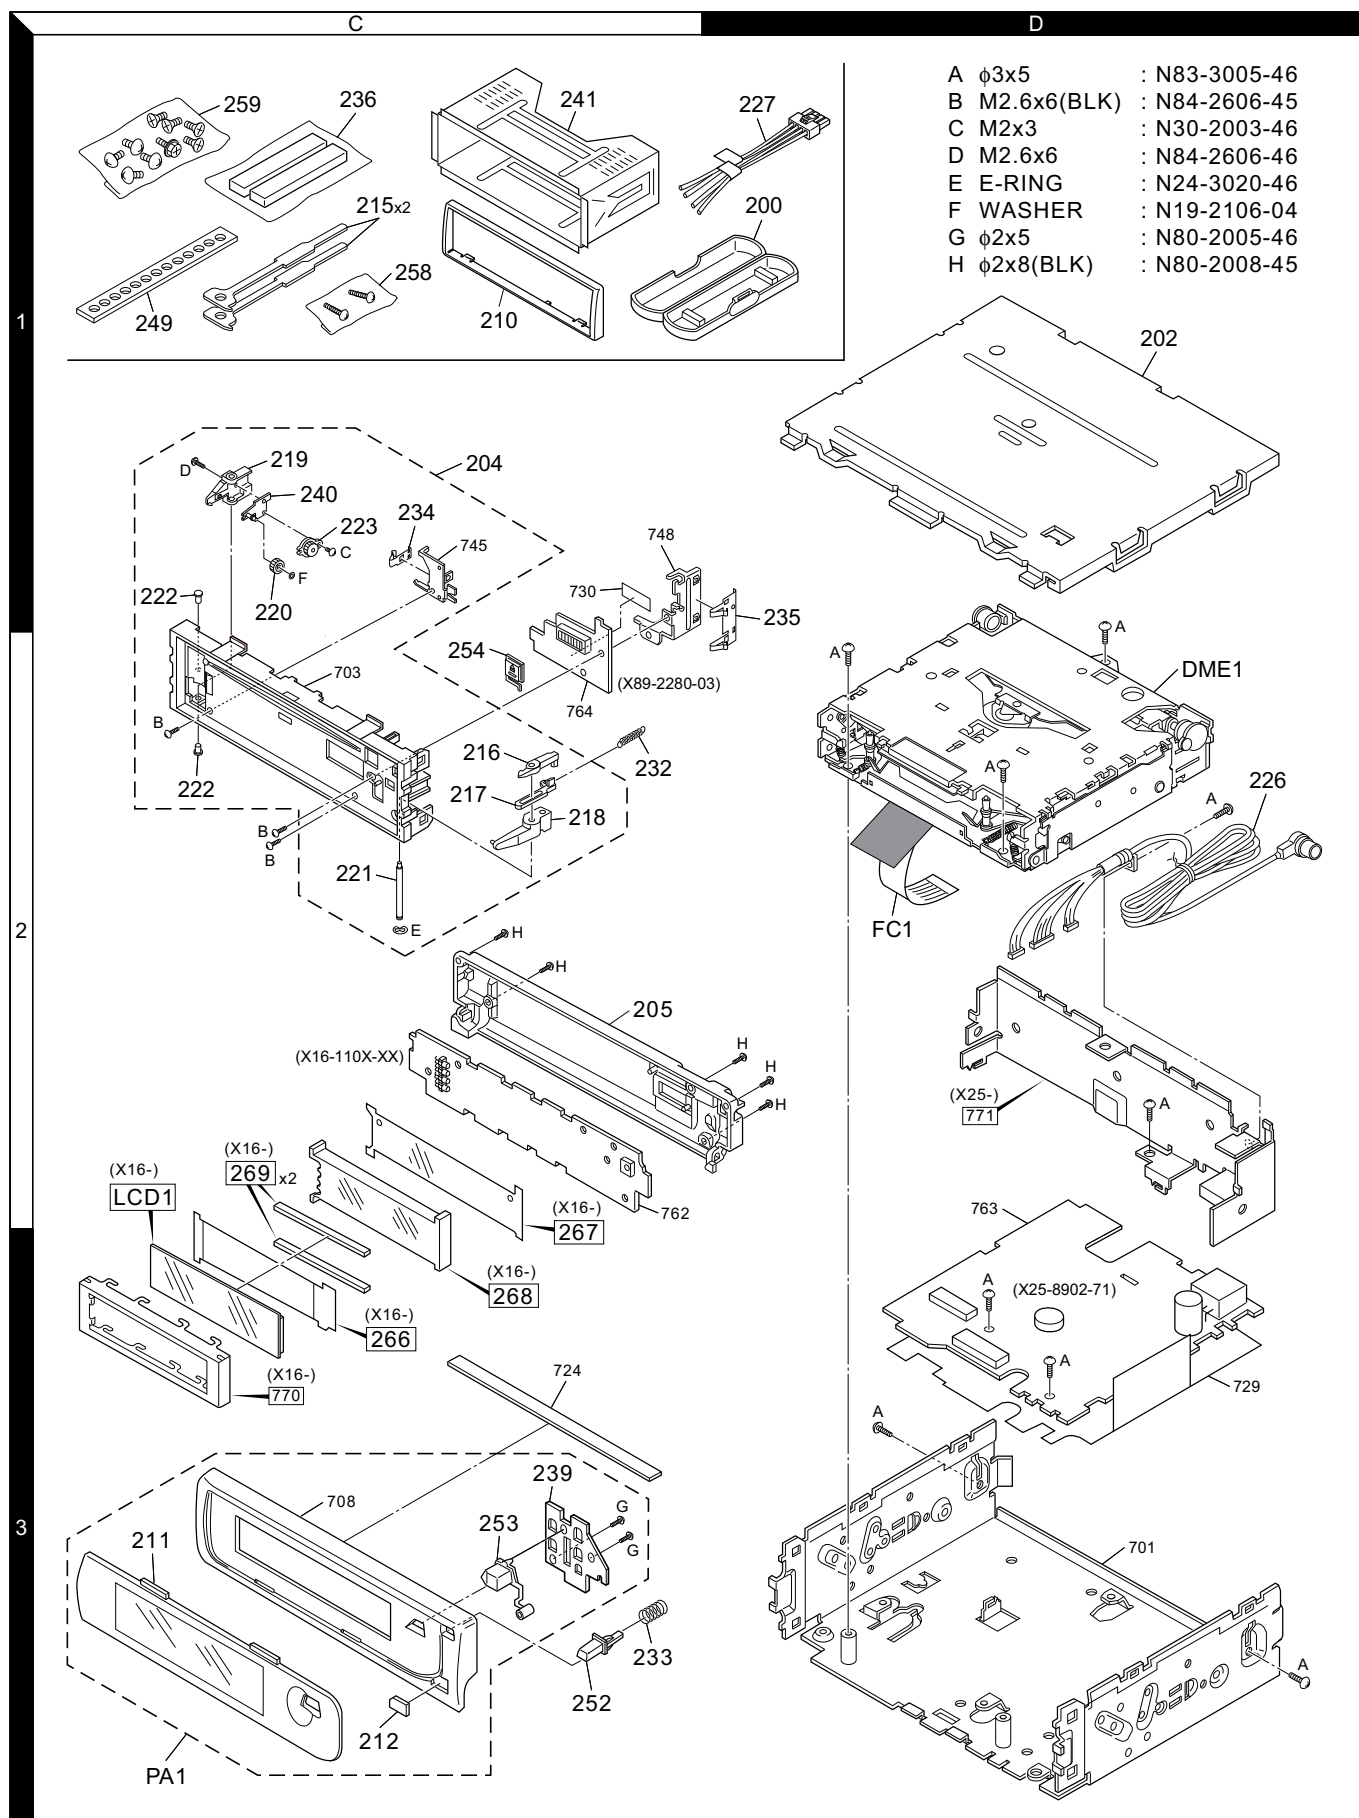

Parts with exploded numbers larger than 700 are not supplied.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest ination
KMD-D301					
200	1D		A02-1486-13	PLASTIC CABINET ASSY	
202	1D	*	A52-0793-02	TOP PLATE	
204	1C	*	A22-2347-02	SUB PANEL ASSY	
205	2C	*	A46-1729-01	REAR COVER	
PA1	3C	*	A64-2366-02	PANEL ASSY	
210	1C		B07-2188-02	ESCUTCHEON	
211	3C	*	B10-4055-02	FRONT GLASS	
212	3C		B43-1247-24	BADGE	
-			B46-0100-50	WARRANTY CARD	
-			B46-0182-14	ID CARD	E1
-			B46-0606-04	ID CARD	K1
-		*	B64-1957-00	INST. MANUAL (ENG,FRE,SPA)	
-		*	B64-1958-00	INST. MANUAL (GER,DUT,ITA,SPA)	E1
215	1C		D10-3031-04	LEVER	
216	2C		D10-4141-04	LEVER	
217	2C		D10-4142-44	LEVER	
218	2C		D10-4143-14	LEVER	
219	1C		D10-4144-23	LEVER	
220	2C		D13-1352-04	GEAR	
221	2C		D21-2272-04	SHAFT	
222	2C		D21-2273-04	SHAFT	
223	1C		D39-0237-05	DAMPER	
226	2D		E30-4728-15	CORD WITH DIN CONNECTOR	
227	1D		E30-4730-05	DC CORD	
FC1	2D		E39-0180-05	FLAT CABLE	
232	2C		G01-2856-24	EXTENSION SPRING	
233	3C		G01-2921-04	COMPRESSION SPRING	
234	1C		G02-1257-14	FLAT SPRING	
235	2D		G02-1259-14	FLAT SPRING	
236	1C		G11-1860-05	CUSHION	
-		*	H10-4777-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
-		*	H54-2104-03	ITEM CARTON CASE	
239	3C		J19-4938-04	HOLDER	
240	1C		J21-7817-24	MOUNTING HARDWARE ASSY	
241	1C	*	J21-9491-13	MOUNTING HARDWARE ASSY	
249	1C		J54-0606-04	STAY	K1
252	3C		K24-1923-14	KNOB (REL)	
253	3C		K25-1026-04	KNOB (DISP)	
254	2C		K24-1947-14	KNOB (EJECT)	
258	1C		N99-1656-05	SCREW SET	K1
259	1C		N99-1632-05	SCREW SET	K1
A	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
B	2C		N84-2606-45	PAN HEAD TAPTITE SCREW	
C	1C		N30-2003-46	PAN HEAD MACHINE SCREW	
D	1C		N84-2606-46	PAN HEAD TAPTITE SCREW	
E	2C		N24-3020-46	E TYPE RETAINING RING(2Φ)	
F	1C		N19-2106-04	FLAT WASHER (1.4X3X0.25)	
G	3C		N80-2005-46	PAN HEAD TAPTITE SCREW	
H	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	

Ref.No.	A d d	N e w	Parts No.	Description	Dest ination
DME1	2D		X92-4130-00	MECHANISM ASSY (DXM-1062)	
SWITCH UNIT (X16-110X-XX)					
266	3C		B11-0976-24	OPTICAL DIFFUSER	
267	2C		B11-0977-04	REFLECTION SHEET	
268	3C	*	B19-2092-03	LIGHTING BOARD	
D1-4			B30-1542-05	LED (WHT)	
LCD1	2C		B38-1013-05	LIQUID CRYSTAL	
C1,2			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H102K	CHIP C 1000PF K	
C12			CK73FB1C224K	CHIP C 0.22UF K	
C13,14			CK73GB1H102K	CHIP C 1000PF K	
C15,16			CK73GB1C473K	CHIP C 0.047UF K	
269	2C		E29-1584-04	CONDUCTIVE RUBBER	
J1			E59-0829-05	RECTANGULAR PLUG (16P)	
CP1			R90-0723-05	MULTI-COMP 47K X2	
R2			RK73EB2B471J	CHIP R 470 J 1/8W	E1
R3			RK73EB2B102J	CHIP R 1.0K J 1/8W	K1
R3			RK73EB2B821J	CHIP R 820 J 1/8W	
R5			RK73EB2B471J	CHIP R 470 J 1/8W	
R7			RK73GB1J133J	CHIP R 13K J 1/16W	
R15			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R18			RK73GB1J473J	CHIP R 47K J 1/16W	
R24-26			RK73FB2A101J	CHIP R 100 J 1/10W	
R27,28			RK73FB2A471J	CHIP R 470 J 1/10W	
R29			RK73GB1J104J	CHIP R 100K J 1/16W	
R31			RK73GB1J104J	CHIP R 100K J 1/16W	
R32-34			RK73GB1J103J	CHIP R 10K J 1/16W	
W1,2			R92-2052-05	CHIP R 0 J 1/10W	
W4			R92-2052-05	CHIP R 0 J 1/10W	
S8			S70-0850-05	TACT SWITCH	K1
S8			S70-0877-05	TACT SWITCH	E1
D6			HZM5.6N(B3)	ZENER DIODE	
D6		*	MA3056-H	ZENER DIODE	
D9,10			DAN202U	DIODE	
D9,10			MA142WK	DIODE	
IC1			LC75823W	MOS-IC	
Q1			2SC4081	TRANSISTOR	
ELECTRIC UNIT (X25-8902-71)					
D10			B30-1488-05	LED	
C1			C90-5239-05	ELECTRO 2200UF 16WV	
C2			CE04CW1C101M	ELECTRO 100UF 16WV	
C3			CK73GB1H103K	CHIP C 0.010UF K	
C4			C90-2597-05	ELECTRO 10UF 16WV	
C5			CE04CW1A101M	ELECTRO 100UF 10WV	
C6			CE04CW1A221M	ELECTRO 220UF 10WV	
C7,8			C90-2606-05	ELECTRO 0.47UF 50WV	
C9			CE04CW1A221M	ELECTRO 220UF 10WV	
C10			C90-2606-05	ELECTRO 0.47UF 50WV	
C11			CE04CW0J101M	ELECTRO 100UF 6.3WV	
C12			CK73GB1H103K	CHIP C 0.010UF K	
C13,14			C90-2597-05	ELECTRO 10UF 16WV	
C15			CK73GB1C104K	CHIP C 0.10UF K	

E1: Europe K1: North America

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C16 C17 C18 C19,20 C22			C90-2945-05 CK73GB1C104K CK73GB1H103K CK73GB1C104K CK73GB1H103K	ELECTRO 0.047F 5.5WV CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C26,27 C29 C30 C33 C38			CK73GB1H103K C90-2606-05 CK73GB1H102K CK73GB1H102K CK73GB1H103K	CHIP C 0.010UF K ELECTRO 0.47UF 50WV CHIP C 1000PF K CHIP C 1000PF K CHIP C 0.010UF K	
C39 C40 C41 C42-45 C46			CK73GB1C104K C90-2597-05 CK73GB1H103K C90-2525-05 CK73GB1C104K	CHIP C 0.10UF K ELECTRO 10UF 16WV CHIP C 0.010UF K NP-ELECT 2.2UF 35WV CHIP C 0.10UF K	
C47 C48 C49 C50,51 C55,56			C90-2595-05 CK73GB1C104K CC73GCH1H101J CC73GCH1H221J C90-2597-05	ELECTRO 4.7UF 16WV CHIP C 0.10UF K CHIP C 100PF J CHIP C 220PF J ELECTRO 10UF 16WV	
CN1 CN2 CN3 CN4 CN5			E40-3237-05 E40-3252-05 E40-3238-05 E40-9339-05 E40-9595-05	PIN ASSY (2P) PIN ASSY (8P) PIN ASSY (3P) FLAT CABLE CONNECTOR (22P) PIN ASSY (16P)	
J1			E58-0882-05	RECTANGULAR RECEPTACLE (4P)	
X1			L78-0556-05	RESONATOR (4.19MHz)	
CP1 CP2 CP3 CP4 CP5			R90-0720-05 R90-0719-05 R90-1014-05 R90-1019-05 R90-0718-05	MULTI-COMP 100K X4 MULTI-COMP 4.7K X2 MULTI-COMP 100 X4 MULTI-COMP 100 X2 MULTI-COMP 4.7K X4	
CP6 CP7 CP9 CP10			R90-1013-05 R90-1014-05 R90-0724-05 R90-0737-05	MULTI-COMP 2.2K X2 MULTI-COMP 100 X4 MULTI-COMP 1K X4 MULTI-COMP 100K X2	
R1			RK73FB2A101J	CHIP R 100 J 1/10W	
R2 R3,4 R5 R6 R7			RK73GB1J223J RK73GB1J152J RK73GB1J102J RK73GB1J183J RK73GB1J223J	CHIP R 22K J 1/16W CHIP R 1.5K J 1/16W CHIP R 1.0K J 1/16W CHIP R 18K J 1/16W CHIP R 22K J 1/16W	
R8 R9 R10 R11 R12			RK73GB1J153J RK73GB1J103J RK73GB1J104J RK73GB1J102J RK73GB1J470J	CHIP R 15K J 1/16W CHIP R 10K J 1/16W CHIP R 100K J 1/16W CHIP R 1.0K J 1/16W CHIP R 47 J 1/16W	
R13 R14 R15 R16 R17			RK73GB1J392J RK73EB2B241J RK73EB2B102J RK73EB2B101J RK73EB2B102J	CHIP R 3.9K J 1/16W CHIP R 240 J 1/8W CHIP R 1.0K J 1/8W CHIP R 100 J 1/8W CHIP R 1.0K J 1/8W	
R18			RK73EB2B101J	CHIP R 100 J 1/8W	

ELECTRIC UNIT (X25-8902-71)							
Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
R19			RK73EB2B102J	CHIP R	1.0K	J 1/8W	
R20			RK73EB2B101J	CHIP R	100	J 1/8W	
R21,22			RK73EB2B102J	CHIP R	1.0K	J 1/8W	
R23-25			RK73GB1J473J	CHIP R	47K	J 1/16W	
R26			RK73GB1J104J	CHIP R	100K	J 1/16W	
R27			RK73GB1J471J	CHIP R	470	J 1/16W	
R28			RK73GB1J104J	CHIP R	100K	J 1/16W	
R29			RK73GB1J471J	CHIP R	470	J 1/16W	
R30			RK73GB1J104J	CHIP R	100K	J 1/16W	
R32			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
R33			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R44			RK73GB1J101J	CHIP R	100	J 1/16W	
R49			RK73GB1J473J	CHIP R	47K	J 1/16W	
R52			RK73GB1J473J	CHIP R	47K	J 1/16W	
R53			RK73GB1J223J	CHIP R	22K	J 1/16W	
R54			RK73GB1J104J	CHIP R	100K	J 1/16W	
R55			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
R56			RK73GB1J101J	CHIP R	100	J 1/16W	
R60			RK73GB1J471J	CHIP R	470	J 1/16W	
R72			RK73GB1J104J	CHIP R	100K	J 1/16W	
R73			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R100			RK73EB2B102J	CHIP R	1.0K	J 1/8W	
R101-104			RK73EB2B223J	CHIP R	22K	J 1/8W	
R105			RK73EB2B102J	CHIP R	1.0K	J 1/8W	
R107,108			RK73GB1J683J	CHIP R	68K	J 1/16W	
R109			RK73GB1J333J	CHIP R	33K	J 1/16W	
R110			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R111			RK73GB1J561J	CHIP R	560	J 1/16W	
R112			RK73GB1J473J	CHIP R	47K	J 1/16W	
R113,114			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R115			RK73GB1J223J	CHIP R	22K	J 1/16W	
R116			RK73GB1J103J	CHIP R	10K	J 1/16W	
R117			RK73GB1J104J	CHIP R	100K	J 1/16W	
R118,119			RK73GB1J472J	CHIP R	4.7K	J 1/16W	
R120-127			RK73GB1J223J	CHIP R	22K	J 1/16W	
R128			RK73GB1J473J	CHIP R	47K	J 1/16W	
R129			RK73GB1J103J	CHIP R	10K	J 1/16W	
R130			RK73GB1J104J	CHIP R	100K	J 1/16W	
S1			S62-0857-05	SLIDE SWITCH			
BZ1			T95-0214-05	PIEZOELECTRIC VIBRATOR			
D1			HZS6A3L	ZENER DIODE			
D2			HZS7A1L	ZENER DIODE			
D3			AM01Z	DIODE			
D4			HZS9B3L	ZENER DIODE			
D5			HZS12B1L	ZENER DIODE			
D6			HZS9A2L	ZENER DIODE			
D7			DAP202U	DIODE			
D7			MA142WA	DIODE			
D8,9			AM01Z	DIODE			
D11			DAP202U	DIODE			
D11			MA142WA	DIODE			
D13-23			DA204U	DIODE			
D24			FTZ6.8E	ZENER DIODE			

E1: Europe K1: North America

 indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-8902-71)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D28			DA204U	DIODE	
D29			DAP202U	DIODE	
D29			MA142WA	DIODE	
D30			STZ6.8N	ZENER DIODE	
D31			DAP202U	DIODE	
D31			MA142WA	DIODE	
IC1		*	UPD780058GC255	MI-COM IC	
IC2			S-80830ANNP	MOS-IC	
IC5,6			NJM4565M-TE2	ANALOGUE IC	
IC7			BA3834F	MOS-IC	
Q1			2SC4081	TRANSISTOR	
Q2			2SA1870	TRANSISTOR	
Q2		*	2SB1450	TRANSISTOR	
Q3			2SC4081	TRANSISTOR	
Q4			2SB1202	TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			2SB1202	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			2SB1202	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q10			2SA1037K	TRANSISTOR	
Q11			2SC4081	TRANSISTOR	
Q12			DTA143EUA	DIGITAL TRANSISTOR	
Q13			DTC144EUA	DIGITAL TRANSISTOR	
Q13			UN5213	DIGITAL TRANSISTOR	
Q14,15			DTC343TK	DIGITAL TRANSISTOR	
Q16			DTC144EUA	DIGITAL TRANSISTOR	
Q16			UN5213	DIGITAL TRANSISTOR	
Q17			UMC2N	TRANSISTOR	
Q18			DTC144EUA	DIGITAL TRANSISTOR	
Q18			UN5213	DIGITAL TRANSISTOR	
Q19,20			UMC2N	TRANSISTOR	
Q21			2SD2114K	TRANSISTOR	
Q22			DTC144EUA	DIGITAL TRANSISTOR	
Q22			UN5213	DIGITAL TRANSISTOR	
Q23			2SA1037K	TRANSISTOR	
Q24			DTC144EUA	DIGITAL TRANSISTOR	
Q24			UN5213	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5010-00)					
C1,2			CK73FB1C105K	CHIP C 1.0UF K	
C3			CK73FB0J475K	CHIP C 4.7UF K	
C4			C92-0566-05	CHIP-TAN 10UF 6.3WV	
C5			CC73GCH1H150J	CHIP C 15PF J	
C6			CC73GCH1H020C	CHIP C 2.0PF C	
C7			CK73GB1C104K	CHIP C 0.10UF K	
C8			CK73FB1C105K	CHIP C 1.0UF K	
C10			CK73GB1H472K	CHIP C 4700PF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12			CK73GB1H332K	CHIP C 3300PF K	
C13			CK73GB1C333K	CHIP C 0.033UF K	
C14			CK73GB1H472K	CHIP C 4700PF K	
C15			CK73GB1C473K	CHIP C 0.047UF K	
C16			CC73GCH1H151J	CHIP C 150PF J	
C17			CK73GB1H472K	CHIP C 4700PF K	
C18			CC73GCH1H221J	CHIP C 220PF J	
C19,20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73FB0J475K	CHIP C 4.7UF K	
C23			CK73GB1H102K	CHIP C 1000PF K	
C24			CK73GB1E223K	CHIP C 0.022UF K	
C25			CK73GB1H153K	CHIP C 0.015UF K	
C26			CK73GB0J105K	CHIP C 1.0UF K	
C28			CK73GB0J105K	CHIP C 1.0UF K	
C29			CK73GB1C104K	CHIP C 0.10UF K	
C33			CK73GB1C104K	CHIP C 0.10UF K	
C35			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73EB1C225K	CHIP C 2.2UF K	
C43			CK73GB1H153K	CHIP C 0.015UF K	
C45			CK73GB1H153K	CHIP C 0.015UF K	
C46			CK73GB1C473K	CHIP C 0.047UF K	
C55			CK73GB1C104K	CHIP C 0.10UF K	
C68			CK73GB1C104K	CHIP C 0.10UF K	
C71,72			CK73GB1H471K	CHIP C 470PF K	
C77,78			CC73GCH1H680J	CHIP C 68PF J	
C79,80			CK73GB1H222K	CHIP C 2200PF K	
C85			CK73GB1C104K	CHIP C 0.10UF K	
C89			CK73GB1H222K	CHIP C 2200PF K	
C90			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR (16P)	
CN2			E40-9339-05	FLAT CABLE CONNECTOR (22P)	
CN2			E41-0036-05	FLAT CABLE CONNECTOR (22P)	
CN2			E41-0129-05	FLAT CABLE CONNECTOR (22P)	
X1			L78-0572-05	RESONATOR (16.93MHZ)	
CP1-3			R90-1019-05	MULTI-COMP 100 X2	
R3			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R5			RK73GB1J361J	CHIP R 360 J 1/16W	
R6			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R8			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R9			RK73EB2B100J	CHIP R 10 J 1/8W	
R10,11			RK73GB1J103J	CHIP R 10K J 1/16W	
R12			RK73GB1J912J	CHIP R 9.1K J 1/16W	
R15			RK73GB1J824J	CHIP R 820K J 1/16W	
R16			RK73GB1J223J	CHIP R 22K J 1/16W	
R17			RK73GB1J433J	CHIP R 43K J 1/16W	
R18			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R19			RK73GB1J513J	CHIP R 51K J 1/16W	
R20			RK73GB1J104J	CHIP R 100K J 1/16W	
R21			RK73GB1J244J	CHIP R 240K J 1/16W	
R32			RK73GB1J104J	CHIP R 100K J 1/16W	
R34			RK73GB1J683J	CHIP R 68K J 1/16W	
R36			RK73GB1J151J	CHIP R 150 J 1/16W	
R37			RK73GB1J471J	CHIP R 470 J 1/16W	
R38			RK73GB1J224J	CHIP R 220K J 1/16W	
R46			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R47			RK73GB1J103J	CHIP R 10K J 1/16W	
R49			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R52			RK73GB1J104J	CHIP R 100K J 1/16W	
R54			RK73GB1J104J	CHIP R 100K J 1/16W	

E1: Europe K1: North America

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description				Dest inati on
R71			RK73GB1J103J	CHIP R	10K	J	1/16W	
R72			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R73			RK73GB1J473J	CHIP R	47K	J	1/16W	
R75			RK73GB1J333J	CHIP R	33K	J	1/16W	
R76			RK73GB1J622J	CHIP R	6.2K	J	1/16W	
R77			RK73GB1J563J	CHIP R	56K	J	1/16W	
R78			RK73GB1J243J	CHIP R	24K	J	1/16W	
R81			RK73GB1J333J	CHIP R	33K	J	1/16W	
R82			RK73GB1J123J	CHIP R	12K	J	1/16W	
R83			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R102			RK73GB1J332J	CHIP R	3.3K	J	1/16W	
R104			RK73GB1J562J	CHIP R	5.6K	J	1/16W	
R107,108			RK73FB2A331J	CHIP R	330	J	1/10W	
R117,118			RK73FB2A203J	CHIP R	20K	J	1/10W	
R121,122			RK73FB2A203J	CHIP R	20K	J	1/10W	
R125,126			RK73FB2A203J	CHIP R	20K	J	1/10W	
R202			RK73GB1J104J	CHIP R	100K	J	1/16W	
R214			RK73GB1J104J	CHIP R	100K	J	1/16W	
R218			RK73GB1J473J	CHIP R	47K	J	1/16W	
R233			RK73GB1J622J	CHIP R	6.2K	J	1/16W	
R234			RK73GB1J103J	CHIP R	10K	J	1/16W	
R238			RK73FB2A201J	CHIP R	200	J	1/10W	
W17			R92-2053-05	CHIP R	0	J	1/8W	
S1,2			S68-0838-05	PUSH SWITCH				
S3			S68-0859-05	PUSH SWITCH				
D1,2			DAN202U	DIODE				
D3			DA204U	DIODE				
D4			DAN202U	DIODE				
D5			MA8051-L	ZENER DIODE				
IC1			AN22000AA	ANALOGUE IC				
IC2			MN662774KG1	MOS-IC				
IC4			BA5917AFP	ANALOGUE IC				
IC6			NJM4565MD	IC(OP AMP X2)				
Q1			MCH6101	TRANSISTOR				
Q2			DTC124EUA	DIGITAL TRANSISTOR				
Q3			DTA143XUA	DIGITAL TRANSISTOR				
Q4			2SA1362(Y)	TRANSISTOR				
Q5			DTC124EUA	DIGITAL TRANSISTOR				
DAUGHTER UNIT (X89-2280-03)								
CN1		*	E40-9596-05	SOCKET FOR PIN ASSY (16P)				
J1		*	E58-0865-05	RECTANGULAR RECEPTACLE (16P)				
R1			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
R2			RK73EB2B241J	CHIP R	240	J	1/8W	
R3			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
R5-8			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
R9			RK73EB2B471J	CHIP R	470	J	1/8W	
R10			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
S1			S70-0841-05	TACT SWITCH				
MECHANISM ASSY (X92-4130-00)								
1	2A		A10-4482-01	CHASSIS				
2	1B		A10-4225-33	CHASSIS CALKING ASSY				
3	2B		A11-0915-43	SUB CHASSIS CALKING ASSY				

CD PLAYER UNIT (X32-5010-00)							
Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
5	2A		D10-3082-13	ARM			
6	2A		D10-4306-14	ARM ASSY			
7	2A		D10-4305-14	ARM ASSY			
8	3A		D10-3087-44	ARM ASSY			
9	3B		D10-3092-03	SLIDER			
10	3B		D10-3093-04	SLIDER ASSY			
11	2B		D10-3095-04	SLIDER ASSY			
12	2B		D10-3096-04	SLIDER ASSY			
13	1A		D10-3099-24	SLIDER ASSY			
14	1A		D10-3100-04	SLIDER ASSY			
16	1B		D10-4004-04	LEVER ASSY			
17	1B		D10-4006-04	LEVER			
18	1A		D10-4007-04	LEVER			
19	2B		D10-4008-14	LEVER			
20	2A		D10-4009-23	ARM			
21	3A		D10-4010-04	LEVER			
22	3A		D10-4307-04	LEVER ASSY			
24	3B		D10-4050-04	ARM			
25	2A		D10-4038-23	ARM ASSY			
26	2A		D10-4123-24	LEVER ASSY			
27	3A		D13-1442-03	RACK (GEAR)			
29	3B		D13-1231-04	GEAR			
30	3A		D13-1240-04	GEAR			
31	3B		D13-1233-04	GEAR			
32	3B		D13-1234-14	GEAR ASSY			
33	3A		D13-1441-03	GEAR			
34	3B		D13-1232-04	GEAR			
35	3B		D13-1241-04	GEAR			
36	3A		D13-1242-04	GEAR			
37	1B		D13-1243-04	GEAR			
38	1B		D13-1244-04	GEAR			
39	1B		D13-1245-14	GEAR			
40	2A		D13-1246-04	GEAR			
41	2B		D13-1247-04	GEAR			
43	2B		D13-1249-04	GEAR ASSY			
44	2B		D13-1341-04	GEAR ASSY (LEAD SCREW)			
45	1B		D14-0668-04	ROLLER			
46	2A		D14-0670-04	ROLLER			
47	3B		D14-0674-04	ROLLER			
49	3A		D21-2228-14	SHAFT			
50	1A		D21-2229-04	SHAFT			
51	1A		D23-0925-24	RETAINER			
52	2A		D32-0614-04	STOPPER			
53	1B		D39-0223-05	DAMPER (YEL)			
54	2B		D39-0224-05	DAMPER (BLK)			
55	3B		F09-1246-04	SHEET			
58	3B		F09-1266-14	SHEET			
60	2A		G01-2770-04	EXTENSION SPRING			
61	3A		G01-2771-04	EXTENSION SPRING			
62	3A		G01-2772-24	EXTENSION SPRING			
63	3A		G01-2773-14	EXTENSION SPRING			
64	3A		G01-2774-34	EXTENSION SPRING			
65	1B		G01-2775-04	TORSION COIL SPRING			
66	1B		G01-2776-14	TORSION COIL SPRING			

