


2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

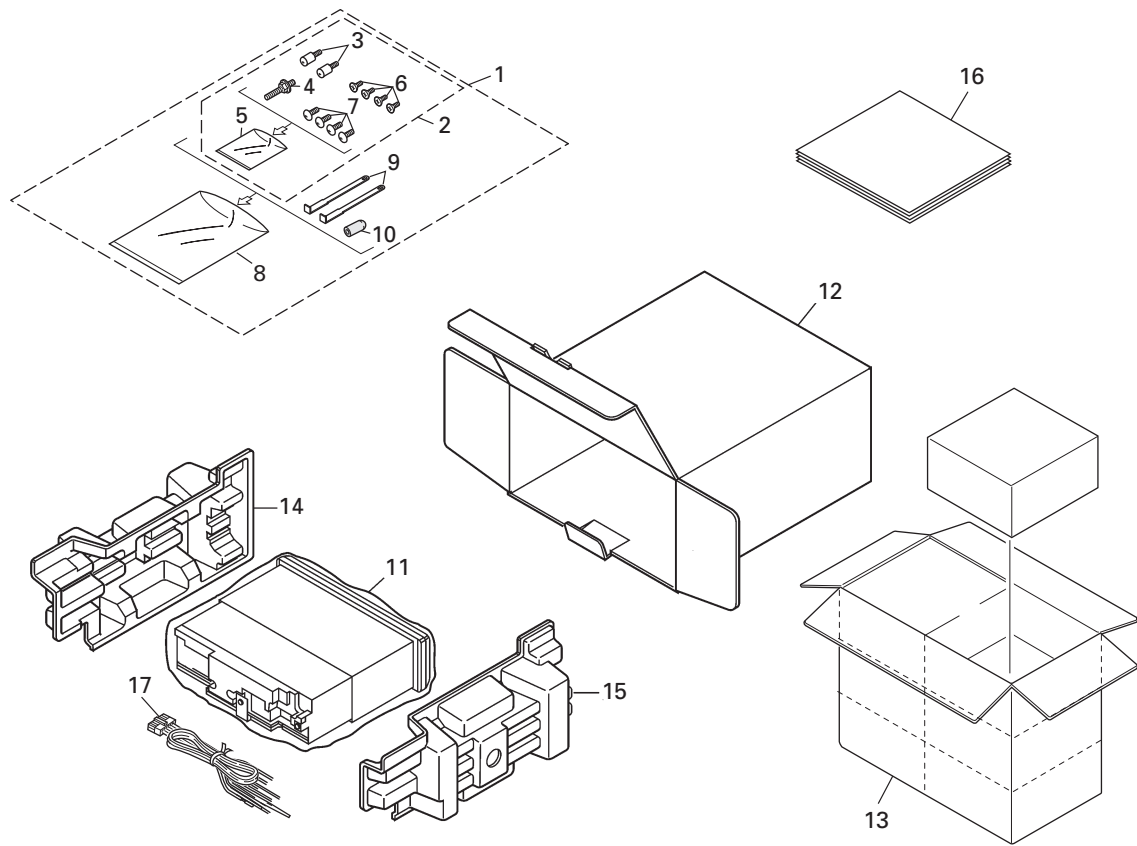


PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Accessory Assy	CEA4610	12	Carton	YHG5028
2	Screw Assy	CEA4611	13	Contain Box	YHL5028
3	Fixing Screw(M2x4)	CBA1488	14	Protector	XHP7004
4	Screw	CBA1650	15	Protector	XHP7003
* 5	Polyethylene Bag	CEG-127			
			16-1	Owner's Manual	YRD5013
6	Screw	CRZ50P090FTC	16-2	Installation Manual	YRD5017
7	Screw	TRZ50P080FTC	16-3	Caution Card	CRP1294
* 8	Polyethylene Bag	CEG-158	16-4	Caution Card	CRP1310
9	Handle	CNC5395	* 16-5	Card	ARY1048
10	Bush	CNV3930			
			17	Cord Assy	XDE7008
11	Polyethylene Bag	CEG1173			

Owner's Manual,Installation Manual

Part No.	Language
YRD5013	English, French, Spanish
YRD5017	English, French, Spanish

2.2 EXTERIOR

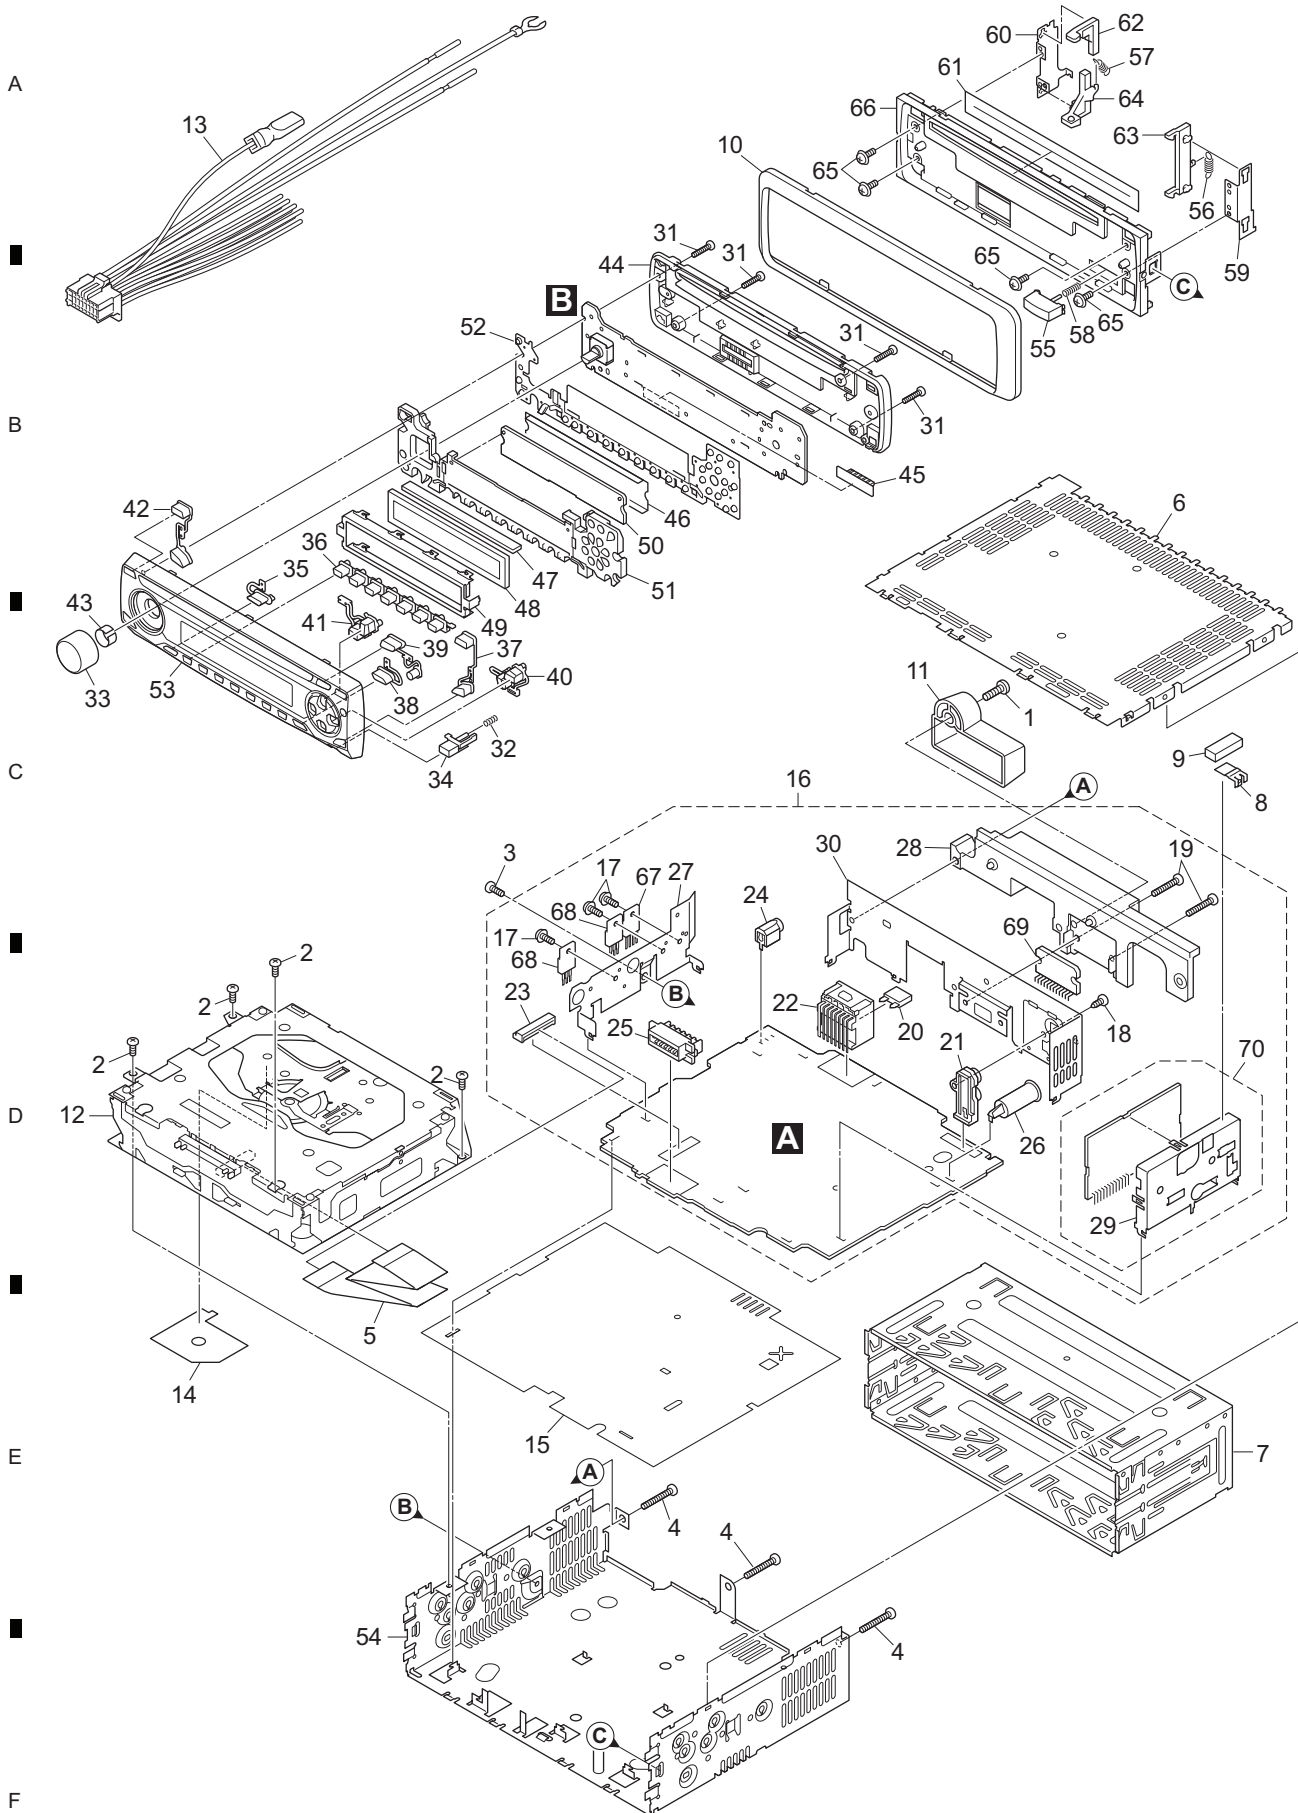

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ40P140FTC	50	Lighting Conductor	YNV5004	
2	Screw	BSZ26P060FTC				A
3	Screw	BSZ30P060FTC	51	Lighting Conductor	YNV5005	
4	Screw	BSZ30P200FTC	52	Rubber Contact	YNV5006	
5	Cable	CDE7113	53	Grille Unit	YXA5071	
			54	Chassis Unit	YXA5080	
6	Case	CNB2793	55	Button(DETACH)	CAC4836	
7	Holder	CNC8659				
8	Earth Plate	CNC8915	56	Spring	CBH1835	
9	Cushion	CNM8890	57	Spring	CBH2208	
10	Panel	CNS8046	58	Spring	CBH2367	
			59	Bracket	CNC6791	
11	Holder	CNV7619	60	Holder	CNC8042	B
12	CD Mechanism Module(S10)	CXK5601				
13	Cord Assy	XDE7008	61	Cover	CNM6276	
14	Insulator	XNM7106	62	Arm	CNV4692	
15	Insulator	YNM5012	63	Arm	CNV4728	
			64	Arm	CNV5576	
16	Tuner Amp Unit	YWM5049	65	Screw	IMS20P030FZK	
17	Screw	ASZ26P060FTC				
18	Screw	BPZ26P080FTC	66	Panel	YNS5046	
19	Screw	BSZ26P160FTC	67	IC(IC921)	NJM2388F84	
⚠ 20	Fuse(10A)	CEK1208	68	Transistor(Q911, 991)	2SD2396	
			69	IC(IC302)	TDA7386	C
21	Pin Jack(CN352)	CKB1057	70	FM/AM Tuner Unit(Z401)	CWE1646	
22	Plug(CN901)	CKM1376				
23	Connector(CN721)	CKS3835				
24	Connector(CN621)	CKS4124				
25	Connector(CN831)	CKS4944				
26	Antenna Jack(CN401)	CKX1056				
27	Holder	CND1328				
28	Heat Sink	CNR1668				
29	Holder	CND1054				
30	Holder	YNC5002				D
31	Screw	BPZ20P100FZK				
32	Spring	CBH2210				
33	Knob(VOLUME)	YAA5001				
34	Button(DETACH)	YAC5027				
35	Button(SOURCE)	YAC5030				
36	Button(1-6, LOCAL/BSM)	YAC5031				
37	Button(AUDIO, LOUDNESS)	YAC5032				
38	Button(BAND)	YAC5033				E
39	Button(EJECT, PAUSE)	YAC5034				
40	Button(DOWN, RIGHT)	YAC5035				
41	Button(UP, LEFT)	YAC5036				
42	Button(CLOCK, EQ)	YAC5039				
43	Spring	YBL5001				
44	Cover	YNS5038				
45	Connector(CN1801)	CKS4943				
46	Sheet	CNM7932				
47	Connector	CNV7369				F
48	LCD(LCD1801)	YAW5021				
49	Holder	YNC5005				

△



CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10)	CWX3110	50	Gear	CNV8379	
2	Connector(CN101)	CKS4182				A
3	Connector(CN701)	CKS4188	51	Gear	CNV8380	
4	Screw	BMZ20P035FTC	52	Gear	CNV8381	
5	Screw	BSZ20P040FTC	53	Gear	CNV8382	
			54	Gear	CNV8383	
6	Screw(M2x4)	CBA1362	55	Gear	CNV8384	
7	Screw(M2x3)	CBA1824				
8	Screw(M2x3)	CBA1825	56	Rack	CNV8385	
9			57	Arm	CNV8386	
10	Washer	CBF1038	58	Arm	CNV8387	
			59	Guide	CNV8388	
11	Washer	CBF1060	60	Roller	CNV8189	B
12	Spring	CBH2390				
13	Spring	CBH2606	61	Gear	CNV8389	
14	Spring	CBH2607	62	Arm	CNV8391	
15	Spring	CBH2608	63	Arm	CNV8390	
			64	Arm	CNV8392	
16	Spring	CBH2609	65	Damper	CNV7313	
17	Spring	CBH2610				
18	Spring	CBH2735	66	Damper	CNV7314	
19	Spring	CBH2612	67	Arm	CNV8394	
20	Spring	CBH2613	68	Arm	CNV8395	
			69	Guide	CNV8396	C
21	Spring	CBH2614	70	Guide	CNV8397	
22	Spring	CBH2615				
23	Spring	CBH2616	71	Holder	CNV8398	
24	Spring	CBH2617	72	Arm	CNV8402	
25	Spring	CBH2620	73	Gear	CNV8400	
			74	Damper	CNV7618	
26	Spring	CBH2621	75	Motor Unit(M1)	CXC4440	
27	Spring	CBH2641				
28	Spring	CBH2642	76	Chassis Unit	CXC2318	
29	Spring	CBH2643	77	Screw Unit	CXB8729	
30	Spring	CBH2659	78	Gear Unit	CXC2397	D
			79	Arm Unit	CXC2316	
31	Spring	CBH2688	80	Arm	CND1896	
32						
33	Shaft	CLA4441	81	Arm	CND1894	
34	Frame	CND2443	82	Motor Unit(M2)	CXB8933	
35	Frame	CNC9963	83	Bracket	CNC9985	
			84			
36	Bracket	CND2712	85	Screw(M2x5)	EBA1028	
37	Bracket	CND1895				
38	Arm	CNC9968	86	Screw	JFZ20P020FTC	E
39	Arm	CND1909	87	Screw	JGZ17P022FTC	
40	Lever	CND2032	88			
			89	Washer	YE20FTC	
41	Lever	CNC9984	90	Pickup Unit(P10)(Service)	CXX1647	
42	Sheet	CNM8134				
43	Collar	CNV8447	91	Screw	IMS26P030FTC	
44	Guide	CNV8448	92	Spring	CBL1635	
45	Arm	CNV8403	93	Clamper	CNV8372	
46	Rack	CNV8374				
47	Holder	CNV8376				F
48	Holder	CNV8377				
49	Arm	CNV8378				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Circuit Symbol and No. Part No. Circuit Symbol and No. Part No.

D 932	(A,60,91) Diode	HZS7L(A1)
D 991	(A,13,48) Diode	HZS7L(C3)
L 151	(A,141,79) Inductor	LAU2R2K
L 401	(A,155,55) Inductor	LAU1R0K
L 402	(A,155,92) Inductor	LAU1R0K
L 404	(A,155,99) Ferri-Inductor	LAU4R7K
L 601	(A,64,64) Ferri-Inductor	LAU100K
L 801	(A,28,15) Inductor	LAU2R2K
L 901	(A,35,103) Choke Coil 600μH	CTH1280
X 601	(A,101,61) Radiator 12.58291MHz	CSS1402
⚠FU352	(B,140,136) Fuse 3A	CEK1286
AR401	(A,159,119) Surge Protector	DSP-201M-S00B
Z 401	(A,163,100) FM/AM Tuner Unit	CWE1646
⚠	Fuse 10A	CEK1208

RESISTORS

R 153	(B,127,104)	RS1/16S471J
R 154	(B,147,93)	RS1/16S471J
R 155	(B,127,102)	RS1/16S471J
R 156	(B,136,94)	RS1/16S471J
R 157	(B,84,79)	RAB4C102J
R 301	(A,100,96)	RD1/4PU153J
R 353	(B,141,122)	RS1/16S471J
R 354	(B,163,125)	RS1/16S471J
R 357	(B,145,130)	RS1/16S223J
R 358	(B,160,134)	RS1/16S223J
R 405	(B,158,62)	RS1/16S681J
R 407	(B,159,83)	RS1/16S681J
R 408	(B,159,85)	RS1/16S681J
R 409	(B,159,86)	RS1/16S681J
R 410	(B,159,88)	RS1/16S681J
R 414	(B,156,88)	RS1/16S0R0J
R 420	(B,105,44)	RS1/16S681J
R 421	(B,159,79)	RS1/16S473J
R 454	(B,133,114)	RS1/16S103J
R 455	(B,141,132)	RS1/16S153J
R 456	(B,139,132)	RS1/16S221J
R 457	(A,120,54)	RD1/4PU681J
R 601	(B,102,49)	RS1/16S473J
R 603	(B,63,75)	RS1/16S103J
R 604	(B,60,75)	RS1/16S103J
R 605	(B,84,21)	RS1/16S0R0J
R 606	(B,110,41)	RS1/16S104J
R 607	(A,110,51)	RD1/4PU222J
R 608	(B,104,63)	RS1/16S0R0J
R 609	(A,102,47)	RD1/4PU473J

A
Unit Number:YWM5049
Unit Name:Tuner Amp Unit

MISCELLANEOUS

IC 151	(B,132,80) IC	PML003AM
IC 302	(A,93,132) IC	TDA7386
IC 551	(B,70,94) IC	TPD1018F
IC 601	(B,85,52) IC	PE5462A
IC 721	(B,45,20) IC	TC7SET08FU
IC 921	(A,6,119) IC	NJM2388F84
IC 961	(A,46,62) IC	S-80834CNY
IC 981	(B,146,27) IC	BA33BC0FP
Q 352	(B,159,125) Transistor	IMH3A
Q 452	(B,140,115) Transistor	DTC124EU
Q 453	(B,135,107) Transistor	DTA124EU
Q 801	(B,28,25) Transistor	2SA1036K
Q 821	(B,20,29) Transistor	2SA1036K
Q 822	(B,17,33) Transistor	DTC114EU
Q 911	(A,6,100) Transistor	2SD2396
Q 912	(B,17,64) Transistor	IMD2A
Q 931	(B,70,86) Transistor	IMX1
Q 991	(A,6,66) Transistor	2SD2396
Q 992	(B,25,50) Transistor	IMD2A
D 551	(A,66,104) Diode	S5688G
D 552	(A,63,104) Diode	S5688G
D 831	(A,139,18) Diode	1SS133
D 832	(A,122,23) Diode	1SS133
D 833	(A,114,24) Diode	1SS133
D 834	(A,111,19) Diode	1SS133
D 835	(A,113,10) Diode	1SS133
D 836	(A,126,25) Diode	1SS133
D 837	(A,134,21) Diode	1SS133
D 838	(A,119,18) Diode	1SS133
D 839	(A,117,18) Diode	1SS133
D 840	(A,118,15) Diode	1SS133
D 841	(A,116,15) Diode	1SS133
D 842	(A,130,25) Diode	1SS133
D 901	(A,69,113) Diode	S5688G
D 902	(A,72,110) Diode	S5688G
D 911	(A,30,78) Diode	S5688G
D 912	(A,18,60) Diode	HZS6L(B2)
D 931	(A,55,93) Diode	HZS7L(C3)

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 610	(A,129,44)	RD1/4PU681J		C 151	(B,159,71)	CKSRYB224K16	A
R 611	(B,105,50)	RS1/16S473J		C 152	(B,159,73)	CKSRYB224K16	
R 612	(B,111,14)	RS1/16S104J		C 153	(B,122,74)	CKSRYB105K10	
R 613	(B,107,24)	RS1/16S473J		C 154	(B,145,82)	CKSRYB105K10	
R 621	(A,18,131)	RD1/4PU102J		C 155	(A,121,78)	CEJQ4R7M35	
R 622	(A,21,131)	RD1/4PU102J		C 156	(A,143,88)	CEJQ4R7M35	
R 633	(B,65,40)	RS1/16S104J		C 157	(B,123,85)	CKSRYB153K50	
R 721	(B,80,23)	RS1/16S221J		C 158	(B,143,95)	CKSRYB153K50	
R 729	(B,54,57)	RS1/16S0R0J		C 161	(B,125,99)	CCSRCH100D50	
R 730	(A,74,38)	RD1/4PU102J		C 162	(B,139,94)	CCSRCH100D50	
R 731	(A,77,33)	RD1/4PU102J		C 163	(B,131,95)	CCSRCH100D50	B
R 732	(B,110,43)	RS1/16S0R0J		C 164	(B,139,96)	CCSRCH100D50	
R 733	(A,80,33)	RD1/4PU102J		C 165	(B,140,70)	CKSRYB104K16	
R 736	(A,98,34)	RD1/4PU221J		C 166	(A,135,66)	CEJQ470M10	
R 737	(B,56,24)	RS1/16S221J		C 167	(A,124,66)	CEJQ100M16	
R 738	(B,94,38)	RS1/16S221J		C 301	(A,135,111)	CFTNA224J50	
R 741	(B,50,17)	RS1/16S221J		C 302	(A,145,119)	CFTNA224J50	
R 751	(B,55,21)	RS1/16S0R0J		C 303	(A,130,111)	CFTNA224J50	
R 801	(B,24,27)	RS1/16S153J		C 304	(A,143,125)	CFTNA224J50	
R 802	(B,28,20)	RS1/16S153J		C 309	(B,135,136)	CKSQYB225K10	
R 803	(B,13,36)	RS1/16S222J		C 310	(B,122,143)	CKSQYB225K10	C
R 821	(B,22,33)	RS1/16S222J		C 311	(A,99,104)	CEJQ2R2M50	
R 823	(B,26,31)	RS1/16S103J		C 312	(A,100,118)	CEJQ100M16	
R 833	(B,105,16)	RS1/16S222J		C 313	(B,40,122)	CKSRYB104K16	
R 834	(B,88,15)	RS1/16S222J		C 353	(A,132,102)	CEJQ2R2M50	
R 836	(B,131,21)	RS1/16S104J		C 354	(A,140,102)	CEJQ2R2M50	
R 837	(A,128,21)	RD1/4PU103J		C 401	(B,164,67)	CKSRYB103K50	
R 838	(A,113,44)	RD1/4PU102J		C 402	(B,153,56)	CKSRYB103K50	
R 841	(B,15,28)	RS1/16S1R0J		C 403	(A,150,53)	CEJQ470M6R3	
R 848	(A,100,41)	RD1/4PU102J		C 404	(A,153,87)	CEJQ101M10	
R 851	(A,97,41)	RD1/4PU102J		C 405	(B,166,94)	CKSRYB104K25	D
R 852	(B,112,17)	RS1/16S102J		C 420	(B,112,68)	CCSRCH470J50	
R 853	(B,107,22)	RS1/16S102J		C 451	(A,134,131)	CEJQ330M10	
R 854	(B,105,14)	RS1/16S222J		C 551	(B,76,93)	CKSQYB103K50	
R 855	(B,103,20)	RS1/16S222J		C 552	(B,70,99)	CKSQYB103K50	
R 857	(B,104,18)	RS1/16S222J		C 601	(B,54,64)	CKSRYB104K25	
R 858	(A,127,27)	RD1/4PU102J		C 604	(B,97,64)	CCSRCH200J50	
R 911	(B,11,68)	RS1/16S223J		C 605	(B,101,64)	CCSRCH200J50	
R 912	(A,14,68)	RD1/4PU152J		C 610	(A,94,71)	CEJQ4R7M35	
R 923	(B,10,110)	RS1/16S473J		C 611	(B,97,68)	CKSRYB224K16	
R 931	(B,62,92)	RS1/16S473J		C 728	(B,42,19)	CKSRYB104K16	
R 932	(B,65,85)	RS1/16S104J		C 801	(B,11,36)	CKSRYB104K16	
R 933	(A,54,99)	RD1/4PU102J		C 901	(A,46,121)	CCH1494	
R 934	(B,64,95)	RS1/16S473J		C 911	(A,16,76)	CEJQ470M10	
R 935	(B,64,92)	RS1/16S473J		C 912	(B,12,64)	CKSRYB103K50	
R 936	(B,70,89)	RS1/16S473J		C 913	(A,25,86)	470µF/16V	E
R 940	(B,66,74)	RS1/16S104J		C 921	(A,14,115)	CEJQ101M16	
R 941	(B,66,72)	RS1/16S104J		C 922	(A,18,107)	CEJQ221M10	
R 955	(B,42,76)	RS1/16S473J		C 923	(B,18,110)	CKSRYB103K50	
R 961	(B,59,68)	RS1/16S102J		C 924	(B,17,101)	CKSRYB103K50	
R 962	(B,45,66)	RS1/16S822J		C 961	(B,50,66)	CKSRYB473K50	
R 971	(B,85,88)	RS1/16S0R0J		C 963	(A,46,69)	CEJQ100M16	
R 981	(A,136,38)	RD1/4PU1R8J		C 982	(B,145,40)	CKSRYB103K50	
R 991	(A,13,53)	RD1/4PU271J		C 983	(A,147,35)	CEJQ220M16	
R 992	(A,18,50)	RD1/4PU121J		C 991	(B,20,50)	CKSRYB473K50	
R 993	(B,30,62)	RS1/16S272J		C 992	(A,26,60)	CEJQ101M16	F
R 994	(B,30,56)	RS1/16S472J					

CAPACITORS

B

Circuit Symbol and No.Part No.**Unit Number:****Unit Name:Keyboard Unit**MISCELLANEOUS

IC 1801	(B,29,96) IC	PD6340A
D 1801	(B,19,40) Diode	MA152WK
D 1802	(B,24,40) Diode	MA152WA
D 1803	(A,25,38) LED	CL-490S-WF-SD
D 1804	(A,25,128) LED	CL-490S-WF-SD

D 1805	(A,13,22) LED	SML-310PT
D 1806	(A,26,9) LED	SML-310PT
D 1807	(A,30,27) LED	SML-310PT
D 1808	(A,39,50) LED	SML-310PT
D 1809	(A,5,10) LED	SML-310PT

D 1810	(A,34,9) LED	SML-310PT
D 1811	(A,39,84) LED	SML-310PT
D 1812	(A,39,73) LED	SML-310PT
D 1813	(A,39,61) LED	SML-310PT
D 1814	(A,39,96) LED	SML-310PT

D 1815	(A,39,107) LED	SML-310PT
D 1816	(A,39,119) LED	SML-310PT
D 1817	(A,39,35) LED	SML-310PT
D 1818	(A,39,131) LED	SML-310PT
X 1801	(B,37,83) Ceramic Resonator 5.00MHz	CSS1547

S 1827	(A,23,19) Switch(VOLUME)	YSD5002
IL 1801	(B,23,147) Lamp 40mA,14V	CEL1651
LCD1801	(A,16,45) LCD	YAW5021

RESISTORS

R 1801	(B,23,43)	RS1/16S222J
R 1802	(B,20,43)	RS1/16S222J
R 1803	(B,22,33)	RS1/16S151J
R 1804	(B,22,31)	RS1/16S181J
R 1805	(B,19,34)	RS1/16S181J

R 1806	(B,29,142)	RS1/16S181J
R 1807	(B,26,142)	RS1/16S181J
R 1808	(B,13,31)	RS1/16S181J
R 1809	(B,24,33)	RS1/16S151J
R 1810	(B,25,30)	RS1/16S181J

R 1811	(B,21,35)	RS1/16S181J
R 1812	(B,29,140)	RS1/16S181J
R 1813	(B,26,140)	RS1/16S181J
R 1814	(B,15,31)	RS1/16S181J
R 1815	(B,25,33)	RS1/16S151J

R 1816	(B,25,29)	RS1/16S151J
R 1817	(B,22,35)	RS1/16S151J
R 1818	(B,29,137)	RS1/16S151J
R 1819	(B,26,137)	RS1/16S151J
R 1820	(B,17,31)	RS1/16S151J

R 1821	(B,27,25)	RS1/16S151J
R 1831	(B,33,23)	RS1/16S472J
R 1832	(B,35,23)	RS1/16S472J
R 1834	(B,14,21)	RS1/16S473J

CAPACITORS

C 1802	(B,27,52)	CKSRYF104Z25
C 1811	(A,25,32)	CKSRYF104Z25
C 1812	(A,20,129)	CKSRYF104Z25

Circuit Symbol and No.Part No.**Unit Number:CWX3110****Unit Name:CD Core Unit(S10)**MISCELLANEOUS

IC 201	(A,35,25) IC	UPD63712AGC
IC 301	(A,45,81) IC	BA5835FP
IC 701	(B,53,56) IC	NJM2885DL1-33
Q 101	(B,22,12) Transistor	2SA1577
X 201	(A,45,36) Ceramic Resonator 16.934MHz	CSS1603

S 901	(A,15,44) Switch(HOME)	CSN1067
S 903	(B,53,101) Switch(DSCSNS)	CSN1068
S 904	(B,35,109) Switch(12EJ)	CSN1067
S 905	(B,48,110) Switch(8EJ)	CSN1067

RESISTORS

R 101	(B,26,13)	RS1/10SR2R4J
R 102	(B,28,15)	RS1/10SR2R4J
R 103	(B,29,12)	RS1/10SR2R7J
R 201	(A,58,26)	RS1/16SS102J
R 214	(A,23,28)	RS1/16SS332J

R 215	(A,21,27)	RS1/16SS183J
R 216	(A,24,19)	RS1/16SS122J
R 217	(A,22,15)	RS1/16SS562J
R 218	(A,24,16)	RS1/16SS472J
R 235	(A,27,44)	RS1/16SS103J

R 236	(A,31,46)	RS1/16SS103J
R 301	(A,54,73)	RS1/16SS183J
R 302	(A,54,70)	RS1/16SS822J
R 303	(A,45,70)	RS1/16SS183J
R 304	(A,47,69)	RS1/16SS822J

R 305	(A,34,75)	RS1/16SS183J
R 306	(A,32,69)	RS1/16SS183J
R 307	(A,38,74)	RS1/16SS183J
R 308	(A,36,67)	RS1/16SS183J
R 601	(B,52,43)	RS1/16SS101J

R 602	(B,46,42)	RS1/16SS101J
R 603	(B,48,48)	RS1/16SS0R0J
R 901	(B,48,103)	RS1/16SS104J
R 902	(B,46,105)	RS1/16SS473J
R 903	(B,44,106)	RS1/16SS273J

CAPACITORS

C 103	(B,13,8) 100μF/16V	CCH1504
C 109	(A,34,12)	CKSSYB104K10
C 201	(A,45,19)	CKSSYB104K10
C 202	(A,53,21)	CKSSYB102K50
C 205	(B,37,36) 22μF/6.3V	CCH1507

C 206	(B,40,30)	CKSSYB103K16
C 207	(A,46,30)	CKSSYB104K10
C 209	(A,46,31)	CKSSYB104K10
C 210	(A,41,35)	CKSSYB104K10
C 211	(A,33,35)	CKSSYB104K10

C 213	(A,21,29)	CKSSYB103K16
C 214	(A,23,26)	CKSSYB104K10
C 215	(A,25,23)	CKSSYB104K10
C 216	(A,24,21)	CKSSYB103K16
C 217	(A,21,18)	CCSSCH560J50

	5		6		7		8	
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>					
	C 218	(A,24,14)	CCSSCH5R0C50					
	C 219	(A,28,14)	CKSSYB104K10					
	C 220	(B,27,24)	CKSSYB104K10					
	C 221	(B,41,21)	CKSSYB104K10					
	C 222	(A,35,12)	CKSSYB103K16					
	C 223	(A,37,14)	CCSSCH680J50					
	C 224	(A,45,11)	CCSSCH470J50					
	C 225	(A,46,14)	CKSSYB103K16					
	C 231	(A,30,43)	CKSSYB102K50					
	C 232	(B,38,64)	CKSSYB102K50					
	C 301	(B,37,74) 100μF/16V	CCH1504					
	C 302	(A,54,71)	CKSSYB221K50					
	C 303	(A,45,68)	CKSSYB221K50					
	C 304	(A,33,73)	CKSSYB472K25					
	C 305	(A,36,74)	CKSSYB103K16					
	C 306	(B,45,94)	CKSSYB104K10					
	C 501	(B,45,51)	CKSSYB103K16					
	C 502	(A,61,68)	CKSSYB103K16					
	C 703	(B,47,61)	CKSQYB104K16					
	C 704	(B,54,63)	CKSQYB105K10					

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1647	
M 1	Motor Unit(SPINDLE)	CXC4440	
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933	