


KAC-X41/X600F

EXPLODED VIEW

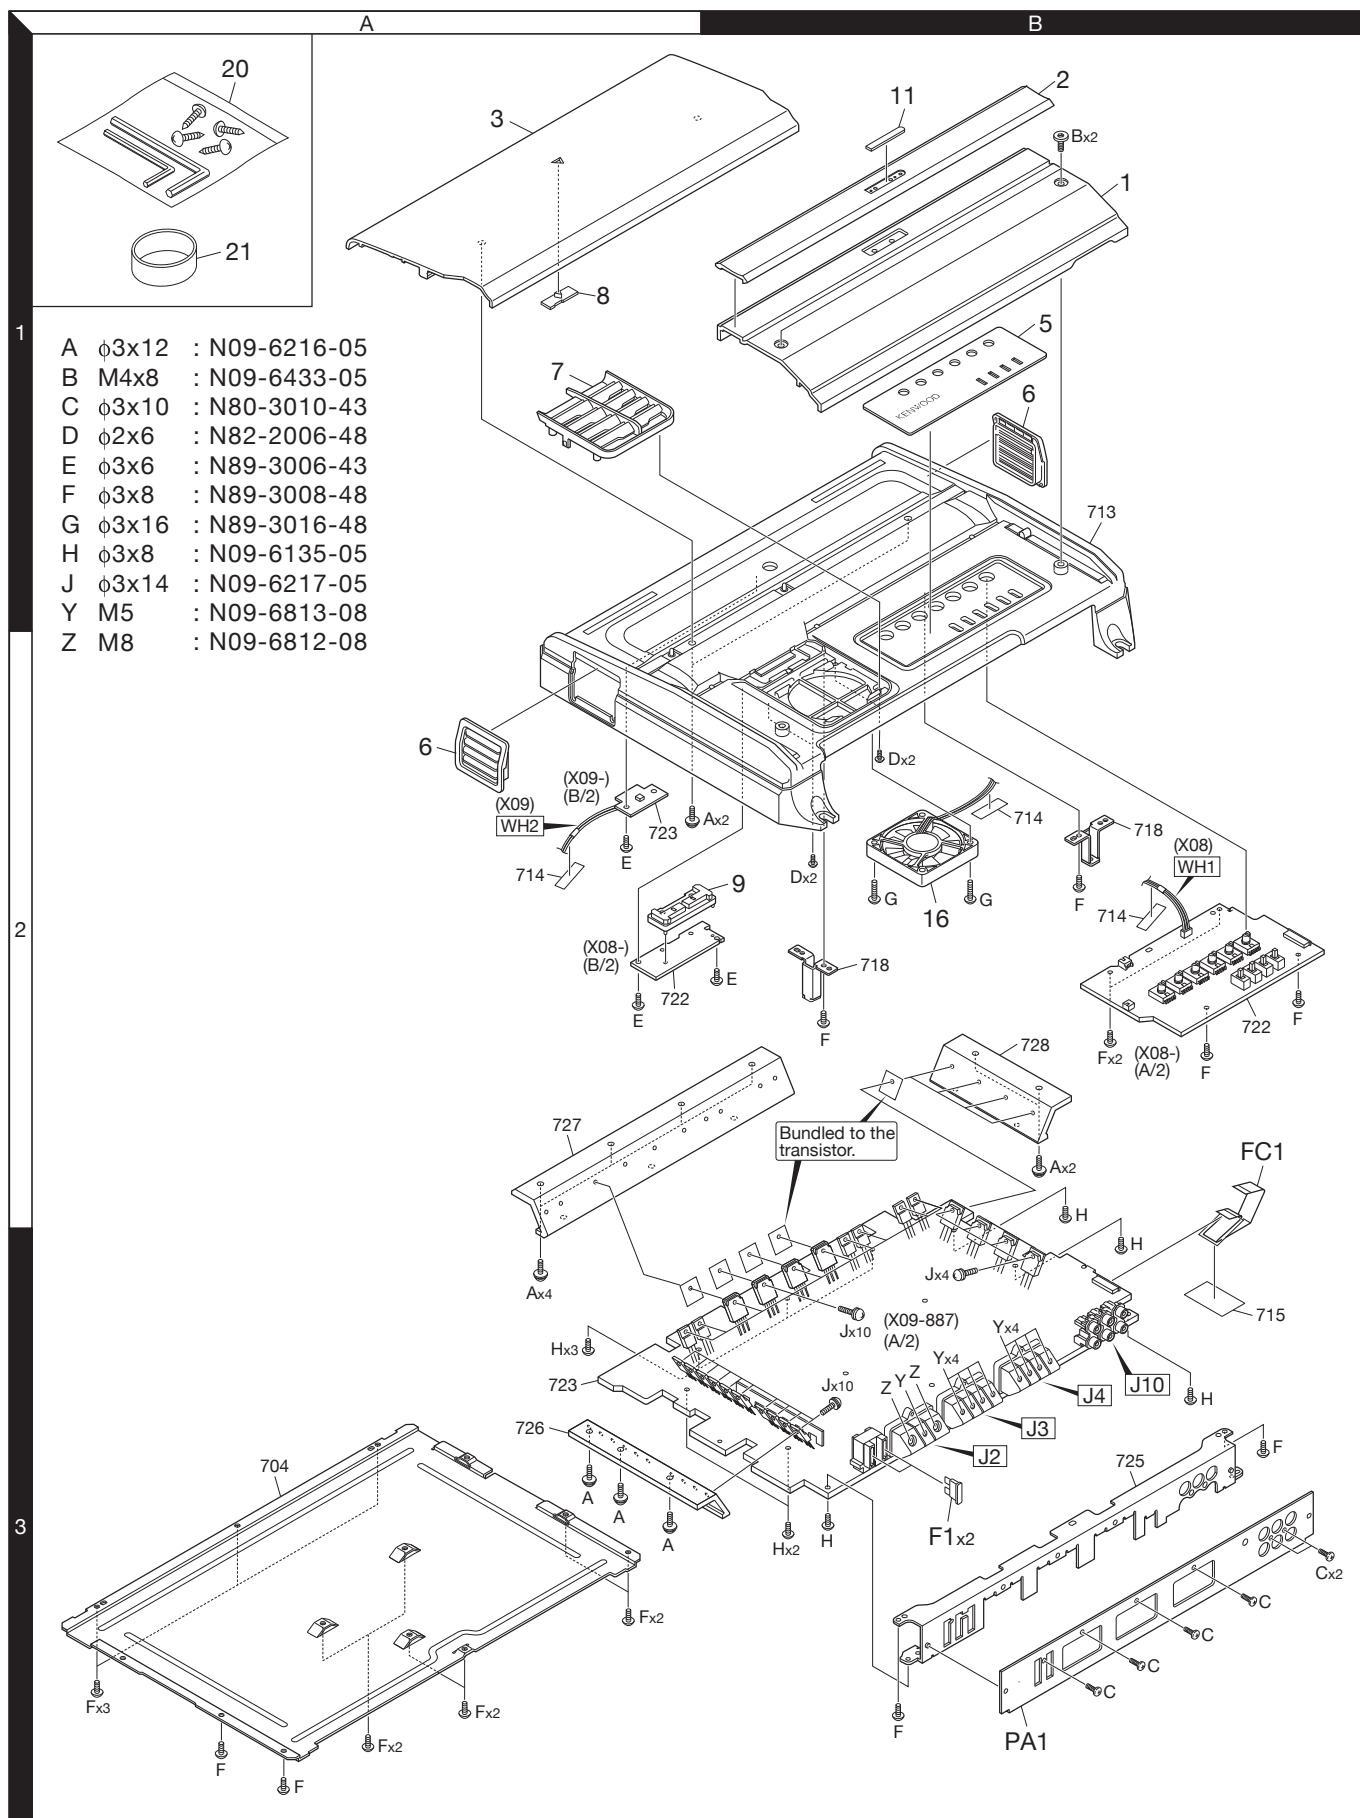

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Ad	New	Parts No.	Description	Destination
KAC-X41/X600F					
1	1B	*	A21-6698-01	DRESSING PANEL	M1
1	1B	*	A21-6699-01	DRESSING PANEL	
2	1B	*	A21-6701-02	DRESSING PANEL	
3	1B	*	A21-6708-01	DRESSING PANEL	
PA1	3B	*	A64-4730-02	PANEL	
5	1B	*	B03-5107-02	DRESSING PLATE	M1
5	1B	*	B03-5108-02	DRESSING PLATE	
6	2A		B07-3197-02	ESCUTCHEON	
7	1A		B07-3208-12	ESCUTCHEON	
8	1A		B19-2424-04	LIGHTING BOARD	
9	2B	*	B19-2524-03	LIGHTING BOARD	K
11	1B		B43-0336-04	BADGE	
-		*	B64-4199-00	INSTRUCTION MANUAL (ENG.FRE.SPA)	
-		*	B64-4200-00	INSTRUCTION MANUAL (ENG.S-CHI.)	
FC1	2B	*	E39-0886-15	FLAT CABLE	
16	2B		F09-2915-05	FAN	K
F1	3B	*	F52-0046-05	FUSE (BLADE TYPE) 40A	
-		*	H54-4551-03	ITEM CARTON CASE	
-		*	H54-4552-03	ITEM CARTON CASE	
20	1A	*	N99-1833-05	SCREW & WRENCH KEY SET	M1
A	3A		N09-6216-05	TAPTITE SCREW (3X12)	
B	1B		N09-6433-05	DRESSED SCREW (M4X8)	
C	3B		N80-3010-43	PAN HEAD TAPTITE SCREW	
D	2B		N82-2006-48	BINDING HEAD TAPTITE SCREW	
E	2A		N89-3006-43	BINDING HEAD TAPTITE SCREW	M1
F	3A		N89-3008-48	BINDING HEAD TAPTITE SCREW	
G	2B		N89-3016-48	BINDING HEAD TAPTITE SCREW	
Y	3B	*	N09-6813-08	SCREW (TERMINAL) M5	
Z	3B	*	N09-6812-08	SCREW (TERMINAL) M8	
21	1A	*	W01-1746-05	ACCESSORIES	
PREAMPLIFIER UNIT (X08-4490-10)					
D1 ,2			B30-1743-05	LED (RED LED)	
C1 -10			CK73GB1H103K	CHIP C 0.010UF K	K
C101,102			CD04AS1V100M	ELECTRO 10UF 35WV	
C103,104			CC73GCH1H470J	CHIP C 47PF J	
C105,106			CD04AS1V100M	ELECTRO 10UF 35WV	
C107,108			CK73GB1H473K	CHIP C 0.047UF K	
C109,110			CK73FB1H334K	CHIP C 0.33UF K	K
C111-114			CD04AS1V100M	ELECTRO 10UF 35WV	
C201,202			CD04AS1V100M	ELECTRO 10UF 35WV	
C203,204			CC73GCH1H470J	CHIP C 47PF J	
C207,208			CK73GB1H473K	CHIP C 0.047UF K	
C209,210			CK73FB1H334K	CHIP C 0.33UF K	K
C211-214			CD04AS1V100M	ELECTRO 10UF 35WV	
C301-304			CK73FB1H334K	CHIP C 0.33UF K	
C305,306			CD04AS1V100M	ELECTRO 10UF 35WV	
C307,308			CC73GCH1H470J	CHIP C 47PF J	
CN1			E41-2202-05	FLAT CABLE CONNECTOR	K
CN2			E41-1699-05	PIN ASSY	
CN3 ,4			E41-1700-05	PIN ASSY	

Ref. No.	Ad	New	Parts No.	Description	Destination
WH1	2B	*	E39-1068-05	WIRING HARNESS	
R101,102			RK73GB2A473J	CHIP R 47K J 1/10W	J
R103,104			RK73GB2A431J	CHIP R 430 J 1/10W	
R105,106			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R107,108			RK73GB2A473J	CHIP R 47K J 1/10W	
R109,110			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R111-120			RK73GB2A103J	CHIP R 10K J 1/10W	J
R121,122			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R123,124			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R125,126			RK73GB2A163J	CHIP R 16K J 1/10W	
R127-130			RK73GB2A473J	CHIP R 47K J 1/10W	
R201,202			RK73GB2A473J	CHIP R 47K J 1/10W	J
R203,204			RK73GB2A431J	CHIP R 430 J 1/10W	
R205,206			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R207,208			RK73GB2A473J	CHIP R 47K J 1/10W	
R209,210			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R211-220			RK73GB2A103J	CHIP R 10K J 1/10W	J
R221,222			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R223,224			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R225,226			RK73GB2A163J	CHIP R 16K J 1/10W	
R227-230			RK73GB2A473J	CHIP R 47K J 1/10W	
R301,302			RK73GB2A222J	CHIP R 2.2K J 1/10W	J
R303,304			RK73GB2A103J	CHIP R 10K J 1/10W	
R305,306			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R307,308			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R311,312			RK73GB2A471J	CHIP R 470 J 1/10W	
R313,314			RK73GB2A222J	CHIP R 2.2K J 1/10W	J
R315-318			RK73GB2A223J	CHIP R 22K J 1/10W	
R319,320			RK73GB2A473J	CHIP R 47K J 1/10W	
VR1 ,2			R31-0238-05	VARIABLE RESISTOR	
VR3			R31-0246-05	VARIABLE RESISTOR	
VR4			R31-0238-05	VARIABLE RESISTOR	J
VR5 ,6			R31-0241-05	VARIABLE RESISTOR	
W301-306			R92-2053-05	CHIP R 0 OHM J 1/8W	
W307			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W308			R92-2053-05	CHIP R 0 OHM J 1/8W	
W309,310			RK73GB2A000J	CHIP R 0.0 J 1/10W	J
W311			R92-2053-05	CHIP R 0 OHM J 1/8W	
W312,313			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W314			R92-2053-05	CHIP R 0 OHM J 1/8W	
W315-317			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W318			R92-2053-05	CHIP R 0 OHM J 1/8W	J
W319-321			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W322			R92-2053-05	CHIP R 0 OHM J 1/8W	
W323-327			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W328-330			R92-2053-05	CHIP R 0 OHM J 1/8W	
W331-333			RK73GB2A000J	CHIP R 0.0 J 1/10W	J
W334			R92-2053-05	CHIP R 0 OHM J 1/8W	
W335,336			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W337			R92-2053-05	CHIP R 0 OHM J 1/8W	
W338			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W339-342			R92-2053-05	CHIP R 0 OHM J 1/8W	J
W343-354			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W355-357			R92-2053-05	CHIP R 0 OHM J 1/8W	

K: X600F (North America) M1: KAC-X41 (Other Areas)

△ Indicates safety critical components.

KAC-X41/X600F

PARTS LIST

PREAMPLIFIER UNIT (X08-4490-10)

Ref. No.	Ad	New	Parts No.	Description	Destination
W358 W359-361 W362 W363,364 W365			RK73GB2A000J R92-2053-05 RK73GB2A000J R92-2053-05 RK73GB2A000J	CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W	
W366,367			R92-2053-05	CHIP R 0 OHM J 1/8W	
S1 ,2 S3 ,4			S62-0879-05 S62-0880-05	SLIDE SWITCH SLIDE SWITCH	
IC1 ,2 IC4 ,5 IC7 -12			BA4560RF BA4560RF BA4560RF	ANALOGUE IC ANALOGUE IC ANALOGUE IC	

AUDIO UNIT (X09-8870-10)

D45			B30-1743-05	LED (RED LED)	
C1 C2 ,3 C4 ,5 C6 ,7 C8 ,9			CD04AU1H100M CD04BJ1H100M CD04BJ1E470M C90-6838-05 CK73GB1H152K	NP ELEC 10UF 50WV ELECTRO 10UF 50WV ELECTRO 47UF 25WV ALUMINIUM ELECTROLYTIC C. CHIP C 1500PF K	
C10 ,11 C12 C13 C14 C15			CD04AY1C222M CK73GB1H152K CD04AU1H100M CK73GB1H152K CK73GB1H104K	ELECTRO 2200UF 16WV CHIP C 1500PF K NP ELEC 10UF 50WV CHIP C 1500PF K CHIP C 0.10UF K	
C16 C17 C18 C19 C20 -22			CD04BJ1E470M CK73GB1H102K CD04BJ1H100M CK73GB1H104K CK73GB1H103K	ELECTRO 47UF 25WV CHIP C 1000PF K ELECTRO 10UF 50WV CHIP C 0.10UF K CHIP C 0.010UF K	
C23 C24 ,25 C26 C27 C28 ,29			CK73GB1H152K CD04BJ1E470M CK73EB1E105K CK73GB1H103K CD04AZ1V222M	CHIP C 1500PF K ELECTRO 47UF 25WV CHIP C 1.0UF K CHIP C 0.010UF K ELECTRO 2200UF 35WV	
C30 -39 C40 ,41 C42 C43 C44			CK73GB1H103K CD04AZ1V222M CD04AY1C222M CK73EB1E105K CD04BJ1H100M	CHIP C 0.010UF K ELECTRO 2200UF 35WV ELECTRO 2200UF 16WV CHIP C 1.0UF K ELECTRO 10UF 50WV	
C45 ,46 C47 -49 C50 ,51 C52 C100			CC73GCH1H101J CK73GB1H104K CD04BJ1H100M CK73GB1H103K CC73GCH1H101J	CHIP C 100PF J CHIP C 0.10UF K ELECTRO 10UF 50WV CHIP C 0.010UF K CHIP C 100PF J	
C101,102 C103,104 C105-108 C109,110 C111,112			CK73GB1H102K CD04BJ1H100M CC73GCH1H150J CC73GCH1H101J CD04BJ1E470M	CHIP C 1000PF K ELECTRO 10UF 50WV CHIP C 15PF J CHIP C 100PF J ELECTRO 47UF 25WV	
C117,118 C119,120 C121,122 C123,124 C128			CC73GCH1H101J CC73GCH1H471J CK73GB1H102K CD04BJ1H220M CK73GB1H103K	CHIP C 100PF J CHIP C 470PF J CHIP C 1000PF K ELECTRO 22UF 50WV CHIP C 0.010UF K	

Ref. No.	Ad	New	Parts No.	Description	Destination
C201,202 C203,204 C205,206 C207,208 C209,210			CD04BJ1H100M CC73GCH1H471J CK73GB1H472K CD04BJ1E470M CC73GCH1H471J	ELECTRO 10UF 50WV CHIP C 470PF J CHIP C 4700PF K ELECTRO 47UF 25WV CHIP C 470PF J	
C211-214 C215,216 C217,218 C219-222 C223,224			CC73GCH1H101J CC73GCH1H050C CD04BJ1H100M CK73GB1H102K CK73GB1H473K	CHIP C 100PF J CHIP C 5.0PF C ELECTRO 10UF 50WV CHIP C 1000PF K CHIP C 0.047UF K	
C225,226 C227,228 C229,230 C259,260 C301,302			CK73GB1H104K CC73GCH1H030C CC73GCH1H101J CC73GCH1H470J CK73GB1H102K	CHIP C 0.10UF K CHIP C 3.0PF C CHIP C 100PF J CHIP C 47PF J CHIP C 1000PF K	
C303,304 C305-308 C309,310 C311,312 C317,318			CD04BJ1H100M CC73GCH1H150J CC73GCH1H101J CD04BJ1E470M CC73GCH1H101J	ELECTRO 10UF 50WV CHIP C 15PF J CHIP C 100PF J ELECTRO 47UF 25WV CHIP C 100PF J	
C401,402 C403,404 C405,406 C407,408 C409,410			CD04BJ1H100M CC73GCH1H471J CK73GB1H472K CD04BJ1E470M CC73GCH1H471J	ELECTRO 10UF 50WV CHIP C 470PF J CHIP C 4700PF K ELECTRO 47UF 25WV CHIP C 470PF J	
C411-414 C415,416 C417,418 C419-422 C423,424			CC73GCH1H101J CC73GCH1H050C CD04BJ1H100M CK73GB1H102K CK73GB1H473K	CHIP C 100PF J CHIP C 5.0PF C ELECTRO 10UF 50WV CHIP C 1000PF K CHIP C 0.047UF K	
C425,426 C427,428 C459,460 C601 C602			CC73GCH1H030C CC73GCH1H101J CC73GCH1H470J CD04BJ1V330M CD04BJ1H100M	CHIP C 3.0PF C CHIP C 100PF J CHIP C 47PF J ELECTRO 33UF 35WV ELECTRO 10UF 50WV	
C603 C604 C606 C607 C608			CK73GB1H104K CD04BJ1E470M CD04BJ1A101M CK73GB1H103K CD04BJ1A221M	CHIP C 0.10UF K ELECTRO 47UF 25WV ELECTRO 100UF 10WV CHIP C 0.010UF K ELECTRO 220UF 10WV	
C609,610 C611,612 C613 C616 C617			CK73GB1H103K CD04BJ1H100M CK73GB1H104K CD04BJ1H100M CK73GB1H104K	CHIP C 0.010UF K ELECTRO 10UF 50WV CHIP C 0.10UF K ELECTRO 10UF 50WV CHIP C 0.10UF K	
CN3 J2 J3 ,4 J10 WH2		*	E41-2202-05 E70-0854-05 E70-0853-05 E63-0922-05 E39-0710-05	FLAT CABLE CONNECTOR SCREW TERMINAL BOARD SCREW TERMINAL BOARD PIN JACK WIRING HARNESS	
CN4		*	J13-0611-05	FUSE HOLDER	
L1 L2 L3			L33-2444-05 L19-0771-05 L33-2444-05	CHOKE COIL 21UH TRANSFORMER FOR CONVERTER CHOKE COIL 21UH	

K: X600F (North America) M1: KAC-X41 (Other Areas)

△Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8870-10)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
L5			L19-0775-05	TRANSFORMER FOR CONVERTER		R77 -80			RK73GB2A472J	CHIP R 4.7K J 1/10W	
H	3B		N09-6135-05	TAPTITE SCREW (3X8 BT)		R81 ,82			RK73GB2A103J	CHIP R 10K J 1/10W	
J	3B		N09-6217-05	TAPTITE SCREW (3X14)		R83 ,84			RK73GB2A823J	CHIP R 82K J 1/10W	
CP1 -4		*	R90-1561-05	MULTIPLE RESISTOR		R85 ,86			RK73GB2A470J	CHIP R 47 J 1/10W	
R1 ,2			RK73GB2A101J	CHIP R 100 J 1/10W		R87 ,88			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R3 ,4			RK73GB2A470J	CHIP R 47 J 1/10W		R89 ,90			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R5 ,6			RK73GB2A331J	CHIP R 330 J 1/10W		R91			RD14BB2C392J	RD 3.9K J 1/6W	
R7 -9			RK73PB2H100J	CHIP R 10 J 1/2W		R92			RK73GB2A333J	CHIP R 33K J 1/10W	
R10 ,11			RK73GB2A472J	CHIP R 4.7K J 1/10W		R93			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R12 -15			RK73GB2A470J	CHIP R 47 J 1/10W		R94			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R16 ,17			RK73GB2A152J	CHIP R 1.5K J 1/10W		R95			RK73GB2A101J	CHIP R 100 J 1/10W	
R18 ,19			RK73GB2A333J	CHIP R 33K J 1/10W		R96			RK73GB2A223J	CHIP R 22K J 1/10W	
R20			RK73GB2A334J	CHIP R 330K J 1/10W		R97 ,98			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W		R99			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R22			RK73PB2H100J	CHIP R 10 J 1/2W		R100-102			RD14BB2C102J	RD 1.0K J 1/6W	
R23			RK73EB2E153J	CHIP R 15K J 1/4W		R103,104			RK73GB2A103J	CHIP R 10K J 1/10W	
R24			RK73GB2A103J	CHIP R 10K J 1/10W		R105,106			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W		R107,108			RK73GB2A103J	CHIP R 10K J 1/10W	
R26			RK73GB2A472J	CHIP R 4.7K J 1/10W		R109,110			RK73GB2A123J	CHIP R 12K J 1/10W	
R27			RK73GB2A163J	CHIP R 16K J 1/10W		R111-118			RK73GH2A103D	CHIP R 10K D 1/10W	
R28			RK73GB2A104J	CHIP R 100K J 1/10W		R119,120			RK73GB2A301J	CHIP R 300 J 1/10W	
R29 ,30			RK73GB2A101J	CHIP R 100 J 1/10W		R121,122			RK73GB2A223J	CHIP R 22K J 1/10W	
R31			RK73GB2A302J	CHIP R 3.0K J 1/10W		R123			RK73GB2A683J	CHIP R 68K J 1/10W	
R32			RK73GB2A821J	CHIP R 820 J 1/10W		R124			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R33			RK73GB2A243J	CHIP R 24K J 1/10W		R125			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R34			RK73GB2A562J	CHIP R 5.6K J 1/10W		R126			RK73GB2A221J	CHIP R 220 J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W		R127-133			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R36			RK73GB2A202J	CHIP R 2.0K J 1/10W		R134,135			RK73GB2A473J	CHIP R 47K J 1/10W	
R37			RK73GB2A474J	CHIP R 470K J 1/10W		R201,202			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A562J	CHIP R 5.6K J 1/10W		R203,204			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R39			RK73GB2A103J	CHIP R 10K J 1/10W		R205,206			RK73GB2A473J	CHIP R 47K J 1/10W	
R40			RK73PB2H100J	CHIP R 10 J 1/2W		R207,208			RK73GB2A153J	CHIP R 15K J 1/10W	
R41			RK73EB2E153J	CHIP R 15K J 1/4W		R209-212			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R42 -44			RK73GB2A103J	CHIP R 10K J 1/10W		R213,214			RK73GB2A101J	CHIP R 100 J 1/10W	
R45			RK73GB2A152J	CHIP R 1.5K J 1/10W		R215,216			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R46 ,47			RK73GB2A163J	CHIP R 16K J 1/10W		R217,218			RK73GB2A153J	CHIP R 15K J 1/10W	
R48			RK73GB2A152J	CHIP R 1.5K J 1/10W		R219,220			RK73GB2A101J	CHIP R 100 J 1/10W	
R49 -51			RK73GB2A103J	CHIP R 10K J 1/10W		R221,222			RK73EB2E752J	CHIP R 7.5K J 1/4W	
R52			RK73GB2A473J	CHIP R 47K J 1/10W		R223-226			RK73GB2A151J	CHIP R 150 J 1/10W	
R53			RK73GB2A683J	CHIP R 68K J 1/10W		R227,228			RK73GB2A473J	CHIP R 47K J 1/10W	
R54			RK73GB2A823J	CHIP R 82K J 1/10W		R229,230			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R55 -57			RK73GB2A103J	CHIP R 10K J 1/10W		R235-238			RK73GB2A101J	CHIP R 100 J 1/10W	
R58 ,59			RK73GB2A470J	CHIP R 47 J 1/10W		R239-242			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R60 ,61			RK73GB2A102J	CHIP R 1.0K J 1/10W		R243,244			RK73GB2A471J	CHIP R 470 J 1/10W	
R62			RK73GB2A103J	CHIP R 10K J 1/10W		R245,246			RK73GB2A331J	CHIP R 330 J 1/10W	
R63 ,64			RK73EB2E272J	CHIP R 2.7K J 1/4W		R247,248			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R65			RK73EB2E472J	CHIP R 4.7K J 1/4W		R249-252			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R66			RK73EB2E682J	CHIP R 6.8K J 1/4W		R257,258			RK73PB2H100J	CHIP R 10 J 1/2W	
R67 ,68			RK73GB2A472J	CHIP R 4.7K J 1/10W		R259,260			RK73GB2A103J	CHIP R 10K J 1/10W	
R69 ,70			RK73GB2A103J	CHIP R 10K J 1/10W		R262-264			RK73GB2A470J	CHIP R 47 J 1/10W	
R71 ,72			RK73GB2A222J	CHIP R 2.2K J 1/10W		R265-268			RK73GB2A103J	CHIP R 10K J 1/10W	
R73 ,74			RK73GB2A472J	CHIP R 4.7K J 1/10W		R269,270			RK73GB2A203J	CHIP R 20K J 1/10W	
R75 ,76			RK73GB2A223J	CHIP R 22K J 1/10W		R271 ,272			RK73GB2A331J	CHIP R 330 J 1/10W	
						R273			RK73GB2A470J	CHIP R 47 J 1/10W	
						R301,302			RD14BB2C102J	RD 1.0K J 1/6W	

K: X600F (North America) M1: KAC-X41 (Other Areas)

△ Indicates safety critical components.

KAC-X41/X600F

PARTS LIST

AUDIO UNIT (X09-8870-10)

Ref. No.	Added	New	Parts No.	Description	Destination
R303,304 R305,306 R307,308 R309,310 R311-318			RK73GB2A103J RK73GB2A472J RK73GB2A103J RK73GB2A123J RK73GH2A103D	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 12K J 1/10W CHIP R 10K D 1/10W	
R401,402 R403,404 R405,406 R407,408 R409-412			RK73GB2A103J RK73GB2A562J RK73GB2A473J RK73GB2A153J RK73GB2A152J	CHIP R 10K J 1/10W CHIP R 5.6K J 1/10W CHIP R 47K J 1/10W CHIP R 15K J 1/10W CHIP R 1.5K J 1/10W	
R413,414 R415,416 R417,418 R419,420 R421,422			RK73GB2A101J RK73GB2A122J RK73GB2A153J RK73GB2A101J RK73EB2E752J	CHIP R 100 J 1/10W CHIP R 1.2K J 1/10W CHIP R 15K J 1/10W CHIP R 100 J 1/10W CHIP R 7.5K J 1/4W	
R423-426 R427,428 R429,430 R435-438 R439-442			RK73GB2A151J RK73GB2A473J RK73GB2A242J RK73GB2A101J RK73GB2A102J	CHIP R 150 J 1/10W CHIP R 47K J 1/10W CHIP R 2.4K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R443,444 R445,446 R447,448 R449-452 R457,458			RK73GB2A471J RK73GB2A331J RK73GB2A102J RK73GB2A182J RK73PB2H100J	CHIP R 470 J 1/10W CHIP R 330 J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.8K J 1/10W CHIP R 10 J 1/2W	
R459,460 R461-464 R465-468 R469,470 R601			RK73GB2A103J RK73GB2A470J RK73GB2A103J RK73GB2A203J RK73GB2A103J	CHIP R 10K J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W CHIP R 20K J 1/10W CHIP R 10K J 1/10W	
R602 R603 R604 R605 R606			RK73EB2E152J RK73GB2A100J RK73GB2A103J RK73GB2A333J RK73GB2A103J	CHIP R 1.5K J 1/4W CHIP R 10 J 1/10W CHIP R 10K J 1/10W CHIP R 33K J 1/10W CHIP R 10K J 1/10W	
R607 R608 R609 R610 R611,612			RK73GB2A472J RK73EB2E153J RK73GB2A473J RK73GB2A303J RK73GB2A362J	CHIP R 4.7K J 1/10W CHIP R 15K J 1/4W CHIP R 47K J 1/10W CHIP R 30K J 1/10W CHIP R 3.6K J 1/10W	
R613 R614 R615 R616 R617			RK73GB2A152J RK73GB2A332J RK73GB2A392J RK73GB2A472J RK73GB2A473J	CHIP R 1.5K J 1/10W CHIP R 3.3K J 1/10W CHIP R 3.9K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W	
R618 R619 R620-623 R624 R625			RK73GB2A103J RK73EB2E153J RK73GB2A473J RK73EB2E4R7J RK73GB2A681J	CHIP R 10K J 1/10W CHIP R 15K J 1/4W CHIP R 47K J 1/10W CHIP R 4.7 J 1/4W CHIP R 680 J 1/10W	
R626 R627 R628 R629 R630			RK73GB2A223J RK73GB2A472J RK73GB2A222J RK73GB2A472J RK73GB2A563J	CHIP R 22K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W CHIP R 56K J 1/10W	

Ref. No.	Added	New	Parts No.	Description	Destination
R631 R632 R633-635 R636 R637			RK73GB2A102J RK73GB2A473J RK73GB2A103J RK73GB2A332J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 3.3K J 1/10W CHIP R 10K J 1/10W	
R638 R639 R640 R641 R642			RK73GB2A563J RK73GB2A473J RK73GB2A153J RK73GB2A471J RK73GB2A103J	CHIP R 56K J 1/10W CHIP R 47K J 1/10W CHIP R 15K J 1/10W CHIP R 470 J 1/10W CHIP R 10K J 1/10W	
R643 R644 R645 R646-648 R649,650			RK73GB2A100J RK73GB2A473J RK73EB2E152J RK73GB2A223J RK73GB2A473J	CHIP R 10 J 1/10W CHIP R 47K J 1/10W CHIP R 1.5K J 1/4W CHIP R 22K J 1/10W CHIP R 47K J 1/10W	
R651,652 R653 R654 R655 R656			RK73GB2A104J RK73GB2A183J RK73GB2A272J RK73GB2A101J RK73GB2A102J	CHIP R 100K J 1/10W CHIP R 18K J 1/10W CHIP R 2.7K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R659 R660 R661 R662 R663,664			RK73GB2A183J RK73GB2A103J RK73GB2A100J RK73GB2A470J RK73GB2A103J	CHIP R 18K J 1/10W CHIP R 10K J 1/10W CHIP R 10 J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W	
R665 R666 R667 R668 R669			RK73GB2A682J RK73GB2A153J RK73GB2A682J RK73GB2A153J RK73GB2A333J	CHIP R 6.8K J 1/10W CHIP R 15K J 1/10W CHIP R 6.8K J 1/10W CHIP R 15K J 1/10W CHIP R 33K J 1/10W	
R670 R671 R672 VR1 -4 W301			RK73GB2A682J RK73GB2A223J RK73EB2E271J R32-0340-05 R92-2053-05	CHIP R 6.8K J 1/10W CHIP R 22K J 1/10W CHIP R 270 J 1/4W SEMI FIXED VARIABLE R 220 CHIP R 0 OHM J 1/8W	
W302-310 W311-314 W315-318 W319-322 W324			RK73GB2A000J R92-2053-05 RK73GB2A000J R92-2053-05 R92-2053-05	CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W	
W325 W326,327 W328 W329 W330			RK73GB2A000J R92-2053-05 RK73GB2A000J R92-2053-05 RK73GB2A000J	CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W	
W331,332 W333 W334-339 W340 W341-345			R92-2053-05 RK73GB2A000J R92-2053-05 RK73GB2A000J R92-2053-05	CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W	
W346 W347 W348-352 W353,354 W355-360			RK73GB2A000J R92-2053-05 RK73GB2A000J R92-2053-05 RK73GB2A000J	CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0.0 J 1/10W	

K: X600F (North America) M1: KAC-X41 (Other Areas)

△Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8870-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
W361,362			R92-2053-05	CHIP R 0 OHM J 1/8W		D211			LM1MA142WK-G	DIODE	
W363-365			RK73GB2A000J	CHIP R 0.0 J 1/10W		D212,213			DA204U	DIODE	
W366			R92-2053-05	CHIP R 0 OHM J 1/8W		D401,402			DA204U	DIODE	
W367			RK73GB2A000J	CHIP R 0.0 J 1/10W		D601			LM1MA142WK-G	DIODE	
W368			R92-2053-05	CHIP R 0 OHM J 1/8W		D602			LM1MA142WA-G	DIODE	
W369-378			RK73GB2A000J	CHIP R 0.0 J 1/10W		D603			LM1MA142WK-G	DIODE	
W379			R92-2053-05	CHIP R 0 OHM J 1/8W		D604			UDZW10 (B)	ZENER DIODE	
W380-385			RK73GB2A000J	CHIP R 0.0 J 1/10W		D606			UDZW15 (B)	ZENER DIODE	
W386			R92-2053-05	CHIP R 0 OHM J 1/8W		D609			UDZW12 (B)	ZENER DIODE	
W387-392			RK73GB2A000J	CHIP R 0.0 J 1/10W		D613			1SS355	DIODE	
W393-396			R92-2053-05	CHIP R 0 OHM J 1/8W		D614			UDZW10 (B)	ZENER DIODE	
W397-400			RK73GB2A000J	CHIP R 0.0 J 1/10W		D616			1SS355	DIODE	
W401-404			R92-2053-05	CHIP R 0 OHM J 1/8W		IC1 -4			BA4560RF	ANALOGUE IC	
W405-409			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC5			BA2903F	ANALOGUE IC	
W410			R92-2053-05	CHIP R 0 OHM J 1/8W		IC10			BA4560RF	ANALOGUE IC	
D1			1N5406-TSC	DIODE		IC13			TL494IDR	ANALOGUE IC	
D2 ,3			UDZW5.1 (B)	ZENER DIODE		Q1 ,2			STP60NF06FP	FET	
D4			FCH10A20	DIODE		Q3			2SD2012-F	TRANSISTOR	
D5			FRH10A20	DIODE		Q4			2SB1375-F	TRANSISTOR	
D6			LM1MA142WK-G	DIODE		Q5 ,6			STP60NF06FP	FET	
D7 -9			1SS355	DIODE		Q7 ,8			2SC4097	TRANSISTOR	
D10			LM1MA142WK-G	DIODE		Q9 ,10			2SA1577	TRANSISTOR	
D11			1SS355	DIODE		Q11 ,12			DTA114EUA	DIGITAL TRANSISTOR	
D12			FCH20A15	DIODE		Q13 ,14			STP60NF06FP	FET	
D13			FRH20A15	DIODE		Q15			2SA1576A (R,S)	TRANSISTOR	
D14			FCH10A20	DIODE		Q16			2SC4081	TRANSISTOR	
D15			FRH10A20	DIODE		Q17 ,18			2SA1576A (R,S)	TRANSISTOR	
D16			AM01ZNF	DIODE		Q19			DTC114EUA	DIGITAL TRANSISTOR	
D17 ,18			UDZW15 (B)	ZENER DIODE		Q20 ,21			STP60NF06FP	FET	
D19 ,20			LM1MA142WK-G	DIODE		Q22			2SC4097	TRANSISTOR	
D21 ,22			LM1MA142WA-G	DIODE		Q23			2SA1577	TRANSISTOR	
D23			1SS355	DIODE		Q24			2SC4097	TRANSISTOR	
D24			UDZW16 (B)	ZENER DIODE		Q25			2SA1577	TRANSISTOR	
D27			UDZW6.8 (B)	ZENER DIODE		Q26			DTC114EUA	DIGITAL TRANSISTOR	
D28			1N5406-TSC	DIODE		Q27			2SC2713-F	TRANSISTOR	
D29			1SS355	DIODE		Q28			2SA1163-F	TRANSISTOR	
D30			LM1MA142WK-G	DIODE		Q29 ,30			2SC4097	TRANSISTOR	
D31			UDZW5.1 (B)	ZENER DIODE		Q31 ,32			2SA1576A (R,S)	TRANSISTOR	
D32			UMZ6.8N	ZENER DIODE		Q33			DTA114EUA	DIGITAL TRANSISTOR	
D33			1N5406-TSC	DIODE		Q34			2SC4081	TRANSISTOR	
D34			LM1MA142WK-G	DIODE		Q35			2SA1163-F	TRANSISTOR	
D35			LM1MA142WA-G	DIODE		Q36 ,37			2SC4081	TRANSISTOR	
D36			LM1MA142WK-G	DIODE		Q38			2SA1576A (R,S)	TRANSISTOR	
D37			LM1MA142WA-G	DIODE		Q39 ,40			2SK879-F (GR)	FET	
D38 -41			UDZW12 (B)	ZENER DIODE		Q41			2SC2235-F	TRANSISTOR	
D42 ,43			UDZW15 (B)	ZENER DIODE		Q42			2SA965-F	TRANSISTOR	
D101-104			1SS355	DIODE		Q43 ,44			2SK879-F (GR)	FET	
D105			LM1MA142WK-G	DIODE		Q45			2SC4081	TRANSISTOR	
D106			LM1MA142WA-G	DIODE		Q46 ,47			2SA1576A (R,S)	TRANSISTOR	
D107-110			1SS355	DIODE		Q48 -50			2SC4081	TRANSISTOR	
D111			LM1MA142WK-G	DIODE		Q51			DTA114EUA	DIGITAL TRANSISTOR	
D201-204			1SS355	DIODE		Q101,102			2SC4081	TRANSISTOR	
D205			LM1MA142WK-G	DIODE		Q103-106			2SA1576A (R,S)	TRANSISTOR	
D206			LM1MA142WA-G	DIODE		Q107-110			2SC2235-F	TRANSISTOR	
D207-210			1SS355	DIODE		Q111,112			2SA965-F	TRANSISTOR	

K: X600F (North America) M1: KAC-X41 (Other Areas)

△ Indicates safety critical components.

KAC-X41/X600F

PARTS LIST

AUDIO UNIT (X09-8870-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q115,116			2SC4081	TRANSISTOR							
Q117,118			2SA1163-F	TRANSISTOR							
Q123,124			TRAIT9N	TRANSISTOR							
Q125,126			TRAIT9P	TRANSISTOR							
Q127,128			2SC4081	TRANSISTOR							
Q131,132			2SC4081	TRANSISTOR							
Q201,202			2SC4081	TRANSISTOR							
Q203-206			2SA1576A (R,S)	TRANSISTOR							
Q207-210			2SC2235-F	TRANSISTOR							
Q211,212			2SA965-F	TRANSISTOR							
Q215,216			2SC4081	TRANSISTOR							
Q217,218			2SA1163-F	TRANSISTOR							
Q223,224			TRAIT9N	TRANSISTOR							
Q225,226			TRAIT9P	TRANSISTOR							
Q227,228			2SC4081	TRANSISTOR							
Q231,232			2SC4081	TRANSISTOR							
Q601			2SA1576A (R,S)	TRANSISTOR							
Q602			2SC4097	TRANSISTOR							
Q603			2SA1576A (R,S)	TRANSISTOR							
Q604			2SB1241	TRANSISTOR							
Q605,606			2SC4081	TRANSISTOR							
Q607			2SD1863	TRANSISTOR							
Q608			2SA1576A (R,S)	TRANSISTOR							
Q609			2SC4081	TRANSISTOR							
Q610			2SC2713-F	TRANSISTOR							
Q611-613			2SC4081	TRANSISTOR							
Q614,615			2SA1576A (R,S)	TRANSISTOR							
Q616			2SC4081	TRANSISTOR							
Q617			2SA1576A (R,S)	TRANSISTOR							
Q618			2SC4081	TRANSISTOR							
TH2 ,3			NCP18WB473J0S	THERMISTOR							