


EXPLODED VIEW (CD MECHANISM)

- A : N09-6108-15
B : N09-6426-15+
C : N09-6735-05
D : N09-6737-15
E : N09-6738-15
F : N19-2335-14
G : N35-2003-48
H : N39-1720-48



Parts with the exploded numbers larger than 700 are not supplied.

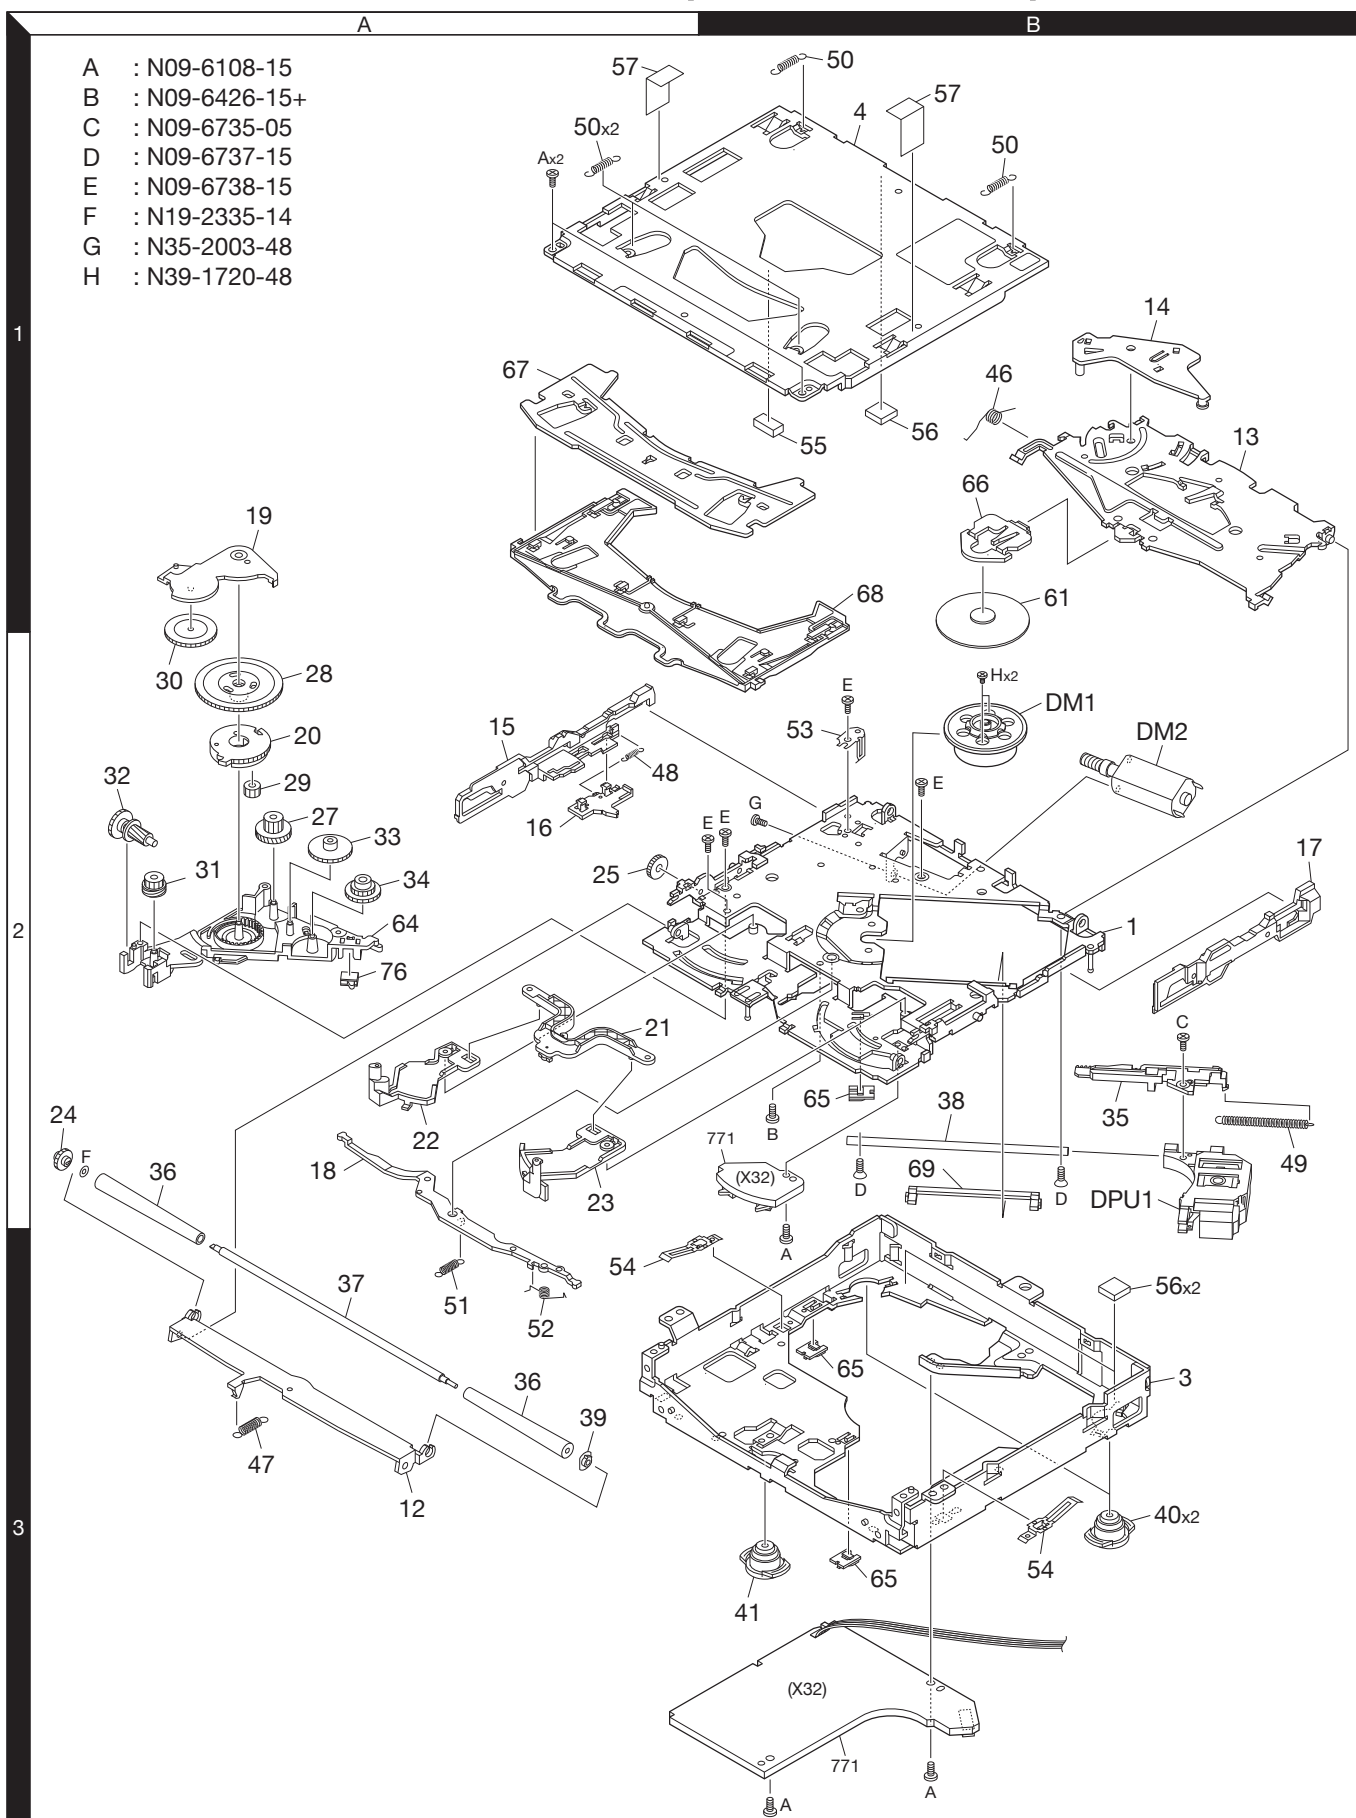

33

KDC-MP142/MP142CR/MP242/MP243/MP243SW
KDC-MP3043/MP343/MP343S/MP443

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP142/MP142CR/MP242/MP243/MP243SW KDC-MP3043/MP343/MP343S/MP443					
201	1C		A02-2755-13	PLASTIC CABINET ASSY	M1M2M3
201	1C		A02-2755-13	PLASTIC CABINET ASSY	M4M5M6
204	2C	*	A22-3199-03	SUB PANEL ASSY	
205	3D	*	A40-1359-01	BOTTOM PLATE	
206	2C	*	A46-1881-01	REAR COVER	
207	1D	*	A52-1107-01	TOP COVER	
PA1	3C	*	A64-4645-02	PANEL ASSY	K
PA1	3C	*	A64-4646-02	PANEL ASSY	K1
PA1	3C	*	A64-4647-02	PANEL ASSY	K2
PA1	3C	*	A64-4648-02	PANEL ASSY	M1
PA1	3C	*	A64-4649-02	PANEL ASSY	M2
PA1	3C	*	A64-4650-02	PANEL ASSY	M3
PA1	3C	*	A64-4651-02	PANEL ASSY	M4
PA1	3C	*	A64-4652-02	PANEL ASSY	M5
PA1	3C	*	A64-4653-02	PANEL ASSY	M6
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	K1K2M3
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	M4M5
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	KM1
-		*	B64-4211-00	INST. MANUAL (ENG.FRE.SPA.)	KK1K2
-		*	B64-4213-00	INST. MANUAL (ENG.ARA.)	M1M2M3
-		*	B64-4213-00	INST. MANUAL (ENG.ARA.)	M4M5M6
211	1C	*	B07-3270-01	ESCUTCHEON	KK1K2
211	1C	*	B07-3270-01	ESCUTCHEON	M1M2M3
211	1C	*	B07-3270-01	ESCUTCHEON	M6
211	1C	*	B07-3271-01	ESCUTCHEON (HOT RUNNER)	M4M5
212	3C	*	B10-5159-01	FRONT GLASS	K
212	3C	*	B10-5160-01	FRONT GLASS	K1
212	3C	*	B10-5161-01	FRONT GLASS	K2
212	3C	*	B10-5162-01	FRONT GLASS	M1
212	3C	*	B10-5163-01	FRONT GLASS	M2
212	3C	*	B10-5164-01	FRONT GLASS	M3
212	3C	*	B10-5165-01	FRONT GLASS	M4M5
212	3C	*	B10-5166-01	FRONT GLASS	M6
213	3C	*	B19-2513-03	LIGHTING BOARD	
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C	*	D10-7049-04	LEVER	
224	2C		D21-2329-04	SHAFT	
225	3C	*	E29-2127-02	CONDUCTIVE RUBBER	
228	2D		E30-6229-05	CORD WITH PINPLUG	KM1
DC1	1C		E30-6767-05	DC CORD	M1M2M3
DC1	1C		E30-6767-05	DC CORD	M4M5M6
DC1	1C		E30-6798-05	DC CORD	KK1K2
FC1	2D		E39-1017-05	FLAT CABLE	
231	2D	*	F11-1870-03	SHIELD COVER	
233	2D		F29-0626-04	INSULATING COVER	KM1
F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING (REL)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-4430-03	ITEM CARTON CASE	K
-		*	H54-4431-03	ITEM CARTON CASE	K1
-		*	H54-4432-03	ITEM CARTON CASE	K2
-		*	H54-4435-03	ITEM CARTON CASE	M1
-		*	H54-4436-03	ITEM CARTON CASE	M2
-		*	H54-4437-03	ITEM CARTON CASE	M3
-		*	H54-4438-03	ITEM CARTON CASE	M4
-		*	H54-4439-03	ITEM CARTON CASE	M5
-		*	H54-4440-03	ITEM CARTON CASE	M6
241	3C	*	J19-7230-01	HOLDER	
243	1C	*	J22-0789-03	MOUNTING HARDWARE ASSY	
251	3C	*	K24-4955-04	PUSH KNOB (EJECT)	
252	3C	*	K24-4956-03	PUSH KNOB (FM)	
253	3C	*	K24-4957-03	PUSH KNOB (AM)	
254	3C	*	K24-4958-03	PUSH KNOB (DISP)	
255	3C	*	K24-4959-04	PUSH KNOB (SEARCH)	
256	3C	*	K24-4960-03	PUSH KNOB (SRC)	
257	3C	*	K24-4961-04	PUSH KNOB (RELEASE)	
258	3C	*	K25-1937-02	PUSH KNOB (PRESET)	
261	3C	*	K28-0337-04	KNOB ASSY (VOL)	
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	
264	1C		N99-1757-15	SCREW SET	
A	2C		N24-3015-48	E TYPE RETAINING RING	
B	3D		N35-2610-48	BINDING HEAD MACHINE SCREW	
C	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
E	2D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
F	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
266	1C		W01-1710-05	CARRYING CASE	KK1
DME1	1D	*	X92-6320-00	MECHANISM ASSY (DXM-9B10W)	
SWITCH UNIT (X16-646x-xx)					
D1 -14			B30-1779-05	LED (1608,SR)	K1K2M1
D1 -14			B30-1779-05	LED (1608,SR)	M2M3M5
D1 -14			B30-1779-05	LED (1608,SR)	M6
D1 -17			B30-1780-05	LED (1608,PG)	M4
D1 -8			B30-1779-05	LED (1608,SR)	K
D9 -14			B30-1781-05	LED (1608,BLUE)	K
D21			B30-1779-05	LED (1608,SR)	
C11			CK73GB1A105K	CHIP C 1.0UF K	
C12			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1A105K	CHIP C 1.0UF K	
C51 ,52			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0852-05	RECTANGULAR PLUG	
J2			E11-0654-05	3.5D PHONE JACK	
CP11			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R11			RK73GB2A473J	CHIP R 47K J 1/10W	
R12			RK73GB2A221J	CHIP R 220 J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R15			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	

K: KDC-MP242 **K1:** KDC-MP142CR **K2:** KDC-MP142 **M1:** KDC-MP443 **M2:** KDC-MP243
M3: KDC-MP3043 **M4:** KDC-MP343 **M5:** KDC-MP343S **M6:** KDC-MP243SW

△Indicates safety critical compo nents.

PARTS LIST

SWITCH UNIT (X16-646x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R22			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73FB2B751J	CHIP R 750 J 1/8W	
R32 ,33			RK73FB2B471J	CHIP R 470 J 1/8W	
R34 -36			RK73FB2B561J	CHIP R 560 J 1/8W	K
R34 -36			RK73FB2B751J	CHIP R 750 J 1/8W	K1K2M1
R34 -36			RK73FB2B751J	CHIP R 750 J 1/8W	M2M3M4
R34 -36			RK73FB2B751J	CHIP R 750 J 1/8W	M5M6
R37			RK73FB2B471J	CHIP R 470 J 1/8W	M4
R41			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R61 ,62			RK73EB2E240J	CHIP R 24 J 1/4W	
S1		*	T99-0484-05	ROTARY ENCODER	
ED1		*	3-BT-262N	FLUORESCENT INDICATOR TUBE	
IC1		*	BU9754KV-E2	MOS-IC	
IC2			PIC95603	ANALOGUE IC	

CD PLAYER UNIT (X32-6240-00) IN CD MECHA

C1			CK73FB0J106K	CHIP C 10UF K	
C3			CC73GCH1H680J	CHIP C 68PF J	
C4			CK73GB1A105K	CHIP C 1.0UF K	
C6			CK73FB1C105K	CHIP C 1.0UF K	
C8			CK73GB1H222K	CHIP C 2200PF K	
C9 ,10			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H153K	CHIP C 0.015UF K	
C12			CK73GB1C104K	CHIP C 0.10UF K	
C13			CK73GB1H332K	CHIP C 3300PF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	
C15			CK73GB1H333K	CHIP C 0.033UF K	
C16			CK73GB1C104K	CHIP C 0.10UF K	
C18			CK73GB1H153K	CHIP C 0.015UF K	
C19			CK73GB1H103K	CHIP C 0.010UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C22			CK73GB1H103K	CHIP C 0.010UF K	
C23			CK73GB1H153K	CHIP C 0.015UF K	
C24			CC73GCH1H470J	CHIP C 47PF J	
C25 -27			CK73GB1C104K	CHIP C 0.10UF K	
C29			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73GB1C104K	CHIP C 0.10UF K	
C31 ,32			CK73GB1A105K	CHIP C 1.0UF K	
C36			CK73GB1A105K	CHIP C 1.0UF K	
C41 ,42			CK73GB1C104K	CHIP C 0.10UF K	
C43 ,44			CK73GB1H102K	CHIP C 1000PF K	
C45			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1A105K	CHIP C 1.0UF K	
C47			CC73GCH1H560J	CHIP C 56PF J	
C48			CC73GCH1H101J	CHIP C 100PF J	
C49			CK73GB1A474K	CHIP C 0.47UF K	
C50			CK73FB1A225K	CHIP C 2.2UF K	
C51			CK73FB0J106K	CHIP C 10UF K	
C54			CK73FB0J106K	CHIP C 10UF K	
C57			CK73GB1C104K	CHIP C 0.10UF K	
C59			CK73GB1H472K	CHIP C 4700PF K	
C60			CK73GB1C224K	CHIP C 0.22UF K	
C61			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E41-2954-05	FLAT CABLE CONNECTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7 -9			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73GB2A560J	CHIP R 56 J 1/10W	
R2			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R3			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R4			RK73GB2A104J	CHIP R 100K J 1/10W	
R5			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R6			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB2A221J	CHIP R 220 J 1/10W	
R8			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R9			RK73GB2A913J	CHIP R 91K J 1/10W	
R10			RK73GB2A334J	CHIP R 330K J 1/10W	
R11			RK73GB2A153J	CHIP R 15K J 1/10W	
R13			RK73GB2A333J	CHIP R 33K J 1/10W	
R14			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73GB2A183J	CHIP R 18K J 1/10W	
R16			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R17 ,18			RK73GB2A103J	CHIP R 10K J 1/10W	
R19 ,20			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R25			RK73GB2A103J	CHIP R 10K J 1/10W	
R27			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R29			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R39			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R40			RK73GB2A681J	CHIP R 680 J 1/10W	
R43 ,44			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A363J	CHIP R 36K J 1/10W	
R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52 -58			RK73GB2A101J	CHIP R 100 J 1/10W	
R59			RK73GB2A204J	CHIP R 200K J 1/10W	
R64			RK73GB2A223J	CHIP R 22K J 1/10W	
R65			RK73GB2A333J	CHIP R 33K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D1			DA204U	DIODE	
D2			DAP202U	DIODE	
D3 ,4			DA204U	DIODE	
IC3			BD8222EFV	ANALOGUE IC	
IC4		*	TC94A92FG-001	MOS-IC	
IC5		*	XC6415S001P1	MOS-IC	
Q1			2SB0970	TRANSISTOR	
Q10 -12			UM6K1N	DUAL FET	
Q13			DTC114YUA	DIGITAL TRANSISTOR	
Q14		*	RJU003N03	FET	

ELECTRIC UNIT (X34-621x-xx)

C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	
C2			CD04AB1C220M	ELECTRO 22UF 16WV	
C3			CK73GB1H104K	CHIP C 0.10UF K	KK1K2
C3 ,4			CK73GB1H104K	CHIP C 0.10UF K	M1M2M3
C3 ,4			CK73GB1H104K	CHIP C 0.10UF K	M4M5M6
C5			CD04AR1C221M	ELECTRO 220UF 16WV	

K: KDC-MP242 K1: KDC-MP142CR K2: KDC-MP142 M1: KDC-MP443 M2: KDC-MP243
M3: KDC-MP3043 M4: KDC-MP343 M5: KDC-MP343S M6: KDC-MP243SW

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-621x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C7 C9 C11 C12 C14		*	CD04AV0J101M CK73GB1C104K CK73FB1A225K CK73GB1C104K CK73GB1C104K	ELECTRO 100UF 6.3WV CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C15 C17 ,18 C19 C101,102 C202			CD04AB1C220M CK73GB1C104K CK73GB1E223K CK73GB1H103K CC73GCH1H180J	ELECTRO 22UF 16WV CHIP C 0.10UF K CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 18PF J	
C203 C204 C205 C301,302 C306,307		*	CC73GCH1H220J CK73GB1C104K CK73GB1H102K CD04AV1HR47M CK73GB1C104K	CHIP C 22PF J CHIP C 0.10UF K CHIP C 1000PF K ELECTRO 0.47UF 50WV CHIP C 0.10UF K	
C308 C310,311 C401 C403 C404-407		*	CD04AV0J470M CK73GB1H102K CD04AV1C470M CD04AV1H010M CK73GB1A105K	ELECTRO 47UF 6.3WV CHIP C 1000PF K ELECTRO 47UF 16WV ELECTRO 1UF 50WV CHIP C 1.0UF K	
C509,510 C601,602 C603 C701,702 C705,706		*	CK73GB1C104K CK73GB1C104K CD04AV0J470M CD04AV1V100M CD04AV1V100M	CHIP C 0.10UF K CHIP C 0.10UF K ELECTRO 47UF 6.3WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV	KM1 KM1 KM1
C801-804 C805 C806,807 C809		*	CK73GB1A224K CD04AV1V100M CK73GB1A105K CK73GB1A105K	CHIP C 0.22UF K ELECTRO 10UF 35WV CHIP C 1.0UF K CHIP C 1.0UF K	
CN2 CN4 J1 J2 J3			E41-1822-05 E40-6526-05 E58-0991-05 E04-0334-05 E58-1060-15	FLAT CABLE CONNECTOR PIN ASSY RECTANGULAR RECEPTACLE RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE	KM1
J4 J5			E56-0855-05 E63-0937-05	CYLINDRICAL RECEPTACLE PIN JACK	KM1
L1 L401 X1 X2			L33-2459-05 L40-4791-58 L78-0879-05 L77-2920-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR RESONATOR (10.0MHZ) CRYSTAL RESONATOR	
G H J K L	2D 2D 2D 3D 2D		N82-2606-48 N83-3005-48 N83-3016-48 N86-2606-48 N89-3010-48	BINDING HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
R1 R2 -5 R11 R12 R13 -15			RD14BB2C102J RD14BB2C103J RD14DB2H100J RK73PB2H100J RD14DB2H100J	RD 1.0K J 1/6W RD 10K J 1/6W SMALL-RD 10 J 1/2W CHIP R 10 J 1/2W SMALL-RD 10 J 1/2W	
R16 R17 R18 R101			RK73FB2B681J RK73GB2A272J RK73GB2A473J RD14BB2C472J	CHIP R 680 J 1/8W CHIP R 2.7K J 1/10W CHIP R 47K J 1/10W RD 4.7K J 1/6W	KK1K2

Ref. No.	Add	New	Parts No.	Description	Destination
R101,102 R101,102 R106 R107 R108			RD14BB2C472J RD14BB2C472J RD14BB2C332J RD14BB2C333J RK73GB2A103J	RD 4.7K J 1/6W RD 4.7K J 1/6W RD 3.3K J 1/6W RD 33K J 1/6W CHIP R 10K J 1/10W	M1M2M3 M4M5M6
R109 R110 R111 R112 R113			RD14BB2C223J RK73FB2B683J RK73GB2A473J RD14BB2C203J RK73GB2A104J	RD 22K J 1/6W CHIP R 68K J 1/8W CHIP R 47K J 1/10W RD 20K J 1/6W CHIP R 100K J 1/10W	
R114,115 R116,117 R118 R119 R120			RK73GB2A103J RD14BB2C682J RD14BB2C103J RK73GB2A473J RK73GB2A104J	CHIP R 10K J 1/10W RD 6.8K J 1/6W RD 10K J 1/6W CHIP R 47K J 1/10W CHIP R 100K J 1/10W	
R203,204 R205-207 R208 R209,210 R218			RK73GB2A103J RK73GB2A473J RD14BB2C473J RD14BB2C471J RK73GB2A223J	CHIP R 10K J 1/10W CHIP R 47K J 1/10W RD 47K J 1/6W RD 470 J 1/6W CHIP R 22K J 1/10W	
R223 R225 R225 R226 R226			RK73GB2A222J RK73GB2A473J RK73GB2A473J RK73GB2A223J RK73GB2A223J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W	K1M2M3 M4M5 K1M2M3 M4M5
R226 R226,227 R227 R227 R228			RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A223J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W	K2 M6 M1M2M3 M4M5 M1M2M3
R228 R228 R301 R302 R303			RK73GB2A223J RK73GB2A473J RK73GB2A222J RD14BB2C101J RK73GB2A102J	CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W RD 100 J 1/6W CHIP R 1.0K J 1/10W	M4M5M6 KK1K2
R304 R305 R306 R307 R310-313			RD14BB2C102J RK73GB2A102J RK73GB2A472J RK73GB2A222J RK73GB2A102J	RD 1.0K J 1/6W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W	
R314 R315 R316,317 R318 R319			RK73GB2A104J RK73GB2A472J RK73GB2A222J RK73GB2A472J RK73GB2A222J	CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W	
R320 R321 R322 R330 R331			RK73GB2A472J RK73GB2A473J RK73GB2A471J RD14BB2C101J RK73GB2A392J	CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 470 J 1/10W RD 100 J 1/6W CHIP R 3.9K J 1/10W	
R332 R333,334 R335 R336-339 R340			RD14BB2C101J RD14BB2C102J RK73GB2A473J RD14BB2C222J RK73GB2A225J	RD 100 J 1/6W RD 1.0K J 1/6W CHIP R 47K J 1/10W RD 2.2K J 1/6W CHIP R 2.2M J 1/10W	

K: KDC-MP242 K1: KDC-MP142CR K2: KDC-MP142 M1: KDC-MP443 M2: KDC-MP243
M3: KDC-MP3043 M4: KDC-MP343 M5: KDC-MP343S M6: KDC-MP243SW

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-621x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R341 R342 R343 R344,345 R346			RD14BB2C222J RK73GB2A392J RD14BB2C102J RD14BB2C4R7J RD14BB2C2R2J	RD 2.2K J 1/6W CHIP R 3.9K J 1/10W RD 1.0K J 1/6W RD 4.7 J 1/6W RD 2.2 J 1/6W	
R347 R348,349 R352,353 R401 R402,403			RK73GB2A102J RK73GB2A103J RD14BB2C471J RK73GB2A103J RD14BB2C471J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W RD 470 J 1/6W CHIP R 10K J 1/10W RD 470 J 1/6W	
R501 R502 R503 R504 R601,602			RK73GB2A471J RD14BB2C472J RK73GB2A471J RD14BB2C472J RD14BB2C100J	CHIP R 470 J 1/10W RD 4.7K J 1/6W CHIP R 470 J 1/10W RD 4.7K J 1/6W RD 10 J 1/6W	KM1
R603 R604 R605 R606,607 R608,609			RD14BB2C4R7J RK73GB2A102J RD14BB2C101J RD14BB2C102J RD14BB2C101J	RD 4.7 J 1/6W CHIP R 1.0K J 1/10W RD 100 J 1/6W RD 1.0K J 1/6W RD 100 J 1/6W	KM1 KM1 KM1 KM1 KM1
R610 R611 R612 R613,614 R615			RD14BB2C472J RD14BB2C101J RD14BB2C472J RK73GB2A100J RK73GB2A4R7J	RD 4.7K J 1/6W RD 100 J 1/6W RD 4.7K J 1/6W CHIP R 10 J 1/10W CHIP R 4.7 J 1/10W	KM1 KM1 KM1 KM1 KM1
R616 R617 R618,619 R620 R701,702			RK73GB2A473J RK73GB2A104J RD14BB2C104J RK73GB2A104J RK73GB2A331J	CHIP R 47K J 1/10W CHIP R 100K J 1/10W RD 100K J 1/6W CHIP R 100K J 1/10W CHIP R 330 J 1/10W	KM1 KM1 KM1 KM1 KM1
R703,704 R705,706 R707,708 R709,710 R711,712			RD14BB2C223J RD14BB2C181J RK73GB2A331J RD14BB2C223J RD14BB2C181J	RD 22K J 1/6W RD 180 J 1/6W CHIP R 330 J 1/10W RD 22K J 1/6W RD 180 J 1/6W	KM1 KM1 KM1 KM1 KM1
R802 R804 R805 R806 R808			RK73GB2A473J RK73GB2A331J RK73GB2A473J RK73GB2A622J RK73GB2A100J	CHIP R 47K J 1/10W CHIP R 330 J 1/10W CHIP R 47K J 1/10W CHIP R 6.2K J 1/10W CHIP R 10 J 1/10W	
R809 R811 R812			RK73GB2A102J RD14BB2C473J RK73EB2E000J	CHIP R 1.0K J 1/10W RD 47K J 1/6W CHIP R 0.0 J 1/4W	
D1 D2 D3 D4 ,5 D4 ,5		*	S2V60-5009F46 HZS9-E (A1) D1F60-5063 1SS133 1SS133	DIODE ZENER DIODE DIODE DIODE DIODE	M1M2M3 M4M5M6
D7 D101-104 D101-104 D101,102 D106-108		*	HZS11-E (C3) D1F60-5063 D1F60-5063 D1F60-5063 MTZJ6.8 (B)	ZENER DIODE DIODE DIODE DIODE ZENER DIODE	M1M2M3 M4M5M6 KK1K2
D109		*	HZS5-E (B1)	ZENER DIODE	
Ref. No.	Add	New	Parts No.	Description	Destination
D110 D306 D401 D601-606 D801,802		*	KDS121-P HZS7-E (A3) 1SS133 HZS7-E (A3) 1SS133	DIODE ZENER DIODE DIODE ZENER DIODE DIODE	KM1
IC1 IC1 IC1 IC1 IC2		*	30622MEPB69FP 30622MEPB69FP 30622MEPB69FP 30622MEPB69FP E-TDA7719	MICROCONTROLLER IC MICROCONTROLLER IC MICROCONTROLLER IC MICROCONTROLLER IC ANALOGUE IC	K1K2M2 M3M4M5 M6 KM1
IC4 IC6 IC8 Q2 Q3		*	BD4914-V4 TB2926HQ XC6120N362N1 2SB1565 2SC4081	ANALOGUE IC ANALOGUE IC MOS-IC TRANSISTOR TRANSISTOR	
Q7 Q8 Q9 Q10 Q11			KRC403-P 2SB1565 2SC4081 KRA303-P KRC403-P	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q12 Q13 Q13 Q14 Q14			KRA303-P KRC403-P KRC403-P KRA303-P KRA303-P	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1M2M3 M4M5M6 M1M2M3 M4M5M6
Q101-103 Q104,105 Q301 Q701-704 Q701,702			2SC4081 KRC404-P KRA307-P KRC410-P KRC410-P	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	KM1 K1K2M2
Q701,702 Q701,702 Q705 TH1			KRC410-P KRC410-P KRA303-P PRF18BE471QS2	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	M3M4M5 M6
A1 A1 A1 A1	2D 2D 2D 2D	*	X86-4230-11 X86-4230-11 X86-4230-11 X86-4230-21	FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT	KK1K2 M1M2M3 M4M5 M6
MECHANISM ASSY (X92-6320-00) DXM-9B10W					
1 3 4	2B 3B 1B	*	A10-5450-43 A10-5452-41 A10-5453-32	CHASSIS ASSY CHASSIS CHASSIS	
12 13 14 15 16	3A 1B 1B 2A 2A	*	D10-4993-52 D10-4991-02 D10-4992-03 D10-4994-02 D10-4995-03	LEVER ARM ARM SLIDER SLIDER	
17 18 19 20 21	2B 2A 1A 2A 2A	*	D10-4996-02 D10-4997-03 D10-4998-03 D10-4999-03 D10-7001-03	SLIDER LEVER ARM ARM ARM	
22 23	2A 2A	*	D10-7002-03 D10-7003-03	ARM ARM	

K: KDC-MP242 K1: KDC-MP142CR K2: KDC-MP142 M1: KDC-MP443 M2: KDC-MP243
M3: KDC-MP3043 M4: KDC-MP343 M5: KDC-MP343S M6: KDC-MP243SW

△ Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6320-00) DXM-9B10W

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
24	2A	*	D13-2445-04	GEAR							
25	2A	*	D13-2446-04	GEAR							
27	2A	*	D13-2448-04	GEAR							
28	2A	*	D13-2449-04	GEAR							
29	2A	*	D13-2450-04	GEAR							
30	2A	*	D13-2451-04	GEAR							
31	2A	*	D13-2452-04	GEAR							
32	2A	*	D13-2453-04	GEAR							
33	2A	*	D13-2454-04	GEAR							
34	2A	*	D13-2455-04	GEAR							
35	2B	*	D13-2456-03	RACK (GEAR)							
36	2A	*	D14-1028-04	ROLLER							
37	3A		D21-2507-04	SHAFT							
38	2B		D21-2508-04	SHAFT							
39	3A	*	D23-0963-04	RETAINER							
40	3B		D39-0277-15	DAMPER							
41	3B		D39-0278-15	DAMPER							
46	1B	*	G01-4682-24	TORSION COIL SPRING							
47	3A		G01-4683-14	EXTENSION SPRING							
48	2A		G01-4684-04	EXTENSION SPRING							
49	2B		G01-4685-04	EXTENSION SPRING							
50	1B		G01-4686-14	EXTENSION SPRING							
51	3A		G01-4688-14	EXTENSION SPRING							
52	3A	*	G01-4692-24	TORSION COIL SPRING							
53	2B	*	G02-1587-04	FLAT SPRING							
54	3A	*	G02-1588-04	FLAT SPRING							
55	1B		G13-1297-04	CUSHION							
56	1B		G13-1299-14	CUSHION							
57	1A		G16-1715-04	SHEET							
61	1B	*	J11-0675-03	CLAMPER							
64	2A		J19-7210-21	HOLDER							
65	2B	*	J19-7225-04	HOLDER							
66	1B	*	J22-0706-03	MOUNTING HARDWARE							
67	1A	*	J22-0707-02	MOUNTING HARDWARE							
68	1B		J90-1170-21+	GUIDE							
69	2B	*	J90-1168-03	RAIL							
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)							
B	2B		N09-6426-15+	MACHINE SCREW							
C	2B		N09-6735-05	TAPTITE SCREW							
D	2B		N09-6737-15	MACHINE SCREW							
E	2B		N09-6738-15	TAPTITE SCREW							
F	2A		N19-2335-14	FLAT WASHER							
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW							
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW							
76	2A		S68-0921-05	PUSH SWITCH							
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY							
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)							
DPU1	2B		X93-2260-01	OPTICAL PICKUP ASSY							

K: KDC-MP242 K1: KDC-MP142CR K2: KDC-MP142 M1: KDC-MP443 M2: KDC-MP243
M3: KDC-MP3043 M4: KDC-MP343 M5: KDC-MP343S M6: KDC-MP243SW

△Indicates safety critical components.