


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING (DEH-P640, P6400)

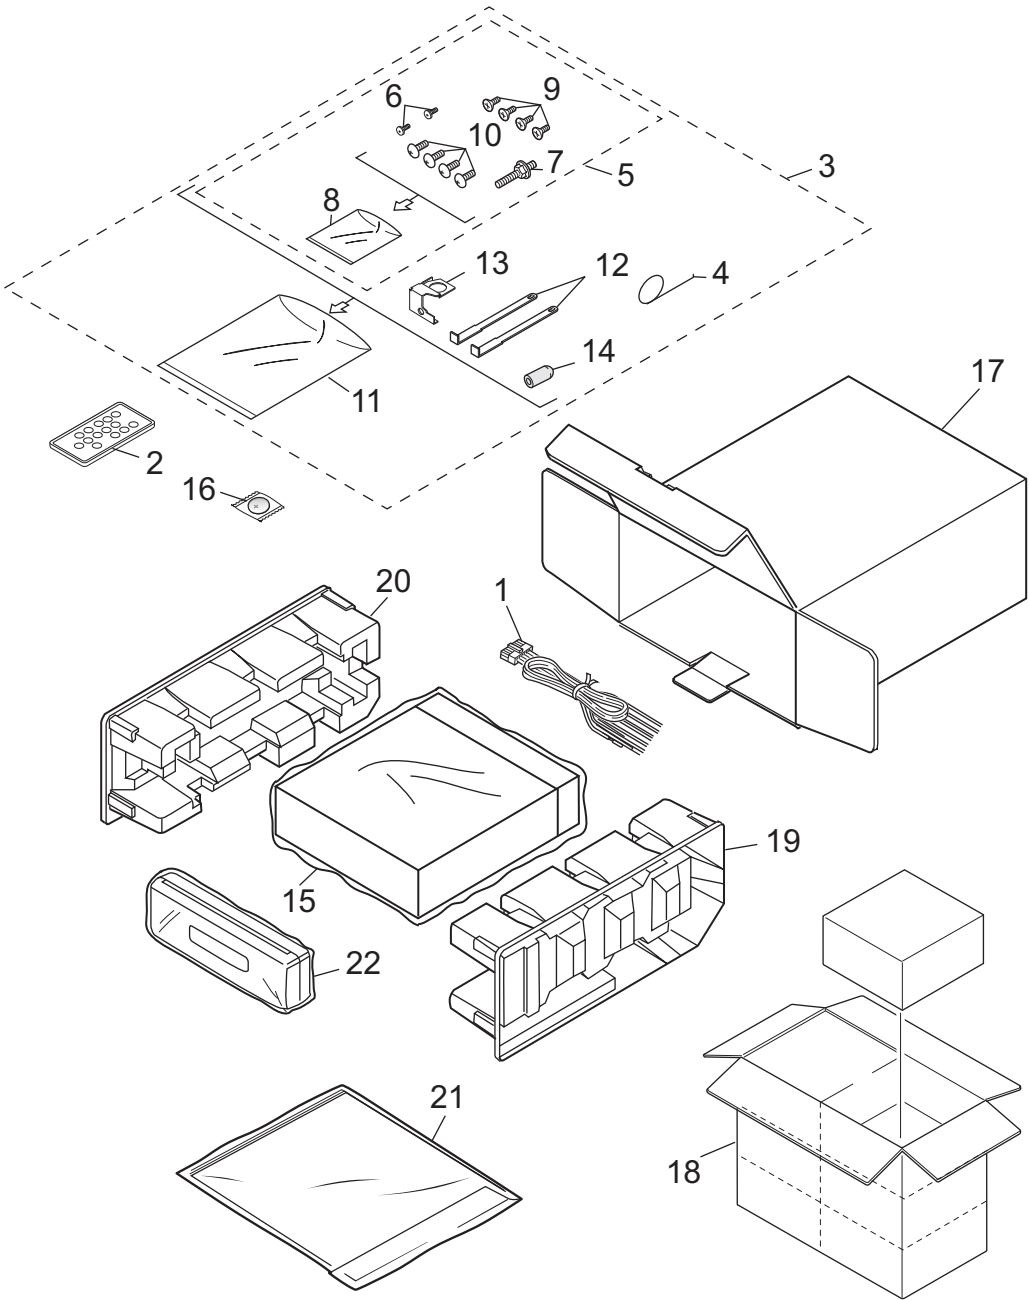

NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST (DEH-P640, P6400)

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Cord Assy	CDE6438	*	16	Battery	CEX1065
	2	Remote Control Unit	CXB8743		17	Carton	See Contrast table(2)
	3	Accessory Assy	CEA2773		18	Contain Box	See Contrast table(2)
	4	Spring	CBH1650		19	Protector	CHP2251
	5	Screw Assy	CEA2796		20	Protector	CHP2252
	6	Screw	BPZ20P060FZK		21-1	Owner's Manual	See Contrast table(2)
	7	Screw	CBA1002		21-2	Installation Manual	See Contrast table(2)
*	8	Polyethylene Bag	CEG-127	*	21-3	Caution Card	CRP1207
	9	Screw	CRZ50P090FMC	*	21-4	Warranty Card	See Contrast table(2)
	10	Screw	TRZ50P080FMC	*	21-5	Card	See Contrast table(2)
*	11	Polyethylene Bag	CEG-158		21-6	Polyethylene Bag	CEG1116
	12	Handle	CNC5395		22	Case Assy	CXB3520
	13	Earth Plate	CNC9450				
	14	Bush	CNV3930				
	15	Polyethylene Bag	CEG1173				

(2) CONTRAST TABLE


DEH-P640/XN/UC and DEH-P6400/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P640/XN/UC	DEH-P6400/XN/UC
	17 Carton	CHG4615	CHG4616
	18 Contain Box	CHL4615	CHL4616
	21-1 Owner's Manual	CRD3516	CRD3517
	21-2 Installation Manual	CRD3530	CRD3531
*	21-4 Warranty Card	CRY1070	Not used
*	21-5 Card	Not used	ARY1048

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P640/XN/UC	CRD3516	English, French
	CRD3530	English, French
DEH-P6400/XN/UC	CRD3517	English, French
	CRD3531	English, French

2.2 PACKING (DEH-P6450)

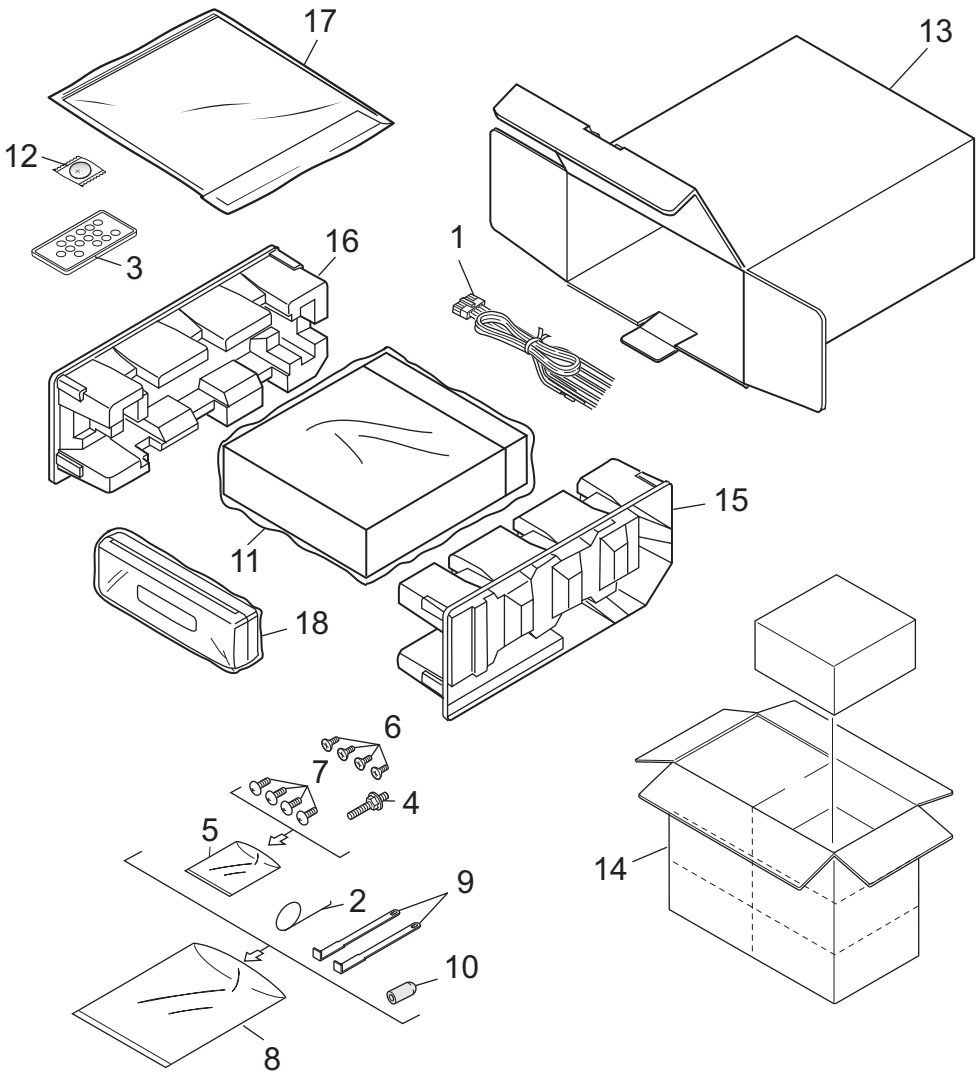


● **PACKING SECTION PARTS LIST (DEH-P6450)**

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Cord Assy	CDE6438		16	Protector	CHP2252
	2	Spring	CBH1650		17-1	Owner's Manual	CRD3518
	3	Remote Control Unit	CXB8743		17-2	Owner's Manual	CRD3519
	4	Screw	CBA1002		17-3	Installation Manual	CRD3532
*	5	Polyethylene Bag	CEG-127	*	17-4	Caution Card	CRP1207
	6	Screw	CRZ50P090FMC		17-5	Polyethylene Bag	CEG1116
	7	Screw	TRZ50P080FMC		18	Case Assy	CXB3520
*	8	Polyethylene Bag	CEG-158				
	9	Handle	CNC5395				
	10	Bush	CNV3930				
	11	Polyethylene Bag	CEG-162				
*	12	Battery	CEX1065				
	13	Carton	CHG4614				
	14	Contain Box	CHL4614				
	15	Protector	CHP2251				

● **Owner's Manual, Installation Manual**

Part No.	Language
CRD3518	English, Spanish
CRD3519	Portuguese(B), Arabic
CRD3532	English, Spanish, Portuguese(B), Arabic

2.3 EXTERIOR

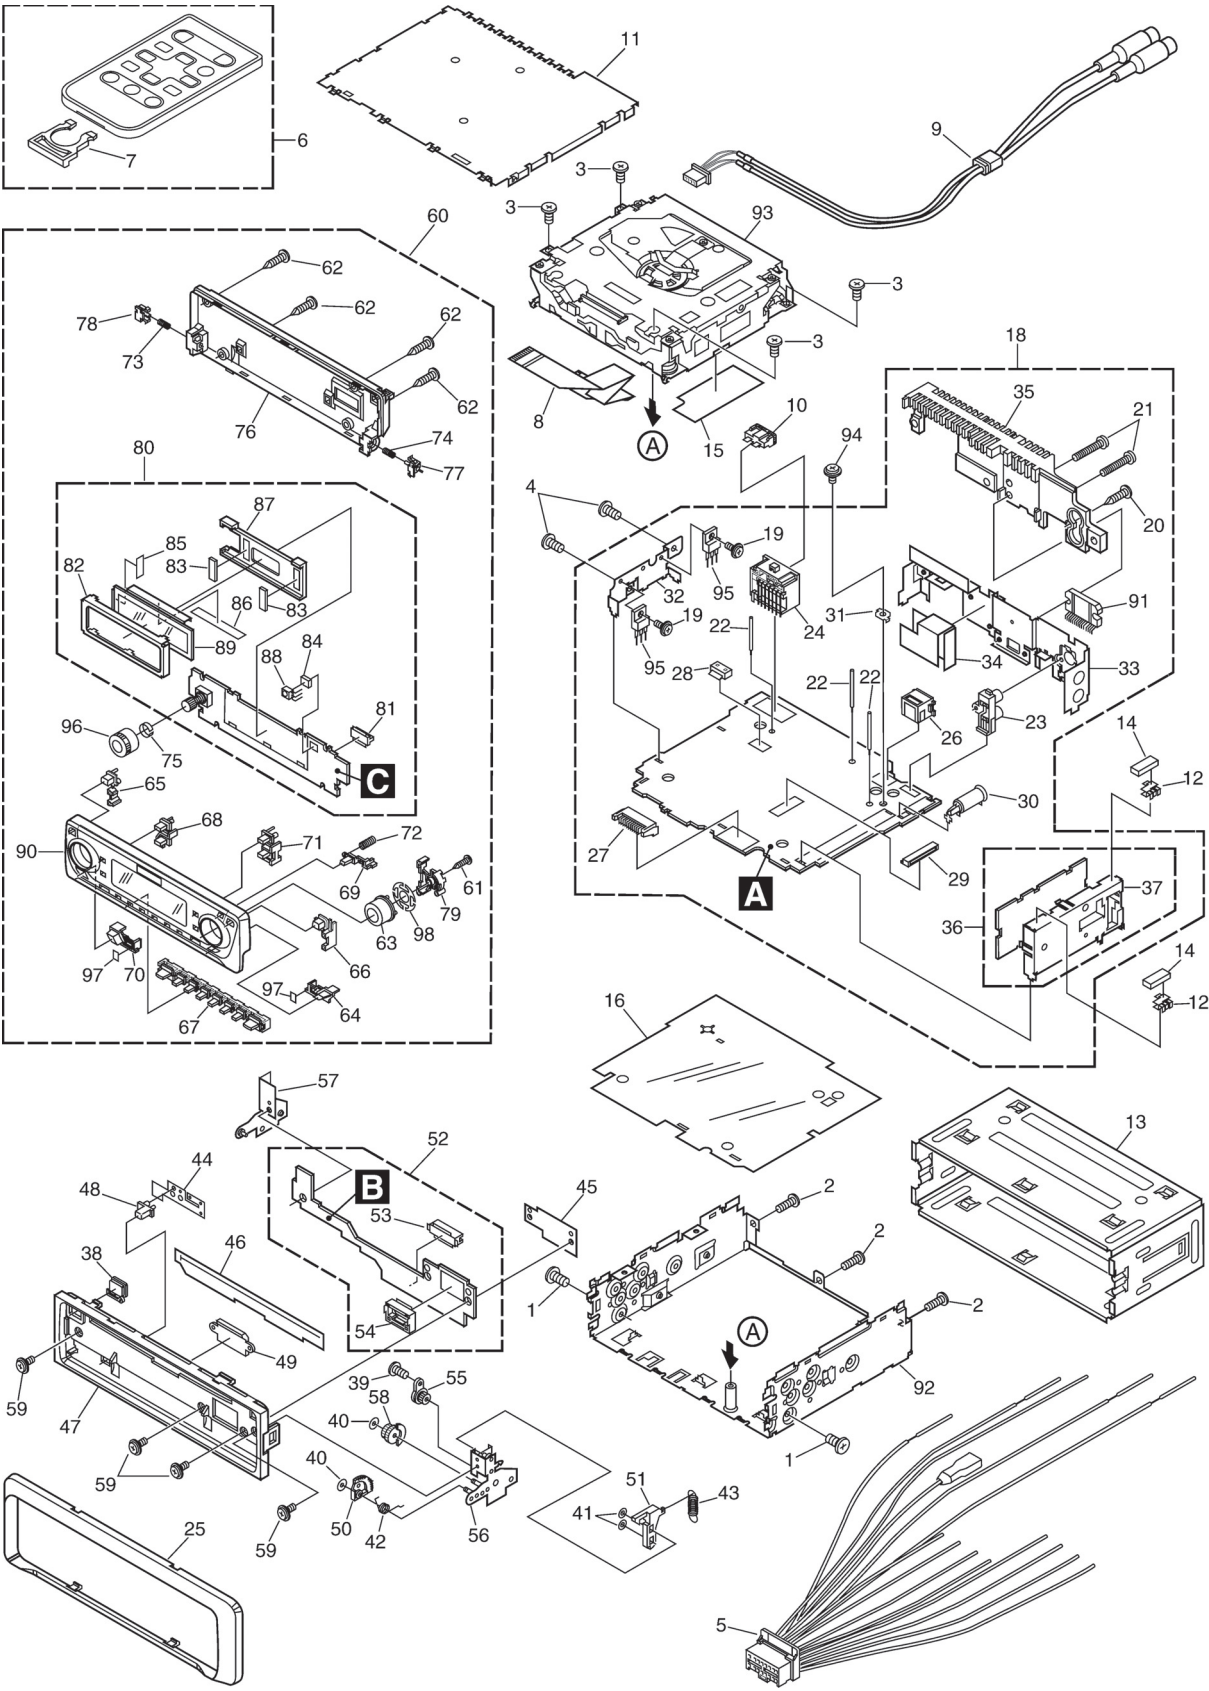

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK		51	Arm	CNV6508
	2	Screw	BMZ30P100FMC		52	Panel Unit	CWM7986
	3	Screw	BSZ26P060FMC		53	Socket(CN1850)	CKS3550
	4	Screw	BSZ30P040FMC		54	Connector(CN1851)	CKS4462
	5	Cord Assy	CDE6438		55	Damper Unit	CXB5070
	6	Remote Control Unit	CXB8743		56	Holder Unit	CXB6356
	7	Cover	CNS7068		57	Holder Unit	CXB6357
	8	Cable	CDE6714		58	Clutch Unit	CXB6358
	9	Cord Assy	CDE6454		59	Screw	IMS20P045FZK
	10	Fuse(10A)	CEK1136		60	Detach Grille Assy	See Contrast table(2)
	11	Case	CNB2686		61	Screw	BPZ20P080FMC
	12	Holder	CNC5704		62	Screw	BPZ20P100FZK
	13	Holder	CNC8659		63	Button(SELECT)	CAC7220
	14	Cushion	CNM4870		64	Button(SFEQ)	CAC7221
	15	Insulator	CNM7214		65	Button(ENT)	See Contrast table(2)
	16	Insulator	CNM7629		66	Button(AUDIO)	See Contrast table(2)
	17	*****			67	Button(1-6)	CAC7225
	18	Tuner Amp Unit	See Contrast table(2)		68	Button(DISPLAY)	CAC7226
	19	Screw	ASZ26P060FMC		69	Button(OPEN)	CAC7227
	20	Screw	BPZ26P120FMC		70	Button(EQ)	CAC7231
	21	Screw	BSZ26P160FMC		71	Button(FUNC)	CAC7489
	22	Clamper	CEF1007		72	Spring	CBH2630
	23	Pin Jack(CN351)	CKB1035		73	Spring	CBH2431
	24	Plug(CN901)	CKM1330		74	Spring	CBH2430
	25	Panel	See Contrast table(2)		75	Spring	CBL1470
	26	Connector(CN101)	CKS3408		76	Cover	CNS6740
	27	Plug(CN801)	CKS3537		77	Holder	CNV6505
	28	Connector(CN352)	CKS3598		78	Holder	CNV6506
	29	Connector(CN653)	CKS3835		79	Holder	CNV6909
	30	Antenna Jack(CN401)	CKX1056		80	Keyboard Unit	See Contrast table(2)
	31	Holder	CNC5399		81	Connector(CN1901)	CKS4524
	32	Holder	CNC8615		82	Holder	CNC9642
	33	Holder	CNC9470		83	Cushion	CNM6633
	34	Insulator	CNM6949		84	Cushion	CNM7469
	35	Heat Sink	CNR1583		85	Spacer	CNM7697
	36	FM/AM Tuner Unit	CWE1563		86	Spacer	CNM7698
	37	Holder	CNC8815		87	Holder	CNV6910
	38	Button(EJECT)	CAC6839		88	IC(IC1903)	TSOP1840SB3V
	39	Screw(M2x2)	CBA1176		89	OEL Unit	MXS8017
	40	Washer	CBF1038		90	Sub Grille Assy	See Contrast table(2)
	41	Washer	CBF1039		91	IC(IC301)	PAL007A
	42	Spring	CBH2428		92	Chassis Unit	CXB6100
	43	Spring	CBH2429		93	CD Mechanism Module(S9ANA)	CXK5501
	44	Spring	CBL1512		94	Screw	ISS26P055FUC
	45	Holder	CNC9096		95	Transistor(Q921,999)	2SD2396
	46	Cover	CNM6854	*	96	Knob	CAA2697
	47	Panel	CNS6278		97	Spacer	CNM7807
	48	Pin	CNV6486		98	Cushion	CNM7808
	49	Lighting Conductor	CNV6487				
	50	Gear	CNV6507				

(2) CONTRAST TABLE

DEH-P640/XN/UC, DEH-P6400/XN/UC and DEH-P6450/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P640/XN/UC	DEH-P6400/XN/UC	DEH-P6450/XN/ES
18	Tuner Amp Unit	CWM8149	CWM8316	CWM8097
25	Panel	CNS6935	CNS6934	CNS6935
60	Detach Grille Assy	CXB8427	CXB8494	CXB8244
65	Button(ENT)	CAC7253	CAC7303	CAC7253
66	Button(AUDIO)	CAC7254	CAC7224	CAC7254
80	Keyboard Unit	CWM8098	CWM7990	CWM7990
90	Sub Grille Assy	CXB8946	CXB8947	CXB8948

2.4 CD MECHANISM MODULE

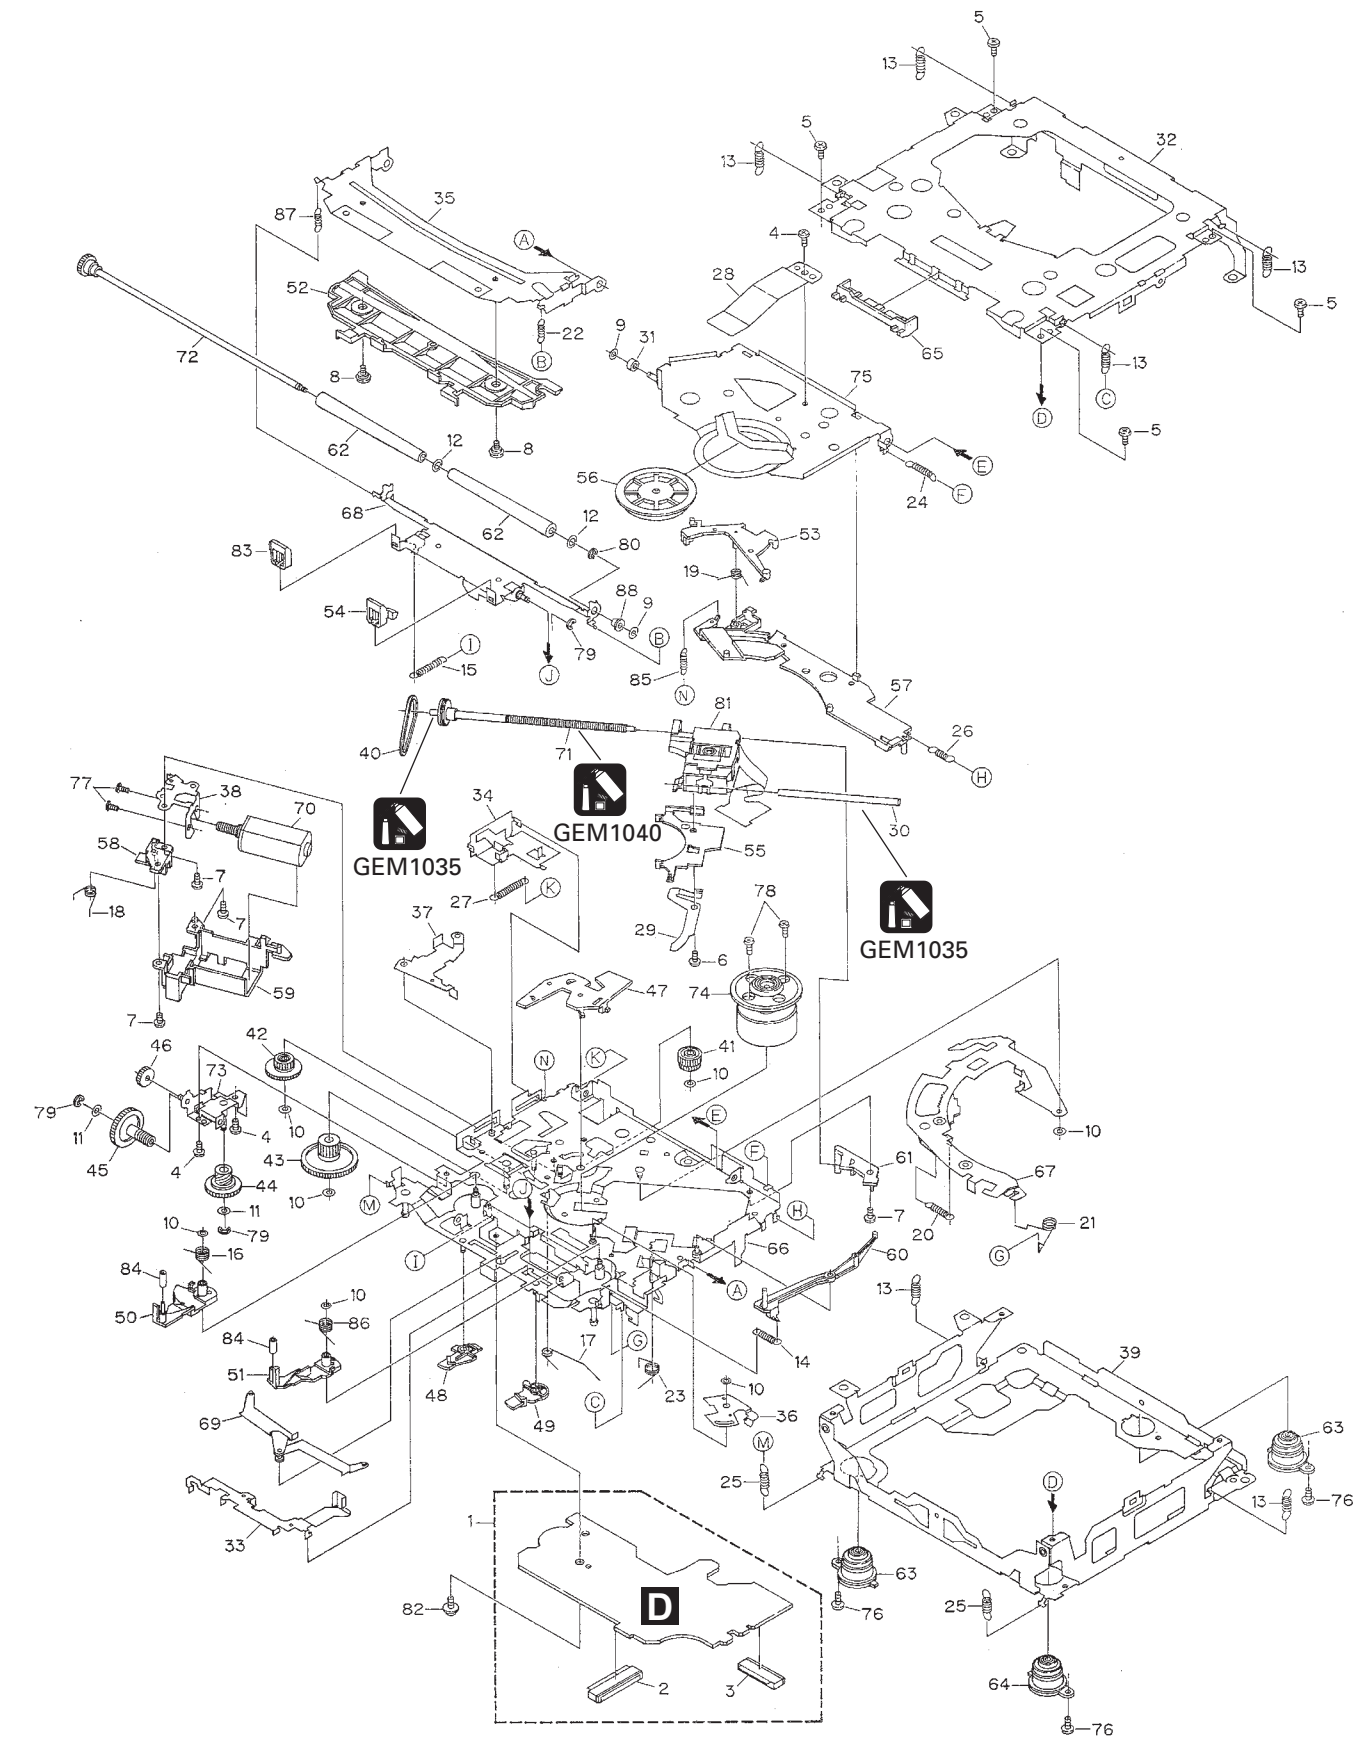

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Control Unit	CWX2481	46	Gear	CNV6320
2	Connector(CN701)	CKS1959	47	Arm	CNV6322
3	Connector(CN101)	CKS3486	48	Arm	CNV6323
4	Screw	BMZ20P025FMC	49	Arm	CNV6324
5	Screw	BSZ20P040FMC	50	Arm	CNV6888
6	Screw(M2x4)	CBA1362	51	Arm	CNV6889
7	Screw(M2x3)	CBA1527	52	Guide	CNV6327
8	Screw	CBA1545	53	Arm	CNV6924
9	Washer	CBF1037	54	Guide	CNV6921
10	Washer	CBF1038	55	Rack	CNV6923
11	Washer	CBF1039	56	Clamper	CNV6331
12	Washer	CBF1060	57	Arm	CNV6332
13	Spring	CBH2378	58	Guide	CNV6333
14	Spring	CBH2379	59	Cover	CNV6334
15	Spring	CBH2514	60	Arm	CNV6335
16	Spring	CBH2533	61	Guide	CNV6336
17	Spring	CBH2382	62	Roller	CNV6338
18	Spring	CBH2383	63	Damper	CNV6339
19	Spring	CBH2384	64	Damper	CNV6340
20	Spring	CBH2527	65	Guide	CNV6925
21	Spring	CBH2386	66	Chassis Unit	CXB7980
22	Spring	CBH2537	* 67	Arm Unit	CXB7983
23	Spring	CBH2390	68	Arm Unit	CXB7984
24	Spring	CBH2391	69	Arm Unit	CXB7985
25	Spring	CBH2523	70	Motor Unit(M2)	CXB5903
26	Spring	CBH2426	71	Screw Unit	CXB5904
27	Spring	CBH2444	72	Gear Unit	CXB8076
28	Spring	CBL1561	73	Bracket Unit	CXB7982
29	Spring	CBL1553	74	Motor Unit(M1)	CXB6007
30	Shaft	CLA3845	75	Arm Unit	CXB8504
31	Roller	CLA3910	76	Screw(M2x5)	EBA1028
32	Frame	CNC9654	77	Screw	JFZ20P020FMC
33	Lever	CNC9664	78	Screw	JGZ17P020FZK
34	Lever	CNC8949	79	Washer	YE15FUC
35	Arm	CNC9661	80	Washer	YE20FUC
36	Arm	CNC9016	81	Pickup Unit(Service)(P9)	CXX1480
37	Arm	CNC9017	82	Screw	IMS26P030FMC
38	Bracket	CNC9123	83	Guide	CNV6922
39	Frame	CNC9656	84	Roller	CNV6887
40	Belt	CNT1086	85	Spring	CBH2509
41	Gear	CNV6886	86	Spring	CBH2512
42	Gear	CNV6316	87	Spring	CBH2536
43	Gear	CNV6317	88	Collar	CNV6906
44	Gear	CNV6318			
45	Gear	CNV6319			

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
A Unit Number : CWM8149(DEH-P640/XN/UC)		D 911 Diode	1SR139-400
Unit Name : Tuner Amp Unit		D 912 Diode	HZS6L(B1)
MISCELLANEOUS		D 921 Diode	HZS9L(C1)
IC 101 IC	HA12187FP	D 931 Diode	HZS7L(A1)
IC 132 IC	NJM4558MD	D 932 Diode	HZS7L(C3)
IC 203 IC	PML009A	D 951 Diode	DAN202U
IC 301 IC	PAL007A	D 981 Diode	DAN202U
IC 601 IC	PD5699A	D 982 Diode	HZS9L(A2)
		D 991 Diode	HZS9L(B1)
		ZNR 451 Surge Protector	DSP-201M-A21F
IC 801 IC	TC7SET08FU	L 171 Inductor	CTF1530
IC 851 IC	NJM2360M	L 401 Ferri-Inductor	LAU2R2K
IC 961 IC	S-80735ANDZI	L 402 Ferri-Inductor	LAU4R7K
Q 101 Transistor	2SA1037K	L 403 Inductor	LAU1R0K
Q 102 Transistor	DTC124EK	L 601 Ferri-Inductor	LAU2R2K
Q 301 Transistor	DTC124EK	L 801 Inductor	LAU100K
Q 351 Transistor	IMH3A	L 802 Ferri-Inductor	LAU2R2K
Q 353 Transistor	IMH3A	L 852 Inductor	CTF1510
Q 401 Transistor	2SC2412K	L 853 Inductor	CTF1489
Q 801 Transistor	IMD2A	L 901 Choke Coil 600μH	CTH1221
Q 802 Transistor	2SD1760F5	L 951 Ferri-Inductor	LAU2R2K
Q 803 Transistor	2SD1767	X 601 Radiator 10.00MHz	CSS1475
Q 804 Transistor	IMD2A	S 801 Switch(DSENS)	CSN1039
Q 805 Transistor	DTC143EK	FM/AM Tuner Unit	CWE1563
Q 851 Transistor	2SD1760F5	BZ 641 Buzzer	CPV1050
Q 852 Transistor	IMD2A	RESISTORS	
Q 911 Transistor	2SD1760F5	R 101	RS1/16S101J
Q 913 Transistor	IMD2A	R 102	RS1/16S470J
Q 921 Transistor	2SD2396	R 103	RS1/16S101J
Q 922 Transistor	DTC114EK	R 104	RS1/16S222J
Q 923 Transistor	2SB1238	R 105	RS1/16S103J
Q 931 Transistor	IMX1	R 106	RS1/16S562J
Q 932 Transistor	2SC2412K	R 107	RS1/16S332J
Q 951 Transistor	2SA1037K	R 108	RS1/16S150J
Q 981 Transistor	2SC2412K	R 109	RS1/16S181J
Q 982 Transistor	IMD2A	R 110	RS1/16S181J
Q 991 Transistor	IMD2A	R 111	RS1/16S223J
Q 999 Transistor	2SD2396	R 112	RS1/16S223J
D 131 Diode Network	DA204U	R 113	RS1/16S102J
D 132 Diode Network	DA204U	R 114	RS1/16S102J
D 133 Diode	DAN202U	R 143	RS1/16S104J
D 134 Diode	DAP202U	R 144	RS1/16S104J
D 801 Diode	HZS6L(B1)	R 145	RS1/16S563J
D 803 Diode Network	DA204U	R 146	RS1/16S563J
D 804 Diode	DAN202U	R 147	RS1/16S474J
D 805 Diode	DAP202U	R 148	RS1/16S474J
D 806 Diode	DAN202U	R 151	RS1/16S0R0J
D 807 Diode	DAP202U	R 152	RS1/16S0R0J
D 808 Diode	HZS11L(A1)	R 161	RS1/16S272J
D 851 Diode	HZS9L(C3)	R 162	RS1/16S272J
D 852 Diode	RB411D	R 163	RS1/16S162J
D 901 Diode	1SR139-400		
D 902 Diode	1SR139-400		
D 903 Diode	1SR139-400		
D 904 Diode	1SR139-400		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 164	RS1/16S162J	R 633	RS1/16S104J
R 171	RS1/16S0R0J	R 638	RS1/16S0R0J
R 172	RS1/16S0R0J	R 640	RS1/16S0R0J
R 241	RS1/16S0R0J	R 641	RS1/16S102J
R 242	RS1/16S0R0J	R 642	RS1/16S0R0J
R 245	RS1/16S101J	R 643	RS1/16S0R0J
R 246	RS1/16S101J	R 650	RS1/16S222J
R 247	RS1/16S101J	R 651	RS1/16S222J
R 248	RS1/16S101J	R 653	RS1/16S0R0J
R 249	RS1/16S101J	R 801	RS1/16S332J
R 250	RS1/16S101J	R 804	RS1/16S1R0J
R 287	RS1/16S0R0J	R 805	RS1/16S221J
R 288	RS1/16S0R0J	R 806	RS1/16S221J
R 291	RS1/16S0R0J	R 807	RS1/16S473J
R 292	RS1/16S0R0J	R 808	RS1/16S473J
R 301	RS1/16S103J	R 809	RS1/16S102J
R 302	RS1/16S103J	R 810	RS1/16S222J
R 304	RS1/16S331J	R 811	RS1/16S222J
R 351	RS1/16S821J	R 812	RS1/16S222J
R 352	RS1/16S821J	R 813	RS1/16S222J
R 355	RS1/16S821J	R 814	RS1/16S222J
R 356	RS1/16S821J	R 815	RS1/16S473J
R 357	RS1/16S223J	R 816	RS1/16S104J
R 358	RS1/16S223J	R 817	RD1/4PU391J
R 361	RS1/16S223J	R 819	RS1/16S222J
R 362	RS1/16S223J	R 820	RS1/16S222J
R 363	RS1/16S0R0J	R 851	RS1/16S331J
R 368	RS1/16S0R0J	R 852	RD1/4PU302J
R 401	RS1/16S473J	R 853	RD1/4PU302J
R 402	RS1/16S473J	R 854	RS1/16S121J
R 403	RS1/16S681J	R 855	RS1/16S391J
R 404	RS1/16S681J	R 856	RS1/16S1R0J
R 409	RS1/16S681J	R 857	RS1/16S331J
R 410	RS1/16S103J	R 912	RS1/16S152J
R 411	RS1/16S681J	R 913	RS1/16S223J
R 412	RS1/16S681J	R 914	RS1/16S152J
R 413	RS1/16S681J	R 921	RS1/10S1R0J
R 414	RS1/16S473J	R 922	RD1/4PU221J
R 415	RS1/16S472J	R 923	RS1/16S103J
R 416	RS1/16S473J	R 924	RD1/4PU222J
R 417	RS1/16S473J	R 925	RS1/16S122J
R 418	RS1/16S473J	R 931	RS1/16S472J
R 419	RS1/16S222J	R 932	RS1/16S473J
R 420	RS1/16S222J	R 933	RS1/16S103J
R 424	RS1/16S393J	R 934	RS1/16S473J
R 551	RS1/16S0R0J	R 935	RS1/16S104J
R 553	RS1/16S0R0J	R 936	RS1/16S103J
R 601	RS1/16S473J	R 937	RS1/16S473J
R 604	RS1/16S473J	R 938	RD1/4PU102J
R 606	RS1/16S0R0J	R 939	RD1/4PU102J
R 608	RS1/16S104J	R 951	RD1/4PU153J
R 613	RS1/16S222J	R 952	RS1/16S472J
R 614	RS1/16S222J	R 953	RS1/16S472J
R 615	RS1/16S104J	R 954	RS1/16S102J
R 616	RS1/16S473J	R 962	RS1/16S102J
R 617	RS1/16S0R0J	R 964	RS1/16S822J
R 618	RS1/16S222J	R 982	RS1/16S223J
R 619	RS1/16S473J	R 983	RS1/16S223J
R 620	RS1/16S472J	R 984	RS1/16S473J
R 621	RS1/16S473J	R 985	RD1/4PU102J
R 622	RS1/16S104J	R 991	RD1/4PU221J
R 623	RS1/16S473J	R 992	RD1/4PU221J
R 624	RS1/16S0R0J	R 993	RS1/16S472J
R 626	RS1/16S104J	R 994	RS1/16S222J
R 630	RS1/16S104J	R 995	RS1/16S0R0J
		R 997	RAB4C102J

A Unit Number : CWM8316(DEH-P6400/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	HA12187FP
IC	132	IC	NJM4558MD
IC	203	IC	PML008A
IC	301	IC	PAL007A
IC	631	IC	PDH0047A
IC	601	IC	PD5699A
IC	801	IC	TC7SET08FU
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZ
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EK
Q	923	Transistor	2SB1238
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	951	Transistor	2SA1037K

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
Q 981 Transistor	2SC2412K	R 151	RS1/16S0R0J
Q 982 Transistor	IMD2A	R 152	RS1/16S0R0J
Q 991 Transistor	IMD2A	R 161	RS1/16S272J
Q 999 Transistor	2SD2396	R 162	RS1/16S272J
D 131 Diode Network	DA204U	R 163	RS1/16S162J
D 132 Diode Network	DA204U	R 164	RS1/16S162J
D 133 Diode	DAN202U	R 171	RS1/16S0R0J
D 134 Diode	DAP202U	R 172	RS1/16S0R0J
D 801 Diode	HZS6L(B1)	R 241	RS1/16S0R0J
D 803 Diode Network	DA204U	R 242	RS1/16S0R0J
D 804 Diode	DAN202U	R 247	RS1/16S101J
D 805 Diode	DAP202U	R 248	RS1/16S101J
D 806 Diode	DAN202U	R 249	RS1/16S101J
D 807 Diode	DAP202U	R 250	RS1/16S101J
D 808 Diode	HZS11L(A1)	R 287	RS1/16S0R0J
D 851 Diode	HZS9L(C3)	R 288	RS1/16S0R0J
D 852 Diode	RB411D	R 289	RS1/16S0R0J
D 901 Diode	1SR139-400	R 290	RS1/16S0R0J
D 902 Diode	1SR139-400	R 301	RS1/16S103J
D 903 Diode	1SR139-400	R 302	RS1/16S103J
D 904 Diode	1SR139-400	R 304	RS1/16S331J
D 911 Diode	1SR139-400	R 351	RS1/16S821J
D 912 Diode	HZS6L(B1)	R 352	RS1/16S821J
D 921 Diode	HZS9L(C1)	R 355	RS1/16S821J
D 931 Diode	HZS7L(A1)	R 356	RS1/16S821J
D 932 Diode	HZS7L(C3)	R 357	RS1/16S223J
D 951 Diode	DAN202U	R 358	RS1/16S223J
D 981 Diode	DAN202U	R 361	RS1/16S223J
D 982 Diode	HZS9L(A2)	R 362	RS1/16S223J
D 991 Diode	HZS9L(B1)	R 363	RS1/16S0R0J
ZNR 451 Surge Protector	DSP-201M-A21F	R 368	RS1/16S0R0J
L 171 Inductor	CTF1530	R 401	RS1/16S473J
L 401 Ferri-Inductor	LAU2R2K	R 402	RS1/16S473J
L 402 Ferri-Inductor	LAU4R7K	R 403	RS1/16S681J
L 403 Inductor	LAU1R0K	R 404	RS1/16S681J
L 601 Ferri-Inductor	LAU2R2K	R 409	RS1/16S681J
L 801 Inductor	LAU100K	R 410	RS1/16S103J
L 802 Ferri-Inductor	LAU2R2K	R 411	RS1/16S681J
L 852 Inductor	CTF1510	R 412	RS1/16S681J
L 853 Inductor	CTF1489	R 413	RS1/16S681J
L 901 Choke Coil 600μH	CTH1221	R 414	RS1/16S473J
L 951 Ferri-Inductor	LAU2R2K	R 415	RS1/16S472J
X 601 Radiator 10.00MHz	CSS1475	R 416	RS1/16S473J
S 801 Switch(DSENS)	CSN1039	R 417	RS1/16S473J
FM/AM Tuner Unit	CWE1563	R 418	RS1/16S473J
BZ 641 Buzzer	CPV1050	R 419	RS1/16S222J
		R 420	RS1/16S222J
		R 424	RS1/16S393J
		R 551	RS1/16S0R0J
		R 553	RS1/16S0R0J
RESISTORS			
R 101	RS1/16S101J		
R 102	RS1/16S470J		
R 103	RS1/16S101J	R 601	RS1/16S473J
R 104	RS1/16S222J	R 603	RS1/16S473J
R 105	RS1/16S103J	R 606	RS1/16S0R0J
		R 608	RS1/16S104J
		R 613	RS1/16S222J
R 106	RS1/16S562J		
R 107	RS1/16S332J		
R 108	RS1/16S150J	R 614	RS1/16S222J
R 109	RS1/16S181J	R 615	RS1/16S104J
R 110	RS1/16S181J	R 616	RS1/16S473J
		R 617	RS1/16S0R0J
		R 618	RS1/16S222J
R 111	RS1/16S223J		
R 112	RS1/16S223J		
R 113	RS1/16S102J	R 619	RS1/16S473J
R 114	RS1/16S102J	R 620	RS1/16S472J
R 143	RS1/16S104J	R 621	RS1/16S473J
		R 622	RS1/16S104J
R 144	RS1/16S104J	R 623	RS1/16S473J
R 145	RS1/16S563J		
R 146	RS1/16S563J		
R 147	RS1/16S474J		
R 148	RS1/16S474J		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 624	RS1/16S0R0J	R 985	RD1/4PU102J
R 626	RS1/16S104J	R 991	RD1/4PU221J
R 630	RS1/16S104J	R 992	RD1/4PU221J
R 631	RS1/16S102J	R 993	RS1/16S472J
R 632	RS1/16S104J	R 994	RS1/16S222J
R 633	RS1/16S104J	R 995	RS1/16S0R0J
R 634	RS1/16S473J	R 997	RAB4C102J
R 638	RS1/16S0R0J	CAPACITORS	
R 640	RS1/16S0R0J	C 101	CKSRYB104K16
R 641	RS1/16S102J	C 102	CKSRYB104K16
R 642	RS1/16S0R0J	C 139	CKSRYB104K16
R 643	RS1/16S0R0J	C 140	CKSRYB104K16
R 650	RS1/16S222J	C 141	CKSRYB104K16
R 651	RS1/16S222J	C 142	CKSRYB104K16
R 653	RS1/16S0R0J	C 143	CKSRYB474K10
R 801	RS1/16S332J	C 144	CKSRYB474K10
R 804	RS1/16S1R0J	C 145	CCSRCH101J50
R 805	RS1/16S221J	C 146	CCSRCH101J50
R 806	RS1/16S221J	C 147	CKSRYB103K50
R 807	RS1/16S473J	C 161	CKSRYB183K25
R 808	RS1/16S473J	C 162	CKSRYB183K25
R 809	RS1/16S102J	C 171	CEJQ470M10
R 810	RS1/16S222J	C 172	CKSRYB104K16
R 811	RS1/16S222J	C 173	CEJQ100M16
R 812	RS1/16S222J	C 177	CCSRCH100D50
R 813	RS1/16S222J	C 178	CCSRCH100D50
R 814	RS1/16S222J	C 179	CCSRCH100D50
R 815	RS1/16S473J	C 180	CCSRCH100D50
R 816	RS1/16S104J	C 191	CEJQ1R0M50
R 817	RD1/4PU391J	C 192	CEJQ1R0M50
R 819	RS1/16S222J	C 205	CEJQR22M50
R 820	RS1/16S222J	C 206	CEJQR22M50
R 851	RS1/16S331J	C 207	CEJQ1R0M50
R 852	RD1/4PU302J	C 208	CEJQ1R0M50
R 853	RD1/4PU302J	C 209	CEJQ1R0M50
R 854	RS1/16S121J	C 210	CEJQ1R0M50
R 855	RS1/16S391J	C 211	CEJQNP4R7M16
R 856	RS1/16S1R0J	C 212	CEJQNP4R7M16
R 857	RS1/16S331J	C 213	CEJQNP4R7M16
R 912	RS1/16S152J	C 214	CEJQNP4R7M16
R 913	RS1/16S223J	C 215	CEJQNP4R7M16
R 914	RS1/16S152J	C 216	CEJQNP4R7M16
R 921	RS1/10S1R0J	C 306	CEHAR330M10
R 922	RD1/4PU221J	C 307	CCH1367
R 923	RS1/16S103J	C 309	CKSRYB104K16
R 924	RD1/4PU222J	C 310	CEHAR100M16
R 925	RS1/16S122J	C 311	CKSQYB225K10
R 931	RS1/16S472J	C 313	CKSRYB474K10
R 932	RS1/16S473J	C 314	CKSRYB474K10
R 933	RS1/16S103J	C 315	CKSRYB474K10
R 934	RS1/16S473J	C 316	CKSRYB474K10
R 935	RS1/16S104J	C 321	CKSRYB474K10
R 936	RS1/16S103J	C 322	CKSRYB474K10
R 937	RS1/16S473J	C 323	CKSRYB474K10
R 938	RD1/4PU102J	C 324	CKSRYB474K10
R 939	RD1/4PU102J	C 325	CKSQYB225K10
R 951	RD1/4PU153J	C 351	CEJQ100M16
R 952	RS1/16S472J	C 352	CEJQ100M16
R 953	RS1/16S472J	C 355	CEJQ100M16
R 954	RS1/16S102J	C 356	CEJQ100M16
R 962	RS1/16S102J	C 403	CKSRYB473K25
R 964	RS1/16S822J	C 404	CEJQ101M6R3
R 982	RS1/16S223J	C 405	CKSRYB103K50
R 983	RS1/16S223J		
R 984	RS1/16S473J		

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
C	406		CEJQ220M10	Q	922	Transistor	DTC114EK
C	408		CKSRYB223K50	Q	923	Transistor	2SB1238
C	409		CKSRYB223K50	Q	931	Transistor	IMX1
C	411		CKSRYB472K50	Q	932	Transistor	2SC2412K
C	440		CKSRYB103K50	Q	951	Transistor	2SA1037K
C	601		CEJQ4R7M35	Q	981	Transistor	2SC2412K
C	602		CKSRYB102K50	Q	982	Transistor	IMD2A
C	603		CKSRYB472K50	Q	991	Transistor	IMD2A
C	604		CCSRCH180J50	Q	999	Transistor	2SD2396
C	605		CCSRCH220J50	D	131	Diode Network	DA204U
C	801		CKSRYB103K50	D	132	Diode Network	DA204U
C	802		CEJQ470M10	D	133	Diode	DAN202U
C	803		CKSRYB104K16	D	134	Diode	DAP202U
C	805		CKSRYB103K25	D	801	Diode	HZS6L(B1)
C	806		CKSRYB473K25	D	803	Diode Network	DA204U
C	812	4.7μF	CKSYB105K25	D	804	Diode	DAN202U
C	851		CEJQ470M16	D	805	Diode	DAP202U
C	853		CCG1111	D	806	Diode	DAN202U
C	855		CEJQ100M25	D	807	Diode	DAP202U
C	856		CCSRCH331J50	D	808	Diode	HZS11L(A1)
C	857		CEJQ330M25	D	851	Diode	HZS9L(C3)
C	858		CKSRYB104K16	D	852	Diode	RB411D
C	859		CEJQ101M10	D	901	Diode	1SR139-400
C	860		CKSRYB104K16	D	902	Diode	1SR139-400
C	861		CKSRYB103K50	D	903	Diode	1SR139-400
C	912	330μF/10V	CKSRYB472K50	D	904	Diode	1SR139-400
C	913		CKSRYB103K50	D	911	Diode	1SR139-400
C	914		CEJQ470M10	D	912	Diode	HZS6L(B1)
C	921		CCH1181	D	921	Diode	HZS9L(C1)
C	922		CKSRYB103K50	D	931	Diode	HZS7L(A1)
C	923		CEJQ101M16	D	932	Diode	HZS7L(C3)
C	931		CEJQ100M16	D	951	Diode	DAN202U
C	932		CKSRYB104K16	D	981	Diode	DAN202U
C	963		CEJQ2R2M50	D	982	Diode	HZS9L(A2)
C	991		CKSRYB473K25	D	991	Diode	HZS9L(B1)
C	992	470μF/16V	CKSRYB102K50	ZNR	451	Surge Protector	DSP-201M-A21F
C	993		CEJQ101M10	L	171	Inductor	CTF1530
C	999		CCH1183	L	401	Ferri-Inductor	LAU2R2K
				L	402	Ferri-Inductor	LAU4R7K
				L	403	Inductor	LAU1R0K
				L	601	Ferri-Inductor	LAU2R2K
				L	801	Inductor	LAU100K
				L	802	Ferri-Inductor	LAU2R2K
				L	852	Inductor	CTF1510
				L	853	Inductor	CTF1489
				L	901	Choke Coil 600μH	CTH1221
				L	951	Ferri-Inductor	LAU2R2K
				X	601	Radiator 10.00MHz	CSS1475
				S	801	Switch(DSENS) FM/AM Tuner Unit	CSN1039 CWE1563
				BZ	641	Buzzer	CPV1050
RESISTORS							
Q	102	Transistor	DTC124EK	R	101		RS1/16S101J
Q	301	Transistor	DTC124EK	R	102		RS1/16S470J
Q	351	Transistor	IMH3A	R	103		RS1/16S101J
Q	353	Transistor	IMH3A	R	104		RS1/16S222J
Q	401	Transistor	2SC2412K	R	105		RS1/16S103J
Q	801	Transistor	IMD2A	R	106		RS1/16S562J
Q	802	Transistor	2SD1760F5	R	107		RS1/16S332J
Q	803	Transistor	2SD1767	R	108		RS1/16S150J
Q	804	Transistor	IMD2A	R	109		RS1/16S181J
Q	805	Transistor	DTC143EK	R	110		RS1/16S181J
Q	851	Transistor	2SD1760F5	R	111		RS1/16S223J
Q	852	Transistor	IMD2A	R	112		RS1/16S223J
Q	911	Transistor	2SD1760F5	R	113		RS1/16S102J
Q	913	Transistor	IMD2A	R	114		RS1/16S102J
Q	921	Transistor	2SD2396	R	143		RS1/16S104J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 144	RS1/16S104J	R 619	RS1/16S473J
R 145	RS1/16S563J	R 620	RS1/16S472J
R 146	RS1/16S563J	R 621	RS1/16S473J
R 147	RS1/16S474J	R 622	RS1/16S104J
R 148	RS1/16S474J	R 623	RS1/16S473J
R 151	RS1/16S0R0J	R 624	RS1/16S0R0J
R 152	RS1/16S0R0J	R 626	RS1/16S104J
R 161	RS1/16S272J	R 630	RS1/16S104J
R 162	RS1/16S272J	R 631	RS1/16S102J
R 163	RS1/16S162J	R 632	RS1/16S104J
R 164	RS1/16S162J	R 633	RS1/16S104J
R 171	RS1/16S0R0J	R 634	RS1/16S473J
R 172	RS1/16S0R0J	R 638	RS1/16S0R0J
R 241	RS1/16S0R0J	R 640	RS1/16S0R0J
R 242	RS1/16S0R0J	R 641	RS1/16S102J
R 247	RS1/16S101J	R 642	RS1/16S0R0J
R 248	RS1/16S101J	R 643	RS1/16S0R0J
R 249	RS1/16S101J	R 650	RS1/16S222J
R 250	RS1/16S101J	R 651	RS1/16S222J
R 287	RS1/16S0R0J	R 653	RS1/16S0R0J
R 288	RS1/16S0R0J	R 801	RS1/16S332J
R 289	RS1/16S0R0J	R 804	RS1/16S1R0J
R 290	RS1/16S0R0J	R 805	RS1/16S221J
R 301	RS1/16S103J	R 806	RS1/16S221J
R 302	RS1/16S103J	R 807	RS1/16S473J
R 304	RS1/16S331J	R 808	RS1/16S473J
R 351	RS1/16S821J	R 809	RS1/16S102J
R 352	RS1/16S821J	R 810	RS1/16S222J
R 355	RS1/16S821J	R 811	RS1/16S222J
R 356	RS1/16S821J	R 812	RS1/16S222J
R 357	RS1/16S223J	R 813	RS1/16S222J
R 358	RS1/16S223J	R 814	RS1/16S222J
R 361	RS1/16S223J	R 815	RS1/16S473J
R 362	RS1/16S223J	R 816	RS1/16S104J
R 363	RS1/16S0R0J	R 817	RD1/4PU391J
R 368	RS1/16S0R0J	R 819	RS1/16S222J
R 401	RS1/16S473J	R 820	RS1/16S222J
R 402	RS1/16S473J	R 851	RS1/16S331J
R 403	RS1/16S681J	R 852	RD1/4PU302J
R 404	RS1/16S681J	R 853	RD1/4PU302J
R 409	RS1/16S681J	R 854	RS1/16S121J
R 410	RS1/16S103J	R 855	RS1/16S391J
R 411	RS1/16S681J	R 856	RS1/16S1R0J
R 412	RS1/16S681J	R 857	RS1/16S331J
R 413	RS1/16S681J	R 912	RS1/16S152J
R 414	RS1/16S473J	R 913	RS1/16S223J
R 415	RS1/16S472J	R 914	RS1/16S152J
R 416	RS1/16S473J	R 921	RS1/10S1R0J
R 417	RS1/16S473J	R 922	RD1/4PU221J
R 418	RS1/16S473J	R 923	RS1/16S103J
R 419	RS1/16S222J	R 924	RD1/4PU222J
R 420	RS1/16S222J	R 925	RS1/16S122J
R 424	RS1/16S393J	R 931	RS1/16S472J
R 551	RS1/16S0R0J	R 932	RS1/16S473J
R 553	RS1/16S0R0J	R 933	RS1/16S103J
R 602	RS1/16S473J	R 934	RS1/16S473J
R 603	RS1/16S473J	R 935	RS1/16S104J
R 606	RS1/16S0R0J	R 936	RS1/16S103J
R 608	RS1/16S104J	R 937	RS1/16S473J
R 613	RS1/16S222J	R 938	RD1/4PU102J
R 614	RS1/16S222J	R 939	RD1/4PU102J
R 615	RS1/16S104J	R 951	RD1/4PU153J
R 616	RS1/16S473J	R 952	RS1/16S472J
R 617	RS1/16S0R0J	R 953	RS1/16S472J
R 618	RS1/16S222J	R 954	RS1/16S102J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 962	RS1/16S102J	C 406	CEJQ220M10
R 964	RS1/16S822J	C 408	CKSRYB223K50
R 982	RS1/16S223J	C 409	CKSRYB223K50
R 983	RS1/16S223J	C 411	CKSRYB472K50
R 984	RS1/16S473J	C 440	CKSRYB103K50
R 985	RD1/4PU102J	C 601	CEJQ4R7M35
R 991	RD1/4PU221J	C 602	CKSRYB102K50
R 992	RD1/4PU221J	C 603	CKSRYB472K50
R 993	RS1/16S472J	C 604	CCSRCH180J50
R 994	RS1/16S222J	C 605	CCSRCH220J50
R 995	RS1/16S0R0J	C 801	CKSRYB103K50
R 997	RAB4C102J	C 802	CEJQ470M10
CAPACITORS		C 803	CKSRYB104K16
C 101	CKSRYB104K16	C 805	CKSRYB103K25
C 102	CKSRYB104K16	C 806	CKSRYB473K25
C 139	CKSRYB104K16	C 812	CKSYB105K25
C 140	CKSRYB104K16	C 851	CEJQ470M16
C 141	CKSRYB104K16	C 853	CCG1111
C 142	CKSRYB104K16	C 855	CEJQ100M25
C 143	CKSRYB104K16	C 856	CCSRCH331J50
C 144	CKSRYB474K10	C 857	CEJQ330M25
C 145	CKSRYB474K10	C 858	CKSRYB104K16
C 146	CCSRCH101J50	C 859	CEJQ101M10
C 147	CCSRCH101J50	C 860	CKSRYB104K16
C 161	CKSRYB103K50	C 861	CKSRYB103K50
C 162	CKSRYB183K25	C 912	CKSRYB472K50
C 171	CKSRYB183K25	C 913	CKSRYB103K50
C 172	CEJQ470M10	C 914	CEJQ470M10
C 173	CKSRYB104K16	C 921	CCH1181
C 177	CEJQ100M16	C 922	CKSRYB103K50
C 178	CCSRCH100D50	C 923	CEJQ101M16
C 179	CCSRCH100D50	C 931	CEJQ100M16
C 180	CCSRCH100D50	C 932	CKSRYB104K16
C 191	CEJQ1R0M50	C 963	CEJQ2R2M50
C 192	CEJQ1R0M50	C 991	CKSRYB473K25
C 205	CEJQR22M50	C 992	CKSRYB102K50
C 206	CEJQR22M50	C 993	CEJQ101M10
C 207	CEJQ1R0M50	C 999	CCH1183
C 208	CEJQ1R0M50	 Unit Number : CWM8098(DEH-P640/XN/UC) Unit Name : Keyboard Unit	
C 209	CEJQ1R0M50		
C 210	CEJQ1R0M50	MISCELLANEOUS	
C 211	CEJQNP4R7M16	IC 1901	IC
C 212	CEJQNP4R7M16	IC 1902	IC
C 213	CEJQNP4R7M16	IC 1903	IC
C 214	CEJQNP4R7M16	IC 1904	IC
C 215	CEJQNP4R7M16	Q 1941	Transistor
C 216	CEJQNP4R7M16	Q 1942	Transistor
C 306	CEHAR330M10	D 1901	Diode
C 307	CCH1367	D 1902	Diode
C 309	CKSRYB104K16	D 1906	Diode
C 310	CEHAR100M16	D 1979	LED
C 311	CKSQYB225K10	D 1980	LED
C 313	CKSRYB474K10	D 1981	LED
C 314	CKSRYB474K10	D 1983	LED
C 315	CKSRYB474K10	D 1984	LED
C 316	CKSRYB474K10	D 1993	LED
C 321	CKSRYB474K10	D 1996	LED
C 322	CKSRYB474K10	L 1901	Inductor
C 323	CKSRYB474K10	L 1902	Inductor
C 324	CKSRYB474K10	L 1922	Inductor-Array
C 325	CKSQYB225K10	L 1923	Inductor-Array
C 351	CEJQ100M16	L 1924	Inductor-Array
C 352	CEJQ100M16	L 1990	Inductor-Array
C 355	CEJQ100M16	TH 1941	Thermistor
C 356	CEJQ100M16	X 1901	Radiator 10.0MHz
C 403	CKSRYB473K25	S 1901	Switch
C 404	CEJQ101M6R3		
C 405	CKSRYB103K50		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
S 1903 Push Switch	CSG1111	R 1974	RS1/16S270J
S 1906 Switch	CSG1107	R 1975	RS1/16S270J
S 1907 Switch	CSG1107	R 1976	RS1/16S101J
S 1908 Push Switch	CSG1111	R 1977	RS1/16S101J
S 1909 Switch	CSG1107	R 1978	RS1/16S181J
S 1910 Switch	CSG1107	R 1979	RS1/16S181J
S 1911 Switch	CSG1107	R 1980	RS1/16S0R0J
S 1912 Switch	CSG1107	R 1985	RS1/16S0R0J
S 1913 Switch	CSG1107	R 1986	RS1/16S181J
S 1914 Switch	CSG1107	R 1987	RS1/16S181J
S 1915 Switch	CSG1107	CAPACITORS	
S 1916 Switch	CSG1107	C 1901	CKSYB105K25
S 1917 Switch	CSG1107	C 1902	CKSRYB104K16
S 1918 Switch	CSG1107	C 1903	CKSRYB474K10
S 1919 Switch	CSG1107	C 1905	CKSRYB103K25
S 1920 Switch	CSG1107	C 1909	CKSRYB473K16
S 1922 Switch	CSG1107	C 1910	CSZSR4R7M10
S 1923 Switch	CSG1107	C 1911	CKSRYB103K25
S 1924 Switch	CSG1107	C 1912	CSZSR4R7M10
S 1930 Encoder(VOLUME)	CSD1059	C 1913	CKSRYB103K50
VR 1941 Semi-fixed 20kΩ(B) OEL Unit	CCP1231 MXS8017	C 1914	CSZSR4R7M10
RESISTORS		C 1941	CKSRYB104K25
R 1901	RS1/16S222J	C 1942	CKSRYB104K16
R 1902	RS1/16S222J	C 1943	CKSRYB104K25
R 1903	RS1/16S473J	C 1944	CKSRYB104K25
R 1904	RS1/16S103J	C 1945	CKSRYB104K25
R 1905	RS1/16S682J	C 1946	CKSRYB104K16
R 1906	RS1/16S121J	C 1947	CKSRYB104K25
R 1907	RS1/16S2R2J	C 1972	CKSRYB103K25
R 1908	RS1/16S222J	C Unit Number : CWM7990(DEH-P6400/XN/UC, DEH-P6450/XN/ES)	
R 1909	RS1/16S154J	Unit Name : Keyboard Unit	
R 1910	RS1/16S473J	MISCELLANEOUS	
R 1911	RAB4C101J	IC 1901	IC
R 1912	RS1/16S473J	IC 1902	IC
R 1913	RS1/16S473J	IC 1903	IC
R 1914	RS1/16S103J	IC 1904	IC
R 1915	RAB4C101J	Q 1941	Transistor
R 1916	RS1/16S101J	Q 1942	Transistor
R 1917	RAB4C101J	D 1901	Diode
R 1918	RAB4C101J	D 1902	Diode
R 1919	RAB4C101J	D 1906	Diode
R 1920	RAB4C101J	D 1979	LED
R 1925	RAB4C101J	D 1980	LED
R 1926	RS1/16S101J	D 1981	LED
R 1931	RS1/16S0R0J	D 1983	LED
R 1941	RS1/16S333J	D 1984	LED
R 1942	RS1/16S683J	D 1993	LED
R 1943	RS1/16S392J	D 1996	LED
R 1944	RS1/16S393J	L 1901	Inductor
R 1945	RAB4C102J	L 1902	Inductor
R 1946	RS1/16S222J	L 1922	Inductor-Array
R 1947	RS1/16S103J	L 1923	Inductor-Array
R 1949	RS1/16S102J	L 1924	Inductor-Array
R 1950	RS1/16S102J	L 1990	Inductor-Array
R 1966	RS1/16S101J	TH 1941	Thermistor
R 1967	RS1/16S101J	X 1901	Radiator 10.0MHz
R 1968	RS1/16S101J	S 1901	Switch
R 1969	RS1/16S101J	S 1903	Push Switch
R 1970	RS1/16S270J	S 1906	Switch
R 1971	RS1/16S270J	S 1907	Switch
R 1972	RS1/16S270J	S 1908	Push Switch
R 1973	RS1/16S270J	S 1909	Switch

====Circuit Symbol and No.==Part Name

Part No.

S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Switch	CSG1107
S	1918	Switch	CSG1107
S	1919	Switch	CSG1107
S	1920	Switch	CSG1107
S	1922	Switch	CSG1107
S	1923	Switch	CSG1107
S	1924	Switch	CSG1107
S	1930	Encoder(VOLUME)	CSD1059
VR	1941	Semi-fixed 20kΩ(B) OEL Unit	CCP1231 MXS8017

RESISTORS

R	1901	RS1/16S222J
R	1902	RS1/16S222J
R	1903	RS1/16S473J
R	1904	RS1/16S103J
R	1905	RS1/16S682J
R	1906	RS1/16S121J
R	1907	RS1/16S2R2J
R	1908	RS1/16S222J
R	1909	RS1/16S154J
R	1910	RS1/16S473J
R	1911	RAB4C101J
R	1912	RS1/16S473J
R	1913	RS1/16S473J
R	1914	RS1/16S103J
R	1915	RAB4C101J
R	1916	RS1/16S101J
R	1917	RAB4C101J
R	1918	RAB4C101J
R	1919	RAB4C101J
R	1920	RAB4C101J
R	1925	RAB4C101J
R	1926	RS1/16S101J
R	1931	RS1/16S0R0J
R	1941	RS1/16S333J
R	1942	RS1/16S683J
R	1943	RS1/16S392J
R	1944	RS1/16S393J
R	1945	RAB4C102J
R	1946	RS1/16S222J
R	1947	RS1/16S103J
R	1949	RS1/16S102J
R	1950	RS1/16S102J
R	1966	RS1/16S101J
R	1967	RS1/16S101J
R	1968	RS1/16S101J
R	1969	RS1/16S101J
R	1970	RS1/16S270J
R	1971	RS1/16S270J
R	1972	RS1/16S270J
R	1973	RS1/16S270J
R	1974	RS1/16S270J
R	1975	RS1/16S270J
R	1976	RS1/16S101J
R	1977	RS1/16S101J
R	1978	RS1/16S181J
R	1979	RS1/16S181J
R	1980	RS1/16S0R0J
R	1985	RS1/16S0R0J
R	1986	RS1/16S181J
R	1987	RS1/16S181J

====Circuit Symbol and No.==Part Name

Part No.

CAPACITORS

C	1901	CKSYB105K25
C	1902	CKSRYB104K16
C	1903	CKSRYB474K10
C	1905	CKSRYB103K25
C	1909	CKSRYB473K16
C	1910	CSZSR4R7M10
C	1911	CKSRYB103K25
C	1912	CSZSR4R7M10
C	1913	CKSRYB103K50
C	1914	CSZSR4R7M10
C	1941	CKSRYB104K25
C	1942	CKSRYB104K16
C	1943	CKSRYB104K25
C	1944	CKSRYB104K25
C	1945	CKSRYB104K25
C	1946	CKSRYB104K16
C	1947	CKSRYB104K25
C	1972	CKSRYB103K25

B Unit Number : CWM7986
Unit Name : Panel Unit

D	1850	LED	CL220PGC
S	1850	Push Switch(EJECT)	CSG1112
R	1852		RS1/16S101J
R	1853		RS1/16S101J
C	1863		CKSRYB223K50

D Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101	RS1/16S222J
R	102	RS1/8S120J
R	103	RS1/8S100J
R	201	RS1/16S513J
R	202	RS1/16S513J
R	203	RS1/16S823J
R	204	RS1/16S823J
R	206	RS1/16S823J
R	208	RS1/16S124J
R	209	RS1/16S183J
R	210	RS1/16S153J
R	211	RS1/16S103J
R	212	RS1/16S103J
R	213	RS1/16S124J
R	215	RS1/16S0R0J
R	216	RS1/16S471J
R	301	RS1/16S333J
R	302	RS1/16S332J
R	303	RS1/16S332J
R	304	RS1/16S514J

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
R 306	RS1/16S102J	C 328	CKSRYB472K50
R 307	RS1/16S102J	C 329	CKSRYB104K16
R 312	RS1/16S103J	C 330	CKSRYB104K16
R 313	RS1/16S473J	C 331	CKSRYB104K16
R 315	RS1/16S334J	C 401	CKSRYB221K50
R 321	RS1/16S331J	C 402	CKSRYB221K50
R 322	RS1/16S0R0J	C 403	CKSRYB153K25
R 323	RS1/16S332J	C 404	CKSRYB103K50
R 401	RS1/16S684J	C 405	CEV101M10
R 402	RS1/16S103J	C 702	CKSRYB104K16
R 403	RS1/16S103J	C 703	CKSRYB104K16
R 404	RS1/16S183J	C 801	CCH1349
R 405	RS1/16S123J	C 802	CEV101M10
R 407	RS1/16S622J	C 803	CKSRYB224K16
R 408	RS1/16S622J		
R 409	RS1/16S113J		
R 410	RS1/16S752J		
R 701	RS1/16S102J	M 1	Pickup Unit(Service)(P9) CXX1480
R 702	RS1/16S221J	M 2	Motor Unit(SPINDLE) CXB6007
R 703	RS1/16S221J		Motor Unit(LOADING/CARRIAGE) CXB5903
R 704	RS1/16S221J		
R 705	RS1/16S221J		
R 706	RS1/16S221J		
R 707	RS1/16S221J		
R 708	RS1/16S102J		
R 709	RS1/16S102J		
R 710	RS1/16S102J		
R 901	RS1/16S104J		
R 902	RS1/16S473J		
R 903	RS1/16S273J		

CAPACITORS

C 101	CEV470M6R3
C 102	CKSRYB102K50
C 103	CKSRYB104K16
C 104	CKSRYB224K16
C 105	CEV470M6R3
C 106	CKSRYB104K16
C 107	CKSRYB105K6R3
C 201	CKSRYB104K16
C 202	CCSRCH560J50
C 204	CKSRYB224K16
C 205	CKSRYB224K16
C 206	CKSRYB273K25
C 207	CKSRYB273K25
C 208	CKSRYB104K16
C 209	CKSRYB104K16
C 210	CCSRCK2R0C50
C 211	CCSRCH220J50
C 301	CKSRYB153K25
C 302	CKSRYB104K16
C 303	CKSRYB103K50
C 304	CKSRYB103K50
C 305	CKSRYB104K16
C 306	CKSRYB104K16
C 307	CKSRYB333K16
C 308	CKSRYB104K16
C 309	CKSRYB473K16
C 310	CKSRYB473K16
C 311	CKSRYB104K16
C 312	CKSRYB104K16
C 315	CEV220M6R3
C 317	CKSRYB104K16
C 318	CKSRYB104K16
C 319	CKSRYB104K16
C 320	CCSRCH470J50
C 325	CKSRYB471K50

Miscellaneous Parts List

M 1	Pickup Unit(Service)(P9)	CXX1480
M 2	Motor Unit(SPINDLE)	CXB6007
	Motor Unit(LOADING/CARRIAGE)	CXB5903