


EXPLODED VIEW

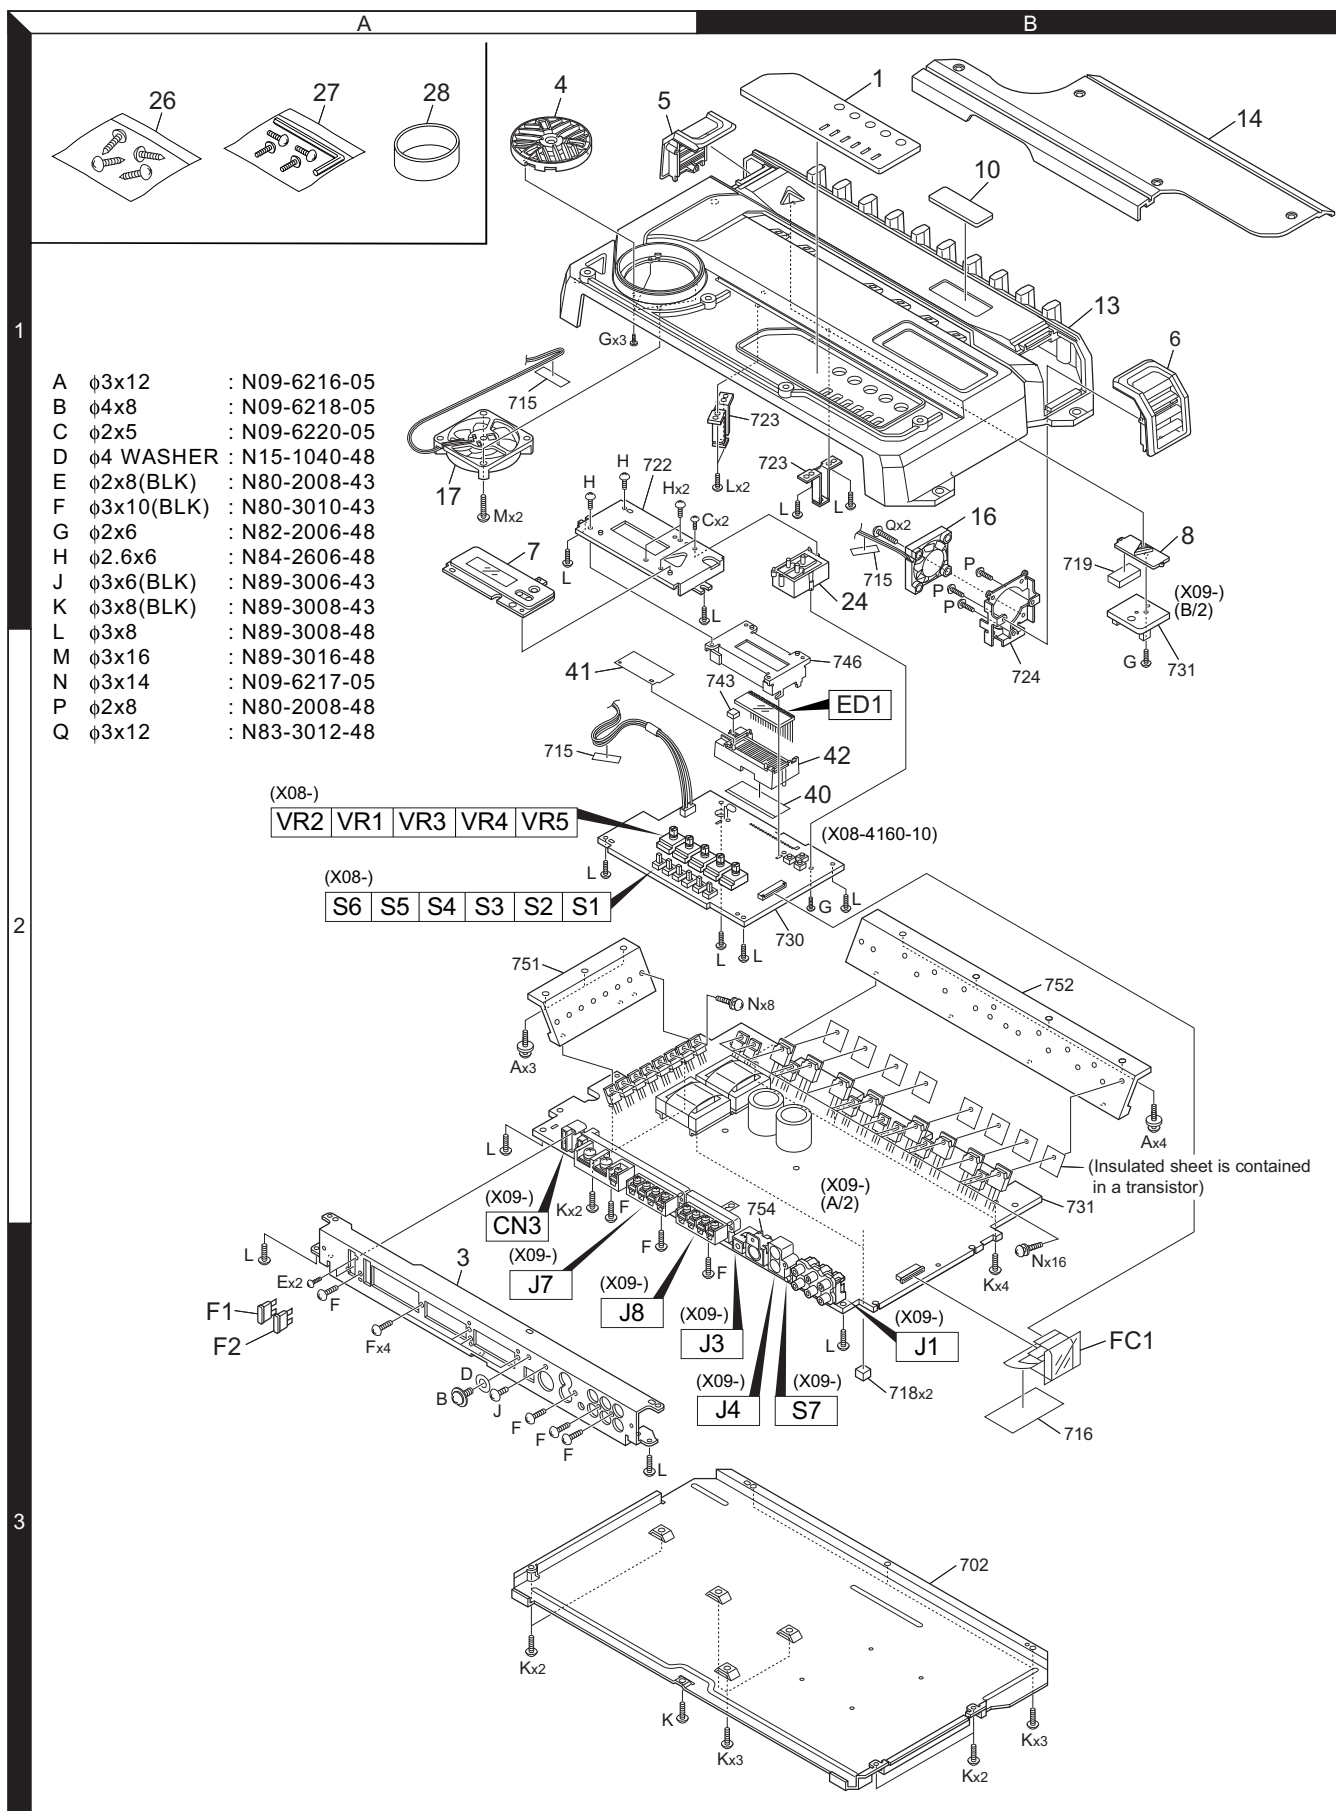

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KAC-PS541/X541					
1	1B	*	A21-4365-02	DRESSING PANEL	KM1
1	1B	*	A21-4366-02	DRESSING PANEL	E1
3	3A	*	A64-3299-02	PANEL	
4	1A	*	B07-3102-03	ESCUTCHEON	
5	1B	*	B07-3103-02	ESCUTCHEON	
6	1B	*	B07-3104-02	ESCUTCHEON	
7	1A	*	B10-4544-03	FRONT GLASS	
8	1B	*	B19-2257-03	LIGHTING BOARD	
10	1B	*	B43-1521-04	BADGE	KM1
10	1B	*	B43-1522-04	BADGE	E1
-			B46-0100-50	WARRANTY CARD	
-			B46-0648-13	USER CARD	K
-		*	B64-2799-00	INSTRUCT.MANUAL (ENG.FRE.SPA.)	KE1
-		*	B64-2800-00	INST.MANUAL (GER.DUT.ITA.POR.)	E1
-		*	B64-2801-00	INSTRUCTION MANUAL (ENG.T-CHI.)	M1
FC1	3B	*	E39-0643-05	FLAT CABLE	
13	1B	*	F01-1752-01	HEAT SINK	
14	1B	*	F07-1142-12	COVER	KM1
14	1B	*	F07-1143-12	COVER	E1
16	1B	*	F09-1846-05	FAN	
17	1A	*	F09-1885-05	FAN	
△ F1,2	3A		F52-0015-05	FUSE (BLADE TYPE) 30A	
-		*	H10-4894-13	POLYSTYRENE FOAMED FIXTURE	
-		*	H13-2056-04	CARTON BOARD	
-		*	H25-1199-04	PROTECTION BAG	
-		*	H25-1200-04	PROTECTION BAG (250X350X0.03)	
-		*	H54-3133-03	ITEM CARTON CASE	K
-		*	H54-3134-03	ITEM CARTON CASE	E1
-		*	H54-3135-03	ITEM CARTON CASE	M1
24	2B	*	K24-4146-03	KNOB (VR CAP)	
26	1A		N99-1577-15	SCREW SET	
27	1A	*	N99-1752-05	SCREW SET	
A	2A	*	N09-6216-05	TAPTITE SCREW	
B	3A	*	N09-6218-05	TAPTITE SCREW	
C	2B	*	N09-6220-05	MACHINE SCREW	
D	3A	*	N15-1040-48	FLAT WASHER (4)	
E	3A	*	N80-2008-43	PAN HEAD TAPTITE SCREW	
F	3A	*	N80-3010-43	PAN HEAD TAPTITE SCREW	
G	1A	*	N82-2006-48	BINDING HEAD TAPTITE SCREW	
H	2A	*	N84-2606-48	PAN HEAD TAPTITE SCREW	
J	3A	*	N89-3006-43	BINDING HEAD TAPTITE SCREW	
K	3A	*	N89-3008-43	BINDING HEAD TAPTITE SCREW	
L	2A	*	N89-3008-48	BINDING HEAD TAPTITE SCREW	
M	2A	*	N89-3016-48	BINDING HEAD TAPTITE SCREW	
P	2B	*	N80-2008-48	PAN HEAD TAPTITE SCREW	
Q	2B	*	N83-3012-48	PAN HEAD TAPTITE SCREW	
28	1A		W01-1606-05	ACCESSORY	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
PREAMPLIFIER UNIT (X08-4160-10)					
40	2B	*	B11-1446-04	REFLECTION SHEET	
41	2A	*	B11-1447-04	OPTICAL DIFFUSER	
42	2B	*	B19-2258-02	LIGHTING BOARD	
D2		*	B30-1694-05	LED	
ED2		*	B38-1150-05	LCD DISPLAY ASSY	
C1,2			CK73GB1H103K	CHIP C	0.010UF K
C3-8			CK73FB1C224K	CHIP C	0.22UF K
C9,10			CD04AS1H010M	ELECTRO	1UF 50WV
C11			CK73GB1H103K	CHIP C	0.010UF K
C12			CD04AS1C100M	ELECTRO	10UF 16WV
C14-17			CD04AS1C100M	ELECTRO	10UF 16WV
C18,19			CK73GB1H103K	CHIP C	0.010UF K
C20,21			CD04AS1C100M	ELECTRO	10UF 16WV
C22,23			CK73GB1C104K	CHIP C	0.10UF K
C24,25			CK73FB1C224K	CHIP C	0.22UF K
C26,27			CD04AS1C100M	ELECTRO	10UF 16WV
C28,29			CK73GB1H103K	CHIP C	0.010UF K
C30			CK73GB1H104K	CHIP C	0.10UF K
C31			CK73FB1C154K	CHIP C	0.15UF K
C32			CK73GB1E223K	CHIP C	0.022UF K
C33,34			CK73GB1H103K	CHIP C	0.010UF K
C36			CD04AS1C100M	ELECTRO	10UF 16WV
C49,50			CK73GB1H102K	CHIP C	1000PF K
C51			CK73GB1H103K	CHIP C	0.010UF K
C52			CD04AS1C100M	ELECTRO	10UF 16WV
C53			CK73GB1H103K	CHIP C	0.010UF K
C61,62			CK73FB1C224K	CHIP C	0.22UF K
C63,64			CD04AS1C100M	ELECTRO	10UF 16WV
C72			CK73GB1C104K	CHIP C	0.10UF K
C73			CK73FB1C154K	CHIP C	0.15UF K
C75			CD04AS1C100M	ELECTRO	10UF 16WV
C76			CK73GB1E223K	CHIP C	0.022UF K
C101,102			CD04AS1C100M	ELECTRO	10UF 16WV
C103,104			CK73GB1C104K	CHIP C	0.10UF K
C105,106			CK73FB1C224K	CHIP C	0.22UF K
C107,108			CD04AS1C100M	ELECTRO	10UF 16WV
C109			CC73GCH1H470J	CHIP C	47PF J
C110			CC73GCH1H101J	CHIP C	100PF J
C114,115			CD04AS1C100M	ELECTRO	10UF 16WV
C200			CD04AS1C100M	ELECTRO	10UF 16WV
C201			CK73GB1H103K	CHIP C	0.010UF K
C202,203			CK73GB1H473K	CHIP C	0.047UF K
C204			CK73GB1H821K	CHIP C	820PF K
C900-905			CK73GB1H103K	CHIP C	0.010UF K
C906			CK73GB1H102K	CHIP C	1000PF K
CN1		*	E41-2186-05	FLAT CABLE CONNECTOR	
CN2		*	E41-0941-05	PIN ASSY	
WH2		*	E39-0655-05	WIRING HARNESS	
R1,2			RK73GB2A473J	CHIP R	47K J 1/10W
R3,4			RK73GB2A134J	CHIP R	130K J 1/10W
R5,6			RK73GB2A223J	CHIP R	22K J 1/10W
R7,8			RK73GB2A563J	CHIP R	56K J 1/10W
R9			RK73GB2A473J	CHIP R	47K J 1/10W

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

PREAMPLIFIER UNIT (X08-4160-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R12,13 R14-17 R18,19 R20,21 R22,23			RK73GB2A473J RK73GB2A102J RK73GB2A103J RK73GB2A473J RK73GB2A822J	CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 8.2K J 1/10W	
R24,25 R26,27 R28,29 R32,33 R35			RK73GB2A912J RK73GB2A563J RK73GB2A473J RK73GB2A153J RK73GB2A332J	CHIP R 9.1K J 1/10W CHIP R 56K J 1/10W CHIP R 47K J 1/10W CHIP R 15K J 1/10W CHIP R 3.3K J 1/10W	
R36 R37 R38 R42 R43			RK73GB2A222J RK73GB2A473J RK73GB2A752J RK73GB2A153J RK73GB2A473J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 7.5K J 1/10W CHIP R 15K J 1/10W CHIP R 47K J 1/10W	
R50,51 R52 R53,54 R55 R60,61			RK73GB2A103J RK73GB2A203J RK73GB2A471J RK73GB2A103J RK73GB2A102J	CHIP R 10K J 1/10W CHIP R 20K J 1/10W CHIP R 470 J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W	
R101,102 R103 R104 R105 R107			RK73GB2A473J RK73GB2A912J RK73GB2A822J RK73GB2A563J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 9.1K J 1/10W CHIP R 8.2K J 1/10W CHIP R 56K J 1/10W CHIP R 47K J 1/10W	
R108 R110,111 R112 R114 R115,116			RK73GB2A563J RK73GB2A473J RK73GB2A103J RK73GB2A203J RK73GB2A473J	CHIP R 56K J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 20K J 1/10W CHIP R 47K J 1/10W	
R122 R126 R128,129 R200 R201			RK73GB2A822J RK73GB2A912J RK73GB2A471J RK73GB2A472J RK73GB2A683J	CHIP R 8.2K J 1/10W CHIP R 9.1K J 1/10W CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 68K J 1/10W	
R202-205 R206-209 R210 R211 R213			RK73GB2A471J RK73GB2A102J RK73GB2A104J RK73GB2A102J RK73GB2A103J	CHIP R 470 J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W	
R215 R217 R228,229 R230-233 R237,238			RK73GB2A103J RK73GB2A103J RD14BB2C391J RK73GB2A101J RK73GB2A393J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W RD 390 J 1/6W CHIP R 100 J 1/10W CHIP R 39K J 1/10W	
R239,240 R241 R242 R243 R244			RK73GB2A473J RK73GB2A103J RK73GB2A222J RK73GB2A224J RK73GB2A123J	CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 220K J 1/10W CHIP R 12K J 1/10W	
R245 R246 R247,248 R249,250 VR1,2		*	RK73GB2A101J RK73GB2A103J RK73GB2A150J RK73GB2A473J R31-0241-05	CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 15 J 1/10W CHIP R 47K J 1/10W VARIABLE RESISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
VR3 VR4 VR5		*	R31-0238-05 R31-0241-05 R31-0238-05	VARIABLE RESISTOR VARIABLE RESISTOR VARIABLE RESISTOR	
S1-5 S6 S7-9		*	S62-0873-05 S62-0874-05 S70-0922-05	SLIDE SWITCH SLIDE SWITCH TACT SWITCH	
D1 IC1,2 IC4 IC5,6 IC7		*	MA3082-M NJM2058M-ZB NJM2058M-ZB NJM4565MD-ZB LC75853NE-E	ZENER DIODE ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC8		*	E-TDA7409DTR	ANALOGUE IC	
AUDIO UNIT (X09-5780-10)					
D92			B30-1601-05	LED	
C1 C2 C3 C4 C5		*	C90-5557-05 C90-5588-05 CF92FV1H102J C90-5566-05 C90-5605-05	ELECTRO 10UF 25WV ELECTRO 47UF 25WV MF-C 1000PF J ELECTRO 100UF 6.3WV ELECTRO 10UF 50WV	
C6-10 C11,12 C13 C14 C17		*	CK73GB1H103K CD04BC1C392M CK73GB1H103K C90-5605-05 C90-5605-05	CHIP C 0.010UF K ELECTRO 3900UF 16WV CHIP C 0.010UF K ELECTRO 10UF 50WV ELECTRO 10UF 50WV	
C19,20 C21,22 C23,24 C27,28 C29		*	C90-5588-05 CK73GB1H103K CF92FV1H152J C90-5605-05 C90-5590-05	ELECTRO 47UF 25WV CHIP C 0.010UF K MF-C 1500PF J ELECTRO 10UF 50WV ELECTRO 220UF 25WV	
C30 C31,32 C33,34 C35,36 C37,38		*	CK73GB1H103K CC73GCH1H270J CK73GB1H103K C90-5691-05 CK73GB1H103K	CHIP C 0.010UF K CHIP C 27PF J CHIP C 0.010UF K ELECTRO 4700UF 42WV CHIP C 0.010UF K	
C50 C51 C52 C53 C54		*	C90-5605-05 C90-5601-05 C90-5588-05 CK73GB1C104K C90-5605-05	ELECTRO 10UF 50WV ELECTRO 1UF 50WV ELECTRO 47UF 25WV CHIP C 0.10UF K ELECTRO 10UF 50WV	
C55 C69 C70 C72 C75			CK73GB1H103K C90-5605-05 CK73GB1H103K C90-5572-05 C90-5605-05	CHIP C 0.010UF K ELECTRO 10UF 50WV CHIP C 0.010UF K ELECTRO 100UF 10WV ELECTRO 10UF 50WV	
C76 C77 C78 C80 C81		*	CK73GB1H103K C90-5573-05 CK73GB1H103K C90-5605-05 C90-5588-05	CHIP C 0.010UF K ELECTRO 220UF 10WV CHIP C 0.010UF K ELECTRO 10UF 50WV ELECTRO 47UF 25WV	
C82 C85 C86 C98,99			CK73GB1H103K C90-5572-05 C90-5602-05 CK73GB1H103K	CHIP C 0.010UF K ELECTRO 100UF 10WV ELECTRO 2.2UF 50WV CHIP C 0.010UF K	

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541

(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

AUDIO UNIT (X09-5780-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C100			CF92FV1H102J	MF-C 1000PF J		C517			CK73FB1H104K	CHIP C 0.10UF K	
C101,102			CK73GB1H102K	CHIP C 1000PF K		C902		*	CD04BC1C392M	ELECTRO 3900UF 16WV	
C103,104			C90-5605-05	ELECTRO 10UF 50WV		C920,921			CK73GB1H103K	CHIP C 0.010UF K	
C105,106			CC73GCH1H150J	CHIP C 15PF J		CN1			E41-0928-05	PIN ASSY	
C113,114			CC73GCH1H150J	CHIP C 15PF J		CN2			E41-0927-05	PIN ASSY	
C115,116			C90-5605-05	ELECTRO 10UF 50WV		CN4		*	E41-2203-05	FLAT CABLE CONNECTOR	
C124			CK73FB1H104K	CHIP C 0.10UF K		J1		*	E63-0902-05	PIN JACK	
C125			CK73GB1H471K	CHIP C 470PF K		J3		*	E56-0856-05	CYLINDRICAL RECEPTACLE	
C126			CK73GB1H102K	CHIP C 1000PF K		J4		*	E56-0853-05	CYLINDRICAL RECEPTACLE	
C131,132			CC73GCH1H150J	CHIP C 15PF J		J7			E70-0838-05	SCREW TERMINAL BOARD	
C150			C90-5575-05	ELECTRO 22UF 16WV		J8		*	E70-0840-05	SCREW TERMINAL BOARD	
C161		*	C90-5607-05	ELECTRO 220UF 50WV		CN3			J13-0602-05	FUSE HOLDER	
C200			CF92FV1H102J	MF-C 1000PF J		L1		*	L33-1972-05	CHOKE COIL	
C201,202			CK73GB1H102K	CHIP C 1000PF K		L3,4		*	L19-0755-05	TRANSFORMER FOR CONVERTER	
C203,204			C90-5605-05	ELECTRO 10UF 50WV		L5		*	L19-0758-05	TRANSFORMER FOR CONVERTER	
C205,206			CC73GCH1H150J	CHIP C 15PF J		L9			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C213,214			CC73GCH1H150J	CHIP C 15PF J		X1			L77-2844-05	CRYSTAL RESONATOR (12.288MHZ)	
C215,216			C90-5575-05	ELECTRO 22UF 16WV		F	3A		N80-3010-43	PAN HEAD TAPTITE SCREW	
C224			CK73FB1H104K	CHIP C 0.10UF K		K	3A	*	N89-3008-43	BINDING HEAD TAPTITE SCREW	
C225			CK73GB1H471K	CHIP C 470PF K		N	2B	*	N09-6217-05	TAPTITE SCREW	
C226			CK73GB1H102K	CHIP C 1000PF K		R1			RK73GB2A163J	CHIP R 16K J 1/10W	
C231,232			CC73GCH1H150J	CHIP C 15PF J		R2			RK73GB2A682J	CHIP R 6.8K J 1/10W	
C250			C90-5575-05	ELECTRO 22UF 16WV		R3			RK73GB2A154J	CHIP R 150K J 1/10W	
C255			C90-5605-05	ELECTRO 10UF 50WV		R4			RD14BB2C182J	RD 1.8K J 1/6W	
C301,302			C90-5605-05	ELECTRO 10UF 50WV		R7,8			RK73GB2A152J	CHIP R 1.5K J 1/10W	
C303,304			CK73GB1H471K	CHIP C 470PF K		R9,10			RK73GB2A560J	CHIP R 56 J 1/10W	
C305,306			CF92FV1H472J	MF-C 4700PF J		R11,12			RK73GB2A100J	CHIP R 10 J 1/10W	
C307,308		*	C90-5588-05	ELECTRO 47UF 25WV		R13,14			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C309,310			CC45FSL1H220J	CERAMIC 22PF J		R17			RD14BB2C332J	RD 3.3K J 1/6W	
C311,312			CC45FSL1H101J	CERAMIC 100PF J		R19			RK73GB2A113J	CHIP R 11K J 1/10W	
C313,314			CC45FSL1H121J	CERAMIC 120PF J		R20			RK73GB2A103J	CHIP R 10K J 1/10W	
C315,316			C90-5605-05	ELECTRO 10UF 50WV		R21			RK73FB2B101J	CHIP R 100 J 1/8W	
C319-322			CK73GB1H682K	CHIP C 6800PF K		R22			RD14BB2C622J	RD 6.2K J 1/6W	
C350,351			CF92FV1H473J	MF-C 0.047UF J		R23,24			RD14DB2H100J	SMALL-RD 10 J 1/2W	
C401,402			C90-5605-05	ELECTRO 10UF 50WV		R25,26			RD14BB2C183J	RD 18K J 1/6W	
C403,404			CK73GB1H471K	CHIP C 470PF K		R32			RK73GB2A152J	CHIP R 1.5K J 1/10W	
C405,406			CF92FV1H472J	MF-C 4700PF J		R40			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C407,408		*	C90-5588-05	ELECTRO 47UF 25WV		R45			RK73GB2A333J	CHIP R 33K J 1/10W	
C409,410			CC45FSL1H220J	CERAMIC 22PF J		R46			RK73GB2A511J	CHIP R 510 J 1/10W	
C411,412			CC45FSL1H101J	CERAMIC 100PF J		R47			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C413,414			CC45FSL1H121J	CERAMIC 120PF J		R48			RK73GB2A103J	CHIP R 10K J 1/10W	
C415,416			C90-5605-05	ELECTRO 10UF 50WV		R50			RK73GB2A103J	CHIP R 10K J 1/10W	
C419-422			CK73GB1H682K	CHIP C 6800PF K		R51			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C450,451			CF92FV1H473J	MF-C 0.047UF J		R58			RK73GB2A104J	CHIP R 100K J 1/10W	
C461		*	C90-5607-05	ELECTRO 220UF 50WV		R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C501,502			CK73GB1H102K	CHIP C 1000PF K		R60			RK73GB2A473J	CHIP R 47K J 1/10W	
C503			CK73GB1H103K	CHIP C 0.010UF K		R62			RK73GB2A152J	CHIP R 1.5K J 1/10W	
C504,505			CK73GB1H104K	CHIP C 0.10UF K		R63			RK73GB2A392J	CHIP R 3.9K J 1/10W	
C506		*	C90-5557-05	ELECTRO 10UF 25WV		R64			RK73GB2A103J	CHIP R 10K J 1/10W	
C507			CK73GB1C104K	CHIP C 0.10UF K		R65			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C508		*	C90-5588-05	ELECTRO 47UF 25WV		R66			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C509-511			CC73GCH1H101J	CHIP C 100PF J		R67			RK73GB2A103J	CHIP R 10K J 1/10W	
C512,513			CK73FB1H104K	CHIP C 0.10UF K		R68			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C514			CK73GB1H103K	CHIP C 0.010UF K							
C515,516			CC73GCH1H101J	CHIP C 100PF J							

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

AUDIO UNIT (X09-5780-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R69-75 R76 R78 R79,80 R81			RK73GB2A103J RK73GB2A682J RK73GB2A682J RK73GB2A470J RK73GB2A223J	CHIP R 10K J 1/10W CHIP R 6.8K J 1/10W CHIP R 6.8K J 1/10W CHIP R 47 J 1/10W CHIP R 22K J 1/10W	
R82 R83 R84 R86 R87			RK73GB2A331J RK73GB2A153J RK73GB2A473J RK73GB2A123J RK73GB2A562J	CHIP R 330 J 1/10W CHIP R 15K J 1/10W CHIP R 47K J 1/10W CHIP R 12K J 1/10W CHIP R 5.6K J 1/10W	
R90 R91 R92-95 R96 R97			RK73GB2A392J RK73GB2A103J RK73GB2A473J RK73GB2A104J RK73GB2A103J	CHIP R 3.9K J 1/10W CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	
R98 R99 R100 R101,102 R103-108			RK73GB2A822J RK73GB2A103J RK73EB2E102J RD14BB2C102J RK73GB2A103J	CHIP R 8.2K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/4W RD 1.0K J 1/6W CHIP R 10K J 1/10W	
R109-112 R123-126 R127,128 R161 R170			RN73GH1J103D RN73GH1J103D RK73GB2A223J RD14DB2H100J RK73GB2A102J	CHIP R 10K D 1/16W CHIP R 10K D 1/16W CHIP R 22K J 1/10W SMALL-RD 10 J 1/2W CHIP R 1.0K J 1/10W	
R172 R174 R179 R187 R194-196			RK73GB2A102J RK73GB2A103J RK73GB2A102J RK73GB2A680J RK73GB2A222J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 68 J 1/10W CHIP R 2.2K J 1/10W	
R197 R200 R201,202 R203-208 R209-212			RD14BB2C301J RK73EB2E102J RD14BB2C102J RK73GB2A103J RN73GH1J103D	RD 300 J 1/6W CHIP R 1.0K J 1/4W RD 1.0K J 1/6W CHIP R 10K J 1/10W CHIP R 10K D 1/16W	
R223-226 R227,228 R232 R241 R270			RN73GH1J103D RK73GB2A223J RK73FB2B102J RK73GB2A512J RK73GB2A102J	CHIP R 10K D 1/16W CHIP R 22K J 1/10W CHIP R 1.0K J 1/8W CHIP R 5.1K J 1/10W CHIP R 1.0K J 1/10W	
R272 R294-296 R297 R301,302 R303,304			RK73GB2A102J RK73GB2A222J RD14BB2C301J RK73GB2A302J RK73FB2B223J	CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W RD 300 J 1/6W CHIP R 3.0K J 1/10W CHIP R 22K J 1/8W	
R305-308 R309,310 R311,312 R313,314 R315-318			RK73FB2B102J RK73FB2B101J RK73FB2B102J RK73FB2B223J RK73FB2B151J	CHIP R 1.0K J 1/8W CHIP R 100 J 1/8W CHIP R 1.0K J 1/8W CHIP R 22K J 1/8W CHIP R 150 J 1/8W	
R319-322 R323,324 R325,326 R328 R329-331			RD14NB2E432J RK73FB2B151J RK73GB2A511J RD14NB2E101J RK73FB2B102J	RD 4.3K J 1/4W CHIP R 150 J 1/8W CHIP R 510 J 1/10W RD 100 J 1/4W CHIP R 1.0K J 1/8W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R333-335 R337-340 R341-344 R345-348 R351			RD14NB2E101J RK73FB2B152J RD14NB2E4R7J R92-0205-05 RK73GB2A330J	RD 100 J 1/4W CHIP R 1.5K J 1/8W RD 4.7 J 1/4W METAL-PLATE 0.1 K 2W CHIP R 33 J 1/10W	
R355,356 R357,358 R359 R360 R361			RK73FB2B682J RK73GB2A182J RD14NB2E221J RK73GB2A330J RD14NB2E221J	CHIP R 6.8K J 1/8W CHIP R 1.8K J 1/10W RD 220 J 1/4W CHIP R 33 J 1/10W RD 220 J 1/4W	
R365,366 R370,371 R401,402 R403,404 R405-408			RK73GB2A622J RD14DB2H100J RK73GB2A302J RK73FB2B223J RK73FB2B102J	CHIP R 6.2K J 1/10W SMALL-RD 10 J 1/2W CHIP R 3.0K J 1/10W CHIP R 22K J 1/8W CHIP R 1.0K J 1/8W	
R409,410 R411,412 R413,414 R416-418 R419,420			RK73FB2B101J RK73FB2B102J RK73FB2B223J RK73FB2B151J RD14NB2E432J	CHIP R 100 J 1/8W CHIP R 1.0K J 1/8W CHIP R 22K J 1/8W CHIP R 150 J 1/8W RD 4.3K J 1/4W	
R421 R422 R423,424 R425,426 R428			RK73GB2A182J RD14NB2E432J RK73FB2B151J RK73GB2A511J RD14NB2E101J	CHIP R 1.8K J 1/10W RD 4.3K J 1/4W CHIP R 150 J 1/8W CHIP R 510 J 1/10W RD 100 J 1/4W	
R429-432 R433-435 R437-440 R441-444 R445-448			RK73FB2B102J RD14NB2E101J RK73FB2B152J RD14NB2E4R7J R92-0205-05	CHIP R 1.0K J 1/8W RD 100 J 1/4W CHIP R 1.5K J 1/8W RD 4.7 J 1/4W METAL-PLATE 0.1 K 2W	
R451,452 R453 R454 R455 R457			RK73FB2B682J RK73FB2B151J RD14NB2E221J RD14NB2E432J RK73GB2A330J	CHIP R 6.8K J 1/8W CHIP R 150 J 1/8W RD 220 J 1/4W RD 4.3K J 1/4W CHIP R 33 J 1/10W	
R458 R459 R460 R461 R465,466			RK73GB2A182J RD14NB2E221J RK73GB2A330J RD14DB2H100J RK73GB2A622J	CHIP R 1.8K J 1/10W RD 220 J 1/4W CHIP R 33 J 1/10W SMALL-RD 10 J 1/2W CHIP R 6.2K J 1/10W	
R470,471 R472 R500,501 R502 R503			RD14DB2H100J RK73GB2A473J RD14BB2C102J RD14BB2C104J RD14BB2C153J	SMALL-RD 10 J 1/2W CHIP R 47K J 1/10W RD 1.0K J 1/6W RD 100K J 1/6W RD 15K J 1/6W	
R504 R505 R506,507 R508 R509,510			RK73GB2A105J RK73GB2A103J RK73GB2A472J RK73GB2A473J RK73GB2A472J	CHIP R 1.0M J 1/10W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W	
R511 R512 R513 R514 R515			RK73GB2A470J RD14BB2C470J RK73GB2A272J RK73GB2A392J RK73GB2A152J	CHIP R 47 J 1/10W RD 47 J 1/6W CHIP R 2.7K J 1/10W CHIP R 3.9K J 1/10W CHIP R 1.5K J 1/10W	

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541

(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

AUDIO UNIT (X09-5780-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R516			RD14BB2C153J	RD 15K J 1/6W		R964			RK73GB2A153J	CHIP R 15K J 1/10W	
R517			RK73GB2A682J	CHIP R 6.8K J 1/10W		R967			RK73GB2A331J	CHIP R 330 J 1/10W	
R518			RK73GB2A113J	CHIP R 11K J 1/10W		R970			RK73GB2A223J	CHIP R 22K J 1/10W	
R519,520			RK73GB2A152J	CHIP R 1.5K J 1/10W		R973,974			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R521			RK73GB2A682J	CHIP R 6.8K J 1/10W		VR5-8			R12-0092-05	TRIMMING POT. (220)	
R522			RK73GB2A113J	CHIP R 11K J 1/10W		W500-502			R92-1252-05	CHIP R 0 OHM J 1/16W	
R523			RD14BB2C473J	RD 47K J 1/6W		W503-509			R92-2053-05	CHIP R 0 J 1/8W	
R524			RK73GB2A470J	CHIP R 47 J 1/10W		W510			R92-1252-05	CHIP R 0 OHM J 1/16W	
R525			RD14BB2C470J	RD 47 J 1/6W		W511-514			R92-2053-05	CHIP R 0 J 1/8W	
R526-528			RK73GB2A101J	CHIP R 100 J 1/10W		W515			R92-1252-05	CHIP R 0 OHM J 1/16W	
R529			RD14BB2C221J	RD 220 J 1/6W		W516-522			R92-2053-05	CHIP R 0 J 1/8W	
R530,531			RK73GB2A101J	CHIP R 100 J 1/10W		W523,524			R92-1252-05	CHIP R 0 OHM J 1/16W	
R532			RK73GB2A105J	CHIP R 1.0M J 1/10W		W525-529			R92-2053-05	CHIP R 0 J 1/8W	
R533-536			RK73GB2A272J	CHIP R 2.7K J 1/10W		W530			R92-1252-05	CHIP R 0 OHM J 1/16W	
R539-542			RK73GB2A102J	CHIP R 1.0K J 1/10W		W531-534			R92-2053-05	CHIP R 0 J 1/8W	
R543			RK73GB2A101J	CHIP R 100 J 1/10W		W535,536			R92-1252-05	CHIP R 0 OHM J 1/16W	
R544-546			RK73GB2A103J	CHIP R 10K J 1/10W		W537-541			R92-2053-05	CHIP R 0 J 1/8W	
R548-550			RK73GB2A103J	CHIP R 10K J 1/10W		W542			R92-1252-05	CHIP R 0 OHM J 1/16W	
R555			RK73GB2A103J	CHIP R 10K J 1/10W		W543			R92-2053-05	CHIP R 0 J 1/8W	
R556			RK73GB2A302J	CHIP R 3.0K J 1/10W		W544-546			R92-1252-05	CHIP R 0 OHM J 1/16W	
R560			RK73GB2A473J	CHIP R 47K J 1/10W		W547			R92-2053-05	CHIP R 0 J 1/8W	
R561,562			RK73GB2A104J	CHIP R 100K J 1/10W		W548			R92-1252-05	CHIP R 0 OHM J 1/16W	
R563,564			RK73GB2A101J	CHIP R 100 J 1/10W		W549			R92-2053-05	CHIP R 0 J 1/8W	
R565			RK73GB2A113J	CHIP R 11K J 1/10W		W550-552			R92-1252-05	CHIP R 0 OHM J 1/16W	
R566			RK73GB2A103J	CHIP R 10K J 1/10W		W553			R92-2053-05	CHIP R 0 J 1/8W	
R567			RK73GB2A113J	CHIP R 11K J 1/10W		W554-560			R92-1252-05	CHIP R 0 OHM J 1/16W	
R568			RK73GB2A103J	CHIP R 10K J 1/10W		W561			R92-2053-05	CHIP R 0 J 1/8W	
R569			RK73GB2A113J	CHIP R 11K J 1/10W		W562			R92-1252-05	CHIP R 0 OHM J 1/16W	
R570			RK73GB2A471J	CHIP R 470 J 1/10W		W563			R92-2053-05	CHIP R 0 J 1/8W	
R571			RK73GB2A103J	CHIP R 10K J 1/10W		W564			R92-1252-05	CHIP R 0 OHM J 1/16W	
R572,573			RD14BB2C4R7J	RD 4.7 J 1/6W		W565,566			R92-2053-05	CHIP R 0 J 1/8W	
R574			RK73GB2A181J	CHIP R 180 J 1/10W		W567-572			R92-1252-05	CHIP R 0 OHM J 1/16W	
R576			RK73GB2A181J	CHIP R 180 J 1/10W		W573			R92-2053-05	CHIP R 0 J 1/8W	
R577,578			RK73GB2A100J	CHIP R 10 J 1/10W		W574,575			R92-1252-05	CHIP R 0 OHM J 1/16W	
R579			RK73GB2A113J	CHIP R 11K J 1/10W		W576			R92-2053-05	CHIP R 0 J 1/8W	
R580,581			RK73GB2A103J	CHIP R 10K J 1/10W		W577-579			R92-1252-05	CHIP R 0 OHM J 1/16W	
R582			RK73GB2A104J	CHIP R 100K J 1/10W		W580,581			R92-2053-05	CHIP R 0 J 1/8W	
R590			RK73GB2A473J	CHIP R 47K J 1/10W		W582			R92-1252-05	CHIP R 0 OHM J 1/16W	
R600,601			RD14BB2C271J	RD 270 J 1/6W		W583,584			R92-2053-05	CHIP R 0 J 1/8W	
R602			RK73GB2A432J	CHIP R 4.3K J 1/10W		W585,586			R92-1252-05	CHIP R 0 OHM J 1/16W	
R603			RK73GB2A103J	CHIP R 10K J 1/10W		W587,588			R92-2053-05	CHIP R 0 J 1/8W	
R605			RK73GB2A432J	CHIP R 4.3K J 1/10W		W589,590			R92-1252-05	CHIP R 0 OHM J 1/16W	
R606,607			RK73GB2A182J	CHIP R 1.8K J 1/10W		W591,592			R92-2053-05	CHIP R 0 J 1/8W	
R610			RK73GB2A104J	CHIP R 100K J 1/10W		W593			R92-1252-05	CHIP R 0 OHM J 1/16W	
R611			RK73GB2A103J	CHIP R 10K J 1/10W		W594			R92-2053-05	CHIP R 0 J 1/8W	
R612			RK73GB2A271J	CHIP R 270 J 1/10W		W595-597			R92-1252-05	CHIP R 0 OHM J 1/16W	
R613			RK73GB2A103J	CHIP R 10K J 1/10W		W598			R92-2053-05	CHIP R 0 J 1/8W	
R614			RK73GB2A102J	CHIP R 1.0K J 1/10W		W599-602			R92-1252-05	CHIP R 0 OHM J 1/16W	
R619			RK73GB2A153J	CHIP R 15K J 1/10W		W603,604			R92-2053-05	CHIP R 0 J 1/8W	
R620			RK73GB2A103J	CHIP R 10K J 1/10W		W605-607			R92-1252-05	CHIP R 0 OHM J 1/16W	
R681			RK73GB2A123J	CHIP R 12K J 1/10W		W608			R92-2053-05	CHIP R 0 J 1/8W	
R905,906			RK73GB2A332J	CHIP R 3.3K J 1/10W		W610			R92-1252-05	CHIP R 0 OHM J 1/16W	
R933,934			RK73GB2A912J	CHIP R 9.1K J 1/10W		W611			R92-2053-05	CHIP R 0 J 1/8W	
R945,946			RK73GB2A332J	CHIP R 3.3K J 1/10W		W612			R92-1252-05	CHIP R 0 OHM J 1/16W	
R961			RK73GB2A473J	CHIP R 47K J 1/10W		W613,614			R92-2053-05	CHIP R 0 J 1/8W	

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

AUDIO UNIT (X09-5780-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W615			R92-1252-05	CHIP R 0 OHM J 1/16W	
W616			R92-2053-05	CHIP R 0 J 1/8W	
W617,618			R92-1252-05	CHIP R 0 OHM J 1/16W	
W619-622			R92-2053-05	CHIP R 0 J 1/8W	
W623,624			R92-1252-05	CHIP R 0 OHM J 1/16W	
W625			R92-2053-05	CHIP R 0 J 1/8W	
W626			R92-1252-05	CHIP R 0 OHM J 1/16W	
W627			R92-2053-05	CHIP R 0 J 1/8W	
W628			R92-1252-05	CHIP R 0 OHM J 1/16W	
W629			R92-2053-05	CHIP R 0 J 1/8W	
W630			R92-1252-05	CHIP R 0 OHM J 1/16W	
W631			R92-2053-05	CHIP R 0 J 1/8W	
W632,633			R92-1252-05	CHIP R 0 OHM J 1/16W	
W634-636			R92-2053-05	CHIP R 0 J 1/8W	
W637			R92-1252-05	CHIP R 0 OHM J 1/16W	
W638			R92-2053-05	CHIP R 0 J 1/8W	
W639,640			R92-1252-05	CHIP R 0 OHM J 1/16W	
W641			R92-2053-05	CHIP R 0 J 1/8W	
W642-645			R92-1252-05	CHIP R 0 OHM J 1/16W	
W646,647			R92-2053-05	CHIP R 0 J 1/8W	
W648,649			R92-1252-05	CHIP R 0 OHM J 1/16W	
W650,651			R92-2053-05	CHIP R 0 J 1/8W	
W652,653			R92-1252-05	CHIP R 0 OHM J 1/16W	
W654			R92-2053-05	CHIP R 0 J 1/8W	
W655-658			R92-1252-05	CHIP R 0 OHM J 1/16W	
W659			R92-2053-05	CHIP R 0 J 1/8W	
W660,661			R92-1252-05	CHIP R 0 OHM J 1/16W	
W662-666			R92-2053-05	CHIP R 0 J 1/8W	
W667-669			R92-1252-05	CHIP R 0 OHM J 1/16W	
W700,701			R92-1252-05	CHIP R 0 OHM J 1/16W	
W702,703			R92-2053-05	CHIP R 0 J 1/8W	
W704-707			R92-1252-05	CHIP R 0 OHM J 1/16W	
W708			R92-2053-05	CHIP R 0 J 1/8W	
W709			R92-1252-05	CHIP R 0 OHM J 1/16W	
W710			R92-2053-05	CHIP R 0 J 1/8W	
W711			R92-1252-05	CHIP R 0 OHM J 1/16W	
W712			R92-2053-05	CHIP R 0 J 1/8W	
W713-719			R92-1252-05	CHIP R 0 OHM J 1/16W	
S6		*	S79-0843-05	DIP SWITCHES	
S7			S68-0806-05	PUSH SWITCH	
D1,2		*	RM4ZLF-J1NF	DIODE	
D4		*	UDZS16B	ZENER DIODE	
D8			RD15JS-AZ(B)	ZENER DIODE	
D9			UDZS6.8B	ZENER DIODE	
D11			UDZS5.1B	ZENER DIODE	
D12			UDZS4.7B	ZENER DIODE	
D13		*	S5566B-Q	DIODE	
D17		*	RD16JS-AZ(B)	ZENER DIODE	
D25		*	FCH20A20	DIODE	
D26		*	FRH20A20	DIODE	
D29,30			LM1MA142WA-G	DIODE	
D38			UDZS5.1B	ZENER DIODE	
D39			1SS355	DIODE	
D41			1SS355	DIODE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D62		*	LM1MA142WK-G	DIODE	
D63			1SS355	DIODE	
D66-70			1SS355	DIODE	
D71		*	UDZS3.3B	ZENER DIODE	
D72			UDZS10B	ZENER DIODE	
D74,75			1SS355	DIODE	
D76			UMZ6.8N	ZENER DIODE	
D78,79			1SS355	DIODE	
D80			UMZ6.8N	ZENER DIODE	
D82			UMZ6.8N	ZENER DIODE	
D83-85			1SS355	DIODE	
D87,88			UMZ6.8N	ZENER DIODE	
D91			LM1MA142WA-G	DIODE	
D93		*	LM1MA142WK-G	DIODE	
D100			UMZ6.8N	ZENER DIODE	
D101		*	LM1MA142WK-G	DIODE	
D102			LM1MA142WA-G	DIODE	
D151,152			1SS355	DIODE	
D153		*	LM1MA142WK-G	DIODE	
D154			LM1MA142WA-G	DIODE	
D155		*	LM1MA142WK-G	DIODE	
D157,158			1SS355	DIODE	
D159		*	LM1MA142WK-G	DIODE	
D160			LM1MA142WA-G	DIODE	
D161		*	LM1MA142WK-G	DIODE	
D200			UMZ6.8N	ZENER DIODE	
D201		*	LM1MA142WK-G	DIODE	
D202,203			LM1MA142WA-G	DIODE	
D301,302		*	LM1MA142WK-G	DIODE	
D304			LM1MA142WA-G	DIODE	
D305,306		*	LM1MA142WK-G	DIODE	
D308		*	LM1MA142WK-G	DIODE	
D401,402		*	LM1MA142WK-G	DIODE	
D403,404			LM1MA142WA-G	DIODE	
D405		*	LM1MA142WK-G	DIODE	
D406			UDZS5.1B	ZENER DIODE	
D915			LM1MA142WA-G	DIODE	
D955			LM1MA142WA-G	DIODE	
D958			1SS355	DIODE	
IC1,2			BA14741F	ANALOGUE IC	
IC3		*	784224YGC117	MICROCONTROLLER IC	
IC4			PST3436UL-E	MOS-IC	
IC6			BA4560F	IC	
IC8			BA10393F	ANALOGUE IC	
IC9		*	P82B96PN	ANALOGUE IC	
IC10			UPC494GS	ANALOGUE IC	
Q1,2			2SC4081	TRANSISTOR	
Q7,8			2SC4097	TRANSISTOR	
Q9,10			2SA1577	TRANSISTOR	
Q11-16		*	2SK3662-F	FET	
Q17		*	2SD2012-F	TRANSISTOR	
Q18		*	2SB1375-F	TRANSISTOR	
Q20			2SB1241	TRANSISTOR	
Q21			DTC114EUA	DIGITAL TRANSISTOR	
Q22			2SB1238	TRANSISTOR	

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541

(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

AUDIO UNIT (X09-5780-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q24			2SC4081	TRANSISTOR		Q415,416		*	2SC1845-A(F,E)	TRANSISTOR	
Q25			2SA1576A	TRANSISTOR		Q417,418		*	2SA992-A(F,E)	TRANSISTOR	
Q26		*	2SK246(BL)-F	FET		Q419,420		*	2SC2235-F	TRANSISTOR	
Q27		*	2SA992-A(F,E)	TRANSISTOR		Q421,422		*	2SA965-F	TRANSISTOR	
Q30,31			2SC4081	TRANSISTOR		Q423,424		*	2SC3856NF	TRANSISTOR	
Q41-44			2SC4081	TRANSISTOR		Q425,426		*	2SA1492NF	TRANSISTOR	
Q50			2SC4081	TRANSISTOR		Q901,902		*	2SK3662-F	FET	
Q51			2SA1576A	TRANSISTOR		Q905,906			2SC4081	TRANSISTOR	
Q52			2SC4081	TRANSISTOR		Q945,946			2SC4081	TRANSISTOR	
Q53			2SA1576A	TRANSISTOR		Q967			DTA114EUA	DIGITAL TRANSISTOR	
Q54			DTA114EUA	DIGITAL TRANSISTOR		TH1-5		*	NT732ATTD103J	THERMISTOR	
Q56,57			2SC4081	TRANSISTOR							
Q58,59		*	2SC945AA(Q,P)	TRANSISTOR							
Q60			2SA1576A	TRANSISTOR							
Q61			2SC4081	TRANSISTOR							
Q62			DTC114EUA	DIGITAL TRANSISTOR							
Q63			DTA114EUA	DIGITAL TRANSISTOR							
Q64			DTC114EUA	DIGITAL TRANSISTOR							
Q65			2SC4081	TRANSISTOR							
Q66,67			2SD1863	TRANSISTOR							
Q73-75			DTA114EUA	DIGITAL TRANSISTOR							
Q77			DTC114EUA	DIGITAL TRANSISTOR							
Q80-83			2SC4081	TRANSISTOR							
Q84			DTC114EUA	DIGITAL TRANSISTOR							
Q85			2SC4081	TRANSISTOR							
Q86			DTC114EUA	DIGITAL TRANSISTOR							
Q90			DTC114EUA	DIGITAL TRANSISTOR							
Q91			DTA114EUA	DIGITAL TRANSISTOR							
Q92			DTC114EUA	DIGITAL TRANSISTOR							
Q93,94			2SA1576A	TRANSISTOR							
Q95			2SC4081	TRANSISTOR							
Q96			2SA1576A	TRANSISTOR							
Q97			DTA114EUA	DIGITAL TRANSISTOR							
Q98			2SA1576A	TRANSISTOR							
Q99			DTA114EUA	DIGITAL TRANSISTOR							
Q210		*	2SA1376AA(L,K)	TRANSISTOR							
Q212			2SC3419(Y)	TRANSISTOR							
Q301-304		*	2SA992-A(F,E)	TRANSISTOR							
Q305-308		*	2SC3478AA(L,K)	TRANSISTOR							
Q309		*	2SA1376AA(L,K)	TRANSISTOR							
Q311			2SC3419(Y)	TRANSISTOR							
Q312		*	2SC2235-F	TRANSISTOR							
Q314		*	2SA965-F	TRANSISTOR							
Q315,316		*	2SC1845-A(F,E)	TRANSISTOR							
Q317,318		*	2SA992-A(F,E)	TRANSISTOR							
Q319		*	2SC2235-F	TRANSISTOR							
Q320		*	2SC3856NF	TRANSISTOR							
Q321		*	2SA965-F	TRANSISTOR							
Q322		*	2SA1492NF	TRANSISTOR							
Q323		*	2SC3856NF	TRANSISTOR							
Q325		*	2SA1492NF	TRANSISTOR							
Q401-404		*	2SA992-A(F,E)	TRANSISTOR							
Q405-408		*	2SC3478AA(L,K)	TRANSISTOR							
Q409,410		*	2SA1376AA(L,K)	TRANSISTOR							
Q411,412			2SC3419(Y)	TRANSISTOR							

E1 : KAC-PS541 K : KAC-X541 M1 : KAC-X541
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.