


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

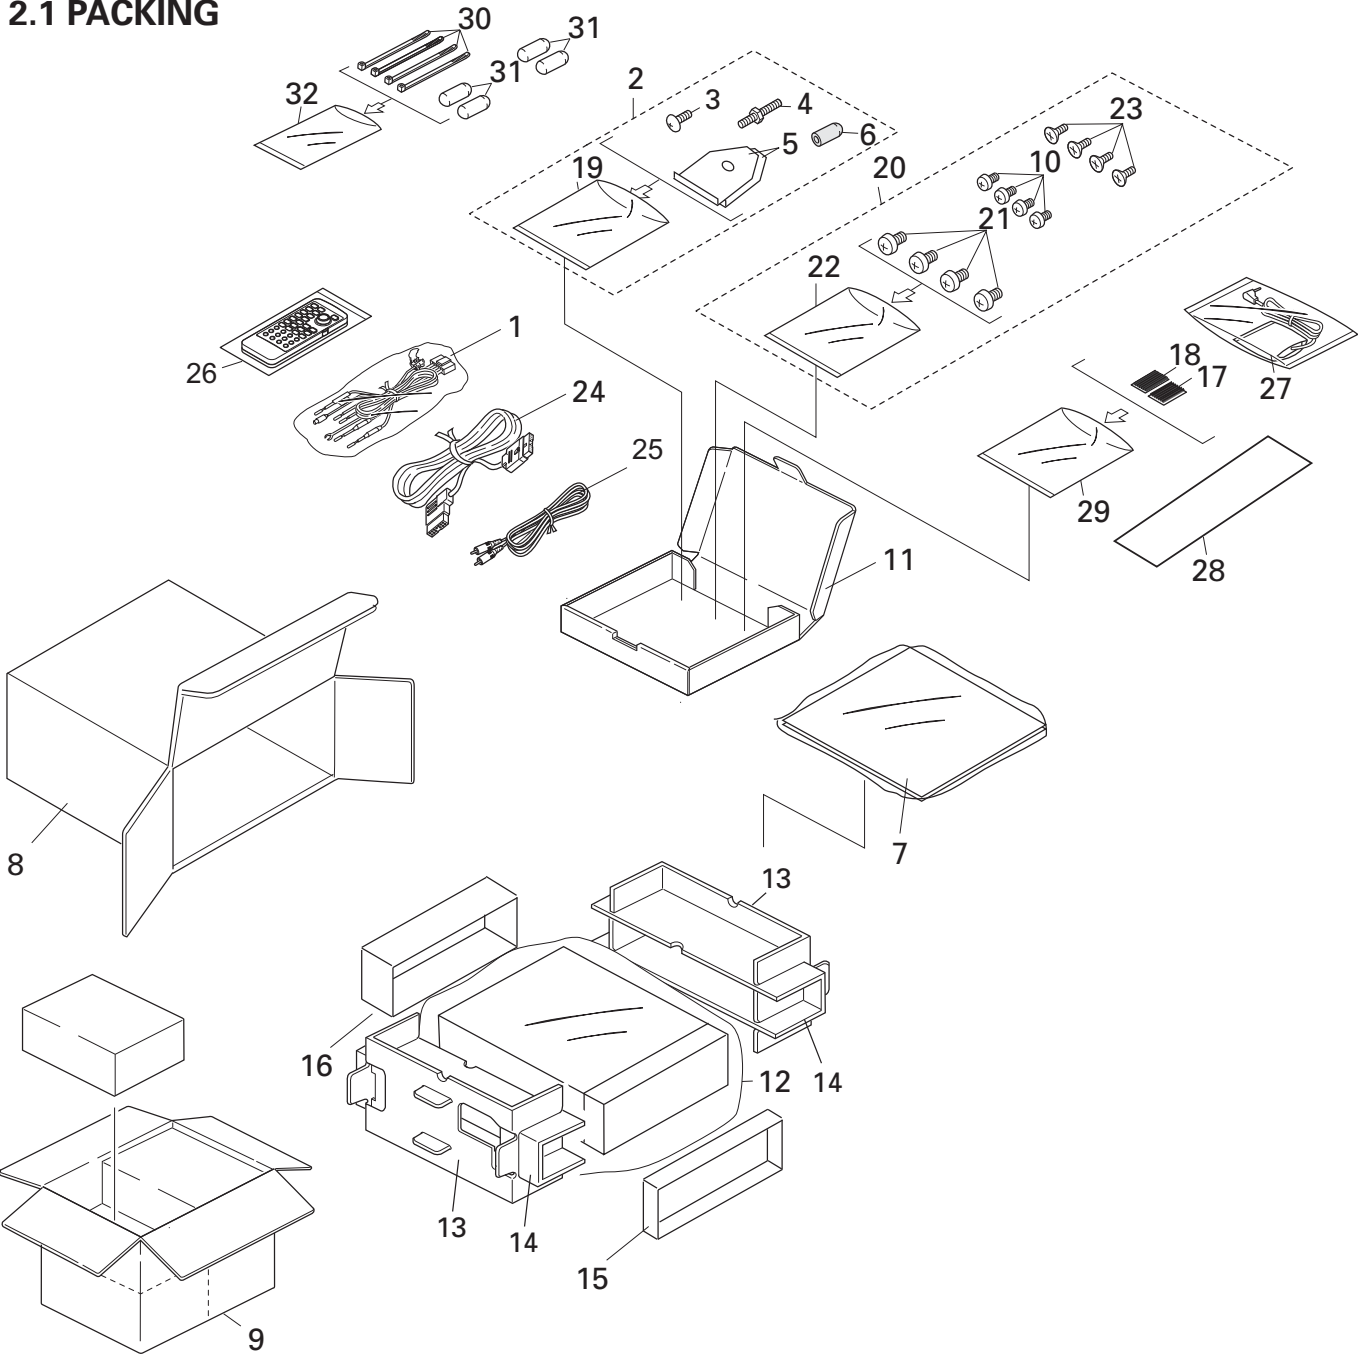

● Owner's Manual

Part No.	Language
CRB1707	English
CRB1708	Spanish
CRB1709	German
CRB1710	French
CRB1711	Italian
CRB1712	Dutch
CRB1713	Chinese

● Installation Manual

Part No.	Language
CRD3479	English,French
CRD3435	English,Spanish,Dutch ,German,French,Italian
CRB1740	English
CRD3480	English,Chinese


NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

● PACKING SECTION PARTS LIST

MarkNo.	Description	Part No.			
		P7300DVD/UC	P7300DVD/EW	P7300DVD/ES/RD	P7300DVD/ES/RC
1	Cord Assy	CDE6668	CDE6668	CDE6668	CDE6668
2	Accessory Assy	CEA2876	CEA2876	CEA2876	CEA2876
3	Screw	BPZ20P060FMC	BPZ20P060FMC	BPZ20P060FMC	BPZ20P060FMC
4	Screw	CBA1002	CBA1002	CBA1002	CBA1002
5	Bracket	CNC9383	CNC9383	CNC9383	CNC9383
6	Bush	CNV1917	CNV1917	CNV1917	CNV1917
7-1	Polyethylene Bag	CEG1116	CEG1116	CEG1116	CEG1116
7-2	Owner's Manual	CRB1707	CRB1707	CRB1707	CRB1707
7-3	Owner's Manual	Not used	CRB1708	Not used	CRB1713
7-4	Owner's Manual	Not used	CRB1709	Not used	Not used
7-5	Owner's Manual	CRB1710	CRB1710	Not used	Not used
7-6	Owner's Manual	Not used	CRB1711	Not used	Not used
7-7	Owner's Manual	Not used	CRB1712	Not used	Not used
7-8	Installation Manual	CRD3479	CRD3435	CRB1740	CRD3480
*	7-9 Warranty Card	Not used	CRY1157	CRY1157	CRY1157
*	7-10 Card	ARY1048	Not used	Not used	Not used
*	7-11 Caution Card	Not used	CRP1250	CRP1250	Not used
*	7-12 Caution Card	CRP1253	CRP1253	CRP1253	CRP1253
*	7-13 Caution Card	Not used	CRP1256	Not used	Not used
8	Carton	CHG4402	CHG4401	CHG4404	CHG4403
9	Contain Box	CHL4402	CHL4401	CHL4404	CHL4403
10	Screw(M4x3)	CBA1468	CBA1468	CBA1468	CBA1468
11	Sub Carton	CHA3172	CHA3172	CHA3172	CHA3172
12	Polyethylene Bag	CEG1173	CEG-162	CEG-162	CEG-162
13	Protector	CHP2445	CHP2445	CHP2445	CHP2445
14	Protector	CHP2446	CHP2446	CHP2446	CHP2446
15	Protector	CHP2385	CHP2385	CHP2385	CHP2385
16	Protector	CHP2386	CHP2386	CHP2386	CHP2386
*	17 Fastener	CNM6544	CNM6544	Not used	Not used
*	18 Fastener	CNM6545	CNM6545	Not used	Not used
*	19 Polyethylene Bag	E36-615	E36-615	E36-615	E36-615
20	Screw Assy	CEA2927	CEA2927	CEA2927	CEA2927
21	Screw	BMZ50P060FMC	BMZ50P060FMC	BMZ50P060FMC	BMZ50P060FMC
*	22 Polyethylene Sheet	CNM4338	CNM4338	CNM4338	CNM4338
23	Screw	CMZ50P060FMC	CMZ50P060FMC	CMZ50P060FMC	CMZ50P060FMC
24	Cord	CDE6570	CDE6570	CDE6570	CDE6570
25	Cord Assy	CDE6376	CDE6376	CDE6376	CDE6376
26	Remote Control Unit	CXB7969	CXB7969	CXB7969	CXB7969
27	Speaker Unit	CXB6699	CXB6699	Not used	Not used
28	Sheet	CNM7244	CNM7244	CNM7244	CNM7244
*	29 Polyethylene Bag	CEG1116	CEG1116	Not used	Not used
30	Lock Tie	Not used	CNV-754	CNV-754	Not used
*	31 Filter	Not used	CTX1060	CTX1060	Not used
*	32 Polyethylene Bag	Not used	CEG-158	CEG-158	Not used

2.2 EXTERIOR(1/3)

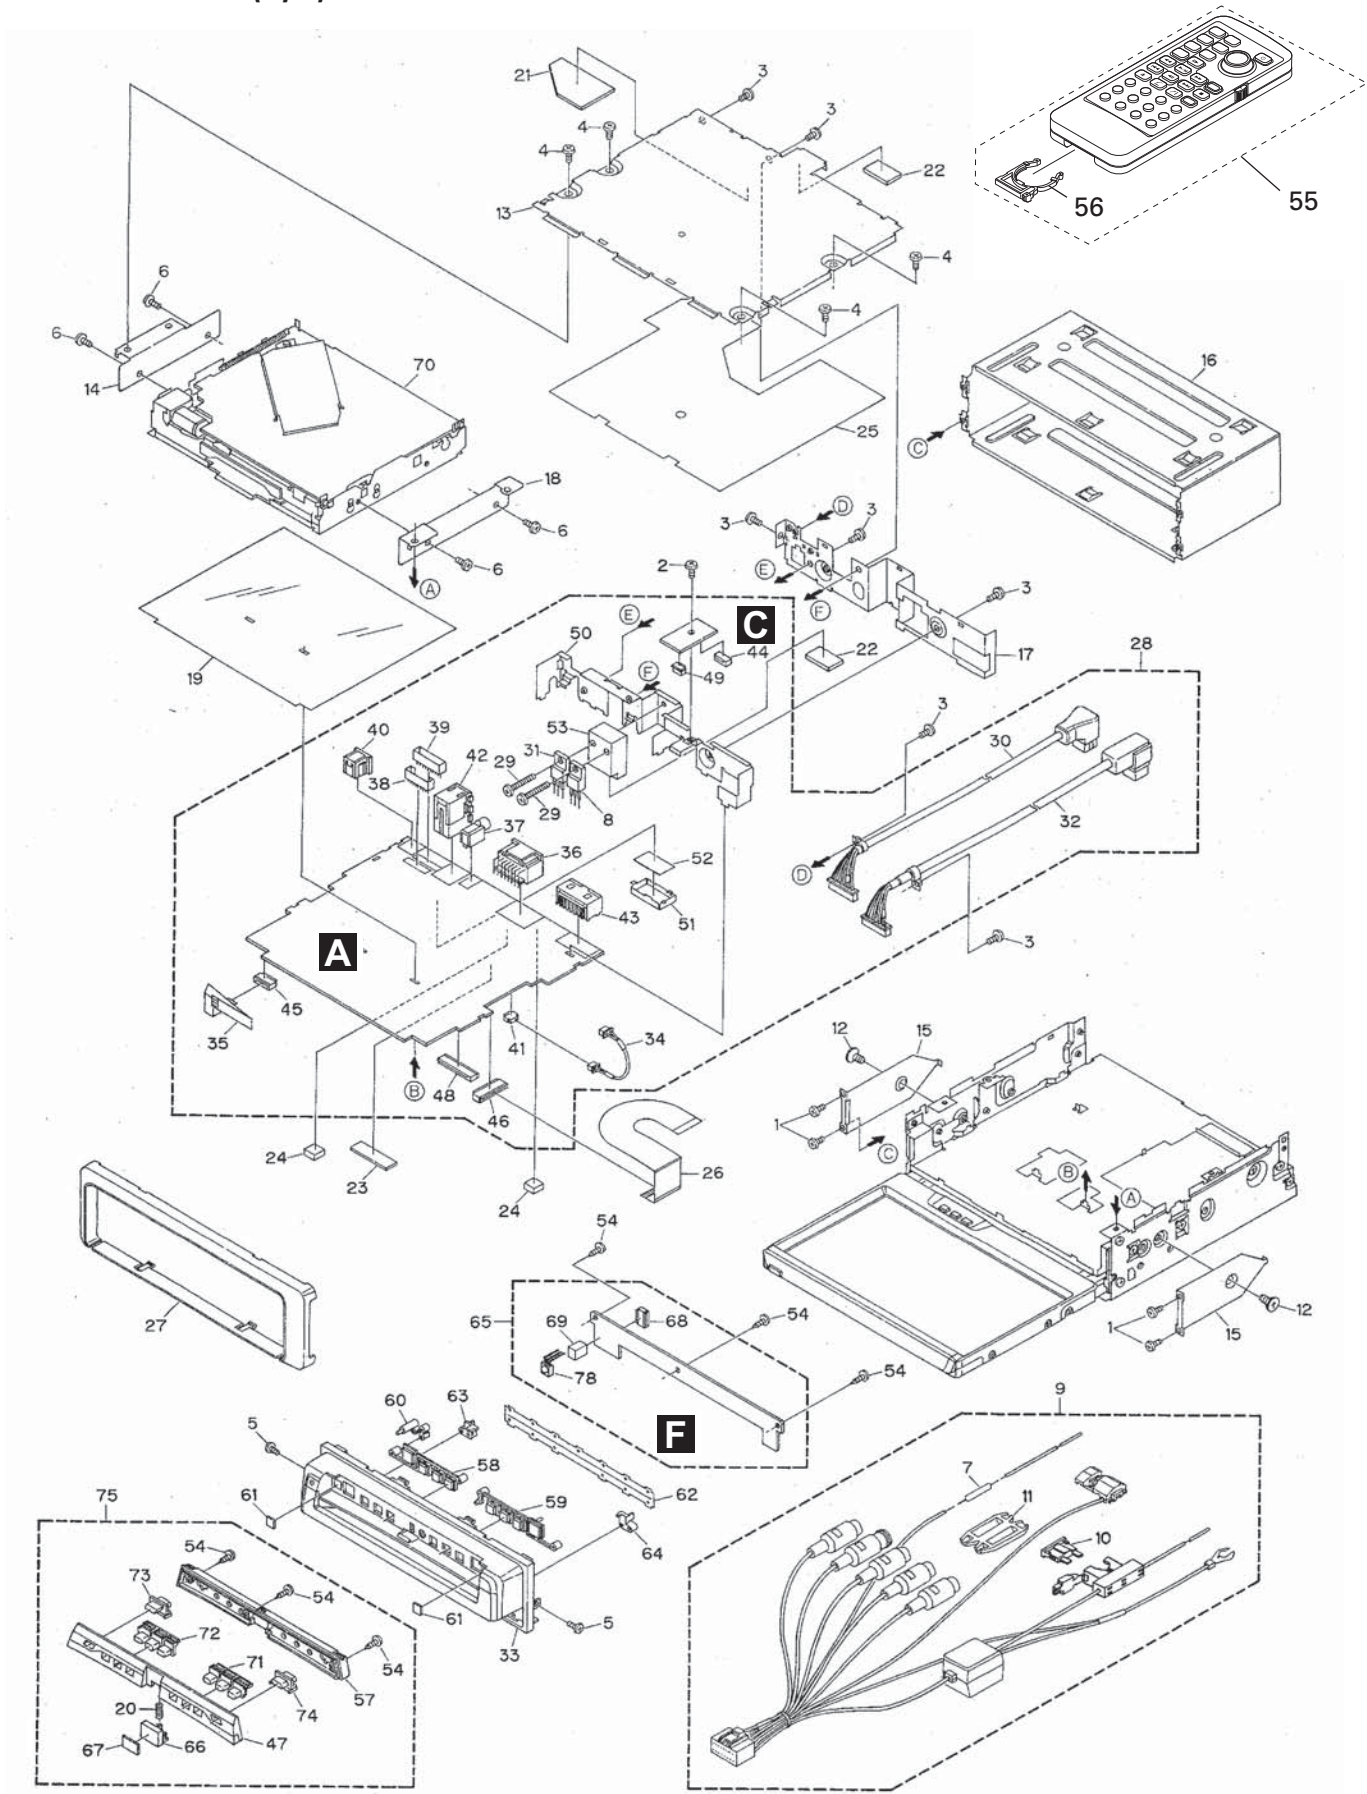

(1) EXTERIOR(1/3) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ20P030FZK	41	Connector(CN252)	CKS2191
2	Screw	BMZ20P040FMC	42	Connector(CN802)	CKS2602
3	Screw	BMZ26P040FMC	43	Connector(CN201)	CKS3645
4	Screw	BSZ26P050FMC	44	Connector(CN262)	CKS3902
5	Screw(M1.7x3)	CBA1475	45	Connector(CN651)	CKS3970
6	Screw(M2x2)	CBA1487	46	Connector(CN251)	CKS4052
7	Resistor	RS1/2P102JL	47	Grille Unit	See Contrast table(2)
8	Transistor(Q20)	2SD2396	48	Connector(CN101)	CKS4495
9	Cord Assy	CDE6668	49	Connector(CN261)	CKS4496
10	Fuse(5A)	CEK1135	50	Bracket	CNC9371
11	Cap	CNS1472	51	Holder	CNC9653
12	Screw	CMZ50P060FMC	52	Insulator	CNM7531
13	Case	CNB2702	53	Heat Sink	CNR1609
14	Bracket	CNC9368	54	Screw	BPZ20P060FMC
15	Bracket	CNC9389	55	Remote Control Unit	CXB7969
16	Holder	CNC9510	56	Cover	CZN5357
17	Panel	See Contrast table(2)	57	Cover	CNS6559
18	Bracket	CNC9698	58	Button	CAC6992
19	Insulator	CNM7241	59	Button	CAC6993
20	Spring	CBH2479	60	Button	CAC6997
21	Sheet	CNM7407	* 61	Cushion	CNM6270
22	Sheet	CNM7419	62	Cover	CNM7243
23	Spacer	CNM7465	63	Lighting Conductor	CNV6714
24	Spacer	CNM7466	64	Lighting Conductor	CNV6715
25	Insulator	CNM7540	65	Keyboard Unit	See Contrast table(2)
26	PCB	CNP6274	66	Button	See Contrast table(2)
27	Panel	See Contrast table(2)	* 67	Badge	CAH1771
28	Control Unit	See Contrast table(2)	68	Connector(CN1901)	CKS4511
29	Screw	BMZ26P200FMC	69	Spacer	CNM7247
30	Cord	CDE6568	70	DVD Mechanism Module(MS2)	CXK6115
* 31	Transistor(Q33)	2SD2396	71	Button(EJE,PLAY,STOP)	CAC6995
32	Cord	CDE6569	72	Button(CHP/TR,V.SRC)	CAC6996
33	Grille Unit	See Contrast table(2)	73	Button(RGB)	CAC7003
34	Cord	CDE6574	74	Button(POWER)	CAC7004
35	Cable	CDE6575	75	Detach Grille Assy	See Contrast table(2)
36	Plug(CN401)	CKM1187	76,77		
37	Jack(CN202)	See Contrast table(2)	78	IC(IC1901)	TSOP1840SB1
38	Plug(CN402)	CKS-790			
39	Plug(CN801)	CKS1043			
40	Connector(CN851)	CKS1940			

(2) CONTRAST TABLE

AVX-P7300DVD/UC , AVX-P7300DVD/EW , AVX-P7300DVD/ES/RD and AVX-P7300DVD/ES/RC are constructed the same except for the following:

Mark No.	Description	Part No.			
		P7300DVD/UC	P7300DVD/EW	P7300DVD/ES/RD	P7300DVD/ES/RC
17	Panel	CNC9689	CNC9689	CNC9703	CNC9703
27	Panel	CNS6571	CNS6571	CNS6627	CNS6627
28	Control Unit	CWM7738	CWM7737	CWM7740	CWM7739
33	Grille Unit	CXB7279	CXB7279	CXB7278	CXB7278
37	Jack(CN202)	CKN1027	CKN1027	Not used	Not used
47	Grille Unit	CXB7284	CXB7284	CXB7285	CXB7285
65	Keyboard Unit	CWM7744	CWM7745	CWM7744	CWM7744
66	Button	CAC6994	CAC6994	CAC7011	CAC7011
75	Detach Grille Assy	CXB7121	CXB7121	CXB7123	CXB7123


2.3 EXTERIOR(2/3)

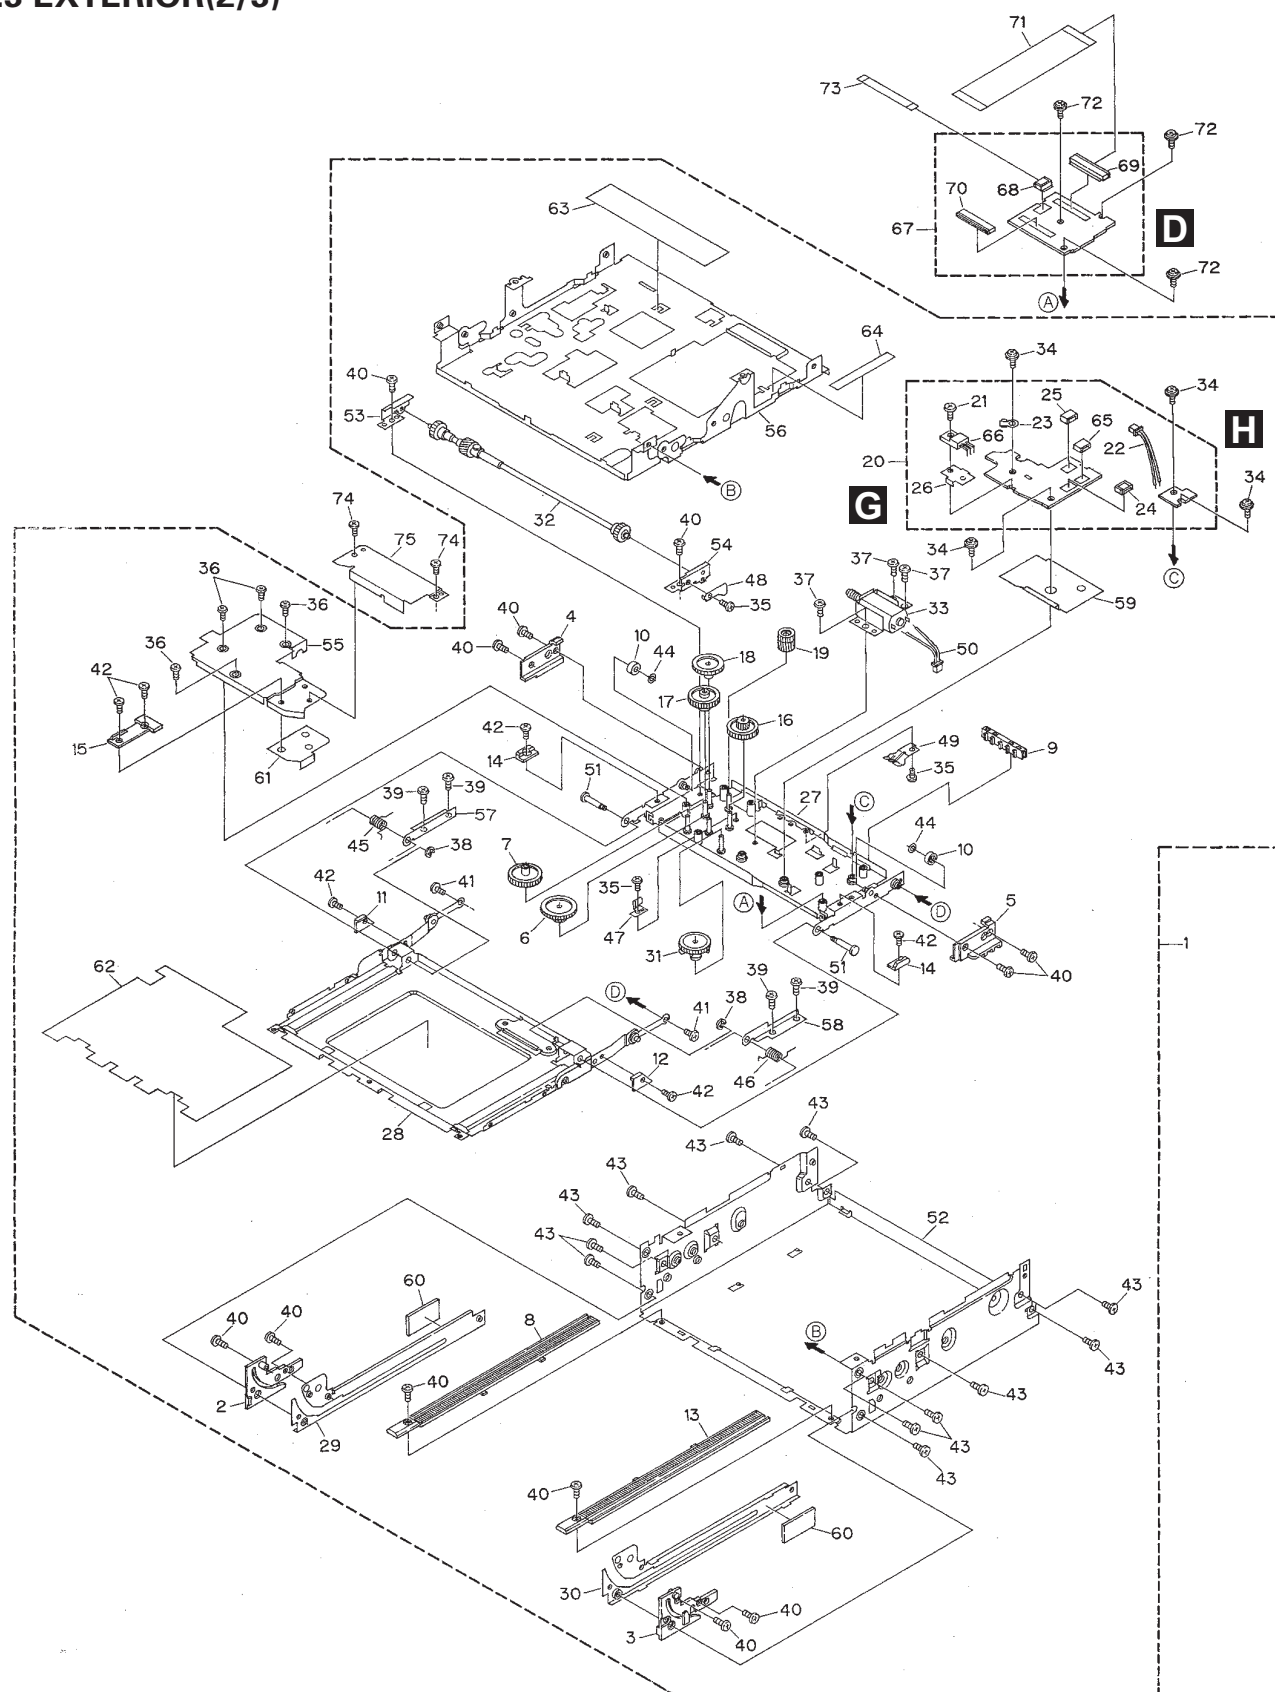

● EXTERIOR(2/3) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Drive Unit	CXB7323	41	Screw(M1.7x3)	CBA1475
2	Rail	CNS6492	42	Screw(M2x2)	CBA1484
3	Rail	CNS6493	43	Screw(M3x3)	CBA1534
4	Guide	CNS6494	44	Washer	CBF1064
5	Guide	CNS6495	45	Spring	CBH2469
6	Gear	CNV6654	46	Spring	CBH2470
7	Gear	CNV6655	47	Spring	CBL1527
8	Rack	CNV6669	48	Spring	CBL1534
9	Guide	CNV6672	49	Spring	CBL1545
10	Roller	CNV6673	50	Cord Assy	CDE6685
11	Guide	CNV6750	51	Shaft	CLA4007
12	Guide	CNV6751	52	Chassis	CNA2385
13	Rack	CNV6752	53	Holder	CNC9302
14	Guide	CNV6765	54	Holder	CNC9303
15	Guide	CNV6766	55	Cover	CNC9304
16	Gear	CNV6824	56	Frame	CNC9455
17	Gear	CNV6825	57	Holder	CNC9516
18	Gear	CNV6826	58	Holder	CNC9517
19	Gear	CNV6827	59	Insulator	CNM7380
20	Encoder Unit	CWM7620	60	Cushion	CNM7377
21	Screw	BMZ26P050FMC	61	Insulator	CNM7335
22	Cord Assy	CDE6686	62	Sheet	CNM7415
23	Terminal(CN2801)	CKF1064	63	Insulator	CNM7490
24	Connector(CN2804)	CKS4054	64	Insulator	CNM7491
25	Connector(CN2805)	CKS4282	65	Connector(CN2806)	CKS4282
26	Heat Sink	CNC9312	66	IC(IC2801)	TA7806S
27	Frame Unit	CXB7051	67	Relay Unit	CWM7752
* 28	Case Unit	CXB7052	68	Connector(CN1102)	CKS4054
29	Rail Unit	CXB7064	69	Connector(CN1103)	CKS4495
30	Rail Unit	CXB7065	70	Connector(CN1101)	CKS4495
31	Gear Unit	CXB7437	71	PCB	CNP6440
32	Shaft Unit	CXB7611	72	Screw(M2x2.5)	CBA1076
33	Motor Unit(M1)(Drive Motor)	CXB7612	73	FFC	CDE6555
34	Screw	IMS20P030FMC	74	Screw(UC,EW)	CBA1484
35	Screw	JFZ20P020FZK		Screw(ES/RD,ES/RC)	CBA1551
36	Screw	JFZ20P040FZK	75	Cover	CNC9467
37	Screw	JGZ20P020FMC			
38	Washer	YE20FUC			
39	Screw(M2x2.2)	CBA1419			
40	Screw(M2x2.5)	CBA1447			

2.4 EXTERIOR(3/3)

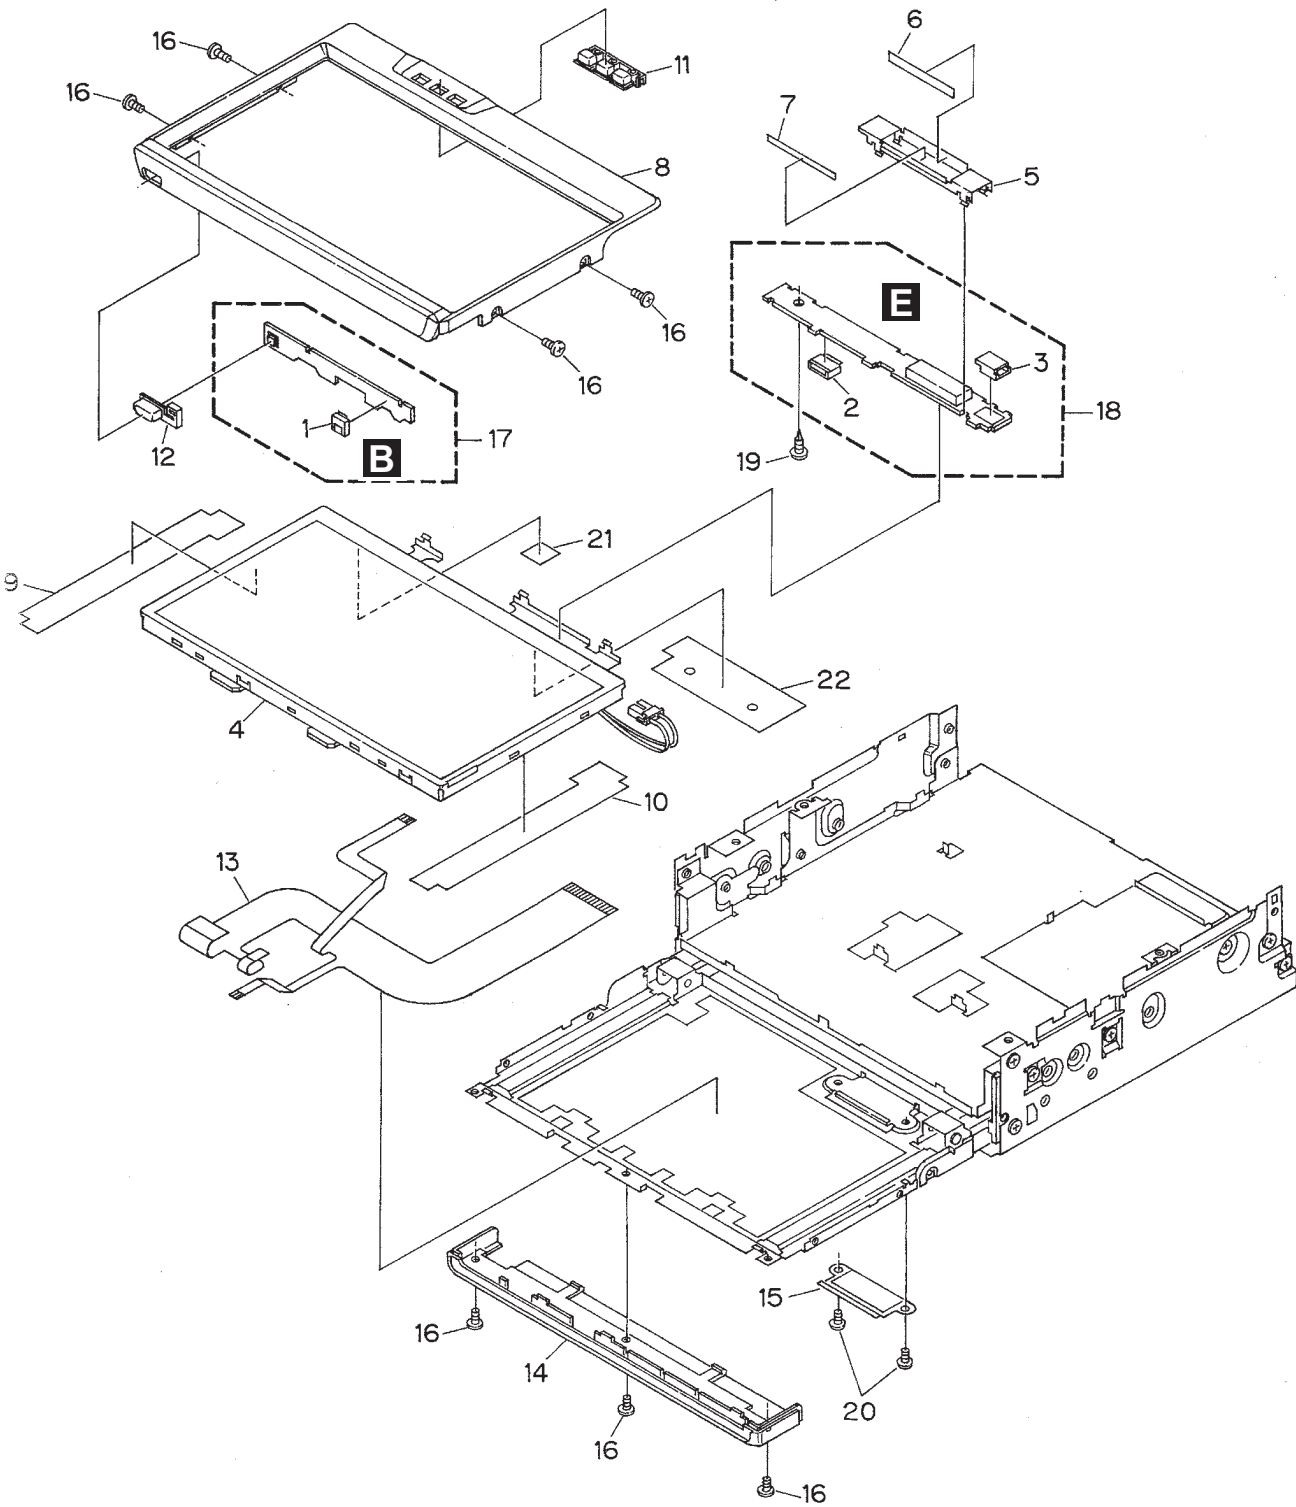

(1) EXTERIOR(3/3) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Connector(CN1301)	CKS4448	11	Button(WIDE/ANGLE)	CAC7013
2	Connector(CN2941)	CKS4054	12	Button(OPEN/CLOSE)	CAC7014
3	Connector(CN2942)	CKS4428	13	PCB	CNP6272
4	LCD Module	CWX2565	14	Cover	See Contrast table(2)
5	Holder	CNC9500	15	Holder	CNC9535
6	Insulator	CNM7351	16	Screw	See Contrast table(2)
7	Insulator	CNM7352	17	Control Unit	See Contrast table(2)
8	Grille Unit	See Contrast table(2)	18	Keyboard Unit	See Contrast table(2)
9	Sheet	CNM7592	19	Screw	BPZ20P060FMC
10	Sheet	CNM7591	20	Screw	JFZ20P022FNI
			21	Sheet	CNM7593
			22	Sheet	CNM7594

● Please stop the reuse of this sheet when you peel off sheet(9,10,21,22).

(2) CONTRAST TABLE


AVX-P7300DVD/UC , AVX-P7300DVD/EW , AVX-P7300DVD/ES/RD and AVX-P7300DVD/ES/RC are constructed the same except for the following:

Mark No.	Description	Part No.			
		P7300DVD/UC	P7300DVD/EW	P7300DVD/ES/RD	P7300DVD/ES/RC
8	Grille Unit	CXB7535	CXB7535	CXB7536	CXB7536
14	Cover	CNS6628	CNS6628	CNS6564	CNS6564
16	Screw	CBA1484	CBA1484	CBA1551	CBA1551
17	Control Unit	CWM7738	CWM7737	CWM7740	CWM7739
18	Keyboard Unit	CWM7744	CWM7745	CWM7744	CWM7744

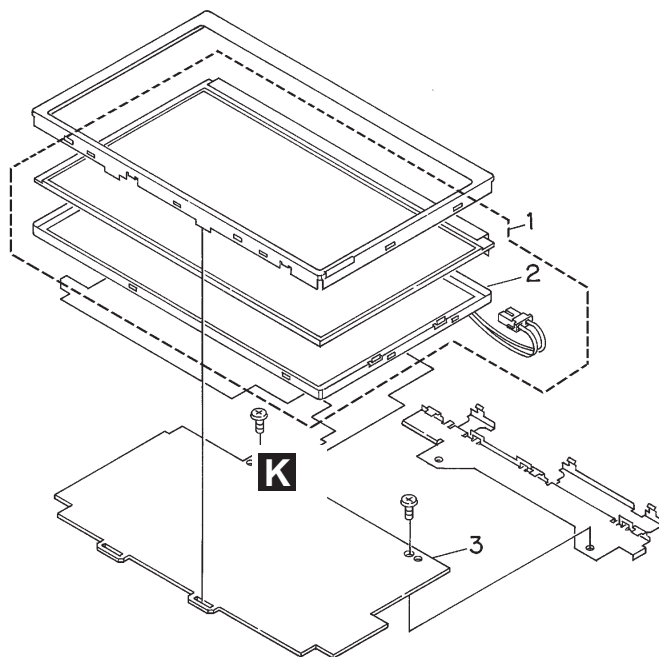2.5 LCD MODULE**● LCD MODULE SECTION PARTS LIST**

Mark No.	Description	Part No.
1	LCD Module	TFD70W80
2	Back Light Unit	NML75-9252-P
3	Video Schematic	NMP70-9253-P

2.6 DVD MECHANISM MODULE

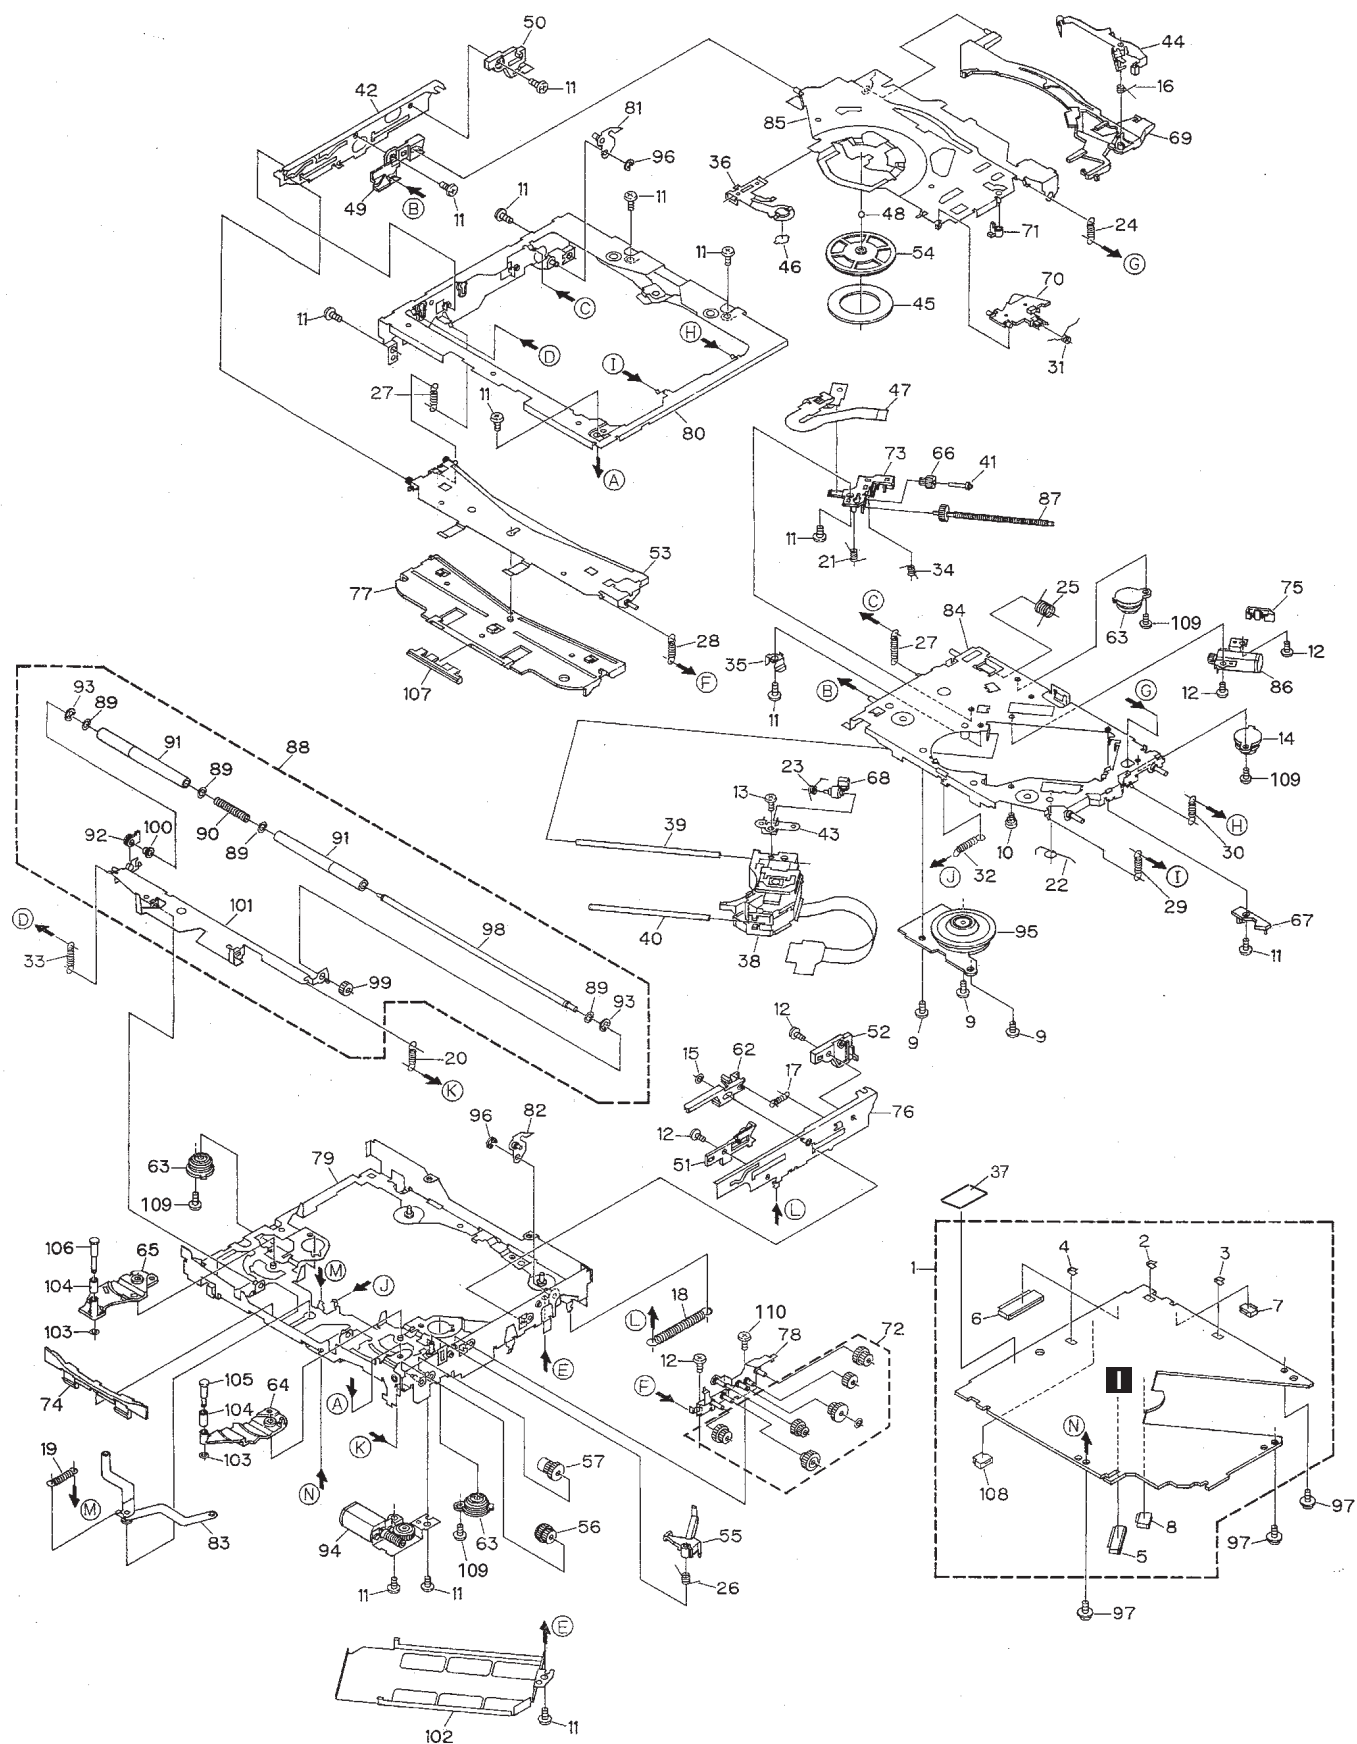

● DVD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	DVD core unit V	CWX2574	56	Gear	CNV6361
2	Terminal(CN1703)	CKF1065	57	Gear	CNV6362
3	Terminal(CN1705)	CKF1065	58-61		
4	Terminal(CN1706)	CKF1065	62	Rack	CNV6367
5	Connector(CN1100)	CKS3749	63	Damper	CNV6368
6	Connector(CN1701)	CKS4052	64	Arm	CNV6369
7	Connector(CN1700)	CKS4374	65	Arm	CNV6370
8	Connector(CN1300)	CKS4507	66	Gear	CNV6372
9	Screw(M2x3)	CBA1486	67	Holder	CNV6374
10	Screw	CBA1535	68	Rack	CNV6376
11	Screw(M2x2.2)	CBA1547	69	Arm	CNV6377
12	Screw(M2x2.2)	CBA1548	70	Arm	CNV6378
13	Screw(M1.4x2)	CBA1549	71	Arm	CNV6379
14	Damper	CNV6927	72	Gear Unit	CXB5959
15	Washer	CBF1038	73	Holder	CNV6383
16	Spring	CBH2394	74	Guide	CNV6384
17	Spring	CBH2395	75	Holder	CNV6385
18	Spring	CBH2396	76	Lever Unit	CXB5943
19	Spring	CBH2397	77	Holder Unit	CXB5944
20	Spring	CBH2398	78	Holder Unit	CXB5947
21	Spring	CBH2399	79	Frame Unit	CXB5948
22	Spring	CBH2400	80	Frame Unit	CXB5949
23	Spring	CBH2401	81	Arm Unit	CXB5950
24	Spring	CBH2402	82	Arm Unit	CXB5951
25	Spring	CBH2403	83	Arm Unit	CXB5952
26	Spring	CBH2404	84	Chassis Unit	CXB5953
27	Spring	CBH2405	85	Arm Unit	CXB5954
28	Spring	CBH2406	86	Motor Unit(CRG)	CXB5955
29	Spring	CBH2407	87	Screw Unit	CXB5957
30	Spring	CBH2408	88	Roller Unit	CXB5958
31	Spring	CBH2410	89	Washer	CBF1060
32	Spring	CBH2411	90	Spring	CBH2170
33	Spring	CBH2413	91	Roller	CNV6068
34	Spring	CBH2414	92	Holder	CNV6210
35	Spring	CBL1499	93	Washer	YE20FUC
36	Spring	CBL1500	94	Motor Unit(LOAD)	CXB5960
37	Sheet	CNM7590	95	Motor Unit(SPDL)	CXB6218
38	Pickup Unit(Service)(DP4)	CXX1530	96	Washer	YE15FUC
39	Shaft	CLA3878	97	Screw	IMS20P030FMC
40	Shaft	CLA3879	98	Shaft	CLA3877
41	Shaft	CLA3881	99	Gear	CNV6359
42	Lever	CNC8988	100	Caller	CNV6382
43	Bracket	CNC8992	101	Arm Unit	CXB5945
44	Arm	CNC8994	102	Cover	CNC9532
45	Sheet	CNM6883	103	Washer	CBF1087
46	Sheet	CNM6884	104	Roller	CNV6928
47	PCB	CNP5971	105	Shaft	CLA4091
48	Ball	CNR1189	106	Shaft	CLA4092
49	Guide	CNV6352	107	Guide	CNV6805
50	Guide	CNV6353	108	Connector(CN1702)	CKS4282
51	Guide	CNV6354	109	Screw (M2x3.5)	CBA1560
52	Guide	CNV6355	110	Screw (M2x2.2)	CBA1419
53	Guide	CNV6356			
54	Clamper	CNV6357			
55	Arm	CNV6358			

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
Control Unit		Q 20 Transistor	2SD2396
Consists of		Q 21 Transistor	IMD2A
Control PCB		Q 22 Transistor	2SD1760F5
Photo PCB		Q 23 Transistor	IMD2A
Extension PCB		Q 24 Transistor	2SD1760F5
A B C		Q 25 Transistor	2SA1797
Unit Number : CWM7738(UC)		Q 26 Transistor	2SA1036K
CWM7737(EW)		Q 27 Transistor	2SC2412K
CWM7740(ES/RD)		Q 28 Transistor	DTC114EK
CWM7739(ES/RC)		Q 29 Transistor	DTC114EK
Unit Name : Control Unit		Q 30 Transistor	2SA1037K
		Q 31 Transistor	2SC2412K
		Q 32 Transistor	DTC114EK
		Q 33 Transistor	2SD2396
		Q 34 Transistor	IMD2A
MISCELLANEOUS		Q 35 Transistor	DTC124EK
IC 13 IC	BP5250-1	Q 36 Transistor	IMD2A
IC 15 IC	BA00ASFP	Q 37 Transistor	2SC2412K
IC 101 IC	NJM2903V	Q 39 Transistor	2SA1036K
IC 103 IC	TC74VHCT08AFT	Q 40 Transistor	DTC143EK
IC 251 IC	TC74VHCT08AFT	Q 201 Transistor	DTC124EK
IC 252 IC	TC74VHC08FT	Q 202 Transistor	2SC2412K
IC 301 IC	TC74HC123AF	Q 203 Transistor	2SC2412K
IC 302 IC	TC7W34FU	Q 251 Transistor	2SA1036K
IC 303 IC(EW,ES/RD,ES/RC)	BA7071F	Q 252 Transistor	2SC2412K
IC 304 IC	NJM2267V	Q 401 Transistor	2SC2412K
IC 305 IC	NJM2233BM	Q 403 Transistor	DTC124EK
IC 306 IC	NJM2233BM	Q 404 Transistor	IMX1
IC 307 IC	NJM2235V	Q 405 Transistor	2SA1037K
IC 308 IC	NJM2267V	Q 501 Transistor	IMD2A
IC 309 IC	NJM2235V	Q 502 Transistor	FMG12
IC 501 IC	NJM2068MD	Q 503 Transistor	IMD2A
IC 502 IC	BA3131FS	Q 504 Transistor	FMG12
IC 602 IC	PE5230A	Q 602 Transistor	DTC114EK
IC 603 IC	S-80734ANDYI	Q 603 Transistor	DTC114EK
IC 604 IC	M62354GP	Q 604 Transistor	DTA114EK
IC 605 IC	TC74VHCT08AFT	Q 651 Transistor	2SC2412K
IC 701 IC	PE5285A	Q 652 Transistor	2SC2412K
IC 801 IC	TA2050F	Q 653 Transistor	2SC2412K
IC 802 IC	HA12187FP	Q 701 Transistor	DTA144EK
IC 851 IC	TC7WT125FU	Q 851 Transistor	DTA123EU
IC 1301 IC	NJM062V	Q 852 Transistor	DTC114EK
Q 11 Transistor	2SC2412K	Q 853 Transistor	2SC2412K
Q 12 Transistor	2SA1037K	D 12 Diode	F2J4S
Q 13 Transistor	2SA1036K	D 13 Diode	UDZS8R2(B)
Q 14 Transistor	IMD2A	D 15 Diode	SC016-2
Q 15 Transistor	2SD1767	D 16 Diode	UDZS5R6(B)
Q 16 Transistor	2SC2412K	D 17 Diode	MA152WK
Q 17 Transistor	2SA1797	D 18 Diode	UDZS5R6(B)
Q 18 Transistor	2SJ529S	D 19 Diode	MA152WK
Q 19 Transistor	DTA114EK	D 21 Diode	SC802-06
		D 22 Diode	SC016-2
		D 23 Diode	MA111
		D 24 Diode	F2J4S
		D 25 Diode	SC016-2

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
D	26	Diode	UDZ9R1(B)	L	403	Inductor	CTF1379
D	27	Diode	MA3091(L)	L	404	Inductor	CTF1379
D	28	Diode	MA3056(H)	L	405	Inductor	CTF1379
D	30	Diode	MA152WK	L	406	Inductor	CTF1379
D	203	Diode	UDZ12(B)	L	501	Inductor	CTF1399
D	204	Diode	UDZ12(B)	L	502	Inductor	CTF1399
D	205	Diode	UDZ12(B)	L	503	Inductor	CTF1410
D	206	Diode	UDZ12(B)	L	504	Inductor	CTF1410
D	207	Diode	UDZ12(B)	L	505	Inductor	CTF1410
D	208	Diode	UDZ12(B)	L	506	Inductor	CTF1410
D	209	Diode	UDZ12(B)	L	507	Inductor	CTF1410
D	210	Diode	UDZS8R2(B)	L	601	Inductor	CTF1379
D	212	Diode	UDZ12(B)	L	602	Inductor	CTF1379
D	214	Diode	UDZ12(B)	L	603	Inductor	CTF1379
D	301	Diode	MA111	L	604	Inductor	CTF1379
D	302	Diode	MA111	L	605	Inductor	CTF1379
D	303	Diode	UDZ12(B)	L	606	Inductor	CTF1379
D	304	Diode	UDZ12(B)	L	607	Inductor	CTF1420
D	401	Diode	UDZS8R2(B)	L	608	Inductor	CTF1379
D	403	Diode	MA111	L	609	Inductor	CTF1379
D	404	Diode	UDZ7R5(B)	L	610	Inductor	CTF1379
D	405	Diode	MA152WK	L	611	Inductor	CTF1379
D	406	Diode	UDZ12(B)	L	612	Inductor	CTF1379
D	407	Diode	UDZ12(B)	L	613	Inductor	CTF1379
D	408	Diode	SC016-2	L	614	Inductor	CTF1379
D	409	Diode	UDZ12(B)	L	615	Inductor	CTF1379
D	410	Diode	UDZ12(B)	L	616	Inductor	CTF1379
D	411	Diode	UDZ12(B)	L	617	Inductor	CTF1379
D	412	Diode	UDZ12(B)	L	618	Inductor	CTF1379
D	413	Diode	UDZ12(B)	L	619	Inductor	CTF1379
D	414	Diode	MA111	L	620	Inductor	CTF1379
D	501	Diode	MA152WK	L	621	Inductor(EW,ES/RD,ES/RC)	CTF1379
D	601	Diode	MA152WK	L	622	Inductor	CTF1410
D	602	Diode	MA152WK	L	623	Inductor	CTF1410
D	603	Diode	MA111	L	624	Inductor	CTF1410
D	604	Diode	UDZ3R3(B)	L	625	Inductor	CTF1399
D	652	Diode	MA152WK	L	626	Inductor	CTF1379
D	1301	LED	CL190PGCD	L	627	Inductor	CTF1379
D	1302	Photo-Diode	AM-30-21	L	628	Inductor	CTF1379
L	14	Coil	CTH1246	L	701	Inductor	CTF1379
L	15	Coil	CTH1246	L	702	Inductor	CTF1379
L	16	Coil	CTH1246	L	703	Inductor	CTF1379
L	101	Inductor	CTF1305	L	704	Inductor	CTF1379
L	102	Inductor	CTF1379	L	705	Inductor	CTF1379
L	205	Inductor	CTF1305	L	706	Inductor	CTF1379
L	206	Inductor	CTF1305	L	707	Inductor	CTF1379
L	207	Inductor	CTF1305	L	708	Inductor	CTF1379
L	208	Inductor	CTF1305	L	709	Inductor	CTF1379
L	209	Inductor	CTF1305	L	710	Inductor	CTF1379
L	210	Inductor	CTF1305	L	711	Inductor	CTF1420
L	251	Inductor	CTF1305	L	712	Inductor	CTF1379
L	252	Inductor	CTF1305	L	713	Inductor	CTF1379
L	301	Inductor	CTF1379	L	714	Inductor	CTF1379
L	302	Inductor	CTF1379	L	715	Inductor	CTF1399
L	303	Inductor	CTF1379	L	716	Inductor	CTF1379
L	304	Inductor	LCTB2R2K2125	L	801	Inductor	CTF1399
L	305	Inductor(EW,ES/RD,ES/RC)	LCTB2R2K1608	L	803	Inductor	CTF1379
L	306	Inductor	CTF1305	L	804	Inductor	CTF1379
L	307	Inductor	CTF1305	L	851	Inductor	CTF1379
L	308	Inductor	CTF1305	L	1301	Inductor	LCTB100K2125
L	309	Inductor	CTF1305	X	601	Radiator 4.19MHz	CSS1436
L	310	Inductor	CTF1305	X	701	Crystal Resonator 12.5829MHz	CSS1542
L	311	Inductor	CTF1305	S	1301	Push Switch(OPEN/CLOSE)	CSG1126
L	401	Inductor	LCTB2R2K2125	FU	101	Fuse 3.15A	CEK1207
L	402	Inductor	CTF1379	FU	102	Fuse 1A	CEK1191

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
FU	103	Fuse 1A	CEK1191	R	65		RS1/16S473J
FU	104	Fuse 400mA	CEK1184	R	66		RS1/16S102J
FU	105	Fuse 2A	CEK1190	R	101		RS1/16S102J
FU	106	Fuse 3.15A	CEK1207	R	102		RS1/16S102J
FU	201	Fuse 2A	CEK1190	R	103		RAB4C102J
FU	202	Fuse 2A	CEK1190	R	104		RAB4C102J
FU	203	Fuse 2A	CEK1190	R	105		RAB4C102J
FU	251	Fuse 2A	CEK1190	R	106		RAB4C102J
FU	252	Fuse 400mA	CEK1184	R	107		RS1/16S102J
FU	253	Fuse 400mA	CEK1184	R	108		RAB4C221J
FU	401	Fuse 2A	CEK1190	R	109		RS1/16S101J
FU	402	Fuse 2A	CEK1190	R	110		RS1/16S102J
FU	403	Fuse 2A	CEK1190	R	111		RS1/16S101J
FU	404	Fuse 2A	CEK1190	R	112		RS1/16S103J
EF	301	EMI Filter	CCG1067	R	113		RS1/16S103J
EF	302	EMI Filter	CCG1067	R	114		RS1/16S392J
EF	303	EMI Filter	CCG1082	R	115		RS1/16S912J
EF	304	EMI Filter	CCG1082	R	116		RS1/16S2003F
BZ	601	Buzzer	CPV1042	R	117		RS1/16S153J
VR	1	Semi-fixed 470Ω(B)	CCP1388	R	118		RS1/16S153J
RESISTORS				R	119		RS1/16S102J
R	13		RS1/16S473J	R	120		RS1/16S102J
R	14		RS1/16S102J	R	121		RS1/16S0R0J
R	15		RS1/16S122J	R	206		RS1/16S750J
R	16		RS1/16S473J	R	207		RS1/16S750J
R	17		RS1/16S272J	R	208		RS1/16S750J
R	18		RS1/16S103J	R	209		RS1/16S750J
R	19		RS1/16S473J	R	210		RS1/16S0R0J
R	20		RS1/16S473J	R	212		RS1/16S102J
R	21		RS1/16S472J	R	213		RS1/16S392J
R	22		RS1/16S180J	R	214		RS1/16S102J
R	23		RS1/8S391J	R	215		RS1/16S473J
R	25		RS1/16S3002D	R	216		RS1/16S103J
R	26		RS1/16S1002D	R	217		RS1/16S473J
R	27		RS1/16S182J	R	218		RS1/16S223J
R	28		RS1/16S472J	R	219		RS1/16S223J
R	29		RS1/16S222J	R	220		RS1/16S223J
R	31		RS1/16S472J	R	251		RS1/16S102J
R	33		RS1/16S822J	R	252		RAB4C102J
R	34		RS1/16S472J	R	253		RS1/16S102J
R	35		RS1/16S473J	R	254		RS1/16S102J
R	36		RS1/10S472J	R	255		RS1/16S0R0J
R	37		RAB4C470J	R	256		RAB4C102J
R	38		RAB4C470J	R	257		RS1/16S102J
R	40		RS1/16S470J	R	258		RS1/16S102J
R	42		RS1/16S470J	R	259		RS1/16S271J
R	43		RS1/16S102J	R	260		RS1/16S472J
R	44		RS1/16S333J	R	261		RS1/16S273J
R	45		RS1/16S104J	R	262		RS1/16S473J
R	46		RS1/16S180J	R	263		RS1/16S0R0J
R	47		RS1/16S180J	R	264		RS1/16S0R0J
R	48		RS1/16S180J	R	265		RS1/16S221J
R	49		RS1/16S180J	R	301		RS1/16S822J
R	50		RS1/16S180J	R	302		RS1/16S822J
R	51		RS1/16S332J	R	303		RS1/16S471J
R	52		RS1/16S473J	R	304		RS1/16S471J
R	53		RS1/16S1001D	R	305		RS1/16S471J
R	54		RS1/16S3301D	R	306	(EW,ES/RD,ES/RC)	RS1/16S561J
R	55		RS1/16S2001F	R	307	(EW,ES/RD,ES/RC)	RS1/16S102J
R	56		RS1/16S4700D	R	308	(EW,ES/RD,ES/RC)	RS1/16S1003D
R	57		RS1/16S153J	R	309		RS1/16S750J
R	58		RS1/16S473J	R	310		RS1/16S105J
R	59		RS1/16S473J	R	311		RS1/16S105J
R	60		RS1/16S473J	R	312		RS1/16S101J
R	61		RS1/16S0R0J	R	313		RS1/16S101J
R	62		RS1/16S681J				

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
R 314	RS1/16S682J	R 525	RS1/16S821J
R 315	RS1/16S682J	R 526	RS1/16S223J
R 317	RS1/16S101J	R 527	RS1/16S223J
R 318	RS1/16S101J	R 528	RS1/16S472J
R 319	RS1/16S101J	R 529	RS1/16S472J
R 320	RS1/16S105J	R 601	RS1/16S102J
R 321	RS1/16S105J	R 602	RS1/16S102J
R 322	RS1/16S105J	R 603	RS1/16S473J
R 323	RS1/16S105J	R 607 (UC)	RS1/16S223J
R 324	RS1/16S105J	R 607 (EW)	RS1/16S473J
R 325	RS1/16S102J	R 607 (ES/RD,ES/RC)	RS1/16S113J
R 326	RS1/16S102J	R 608	RS1/16S104J
R 327	RS1/16S101J	R 609 (UC)	RS1/16S223J
R 328	RS1/16S105J	R 609 (ES/RD,ES/RC)	RS1/16S333J
R 329	RS1/16S750J	R 610	RAB4C473J
R 330	RS1/16S750J	R 611	RS1/16S473J
R 331	RS1/16S105J	R 612	RS1/16S473J
R 332	RS1/16S105J	R 613	RS1/16S104J
R 333	RS1/16S102J	R 614	RS1/16S104J
R 334	RS1/16S102J	R 615	RS1/16S104J
R 401	RS1/16S473J	R 616	RAB4C102J
R 402	RS1/16S103J	R 617	RS1/16S0R0J
R 403	RS1/16S473J	R 618	RS1/16S102J
R 406	RS1/16S473J	R 619	RS1/16S473J
R 407	RS1/16S473J	R 620	RAB4C473J
R 408	RS1/16S473J	R 622	RS1/16S102J
R 409	RS1/10S0R0J	R 623 (UC)	RS1/16S103J
R 410	RS1/10S103J	R 624	RS1/16S102J
R 411	RS1/16S102J	R 626	RS1/16S102J
R 412	RS1/10S103J	R 627 (UC)	RS1/16S473J
R 413	RS1/10S473J	R 629	RS1/16S102J
R 414	RS1/16S0R0J	R 630	RS1/16S224J
R 415	RS1/10S473J	R 631	RS1/16S473J
R 416	RS1/16S473J	R 632	RS1/16S104J
R 418	RS1/16S473J	R 633	RS1/16S473J
R 419	RS1/10S103J	R 634	RS1/16S473J
R 420	RS1/16S750J	R 636	RS1/16S471J
R 421	RS1/16S750J	R 637	RAB4C102J
R 423	RAB4C102J	R 651	RS1/16S102J
R 424	RS1/16S473J	R 652	RS1/16S102J
R 425	RS1/16S122J	R 653	RS1/16S102J
R 426	RS1/16S122J	R 654 (EW)	RS1/16S102J
R 427	RS1/16S122J	R 656	RS1/16S104J
R 501	RS1/16S473J	R 657	RS1/16S104J
R 503	RS1/16S222J	R 658	RS1/16S104J
R 504	RS1/16S222J	R 659	RS1/16S104J
R 505	RS1/16S473J	R 702	RS1/16S104J
R 507	RS1/16S472J	R 703	RS1/16S104J
R 508	RS1/16S472J	R 704	RAB4C473J
R 509	RS1/16S472J	R 705	RS1/16S102J
R 510	RS1/16S472J	R 708	RS1/16S471J
R 511	RS1/16S104J	R 709	RS1/16S473J
R 512	RS1/16S104J	R 710	RS1/16S473J
R 513	RS1/16S821J	R 711	RS1/16S102J
R 514	RS1/16S821J	R 712	RS1/16S473J
R 515	RS1/16S473J	R 713 (UC)	RS1/16S333J
R 516	RS1/16S473J	R 713 (EW)	RS1/16S223J
R 517	RS1/16S473J	R 713 (ES/RD)	RS1/16S473J
R 518	RS1/16S473J	R 713 (ES/RC)	RS1/16S113J
R 519	RS1/16S472J	R 714 (UC)	RS1/16S113J
R 520	RS1/16S472J	R 714 (EW)	RS1/16S223J
R 521	RS1/16S223J	R 714 (ES/RC)	RS1/16S333J
R 522	RS1/16S223J	R 715	RS1/16S473J
R 523	RS1/16S473J	R 717	RS1/16S473J
R 524	RS1/16S821J	R 719	RS1/16S102J

====Circuit Symbol and No.===Part Name			Part No.	====Circuit Symbol and No.===Part Name			Part No.
R	720		RS1/16S473J	C	52	680μF/16V	CCH1415
R	721		RS1/16S473J	C	53		CKSRYB103K50
R	722		RS1/16S473J	C	54		CKSRYB103K50
R	723		RS1/16S473J	C	55	100μF/16V	CCH1319
R	724		RS1/16S473J	C	56	100μF/16V	CCH1319
R	725		RS1/16S473J	C	57	100μF/16V	CCH1319
R	801		RS1/16S473J	C	101		CKSRYB102K50
R	802		RS1/16S473J	C	102		CKSRYB102K50
R	803		RS1/16S102J	C	103		CEV101M16
R	804		RS1/16S102J	C	104		CEV470M6R3
R	805		RS1/16S102J	C	105		CKSRYB102K50
R	806		RS1/16S102J	C	106		CEV4R7M25
R	807		RS1/16S101J	C	107		CEV470M16
R	808		RS1/16S101J	C	108		CKSRYB102K50
R	809		RS1/16S223J	C	109		CEV101M16
R	810		RS1/16S223J	C	110		CEV101M16
R	811		RS1/16S181J	C	111		CEV101M16
R	812		RS1/16S181J	C	112		CEV101M16
R	851		RS1/16S621J	C	114		CKSRYB102K50
R	853		RS1/16S473J	C	115		CKSRYB105K6R3
R	854		RS1/16S361J	C	116		CSZS330M6R3
R	1301		RS1/4S511J	C	117		CFHSQ562J16
R	1302		RS1/4S511J	C	118		CKSRYB102K50
R	1303		RS1/16S685J	C	119		CKSRYB103K50
R	1304		RS1/16S105J	C	120	470μF/16V	CCH1183
R	1305		RS1/16S103J	C	251		CKSRYB102K50
R	1306		RS1/16S393J	C	252		CEV101M16
CAPACITORS				C	253		CKSRYB103K50
				C	254		CKSRYB103K50
				C	255		CEV101M16
C	16		CKSRYB102K50				
C	17	0.1F/5.5V	CEV220M16	C	256		CKSRYB102K50
C	18		CCL1023	C	257		CKSRYB102K50
C	19		CKSRYB472K50	C	258		CEV101M16
C	20	100μF/16V	CCH1319	C	301		CKSYB106K6R3
				C	302		CKSRYB102K50
C	21	100μF/16V	CCH1319				
C	22	100μF/16V	CCH1319	C	303		CCSRCH471J50
C	23	100μF/16V	CCH1319	C	304		CCSRCH471J50
C	24	100μF/10V	CCH1332	C	305		CKSRYB103K50
C	25		CKSRYB104K16	C	306		CKSRYB103K50
				C	309	(EW,ES/RD,ES/RC)	CCSRCH221J50
C	27		CKSRYB472K50				
C	28	47μF/16V	CKSRYB472K50	C	310	(EW,ES/RD,ES/RC)	CKSRYB104K16
C	29		CCH1413	C	311	(EW,ES/RD,ES/RC)	CKSRYB103K50
C	30		CEV101M16	C	312	(EW,ES/RD,ES/RC)	CKSRYB103K50
C	31		CEV101M16	C	313		CEV221M4
				C	314		CEV221M4
C	32		CEV101M16				
C	33		CEV101M16	C	315		CKSQYB225K10
C	34		CEV101M16	C	316		CKSQYB225K10
C	35		CEV101M16	C	317		CKSRYB104K16
C	36		CKSRYB472K50	C	318		CCSRCH220J50
				C	319		CCSRCH220J50
C	37		CKSRYB472K50				
C	38		CEV101M16	C	320		CKSRYB105K6R3
C	39		CKSQYB474K16	C	321		CKSRYB105K6R3
C	40		CEV101M16	C	322		CKSRYB104K16
C	41	47μF/16V	CCH1413	C	323		CKSRYB104K16
				C	324		CKSYB106K6R3
C	42		CKSRYB472K50				
C	43		CKSRYB472K50	C	325	47μF/16V	CCSRCH220J50
C	44		CKSRYB472K50	C	326		CCH1413
C	45		CEV101M16	C	327		CKSRYB103K50
C	46		CEVR33M50	C	328		CKSRYB104K16
				C	329		CKSRYB104K16
C	47		CEV220M16				
C	48	100μF/10V	CCH1332	C	330		CCSRCH220J50
C	49		CEV220M16	C	331		CCSRCH220J50
C	50		CKSRYB103K50	C	332		CKSRYB104K16
C	51		CKSYB106K6R3	C	333		CKSRYB105K6R3
				C	334		CKSRYB105K6R3

====Circuit Symbol and No.==Part Name	Part No.		====Circuit Symbol and No.==Part Name	Part No.
C 335	CCSRCH470J50		C 709	CCSRCH101J50
C 336	CCSRCH470J50		C 710	CKSRYB103K50
C 337	CKSRYB105K6R3		C 801	CEVNP100M10
C 338	CKSRYB105K6R3		C 802	CEVNP100M10
C 339	CCSRCH220J50		C 803	CKSRYB104K16
C 340	CEV220M6R3		C 804	CEV100M16
C 341	CEV101M6R3		C 805	CEV100M16
C 342	CEV101M6R3		C 806	CKSQYB105K16
C 343	CKSRYB104K16		C 807	CKSQYB105K16
C 344 47μF/16V	CCH1413		C 808	CKSQYB105K16
C 345	CEV101M6R3		C 809	CKSQYB105K16
C 346	CKSRYB103K50		C 810	CKSRYB104K16
C 347	CEV101M6R3		C 813	CKSRYB104K16
C 348	CEV101M6R3		C 851	CCSRCH150J50
C 349	CEV220M6R3		C 853	CKSRYB104K16
C 351	CKSRYB105K6R3		C 854	CEV100M16
C 352	CKSRYB105K6R3		C 1301	CKSRYB104K16
C 353	CKSRYB105K6R3		C 1302	CKSRYB104K16
C 401	CKSYB105K25		C 1303	CKSRYB104K25
C 402	CKSRYB104K16		C 1304	CKSRYB104K16
C 404 3300μF/16V	CCH1018		C 1305	CKSRYB473K50
C 405	CKSRYB103K50			
C 407	CEV100M16		D Unit Number : CWM7752	
C 408	CKSQYB225K10		D Unit Name : Relay Unit	
C 501	CEV100M16		MISCELLANEOUS	
C 502	CEV100M16		IC 1101 IC	BA7623F
C 503	CCSRCH220J50		IC 1102 IC	NJM226TV
C 504	CCSRCH220J50		IC 1103 IC	TC7SH32FU
C 505	CEV4R7M25		IC 1104 IC	TC7S08FU
C 506	CEV4R7M25		IC 1105 IC	BA7603F
C 507	CKSRYB104K16		IC 1106 IC	PD5582A
C 508	CEV4R7M25		IC 1107 IC	TC74HC123AF
C 509	CKSRYB221K50		IC 1108 IC	TC7S08FU
C 510	CKSRYB221K50		Q 1101 Transistor	DTA114EU
C 511	CKSRYB103K50		Q 1102 Transistor	2SC4081
C 512	CEV101M16		D 1101 Diode	MA142WK
C 513	CEV220M6R3		D 1102 Diode	MA111
C 514	CEV101M16		D 1103 Diode	MA111
C 515	CEV4R7M25		D 1104 Diode	MA111
C 516	CEV4R7M25		D 1105 Diode	MA142WK
C 517	CCSRCH220J50		D 1106 Diode	MA111
C 518	CCSRCH220J50		D 1107 Diode	UDZ4R3(B)
C 519	CCSRCH221J50		L 1101 Inductor-Array	CTF1421
C 520	CCSRCH221J50		L 1105 Inductor-Array	CTF1421
C 601	CKSRYB103K50		L 1108 Inductor	CTF1379
C 602	CKSRYB104K16		L 1109 Inductor	CTF1379
C 603	CKSQYB104K50		L 1110 Inductor	CTF1379
C 604	CEV4R7M25		L 1111 Inductor	CTF1379
C 605	CCSRCH101J50		L 1112 Inductor	CTF1379
C 606	CKSRYB105K6R3		L 1118 Inductor	LCTB2R2K2125
C 607	CKSRYB103K50		L 1119 Inductor	LCTB2R2K2125
C 608	CKSYB106K6R3		L 1120 Inductor	LCTB2R2K1608
C 609	CKSRYB102K50		L 1121 Inductor	LCTB2R2K1608
C 610	CKSRYB102K50		L 1122 Inductor	LCTB2R2K1608
C 611	CKSRYB102K50		L 1123 Inductor	LCTB2R2K2125
C 612	CKSRYB103K50		L 1124 Inductor	LCTA101J2520
C 616	CKSRYB222K50		L 1125 Inductor-Array	CTF1421
C 701	CKSRYB103K50		EF 1101 EMI Filter	CCG1067
C 702	CKSRYB103K50		EF 1102 EMI Filter	CCG1067
C 703	CCSRCH101J50		RESISTORS	
C 704	CKSYB106K6R3		R 1102	RS1/16S0R0J
C 705	CKSRYB105K6R3		R 1103	RS1/16S0R0J
C 706	CCSRCH180J50		R 1104	RS1/16S0R0J
C 707	CCSRCH180J50		R 1105	RS1/16S0R0J
C 708	CKSRYB103K50		R 1106	RS1/16S0R0J

====Circuit Symbol and No.====Part Name	Part No.
R 1107	RS1/16S750J
R 1110	RS1/16S105J
R 1111	RS1/16S105J
R 1112	RS1/16S471J
R 1113	RS1/16S101J
R 1114	RS1/16S332J
R 1115	RS1/16S152J
R 1116	RS1/16S152J
R 1117	RS1/16S152J
R 1118	RS1/16S681J
R 1119	RS1/16S681J
R 1120	RS1/16S392J
R 1121	RS1/16S392J
R 1122	RS1/16S392J
R 1123	RS1/16S473J
R 1124	RS1/16S105J
R 1125	RS1/16S102J
R 1126	RS1/16S512J
R 1127	RS1/16S152J
R 1128	RS1/16S0R0J
R 1129	RS1/16S0R0J
R 1130	RS1/16S222J
R 1134	RS1/16S151J
R 1135	RS1/16S0R0J

CAPACITORS

C 1101	CKSRYB104K16
C 1102	CEV470M16
C 1103	CEV470M16
C 1104	CSZSR101M6R3
C 1107	CSZSR101M6R3
C 1108	CKSRYB103K50
C 1109	CKSYB106K6R3
C 1112	CSZSR101M6R3
C 1114	CEV101M16
C 1115	CEV220M6R3
C 1116	CKSQYB225K10
C 1117	CKSRYB103K50
C 1118	CKSYB106K6R3
C 1121	CKSRYB105K6R3
C 1123	CKSRYB105K6R3
C 1124	CKSRYB104K16
C 1125	CKSRYB104K16
C 1126	CKSRYB104K16
C 1127	CKSYB106K6R3
C 1128	CKSRYB103K50
C 1129	CKSRYB105K6R3
C 1130	CKSRYB105K6R3
C 1131	CKSRYB105K6R3
C 1132	CKSRYB103K50
C 1133	CEV101M16
C 1134	CKSRYB103K50
C 1135	CCSRCH471J50
C 1136	CCSRCH471J50
C 1137	CKSRYB105K6R3
C 1138	CKSRYB105K6R3
C 1139	CCSRCH101J50
C 1140	CKSRYB105K6R3
C 1141	CKSRYB104K16

====Circuit Symbol and No.====Part Name	Part No.
---	----------

Keyboard Unit
Consists of Inverter PCB Grille PCB



Unit Number : CWM7744(UC,ES/RD,ES/RC)
CWM7745(EW)

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1901	IC	TSOP1840SB1
IC 2941	IC	OZ960IS
IC 2942	IC	TA78L05F
Q 1901	Transistor	UMD2N
Q 1902	Transistor(EW)	2SC2412K
Q 1903	Transistor(EW)	2SC2412K
Q 1904	Transistor(EW)	2SC2412K
Q 2941	Transistor	2SC4081
Q 2942	Transistor	DTA144EE
Q 2943	FET	SI6544DQ
Q 2944	FET	SI6544DQ
D 1901	Diode	MA111
D 1902	Diode	MA111
D 1903	Diode	MA111
D 1904	LED	CL170SRCD
D 1905	LED	CL170DCD
D 1906	LED	CL170PGCD
D 1907	LED	CL155DPGD
D 1908	LED	CL155DPGD
D 1909	LED	CL170PGCD
D 2940	Diode	UDZ6R8(B)
D 2941	Diode	HZU6R2(B3)
D 2942	Diode	HZU6R2(B3)
D 2943	Diode	MA143
D 2944	Diode	MA143
D 2950	Diode	UDZ5R6(B)
D 2951	Diode	1SS355
T 2941	Transformer	CTT1102
S 1901	Spring Switch(Detach sense)	CSN1046
S 1902	Push Switch(Reset)	CSG1111
S 1903	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1903	Push Switch(EW)	CSG1113
S 1904	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1904	Push Switch(EW)	CSG1113
S 1905	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1905	Push Switch(EW)	CSG1113
S 1906	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1906	Push Switch(EW)	CSG1113
S 1907	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1907	Push Switch(EW)	CSG1113
S 1908	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1908	Push Switch(EW)	CSG1113
S 1909	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1909	Push Switch(EW)	CSG1113
S 1910	Push Switch(UC,ES/RC,ES/RD)	CSG1112
S 1910	Push Switch(EW)	CSG1113
S 2942	Push Switch	CSG1112
S 2943	Push Switch	CSG1112
S 2944	Push Switch	CSG1112

RESISTORS

R 1901	RS1/16S100J
R 1902	RS1/16S472J
R 1903	RS1/16S271J
R 1904	RS1/16S181J
R 1905	RS1/16S181J

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
R 1906 (UC,ES/RD,ES/RC)	RS1/16S131J	R 2941	RS1/16S104J
R 1906 (EW)	RS1/16S151J	R 2942	RS1/16S334J
R 1907 (EW)	RS1/16S301J	R 2943	RS1/16S0R0J
R 1908 (EW)	RS1/16S131J	R 2944	RS1/16S473J
R 1909	RS1/16S181J	R 2945	RS1/16S102J
		R 2946	RS1/16S513J
R 1910 (UC,ES/RD,ES/RC)	RS1/16S131J	R 2947	RS1/16S105J
R 1910 (EW)	RS1/16S151J	R 2948	RN1/16SE6802D
R 1911 (EW)	RS1/16S131J	R 2949	RS1/16S103J
R 1912 (EW)	RS1/16S181J	R 2951	RS1/16S103J
R 1914	RS1/16S123J	R 2953	RS1/16S471J
R 1915	RS1/16S473J		
R 1916	RS1/16S123J	R 2955	RS1/16S393J
R 1917	RS1/16S183J	R 2958	RS1/10S122J
R 1918	RS1/16S393J	R 2966	RS1/16S153J
R 1919	RS1/16S124J		
R 1920 (EW)	RS1/16S103J	CAPACITORS	
R 1921 (EW)	RS1/16S153J	C 1901	CKSRYB104K16
R 1922 (EW)	RS1/16S472J	C 1902	CKSRYB105K6R3
R 1923 (EW)	RS1/16S153J	C 2941	CKSRYB104K16
R 1924 (UC,ES/RD,ES/RC)	RS1/16S0R0J	C 2942	CKSRYB105K6R3
		C 2943	CKSRYB103K50
R 1925 (EW)	RS1/16S472J	C 2944	CKSRYB105K6R3
R 1926 (EW)	RS1/16S153J	C 2945	CKSRYB474K10
R 1930	RS1/16S271J	C 2946	CKSRYB105K6R3
R 1931	RS1/16S271J	C 2947	CKSRYB104K16
R 1932	RS1/16S181J	C 2948	CKSRYB222K50
R 1933	RS1/16S181J	C 2949	CKSRYB152K50
R 1934	RS1/16S181J	C 2952	CKSRYB103K50
R 1935	RS1/16S181J	C 2953	CKSRYB473K50
R 1936	RS1/16S181J	C 2954	CCSRCH221J50
R 1937	RS1/16S181J	C 2955	CKSRYB473K50
R 1938 (UC,ES/RD,ES/RC)	RS1/16S131J	C 2956 10μF	CCG1150
R 1938 (EW)	RS1/16S151J	C 2957 10μF	CCG1150
R 1939 (UC,ES/RD,ES/RC)	RS1/16S131J	C 2958	CKSYB225K16
R 1939 (EW)	RS1/16S151J	C 2959 22pF	CCG1140
R 1940 (UC,ES/RD,ES/RC)	RS1/16S131J	C 2961	CKSRYB273K25
R 1940 (EW)	RS1/16S151J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1941 (EW)	RS1/16S131J		
R 1942 (EW)	RS1/16S131J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1943 (EW)	RS1/16S131J		
R 1944	RS1/16S181J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1945	RS1/16S181J		
R 1946	RS1/16S181J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1947 (UC,ES/RD,ES/RC)	RS1/16S131J		
R 1947 (EW)	RS1/16S151J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1948 (UC,ES/RD,ES/RC)	RS1/16S131J		
R 1948 (EW)	RS1/16S151J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1949 (UC,ES/RD,ES/RC)	RS1/16S131J		
R 1949 (EW)	RS1/16S151J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1950 (EW)	RS1/16S131J		
R 1951 (EW)	RS1/16S131J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1952 (EW)	RS1/16S131J		
R 1953 (EW)	RS1/16S181J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1954 (EW)	RS1/16S181J		
R 1955 (EW)	RS1/16S181J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1956 (EW)	RS1/16S301J		
R 1957 (EW)	RS1/16S301J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1958 (EW)	RS1/16S301J		
R 1959	RS1/16S271J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1960	RS1/16S0R0J		
R 1962 (UC,ES/RD,ES/RC)	RS1/16S0R0J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1963	RS1/16S271J		
R 1964	RS1/16S271J	Encoder Unit Consists of Encoder PCB SW PCB	
R 1965	RS1/16S271J		
R 1966	RS1/16S271J	Encoder Unit Consists of Encoder PCB SW PCB	
R 2940	RS1/16S472J		
		MISCELLANEOUS	
		IC 2801 IC	TA7806S
		IC 2802 IC	TA78L05F
		IC 2803 IC	BA6951FS
		IC 2804 IC	TC7S14FU
		IC 2805 Photo-interrupter	GP1S25
		IC 2806 Photo-interrupter	GP1S25
		IC 2807 IC	TC7W14FU
		Q 2801 Transistor	2SA1615-Z
		Q 2802 Transistor	DTC114EK
		Q 2803 Transistor	DTC144EK
		Q 2804 Transistor	DTC144EK
		D 2804 Diode	UDZS3R9(B)
		L 2801 Inductor	LCYA150K3225
		L 2802 Inductor	LCTB150K2125
		L 2803 Inductor	LCYA150K3225
		S 2801 Spring Switch(DEG0)	CSN1053

====Circuit Symbol and No.====Part Name		Part No.	====Circuit Symbol and No.====Part Name		Part No.	
RESISTORS						
R	2800	RS1/10S0R0J	IC	1403	IC	TC74LCX244FT
R	2801	RS1/16S153J	IC	1405	IC	TC7SH04FU
R	2802	RS1/4S751J	IC	1500	IC	MSM56V16160F8TKFM
R	2803	RS1/4S751J	IC	1501	IC	MSM56V16160F8TKFM
R	2804	RS1/16S1201F	IC	1502	IC	MN677532JAUB
R	2805	RS1/16S3000F	IC	1503	IC	TC74VCX74FT
R	2807	RS1/16S563J	IC	1504	IC	TC74VCX04FT
R	2808	RS1/4S2R0J	IC	1506	IC	SM8703AV
R	2809	RS1/16S221J	IC	1509	IC	TC74VCX74FT
R	2811	RS1/16S273J	IC	1601	IC	AK4380VT
R	2813	RS1/16S471J	IC	1700	IC	PE5277A
R	2814	RS1/10S391J	IC	1701	IC	M5M5V216ATP-70HI
R	2815	RS1/16S473J	IC	1702	IC	PD6354B
R	2816	RS1/4S2R0J	IC	1704	IC	TC74VCX08FT
R	2817	RS1/16S0R0J	IC	1705	IC	TC7SH04FU
R	2818	RS1/16S103J	IC	1706	IC	TC7SH32FU
R	2819	RS1/16S0R0J	IC	1802	IC	BA033SFP
R	2820	RS1/16S0R0J	IC	1803	IC	BA18BC0WFP
R	2821	RS1/16S473J	IC	1804	IC	BA00BC0WFP
R	2822	RS1/16S0R0J	Q	1102	Transistor	2SD601A
R	2823	RS1/10S391J	Q	1104	Transistor	2SB1260
R	2824	RS1/16S473J	Q	1105	Transistor	2SB709A
R	2825	RS1/16S0R0J	Q	1107	Transistor	UN2211
R	2829	RS1/16S103J	Q	1108	Transistor	2SB1260
R	2830	RS1/16S103J	Q	1109	Chip Transistor	2SC2712
R	2831	RS1/16S1501F	Q	1110	Chip Transistor	2SC2712
R	2832	RS1/16S153J	Q	1111	Chip Transistor	2SC2712
R	2833	RS1/16S272J	Q	1600	Transistor	2SA1037K
			Q	1601	Transistor	2SA1037K
			Q	1602	Transistor	FMG12
			Q	1603	Transistor	IMD2A
			Q	1700	Transistor	DTA123JK
			D	1100	Diode	1SS355
			D	1101	Diode	1SS355
			D	1401	Diode	UDZ2R7(B)
			D	1601	Chip Diode	MA151WA
			D	1802	Diode	S2G-6600
			D	1804	Diode	1SR154-400
			L	1201	Inductor	CTF1409
			L	1202	Inductor	CTF1409
			L	1401	Inductor	CTF1409
			L	1402	Inductor	CTF1409
			L	1403	Inductor	CTF1395
			L	1404	Inductor	CTF1473
			L	1500	Inductor	CTF1395
			L	1501	Inductor	CTF1394
			L	1502	Inductor	CTF1409
			L	1503	Inductor	CTF1399
			L	1504	Inductor	CTF1399
			L	1505	Inductor	CTF1399
			L	1506	Inductor	CTF1409
			L	1507	Inductor	CTF1473
			L	1508	Inductor	CTF1473
			L	1509	Inductor	CTF1473
			L	1512	Inductor	CTF1470
			L	1536	Inductor	CTF1470
			L	1600	Inductor	CTF1473
			L	1602	Inductor	CTF1399
			L	1700	Inductor	CTF1395
			L	1701	Inductor	CTF1409
			L	1702	Inductor	CTF1473
			L	1704	Inductor	CTF1473
			L	1720	Inductor	CTF1473
			X	1500	Resonator 27MHz	CSS1531
			X	1700	Ceramic Resonator 5MHz	CSS1547
MISCELLANEOUS						
IC	1100	IC	AN8702FH			
IC	1101	IC	NJM2904M			
IC	1200	IC	MN677061ZYUB			
IC	1300	IC	BA5985FM			
IC	1400	IC	MNZS25BDAUB			
Unit Number : CWX2574						
Unit Name : DVD Core Unit V						

I Unit Number : CWX2574
Unit Name : DVD Core Unit V

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
S 1301 Spring Switch(CLAMP)	CSN1051	R 1207	RS1/16SS101J
S 1302 Spring Switch(L/E ON/OFF)	CSN1051	R 1208	RS1/16SS101J
S 1303 Spring Switch(8cmDETECT)	CSN1051	R 1209	RS1/16SS473J
S 1304 Spring Switch(12cmDETECT)	CSN1051	R 1210	RS1/16SS222J
VR 1500 Semi-fixed 2.2kΩ(B)	CCP1177	R 1212	RS1/16SS473J
F 1600 Filter	CTF1515	R 1213	RS1/16SS101J
RESISTORS		R 1215	RS1/16SS123J
		R 1216	RS1/16SS473J
		R 1219	RS1/16SS123J
		R 1220	RS1/16SS105J
R 1101	RS1/16SS330J		
R 1102	RS1/16SS3R9J		
R 1103	RS1/16SS330J	R 1221	RS1/16SS562J
R 1104	RS1/16SS3R9J	R 1222	RS1/16SS273J
R 1105	RS1/16SS122J	R 1223	RS1/16SS273J
		R 1226	RS1/16SS153J
		R 1227	RS1/16SS123J
R 1106	RS1/16SS472J		
R 1107	RS1/16S6201D		
R 1108	RS1/16SS3R9J	R 1228	RS1/16SS472J
R 1109	RS1/16SS3R9J	R 1229	RS1/16SS472J
R 1110	RS1/16S1002D	R 1230	RS1/16SS472J
		R 1231	RS1/16SS273J
		R 1232	RS1/16S6801D
R 1113	RS1/16S2402D		
R 1114	RS1/16SS823J		
R 1115	RS1/16SS682J	R 1233	RS1/16SS273J
R 1116	RS1/16SS3R9J	R 1234	RS1/16SS183J
R 1117	RS1/16SS3R9J	R 1235	RS1/16SS102J
		R 1242	RAB4CQ221J
		R 1245	RS1/16SS562J
R 1118	RS1/16SS223J		
R 1119	RS1/16SS202J		
R 1120	RS1/16SS105J	R 1246	RS1/16SS242J
R 1121	RS1/16SS105J	R 1251	RS1/16SS473J
R 1122	RS1/16SS103J	R 1255	RS1/16SS0R0J
		R 1257	RS1/16S221J
		R 1258	RS1/16SS221J
R 1123	RS1/16SS103J		
R 1124	RS1/16SS103J		
R 1125	RS1/16SS103J	R 1259	RS1/16SS221J
R 1126	RS1/16SS103J	R 1260	RS1/16SS221J
R 1127	RS1/16SS103J	R 1261	RS1/16SS221J
		R 1262	RS1/16SS273J
		R 1263	RS1/16SS273J
R 1128	RS1/16SS3R9J		
R 1129	RS1/16SS3R9J		
R 1130	RS1/16SS102J	R 1264	RS1/16SS104J
R 1131	RS1/16SS102J	R 1301	RS1/16S3902D
R 1132	RS1/16SS102J	R 1302	RS1/16S3902D
		R 1303	RS1/16S3002D
		R 1304	RS1/16S3902D
R 1133	RS1/16SS102J		
R 1134	RS1/16SS102J		
R 1135	RAB4CQ0R0J	R 1305	RS1/16SS221J
R 1136	RS1/16SS133J	R 1306	RS1/16SS0R0J
R 1137	RS1/16SS133J	R 1307	RS1/16SS221J
		R 1308	RS1/16S3002D
		R 1310	RS1/16SS102J
R 1138	RS1/16SS0R0J		
R 1139	RS1/16SS0R0J		
R 1140	RS1/16SS0R0J	R 1311	RS1/16S3902D
R 1141	RS1/16SS0R0J	R 1312	RS1/16S0R0J
R 1142	RS1/16SS183J	R 1314	RS1/16SS221J
		R 1321	RS1/16SS221J
		R 1323	RS1/16SS104J
R 1143	RS1/16SS273J		
R 1144	RS1/16SS273J		
R 1145	RS1/16SS0R0J	R 1324	RS1/16SS473J
R 1146	RS1/16SS0R0J	R 1325	RS1/16SS273J
R 1147	RS1/16SS0R0J	R 1400	RAB4CQ681J
		R 1401	RAB4CQ681J
		R 1403	RS1/16SS222J
R 1148	RS1/16SS0R0J		
R 1149	RS1/16SS102J		
R 1150	RS1/16SS102J	R 1405	RS1/16SS221J
R 1151	RS1/16SS102J	R 1406	RS1/16SS103J
R 1152	RS1/16SS154J	R 1409	RS1/16SS103J
		R 1413	RS1/16SS681J
		R 1416	RS1/16SS681J
R 1153	RS1/16SS154J		
R 1154	RS1/16SS154J		
R 1156	RS1/16SS224J	R 1417	RS1/16SS103J
R 1157	RS1/16SS0R0J	R 1418	RS1/16SS681J
R 1201	RS1/16SS203J	R 1425	RS1/16SS104J
		R 1426	RS1/16SS103J
		R 1429	RS1/16S470J
R 1202	RS1/16SS102J		
R 1203	RS1/16SS471J		
R 1204	RS1/16SS221J		
R 1205	RS1/16SS221J		
R 1206	RS1/16SS473J		

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
R 1434	RS1/16SS681J	R 1567	RS1/16SS560J
R 1436	RS1/16SS103J	R 1568	RS1/16SS560J
R 1437	RS1/16SS103J	R 1569	RS1/16SS560J
R 1438	RS1/16SS221J	R 1570	RS1/16SS560J
R 1439 Resistor Array	RAB4CQ0R0J	R 1571	RS1/16SS560J
R 1440 Resistor Array	RAB4CQ0R0J	R 1572	RS1/16SS560J
R 1441	RS1/16SS0R0J	R 1573	RS1/16SS560J
R 1442	RS1/16SS221J	R 1574	RS1/16SS560J
R 1443	RS1/16SS221J	R 1575	RS1/16SS560J
R 1500	RS1/16SS560J	R 1577	RS1/16S0R0J
R 1501	RS1/16SS560J	R 1579	RS1/16S0R0J
R 1502	RS1/16SS560J	R 1600	RS1/16SS271J
R 1503	RS1/16SS560J	R 1601	RS1/16SS152J
R 1504	RS1/16SS560J	R 1602	RS1/16SS101J
R 1505	RS1/16SS560J	R 1604	RS1/16S3300D
R 1506	RS1/16SS560J	R 1605	RS1/16SS122J
R 1507	RS1/16SS560J	R 1607	RS1/16SS0R0J
R 1508	RS1/16SS560J	R 1623	RS1/16SS102J
R 1509	RS1/16SS560J	R 1624	RS1/16SS102J
R 1510	RS1/16SS560J	R 1625	RS1/16SS223J
R 1511	RS1/16SS560J	R 1626	RS1/16SS223J
R 1513	RS1/16SS750J	R 1628	RS1/16S68R0D
R 1514	RS1/16SS622J	R 1634	RS1/16SS472J
R 1515	RS1/16SS162J	R 1635	RS1/16SS472J
R 1516	RS1/16SS182J	R 1636	RS1/16SS472J
R 1517	RS1/16SS201J	R 1637	RS1/16SS472J
R 1518	RS1/16SS201J	R 1701	RN1/16SE1502D
R 1519	RS1/16S101J	R 1702	RS1/16SS221J
R 1520	RS1/16S101J	R 1703	RS1/16SS221J
R 1521	RS1/16S101J	R 1704	RS1/16SS104J
R 1523	RS1/16SS221J	R 1705	RS1/16SS103J
R 1524	RS1/16S470J	R 1706	RS1/16SS103J
R 1527	RS1/16SS103J	R 1707	RS1/16SS221J
R 1529	RS1/16SS104J	R 1708	RS1/16SS0R0J
R 1534	RS1/16SS221J	R 1709	RS1/16SS221J
R 1535	RS1/16SS101J	R 1710	RS1/16SS473J
R 1537	RS1/16SS391J	R 1711	RS1/16SS330J
R 1538	RS1/16SS391J	R 1712	RS1/16SS0R0J
R 1539 Resistor Array	RAB4CQ391J	R 1713	RS1/16SS104J
R 1540 Resistor Array	RAB4CQ391J	R 1714	RS1/16SS104J
R 1541 Resistor Array	RAB4CQ391J	R 1715	RS1/16SS472J
R 1542 Resistor Array	RAB4CQ391J	R 1716	RS1/16SS104J
R 1543 Resistor Array	RAB4CQ391J	R 1717	RS1/16SS473J
R 1544 Resistor Array	RAB4CQ391J	R 1718	RS1/16SS104J
R 1545 Resistor Array	RAB4CQ391J	R 1719	RS1/16SS104J
R 1546	RS1/16SS103J	R 1720	RS1/16SS473J
R 1548	RS1/16SS103J	R 1721	RS1/16SS104J
R 1549	RS1/16SS560J	R 1722	RS1/16SS104J
R 1550	RS1/16SS560J	R 1723	RS1/16SS473J
R 1551	RS1/16SS560J	R 1724	RS1/16SS221J
R 1552	RS1/16SS560J	R 1725	RS1/16S0R0J
R 1553	RS1/16SS560J	R 1726	RS1/16SS104J
R 1554	RS1/16SS560J	R 1727	RS1/16SS103J
R 1555	RS1/16SS560J	R 1728	RS1/16SS104J
R 1556	RS1/16SS560J	R 1729	RS1/16SS104J
R 1557	RS1/16SS560J	R 1730	RS1/16SS473J
R 1558	RS1/16SS560J	R 1733	RS1/16SS104J
R 1559	RS1/16SS560J	R 1734	RS1/16SS104J
R 1560	RS1/16SS560J	R 1735	RS1/16SS222J
R 1561	RS1/16SS560J	R 1736	RS1/16SS221J
R 1562	RS1/16SS560J	R 1737	RS1/16SS221J
R 1563	RS1/16SS560J	R 1738	RS1/16SS104J
R 1564	RS1/16SS560J	R 1739	RS1/16SS103J
R 1565	RS1/16SS560J	R 1740	RS1/16SS103J
R 1566	RS1/16S101J	R 1741	RS1/16SS221J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 1742	RS1/16SS104J	C 1127	CCSRCH561J50
R 1743	RS1/16SS221J	C 1128	CKSSYB104K10
R 1744	RS1/16SS221J	C 1129	CKSSYB104K10
R 1745	RS1/16SS221J	C 1130	CCSRCH102J50
R 1746	RS1/16SS221J	C 1131	CCSSCH120J50
R 1747	RS1/16SS222J	C 1133	CCSRCH561J50
R 1748	RS1/16SS473J	C 1134	CKSSYB104K10
R 1749	RS1/16SS104J	C 1136	CCSSCH101J50
R 1750	RS1/16SS472J	C 1137	CCSSCH101J50
R 1751	RS1/16SS103J	C 1138	CCSSCH101J50
R 1752	RS1/16SS104J	C 1139	CKSSYB104K10
R 1753	RS1/16SS104J	C 1140	CKSSYB103K16
R 1754	RS1/16SS104J	C 1141	CKSSYB104K10
R 1755	RS1/16SS104J	C 1142	CKSSYB104K10
R 1756	RS1/16SS473J	C 1143	CKSSYB473K10
R 1757	RS1/16SS472J	C 1144	CKSSYB473K10
R 1758	RS1/16SS104J	C 1145	CKSSYB103K16
R 1762	RS1/16SS104J	C 1146	CKSSYB473K10
R 1763	RS1/16SS104J	C 1148	CKSSYB103K16
R 1764	RS1/16SS104J	C 1201	CKSRYB105K10
R 1766	RS1/16SS104J	C 1202	CCSSCH101J50
R 1771	RS1/16SS104J	C 1203	CKSRYB474K10
R 1772	RS1/16SS104J	C 1204	CCSRCH561J50
R 1773	RS1/16SS104J	C 1205	CCSRCH331J50
R 1774	RS1/16SS473J	C 1206	CKSRYB105K10
R 1775	RS1/16SS221J	C 1207	CKSSYB104K10
R 1776	RS1/16SS104J	C 1208	CCSRCH471J50
R 1777	RS1/16SS104J	C 1209	CCSRCH391J50
R 1778	RS1/16SS0R0J	C 1210	CKSRYB105K10
R 1801	RS1/16S3902D	C 1211	CCSSCH101J50
R 1802	RS1/16S3302D	C 1212	CKSSYB104K10
R 1808	RS1/16SS102J	C 1213	CKSRYB474K10
R 1809	RS1/16SS102J	C 1214	CCSRCH102J50
R 1812	RS1/16S0R0J	C 1215	CCSRCH102J50
R 1813	RS1/16S0R0J	C 1216	CKSSYB562K25
R 1814	RS1/16S0R0J	C 1217	CCSRCH102J50
R 1815	RS1/16S0R0J	C 1218	CKSSYB104K10
		C 1219	CKSSYB104K10
		C 1220	CKSRYB474K10
		C 1221	CCSSCH470J50
C 1100	CKSRYB105K10	C 1222	CKSRYB183K25
C 1101	CKSRYB473K25	C 1223	CCSRCH102J50
C 1102	CKSSYB103K16	C 1224	CKSSYB104K10
C 1103	CSZSR101M6R3	C 1225	CKSSYB104K10
C 1104	CKSSYB104K10	C 1227	CKSSYB103K16
C 1105	CKSSYB104K10	C 1228	CKSSYB104K10
C 1106	CKSRYB473K25	C 1229	CCSRCH102J50
C 1107	CKSSYB103K16	C 1230	CKSSYB103K16
C 1108	CSZSR101M6R3	C 1231	CKSSYB104K10
C 1109	CKSSYB104K10	C 1232	CKSRYB154K10
C 1110	CKSRYB154K10	C 1233	CKSSYB104K10
C 1111	CCSSCH221J25	C 1234	CKSSYB104K10
C 1114	CCSSCH330J50	C 1235	CKSSYB104K10
C 1115	CKSSYB104K10	C 1236	CKSSYB471K50
C 1116	CCSSCH221J25	C 1241	CKSSYB103K16
C 1117	CKSRYB105K10	C 1242	CKSSYB103K16
C 1118	CKSSYB104K10	C 1243	CKSSYB104K10
C 1119	CKSSYB104K10	C 1300	CKSSYB103K16
C 1120	CKSSYB104K10	C 1301	CKSSYB103K16
C 1121	CKSSYB104K10	C 1304	CKSRYB104K16
C 1122	CSZSC470M16	C 1305	CEV101M16
C 1123	CKSRYB273K25	C 1308	CKSSYB104K10
C 1124	CKSSYB104K10	C 1400	CKSSYB104K10
C 1125	CKSSYB104K10	C 1401	CKSSYB104K10
C 1126	CKSSYB473K10	C 1402	CKSSYB104K10

CAPACITORS

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 1403	CKSSYB104K10	C 1550	CKSSYB104K10
C 1404	CKSSYB104K10	C 1551	CKSSYB104K10
C 1405	CKSSYB104K10	C 1552	CKSSYB104K10
C 1406	CKSSYB104K10	C 1553	CKSSYB104K10
C 1407	CKSSYB104K10	C 1554	CKSSYB104K10
C 1408	CKSSYB104K10	C 1555	CKSSYB104K10
C 1409	CKSSYB104K10	C 1556	CKSSYB104K10
C 1410	CKSSYB104K10	C 1570	CSZSR101M6R3
C 1411	CKSSYB104K10	C 1571	CSZSR101M6R3
C 1412	CKSSYB104K10	C 1572	CEV101M10
C 1413	CKSSYB104K10	C 1573	CEV101M10
C 1414	CKSRYB105K10	C 1574	CSZSC470M10
C 1415	CKSSYB104K10	C 1575	CSZSC470M10
C 1416	CKSSYB104K10	C 1576	CKSSYB104K10
C 1418	CKSSYB471K50	C 1577	CKSSYB104K10
C 1421	CKSSYB104K10	C 1578	CKSSYB104K10
C 1423	CKSSYB104K10	C 1579	CKSSYB104K10
C 1500	CKSSYB104K10	C 1600	CKSRYB104K16
C 1501	CKSSYB104K10	C 1601	CSZSR4R7M16
C 1502	CKSSYB104K10	C 1602	CKSSYB102K50
C 1503	CKSSYB104K10	C 1608	CSZSR4R7M16
C 1504	CKSSYB104K10	C 1609	CSZSR4R7M16
C 1505	CKSSYB104K10	C 1634	10μF/10V CCH1349
C 1506	CSZSC101M10	C 1635	10μF/10V CCH1349
C 1507	CKSSYB104K10	C 1636	CKSSYB104K10
C 1508	CKSSYB104K10	C 1637	CKSSYB104K10
C 1509	CKSSYB104K10	C 1700	CKSSYB104K10
C 1510	CKSSYB104K10	C 1701	CKSSYB104K10
C 1511	CKSSYB104K10	C 1702	CKSRYB105K10
C 1512	CKSSYB104K10	C 1703	CKSRYB105K10
C 1513	CKSSYB104K10	C 1704	CKSSYB104K10
C 1514	CKSSYB104K10	C 1705	CKSRYB105K10
C 1515	CKSSYB104K10	C 1706	CKSSYB104K10
C 1516	CKSSYB104K10	C 1707	CKSRYB105K10
C 1517	CKSSYB104K10	C 1708	CKSSYB104K10
C 1518	CKSSYB104K10	C 1709	CKSSYB104K10
C 1519	CKSSYB104K10	C 1710	CKSSYB104K10
C 1520	CKSSYB104K10	C 1711	CKSSYB104K10
C 1521	CKSSYB104K10	C 1712	CKSSYB103K16
C 1522	CKSSYB104K10	C 1713	CKSSYB104K10
C 1523	CKSSYB104K10	C 1714	CKSYB106K6R3
C 1524	CKSSYB104K10	C 1715	CKSSYB104K10
C 1525	CKSSYB104K10	C 1716	CKSSYB104K10
C 1526	CKSSYB104K10	C 1717	CKSSYB104K10
C 1527	CKSSYB104K10	C 1719	CKSSYB471K50
C 1528	CKSSYB104K10	C 1720	CKSSYB103K16
C 1529	CKSSYB471K50	C 1721	CKSSYB104K10
C 1530	CKSSYB104K10	C 1722	CKSSYB103K16
C 1532	CKSSYB104K10	C 1727	CCSRCH180J50
C 1534	CCSSCH150J50	C 1728	CCSRCH180J50
C 1535	CKSSYB104K10	C 1800	CKSRYB474K10
C 1536	CKSSYB104K10	C 1801	CKSRYB474K10
C 1537	CCSSCH150J50	C 1802	CKSRYB474K10
C 1538	CKSSYB104K10	C 1803	CKSRYB474K10
C 1539	CKSSYB104K10	C 1804	22μF/6.3V CCH1300
C 1540	CKSRYB105K10	C 1805	22μF/6.3V CCH1300
C 1541	CKSRYB105K10	C 1808	CSZSC101M10
C 1542	CKSSYB104K10	C 1809	CCSRCH102J50
C 1543	CKSSYB104K10	C 1810	CCSRCH102J50
C 1544	CKSSYB104K10	C 1811	CSZSR101M6R3
C 1545	CKSSYB104K10	C 1812	CSZSC101M10
C 1546	CKSSYB104K10		
C 1547	CKSSYB104K10		
C 1548	CKSSYB104K10		
C 1549	CKSSYB104K10		

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
K Unit Number : CWX2565 Unit Name : LCD Module			
MISCELLANEOUS			
Q 1		JP 3	RS1/16S0R0J
Q 2 IC	NJM2107F	JP 7	RS1/16S0R0J
Q 3		JP 8	RS1/16S0R0J
Q 4 IC	TC7SH04FU	JP 40	RS1/16S0R0J
Q 5 IC	TC7SH04FU	JP 41	RS1/16S0R0J
Q 6 IC	TC7S66FU	JP 42	RS1/16S0R0J
Q 7 IC	TC7SET08FU	JP 803	RS1/16S0R0J
Q 201 IC	IR3Y29B	JP 804	RS1/16S0R0J
Q 202		JP 806	RS1/16S0R0J
Q 203		JP 808	RS1/16S0R0J
Q 204		JP 809	RS1/16S0R0J
Q 205 Transistor	2SA1162	JP 810	RS1/16S0R0J
Q 206		JP 851	RS1/16S0R0J
Q 207 IC	TC7S66FU	JP 852	RS1/16S0R0J
Q 208 IC	TC7S66FU	JP 853	RS1/16S0R0J
Q 210		JP 860	RS1/8S0R0J
Q 211 IC	TC7S66FU	JP 861	RS1/8S0R0J
Q 212 IC	TC7S66FU	F 801 Fuse 1A	CEK1191
Q 271 IC	TC74HC4053AFT	B 801	
Q 272 Transistor	2SA1162	B 802	
Q 282 IC	TC7W14FU	RM 8	
Q 291 IC	TC7SET08FU	X 201	
Q 292 IC	TC7S14FU	X 202	
Q 293 IC	TC7S14FU	FL 1	
Q 501 IC	TA75072F	T 801	
Q 502 Transistor	2SC3265	VR 1	
Q 503 Transistor	2SA1298	VR 201	
Q 504 Transistor	2SC3265	VR 202	
Q 505 Transistor	2SA1298	VR 203	
Q 651 IC	AN6308S	VR 204	
Q 652 Transistor	2SC2712	VR 205	
Q 801		VR 206	
Q 802		VR 501	
Q 803		VR 502	
D 1 Diode	1SV231	VR 801	
D 2			
D 3			
D 4			
D 5			
D 801			
D 802			
D 803 Diode	SB05-05CP		
D 851 Diode	1SS250		
D 852 Diode	1SS250		
D 853			
L 1			
L 201			
L 202			
L 203			
L 204			
L 205			
L 277			
L 278			
L 279			
L 601			
L 801			
L 852 Inductor	CTF1504		
L 853 Inductor	CTF1504		
JP 1	RS1/16S0R0J		
JP 2	RS1/16S0R0J		


====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 206	RS1/16S512J	R 508	RS1/16S103J
R 209	RS1/16S105J	R 509	RS1/16S333J
R 210	RS1/16S152J	R 510	RS1/16S333J
R 211	RS1/16S472J	R 511	RS1/16S103J
R 212	RS1/16S331J	R 512	RS1/16S682J
R 213	RS1/16S512J	R 513	RS1/16S183J
R 214	RS1/16S153J	R 514	RS1/16S101J
R 215	RS1/16S562J	R 515	RS1/16S123J
R 216	RS1/16S152J	R 516	RS1/16S432J
R 217	RS1/16S331J	R 517	RS1/16S0R0J
R 218	RS1/16S3002F	R 518	RS1/16S101J
R 219	RS1/16S2002F	R 651	RS1/16S151J
R 220	RS1/16S2402F	R 652	RS1/16S151J
R 221	RS1/16S2702F	R 653	RS1/8S750J
R 222	RS1/16S273J	R 654	RS1/8S750J
R 223	RS1/16S273J	R 655	RS1/16S332J
R 224	RS1/16S273J	R 656	RS1/16S751J
R 225	RS1/16S273J	R 802	
R 226	RS1/16S473J	R 803	RS1/16S1502F
R 227	RS1/16S153J	R 804	RS1/16S203J
R 228	RS1/16S473J	R 805	RS1/16S823J
R 229	RS1/16S153J	R 851	RS1/16S105J
R 230	RS1/16S101J	R 852	RS1/16S564J
R 231	RS1/16S101J	R 853	RS1/16S562J
R 234	RS1/16S102J	R 854	RS1/8S0R0J
R 235	RS1/8S680J	CAPACITORS	
R 236	RS1/8S680J	C 1	CCSRCH470J50
R 237	RS1/8S680J	C 2	CCSRCH101J50
R 238	RS1/16S681J	C 3	CCSRCH102J25
R 239	RS1/16S561J	C 4	CKSRYB104K16
R 240	RS1/16S1802F	C 5	CKSRYB104K16
R 242	RS1/16S624J	C 6	CCSRCH681J50
R 243	RS1/16S274J	C 7	CKSRYB104K16
R 244	RS1/16S334J	C 8	CKSRYB104K16
R 245	RS1/16S563J	C 9	CKSRYB104K16
R 246	RS1/16S101J	C 10	CKSRYB104K16
R 247	RS1/16S151J	C 18	CKSRYF224Z16
R 248		C 19	CKSRYF224Z16
R 249		C 20	CKSRYF224Z16
R 250		C 21	CKSRYF224Z16
R 251	RS1/16S474J	C 22	CKSRYF224Z16
R 260	RS1/16S102J	C 23	CKSRYF224Z16
R 261	RS1/16S103J	C 24	CKSRYF224Z16
R 262	RS1/16S101J	C 25	CKSRYF224Z16
R 272	RS1/16S152J	C 26	CKSRYF224Z16
R 273	RS1/16S681J	C 27	CKSRYF104Z25
R 274	RS1/16S183J	C 28	CKSRYF104Z25
R 275	RS1/16S221J	C 29	CKSRYF224Z16
R 276	RS1/16S221J	C 30	CKSRYF224Z16
R 277	RS1/16S221J	C 31	CKSRYF224Z16
R 278	RS1/16S104J	C 32	CKSRYF224Z16
R 279	RS1/16S104J	C 60	CKSRYB103K50
R 280	RS1/16S104J	C 61	CKSRYB103K50
R 285	RS1/16S101J	C 62	CKSRYB103K50
R 287	RS1/16S682J	C 63	CKSRYB103K50
R 291	RS1/16S101J	C 64	CKSRYB103K50
R 292	RS1/16S621J	C 66	CKSRYB103K50
R 293	RS1/16S152J	C 67	CKSRYB103K50
R 501	RS1/16S5602F	C 68	CKSRYB103K50
R 502	RS1/16S2701F	C 69	CKSRYB103K50
R 503	RS1/16S103J	C 70	CKSRYB103K50
R 504	RS1/16S911J	C 71	CKSRYB103K50
R 505	RS1/16S1002F	C 72	CKSRYB103K50
R 506	RS1/16S2201D	C 73	CKSRYF105Z10
R 507	RS1/16S101J	C 201	CCSRCH220J50
		C 202	

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 203	CCSRCH680J50	C 651	CKSYB106K6R3
C 204	CKSYB106K6R3	C 652	CKSYB106K6R3
C 205	CCSRCH681J50	C 653	CKSRYF104Z25
C 206	CKSRYF104Z25	C 654	CKSYB106K6R3
C 207	CCSRCH560J50	C 801	
C 208	CKSRYB103K50	C 803	CKSRYB473K16
C 209	CKSRYB473K16	C 804	CSZS2R2M16
C 210	CCSRCH820J50	C 805	CKSYB475K16
C 211	CKSRYB103K50	C 806	
C 212	CKSRYB103K50	C 808	CCSRCH101J50
C 213	CKSRYF105Z10	C 809	47μF/6.3V CCH1372
C 214	CKSRYF104Z25	C 814	CCSRCH330J50
C 215	CCSRCH6R0D50	C 851	CSZSR4R7M25
C 216	CKSQYB474K25	C 853	CSZSR22M35
C 217	CKSRYB103K50	C 854	CSZSR22M35
C 218	CCSRCH5R0C50	C 855	CSZSR22M35
C 219	CKSRYF104Z25	C 856	CCSRCH471J50
C 220	CSZS1R0M25	C 857	CSZSR22M35
C 221	CSZS1R0M25		
C 222	CSZSR47M20		
C 223	CKSRYF105Z10		
C 224	CSZS1R0M25		
C 225	CKSRYB103K50		
C 226	CKSRYB103K50		
C 227	CKSRYB103K50		
C 228	CKSRYB103K50		
C 229	CKSRYB103K50		
C 230	CKSRYB103K50		
C 231	CCSRCH681J50		
C 232	CCSRCH331J50		
C 234	CSZSR68M16		
C 235	CKSRYB103K50		
C 236	CKSRYB154K10		
C 237	CKSRYF104Z25		
C 238	CSZSR68M16		
C 239	CSZSR68M16		
C 240	CKSRYF104Z25		
C 241	CKSRYF104Z25		
C 242	CKSRYF104Z25		
C 243	CKSQYB474K25		
C 246	CKSYB225K16		
C 247	CKSRYB103K50		
C 248	CCSRCH8R0D50		
C 249	CCSRCH4R0C50		
C 250	CKSRYF224Z16		
C 251	CKSRYF224Z16		
C 253	CSZSR47M20		
C 254	CSZSR68M16		
C 255	CSZSR68M16		
C 271	CKSRYF104Z25		
C 275	CCSRCH390J50		
C 276	CCSRCH390J50		
C 277	CCSRCH390J50		
C 284	CCSRCH221J50		
C 285	CKSRYF224Z16		
C 291	CCSRCH100D50		
C 292	CCSRCH561J50		
C 293	CKSRYF224Z16		
C 294	CKSRYF224Z16		
C 296	CKSRYF224Z16		
C 501	CKSRYB103K50		
C 502	CKSYB106K6R3		
C 503	CKSRYB103K50		
C 504	CKSYB106K6R3		
C 505	CSZSR10M35		


Miscellaneous Parts List

		Pickup Unit(Service)(DP4)	CXX1530
M	1	Motor Unit(LOADING)	CXB5960
M	2	Motor Unit(CARRIAGE)	CXB5955
M	3	Motor(SPINDLE)	CXB6218
M	1	Motor Unit(Drive Motor)	CXB7612

7.1.3 PCB LOCATIONS

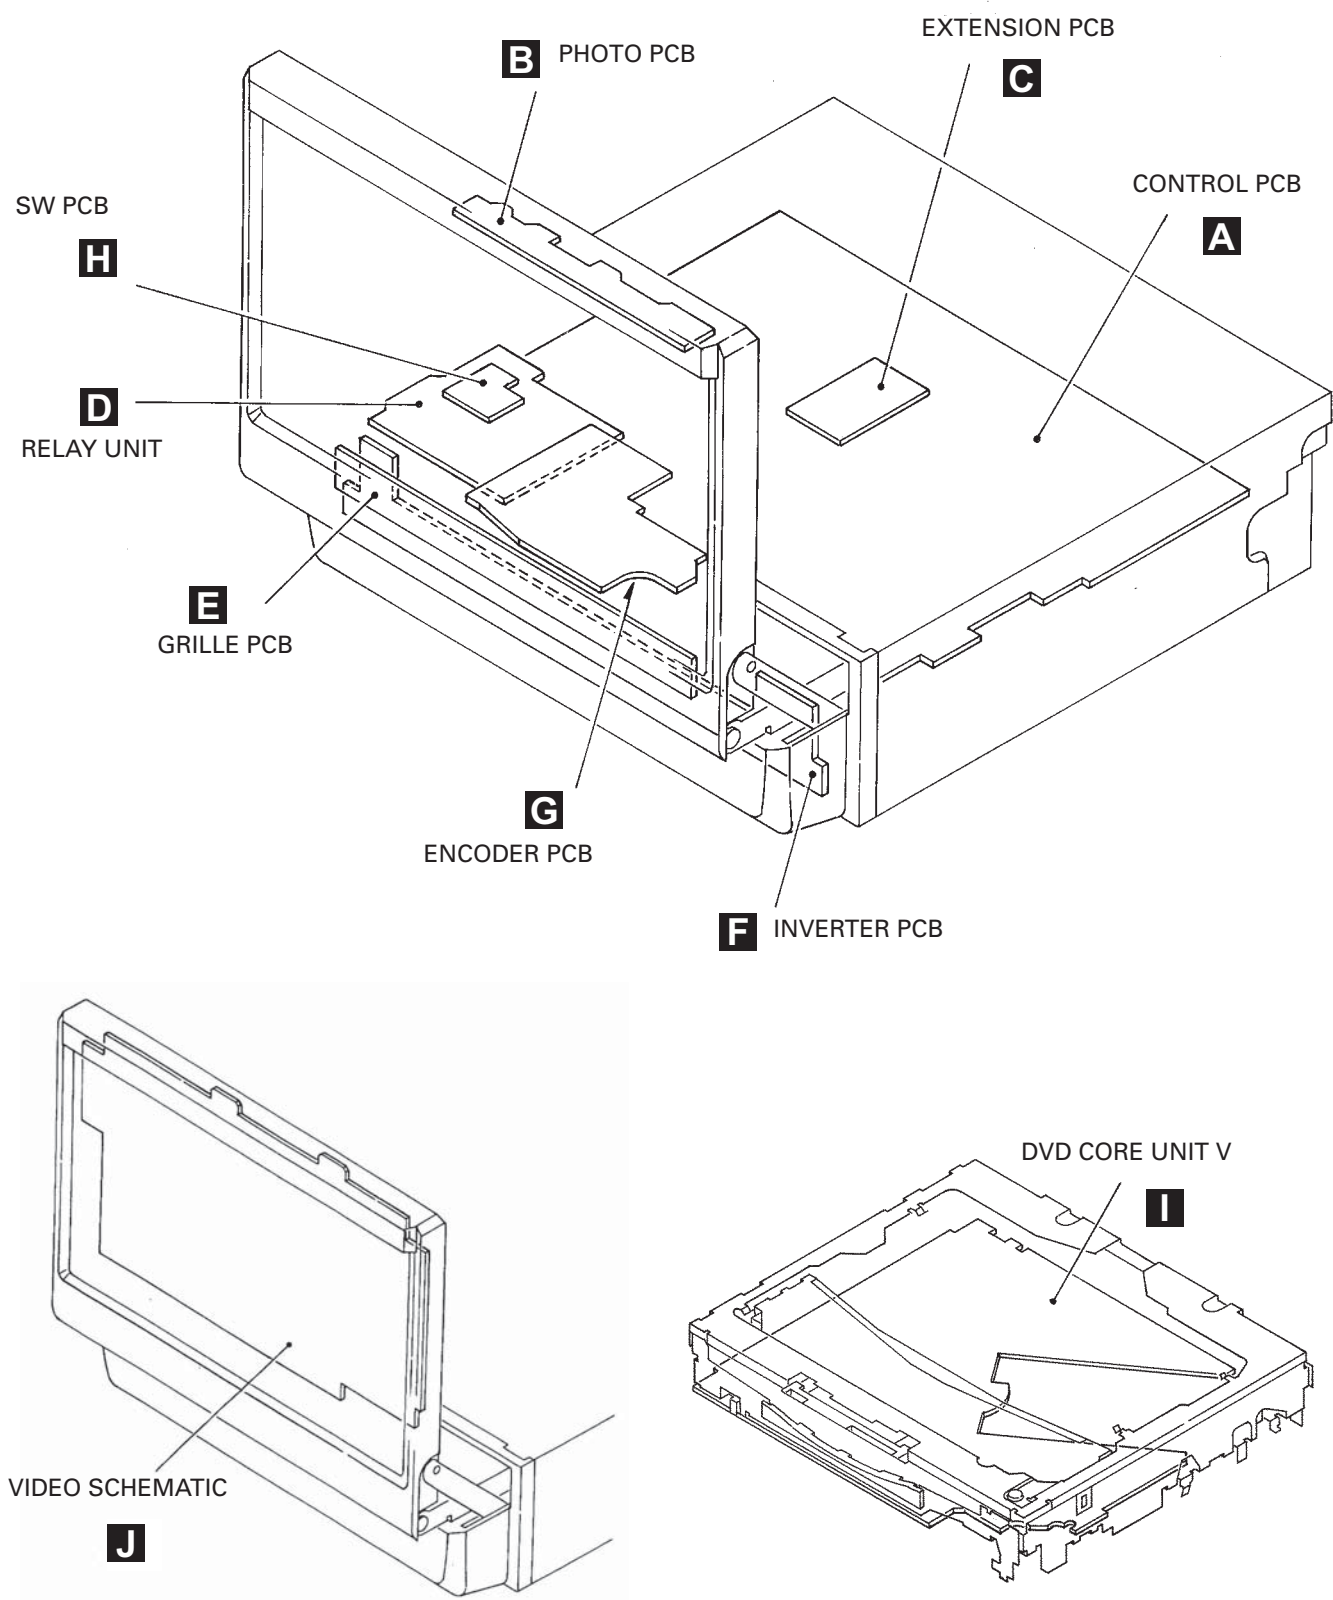

7.1.4 CONNECTOR FUNCTION DESCRIPTION

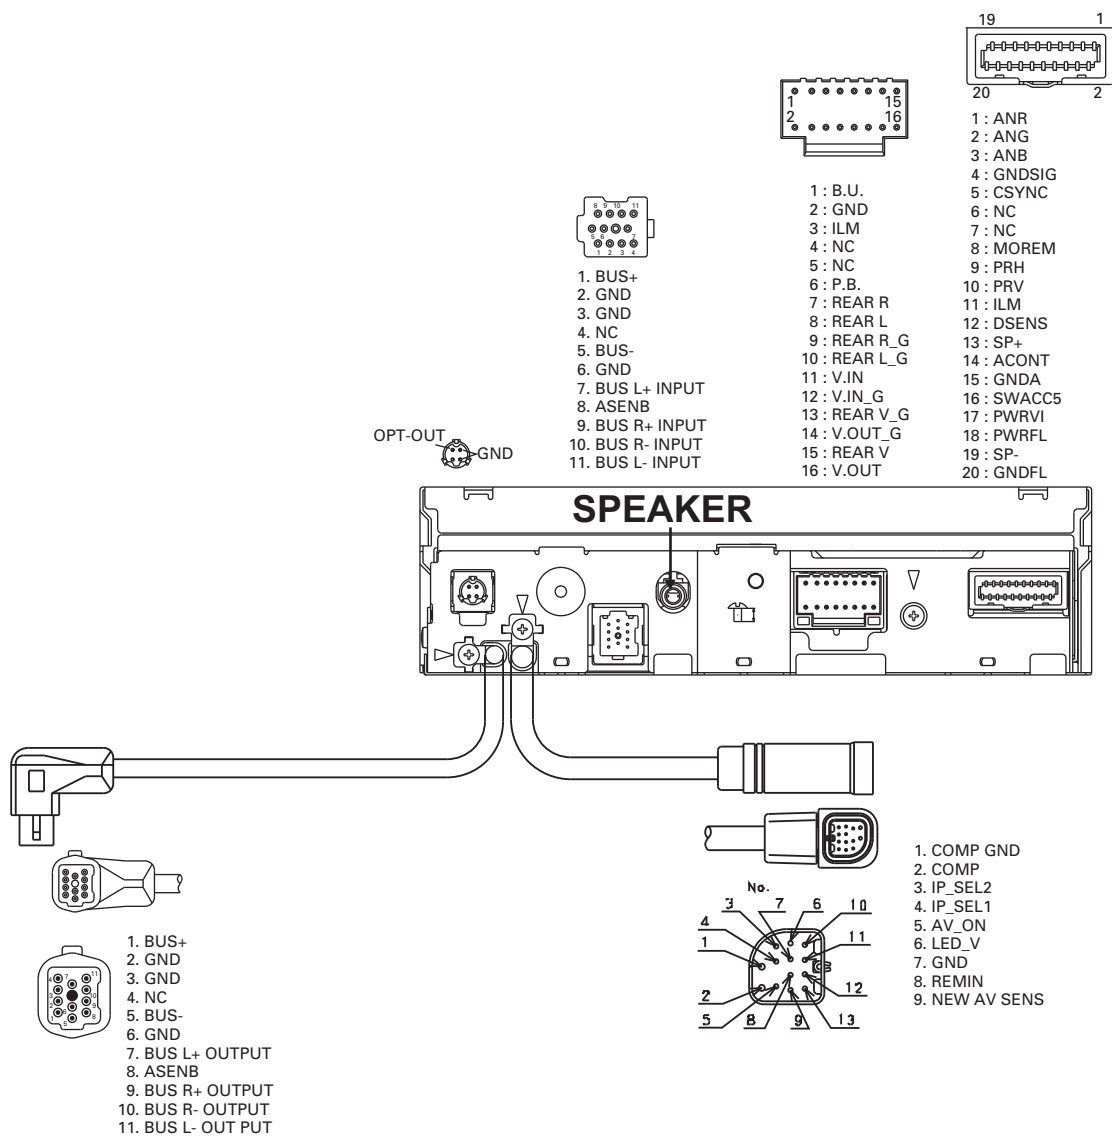

● CONNECTION DIAGRAM

