


EXPLODED VIEW (UNIT)

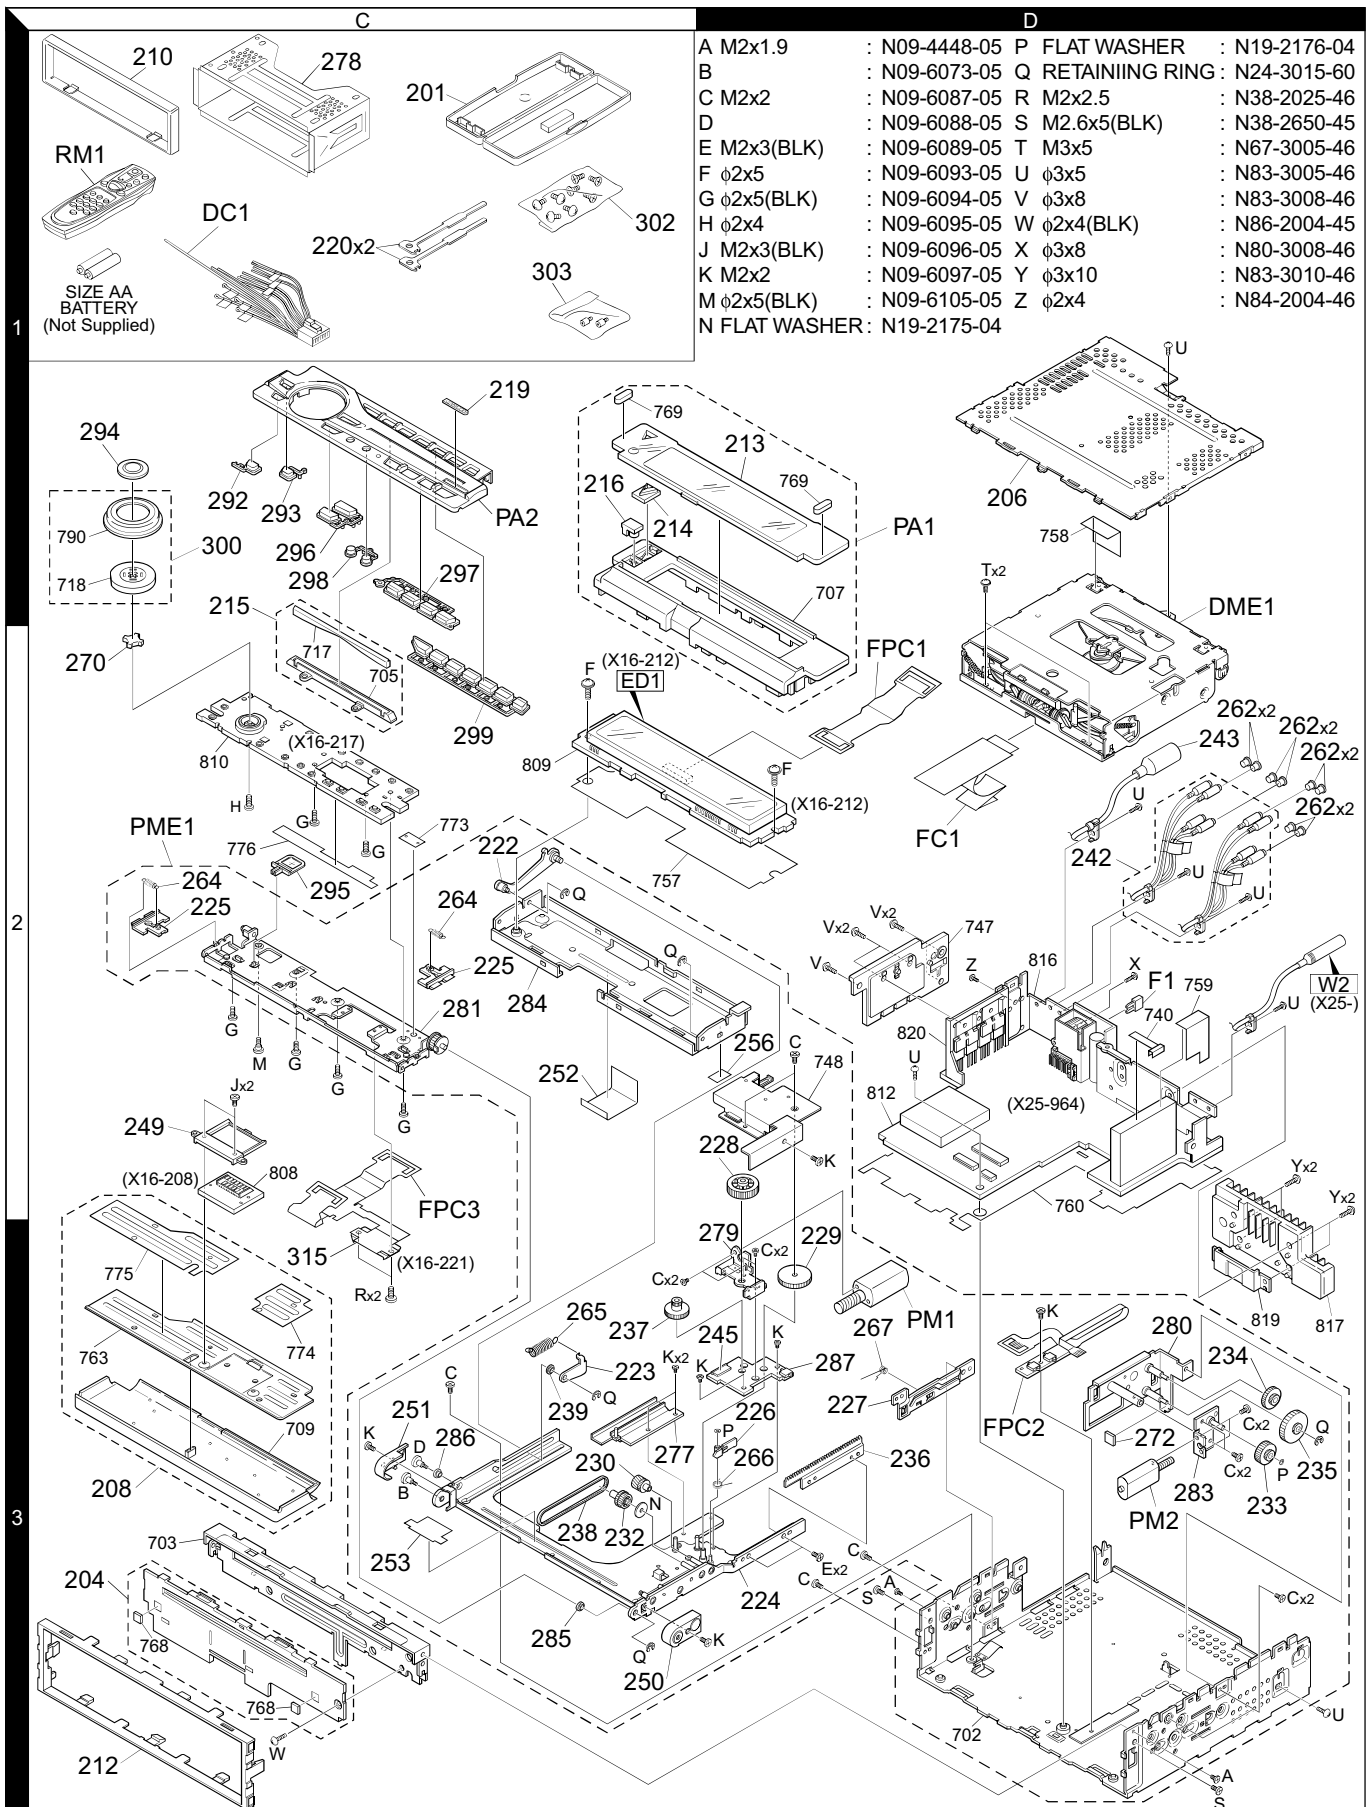

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP922/X869					
201	1C	*	A02-2731-03	PLASTIC CABINET ASSY	
204	3C	*	A22-2988-03	SUB PANEL ASSY	
206	1D	*	A52-0831-02	TOP PLATE	
PA1	1D	*	A64-2976-01	PANEL ASSY	K1
PA1	1D	*	A64-2977-01	PANEL ASSY	K2
PA2	1C	*	A64-2993-02	PANEL ASSY	K1
PA2	1C	*	A64-2994-02	PANEL ASSY	K2
PME1	2C	*	A10-5029-11	CHASSIS ASSY	
RM1	1C	*	A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-		*	B46-0648-13	USER CARD	K1
-		*	B46-0653-03	USER CARD	
-		*	B64-2458-00	INSTRUCTION MANUAL (ENGLISH)	
-		*	B64-2459-00	INSTRUCTION MANUAL (FRE.SPA.)	
208	3C	*	B03-5015-03	DRESSING PLATE ASSY	K2
208	3C	*	B03-5016-03	DRESSING PLATE ASSY	K1
210	1C	*	B07-3078-01	ESCUTCHEON	K2
210	1C	*	B07-3079-01	ESCUTCHEON	K1
212	3C	*	B07-3080-02	ESCUTCHEON	
213	1D	*	B10-4383-01	FRONT GLASS	K1
213	1D	*	B10-4384-01	FRONT GLASS	K2
214	1C	*	B12-1221-04	INDICATOR	
215	1C	*	B12-1222-03	INDICATOR ASSY	
216	1C	*	B19-2201-04	LIGHTING BOARD	
219	1C	*	B43-1505-04	KENWOOD BADGE	
220	1C		D10-4674-04	LEVER	
222	2C	*	D10-4716-04	ARM ASSY	
223	3C	*	D10-4718-04	ARM ASSY	
224	3D	*	D10-4721-11	SLIDER ASSY	
225	2C	*	D10-4749-03	LEVER	
226	3D	*	D10-4750-04	LEVER	
227	3D	*	D12-0637-03	CAM	
228	2D	*	D13-2270-04	GEAR	
229	3D	*	D13-2272-04	GEAR	
230	3C	*	D13-2273-14	GEAR	
232	3C	*	D13-2274-14	GEAR	
233	3D	*	D13-2276-04	GEAR	
234	3D	*	D13-2277-04	GEAR	
235	3D	*	D13-2278-04	GEAR	
236	3D	*	D13-2289-03	RACK (GEAR)	
237	3C	*	D13-2290-04	GEAR ASSY	
238	3C	*	D16-0617-05	BELT	
239	3C	*	D23-0958-04	RETAINER	
242	2D	*	E30-6209-05	CORD WITH PINPLUG (3PR+1AUX)	
243	2D	*	E30-6216-05	CORD WITH DIN CONNECTOR (CH)	
245	3D	*	E41-0351-05	FLAT CABLE CONNECTOR	
DC1	1C		E30-6062-05	DC CORD	K1
DC1	1C		E30-6106-05	DC CORD	K2
FC1	2D	*	E39-0565-05	FLAT CABLE	
249	2C	*	F07-1121-03	COVER	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
250	3C	*	F07-1122-03	COVER	
251	3C	*	F07-1123-03	COVER	
252	2C	*	F09-1794-04	SHEET	
253	3C	*	F09-1798-04	SHEET	
256	2D	*	F09-1842-04	SHEET	
262	2D		F29-0049-05	INSULATING COVER	
999			F52-0011-05	FUSE (MINI BLADE TYPE)	
F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE)	
264	2C	*	G01-3162-04	EXTENSION SPRING	
265	3C	*	G01-3188-04	EXTENSION SPRING	
266	3C	*	G01-3189-04	TORSION COIL SPRING	
267	3D	*	G01-3199-04	TORSION COIL SPRING	
270	2C	*	G11-3539-04	CUSHION (VOL)	
272	3D	*	G11-3559-04	CUSHION	
-		*	H10-4854-12	POLYSTYRENE FOAMED FIXTURE	
-		*	H21-1151-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2716-03	ITEM CARTON CASE	K1
-		*	H54-2717-03	ITEM CARTON CASE	K2
277	3C	*	J19-5220-03	HOLDER	
278	1C	*	J21-9823-03	MOUNTING HARDWARE ASSY	
279	3D	*	J21-9951-03	MOUNTING HARDWARE ASSY	
280	3D	*	J21-9954-02	MOUNTING HARDWARE ASSY	
281	2C	*	J21-9956-12	MOUNTING HARDWARE ASSY	
283	3D	*	J21-9997-03	MOUNTING HARDWARE ASSY	
284	2C	*	J21-9999-02	MOUNTING HARDWARE ASSY	
285	3C	*	J31-1055-04	COLLAR	
286	3C	*	J31-1056-04	COLLAR	
287	3D	*	J74-1444-04	RIGID PRINTED WIRING BOARD	
FPC1	2D	*	J84-0153-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	3D	*	J84-0156-04	FLEXIBLE PRINTED WIRING BOARD	
292	1C	*	K24-4004-04	KNOB (PLAY)	
293	1C	*	K24-4005-04	KNOB (EJECT)	
294	1C	*	K24-4006-04	KNOB (ATT)	
295	2C	*	K24-4007-04	KNOB (OPEN)	
296	1C	*	K25-1527-03	KNOB (SRC,Q)	
297	1C	*	K25-1529-03	KNOB (AM/FM)	
298	1C	*	K25-1530-04	KNOB (SCRL)	
299	2C	*	K25-1528-03	KNOB (1-6)	K2
299	2C	*	K25-1532-03	KNOB (1-6)	K1
300	1C	*	K29-7031-03	KNOB ASSY (VOL)	
302	1C		N99-1723-05	SCREW SET	
303	1C	*	N99-1734-05	SCREW SET	
A	3D		N09-4448-05	MACHINE SCREW	
B	3C	*	N09-6073-05	STEPPED SCREW	
C	3D	*	N09-6087-05	MACHINE SCREW	
D	3C	*	N09-6088-05	STEPPED SCREW	
E	3D	*	N09-6089-05	MACHINE SCREW	
F	2C	*	N09-6093-05	TAPTITE SCREW	
G	2C	*	N09-6094-05	MACHINE SCREW	
H	2C	*	N09-6095-05	MACHINE SCREW	

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KDC-MP922/X869

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
J	2C	*	N09-6096-05	MACHINE SCREW		L1			L40-1005-68	SMALL FIXED INDUCTOR	
K	3C	*	N09-6097-05	MACHINE SCREW		L3			L40-1005-34	SMALL FIXED INDUCTOR	
M	2C	*	N09-6105-05	STEPPED SCREW		L3			L40-1005-68	SMALL FIXED INDUCTOR	
N	2C	*	N19-2175-04	FLAT WASHER		L4,5			L92-0332-05	CHIP FERRITE	
P	3D	*	N19-2176-04	FLAT WASHER		X1			L78-0821-05	RESONATOR	
Q	2C		N24-3015-60	E TYPE RETAINING RING		CP1			R90-1019-05	MULTI-COMP 100 X2	
R	3C		N38-2025-46	PAN HEAD MACHIN SCREW		CP2			R90-1014-05	MULTI-COMP 100 X4	
S	3D	*	N38-2650-45	PAN HEAD MACHIN SCREW		CP3			R90-0737-05	MULTI-COMP 100K X2	
T	2D		N67-3005-46	PAN HEAD SEMS SCREW		CP4			R90-0724-05	MULTI-COMP 1K X4	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW		CP5			R90-1019-05	MULTI-COMP 100 X2	
V	2D		N83-3008-46	PAN HEAD TAPTITE SCREW		CP6			R90-0725-05	MULTI-COMP 1K X2	
W	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW		CP7			R90-1014-05	MULTI-COMP 100 X4	
RLED			RK73GB2A102J	CHIP R 1.0K J 1/10W		CP8,9			R90-0724-05	MULTI-COMP 1K X4	
RPH			RK73GB2A104J	CHIP R 100K J 1/10W		CP11,12			R90-0719-05	MULTI-COMP 4.7K X2	
SW1			S68-0871-05	PUSH SWITCH (PANEL MECHA)		CP13			R90-0726-05	MULTI-COMP 10K X2	
SW2-3			S68-0863-05	PUSH SWITCH (PANEL MECHA)		CP14			R90-1012-05	MULTI-COMP 22K X4	
SW4			S68-0864-05	PUSH SWITCH (PANEL MECHA)		CP15			R90-0725-05	MULTI-COMP 1K X2	
PH			T95-0212-05	OPTO ISOLATOR (PANEL MECHA)		CP16			R90-1022-05	MULTI-COMP 470 X2	
PM1	3D	*	T42-1076-14	MOTOR ASSY		R1			RK73GB2A103J	CHIP R 10K J 1/10W	
PM2	3D	*	T42-1077-04	MOTOR ASSY		R2			RK73GB2A473J	CHIP R 47K J 1/10W	
DME1	2D		X92-4670-01	CD MECHANISM ASSY		R3			RK73GB2A104J	CHIP R 100K J 1/10W	
SUB-CIRCUIT UNIT (X16-2080-10)						R4,5			RK73GB2A473J	CHIP R 47K J 1/10W	
J1			E59-0833-15	RECTANGULAR PLUG		R6			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CP1			R90-1019-05	MULTI-COMP 100 X2		R7			RK73GB2A220J	CHIP R 22 J 1/10W	
IC1		*	BR24C01AFV-W	MEMORY IC		R8			RK73GB2A104J	CHIP R 100K J 1/10W	
SUB-CIRCUIT UNIT (X16-2120-10)						R9,10			RK73GB2A222J	CHIP R 2.2K J 1/10W	
D17			B30-1564-05	LED (1608, BLUE)		R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C1			CK73FB1C105K	CHIP C 1.0UF K		R12			RK73GB2A101J	CHIP R 100 J 1/10W	
C2			CK73GB1H103K	CHIP C 0.010UF K		R13			RK73GB2A104J	CHIP R 100K J 1/10W	
C3			CK73GB1C104K	CHIP C 0.10UF K		R14,15			RK73GB2A274J	CHIP R 270K J 1/10W	
C3			CK73GB1H104K	CHIP C 0.10UF K		R16,17			RK73GB2A153J	CHIP R 15K J 1/10W	
C4,5			CK73FB1A225K	CHIP C 2.2UF K		R18			RK73GB2A100J	CHIP R 10 J 1/10W	
C6			CC73GCH1H101J	CHIP C 100PF J		R20			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C7			CK73EB0J106K	CHIP C 10UF K		R24			RK73GB2A104J	CHIP R 100K J 1/10W	
C8			CK73FB1A225K	CHIP C 2.2UF K		R25			RK73GB2A223J	CHIP R 22K J 1/10W	
C9			CK73FB1C105K	CHIP C 1.0UF K		R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C10			CK73GB0J105K	CHIP C 1.0UF K		R27			RK73GB2A153J	CHIP R 15K J 1/10W	
C11-16			CK73GB1H103K	CHIP C 0.010UF K		R28			RK73FB2B101J	CHIP R 100 J 1/8W	
C20,21			CK73EB1A475K	CHIP C 4.7UF K		R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C22			CK73GB1H103K	CHIP C 0.010UF K		R33			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
C30			CK73GB1H103K	CHIP C 0.010UF K		R34,35			RK73GB2A103J	CHIP R 10K J 1/10W	
C31			CK73EB0J106K	CHIP C 10UF K		D1-11			DA204U	DIODE	
C32			C93-1217-05	CHIP C 0.047UF K		D13			FTZ6.8E	ZENER DIODE	
C33			CK73GB1H103K	CHIP C 0.010UF K		D14			MA3062WA	ZENER DIODE	
CN1			E40-9364-05	FLAT CABLE CONNECTOR		ED1		*	CN2067M	FLUORESCENT INDICATOR TUBE	
CN2			E41-0166-05	FLAT CABLE CONNECTOR		IC1			TAR5S33	ANALOGUE IC	
-		*	H30-0573-04	ADHESIVE DOUBLE-COATED TAPE		IC2			TC74HC4050AFT	MOS-IC	
L1			L40-1005-34	SMALL FIXED INDUCTOR		IC3			RS-171	ANALOGUE IC	
						IC4			BA3830F	ANALOGUE IC	
						IC5		*	703032BGFA01	MI-COM IC	
						Q1			2SA1163	TRANSISTOR	
						Q2			2SC2713	TRANSISTOR	
						Q3			DTA114EUA	DIGITAL TRANSISTOR	
						Q3			UN5111	DIGITAL TRANSISTOR	

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SUB-CIRCUIT UNIT (X16-2120-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q4,5			2SC4081	TRANSISTOR	
SWITCH UNIT (X16-2170-10)					
D1-11			B30-1605-05	LED (2COLOR PG/RED)	
D12			B30-1564-05	LED (1608, BLUE)	
D13			B30-1605-05	LED (2COLOR PG/RED)	
D14			B30-1564-05	LED (1608, BLUE)	
D15			B30-1605-05	LED (2COLOR PG/RED)	
D16			B30-1564-05	LED (1608, BLUE)	
D17			B30-1605-05	LED (2COLOR PG/RED)	
D18,19			B30-1564-05	LED (1608, BLUE)	
D21			B30-1566-05	LED (1608, RED)	
C1-5			CK73GB1H103K	CHIP C 0.010UF K	
CN1		*	E41-0419-05	FLAT CABLE CONNECTOR	
R1			RK73FB2B241J	CHIP R 240 J 1/8W	
R3-5			RK73FB2B241J	CHIP R 240 J 1/8W	
R6,7			RK73FB2B301J	CHIP R 300 J 1/8W	
R8			RK73FB2B241J	CHIP R 240 J 1/8W	
R9			RK73FB2B301J	CHIP R 300 J 1/8W	
R10			RK73FB2B470J	CHIP R 47 J 1/8W	
R15			RK73GB2A241J	CHIP R 240 J 1/10W	
R16			RK73GB2A471J	CHIP R 470 J 1/10W	
R17			RK73GB2A103J	CHIP R 10K J 1/10W	
R18			RK73GB2A471J	CHIP R 470 J 1/10W	
R19			RK73GB2A103J	CHIP R 10K J 1/10W	
S1		*	S70-0901-05	TACT SWITCH	
S2,3			S70-0864-05	TACT SWITCH	
S4			S70-0856-05	TACT SWITCH	
S5-8			S70-0864-05	TACT SWITCH	
S9			S70-0856-05	TACT SWITCH	
S10-13			S70-0864-05	TACT SWITCH	
S14			S70-0856-05	TACT SWITCH	
S15-18			S70-0864-05	TACT SWITCH	
S19			S70-0856-05	TACT SWITCH	
S20			S70-0864-05	TACT SWITCH	
S21		*	T99-0445-05	ROTARY ENCODER	
D20			DAP202U	DIODE	
D20			MA142WA	DIODE	
D22			MA8068-M	ZENER DIODE	
Q1			DTA114YUA	DIGITAL TRANSISTOR	
Q2,3			2SC4081	TRANSISTOR	
SUB-CIRCUIT UNIT (X16-2210-10)					
315	2C	*	E58-0968-05	RECTANGULAR RECEPTACLE	
FPC3	2C	*	J84-0154-05	FLEXIBLE PRINTED WIRING BOARD	
ELECTRIC UNIT (X25-9640-1x)					
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3			C90-2866-05	ELECTRO 220UF 16WV	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C5			CE04NW1C100M	ELECTRO 10UF 16WV	
C6			CE04NW0J101M	ELECTRO 100UF 6.3WV	
C7			CK73FB1C105K	CHIP C 1.0UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C8			CE04CW1A221M	ELECTRO 220UF 10WV	
C9			CE04CW1A101M	ELECTRO 100UF 10WV	
C10		*	CE32AZ1E221M	CHIP EL 220UF 25WV	
C11			CK73GB1H332K	CHIP C 3300PF K	
C12		*	CE32AZ1C221M	CHIP EL 220UF 16WV	
C13			CK73GB0J105K	CHIP C 1.0UF K	
C14			CK73EB1C225K	CHIP C 2.2UF K	
C15			CK73GB1H103K	CHIP C 0.010UF K	
C16		*	CE32AZ1C101M	CHIP EL 100UF 16WV	
C17			CK73GB1H103K	CHIP C 0.010UF K	
C18		*	CE32AZ1C101M	CHIP EL 100UF 16WV	
C21			CK73FB1A225K	CHIP C 2.2UF K	
C22			C93-1218-05	CHIP C 0.010UF K	
C23			C90-5375-05	ELECTRO 33UF 63WV	
C30			CE04NW1E4R7M	ELECTRO 4.7UF 25WV	
C31			C90-2962-05	ELECTRO 100UF 16WV	
C32-35			CK73EB1C225K	CHIP C 2.2UF K	
C36			CE04NW1C220M	ELECTRO 22UF 16WV	
C37			CK73GB1E223K	CHIP C 0.022UF K	
C37			CK73GB1H223K	CHIP C 0.022UF K	
C38			CK73GB1H103K	CHIP C 0.010UF K	
C39,40			CK73EB1C225K	CHIP C 2.2UF K	
C42			CK73GB1E223K	CHIP C 0.022UF K	
C42			CK73GB1H223K	CHIP C 0.022UF K	
C43			CK73FB1C105K	CHIP C 1.0UF K	
C44,45			CK73GB1H103K	CHIP C 0.010UF K	
C46			CK73GB1H102K	CHIP C 1000PF K	
C48			CK73GB1H103K	CHIP C 0.010UF K	
C100			C90-2822-05	ELECTRO 3900UF 16WV	K2
C100			C90-5484-05	ELECTRO 3900UF 16WV	K1
C101			CE04NW0J470M	ELECTRO 47UF 6.3WV	
C102			CC73GCH1H220J	CHIP C 22PF J	
C103			CC73GCH1H270J	CHIP C 27PF J	
C104			CK73GB0J105K	CHIP C 1.0UF K	
C106			CK73GB0J105K	CHIP C 1.0UF K	
C107			CK73GB1H103K	CHIP C 0.010UF K	
C109			CK73GB1H102K	CHIP C 1000PF K	
C110,111			CK73GB1H103K	CHIP C 0.010UF K	
C199			CK73GB1C104K	CHIP C 0.10UF K	
C199			CK73GB1H104K	CHIP C 0.10UF K	
C201,202			CE04NW1HR47M	ELECTRO 0.47UF 50WV	
C203,204			CK73FB1C474K	CHIP C 0.47UF K	
C205,206			CE04NW0J470M	ELECTRO 47UF 6.3WV	
C207,208			CK73FB1C474K	CHIP C 0.47UF K	
C209			CK73GB1E223K	CHIP C 0.022UF K	
C209			CK73GB1H223K	CHIP C 0.022UF K	
C210			CK73GB1H103K	CHIP C 0.010UF K	
C211			CK73GB1A474K	CHIP C 0.47UF K	
C212			CC73GCH1H151J	CHIP C 150PF J	
C213			CK73GB1C104K	CHIP C 0.10UF K	
C213			CK73GB1H104K	CHIP C 0.10UF K	
C214			CK73GB1H103K	CHIP C 0.010UF K	
C215			CE04NW1C470M	ELECTRO 47UF 16WV	
C216-223			CK73FB1C105K	CHIP C 1.0UF K	
C224			CK73GB1C104K	CHIP C 0.10UF K	

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9640-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C224			CK73GB1H104K	CHIP C 0.10UF K		C603			CK73GB1H103K	CHIP C 0.010UF K	
C225			CK73GB1H103K	CHIP C 0.010UF K		C701			CK73GB1A474K	CHIP C 0.47UF K	
C226-231			CK73GB1E473K	CHIP C 0.047UF K		CN1			E41-0224-05	PIN ASSY	
C226-231			CK73GB1H473K	CHIP C 0.047UF K		CN2			E40-3237-05	PIN ASSY	
C232			CK73FB1C105K	CHIP C 1.0UF K		CN3		*	E41-0384-05	PIN ASSY	
C233			C92-0667-05	ELECTRO 10UF 10WV		CN4			E40-9527-05	FLAT CABLE CONNECTOR	
C234			CK73GB1E333K	CHIP C 0.033UF K		CN4			E41-0213-05	FLAT CABLE CONNECTOR	
C234			CK73GB1H333K	CHIP C 0.033UF K		CN5			E40-9368-05	FLAT CABLE CONNECTOR	
C235			CK73GB1H103K	CHIP C 0.010UF K		CN6		*	E41-0399-05	FLAT CABLE CONNECTOR	
C236			CK73GB1A334K	CHIP C 0.33UF K		CN7			E41-0009-05	PIN ASSY	
C237			CK73GB1A474K	CHIP C 0.47UF K		△ J1			E58-0863-15	RECTANGULAR RECEPTACLE	
C238			CC73GCH1H221J	CHIP C 220PF J		W2		*	E30-6218-05	CORD WITH PLUG	
C239			CK73GB1H103K	CHIP C 0.010UF K		L1			L33-1170-05	CHOKE COIL ASSY	
C240,241			C92-0667-05	ELECTRO 10UF 10WV		L2			L33-1126-05	CHOKE COIL	
C250		*	CE32AT1H2R2M	CHIP EL 2.2UF 50WV	K1	L3			L33-1029-05	SMALL FIXED INDUCTOR	
C250			C92-0687-05	ELECTRO 2.2UF 50WV	K2	L4			L40-2205-34	SMALL FIXED INDUCTOR (22UH)	
C251			CK73FB1C334K	CHIP C 0.33UF K		L7			L33-1039-05	LINE FILTER COIL	
C252			CK73GB1A334K	CHIP C 0.33UF K		L101			L40-4795-34	SMALL FIXED INDUCTOR	
C253			CK73FB1C334K	CHIP C 0.33UF K		L101			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C254			CK73GB1A334K	CHIP C 0.33UF K		L102			L92-0075-05	CHIP FERRITE	
C255			CK73FB1C334K	CHIP C 0.33UF K		L201			L40-4795-34	SMALL FIXED INDUCTOR	
C256			CK73GB1A334K	CHIP C 0.33UF K		L201			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C257			CK73FB1C334K	CHIP C 0.33UF K		L303-307			L40-4795-34	SMALL FIXED INDUCTOR	
C258			CK73GB1A334K	CHIP C 0.33UF K		L303-307			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C259		*	CE32AT1H010M	CHIP EL 1.0UF 50WV	K1	X1			L78-0821-05	RESONATOR	
C259			C92-0686-05	ELECTRO 1UF 50WV	K2	X2			L77-2738-05	CRYSTAL RESONATOR	
C260-263			CK73GB1C104K	CHIP C 0.10UF K		X3			L77-2002-05	CRYSTAL RESONATOR	
C260-263			CK73GB1H104K	CHIP C 0.10UF K		U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
C264,265			CE04NW1C220M	ELECTRO 22UF 16WV		X	2D		N80-3008-46	PAN HEAD TAPTITE SCREW	
C266,267			CE04NW1C100M	ELECTRO 10UF 16WV		Y	2D		N83-3010-46	PAN HEAD TAPTITE SCREW	
C268,269			CE04NW1C220M	ELECTRO 22UF 16WV		Z	2D		N84-2004-46	PAN HEAD TAPTITE SCREW	
C270,271			CE04NW1C100M	ELECTRO 10UF 16WV		R1			RK73FB2B223J	CHIP R 22K J 1/8W	
C272-275			C90-5296-05	NP-ELECT 0.22UF 50WV		R2			RK73GB2A101J	CHIP R 100 J 1/10W	
C276			CK73FB1C105K	CHIP C 1.0UF K		R3			RK73GB2A223J	CHIP R 22K J 1/10W	
C277			CE04NW1C330M	ELECTRO 33UF 16WV		R4			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C278			C90-2935-05	ELECTRO 1.0UF 50WV		R5			RK73FB2B221J	CHIP R 220 J 1/8W	
C279			CE04NW1H010M	ELECTRO 1.0UF 50WV		R6			RK73GB2A153J	CHIP R 15K J 1/10W	
C280-285			CK73GB1H222K	CHIP C 2200PF K		R7			R92-3032-05	CHIP R 4.3K D 1/10W	
C286			CK73GB1H103K	CHIP C 0.010UF K		R8			R92-3047-05	CHIP R 24K D 1/10W	
C287-289			CK73FB1H104K	CHIP C 0.10UF K		R9			RK73FB2B152J	CHIP R 1.5K J 1/8W	
C290,291			CK73GB1H103K	CHIP C 0.010UF K		R10			R92-3022-05	METAL R 750 D 1/10W	
C292-296			CK73EB1A475K	CHIP C 4.7UF K		R11			R92-3028-05	CHIP R 2.2K D 1/10W	
C297,298			C92-0672-05	ELECTRO 22UF 16WV		R12			RK73GB2A103J	CHIP R 10K J 1/10W	
C299,300			CE04NW1C100M	ELECTRO 10UF 16WV		R13			R92-2104-05	CHIP R 2.2 J 1W	
C303-305			CK73GB1H103K	CHIP C 0.010UF K		R14			RK73FB2B751J	CHIP R 750 J 1/8W	
C307			CK73GB1H103K	CHIP C 0.010UF K		R15			RK73GB2A473J	CHIP R 47K J 1/10W	
C309,310			CC73GCH1H100D	CHIP C 10PF D		R16			RK73FB2B103J	CHIP R 10K J 1/8W	
C311			CC73GCH1H331J	CHIP C 330PF J		R17			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C312			CK73FB1A225K	CHIP C 2.2UF K		R18			RK73GB2A750J	CHIP R 75 J 1/10W	
C313			CK73GB1H103K	CHIP C 0.010UF K		R19			RK73GB2A272J	CHIP R 2.7K J 1/10W	
C314			CE04NW1C100M	ELECTRO 10UF 16WV		R20			RK73GB2A470J	CHIP R 47 J 1/10W	
C316-319			CK73GB1A224K	CHIP C 0.22UF K		R21			RK73GB2A752J	CHIP R 7.5K J 1/10W	
C502-504			CK73GB1H103K	CHIP C 0.010UF K		R22			RK73GB2A274J	CHIP R 270K J 1/10W	
C601,602			CK73GB1C104K	CHIP C 0.10UF K		R23			RK73GB2A563J	CHIP R 56K J 1/10W	
C601,602			CK73GB1H104K	CHIP C 0.10UF K							

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9640-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R24			RK73GB2A470J	CHIP R 47 J 1/10W	
R25			RK73GB2A103J	CHIP R 10K J 1/10W	
R26,27			RK73GB2A913J	CHIP R 91K J 1/10W	
R28			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R29			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R31			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R32			RK73FB2B561J	CHIP R 560 J 1/8W	
R34,35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B103J	CHIP R 10K J 1/8W	K1
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R41			RK73GB2A223J	CHIP R 22K J 1/10W	
R42			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R43			RK73EB2E473J	CHIP R 47K J 1/4W	
R44			RK73GB2A183J	CHIP R 18K J 1/10W	
R45			RK73GB2A104J	CHIP R 100K J 1/10W	
R46			RK73EB2E103J	CHIP R 10K J 1/4W	
R48			RK73EB2E102J	CHIP R 1.0K J 1/4W	K1
R49			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R101			RK73GB2A103J	CHIP R 10K J 1/10W	
R102			RK73GB2A153J	CHIP R 15K J 1/10W	
R103			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R106,107			RK73GB2A103J	CHIP R 10K J 1/10W	K1
R109			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R110			RK73GB2A104J	CHIP R 100K J 1/10W	
R111,112			RK73GB2A103J	CHIP R 10K J 1/10W	
R115,116			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R117			RK73GB2A103J	CHIP R 10K J 1/10W	
R118-120			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R122,123			RK73GB2A101J	CHIP R 100 J 1/10W	
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R128			RK73GB2A104J	CHIP R 100K J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R130			RK73GB2A104J	CHIP R 100K J 1/10W	
R131			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A104J	CHIP R 100K J 1/10W	
R133-136			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R138-140			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R141			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R142,143			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R144			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R145,146			RK73GB2A473J	CHIP R 47K J 1/10W	
R150,151			RK73GB2A104J	CHIP R 100K J 1/10W	
R152,153			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R156			RK73GB2A104J	CHIP R 100K J 1/10W	
R158			RK73GB2A104J	CHIP R 100K J 1/10W	
R159,160			RK73GB2A471J	CHIP R 470 J 1/10W	
R161			RK73GB2A104J	CHIP R 100K J 1/10W	
R162			RK73GB2A103J	CHIP R 10K J 1/10W	
R163,164			RK73GB2A471J	CHIP R 470 J 1/10W	
R165,166			RK73GB2A472J	CHIP R 4.7K J 1/10W	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R167			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R169			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R170			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R171,172			RK73GB2A471J	CHIP R 470 J 1/10W	
R173,174			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R175			RK73GB2A333J	CHIP R 33K J 1/10W	
R176			RK73GB2A473J	CHIP R 47K J 1/10W	
R177			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R178,179			RK73GB2A103J	CHIP R 10K J 1/10W	
R180			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W	
R182			RK73GB2A104J	CHIP R 100K J 1/10W	
R183			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2
R183,184			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1
R186			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R205			RK73GB2A134J	CHIP R 130K J 1/10W	
R206			RK73GB2A823J	CHIP R 82K J 1/10W	
R207			RK73GB2A473J	CHIP R 47K J 1/10W	
R208			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R209			RK73GB2A363J	CHIP R 36K J 1/10W	
R210			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R217			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R218			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R219			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R220,221			RK73FB2B361J	CHIP R 360 J 1/8W	
R222,223			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R224,225			RK73FB2B103J	CHIP R 10K J 1/8W	
R226,227			RK73FB2B223J	CHIP R 22K J 1/8W	
R228,229			RK73FB2B820J	CHIP R 82 J 1/8W	
R232,233			RK73FB2B361J	CHIP R 360 J 1/8W	
R234,235			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R236,237			RK73FB2B103J	CHIP R 10K J 1/8W	
R238,239			RK73FB2B223J	CHIP R 22K J 1/8W	
R240,241			RK73FB2B820J	CHIP R 82 J 1/8W	
R244,245			RK73FB2B361J	CHIP R 360 J 1/8W	
R246,247			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R248,249			RK73FB2B103J	CHIP R 10K J 1/8W	
R250,251			RK73FB2B223J	CHIP R 22K J 1/8W	
R252,253			RK73FB2B820J	CHIP R 82 J 1/8W	
R256			RK73GB2A221J	CHIP R 220 J 1/10W	
R257			RK73GB2A223J	CHIP R 22K J 1/10W	
R259			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R260			RK73GB2A100J	CHIP R 10 J 1/10W	
R261			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R262			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R263,264			RK73EB2E100J	CHIP R 10 J 1/4W	
R265,266			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R267			RK73EB2E100J	CHIP R 10 J 1/4W	
R268			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R269			RK73EB2E100J	CHIP R 10 J 1/4W	
R270			RK73GB2A473J	CHIP R 47K J 1/10W	
R271			RK73GB2A821J	CHIP R 820 J 1/10W	
R272,273			RK73GB2A103J	CHIP R 10K J 1/10W	

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9640-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R274			RK73GB2A153J	CHIP R 15K J 1/10W		D203			RD6.8MW	ZENER DIODE	
R275			RK73GB2A473J	CHIP R 47K J 1/10W		D204,205			RD6.8M(B2)	ZENER DIODE	
R276			RK73GB2A102J	CHIP R 1.0K J 1/10W		D206			RD6.8MW	ZENER DIODE	
R277			RK73GB2A473J	CHIP R 47K J 1/10W		D207,208			DAP202U	DIODE	
R278			RK73GB2A333J	CHIP R 33K J 1/10W		D207,208			MA142WA	DIODE	
R279,280			RK73GB2A334J	CHIP R 330K J 1/10W		D209-216			S1J	DIODE	
R303			RK73FB2B102J	CHIP R 1.0K J 1/8W		D209-216			1SR154-400	DIODE	
R304			RK73GB2A223J	CHIP R 22K J 1/10W		D217			DA204K	DIODE	
R305			RK73GB2A472J	CHIP R 4.7K J 1/10W		D301			IMSA-6801	SURGE ABSORBER	
R306-308			RK73GB2A222J	CHIP R 2.2K J 1/10W		D503-505			MA3062WA	ZENER DIODE	
R501,502			RK73EB2E101J	CHIP R 100 J 1/4W		D506-509			DA204K	DIODE	
R503-507			RK73EB2E472J	CHIP R 4.7K J 1/4W		D601			DA204K	DIODE	
R508			RK73EB2E101J	CHIP R 100 J 1/4W		IC1	*		703033BGC020	MI-COM IC	
R513			RK73GB2A223J	CHIP R 22K J 1/10W		IC2			TDA7411	ANALOGUE IC	
R514-516			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC3			M5237ML	ANALOGUE IC	
R517,518			RK73EB2E101J	CHIP R 100 J 1/4W		IC4			TDA7560	ANALOGUE IC	
R519			RK73EB2E471J	CHIP R 470 J 1/4W		IC5			TDA7401	ANALOGUE IC	
R520			RK73EB2E472J	CHIP R 4.7K J 1/4W		IC6	*		NJM2195FJ1	ANALOGUE IC	
R522-524			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC7			ICL7660SIBA	ANALOGUE IC	
R525			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC8			S-80837CNNB	MOS-IC	
R526,527			RK73GB2A473J	CHIP R 47K J 1/10W		IC9			TC74HC02AF	MOS-IC	
R601,602			RK73GB2A104J	CHIP R 100K J 1/10W		IC10-13			NJM4565M-TE2	ANALOGUE IC	
R603			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC14			TDA7479D	ANALOGUE IC	
R604,605			RK73GB2A103J	CHIP R 10K J 1/10W		IC15,16			LB1930M	ANALOGUE IC	
R606			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC17			BR24C01AF-W	ROM IC	
R607			RK73GB2A911J	CHIP R 910 J 1/10W		IC18			L9820D013TR	ANALOGUE IC	
R608,609			RK73GB2A104J	CHIP R 100K J 1/10W		IC19			LM2672M-ADJ	ANALOGUE IC	
R610			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC20	*		TC7W66FK	MOS-IC	
R611,612			RK73GB2A103J	CHIP R 10K J 1/10W		Q1			2SA2057	TRANSISTOR	
R613			RK73GB2A222J	CHIP R 2.2K J 1/10W		Q2			2SC4081	TRANSISTOR	
R614			RK73GB2A911J	CHIP R 910 J 1/10W		Q3			2SA1576A	TRANSISTOR	
R615-618			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q4			DTA124EUA	DIGITAL TRANSISTOR	
R620			RK73EB2E102J	CHIP R 1.0K J 1/4W		Q4			UN5112	DIGITAL TRANSISTOR	
R621			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q5			DTC124EUA	DIGITAL TRANSISTOR	
R623,624			RK73GB2A332J	CHIP R 3.3K J 1/10W		Q5			UN5212	DIGITAL TRANSISTOR	
R625,626			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q6			DTC144EUA	DIGITAL TRANSISTOR	
R701			RK73GB2A104J	CHIP R 100K J 1/10W		Q6			UN5213	DIGITAL TRANSISTOR	
D1			1N5393G-M5	DIODE		Q7			DTA124EUA	DIGITAL TRANSISTOR	
D2			RB160L-40	DIODE		Q7			UN5112	DIGITAL TRANSISTOR	
D3			MA8056-M	ZENER DIODE		Q8,9			2SA2057	TRANSISTOR	
D4			MA8082-L	ZENER DIODE		Q11			DTC124EUA	DIGITAL TRANSISTOR	
D5			SFPB-54V	DIODE		Q11			UN5212	DIGITAL TRANSISTOR	
D6			MA8100-L	ZENER DIODE		Q12			DTA124EUA	DIGITAL TRANSISTOR	
D7			MA4062(N)-L	ZENER DIODE		Q12			UN5112	DIGITAL TRANSISTOR	
D8			MA8110-M	ZENER DIODE		Q13			2SA2057	TRANSISTOR	
D9			MA8056-M	ZENER DIODE		Q14			2SC4081	TRANSISTOR	
D16			MA3056-M	ZENER DIODE	K1	Q15			2SB1443	TRANSISTOR	
D18			MA8068-M	ZENER DIODE		Q16,17			2SC4081	TRANSISTOR	
D19			MA8062-M	ZENER DIODE		Q18,19			2SA1576A	TRANSISTOR	
D20,21			DAP202U	DIODE		Q20			2SC4081	TRANSISTOR	
D20,21			MA142WA	DIODE		Q21			2SA1576A	TRANSISTOR	
D101			DAP202U	DIODE		Q22			2SC4081	TRANSISTOR	
D101			MA142WA	DIODE		Q23			DTC114YUA	DIGITAL TRANSISTOR	
D201,202			RD6.8M(B2)	ZENER DIODE		Q23			UN5214	DIGITAL TRANSISTOR	
						Q24			2SB1240	TRANSISTOR	

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9640-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q25			DTA123JK	DIGITAL TRANSISTOR	K1
Q25			KRA105S	DIGITAL TRANSISTOR	K1
Q26			DTC144EUA	DIGITAL TRANSISTOR	
Q26			UN5213	DIGITAL TRANSISTOR	
Q27			2SC4081	TRANSISTOR	
Q29			2SC4081	TRANSISTOR	
Q30,31			DTA124EUA	DIGITAL TRANSISTOR	
Q30,31			UN5112	DIGITAL TRANSISTOR	
Q201			DTC143TUA	DIGITAL TRANSISTOR	
Q201			UN5216	DIGITAL TRANSISTOR	
Q202			DTC124EUA	DIGITAL TRANSISTOR	
Q202			UN5212	DIGITAL TRANSISTOR	
Q203-208			DTC143TUA	DIGITAL TRANSISTOR	
Q203-208			UN5216	DIGITAL TRANSISTOR	
Q210			2SC4081	TRANSISTOR	
Q303			DTC124EUA	DIGITAL TRANSISTOR	
Q303			UN5212	DIGITAL TRANSISTOR	
Q304			2SB1188(Q,R)	TRANSISTOR	
Q305			DTC143TUA	DIGITAL TRANSISTOR	
Q305			UN5216	DIGITAL TRANSISTOR	
Q501			DTA124EUA	DIGITAL TRANSISTOR	
Q501			UN5112	DIGITAL TRANSISTOR	
Q502			2SB1427	TRANSISTOR	
Q503			DTC124EUA	DIGITAL TRANSISTOR	
Q503			UN5212	DIGITAL TRANSISTOR	
Q601			DTC124EUA	DIGITAL TRANSISTOR	
Q601			UN5212	DIGITAL TRANSISTOR	
Q602			2SC4081	TRANSISTOR	
Q603			DTC124EUA	DIGITAL TRANSISTOR	
Q603			UN5212	DIGITAL TRANSISTOR	
TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
A2		*	W02-3430-05	ELECTRIC CIRCUIT MODULE	
A1		*	X86-3730-11	FRONT-END UNIT	

CD PLAYER UNIT (X32-5410-00)

C1			C92-0628-05	CHIP-TAN	10UF	10WV
C2			CK73FB1A105K	CHIP C	1.0UF	K
C3			CK73FB1A225K	CHIP C	2.2UF	K
C4			CK73GB1H103K	CHIP C	0.010UF	K
C5			CC73GCH1H680J	CHIP C	68PF	J
C6			CC73GCH1H681J	CHIP C	680PF	J
C7			CK73GB1H104K	CHIP C	0.10UF	K
C8			CK73GB1H222K	CHIP C	2200PF	K
C9,10			CK73GB1H104K	CHIP C	0.10UF	K
C11			CC73GCH1H681J	CHIP C	680PF	J
C12			CK73GB1H222K	CHIP C	2200PF	K
C13			CC73GCH1H680J	CHIP C	68PF	J
C15			CK73EB1A475K	CHIP C	4.7UF	K
C16			CK73GB1H104K	CHIP C	0.10UF	K
C17			CK73GB1H331K	CHIP C	330PF	K
C18			CK73GB1H472K	CHIP C	4700PF	K
C19,20			CK73GB1H104K	CHIP C	0.10UF	K
C21			CK73EB1A475K	CHIP C	4.7UF	K
C22			CK73GB0J105K	CHIP C	1.0UF	K

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C23			CK73FB1A225K	CHIP C	2.2UF K
C26			CK73GB1H104K	CHIP C	0.10UF K
C27			C92-0712-05	CHIP-TAN	22UF 6.3WV
C28			CK73GB1H102K	CHIP C	1000PF K
C29			CK73GB1H331K	CHIP C	330PF K
C30			CK73GB1H152K	CHIP C	1500PF K
C31-35			CK73GB1H104K	CHIP C	0.10UF K
C36			C92-0712-05	CHIP-TAN	22UF 6.3WV
C41			CK73GB1H104K	CHIP C	0.10UF K
C42			CK73EB1A475K	CHIP C	4.7UF K
C45			CK73GB1H102K	CHIP C	1000PF K
C47			C92-0628-05	CHIP-TAN	10UF 10WV
C48			CK73GB1H104K	CHIP C	0.10UF K
C50			CK73GB1H104K	CHIP C	0.10UF K
C52			CK73GB1H152K	CHIP C	1500PF K
C53			CK73GB1H104K	CHIP C	0.10UF K
C55			CC73GCH1H470J	CHIP C	47PF J
C56			CC73GCH1H820J	CHIP C	82PF J
C57			CK73GB1H104K	CHIP C	0.10UF K
C59			CK73GB1H104K	CHIP C	0.10UF K
C61			CK73GB1H104K	CHIP C	0.10UF K
C63			CC73GCH1H020C	CHIP C	2.0PF C
C65			CK73GB1H104K	CHIP C	0.10UF K
C67			CK73GB1H222K	CHIP C	2200PF K
C68			CC73GCH1H060D	CHIP C	6.0PF D
C70			CK73GB1H104K	CHIP C	0.10UF K
C74			CK73GB1H682K	CHIP C	6800PF K
C75			CK73GB1H332K	CHIP C	3300PF K
C76			CK73GB1H103K	CHIP C	0.010UF K
C77			CK73GB1H104K	CHIP C	0.10UF K
C78			CK73EB1A475K	CHIP C	4.7UF K
C79-82			CK73GB1H152K	CHIP C	1500PF K
C83			CK73GB1H104K	CHIP C	0.10UF K
C84			C92-0628-05	CHIP-TAN	10UF 10WV
C85			CK73GB1H104K	CHIP C	0.10UF K
C87			CK73EB1A475K	CHIP C	4.7UF K
C88			CK73GB1H104K	CHIP C	0.10UF K
CN1			E41-0213-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	
L1			L92-0329-05	CHIP FERRITE	
L5			L92-0329-05	CHIP FERRITE	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
X2			L78-0862-05	RESONATOR (16.00MHZ)	
CP1,2			R90-1019-05	MULTI-COMP	100 X2
CP4			R90-0719-05	MULTI-COMP	4.7K X2
CP5			R90-0737-05	MULTI-COMP	100K X2
CP6			R90-1019-05	MULTI-COMP	100 X2
CP7			R90-0737-05	MULTI-COMP	100K X2
CP13			R90-0720-05	MULTI-COMP	100K X4
CP15			R90-0718-05	MULTI-COMP	4.7K X4
CP16-22			R90-1014-05	MULTI-COMP	100 X4
CP23			R90-0714-05	MULTI-COMP	10K X4
CP24			R90-0720-05	MULTI-COMP	100K X4

K1 : KDC-X869 K2 : KDC-MP922

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5410-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R1			R92-3044-05	CHIP R 18K D 1/10W	
R2			R92-3041-05	CHIP R 11K D 1/10W	
R3			RK73FB2B303J	CHIP R 30K J 1/8W	
R4			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R6			RK73FB2B331J	CHIP R 330 J 1/8W	
R7,8			RK73FB2B752J	CHIP R 7.5K J 1/8W	
R9			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R10			RK73FB2B331J	CHIP R 330 J 1/8W	
R11			R92-3041-05	CHIP R 11K D 1/10W	
R12			RK73FB2B303J	CHIP R 30K J 1/8W	
R13			R92-3044-05	CHIP R 18K D 1/10W	
R14			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R16			RK73GB2A123J	CHIP R 12K J 1/10W	
R17			RK73GB2A133J	CHIP R 13K J 1/10W	
R18			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R19,20			RK73GB2A123J	CHIP R 12K J 1/10W	
R21			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R22			RK73GB2A133J	CHIP R 13K J 1/10W	
R23,24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R26			RK73GB2A104J	CHIP R 100K J 1/10W	
R27			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A133J	CHIP R 13K J 1/10W	
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R32			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A104J	CHIP R 100K J 1/10W	
R34			RK73GB2A183J	CHIP R 18K J 1/10W	
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R36			RK73GB2A163J	CHIP R 16K J 1/10W	
R38			RK73GB2A104J	CHIP R 100K J 1/10W	
R39-41			RK73GB2A103J	CHIP R 10K J 1/10W	
R42,43			RK73GB2A104J	CHIP R 100K J 1/10W	
R46			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R47			RK73GB2A104J	CHIP R 100K J 1/10W	
R49			RK73GB2A104J	CHIP R 100K J 1/10W	
R50			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52			RK73GB2A104J	CHIP R 100K J 1/10W	
R53			RK73GB2A473J	CHIP R 47K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R57			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R59			RK73GB2A164J	CHIP R 160K J 1/10W	
R62,63			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R67			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R69			RK73GB2A333J	CHIP R 33K J 1/10W	
R70			RK73GB2A103J	CHIP R 10K J 1/10W	
R71,72			RK73GB2A101J	CHIP R 100 J 1/10W	
R73			RK73GB2A241J	CHIP R 240 J 1/10W	
R75			RK73GB2A103J	CHIP R 10K J 1/10W	
R76			RK73GB2A101J	CHIP R 100 J 1/10W	
R77			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R78			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAP202U	DIODE	
IC1			TAR5S33	ANALOGUE IC	
IC2			NJM4580V	ANALOGUE IC	
IC4			BA5824FP	ANALOGUE IC	
IC6			L88MS33T	ANALOGUE IC	
IC7			703033BYGC-J02	MI-COM IC	
IC8			TC74HCT7007AF	MOS-IC	
IC11			UPD63760GJ	MOS-IC	
IC13			IS41LV16257	DRAM IC	
IC13			MSM51V4265EP70	DRAM IC	
Q1			DTA143XUA	DIGITAL TRANSISTOR	
Q2,3			DTC124EUA	DIGITAL TRANSISTOR	
Q4			MCH6101	TRANSISTOR	
Q5			DTA143EUA	DIGITAL TRANSISTOR	
CD MECHANISM ASSY (X92-4670-01)					
2	1B		A10-4827-12	CHASSIS	
5	1B	*	D10-4576-43	ARM ASSY	
8	2A		D10-4579-03	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-22	SLIDER	
17	3B	*	D10-4588-13	SLIDER	
18	3B		D10-4595-04	ARM	
19	3B		D10-4596-14	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	3B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	3B		D13-2158-04	GEAR	
30	3B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	2B		D13-2172-03	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-04	EXTENSION SPRING	

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

CD MECHANISM ASSY (X92-4670-01)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
51	1A		J21-9676-22	MOUNTING HARDWARE							
52	3B		J21-9677-02	MOUNTING HARDWARE							
53	1B		J21-9678-03	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)							
B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)							
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)							
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-05	TAPTITE SCREW (BIND P. 2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW							
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)							
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)							
DPU1	2D		X93-2010-00	OPTICAL PICKUP ASSY							